

QUEEN & FULL UNIVERSAL SIZE HEADBOARD ONLY

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start to of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !

1. Don't attempt to repair modify parts that are broken or defective . Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

Z

HARDWARE PACKAGE

A HEADBOARD




1pc

B FINIAL



2pcs

C LEG



2pcs


D BRACKET



2pcs


NO	DESCRIPTION	FIGURE	Q`TY
1	BOLT 1/4"x3 ³ / ₄ "		4pcs
2	BOLT 1/4"x7 ⁷ / ₈ "		4pcs
3	SMALL WASHER		12pcs
4	LARGE WASHER		8pcs
5	BOLT		8pcs
6	ALLEN WRENCH		1pc
7	OPEN WRENCH		1pc

STEP1: Insert the finial (B) into each of the pre-drilled holes, tighten clockwise it.

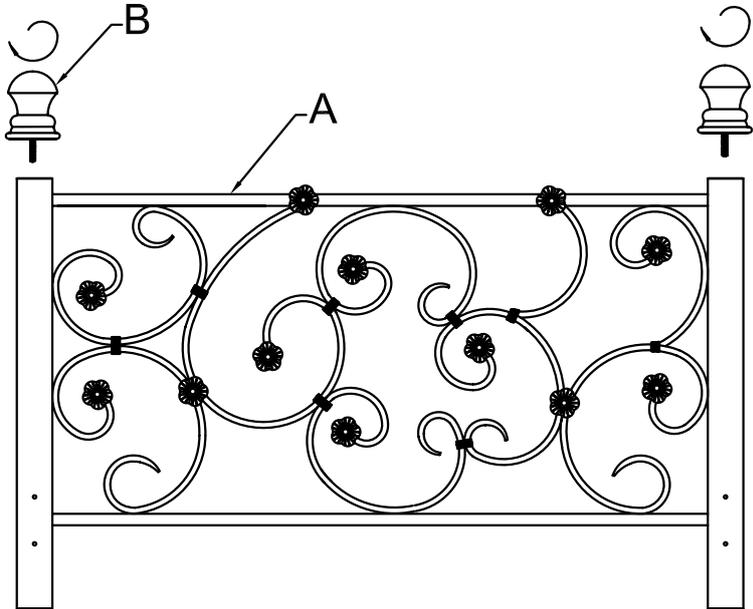

60" QUEEN SIZE HEADBOARD
ASSEMBLY INSTRUCTIONS

STEP2: And then locate the leg(B), using bolt(1,5),washer(4,3),through the pre-drilled holes to attach the baseframe to headboard.

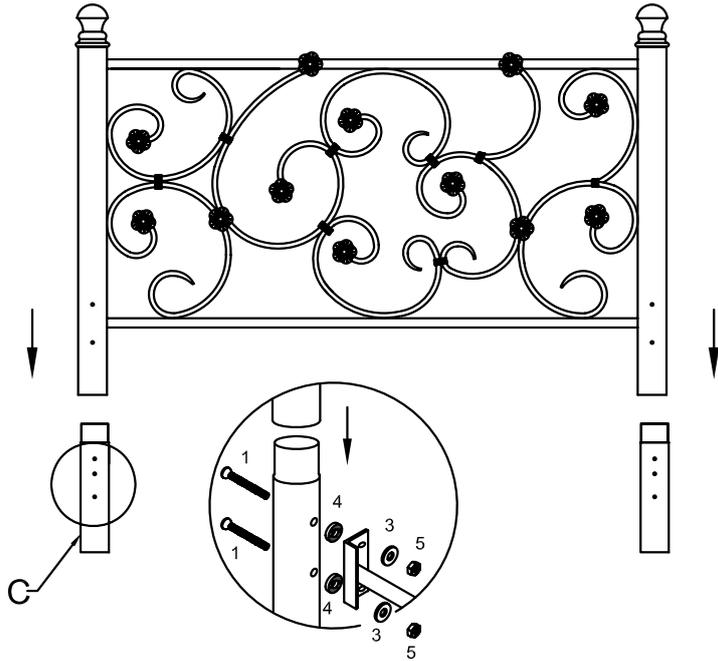

**54" FULL SIZE HEADBOARD
ASSEMBLY INSTRUCTIONS**

STEP 3-1: Locate the bracket(D) and leg(C),using bolt(1,5),washer(4,3)
to attach it to the headboard,and it can be adjusted to be 54" bed.

STEP 3-2: Using bolt(2,5),washer(3,4) through the pre-drilled holes to attach the
baseframe to headboard.

