




ASSEMBLY INSTRUCTION

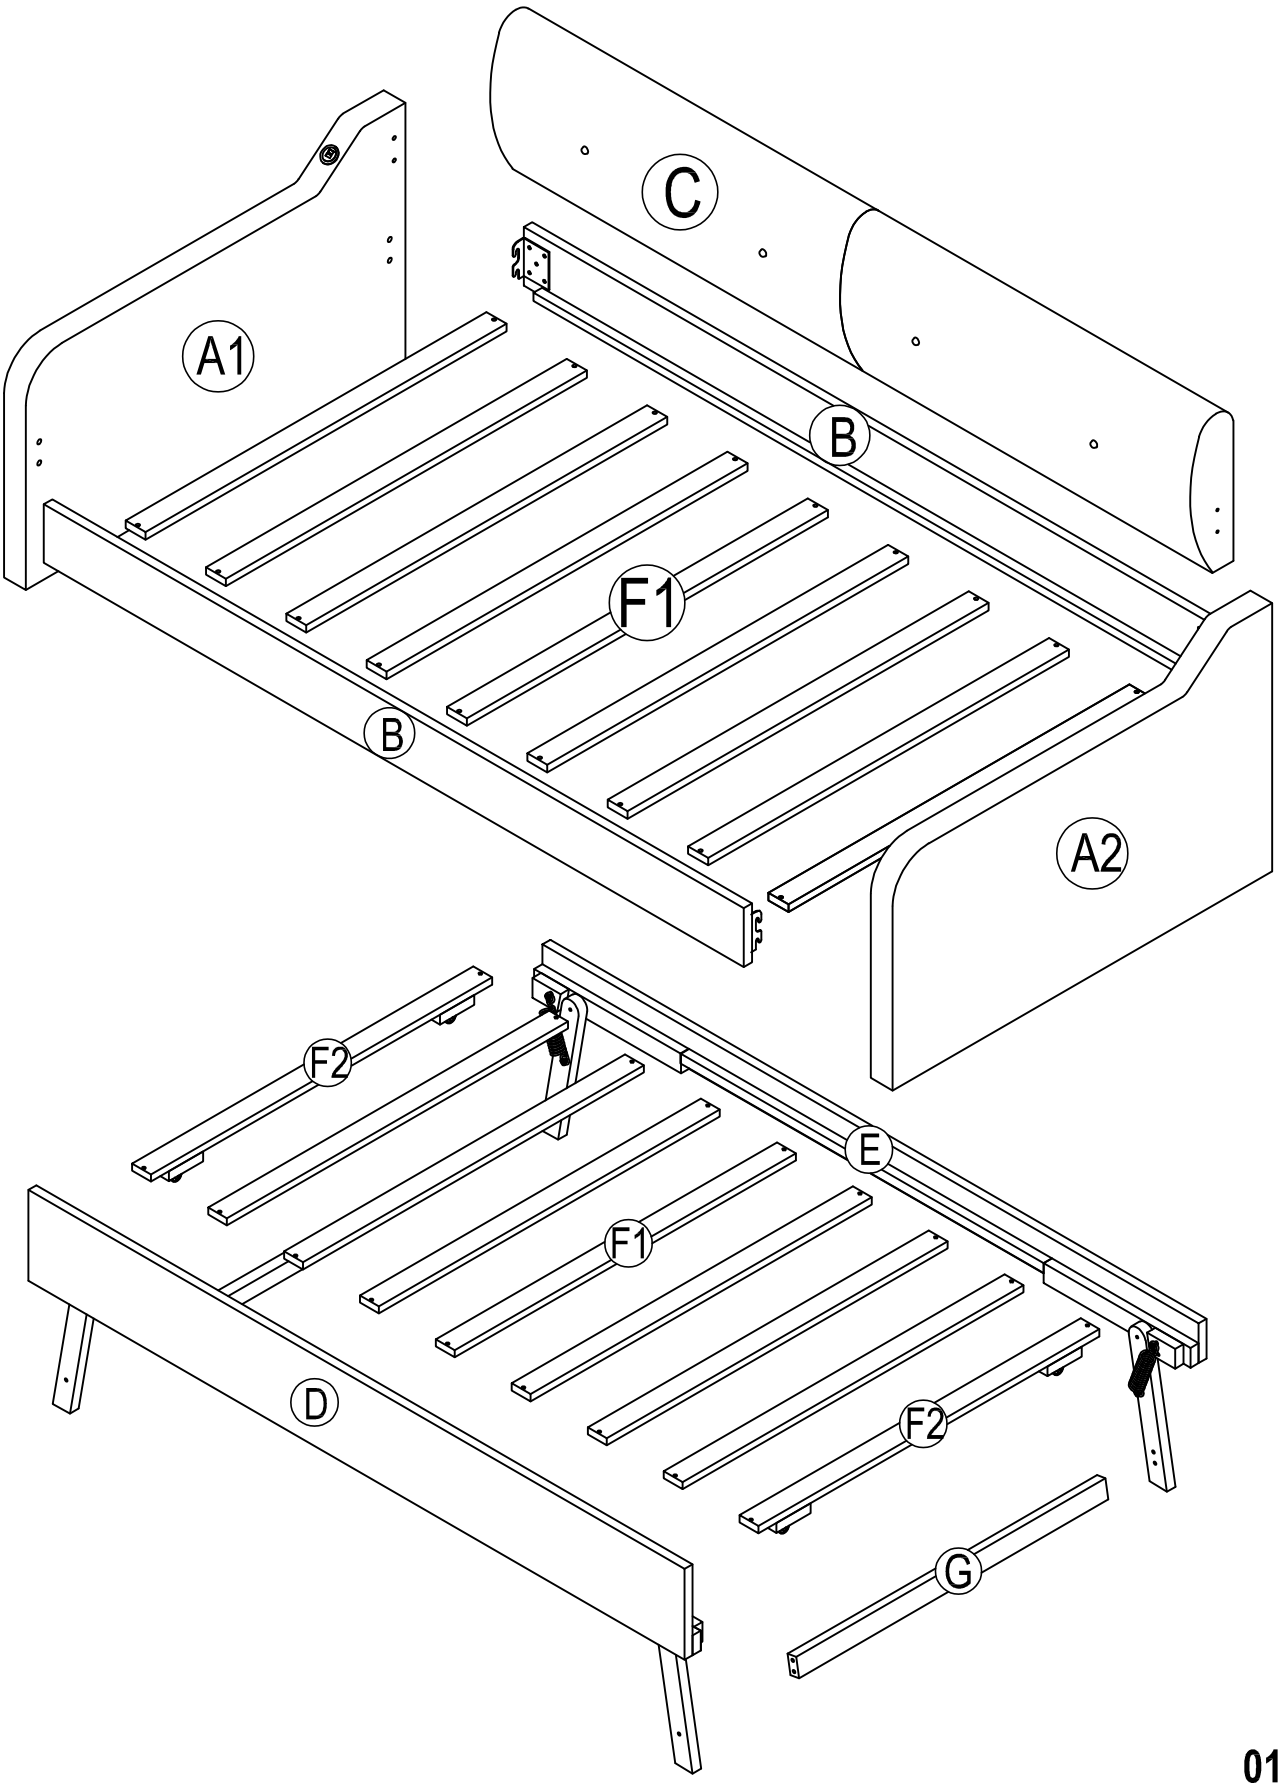
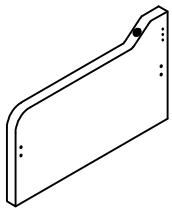
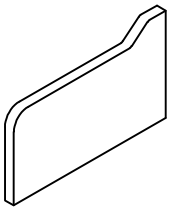
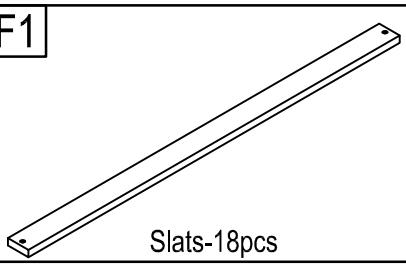
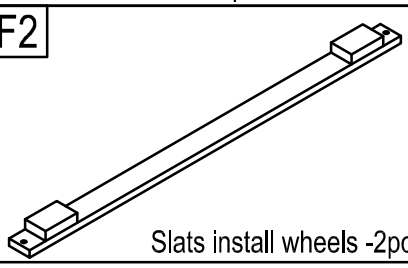


01/11

Part List






A1  HeadBoard-1pcs	A2  FootBoard-1pcs	F1  Slats-18pcs
F2  Slats install wheels -2pcs		


Hardware List

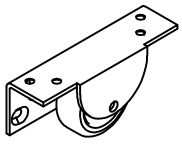1  Plastic Feet(Ø50x40) 4pcs	2  Ø1/4" x 30 mm Wood Screws 8pcs	3  Ø1/4" x 50 mm Wood Screws 8pcs
4  M4 x 30 mm Wood Screws 48pcs	5  Ø10 x 40 mm Wood dowel 4pcs	6  Wheels 4pcs
7  Allen Key 1pc	8  Steel Bracket 3pcs	9  M4 x 15 mm Wood Screws 12pcs

02/11

Part List

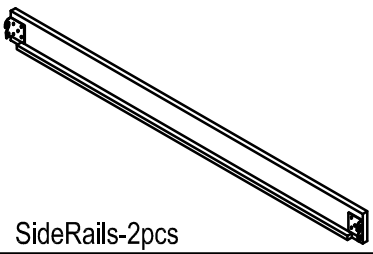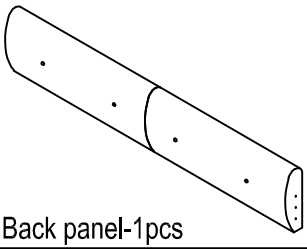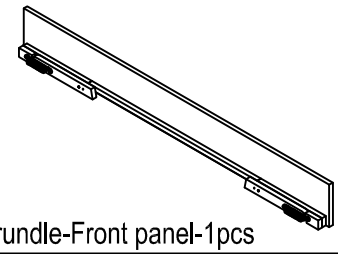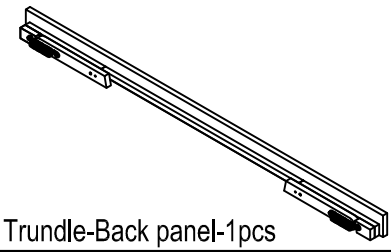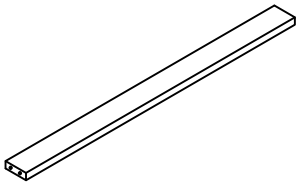B  SideRails-2pcs	C  Back panel-1pcs	D  Trundle-Front panel-1pcs
E  Trundle-Back panel-1pcs	G  Trundle Legs Bar-2pcs	



Assembly Tools Required (Not Included)


03/11


STEP 1: Following below illustration Assembly Plastic Feet(#1) With Headboard and Footboard use HW #2

1




4pcs

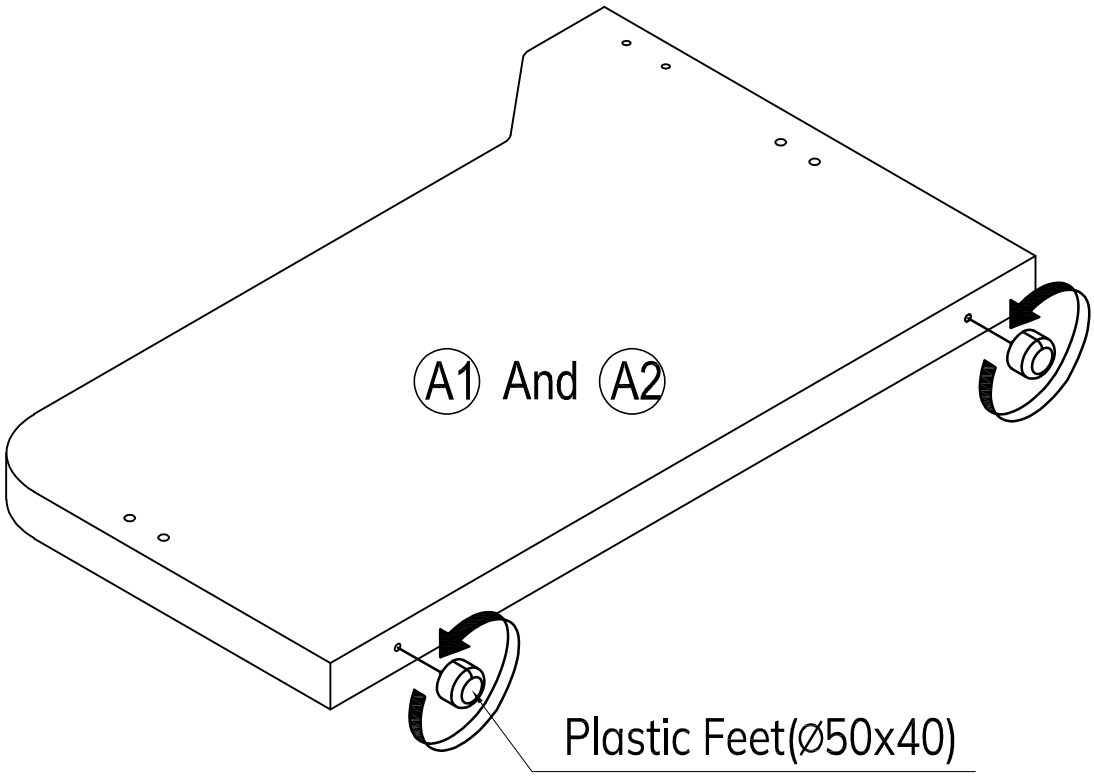


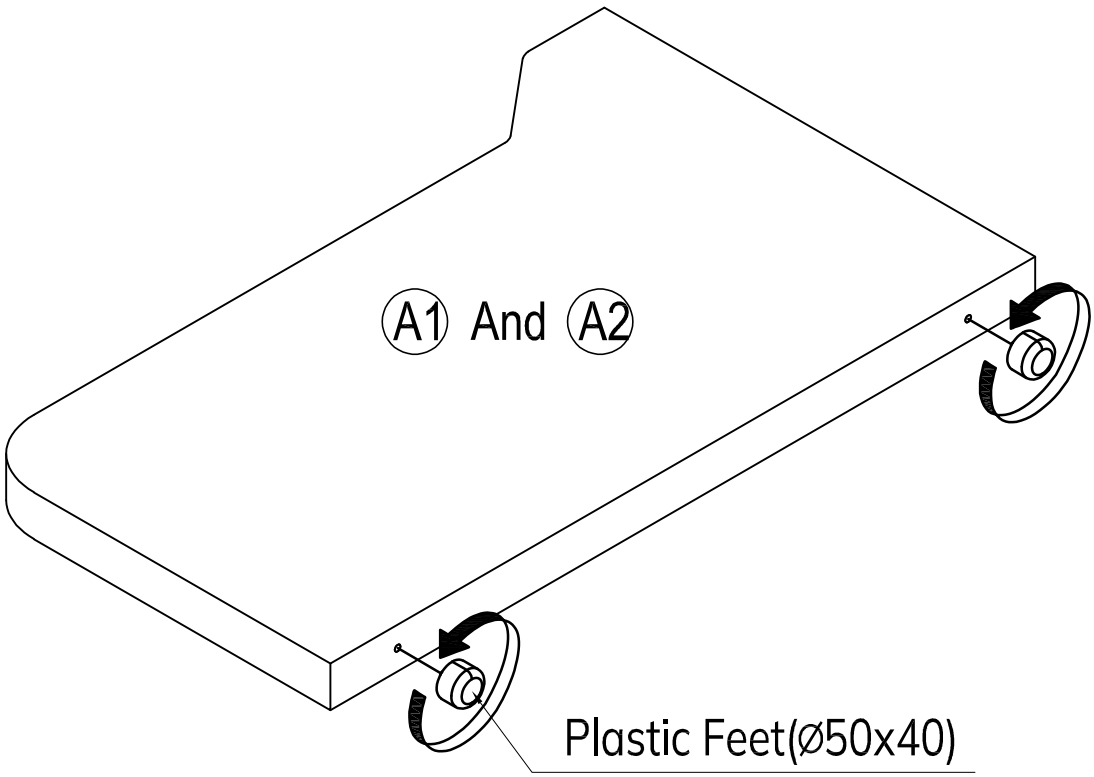

STEP 2:

Following below illustration Using hardward #2 to Assembly Headboard and Footboard with siderail B(x2).Look at detail view for more detail

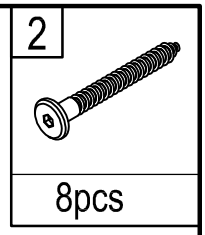


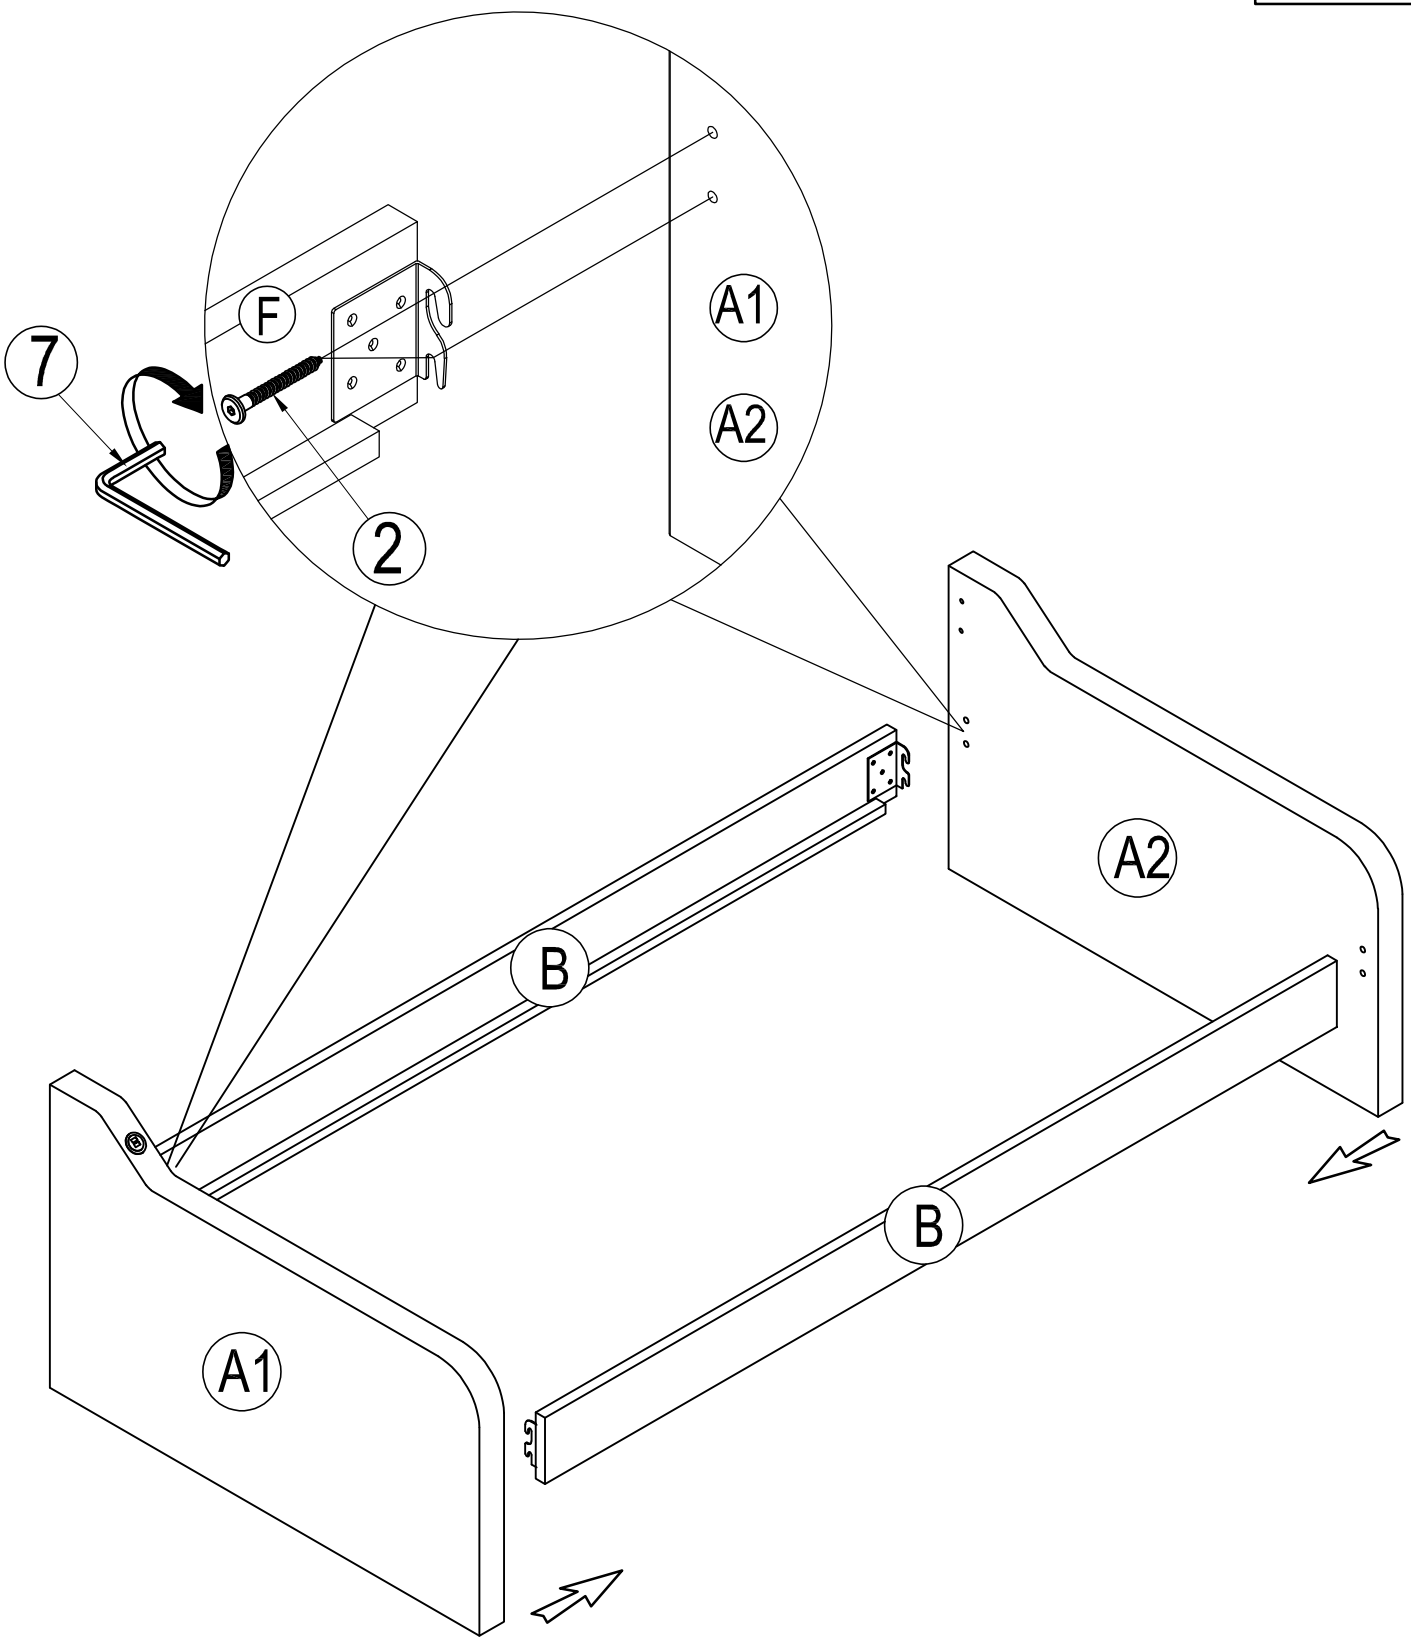


STEP 3: Following below illustration


-Using hardward #3 to Assembly Frame(completed on step 2) with Bach Frame C

8



6pcs

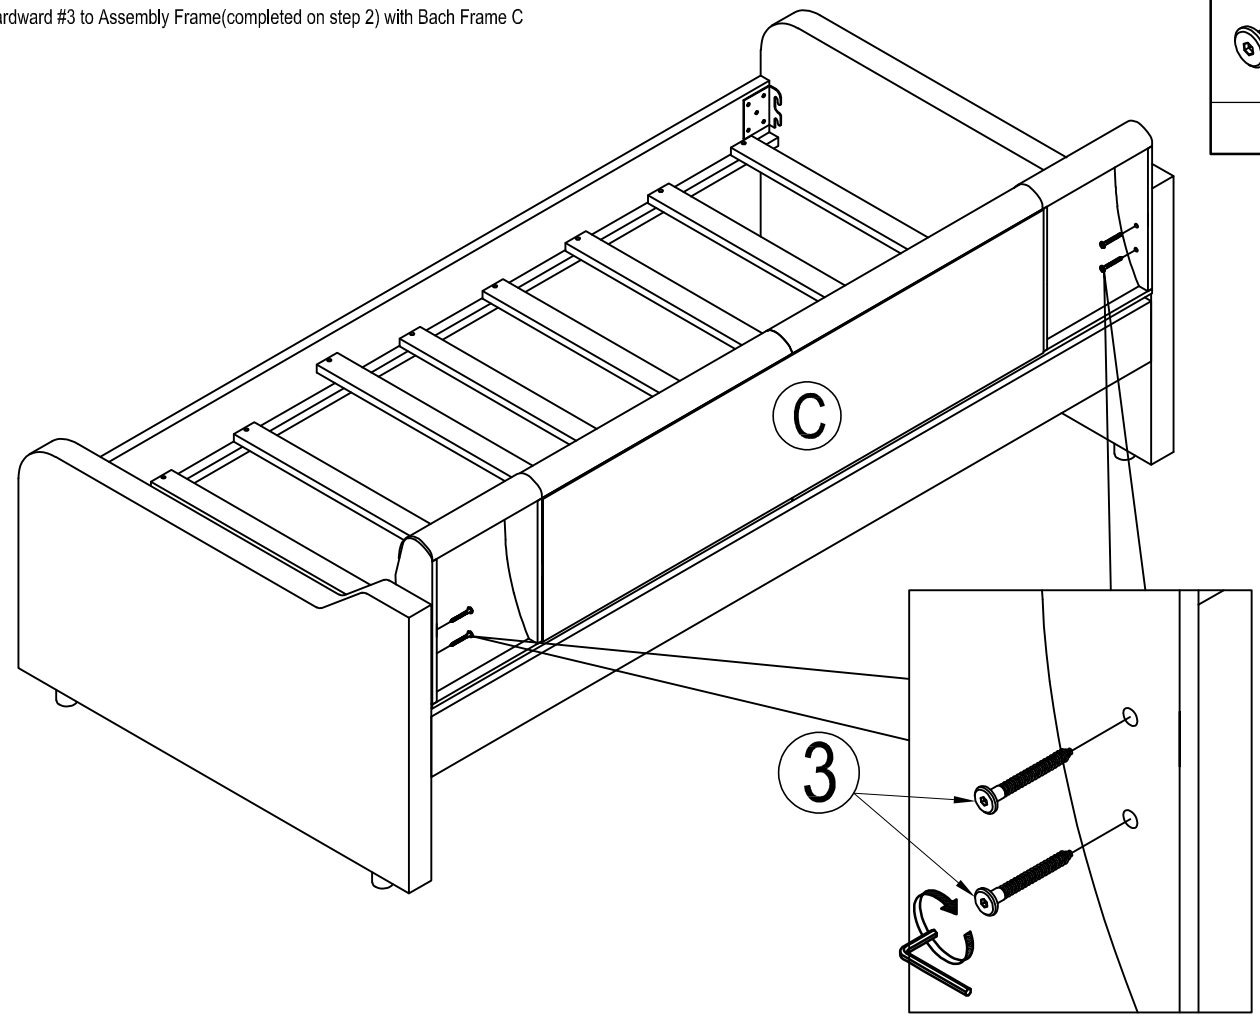

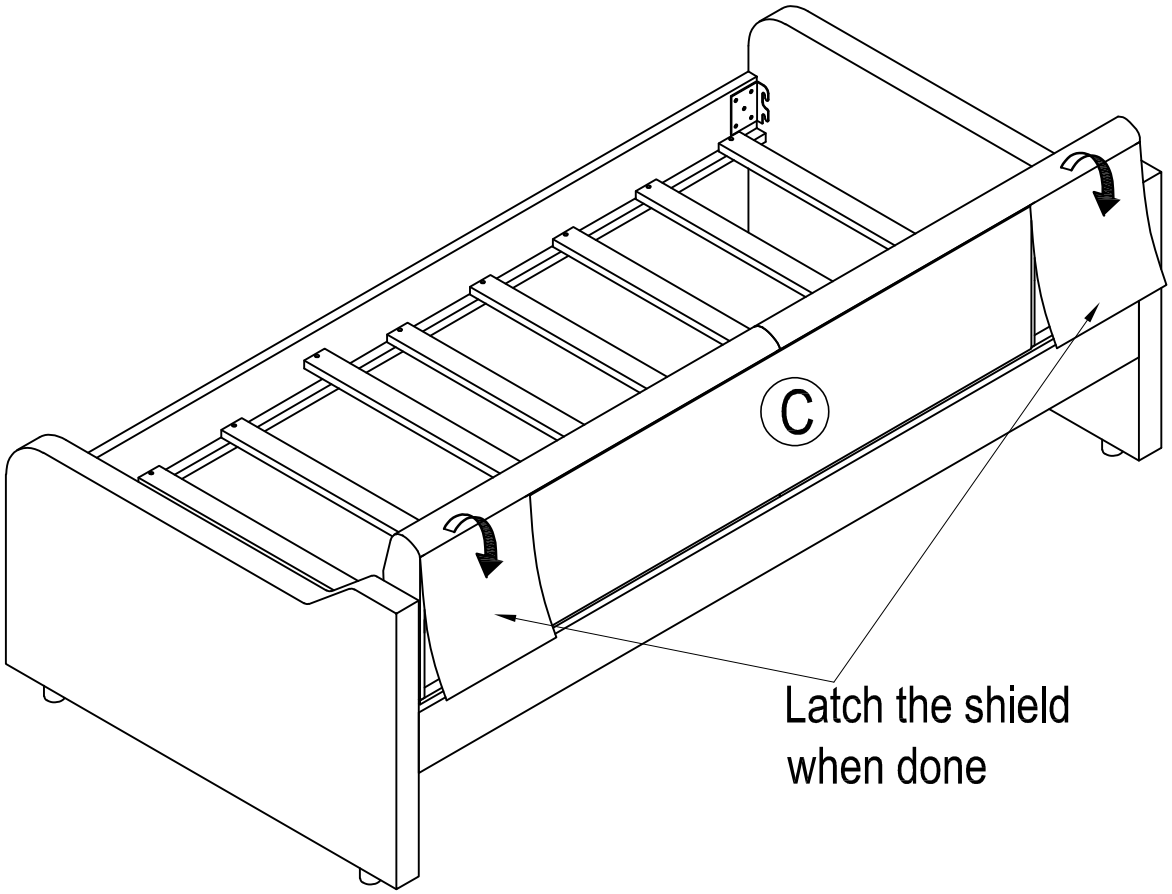

06/11

STEP 4: Following below illustration:


-Screw 10 slats F with Side Rail B by using hardward #4.

-Look at detail view for more detail

4




20pcs

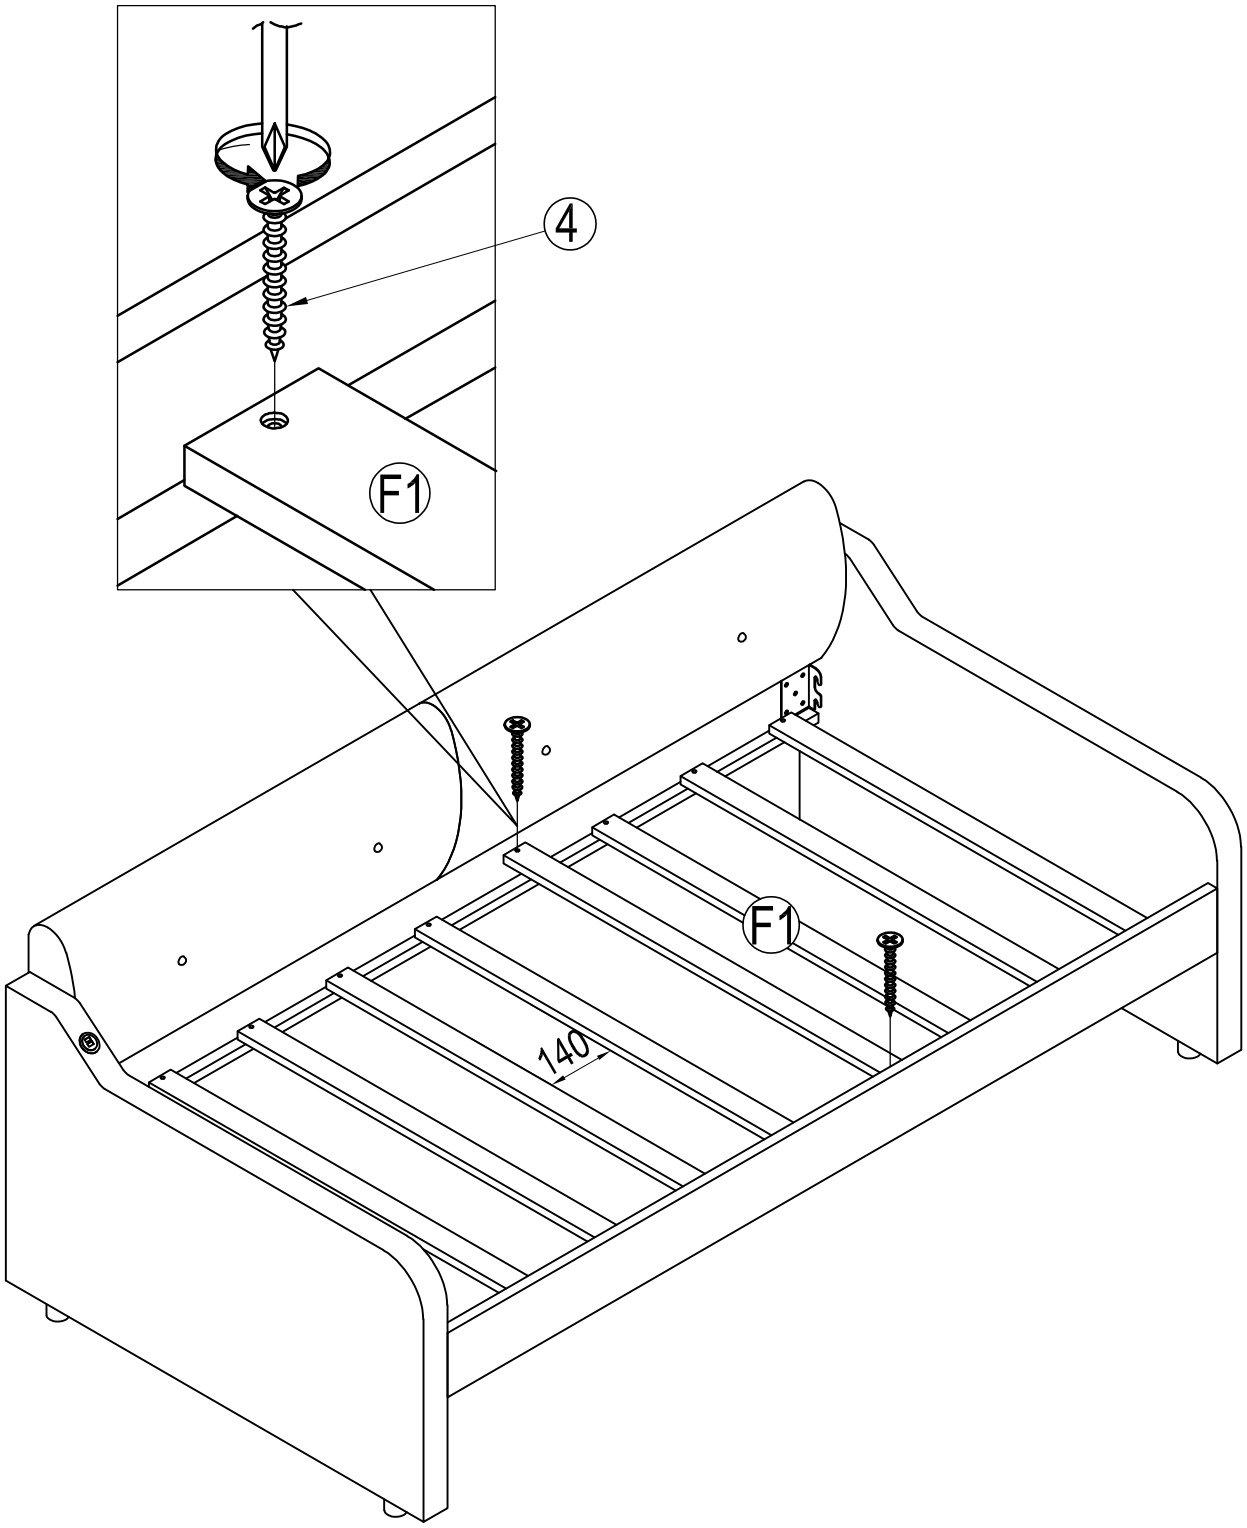


07/11

STEP 5-1:


Following below illustration:

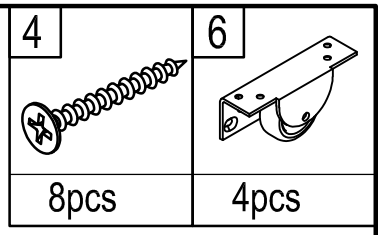

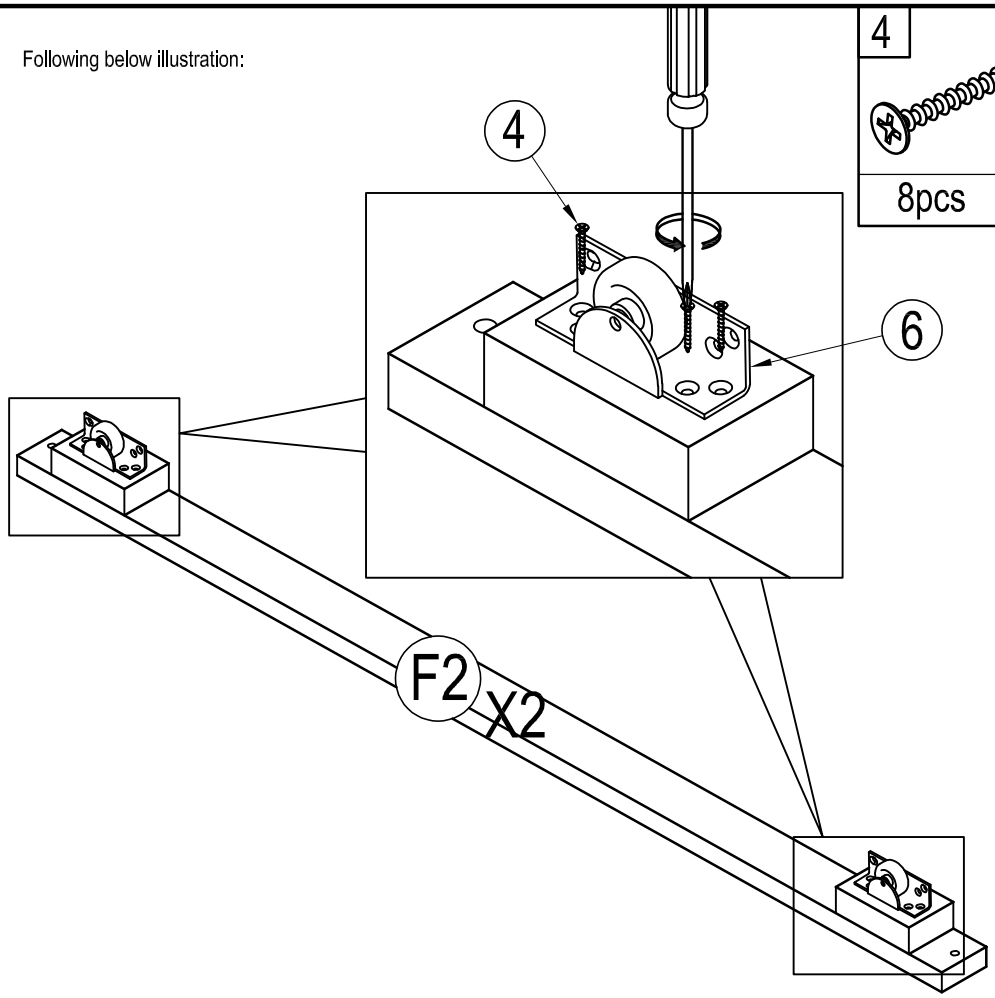



STEP 5-2:

Loosen a screw number 4 and keep for step 6

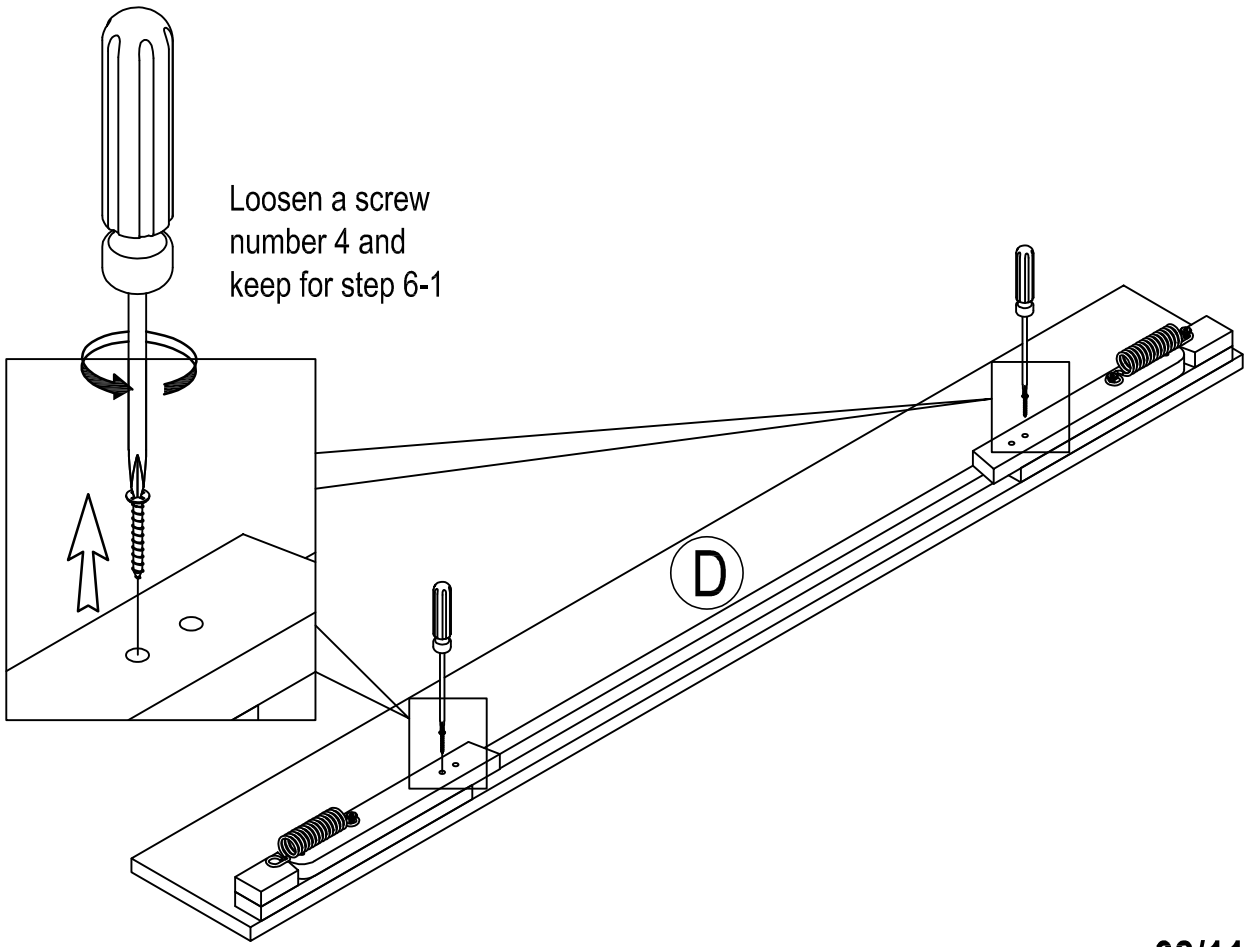

08/11


STEP 6-1: Following below illustration:

3	5
	
4pcs	4pcs

STEP 6-2: Following below illustration:

4


20pcs

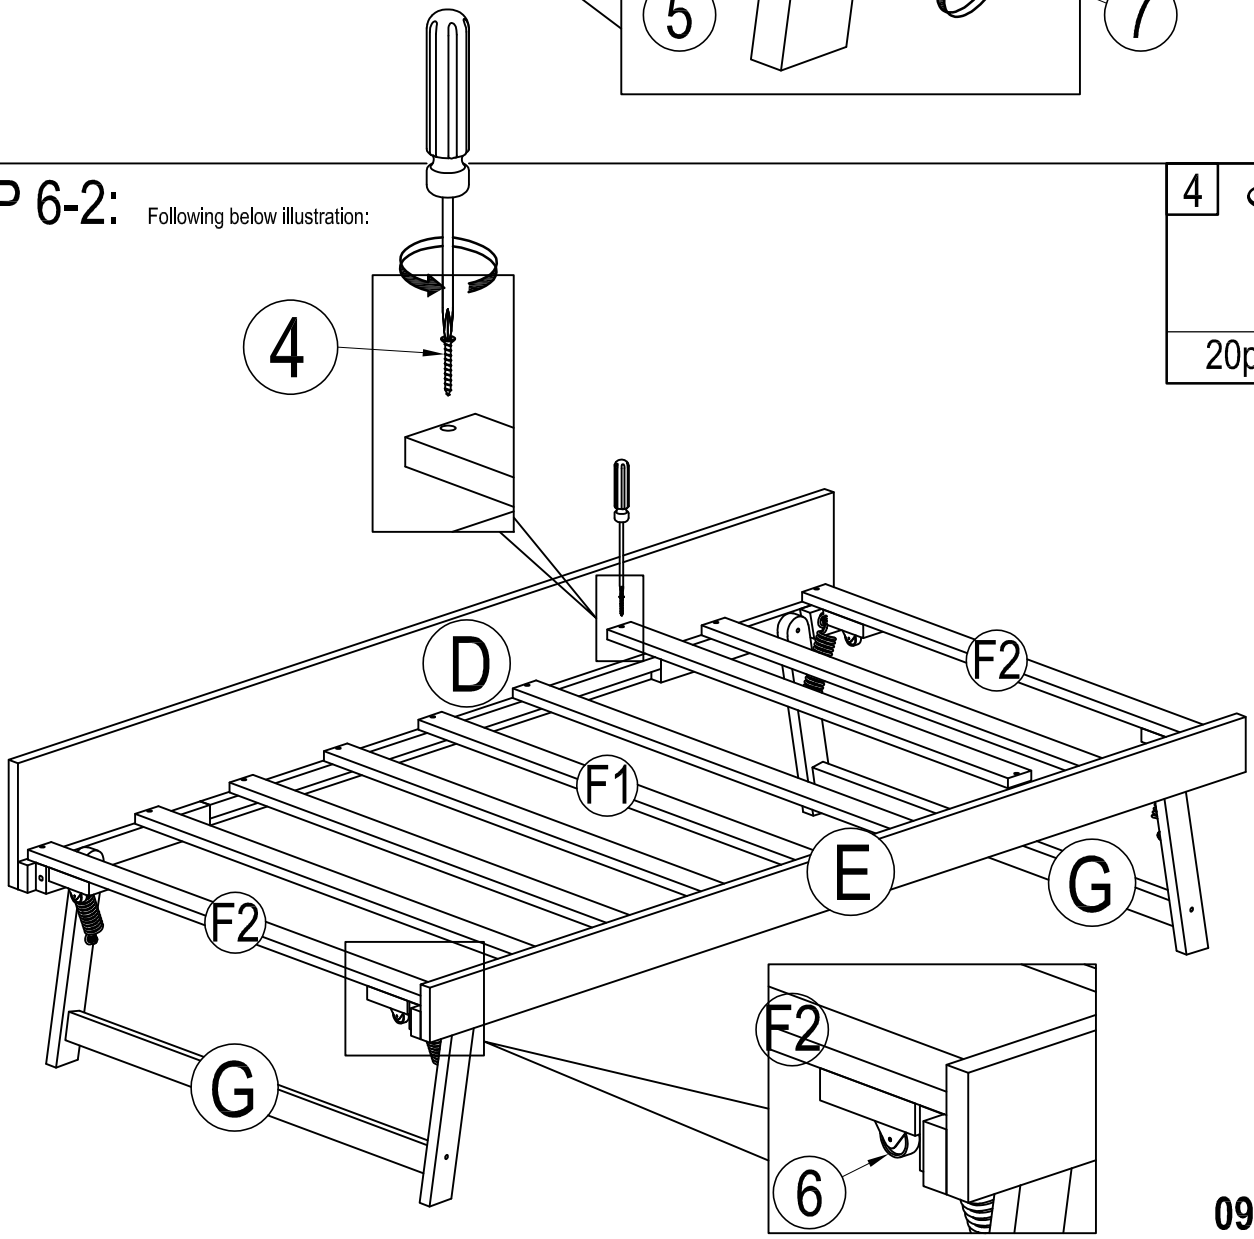

09/11

STEP 7: Following below illustration:

8	9
3pcs	12pcs

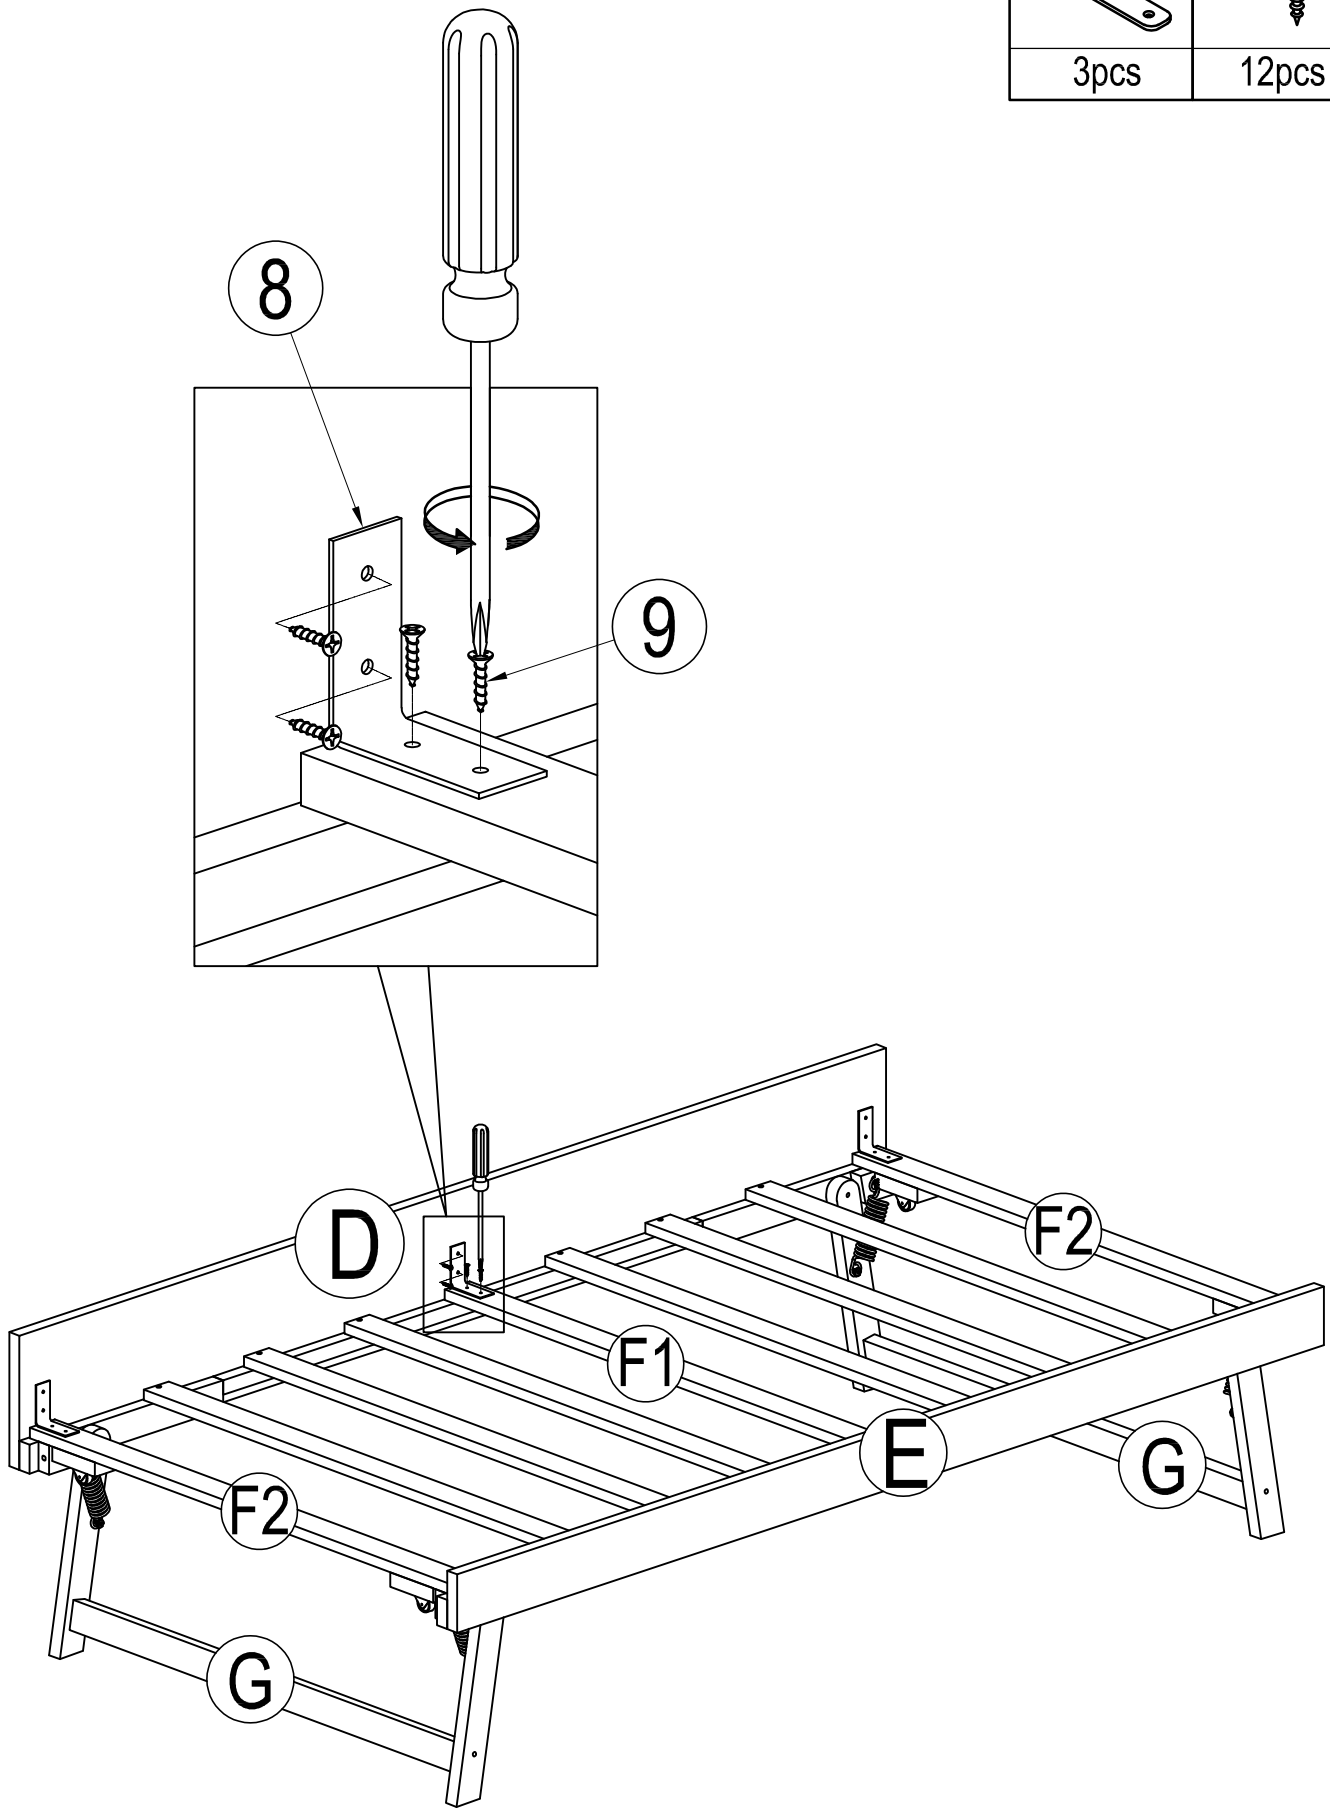

STEP 8: Following below illustration:

