



ASSEMBLY INSTRUCTIONS

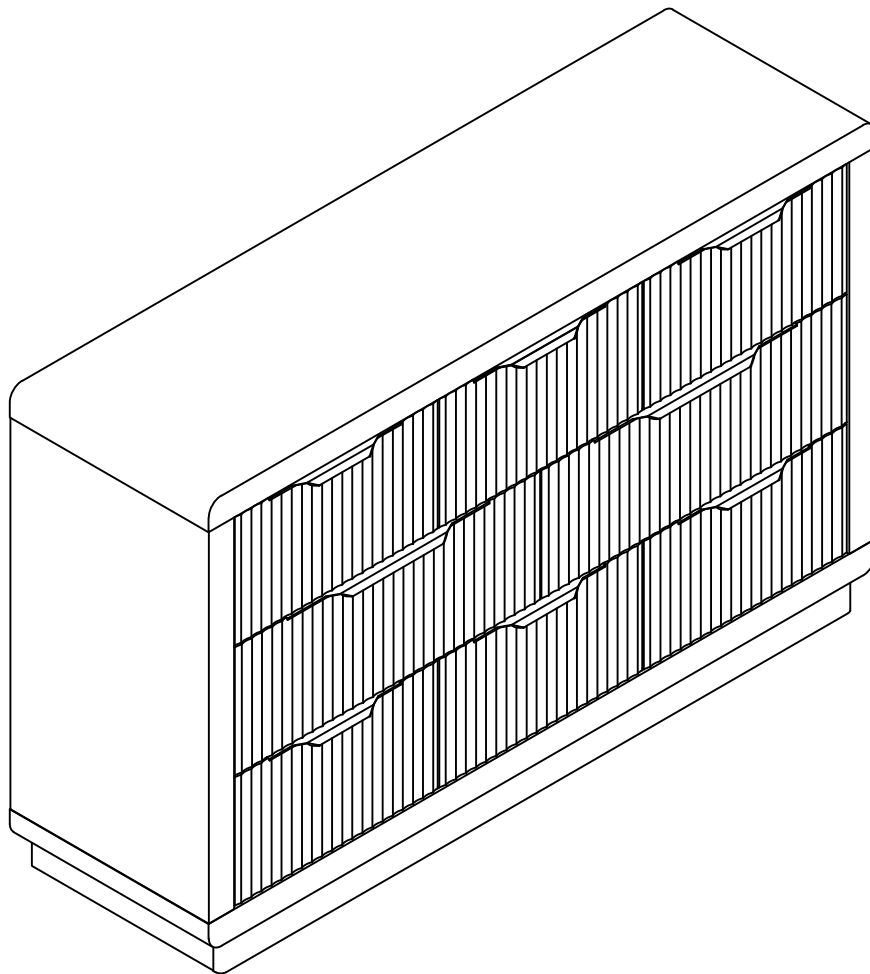

For product support or inquiries, please reach out to us at harpagservice@gmail.com











PACKAGE INCLUDE

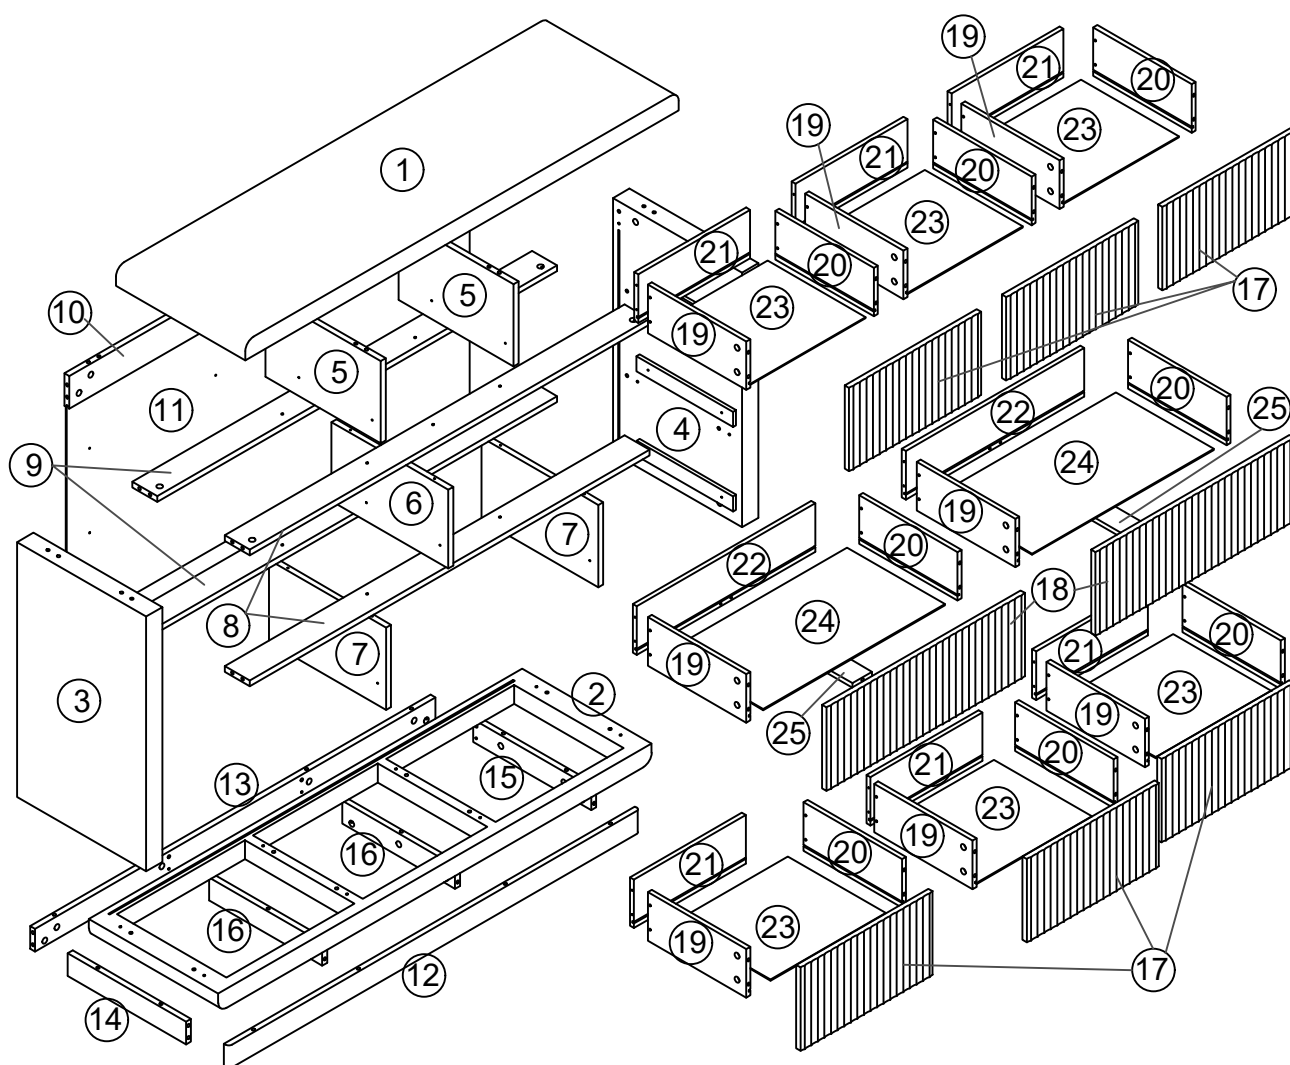


PACKAGE INCLUDE

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom box	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Upper middle partition	2
6	Middle partition	1
7	Lower middle partition	2
8	Front connecting rod	2
9	Middle rear connecting rod	2
10	Upper rear connecting rod	1
11	Backplate	1
12	Fore foot Plate	1
13	Rear foot Plate	1
14	Left foot Plate	1
15	Right foot Plate	1
16	Middle foot Plate	2
17	Short Padded Panels	6
18	Long Padded Panels	2
19	Drawer Left Side Panel	8
20	Drawer Right Side Panel	8
21	Short Drawer Back Panel	6
22	Long Drawer Back Panel	2
23	Short Drawer Bottom Panel	6
24	Long Drawer Bottom Panel	2
25	Drawer Bottom Strip	2


PACKAGE CONTENT

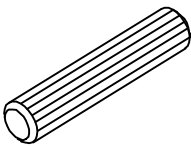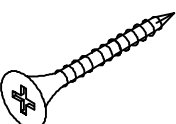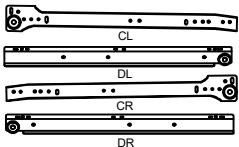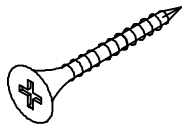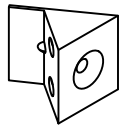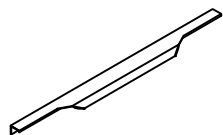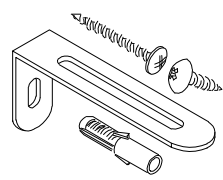M6*34mm  (A) x 86+4	Ø15*9.5mm  (B) x 86+4	Ø8*30mm  (C) x 38+2	Ø4*40mm  (D) x 14+2
12"  (E) x 8	Ø3.5*12mm  (F) x 64+4	Ø4*30mm  (G) x 36+2	14 x 13 x 10 mm  (H) x 8
Ø3*16mm  (J) x 16+2	400mm  (K) x2	260mm  (L) x 6	 (M) x 2
 (N) x16			


How to use the cam lock system

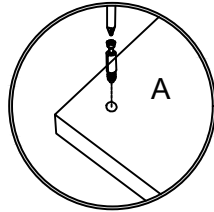


1. Screw cam bolt into panel

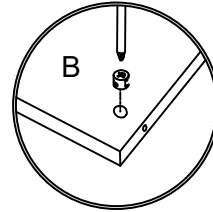


2. Push cam into panel - arrow feature on cam top points to panel edge

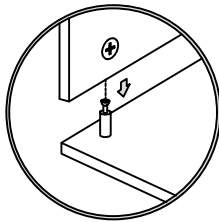


3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

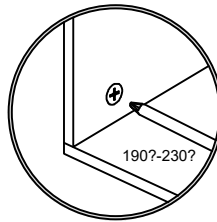


4. Rotate cam(s) clockwise 190°-230° to lock panels together

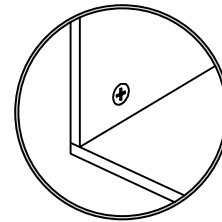


5. Panels should be tight against each other and connection should be rigid

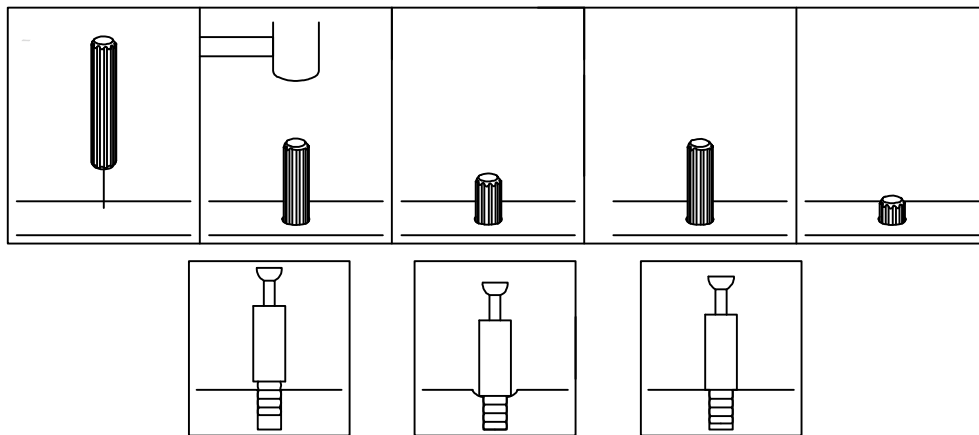


STEP 1

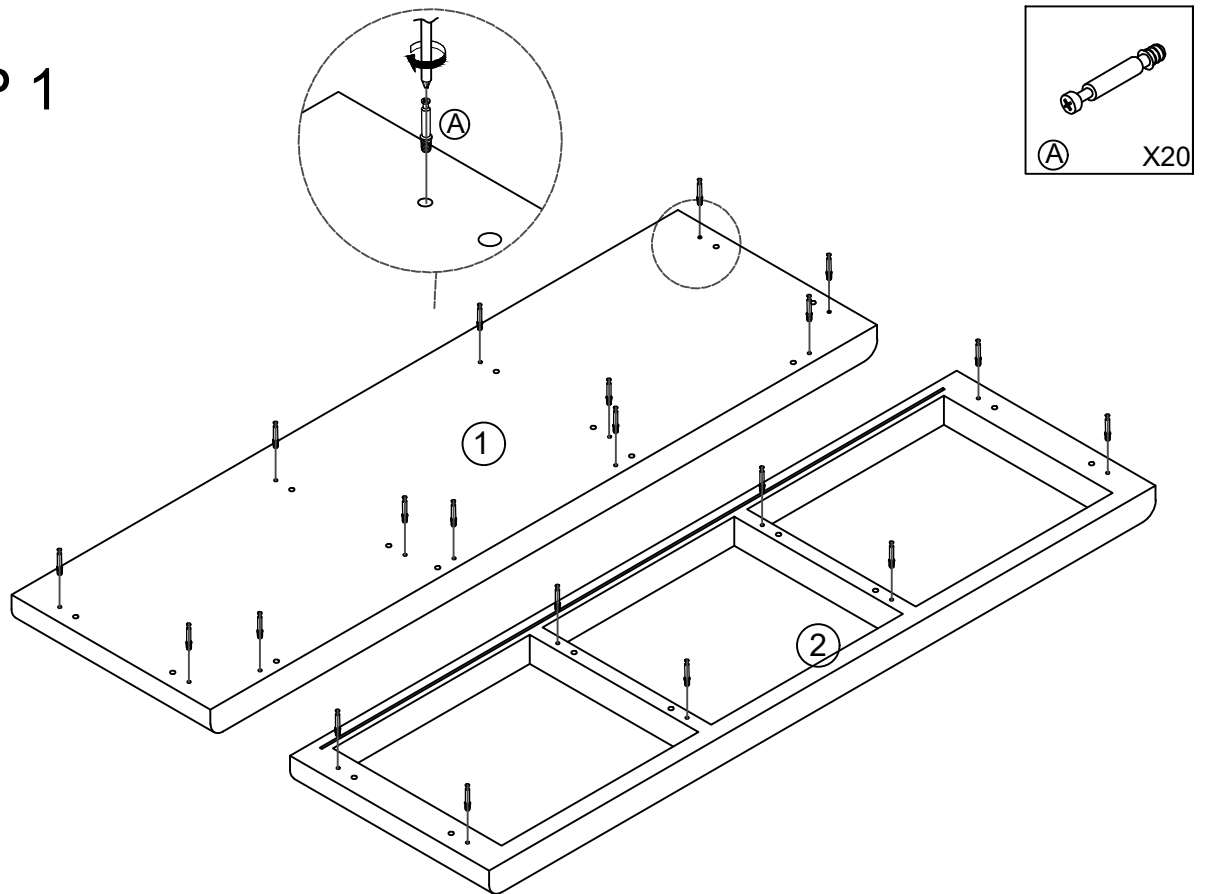


STEP 2

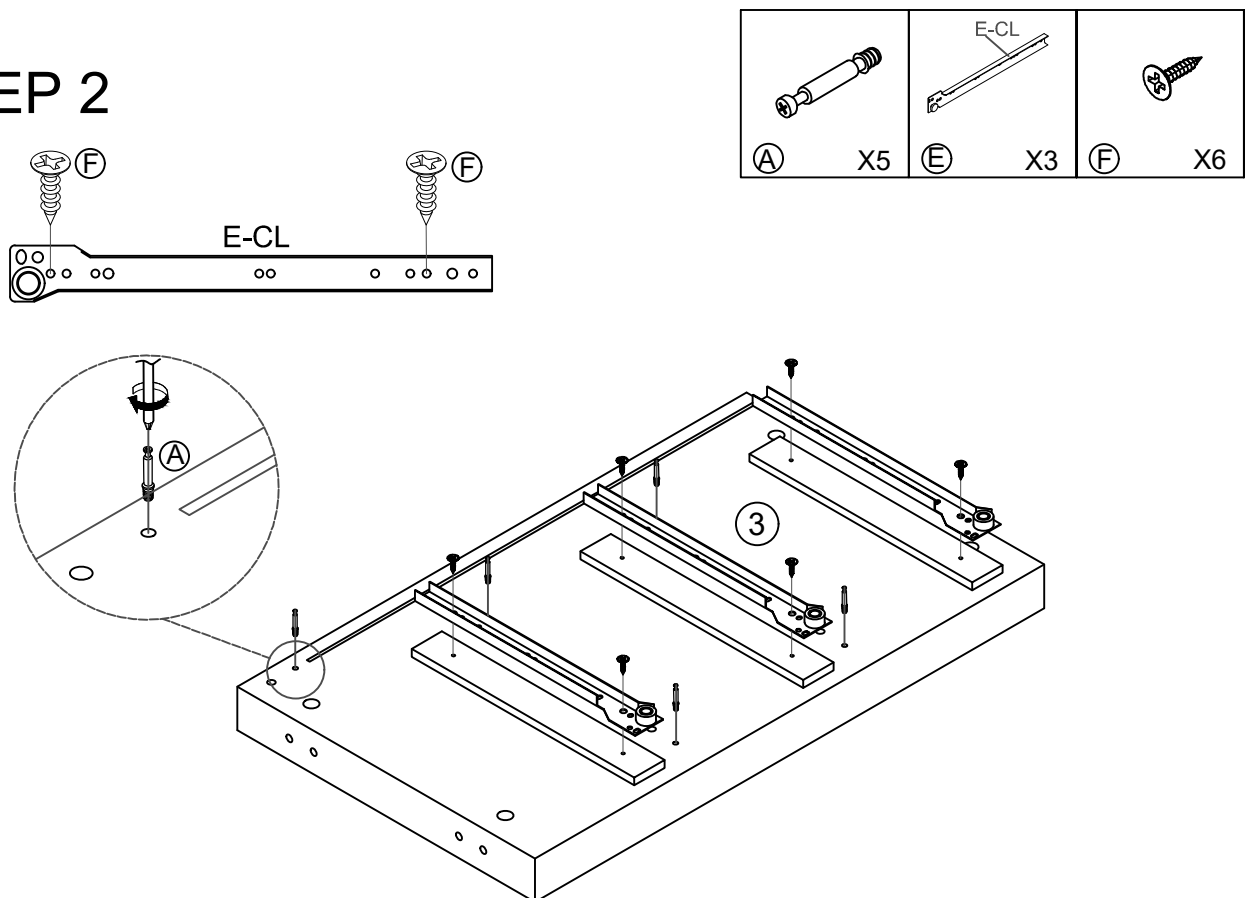




STEP 3

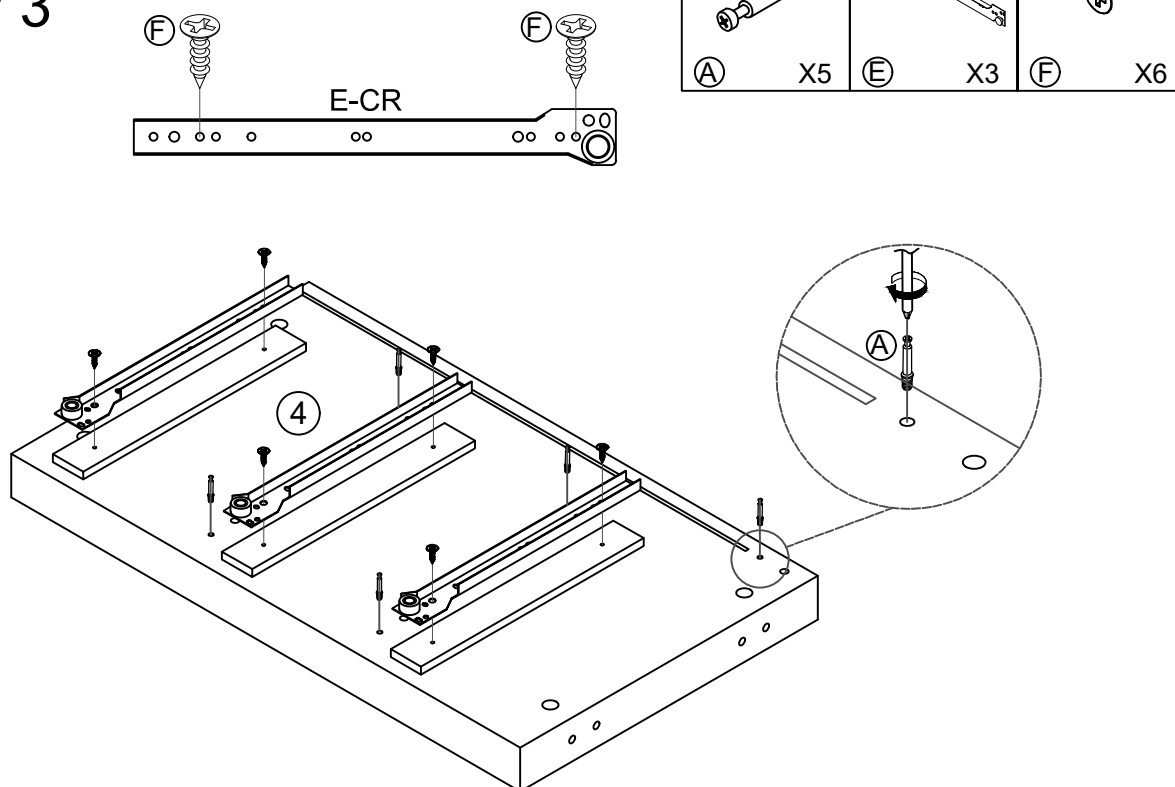

STEP 4



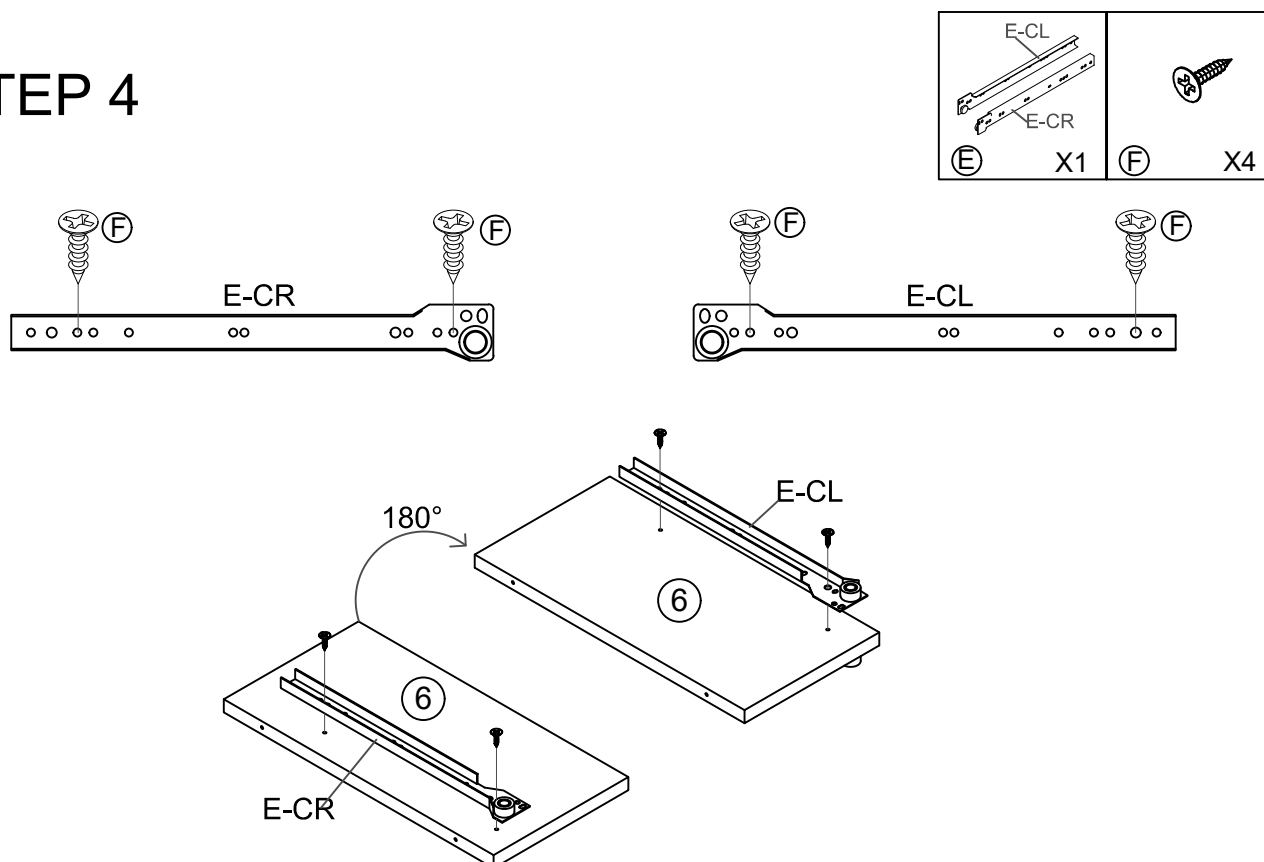


STEP 5

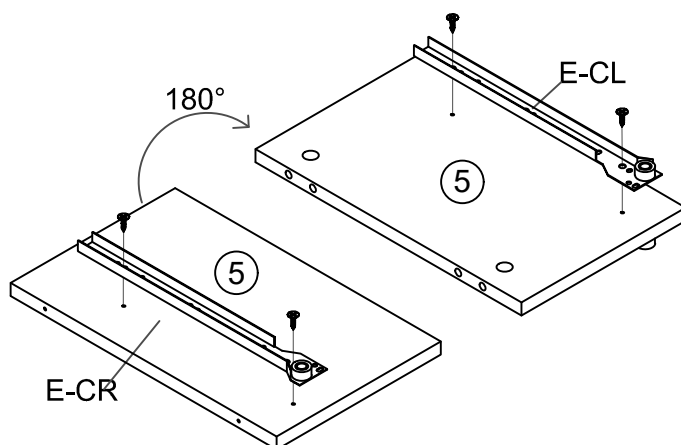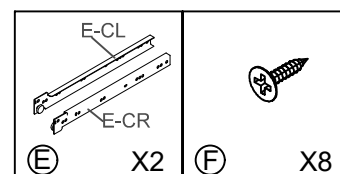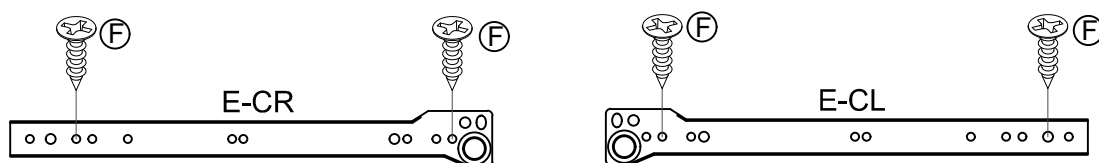



x2

STEP 6

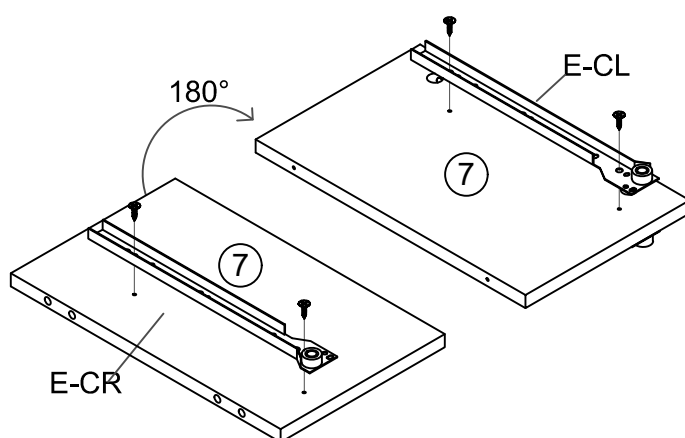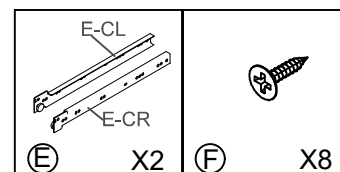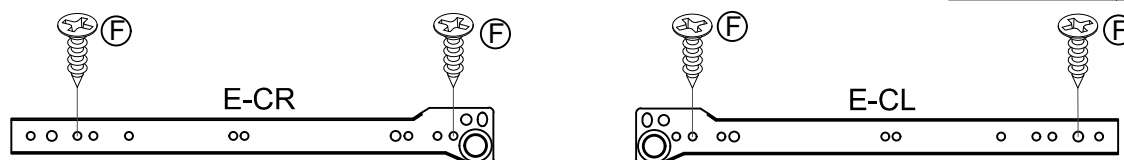



x2

STEP 7

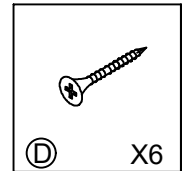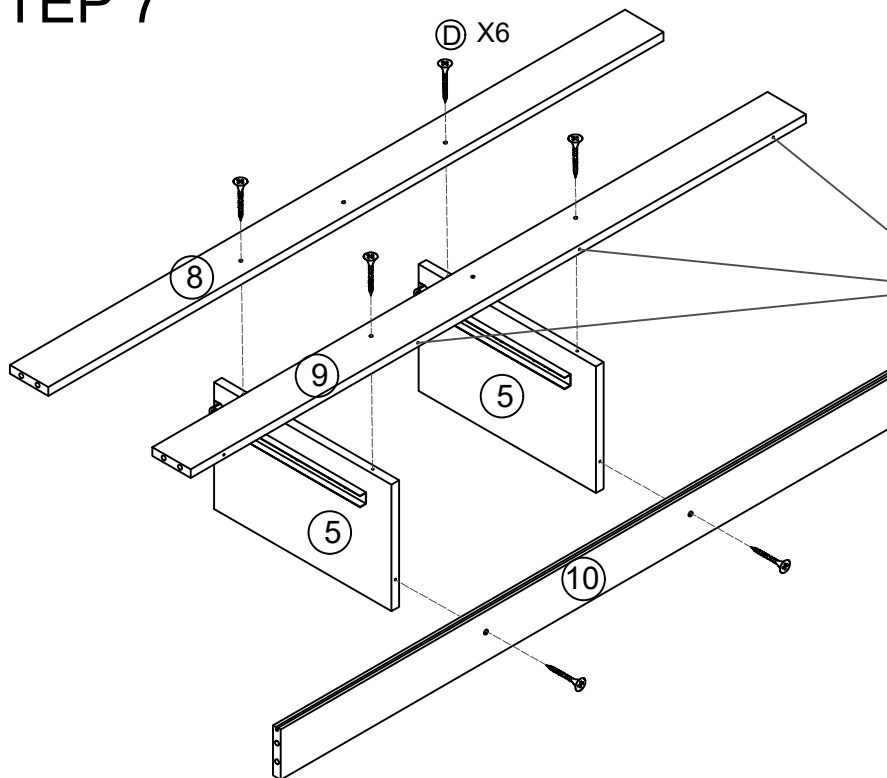

Please note:
This is the back plane mounting guide hole. Please ensure that it is facing the same direction during installation. Subsequent installations should follow the same orientation.



STEP 8

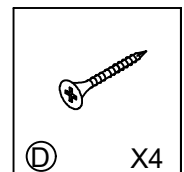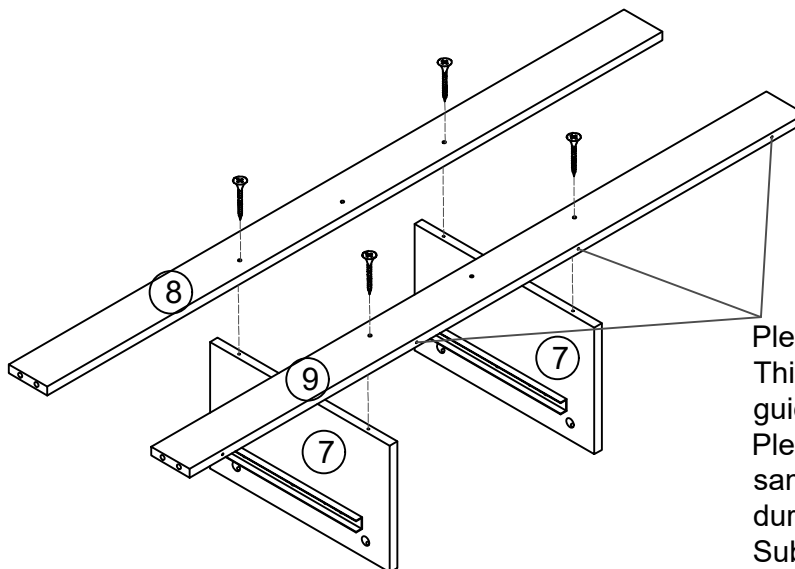

Please note:
This is the back plane mounting guide hole. Please ensure that it is facing the same direction during installation. Subsequent installations should follow the same orientation.



STEP 9

Note: the direction and height of the road track are all consistent.


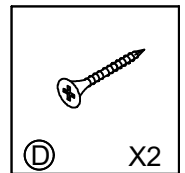
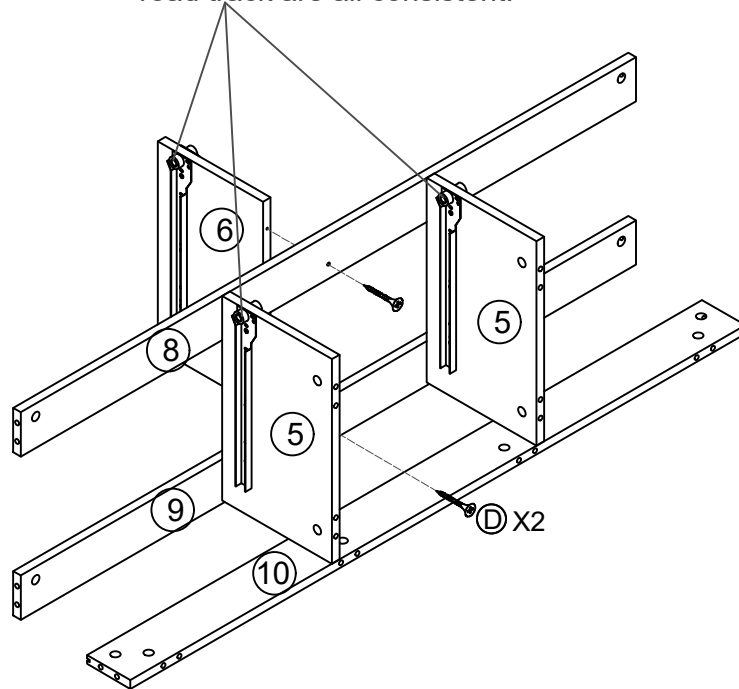


STEP 10



Note: the direction and height of the road track are all consistent.

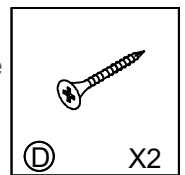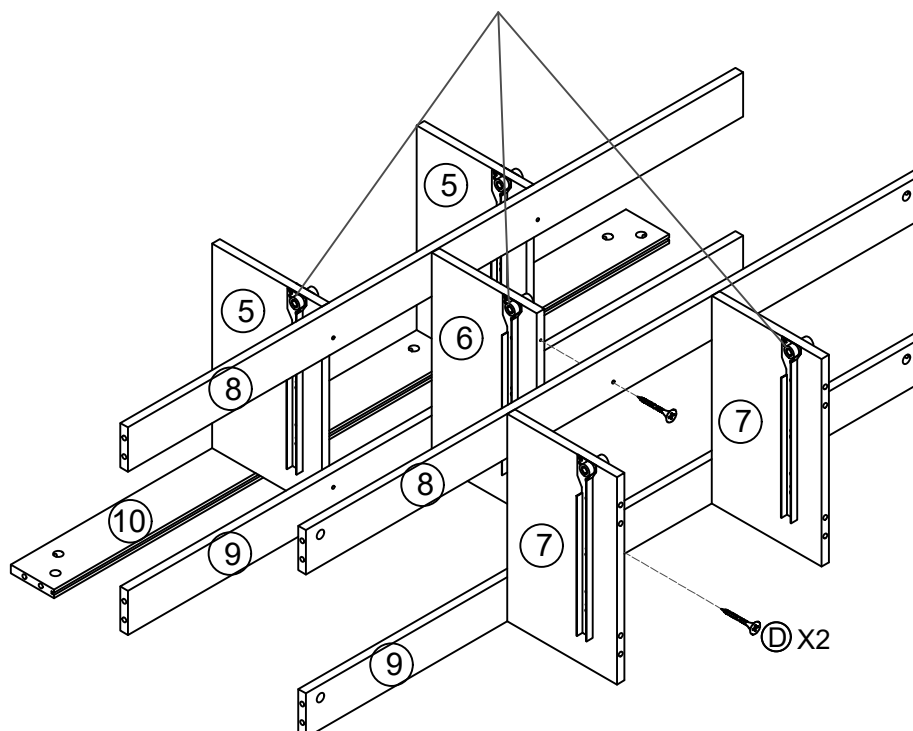



STEP 11

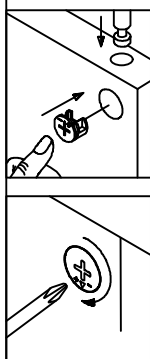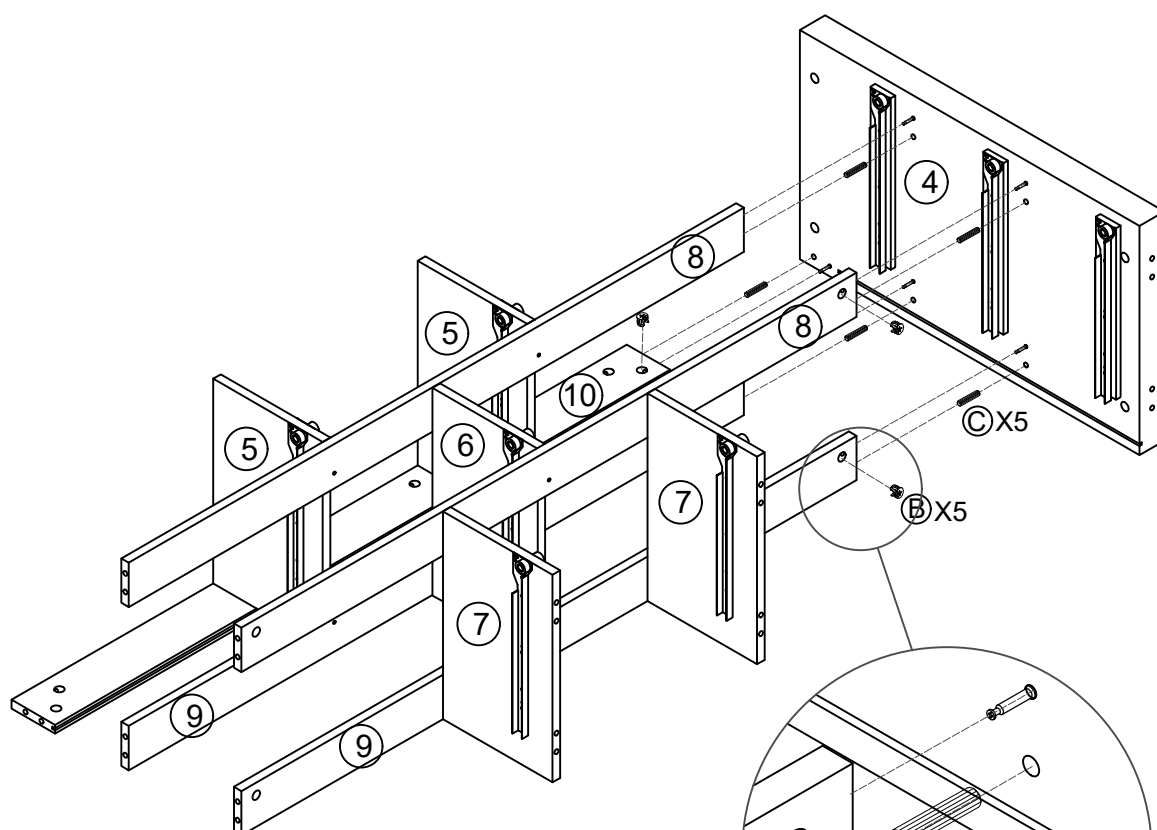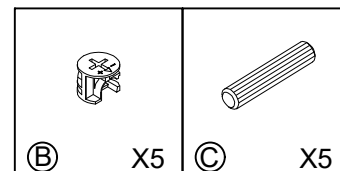



STEP 12

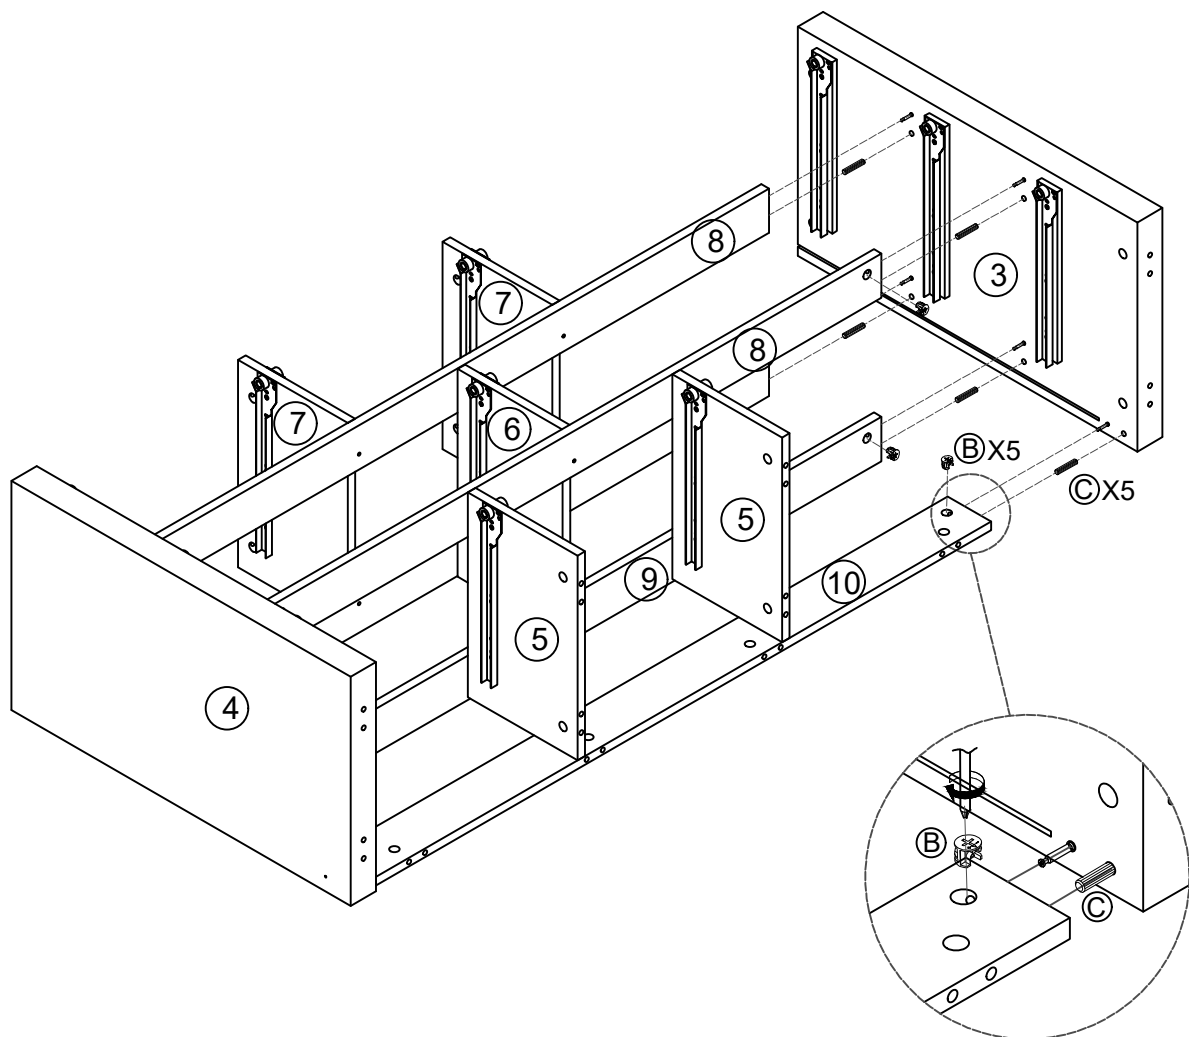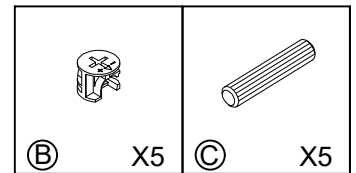


STEP 13

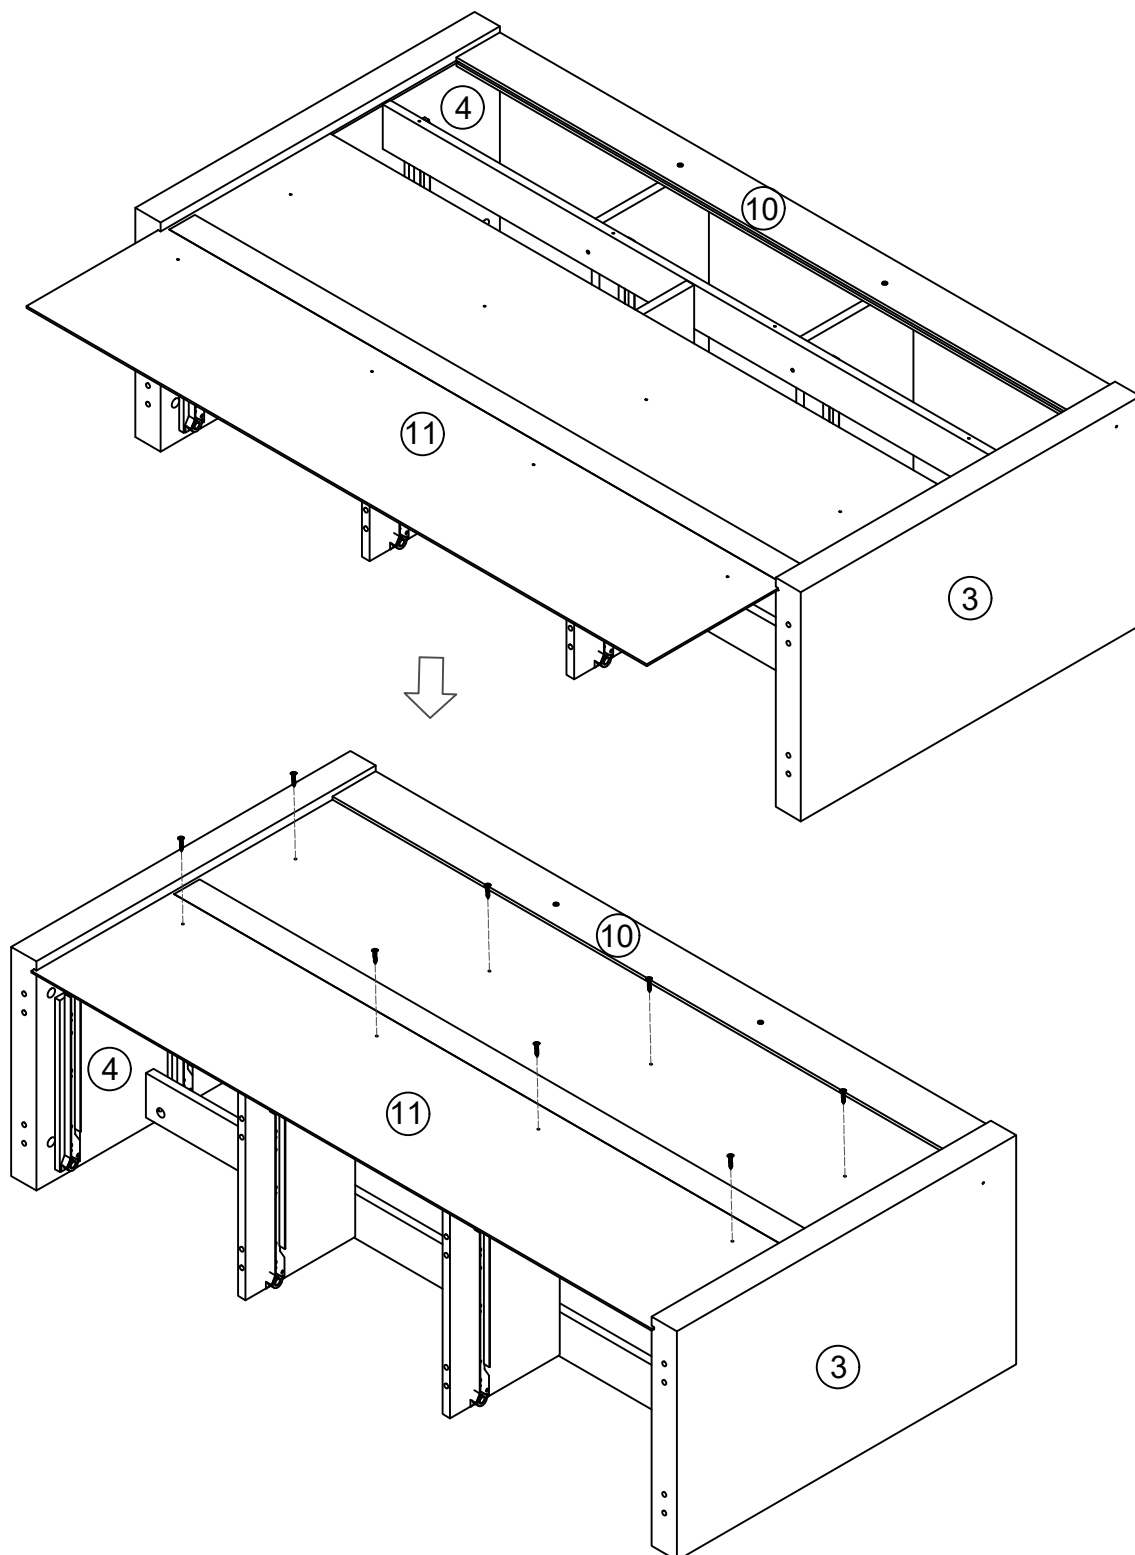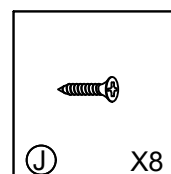


STEP 14

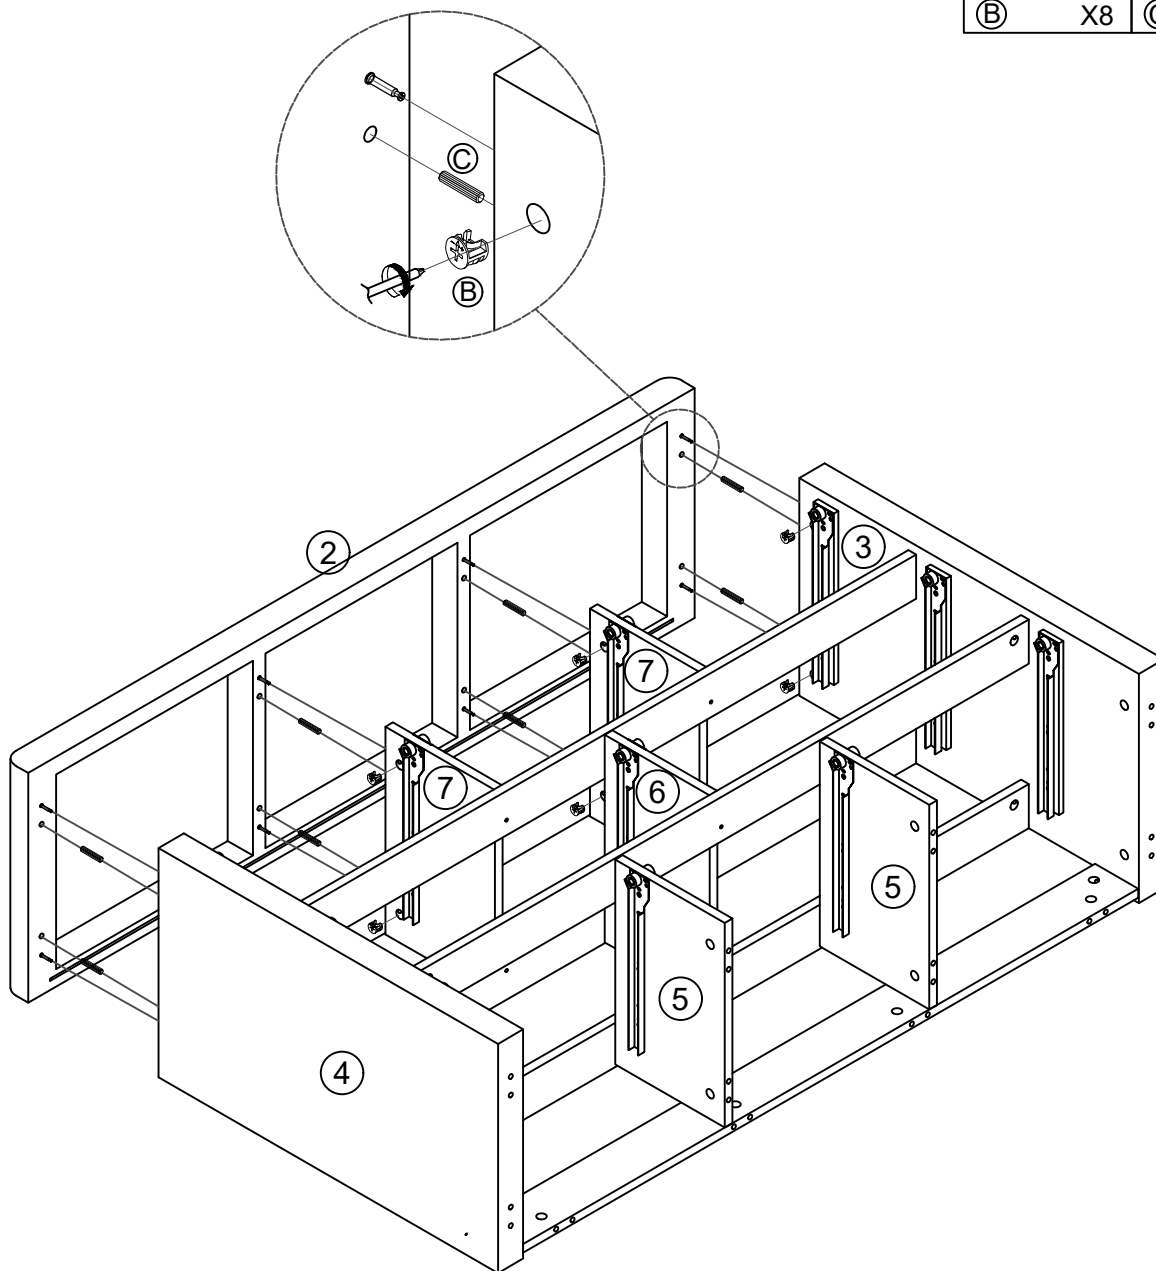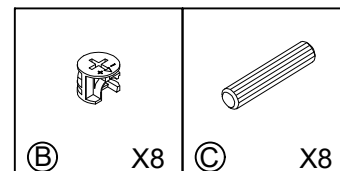


STEP 15

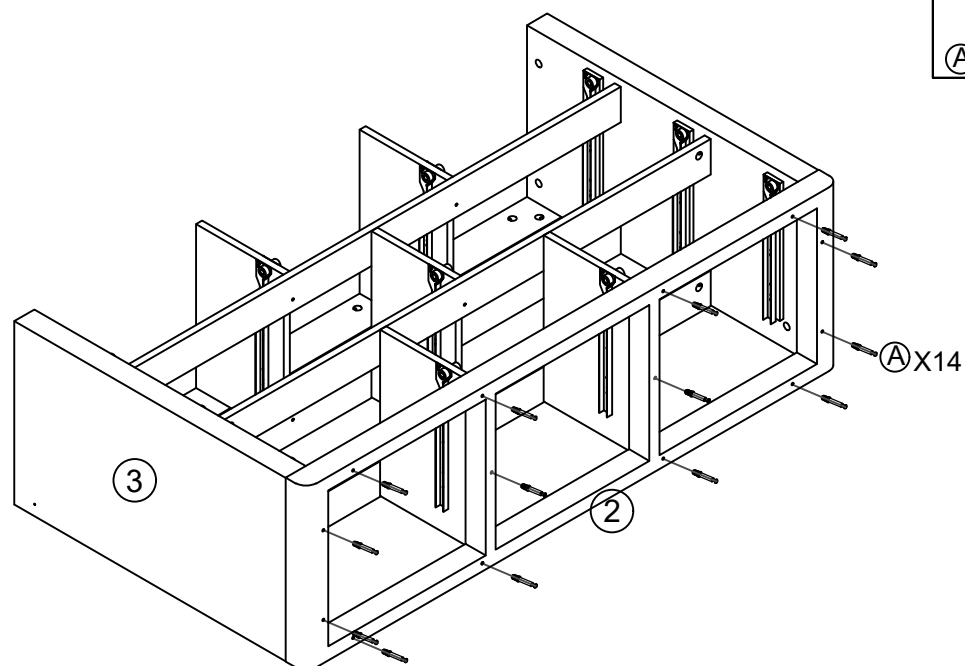


STEP 16

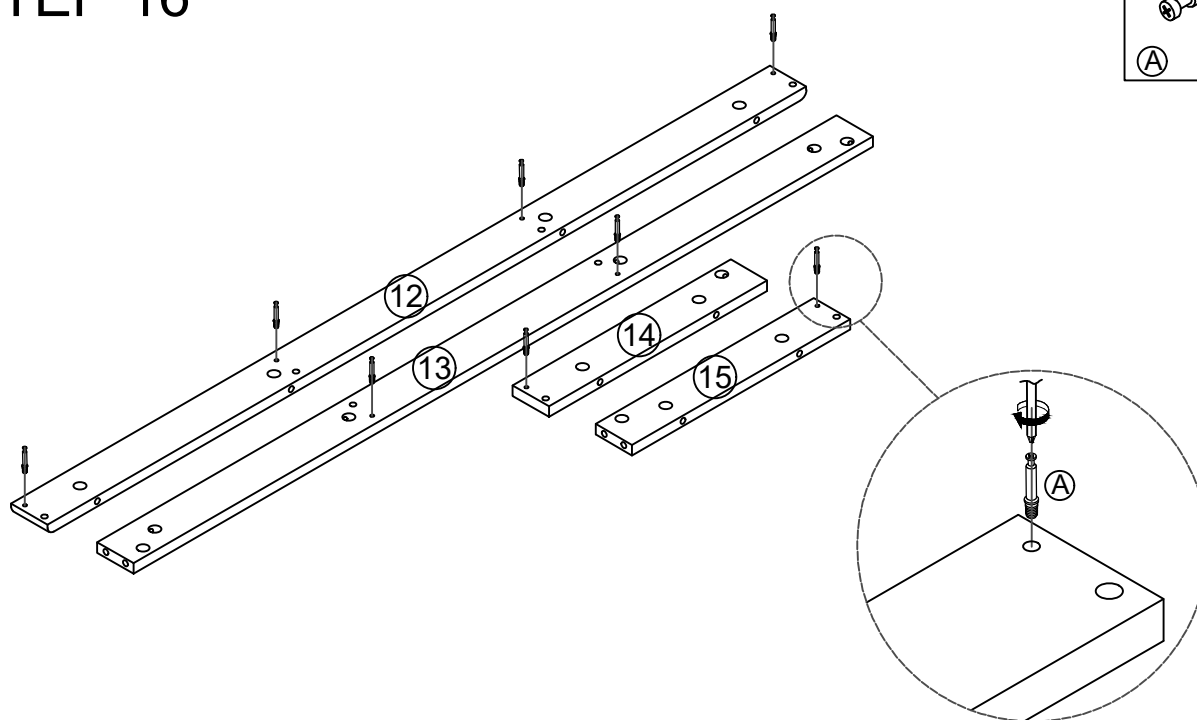




STEP 17

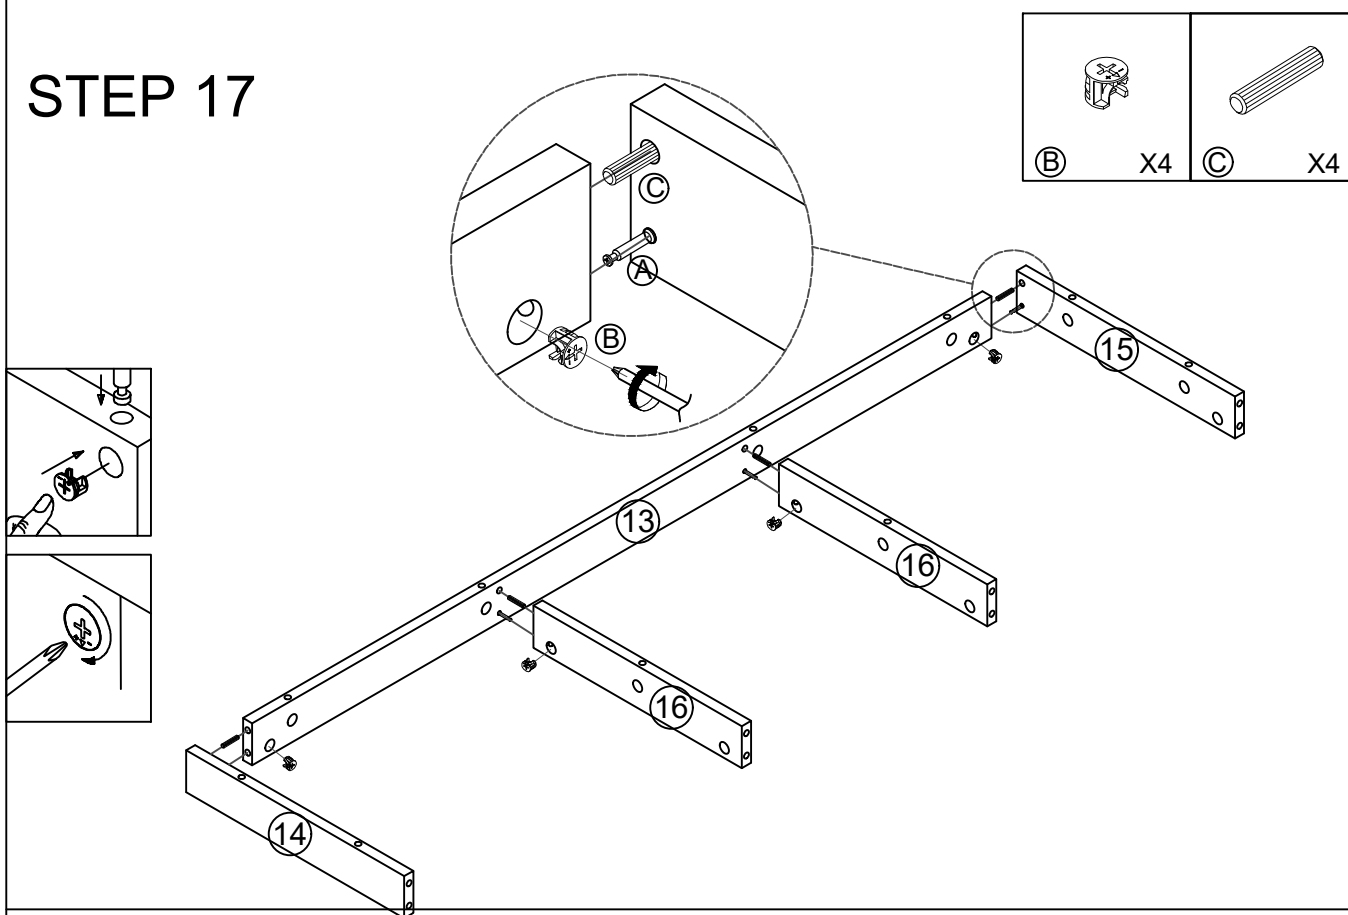


STEP 18

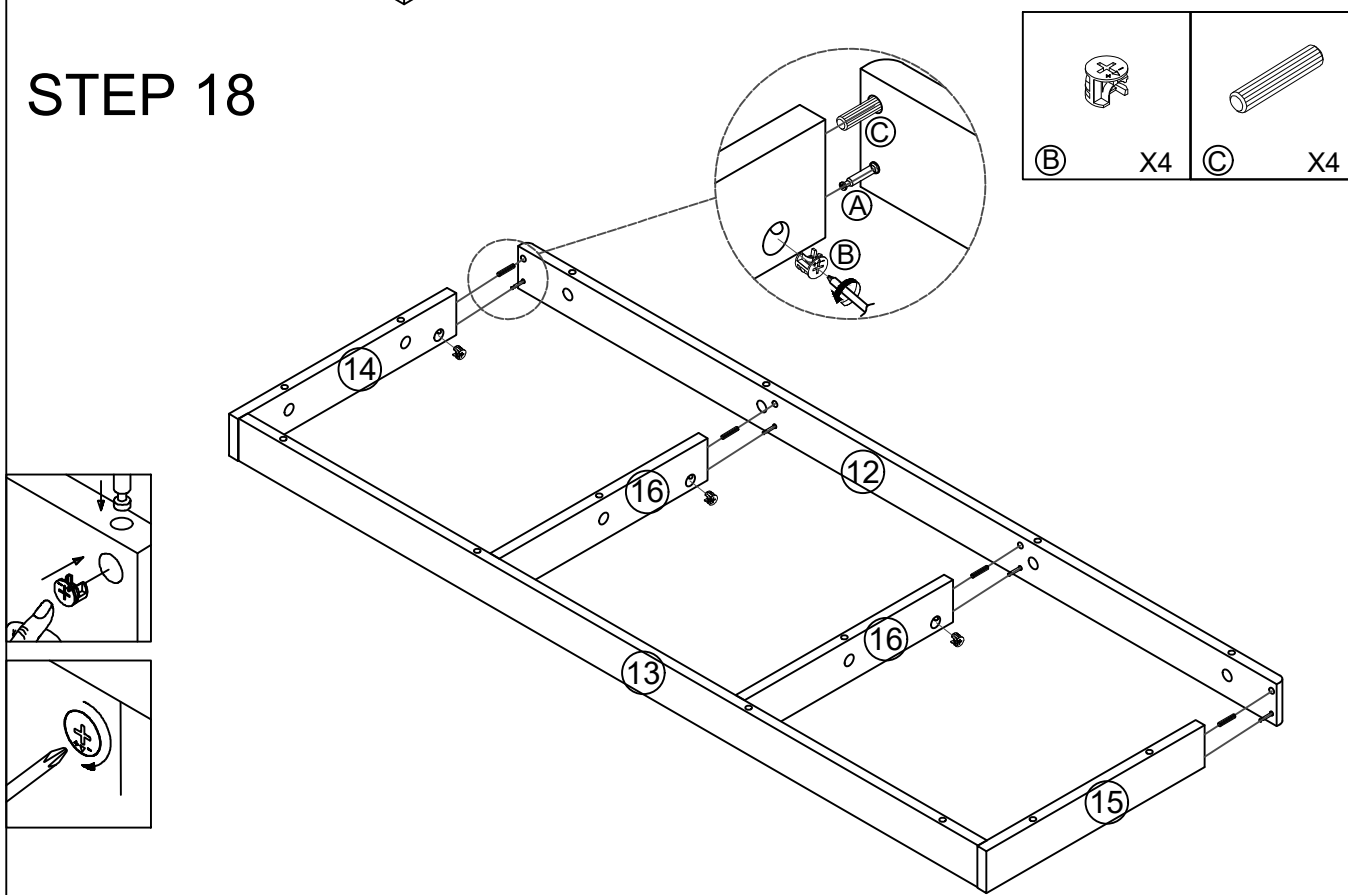





STEP 19

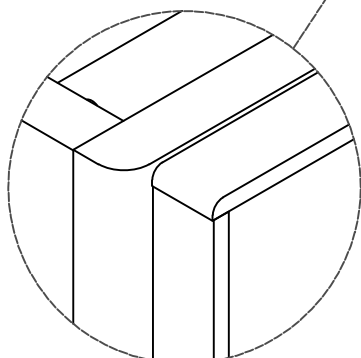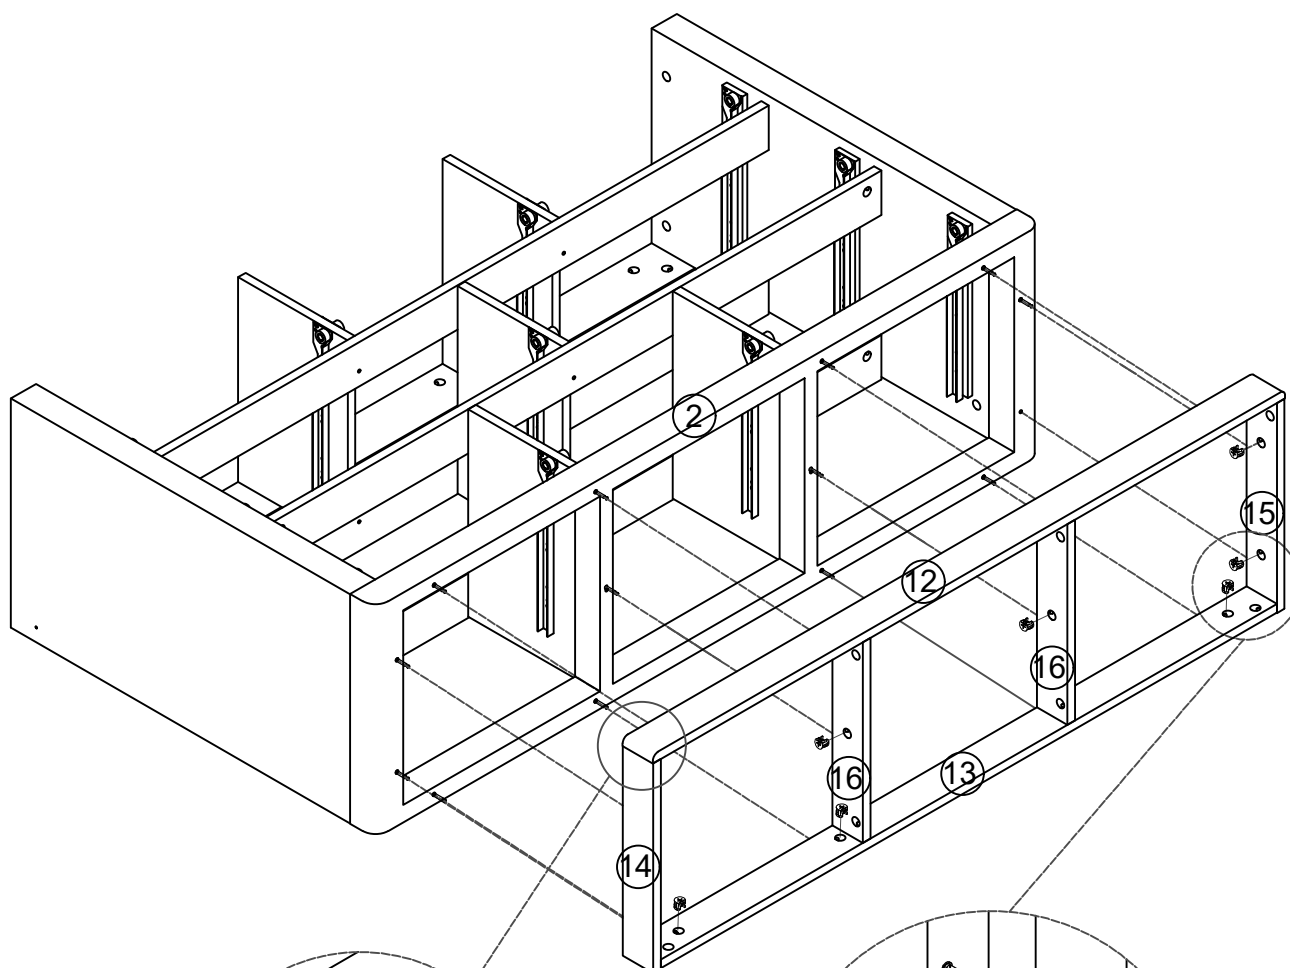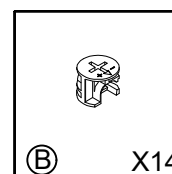




Note: the position of the bottom frame round corner is facing forward

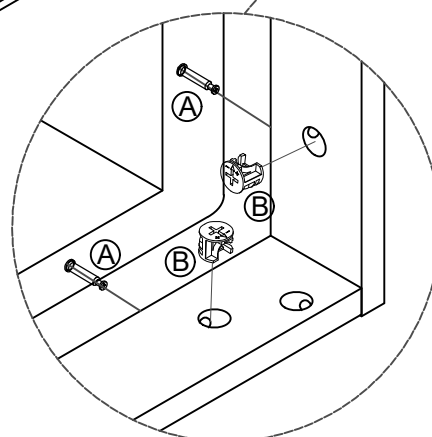





STEP 20

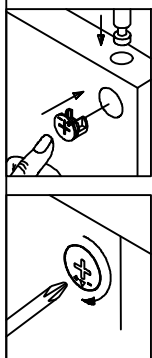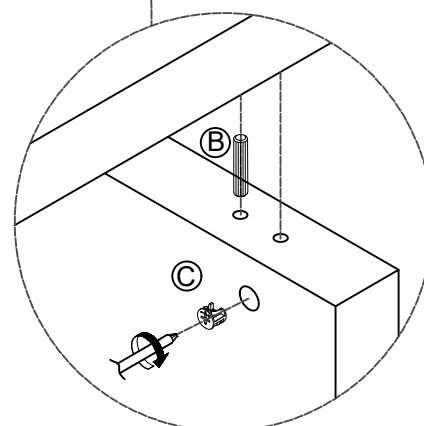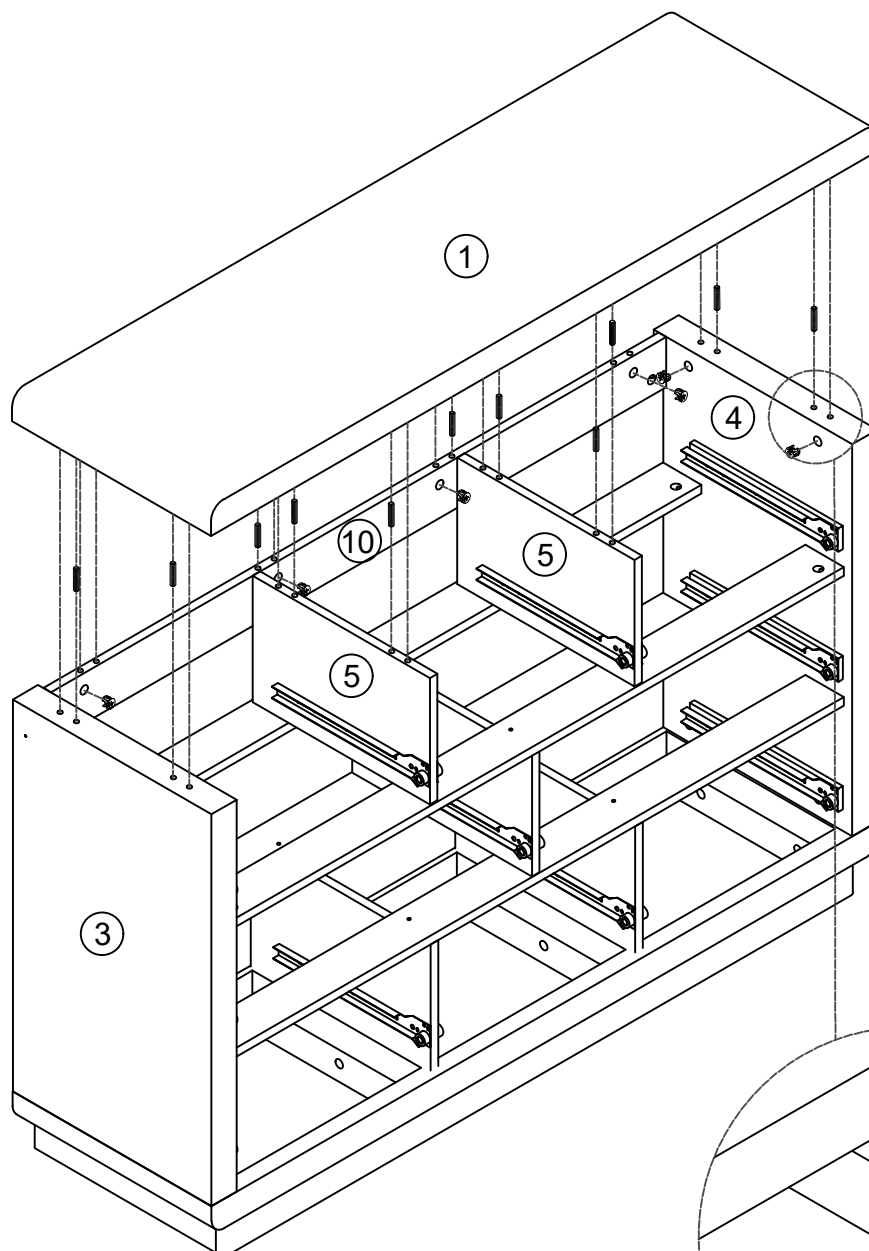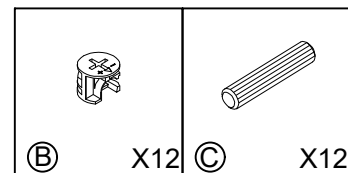



STEP 21

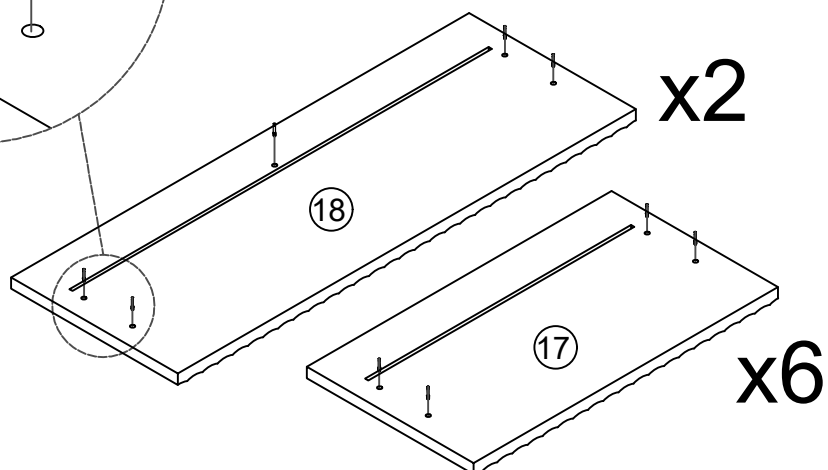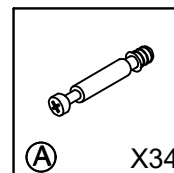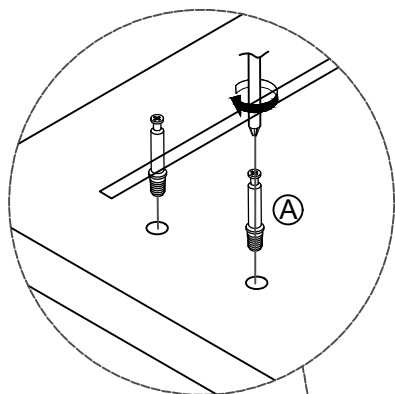




STEP 22

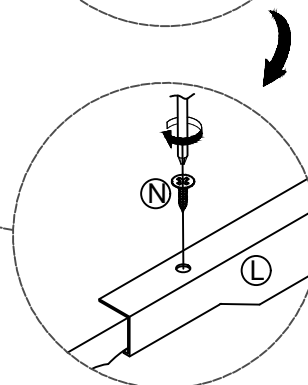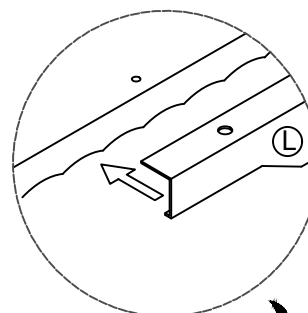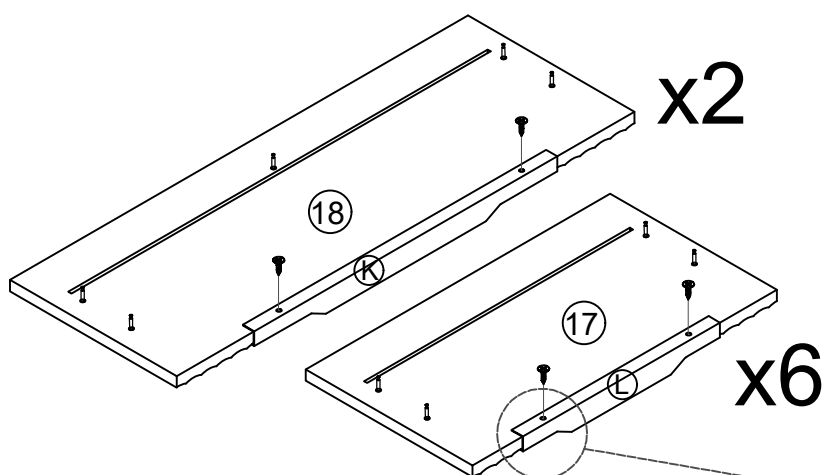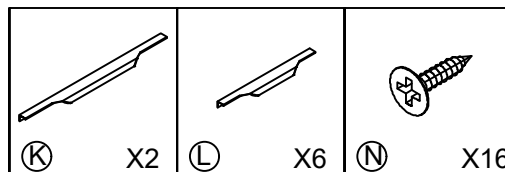



STEP 23

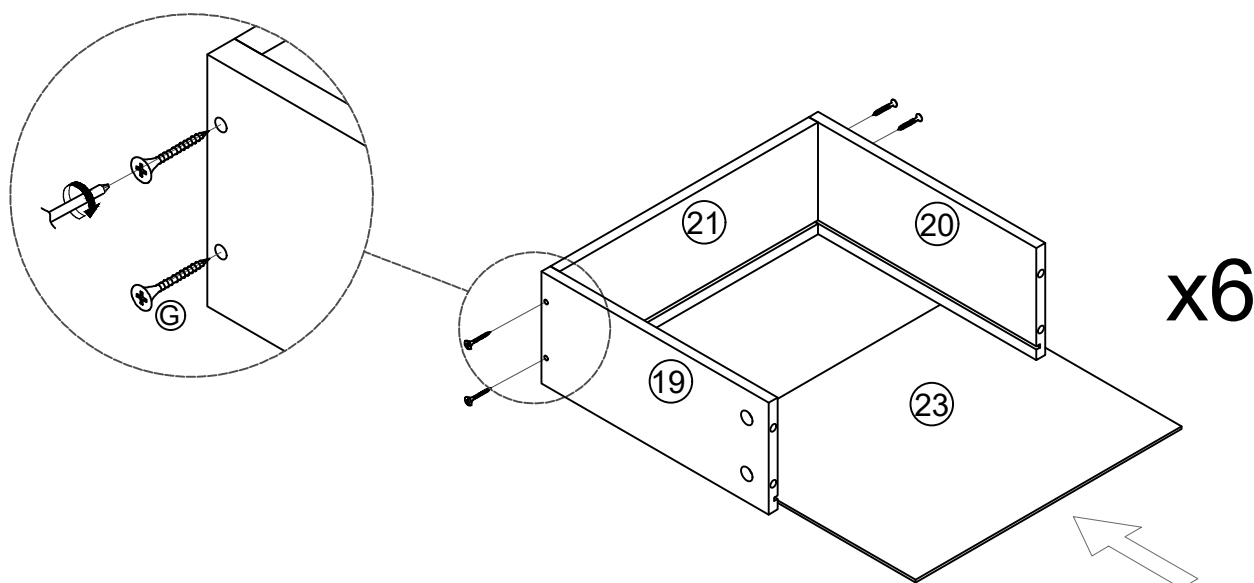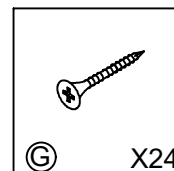



STEP 24

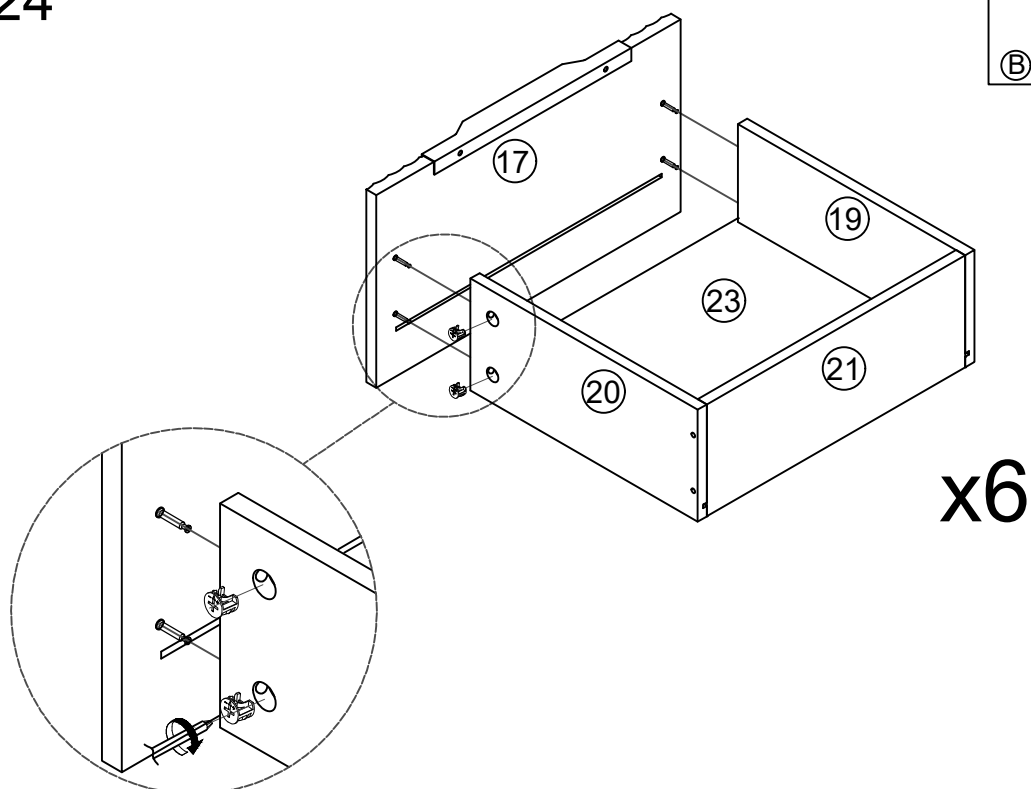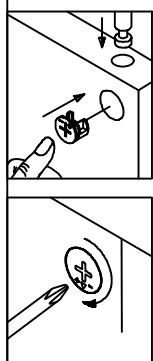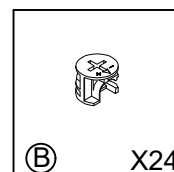


STEP 25

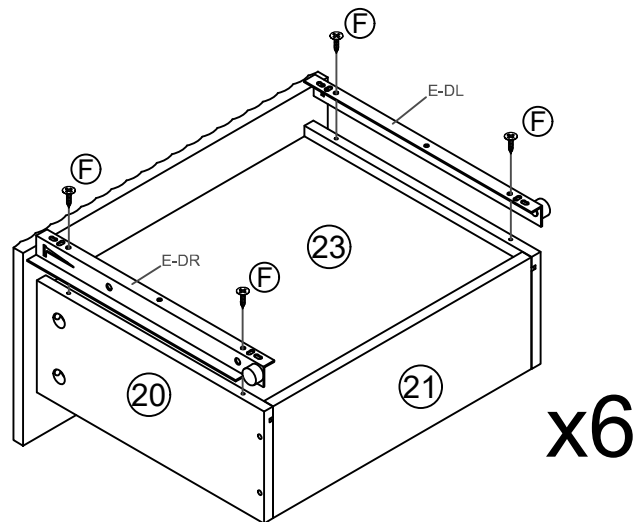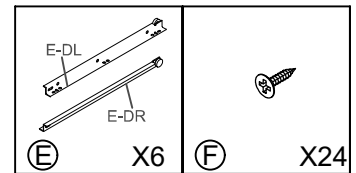


STEP 26

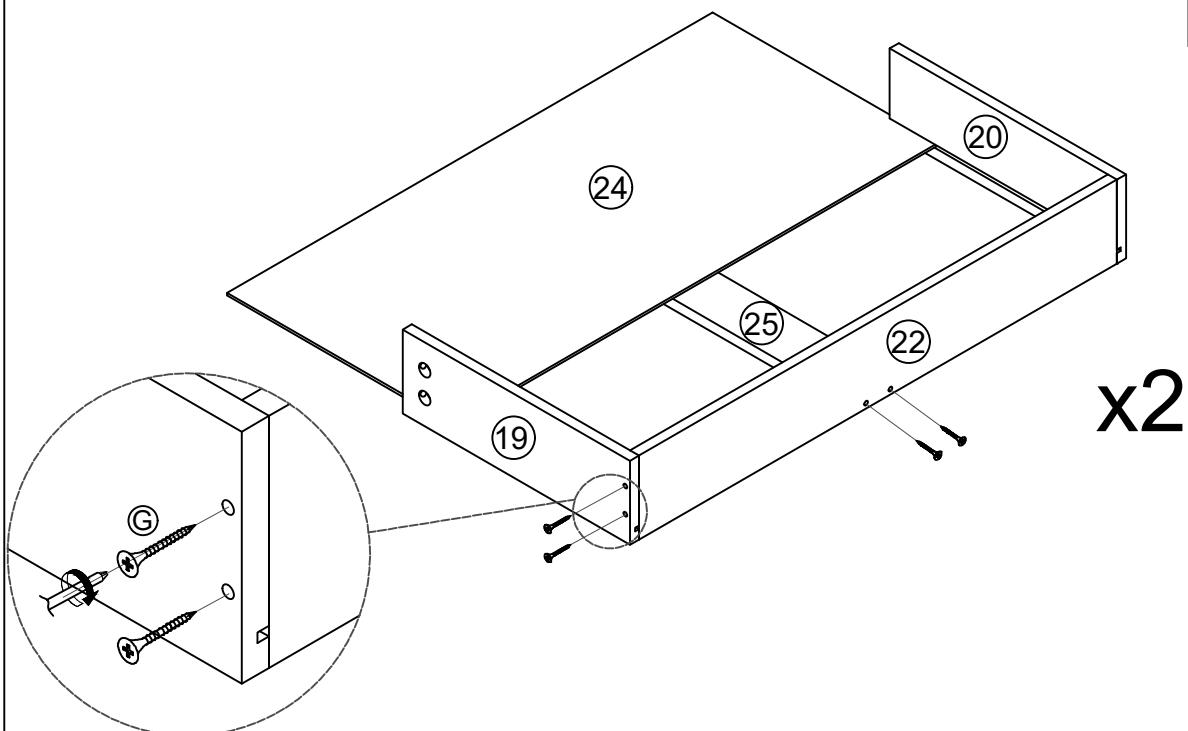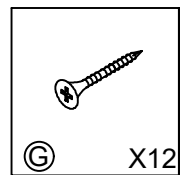


STEP 27

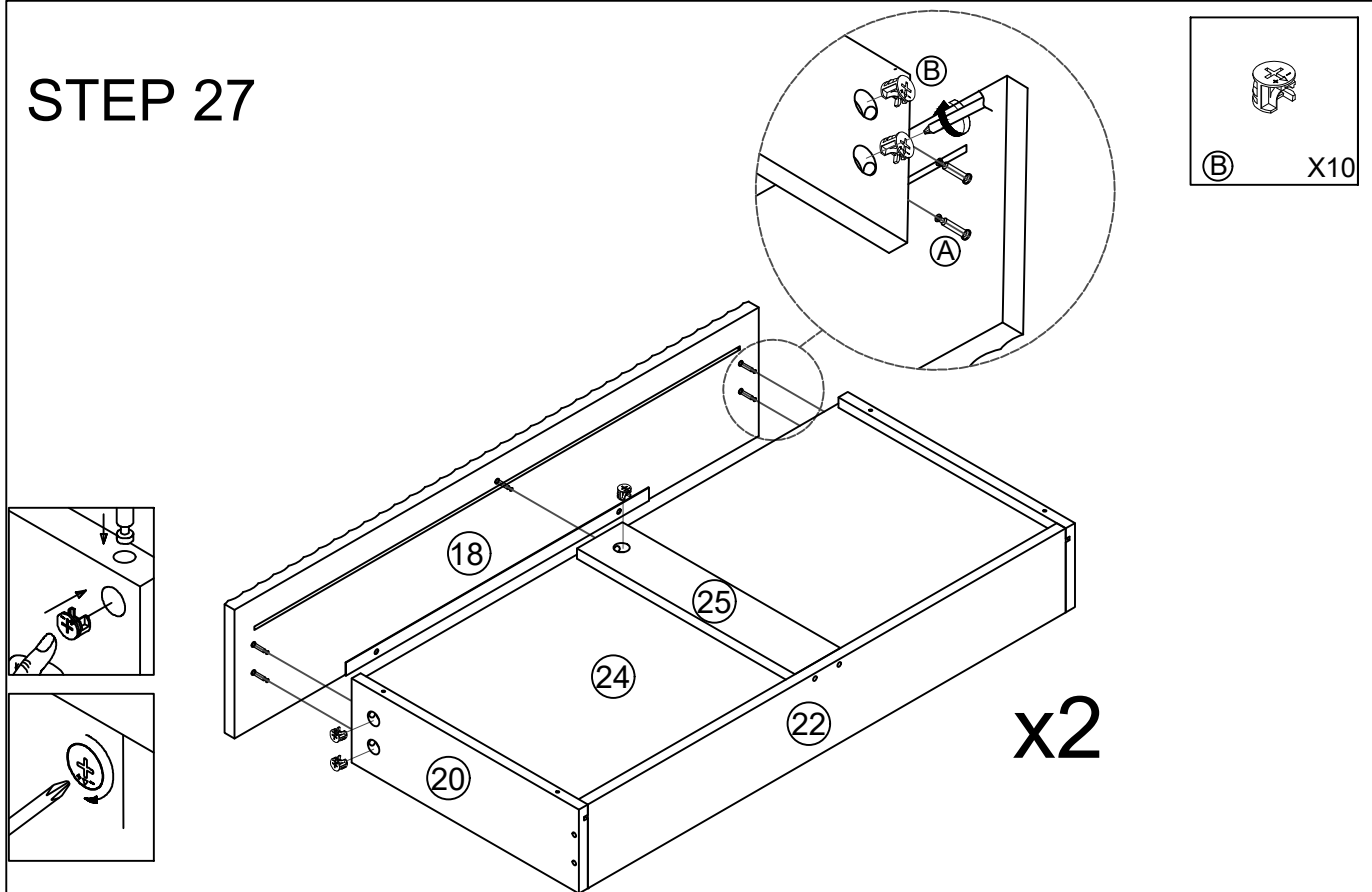



STEP 28

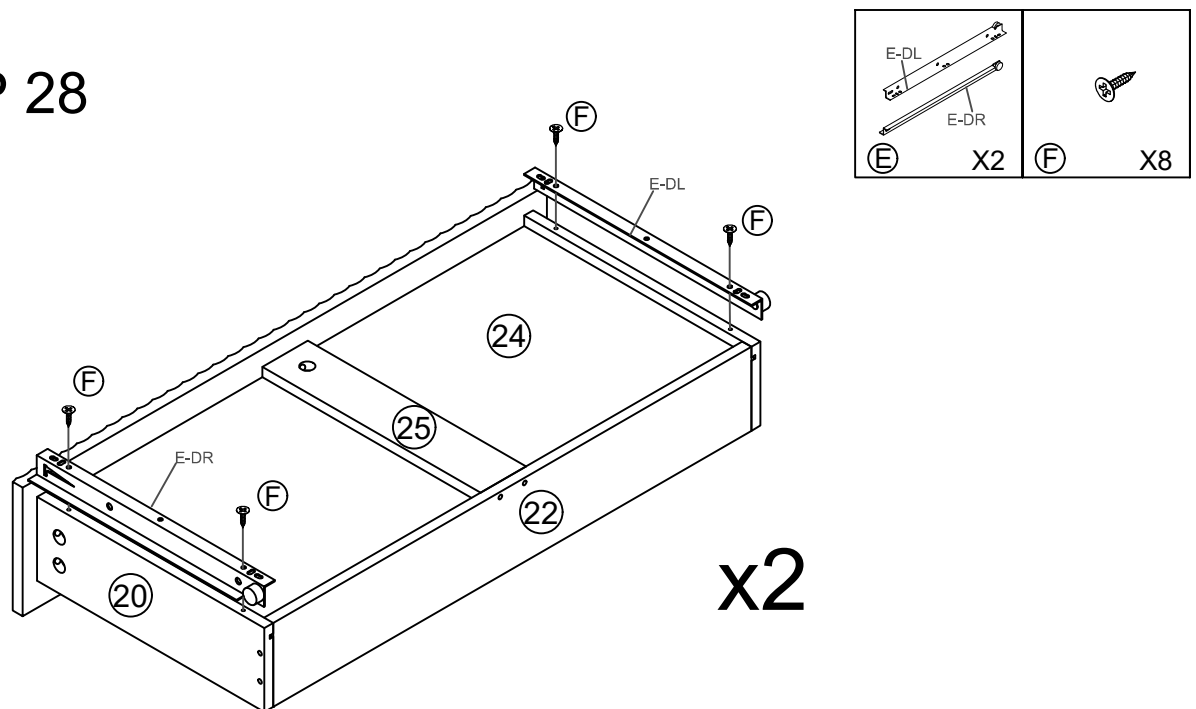



STEP 29

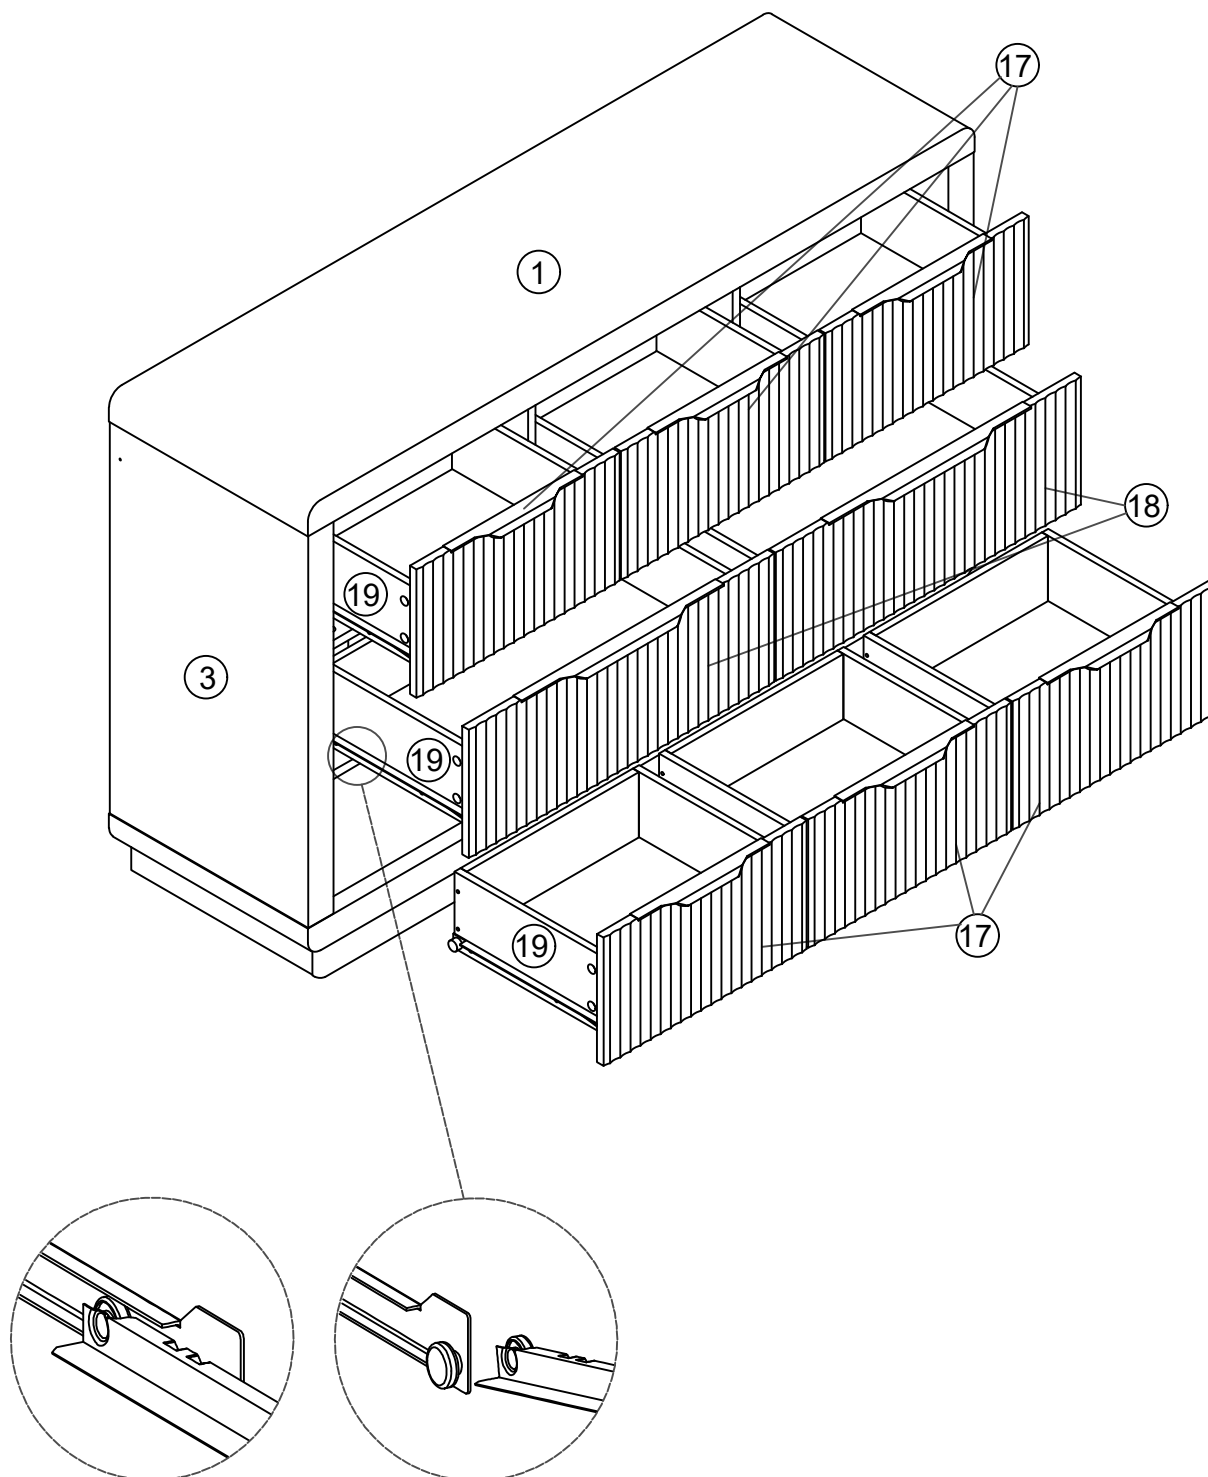

STEP 30

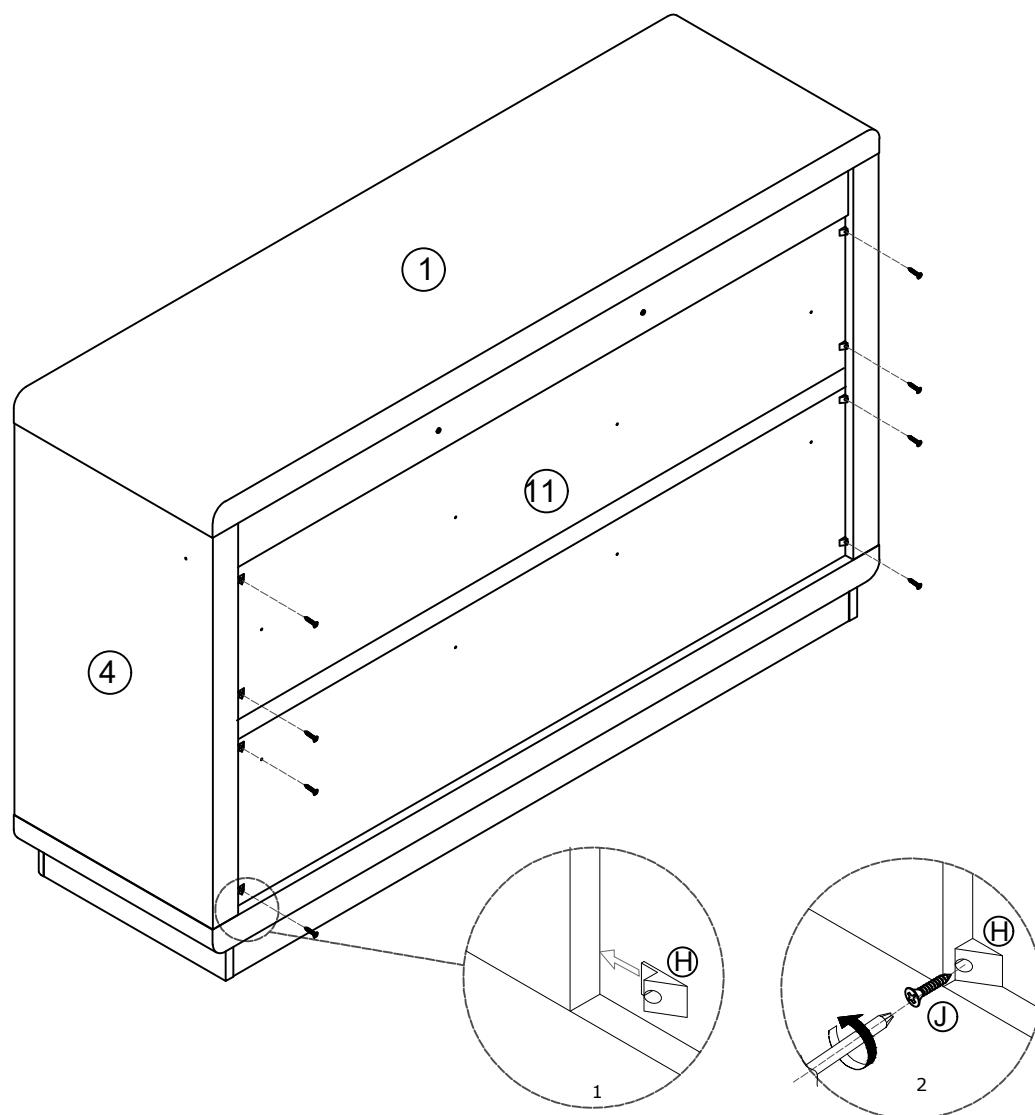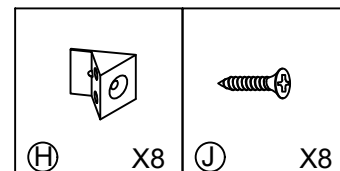

STEP 31

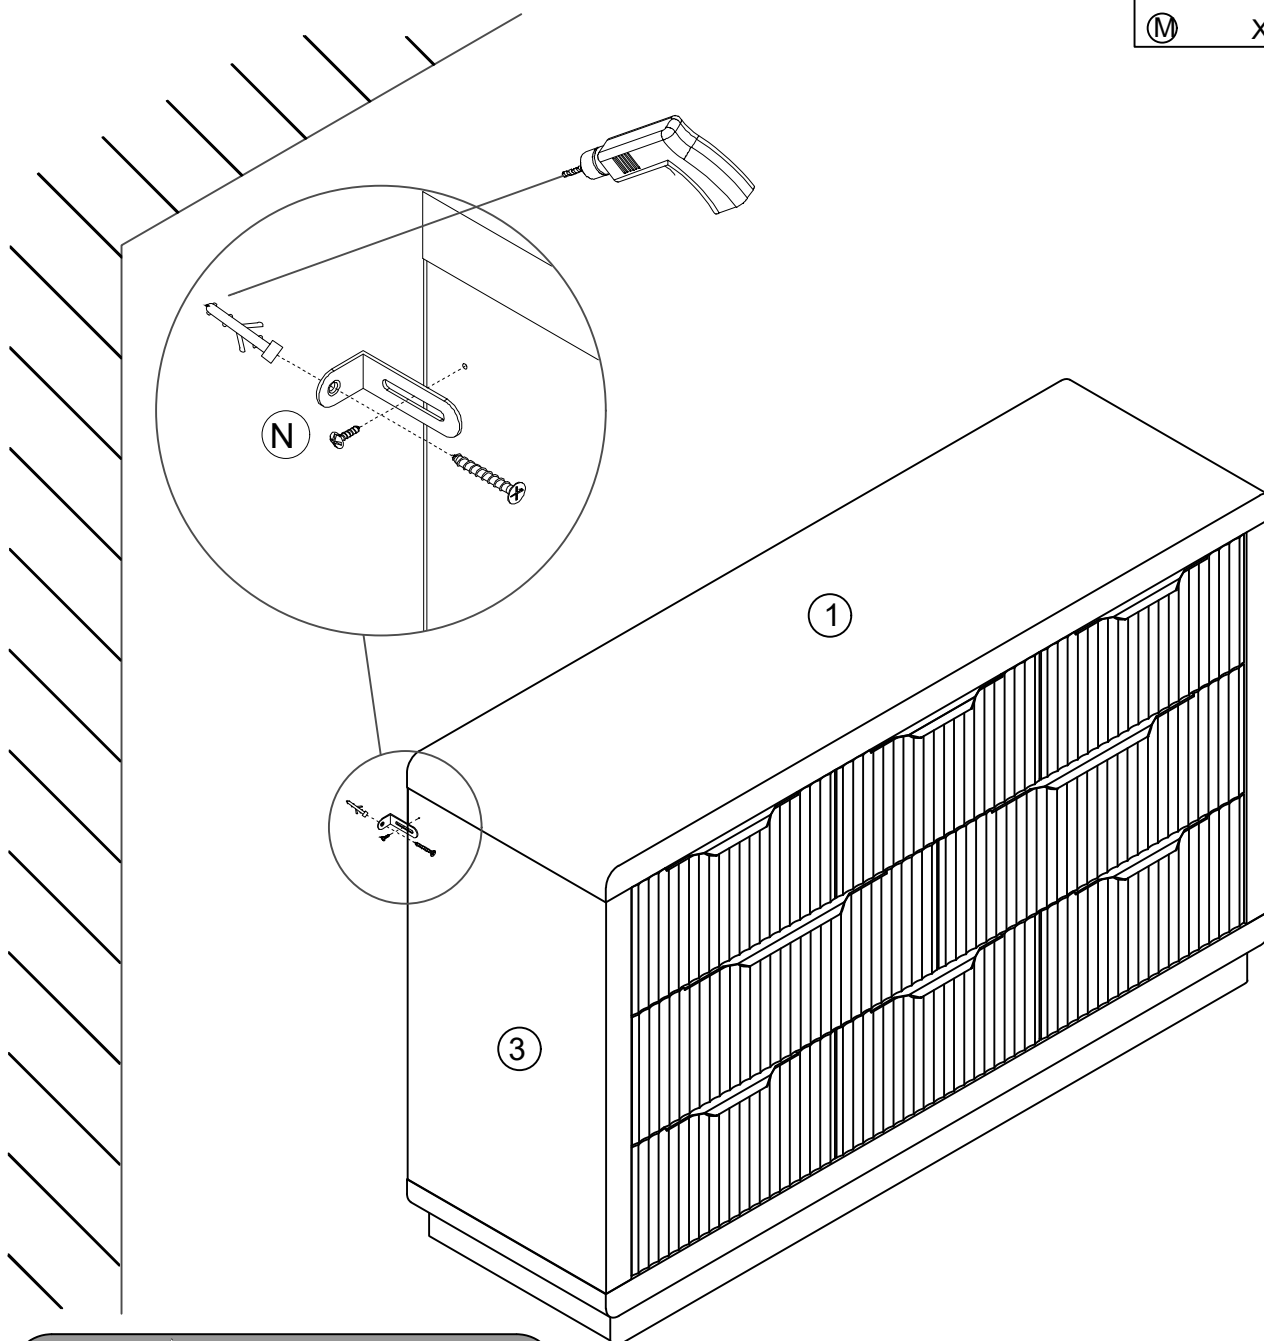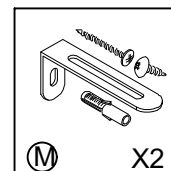

⚠ WARNING




Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!