


Cat Jumping Board



Assembly Guide

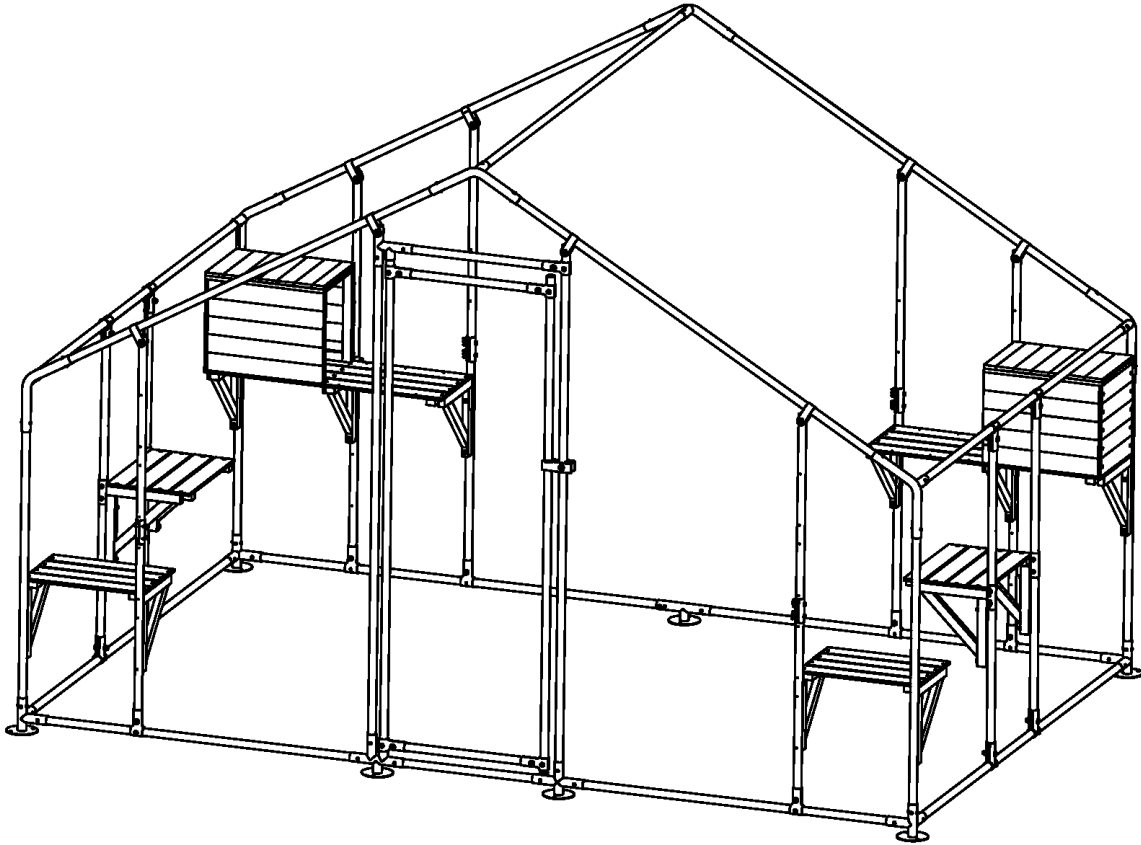




SAFETY

- Read all the safety information and instructions.
- Make sure you have all the parts before the assembling
- Never assemble wooden diving boards during a storm. They may get damaged.
- Always wear work gloves, long sleeves, and safety goggles when assembling.
- Keep children and pets away from the assembly site.
- When using a ladder, make sure the ground is stable enough to hold the ladder.
- Remove snow from the roof after each snowfall.
- Do not walk on the roof, even if you can.

TOOLS

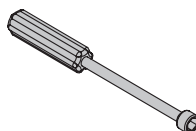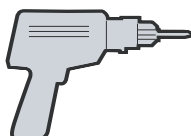


PART LIST

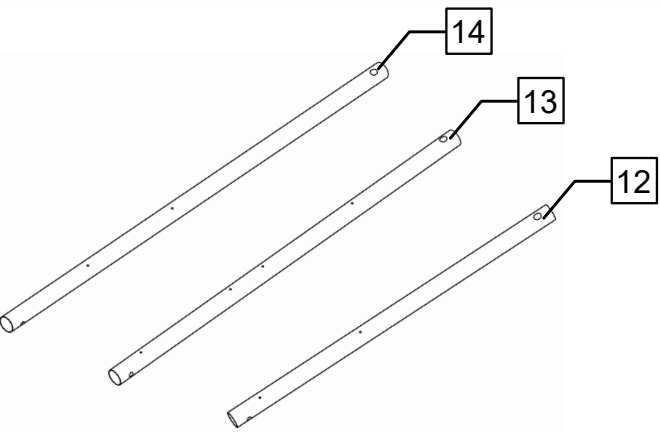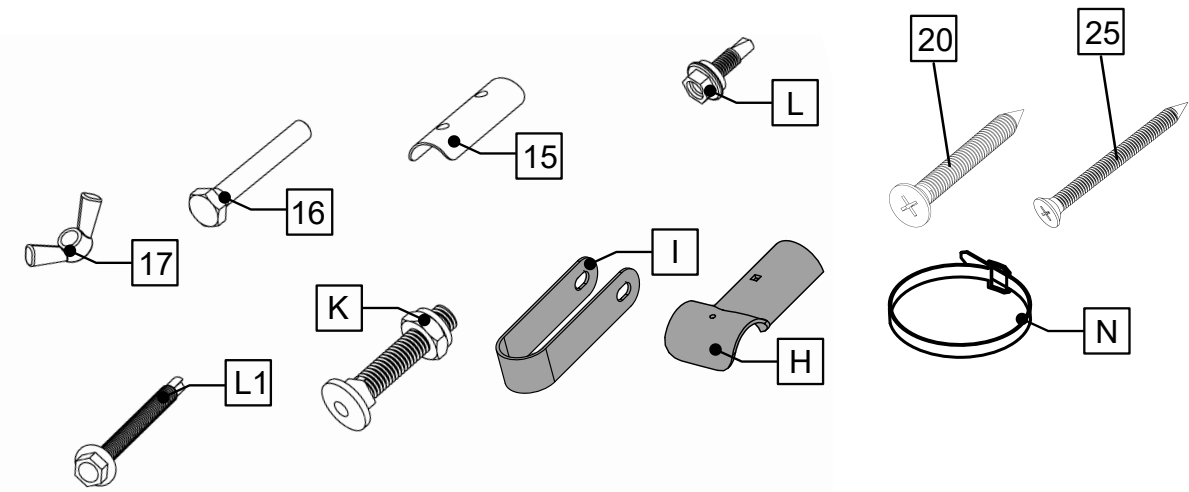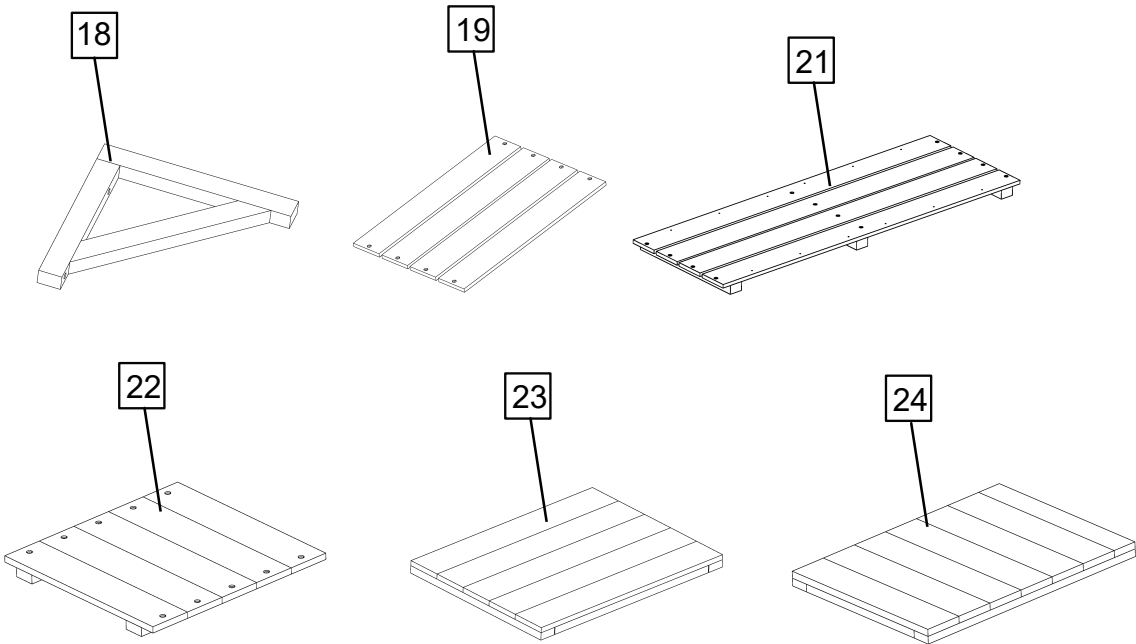

Part	Qty
12	8
13	8
14	4
15	20
16	20
17	20
18	14
19	4
20	88
21	2
22	2
23	4
24	2
25	12
H	28
I	6
K	20
L	20
L1	28
N	100


Part	Qty
12	8
15	8
16	8
17	8

x4

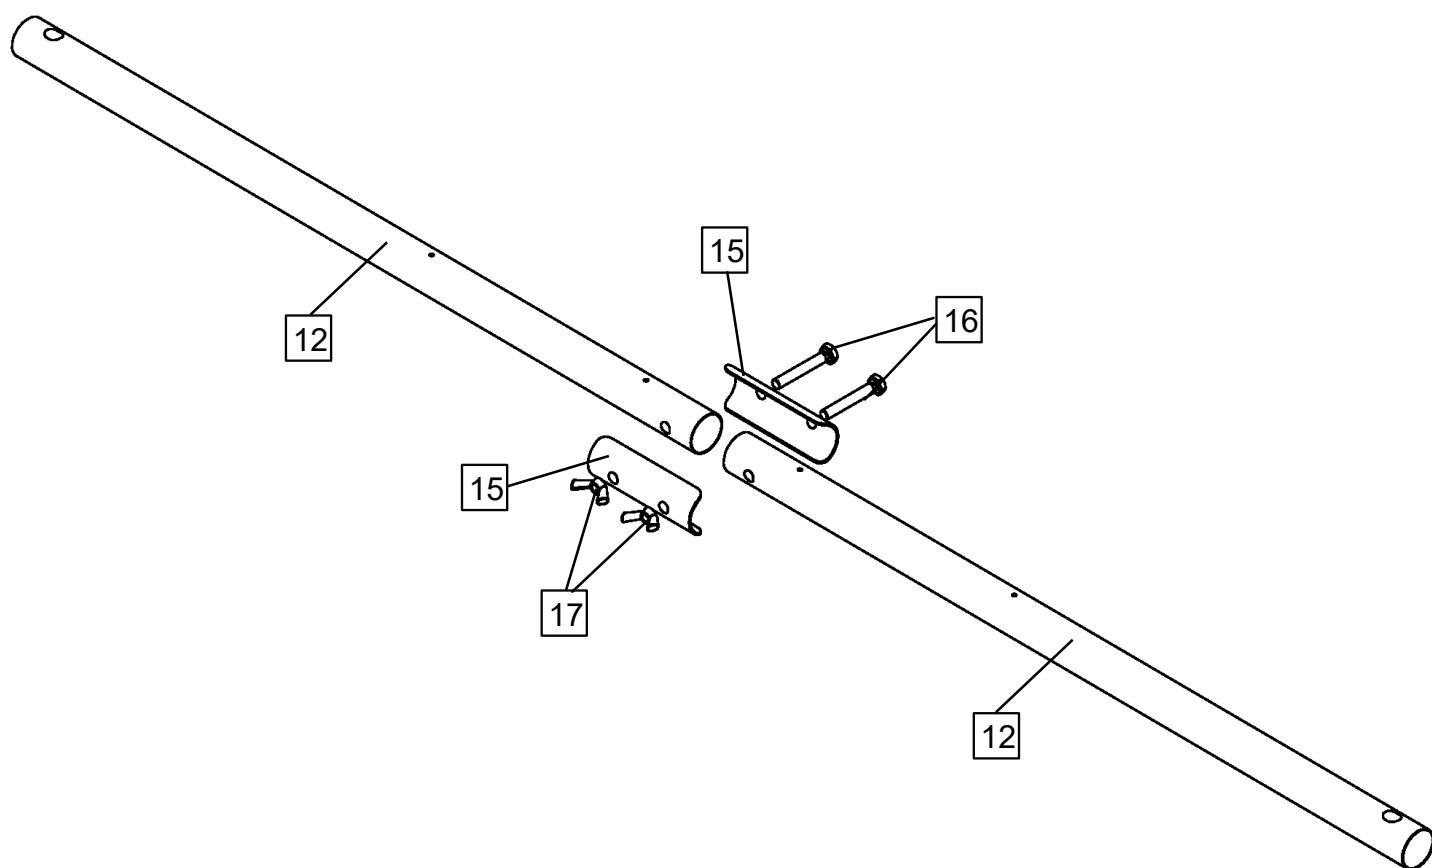


Part	Qty
13	8
14	4
15	12
16	12
17	12

x4

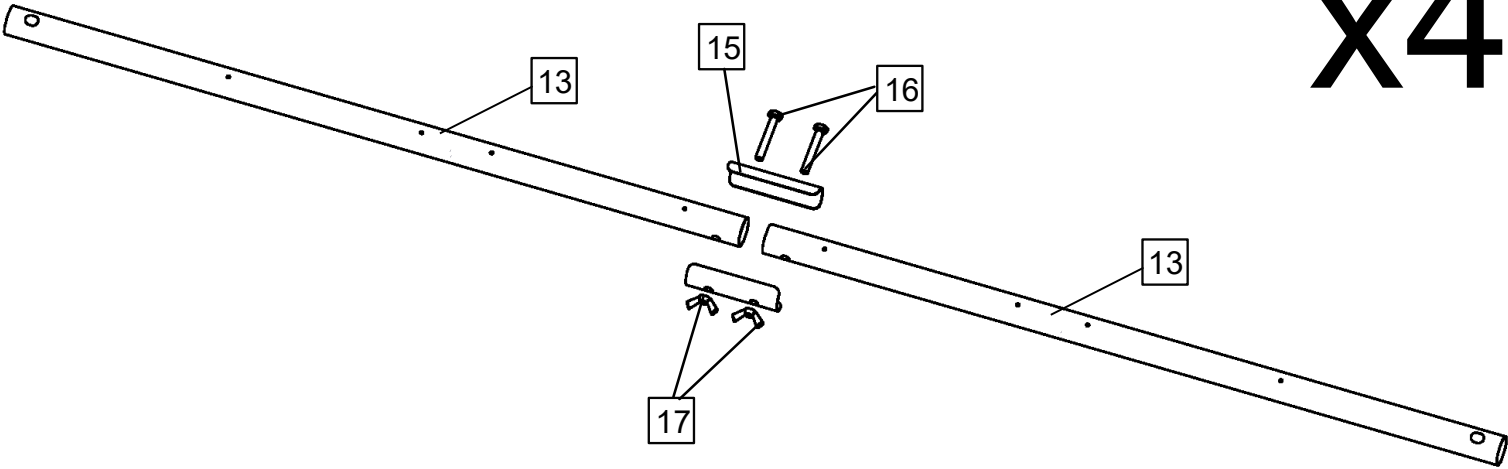


x2

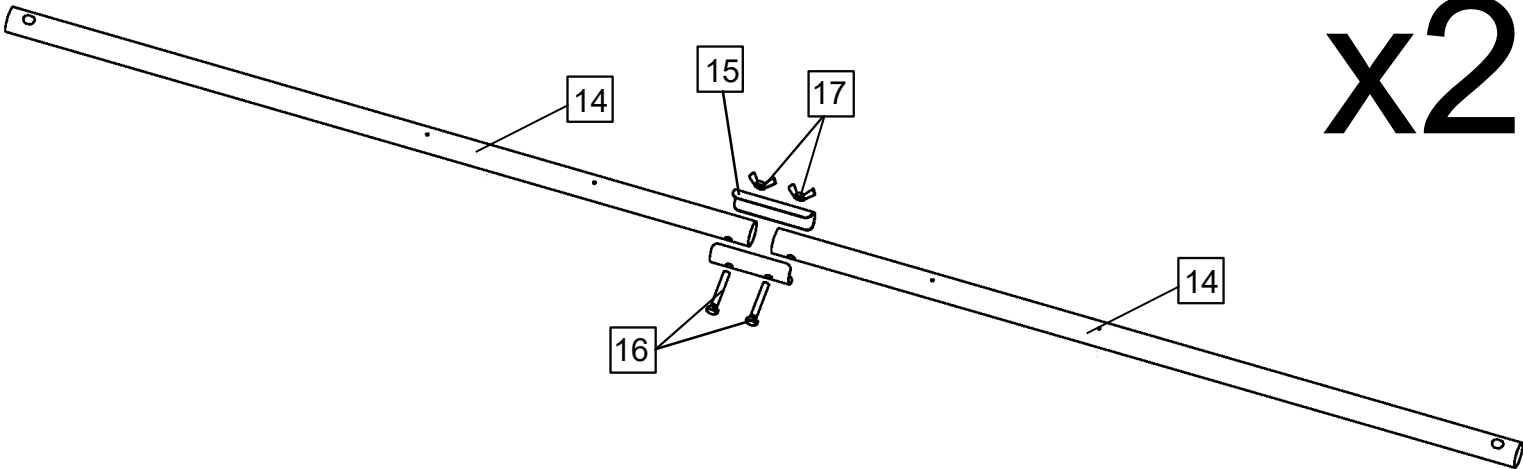



Part	Qty
18	8
19	4
20	32

x4

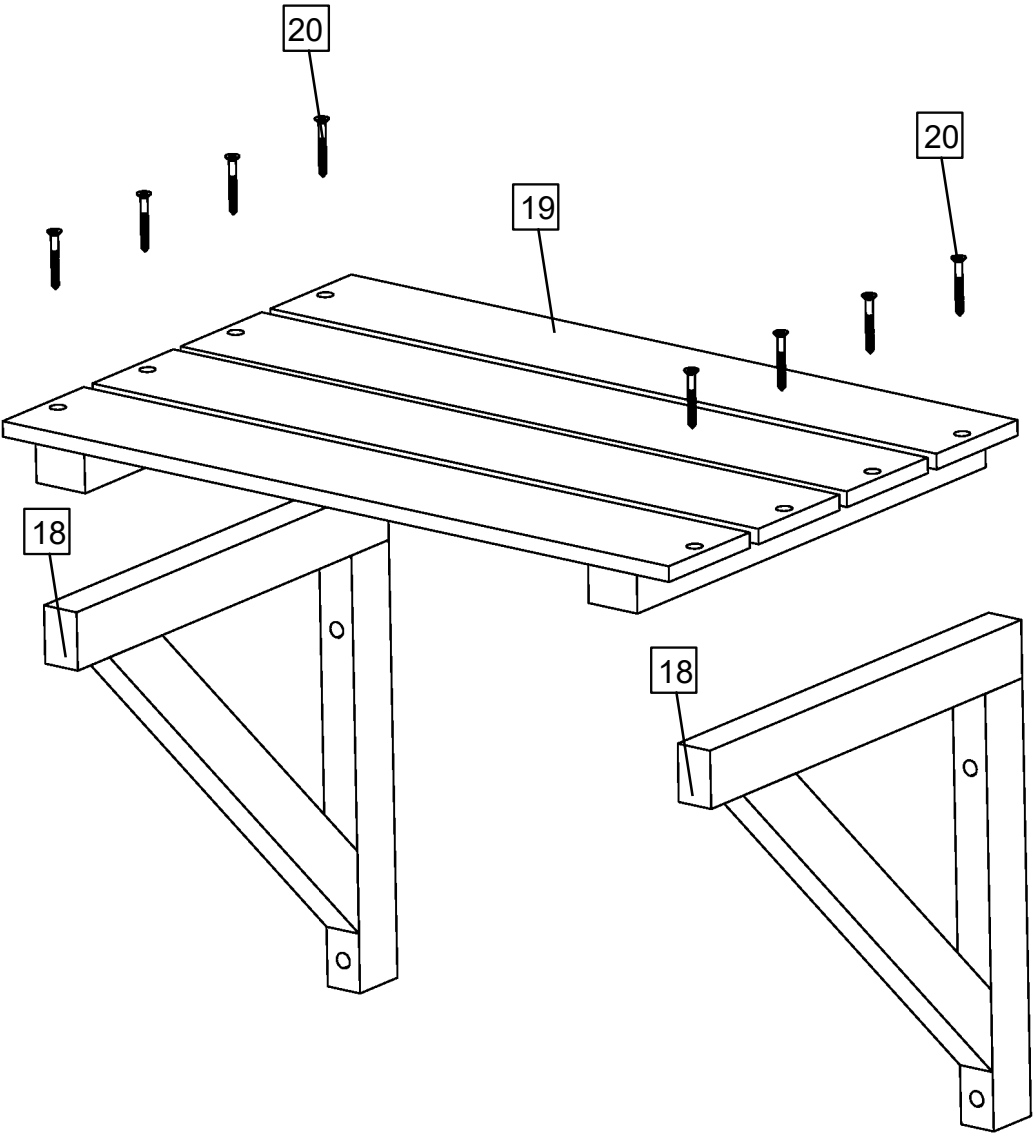



Part	Qty
18	6
20	44
21	2
22	2
23	4

x2

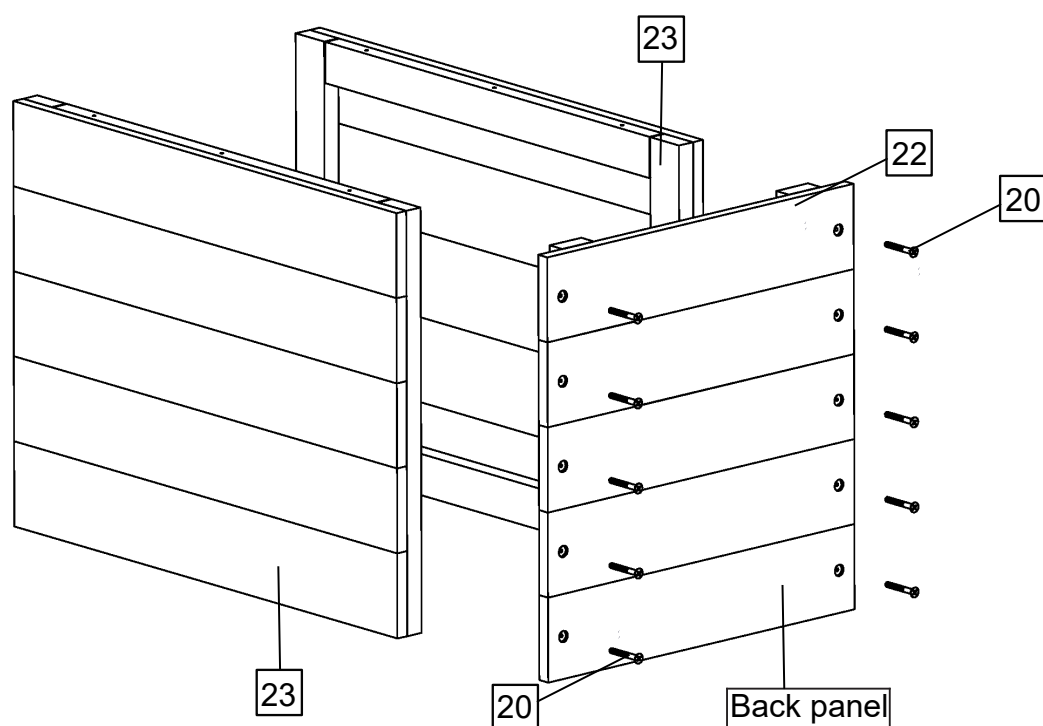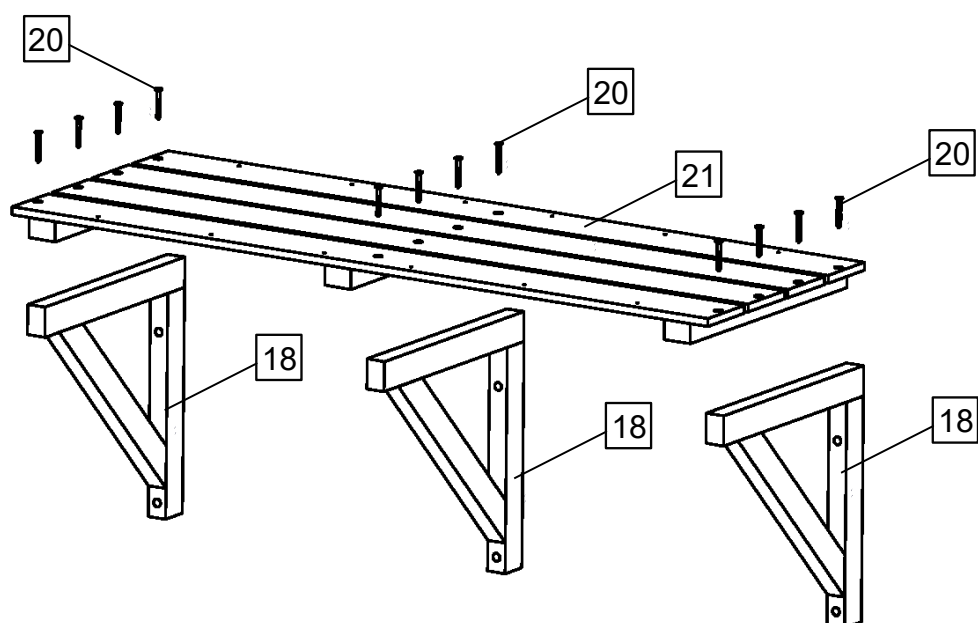





Part	Qty
20	12
24	2
25	12

x2

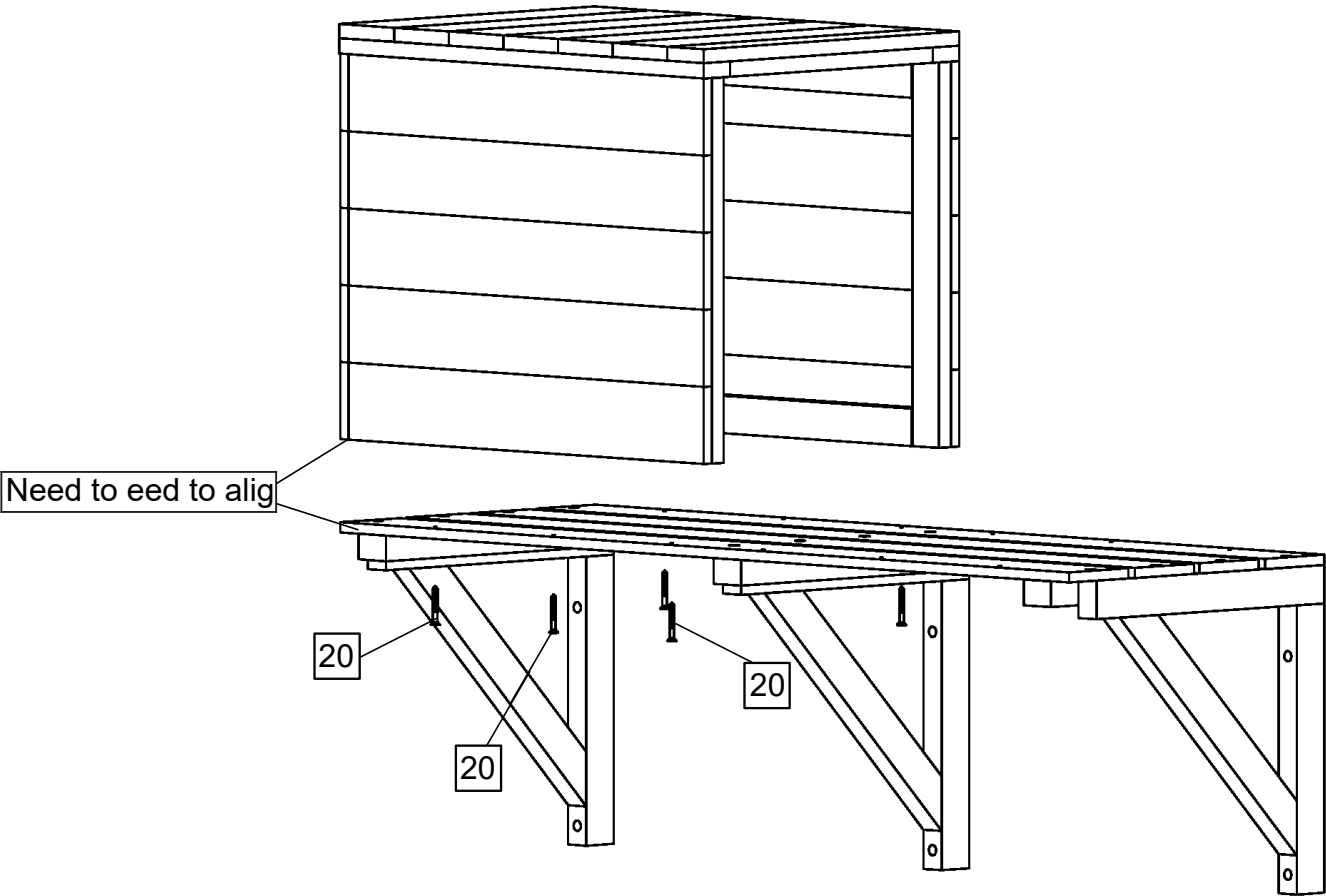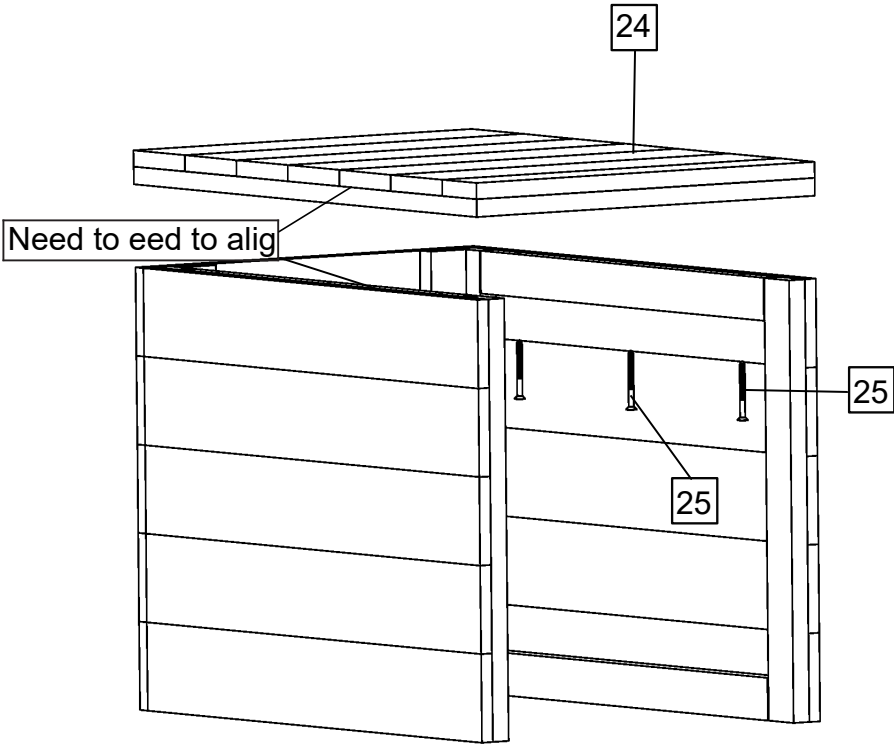


X2

Part	Qty
H	16
K	8
L	8
L1	8

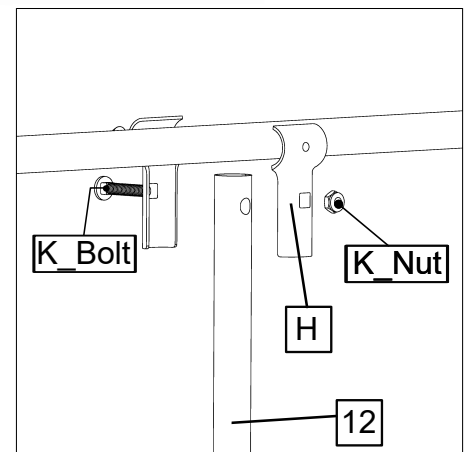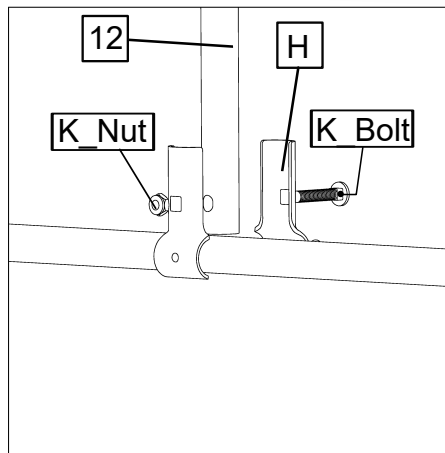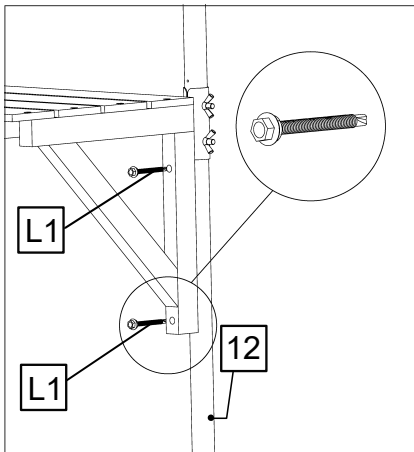
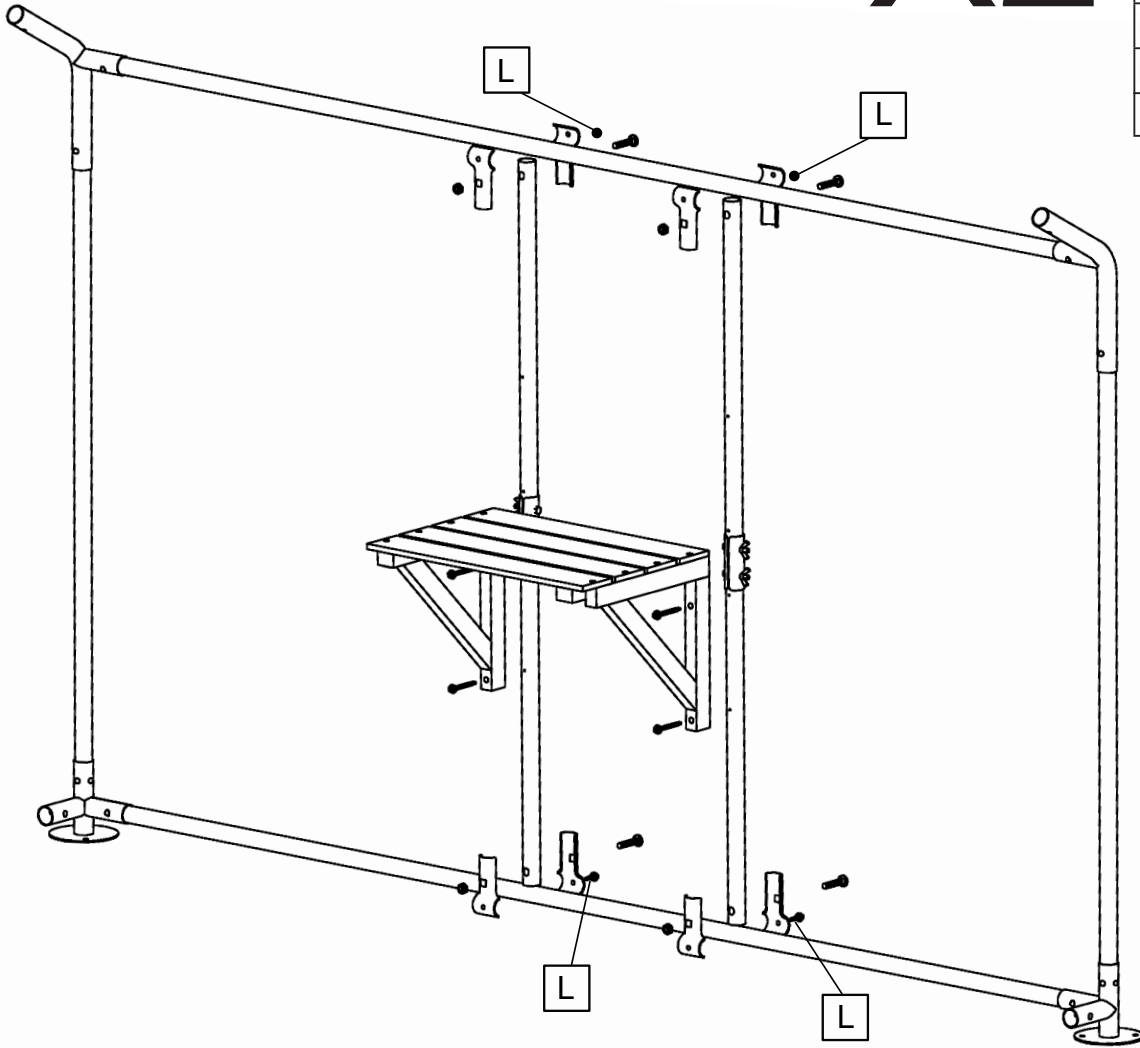


Note

First, prepare four K pieces, four L pieces, eight H pieces, the wooden platform from Step 3, and the two No. 12 pipes assembled in Step 1. Fix the No. 12 pipes to the side crossbars using H pieces, but do not tighten them temporarily. After adjusting the No. 12 pipes to the correct position, tighten the K and L pieces on one side from top and bottom, leaving the other side still able to move horizontally. Then use two L1 pieces to attach the plank to the No. 12 pipes. Adjust the other side, and once it is in the proper position, use two L1 pieces to tighten and fix it, securing all K and L pieces that fix the No. 12 pipes. The height can be adjusted up or down according to the pre-drilled holes on the No. 12 pipes. Repeat the same process on the other side.

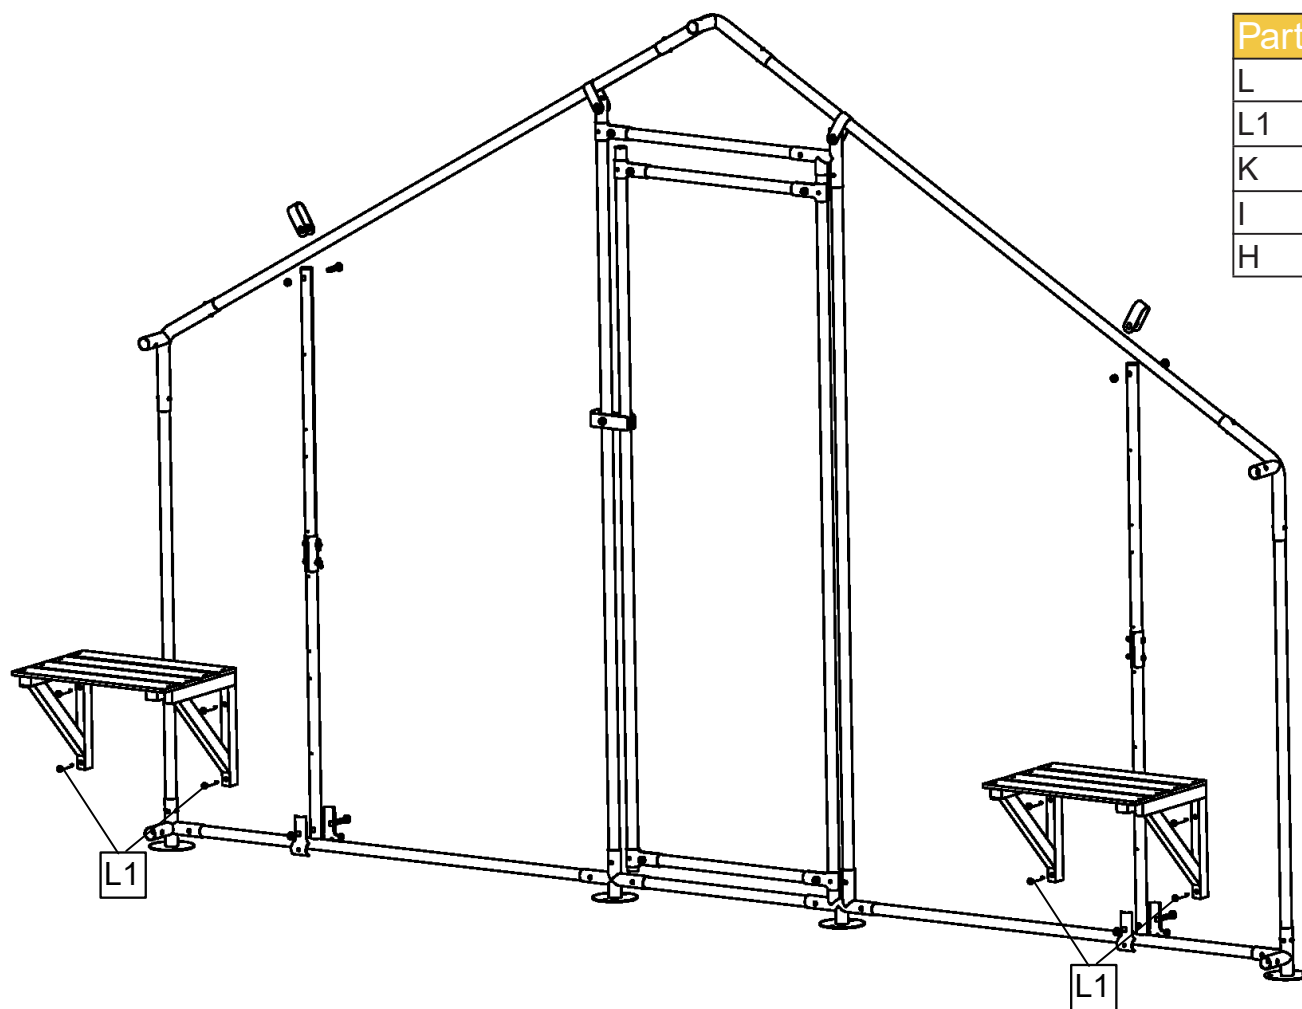



Part	Qty
L	4
L1	8
K	4
I	2
H	4

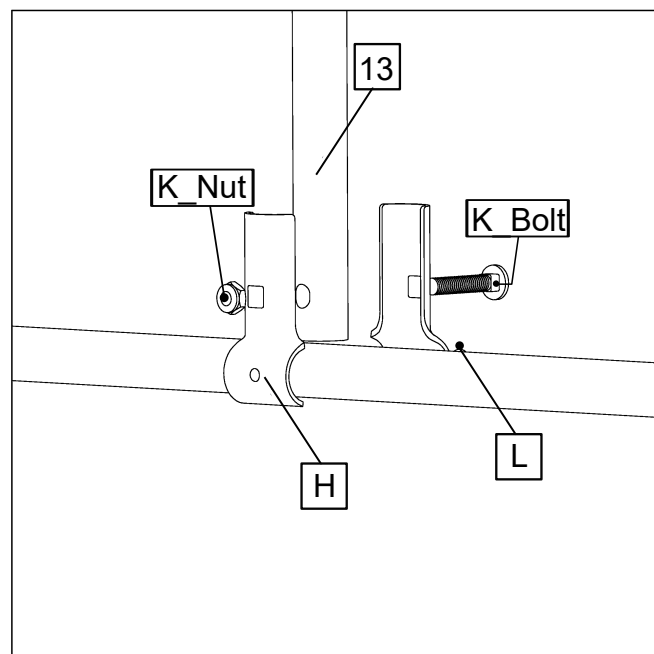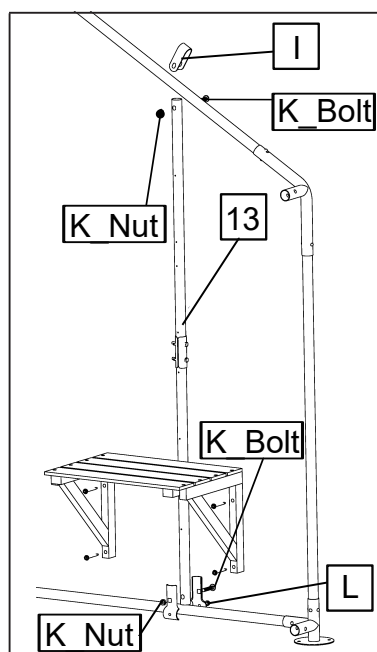

Note

Connect the upper diagonal brace and the bottom cross brace with two Part H and one Part I . Use two Part K to secure the connection points, but do not tighten them for now. Then align the reserved holes on part 13 with the holes on the wooden platform, and fix them with parts L1. Use two Part L1 to drill and fix the platform in the propriate position by yourself, then tighten and secure all Part K and Part L. The height and position can be adjusted up and down according to the reserved holes on Part 13. The fixing method for the other side is the same.

Part	Qty
H	8
L	8
L1	12
I	4
K	8

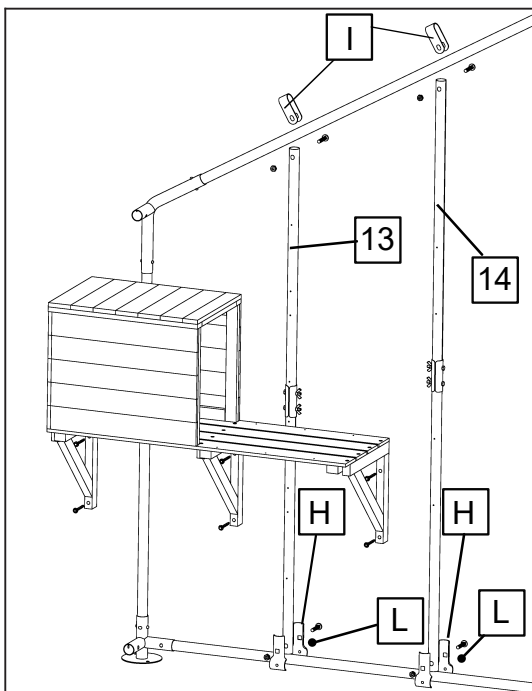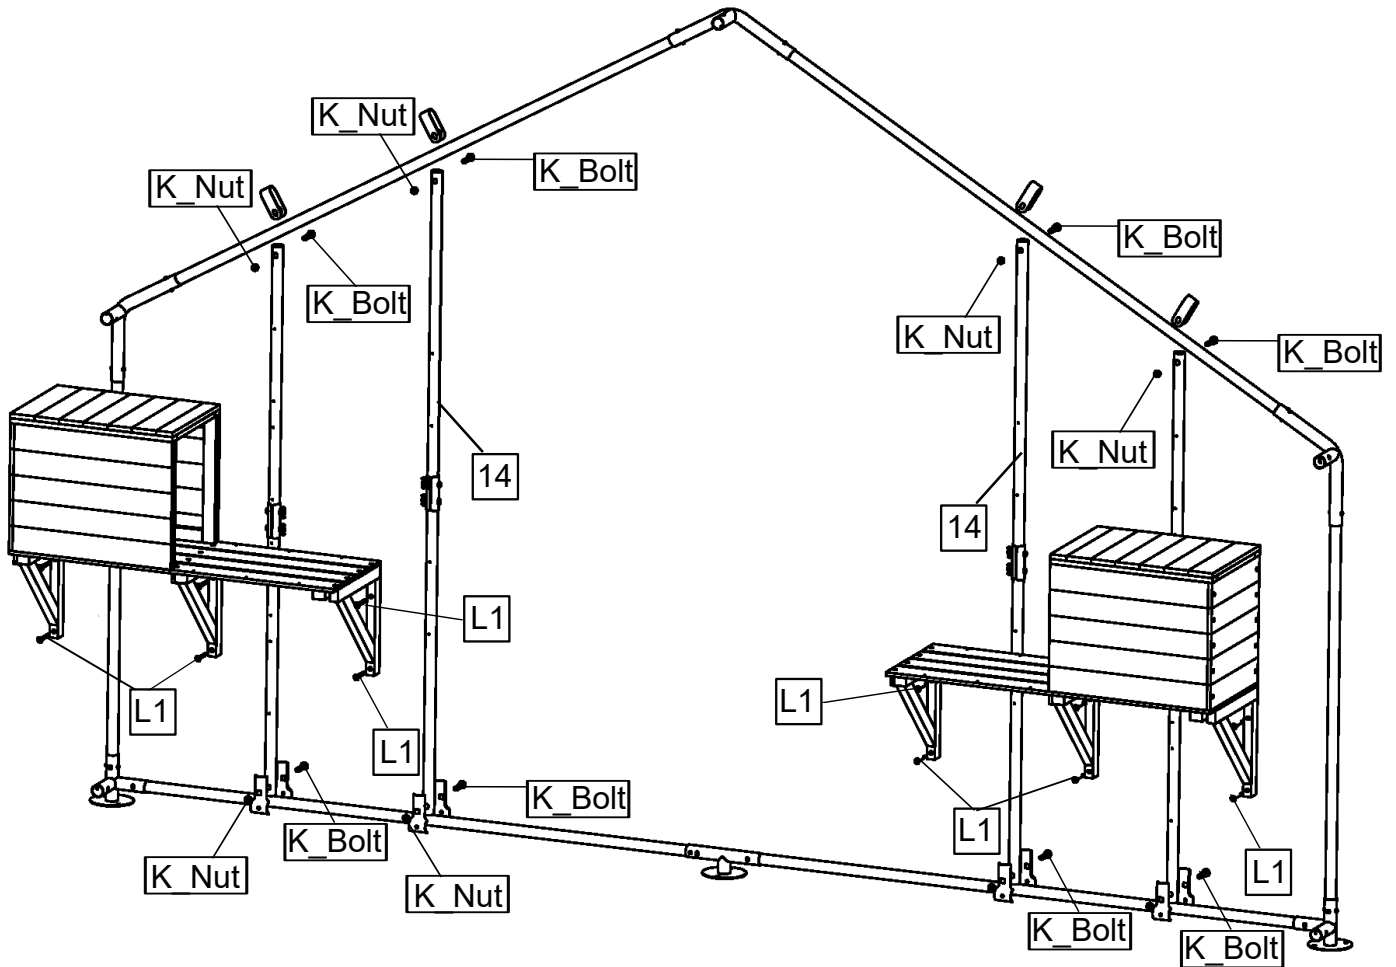

Note

Connect Parts 13 and 14 with Part I and Part H, but do not tighten them, leave them able to move side to side. Then align the holes of Parts 13 and 14 with the holes in the longer wooden platforms and secure them with four Part L1. Adjust the wooden platforms left and right so they properly align with Part 3, then use two Part L1 to drill and secure them. Finally, use Part L and Part K to lock all Part H and Part I in place. The installation on the other side is done the same way.

Part	Qty
N	100

