

Incandescent Wall Sconce

WS0744708

INSTALLATION SHEET


START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Please Note:

- 120V input

1. Remove fixture from its original package
2. Separate mounting plate (1c) from canopy (2a) by removing canopy screws (2b)
3. Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package
4. Make proper electrical connections (**black to hot** "L", **white to neutral** "N", **ground to "GND"**) with wire nuts (1b) provided in hardware package
5. Secure shade (3b) to fixture (3a) with socket nut (3c) by threading clockwise
6. Insert bulb (4a) into fixture socket
7. Attach canopy (2a) to mounting plate (1c) with canopy screws (2b)

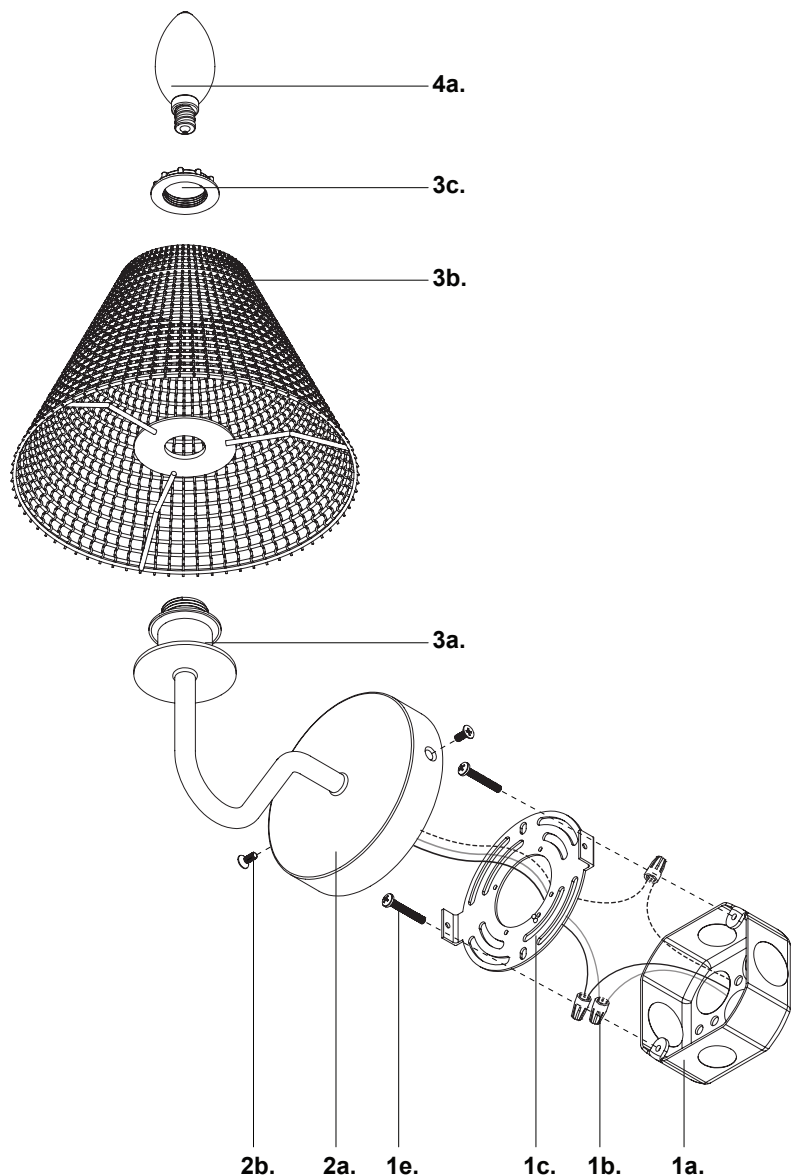

SoModern

T: 1.833.8SO.MDRN (76.6376)

W: www.somodernlighting.com

E: info@somodernlighting.com

Applique Murale À Incandescence

WS0744708

FICHE D'INSTALLATION


COMMENCEZ ICI

- Assurez-vous que l'alimentation électrique est **COMPLÈTEMENT COUPÉE** au niveau du boîtier à fusibles.
- Faites installer votre luminaire par un électricien qualifié et agréé.
- Préparez tout le matériel nécessaire dans un espace dégagé.
- Portez des gants pendant toute la durée de l'installation.
- Lisez attentivement les instructions avant de commencer le montage.
- Conservez cette fiche d'installation pour référence ultérieure.

Remarque :

- Entrée 120 V

1. Retirez le luminaire de son emballage d'origine.
2. Séparez la plaque de montage (1c) du cache (2a) en retirant les vis du cache (2b).
3. Fixez la plaque de montage (1c) au boîtier de jonction électrique (1a) à l'aide des vis fournies (1e) dans le kit de quincaillerie.
4. Effectuez les connexions électriques appropriées (noir à la phase « L », blanc au neutre « N », terre à « GND ») à l'aide des capuchons de connexion (1b) fournis dans le kit de fixation
5. Fixez l'abat-jour (3b) au luminaire (3a) à l'aide de l'écrou à douille (3c) en le vissant dans le sens des aiguilles d'une montre
6. Insérez l'ampoule (4a) dans la douille du luminaire.
7. Fixez le cache (2a) à la plaque de montage (1c) à l'aide des vis du cache (2b).

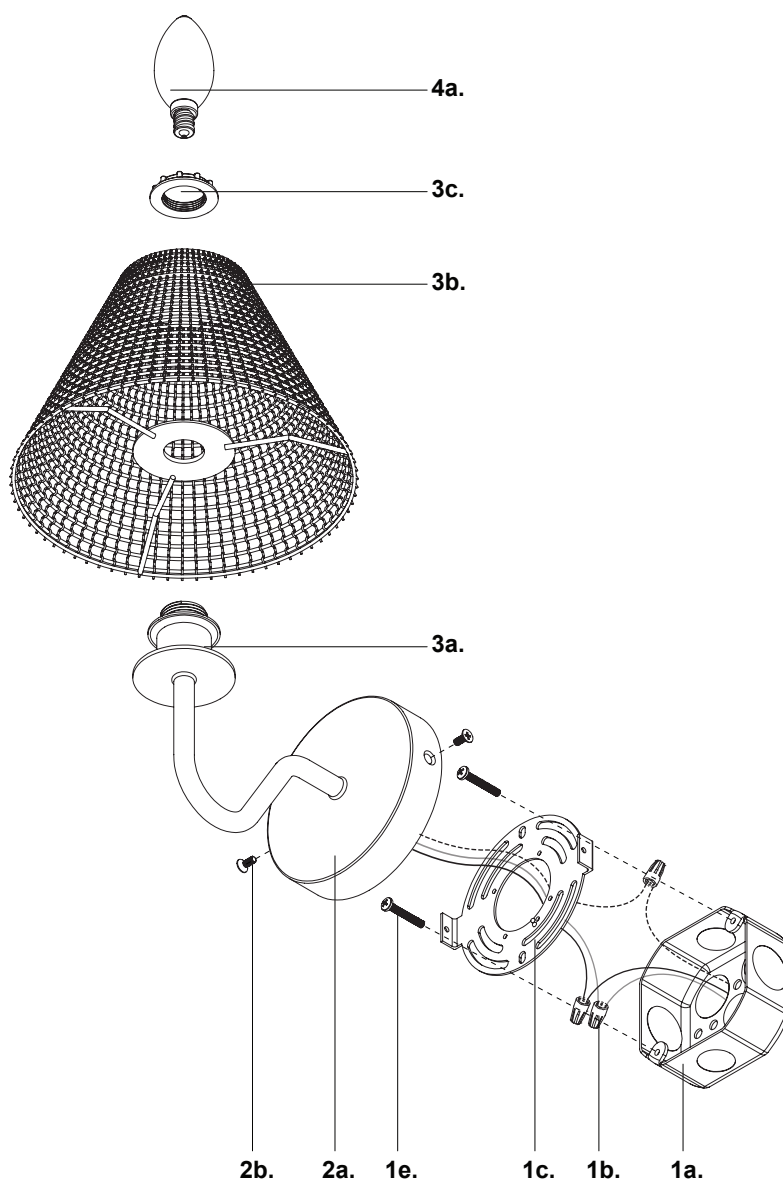

SoModern

T: 1.833.8SO.MDRN (76.6376)

W: www.somodernlighting.com

E: info@somodernlighting.com