

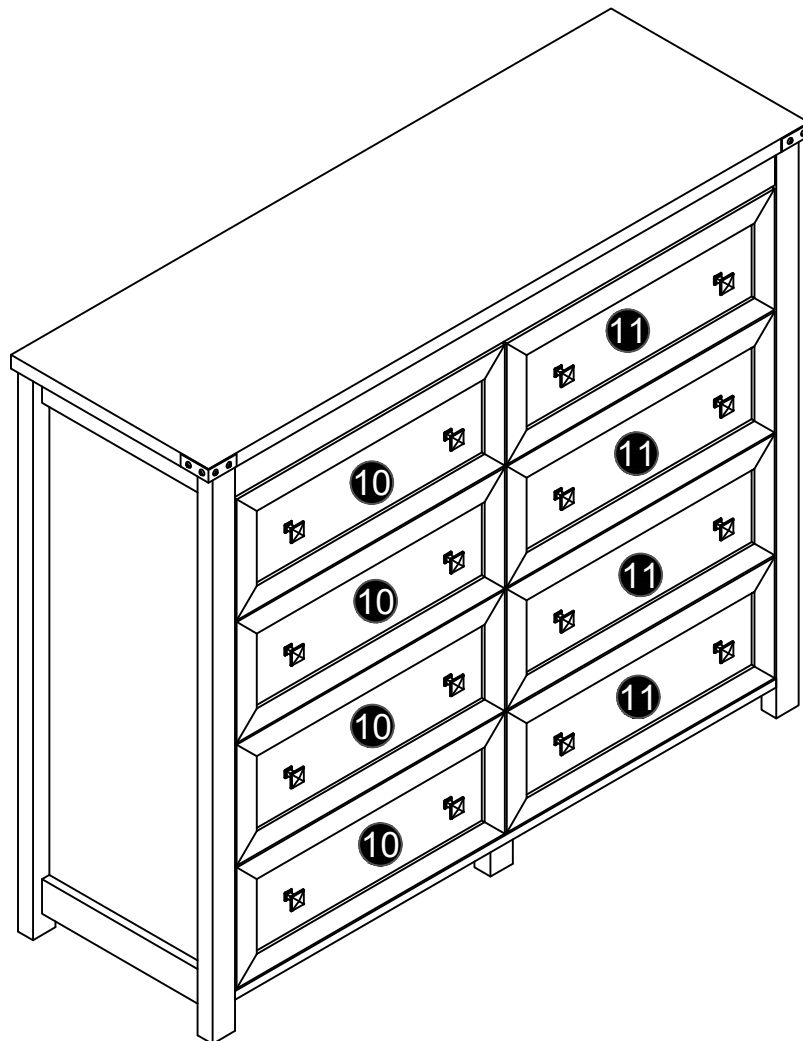
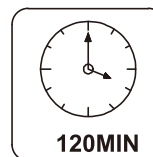


Installation & Assembly

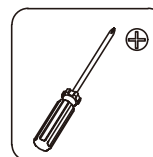


IT IS RECOMMENDED
TO USE POWER TOOLS

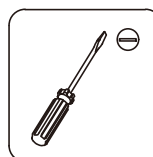


120MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

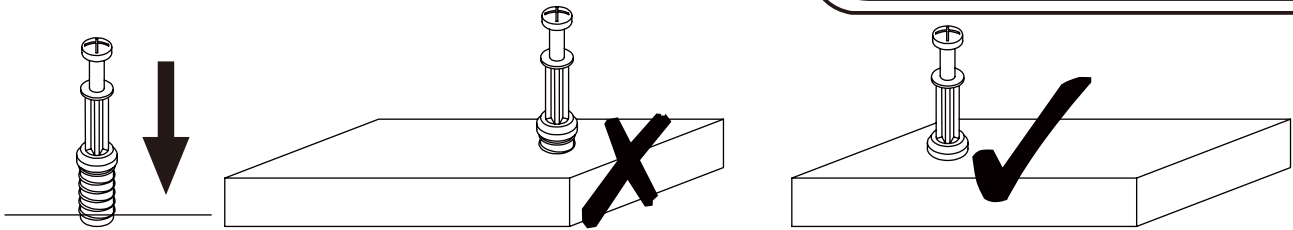


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

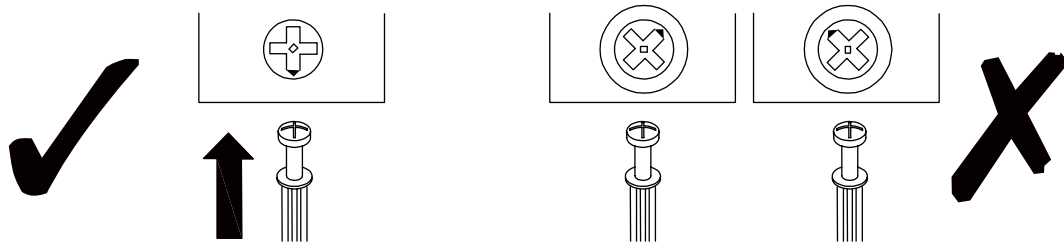

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








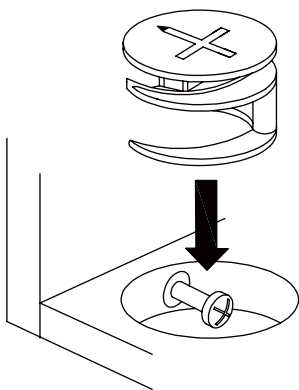


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


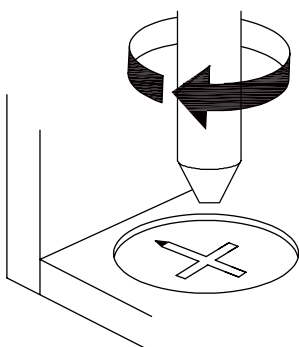


EN_Turn cam lock clockwise to tighten.








Carton A

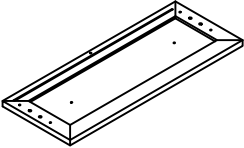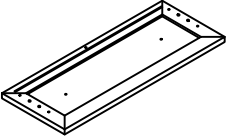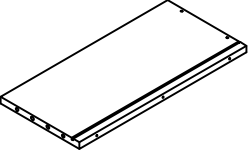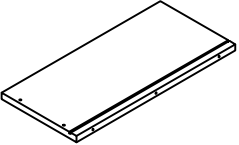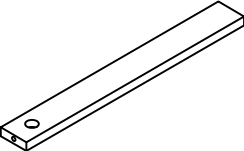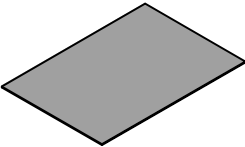
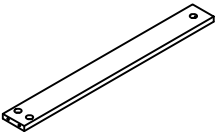
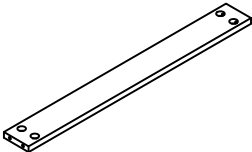
NO.	PARTS	QTY	SPARE
⑩		x4	
⑪		x4	
⑫		x8	
⑬		x8	
⑮		x8	
⑯		x8	
⑰		x1	
⑱		x1	

Carton B

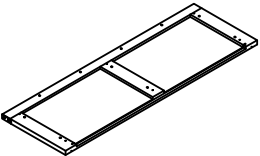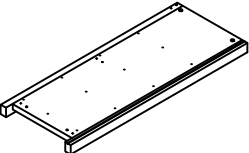NO.	PARTS	QTY	SPARE
①		x1	
②		x1	


Carton B

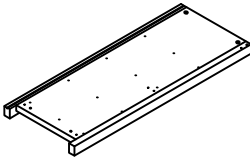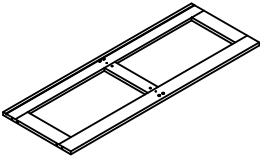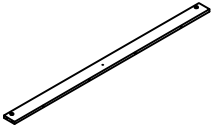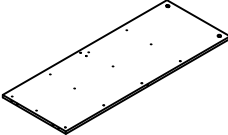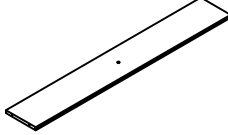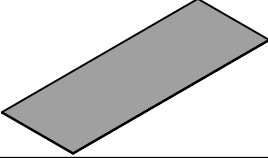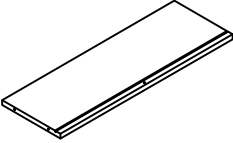NO.	PARTS	QTY	SPARE
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑭		x8	
	 Hardware Kit	x1	

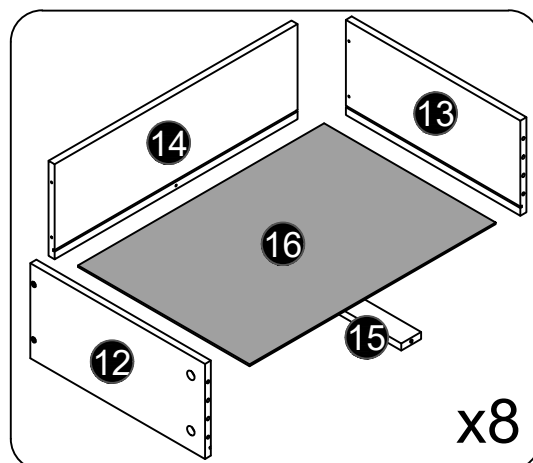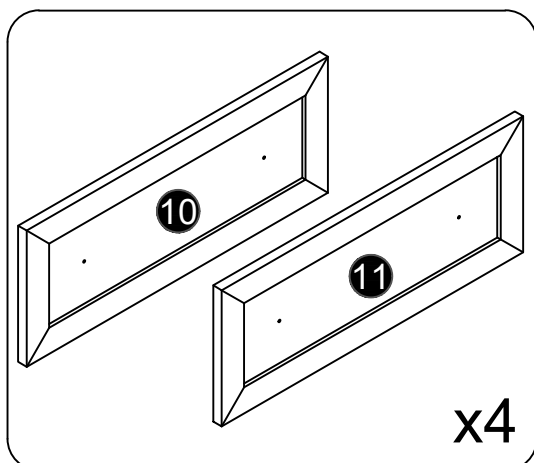
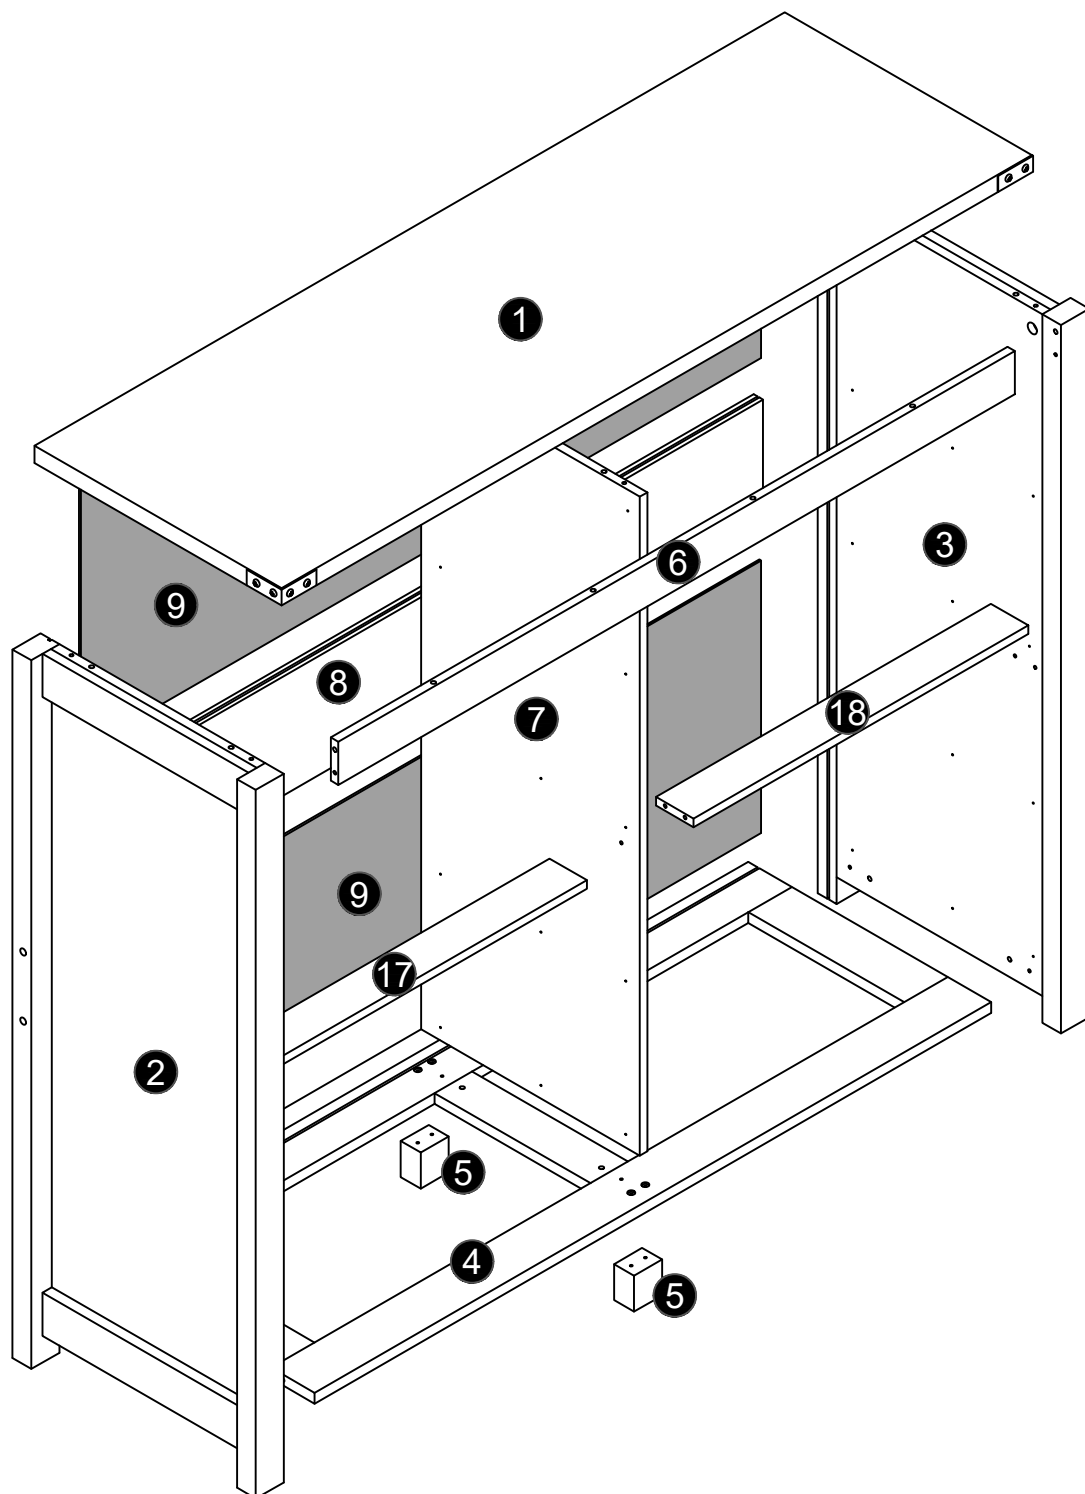


A x59 Ø6x35mm +3(spare)	B x59 Ø15x10mm +3(spare)	C x50 Ø6x30mm +3(spare)	D x47 Ø4x35mm +3(spare)	E x98 Ø3.5x12mm +4(spare)	F x4
G x4	H x16 H-1 H-2	I x2 I-1 I-2	J x12 +1(spare) J-1 J-2	K x2 K-1 K-2	L x4
M x1	N x2				
CL x8 L350mm	CR x8 L350mm	DL x8 L350mm	DR x8 L350mm		

D x40



01

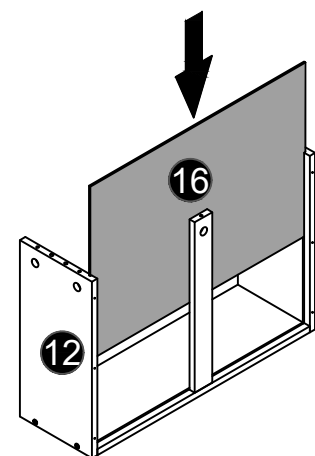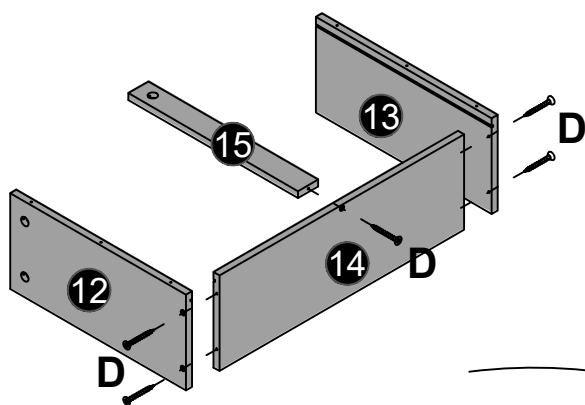




x8

02

A x40

B x40

C x32

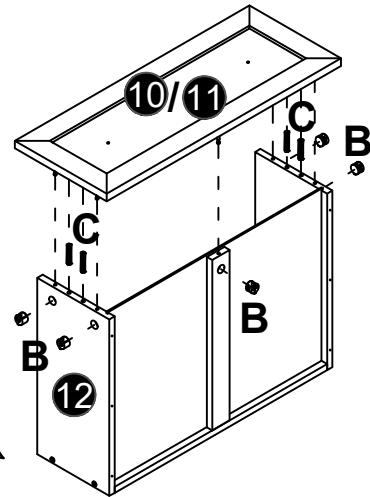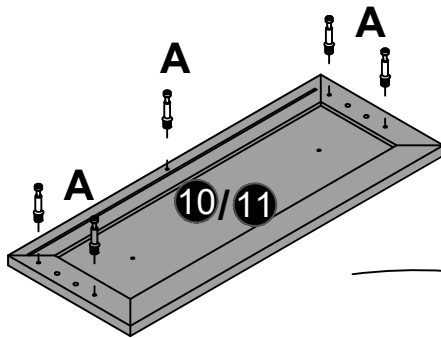

x4

03

E x48

H x16







H-1

H-2

DL x8

DR x8

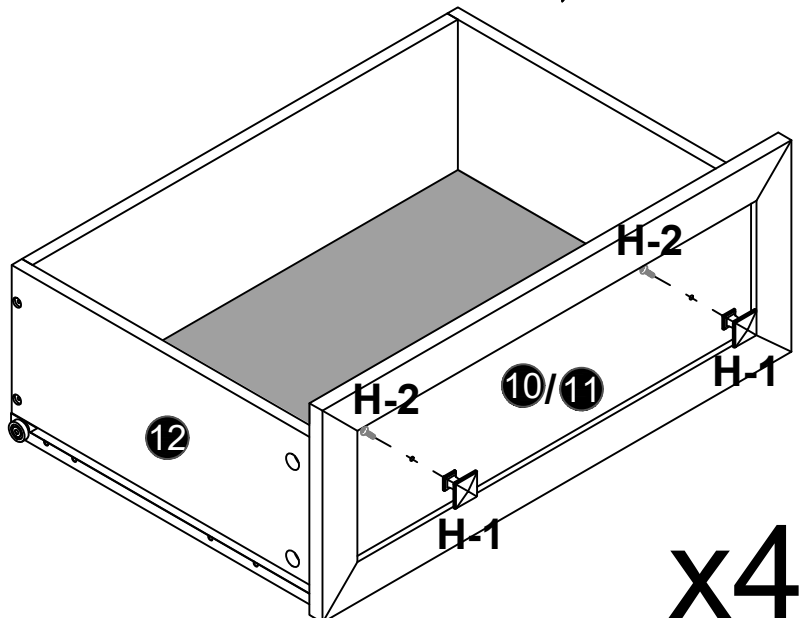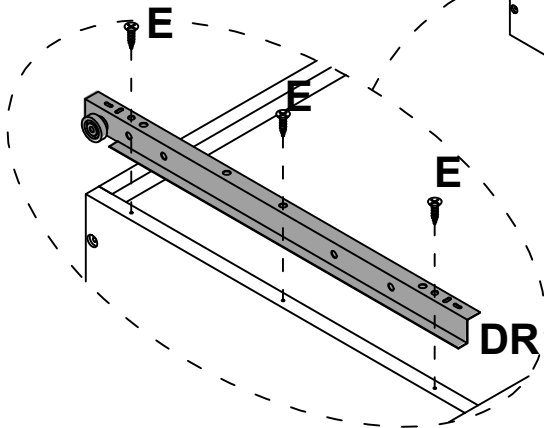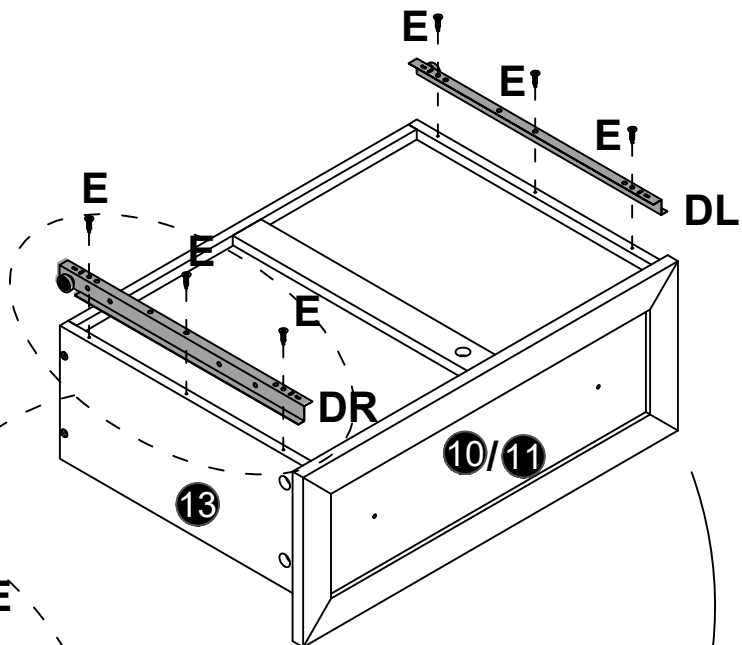



x4

A x3

E x48

CL x8



CR x8

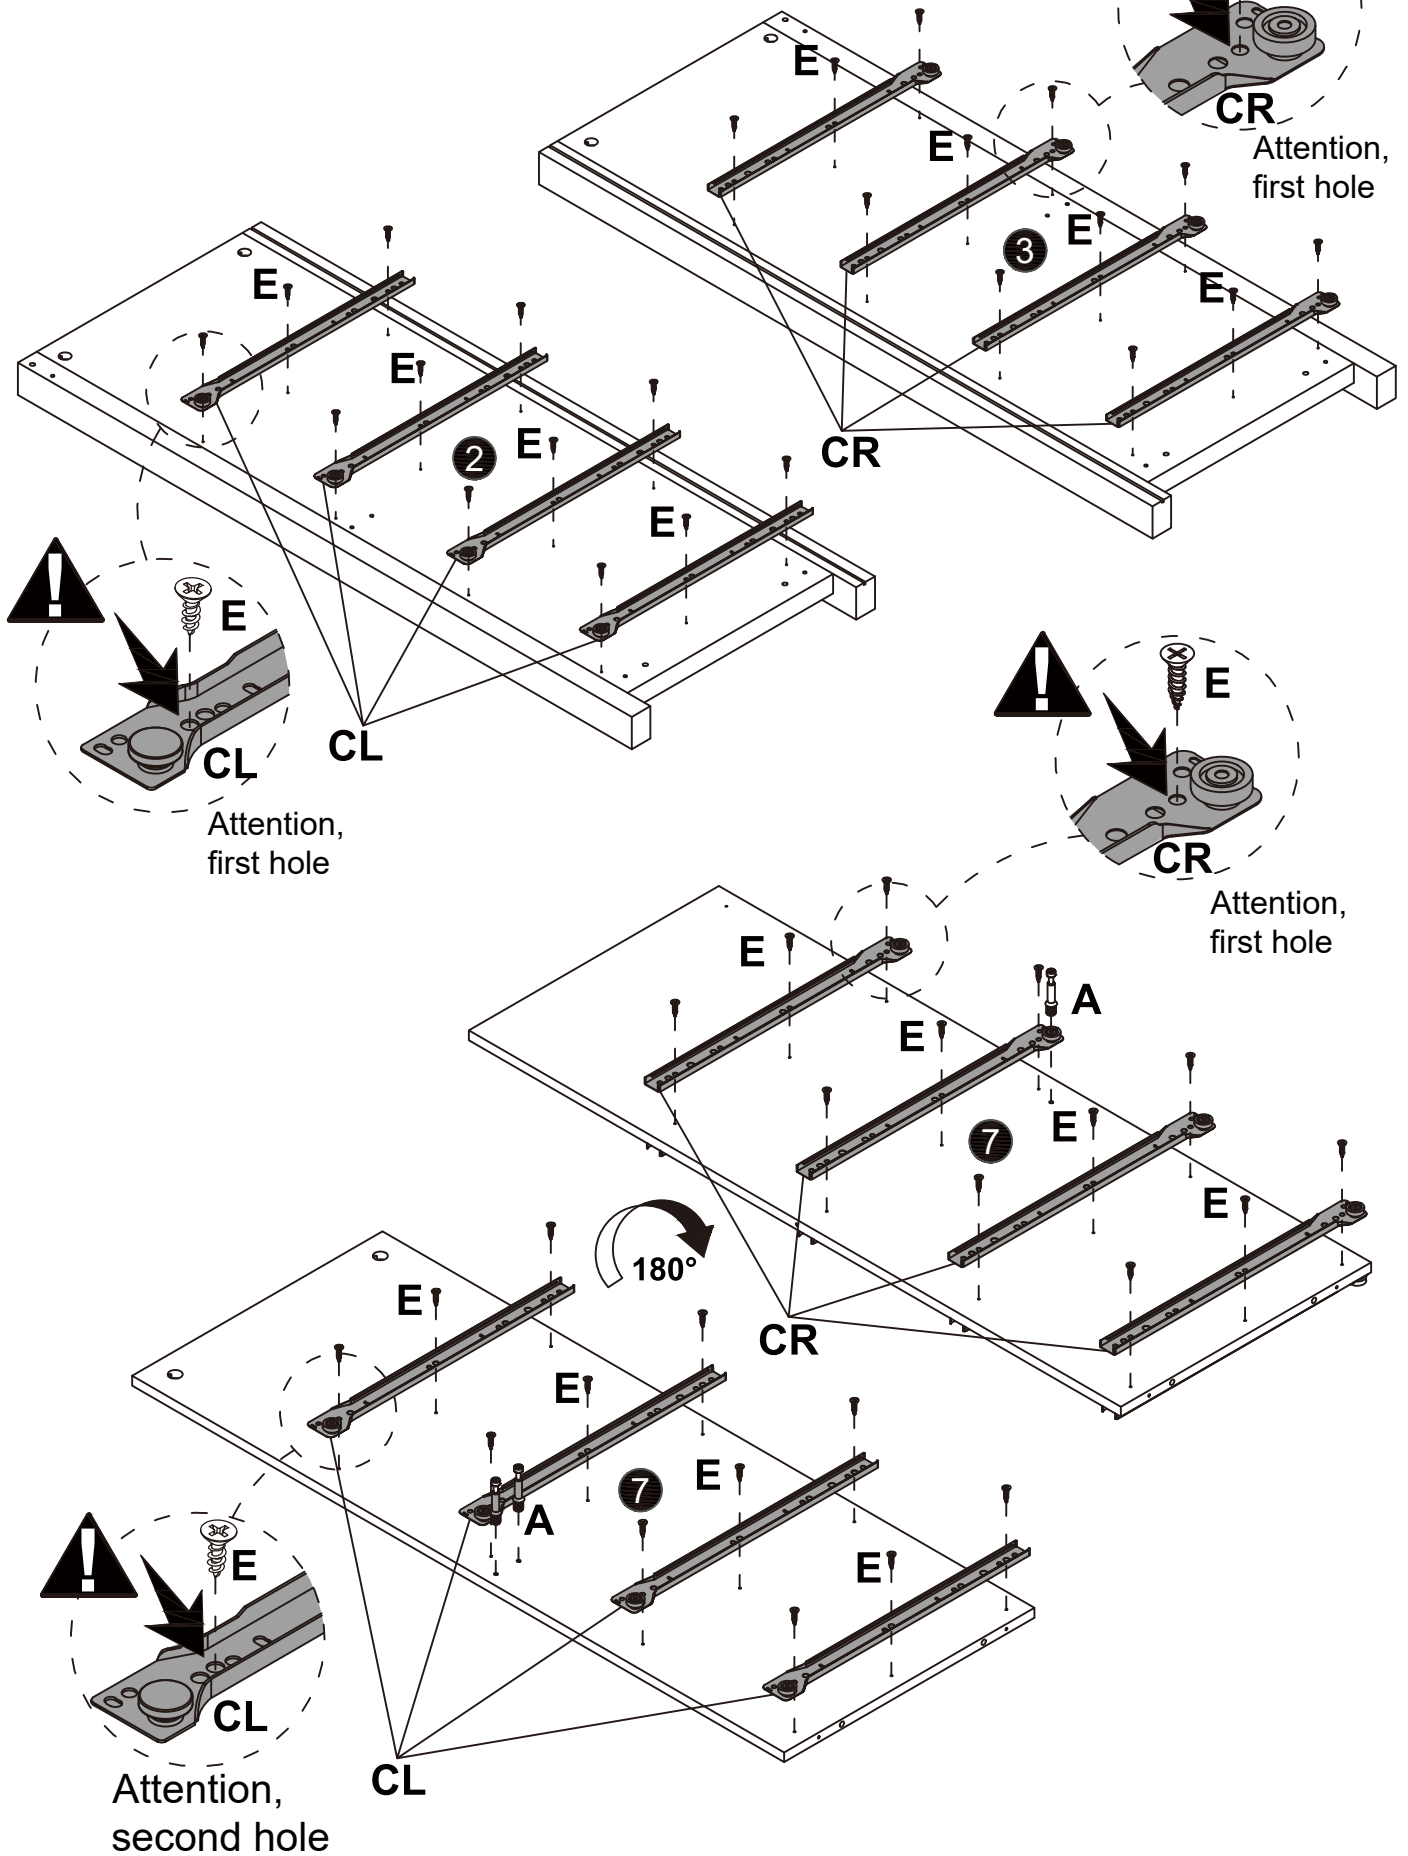

05

A x10



L x4

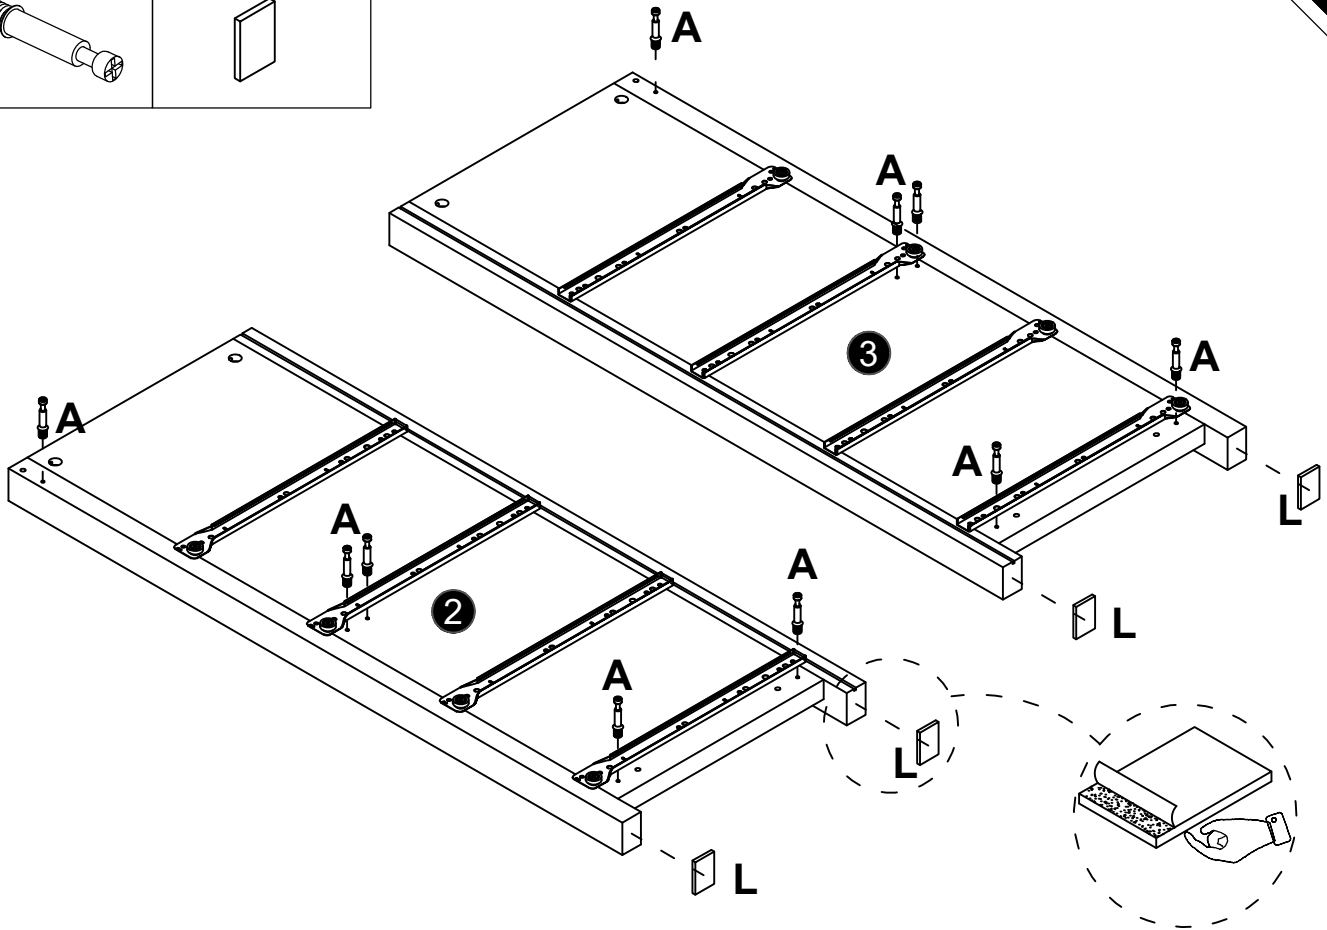

06


D x4

N x2

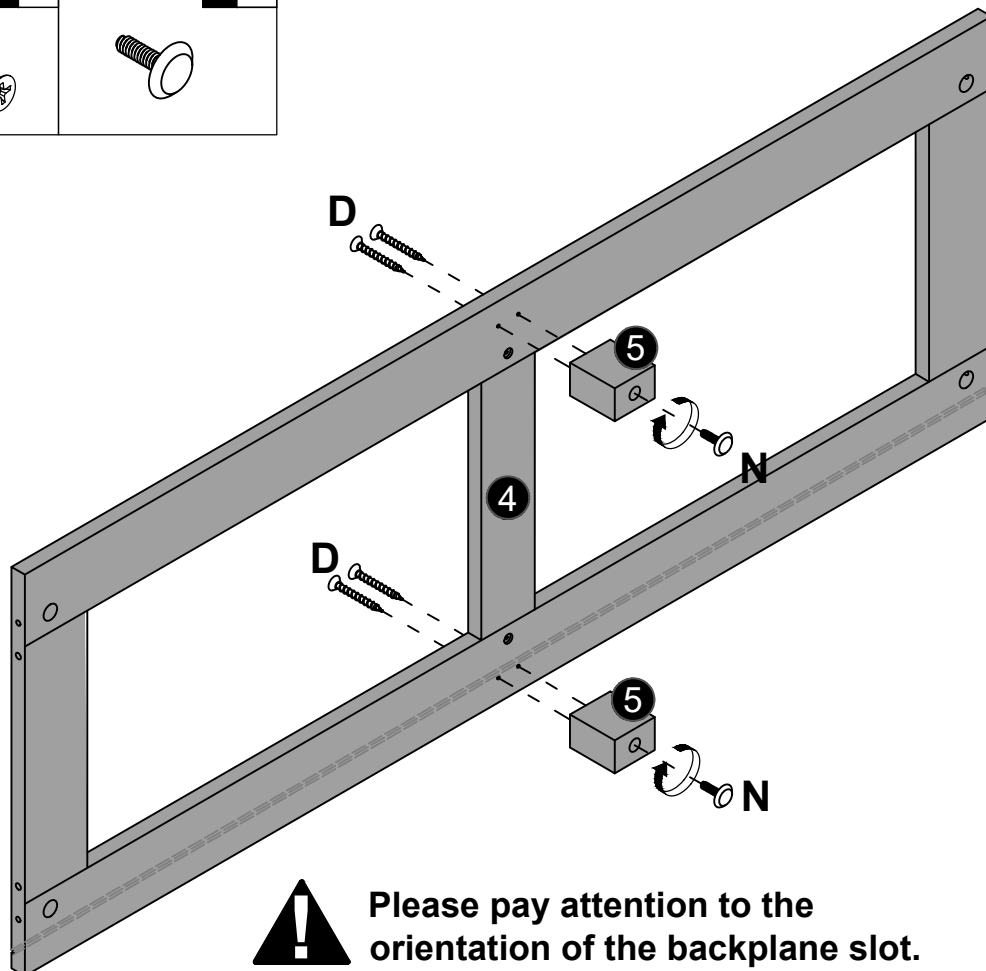



Please pay attention to the orientation of the backplane slot.


C x2



D x2

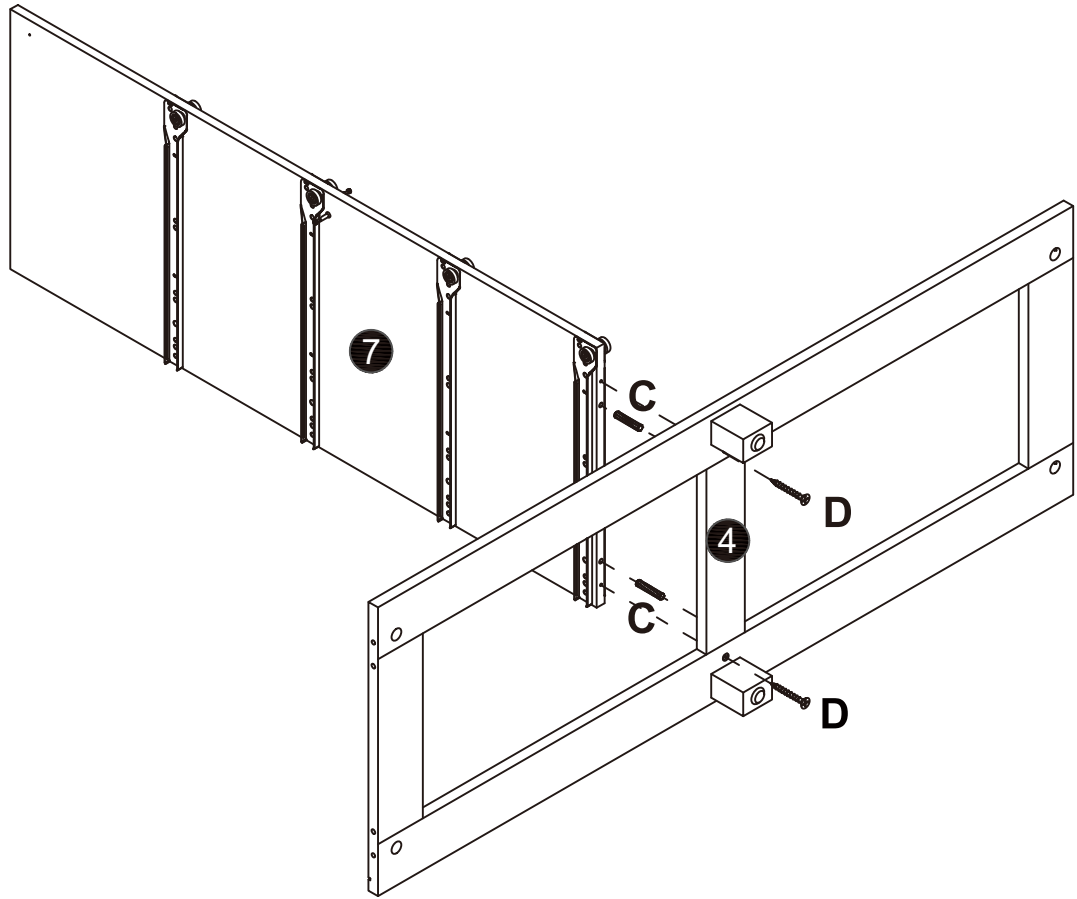


B x3

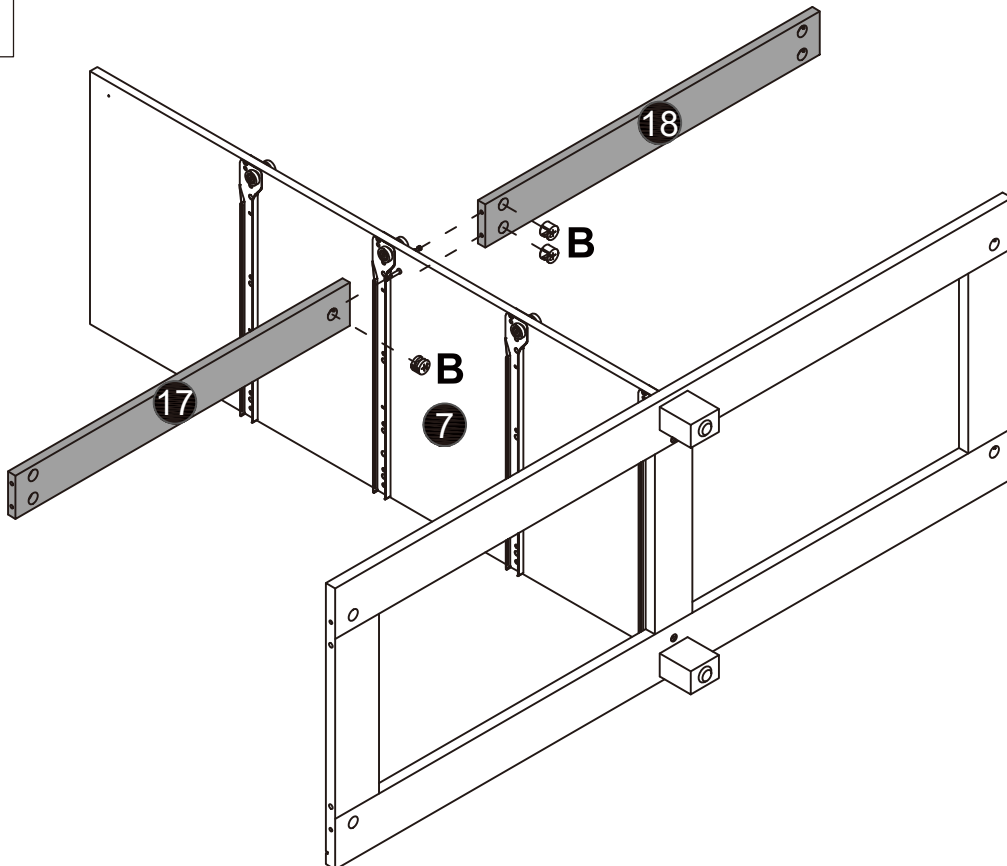


C x3

B x5

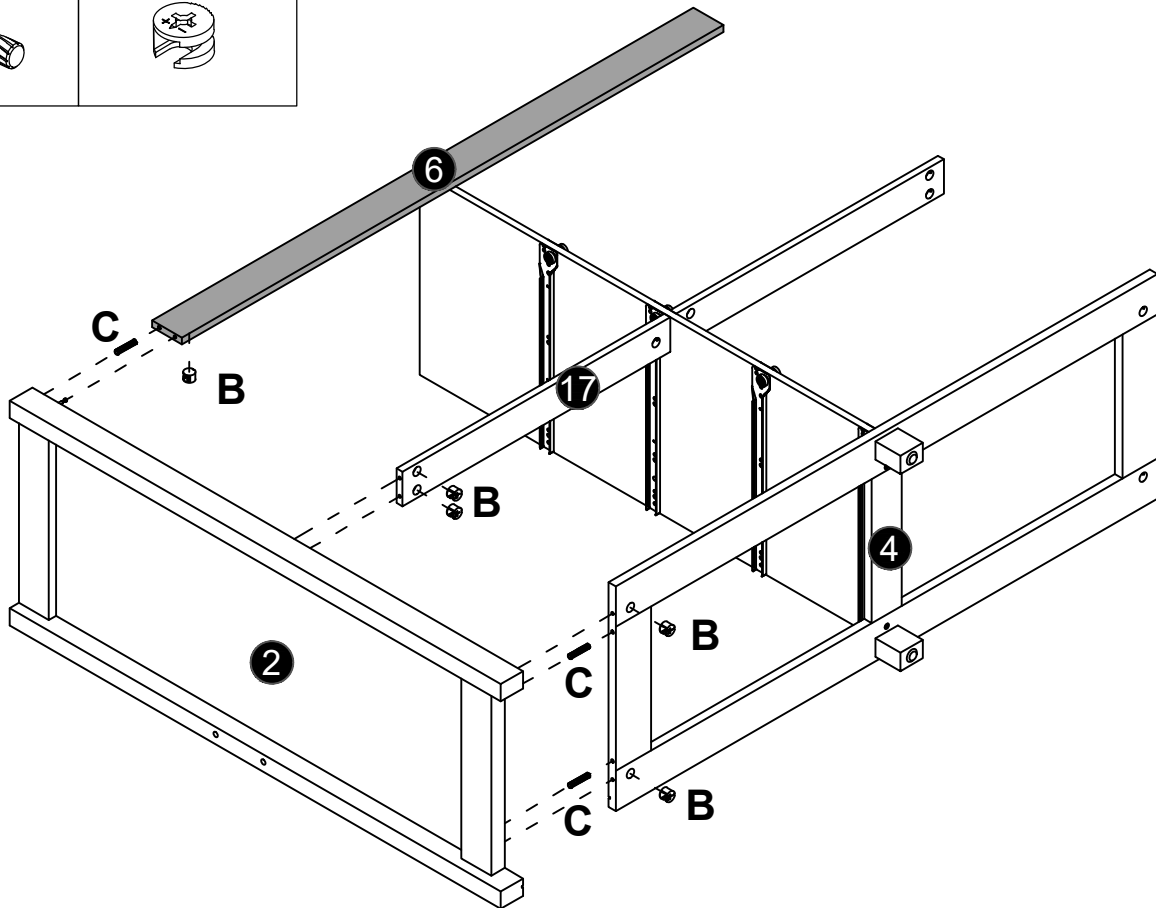

C x3



B x5

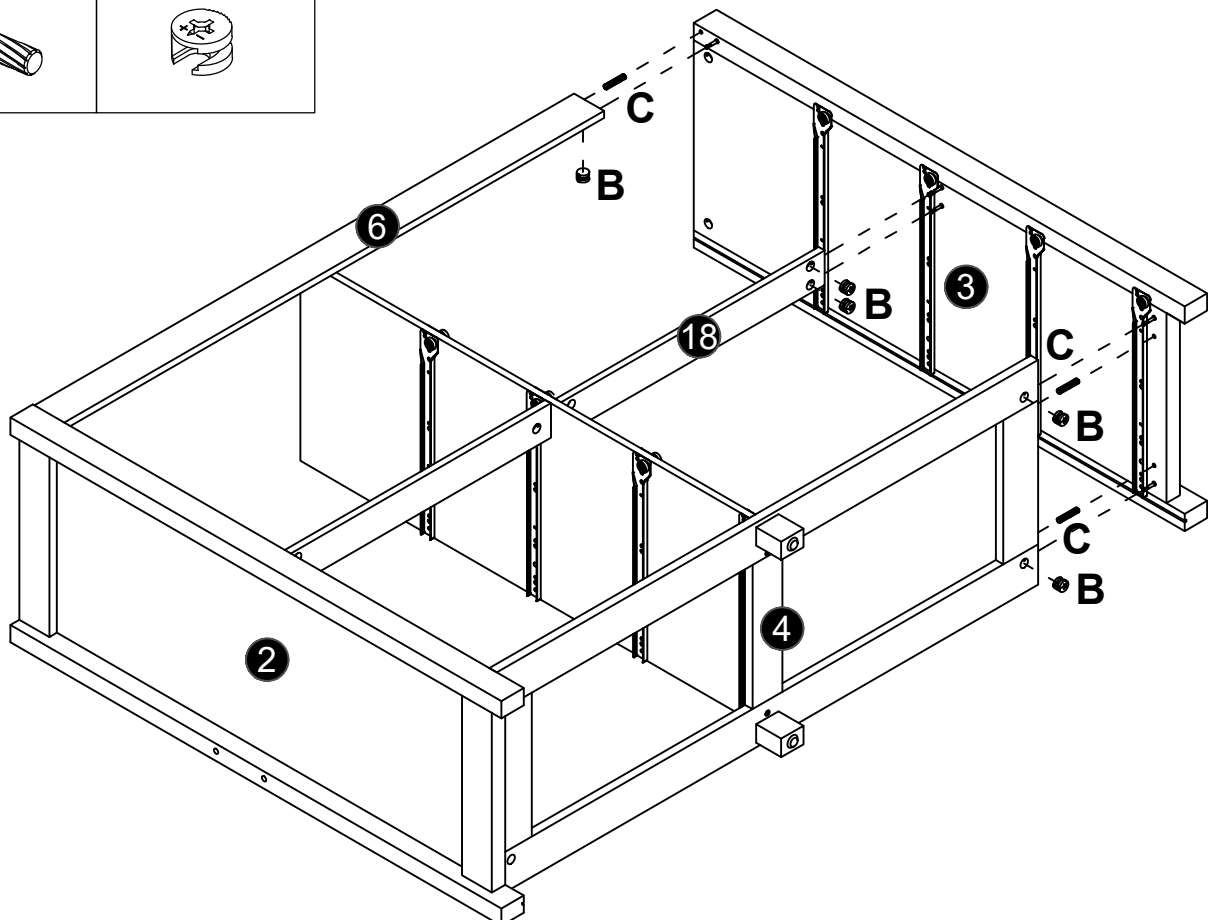


E x2




M x1

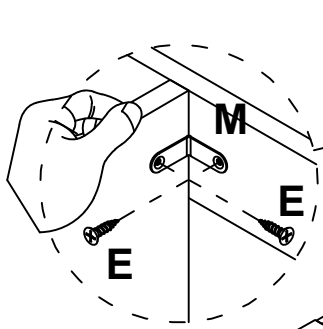


Adjust the alignment
hole position by
hand when there is a
deviation during
installation.

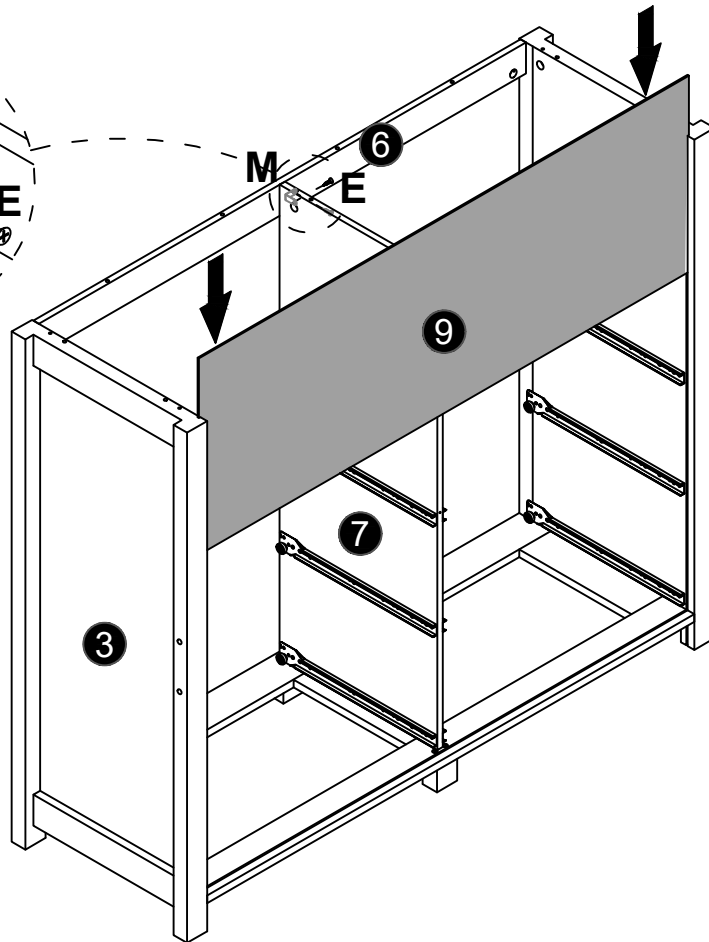

D x1




F x4

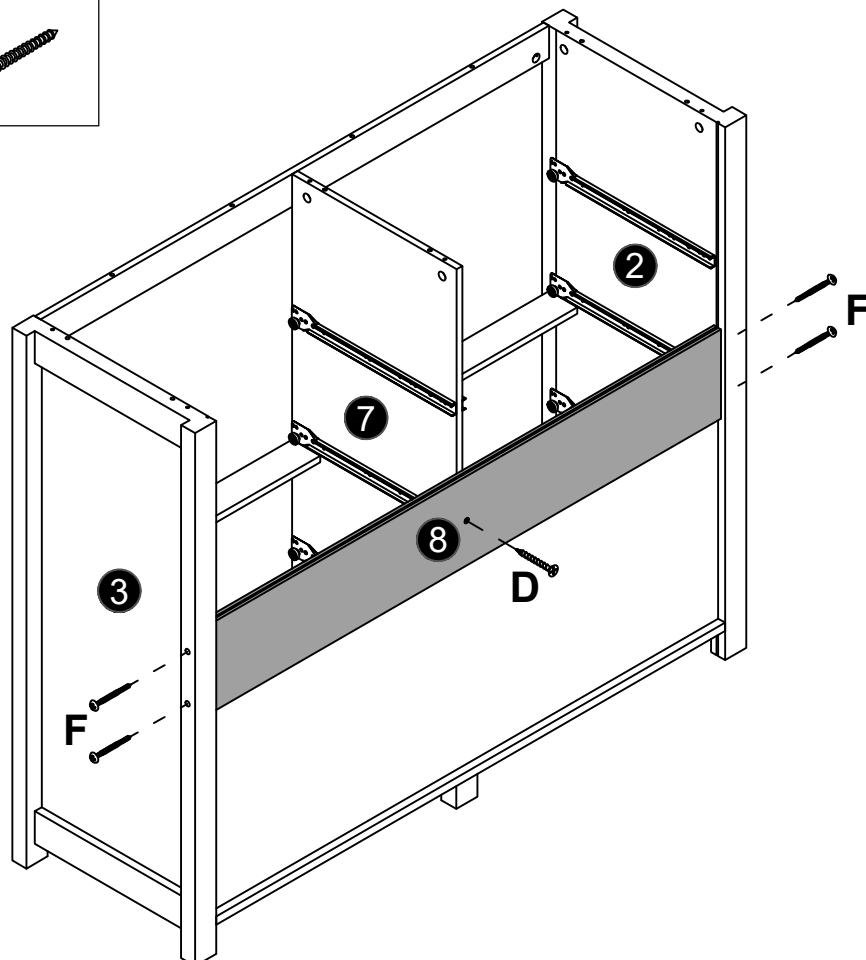


C x10




13

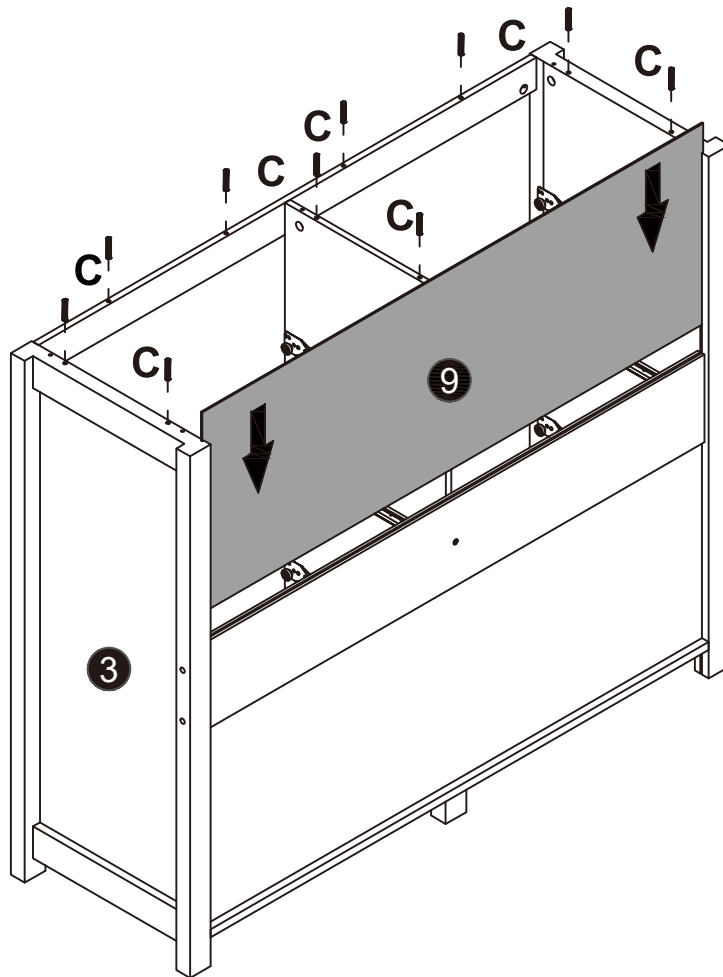


A x6



14

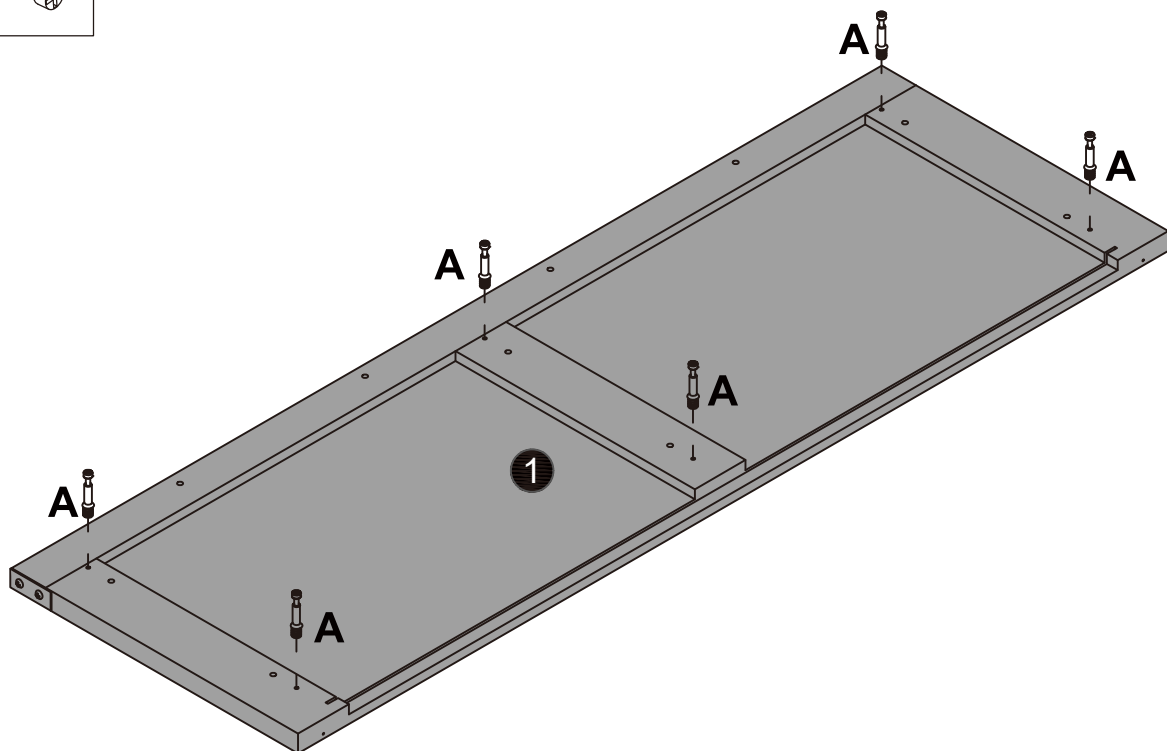

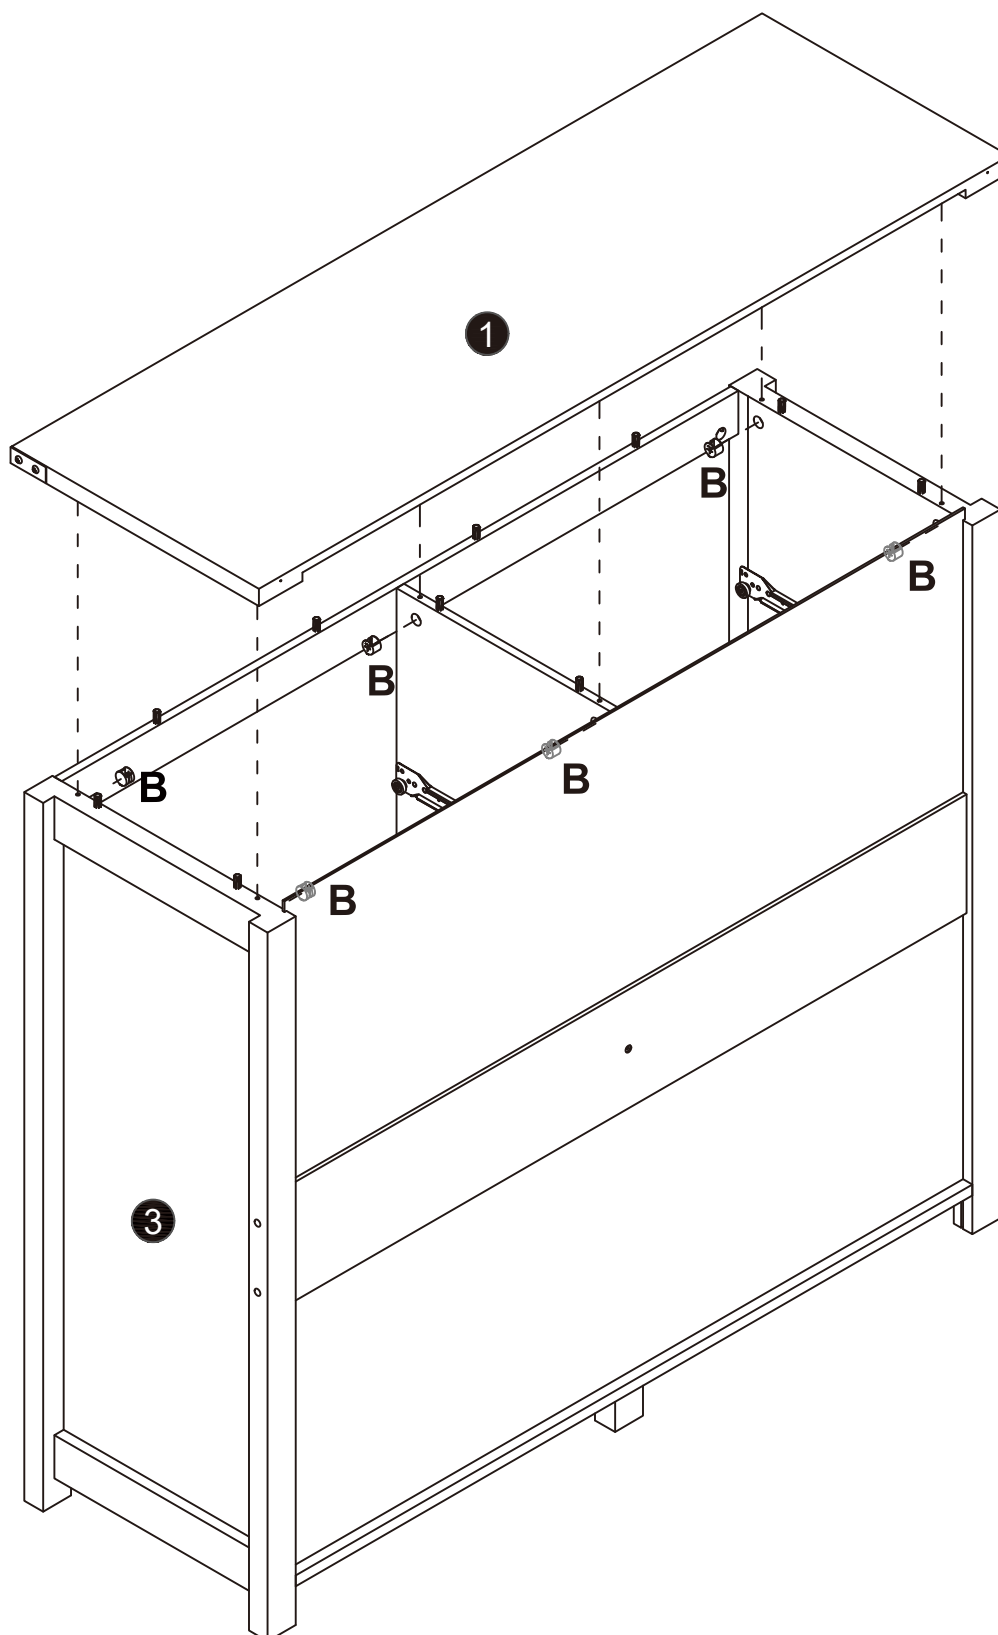

J x12




G x4





J-1



J-2

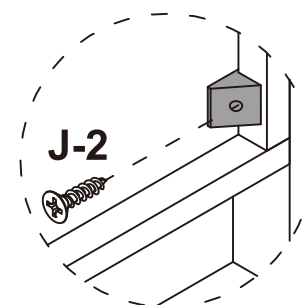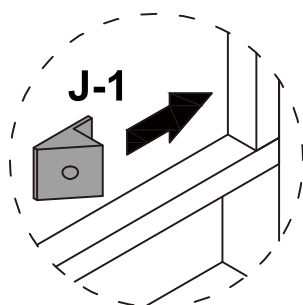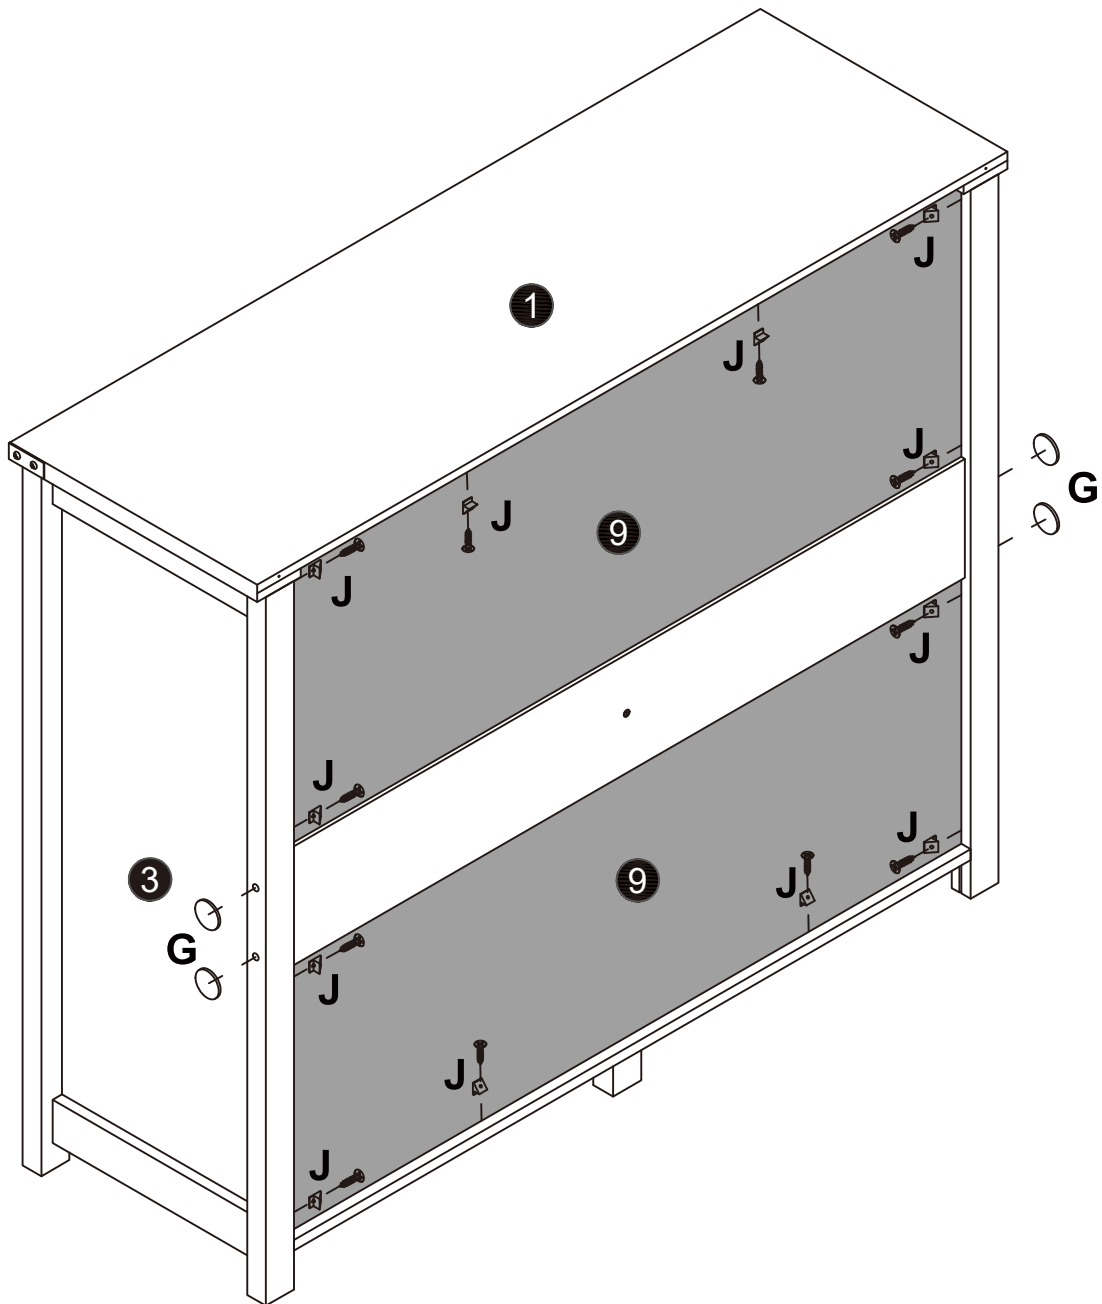

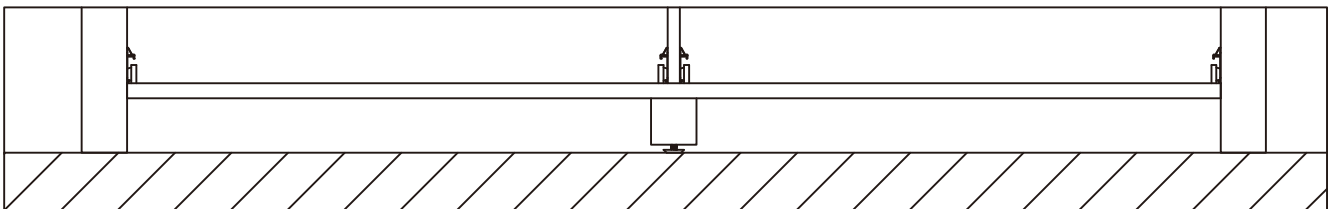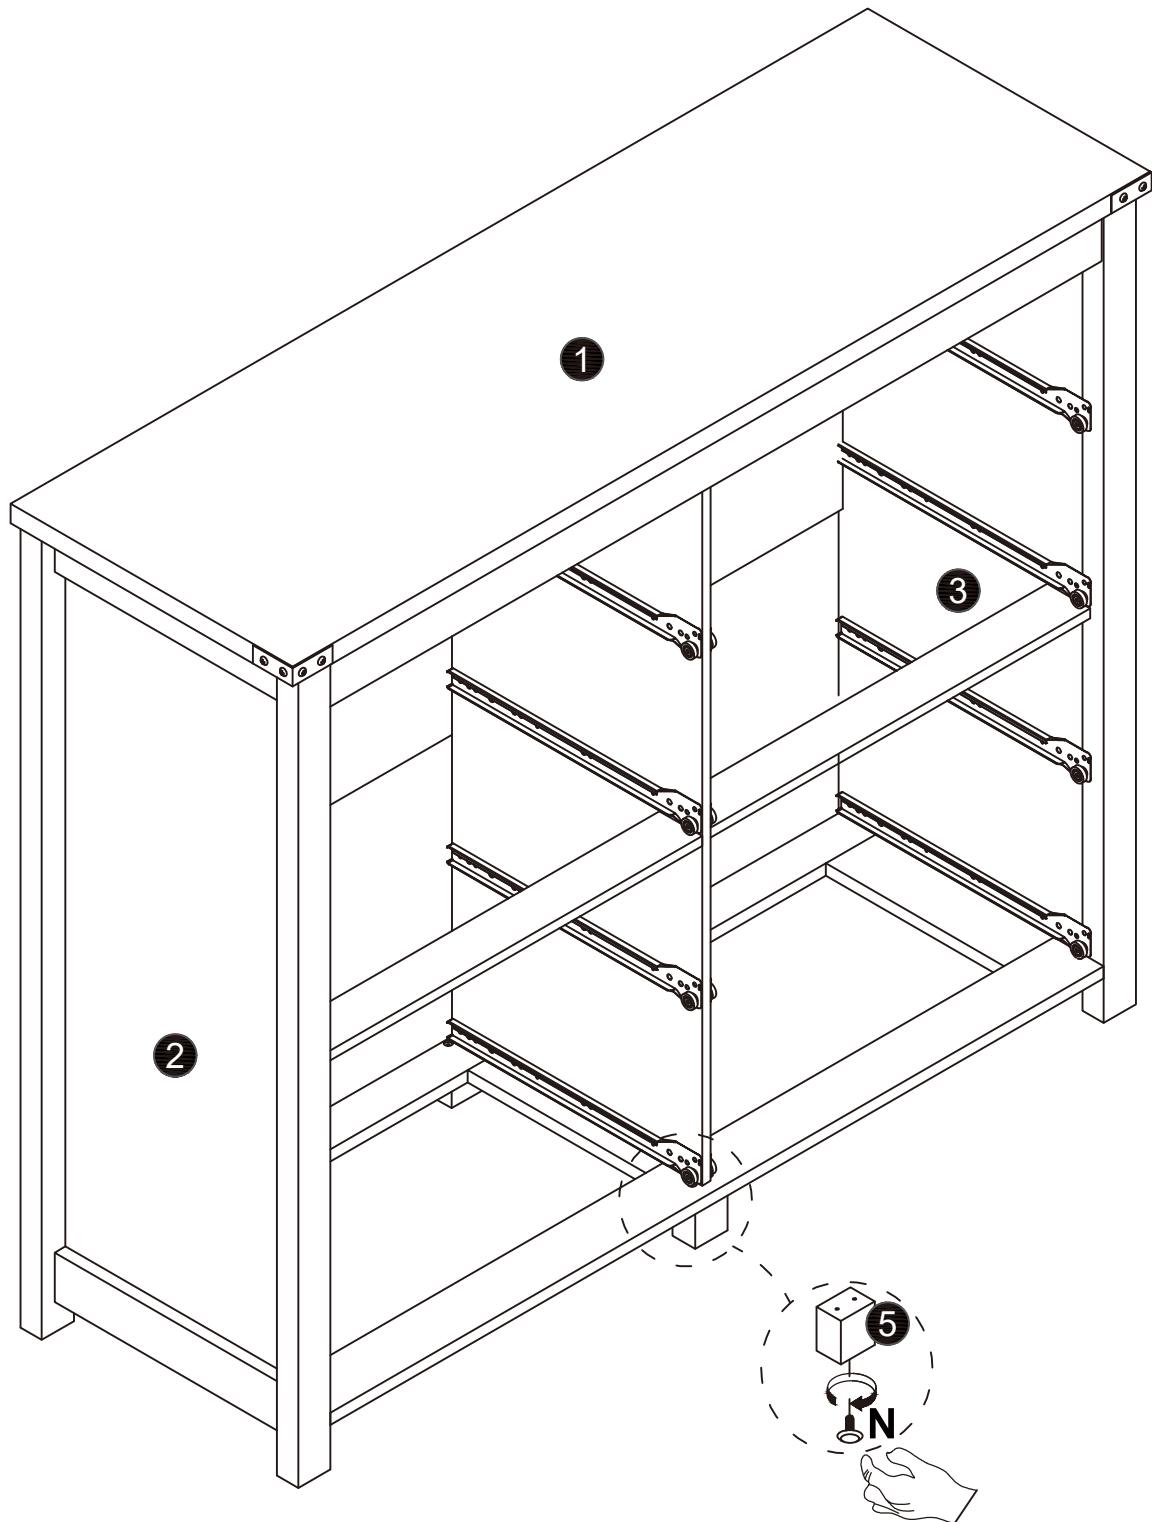


If the cabinet is unstable on the ground, please rotate the No. N adjustment foot pad on the No. 5 support leg.

Attention: The drawer is divided into left drawer and right drawer.





The picture shows the left drawer installed in the cabinet.


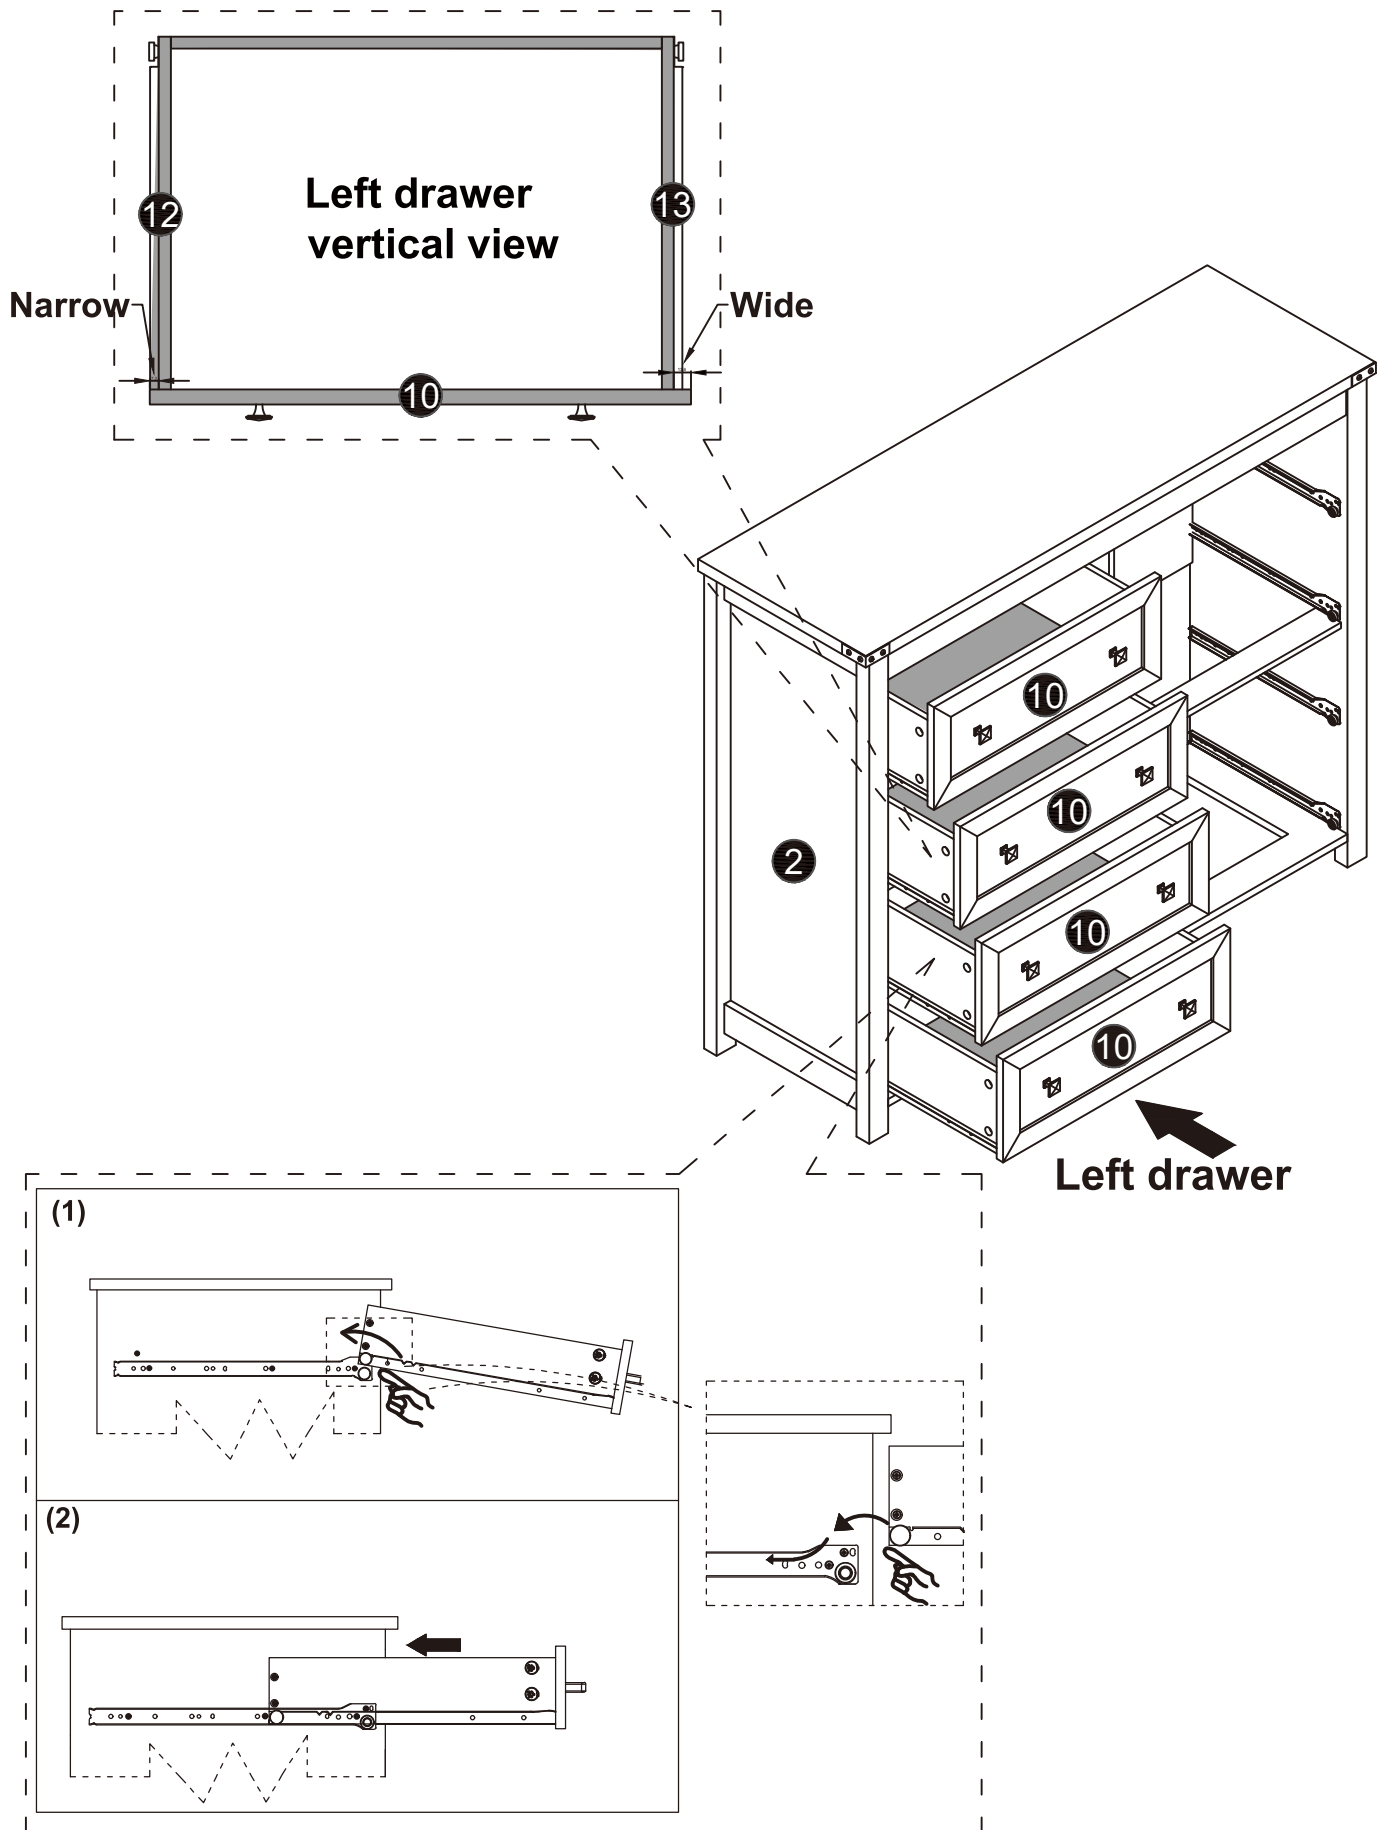


Attention: The drawer is divided into left drawer and right drawer.




The picture shows the Right drawer installed in the cabinet.

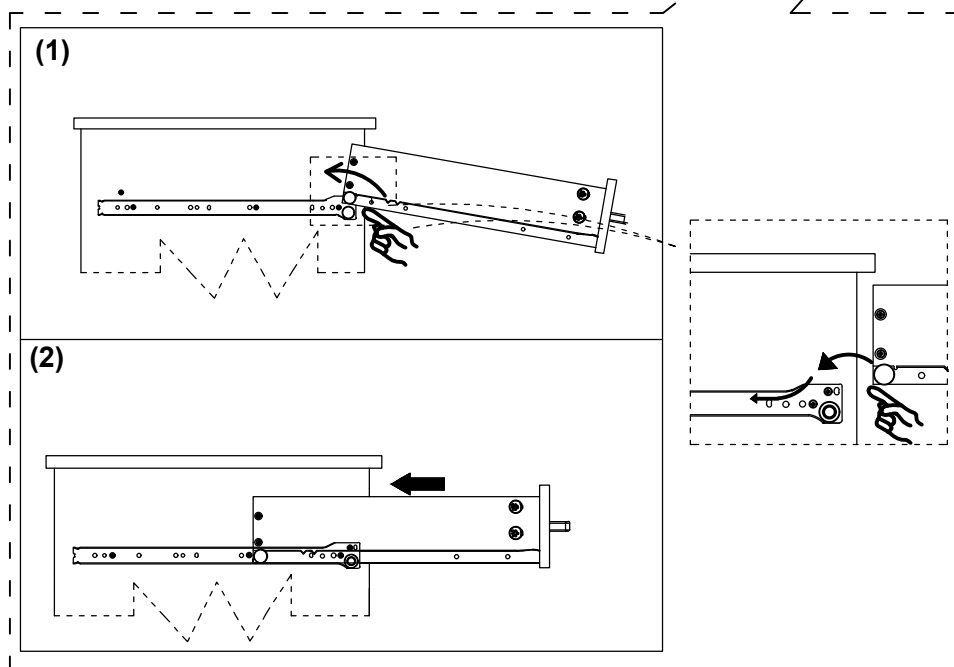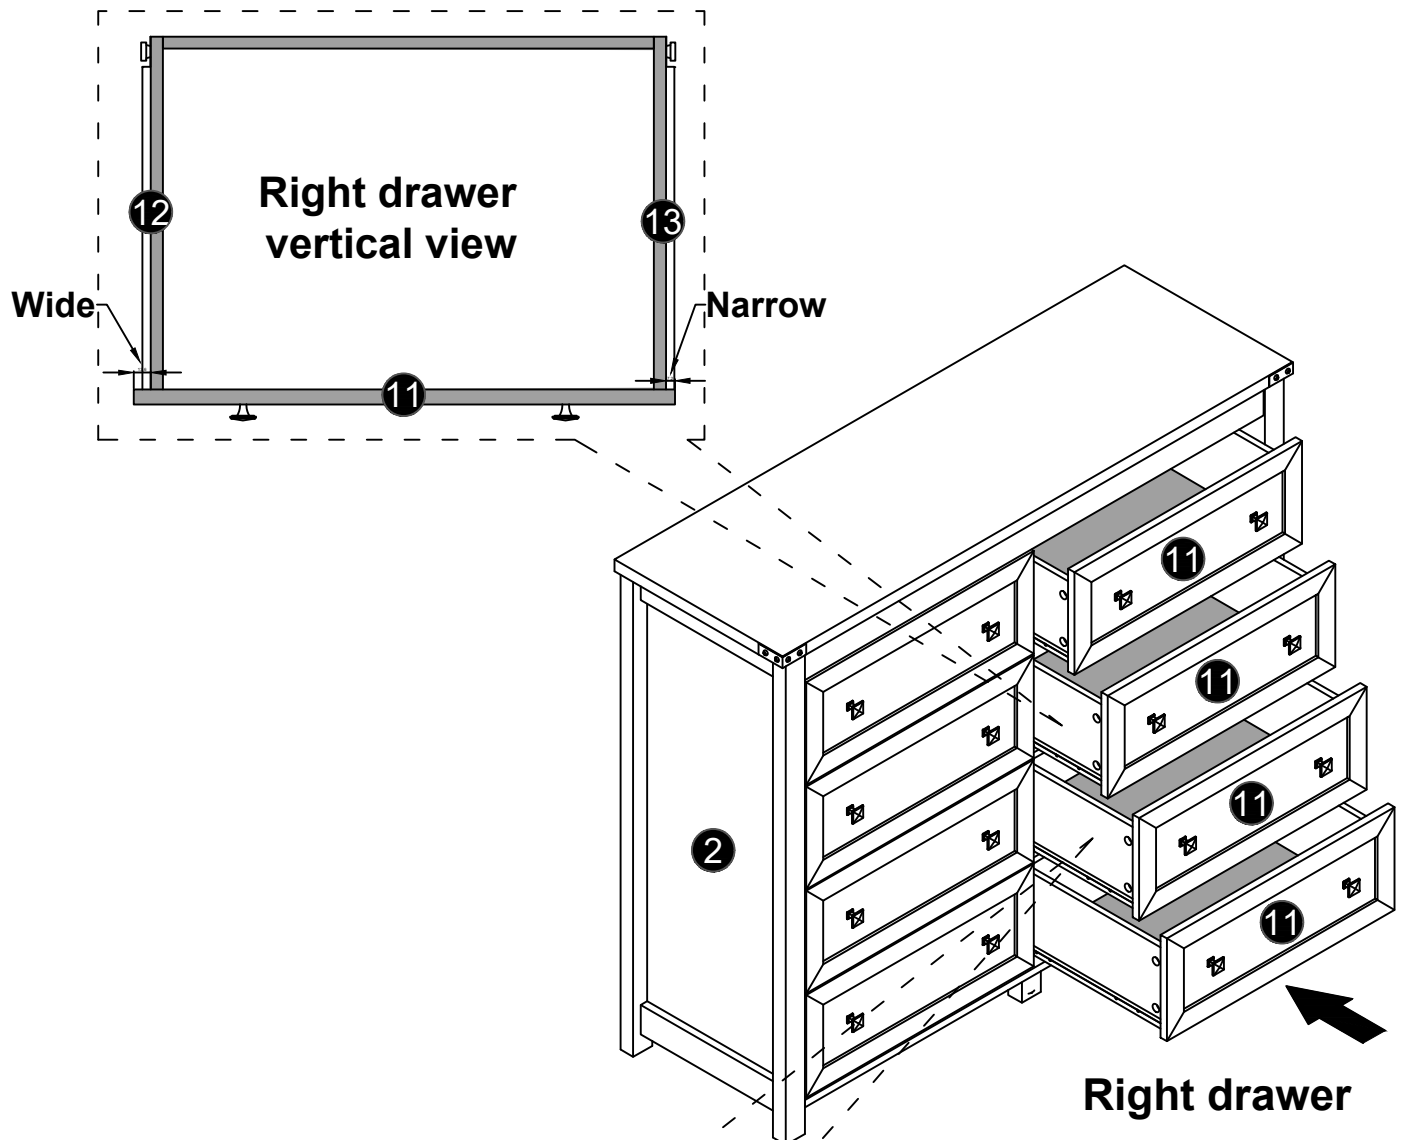


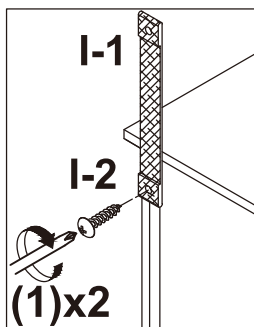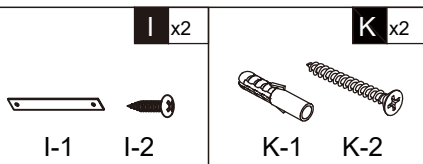


First fix the anti-rewind screw in the reserved hole of the product.

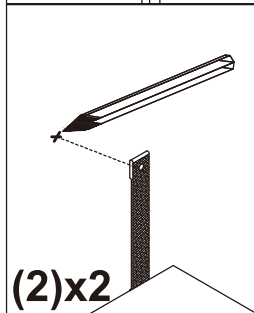


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

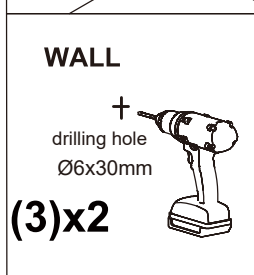

Then use a tape drill to make holes in the wall that are suitable for the product screws.

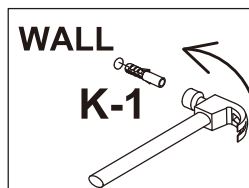

Then, put the expansion bolt into the hole

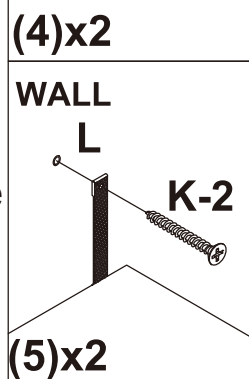

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

