


Assembly Instructions

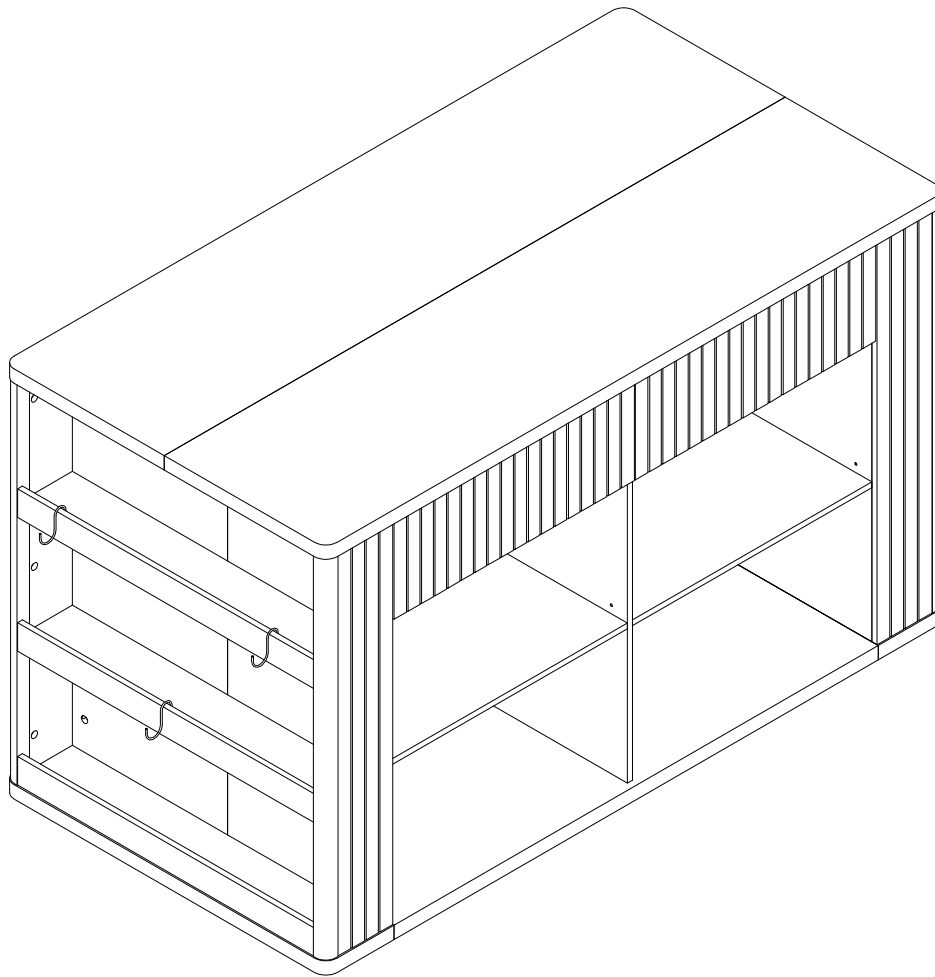

How to assemble the 59" Kitchen Island?


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

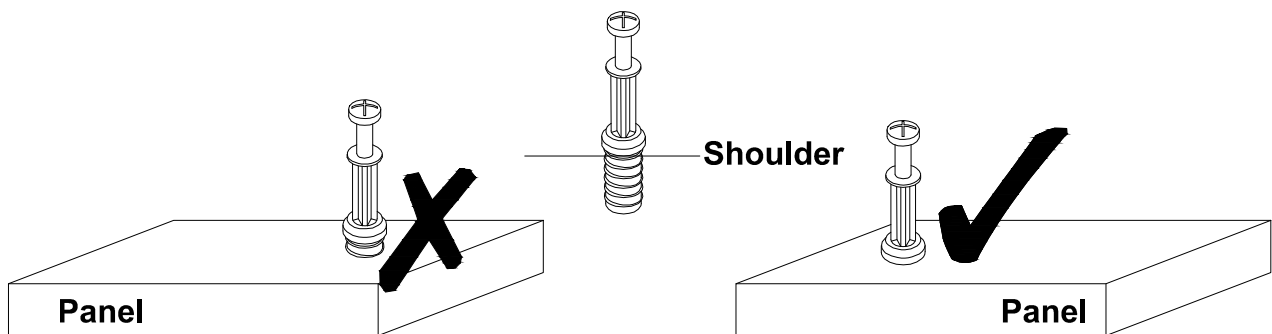

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

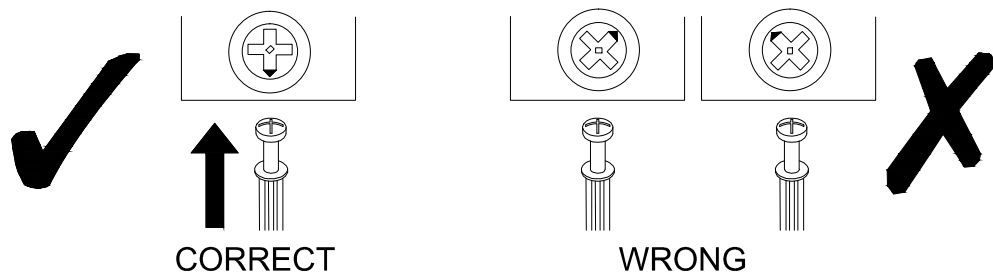

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.








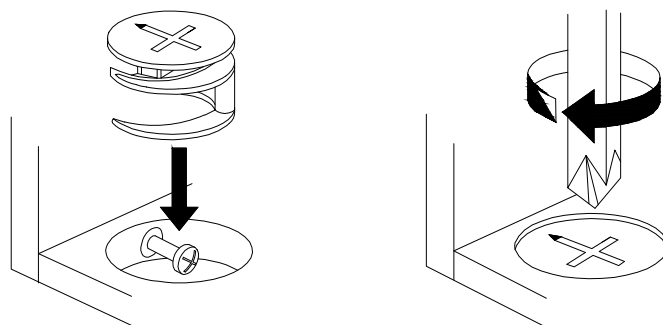


Turn cam lock clockwise to tighten.

Product structure

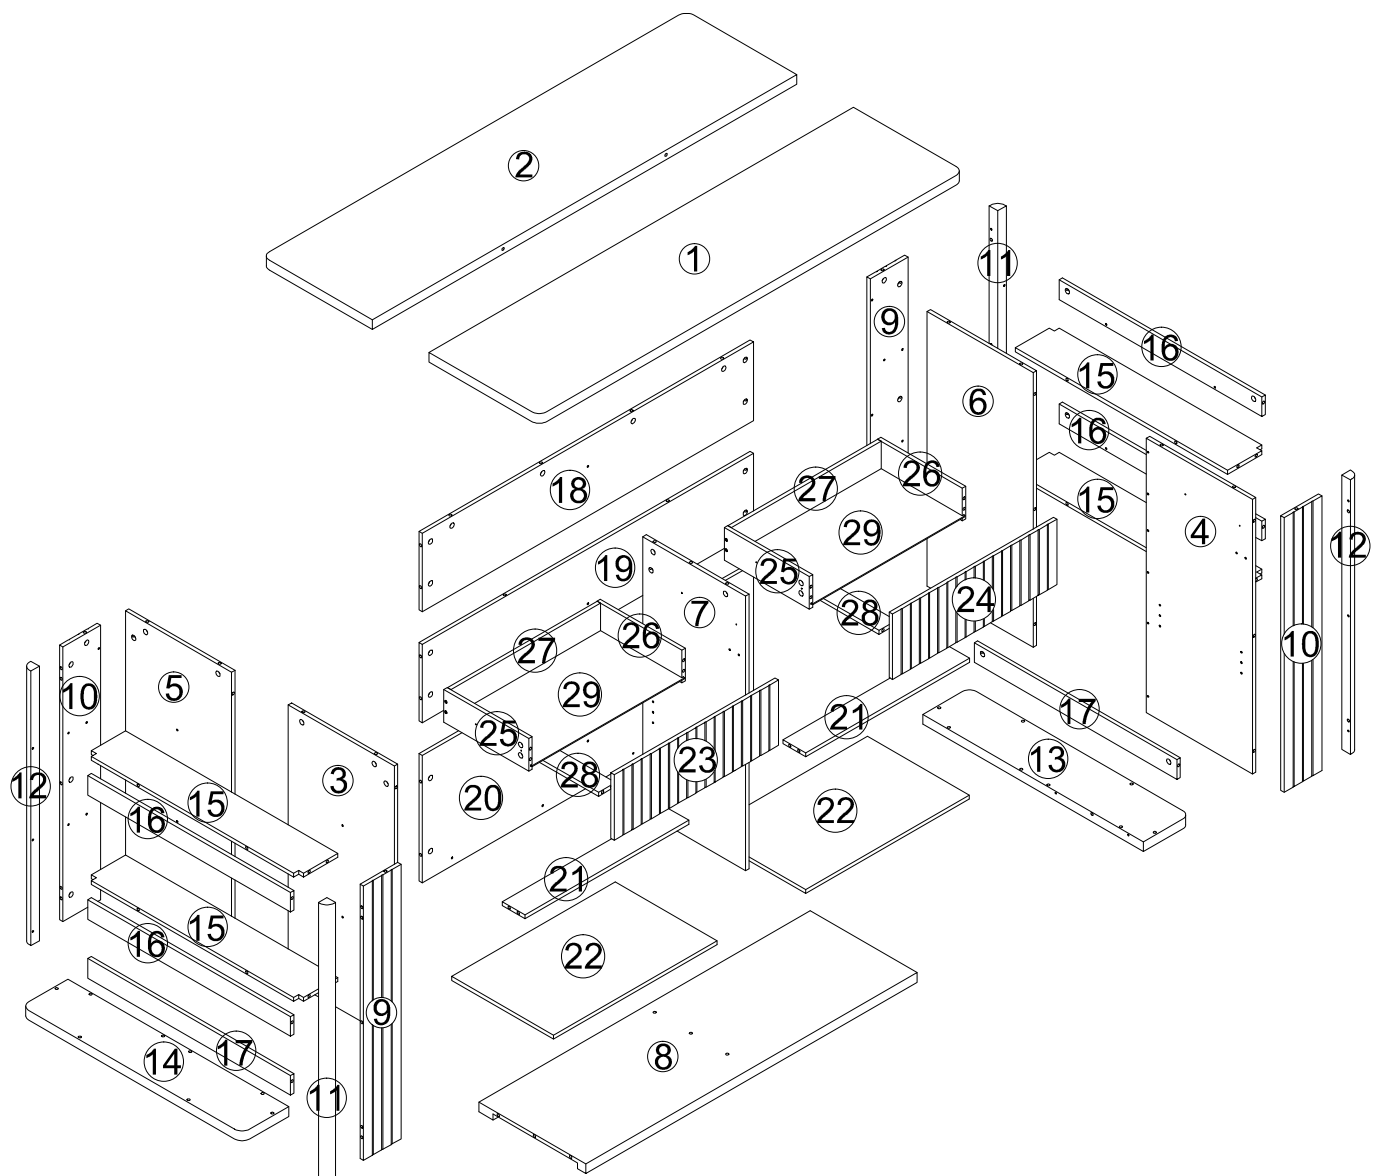


Part List

No. A Quantity:129 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:133 Pcs Cam φ15 	No. C Quantity:133 Pcs Sticker Ø20 	No. D Quantity:24 Pcs Dowel 8*30mm 
No. E Quantity:2 Sets Drawer Slider 10" 	No. F Quantity:16 Pcs Screw M3.5*12mm 	No. G Quantity:8 Pcs Screw M4*30mm 	No. H Quantity:18 Pcs Screw M6*50mm 
No. I Quantity:10 Pcs Foot Pad Ø15 	No. J Quantity:8 Pcs Shelf Support M5*15mm 	No. K Quantity:5 Pcs Pothook 	No. L Quantity:1 Pc Allen Key 4# 
No. M Quantity:2 Pcs Double-ended rod 6*64mm 			


Preparatory steps for installing drawer slides;

please first locate and disassemble the drawer slide 'E' component for subsequent installation, Please follow the instructions below for disassembly.


How to separate the drawer slider:

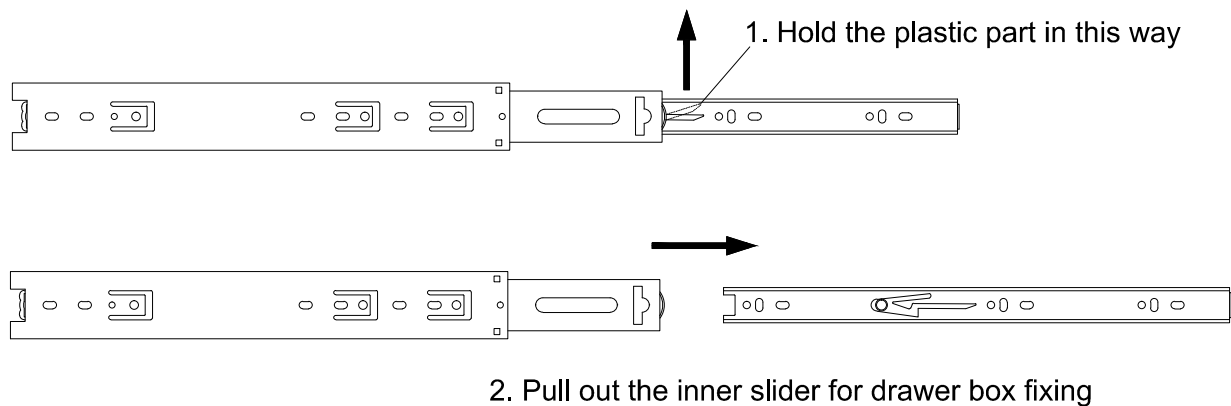

Drawer Front Alignment

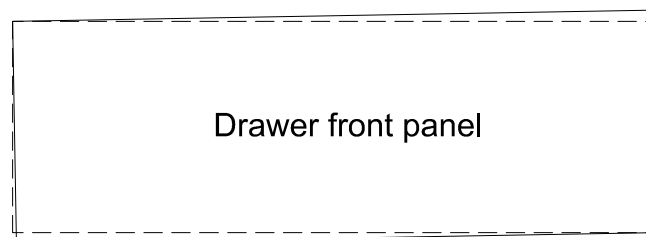


If the drawer front panel is NOT level after being assembled, then...

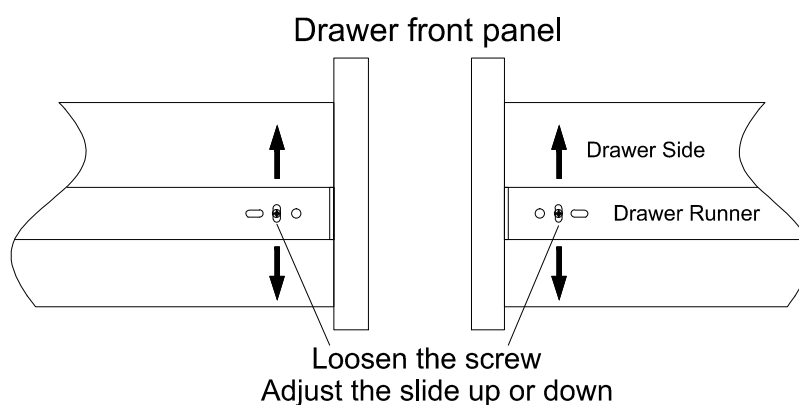


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


STEP 1

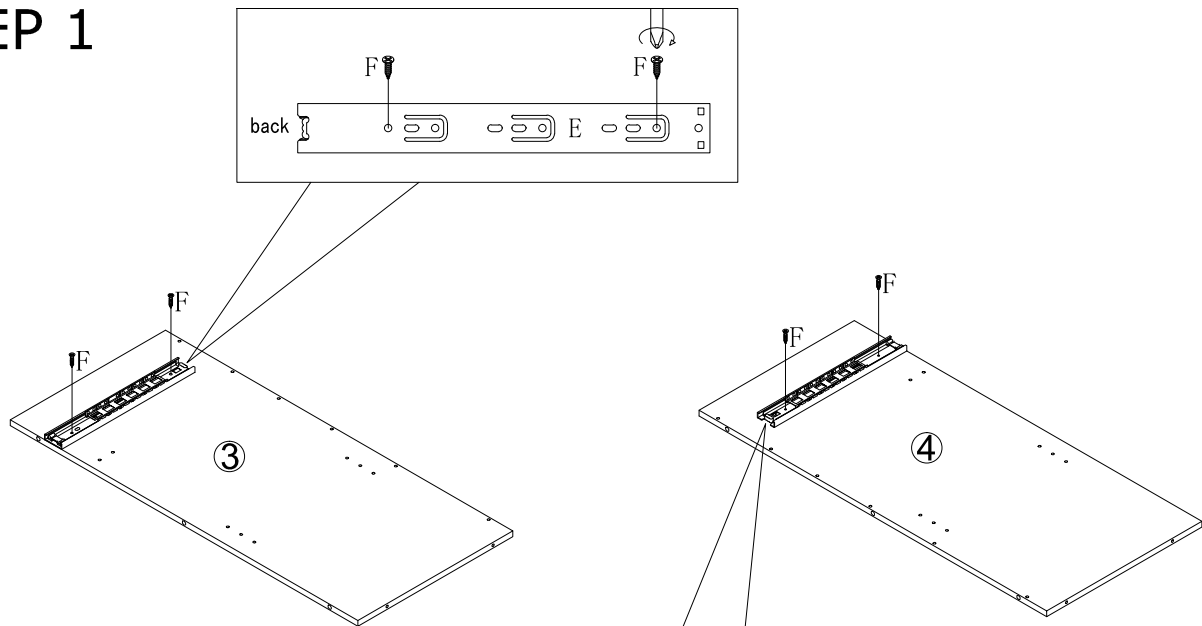


No. E
Quantity: 1 Sets
10"

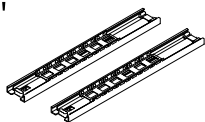


No. F
Quantity: 4 Pcs
M3.5*12mm

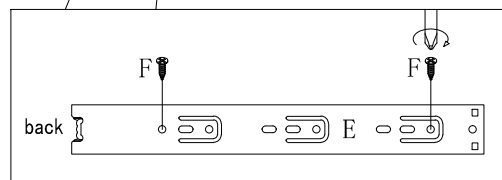


STEP 2

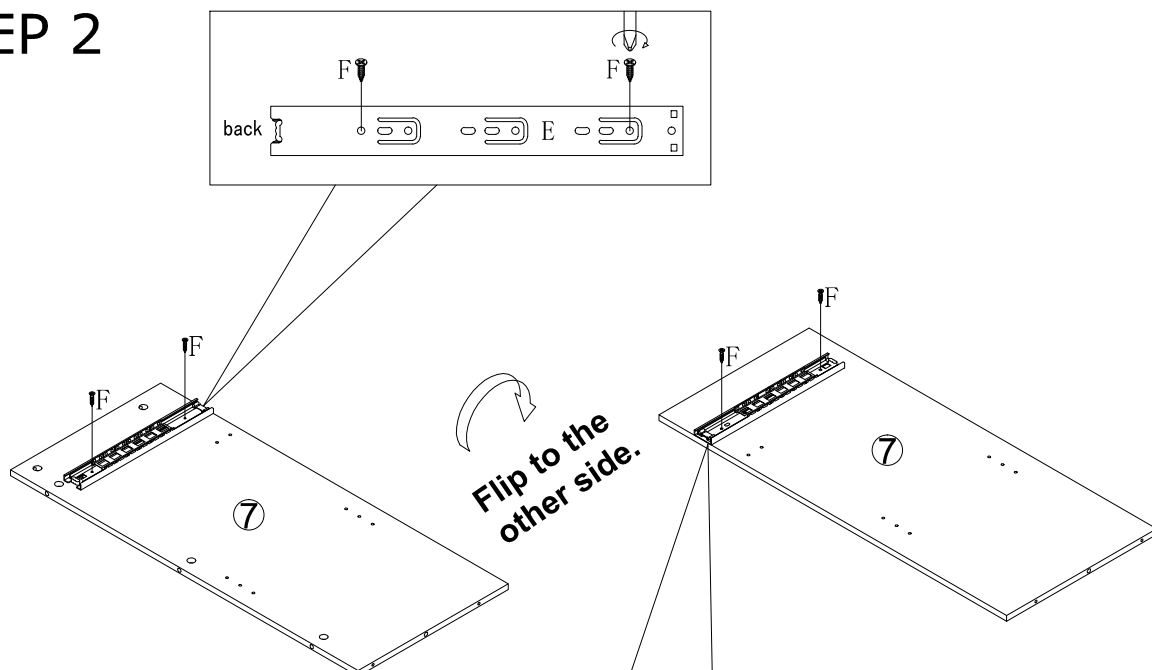


No. E
Quantity: 1 Sets
10"

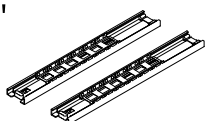


No. F
Quantity: 4 Pcs
M3.5*12mm

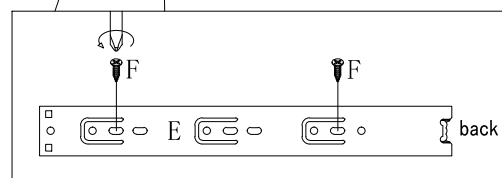


STEP 3

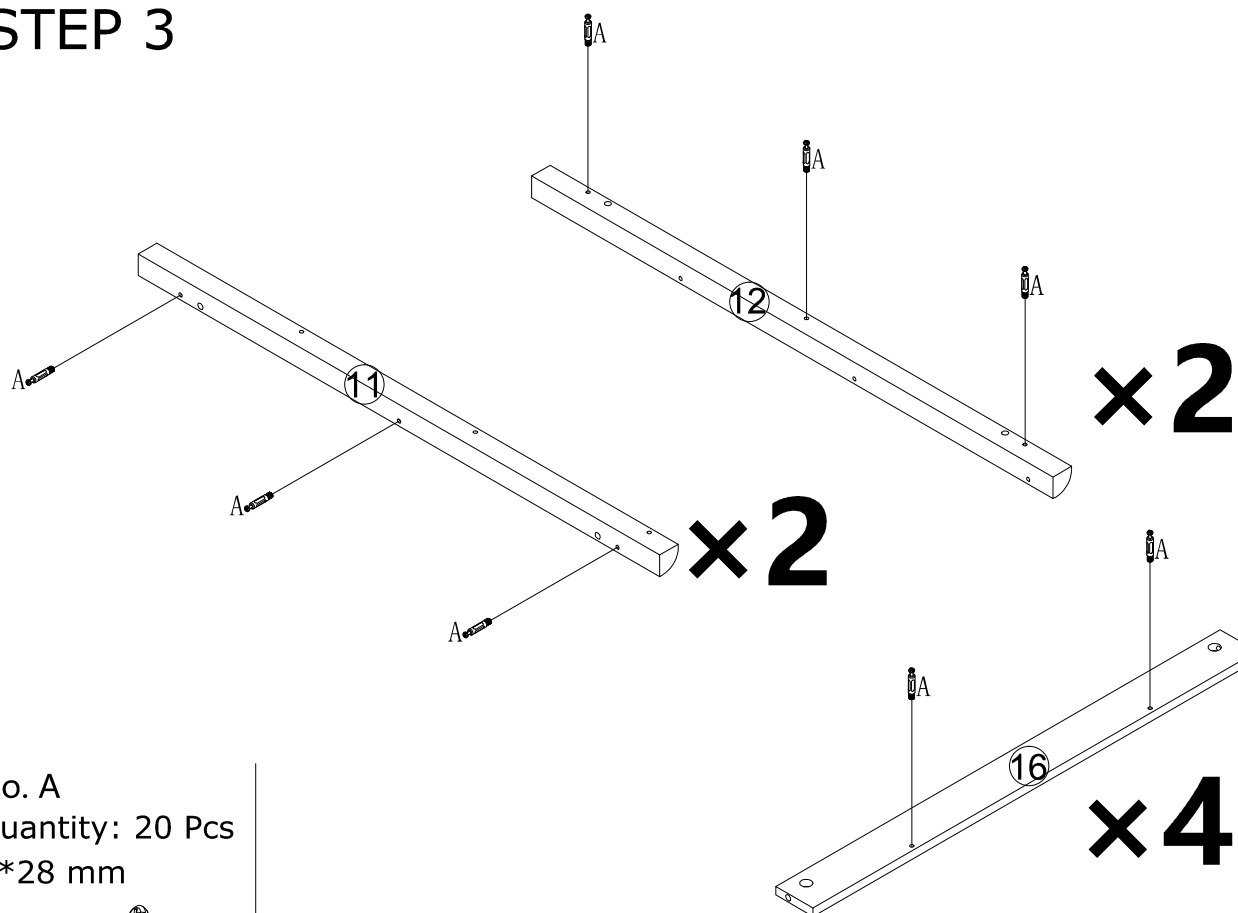

STEP 4

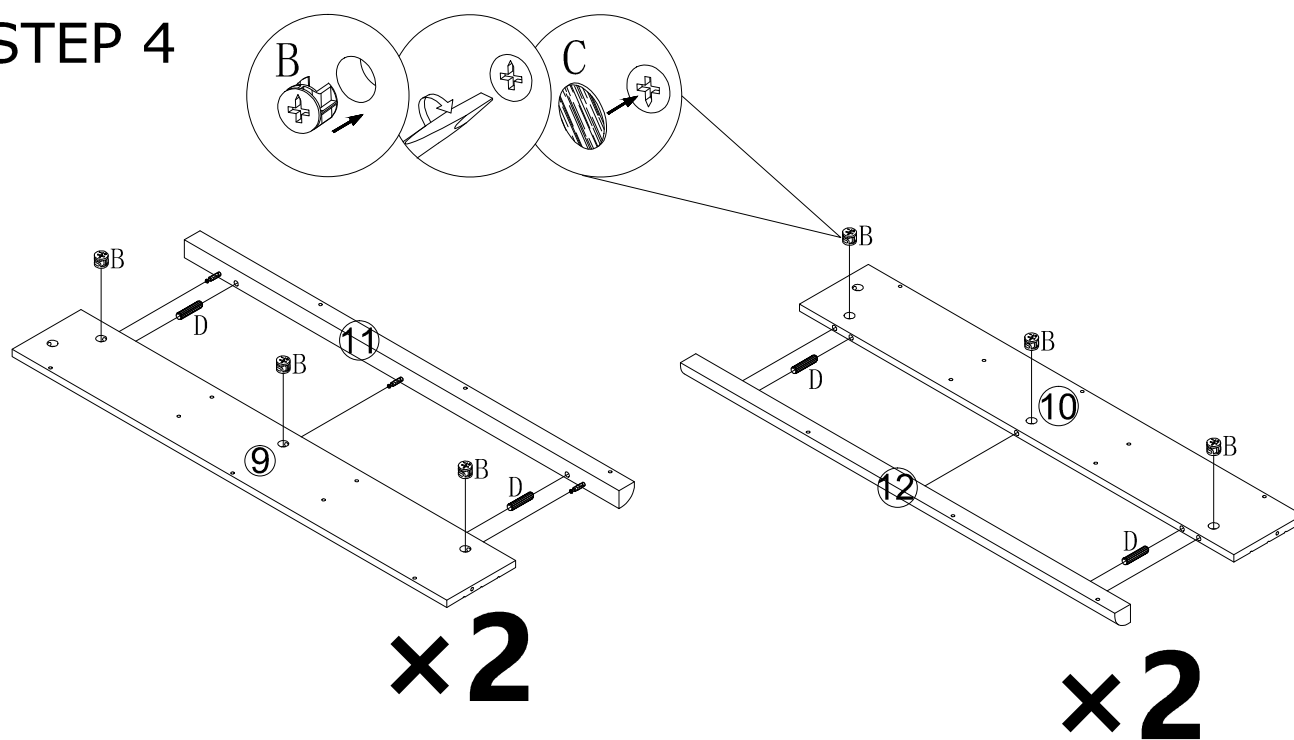

STEP 5

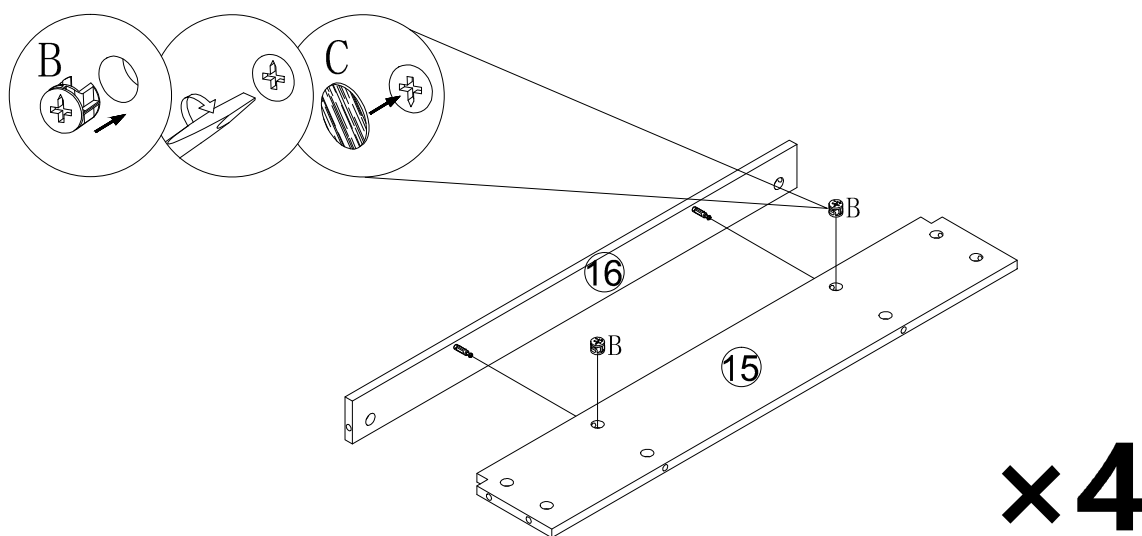


No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20




STEP 6

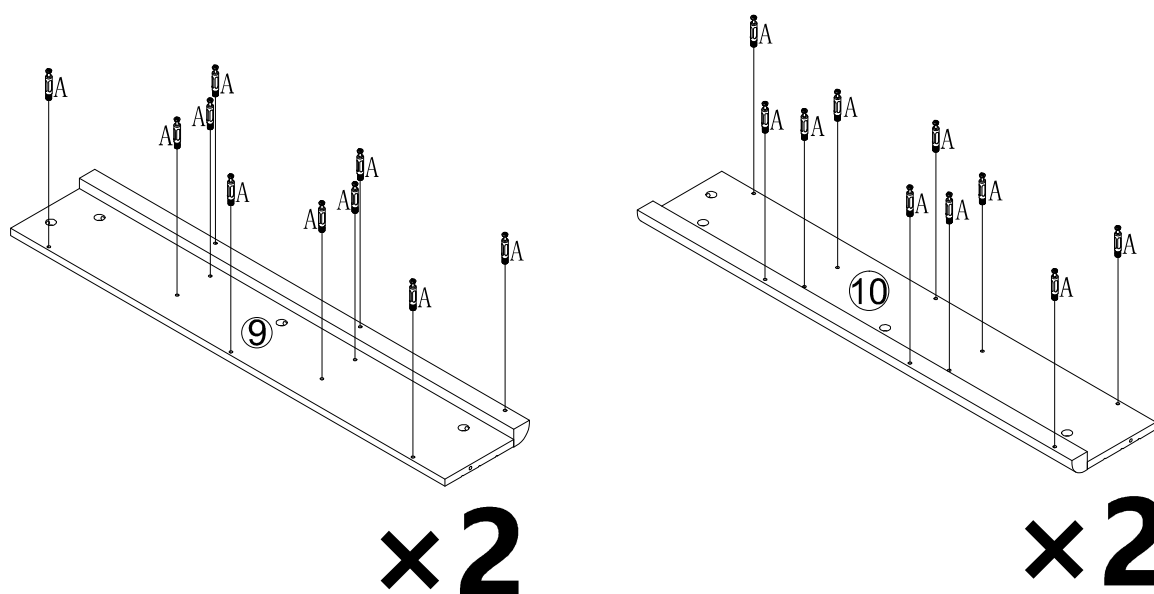


No. A
Quantity: 40 Pcs
8*28 mm




STEP 7

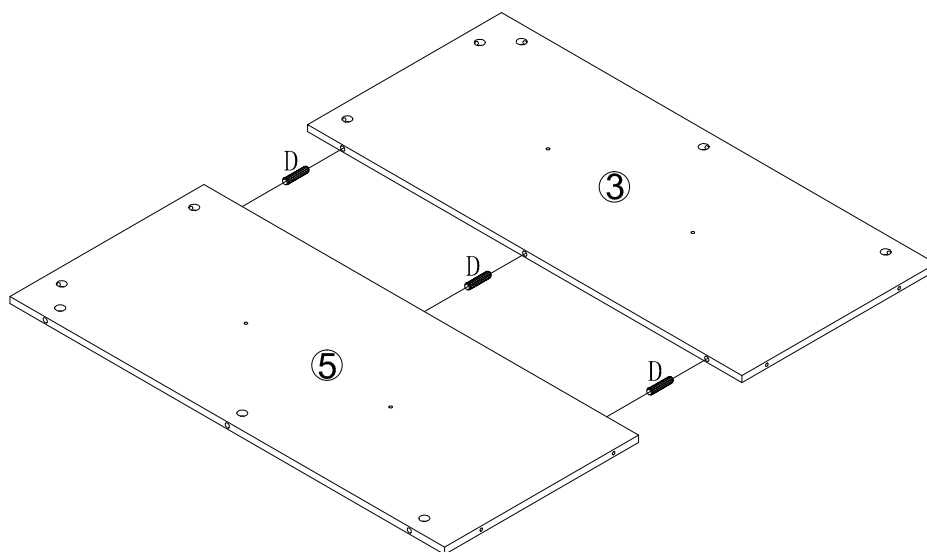


No. D
Quantity: 3 Pcs
8*30mm



STEP 8

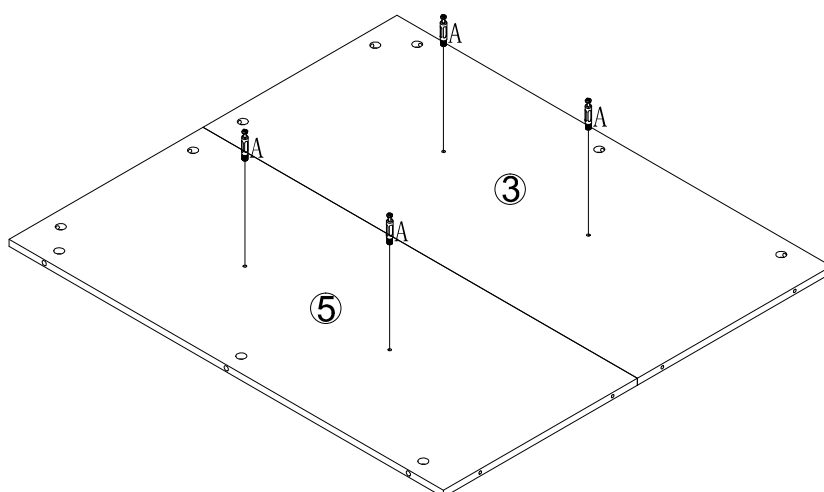

No. A
Quantity: 4 Pcs
8*28 mm




STEP 9

No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20

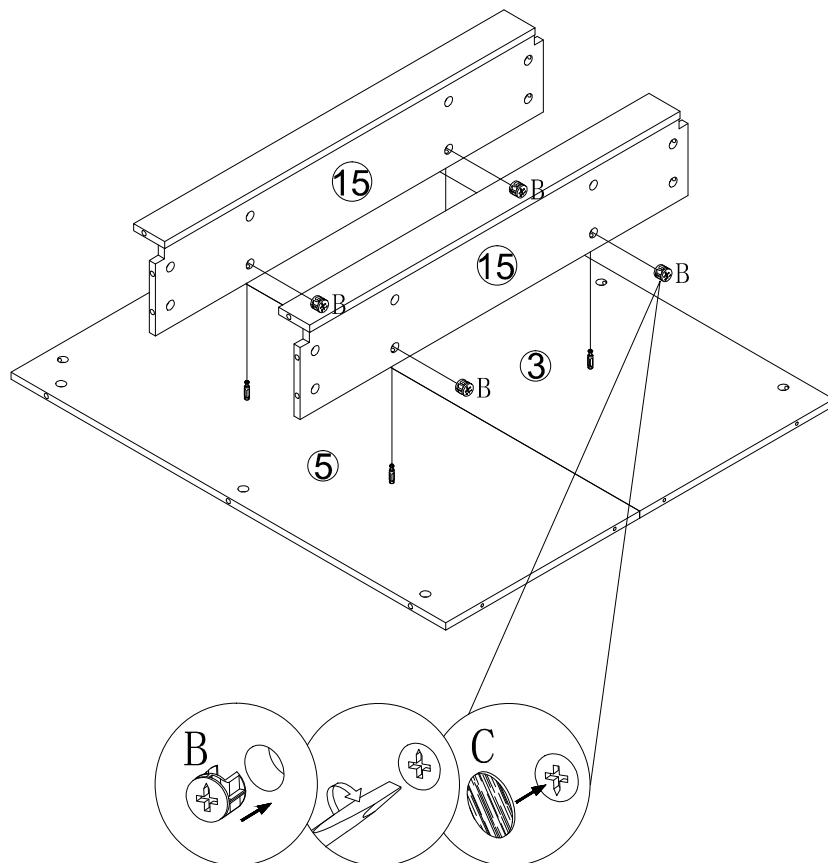


STEP 10

No. B
Quantity: 10 Pcs
Ø15



No. C
Quantity: 10 Pcs
Ø20

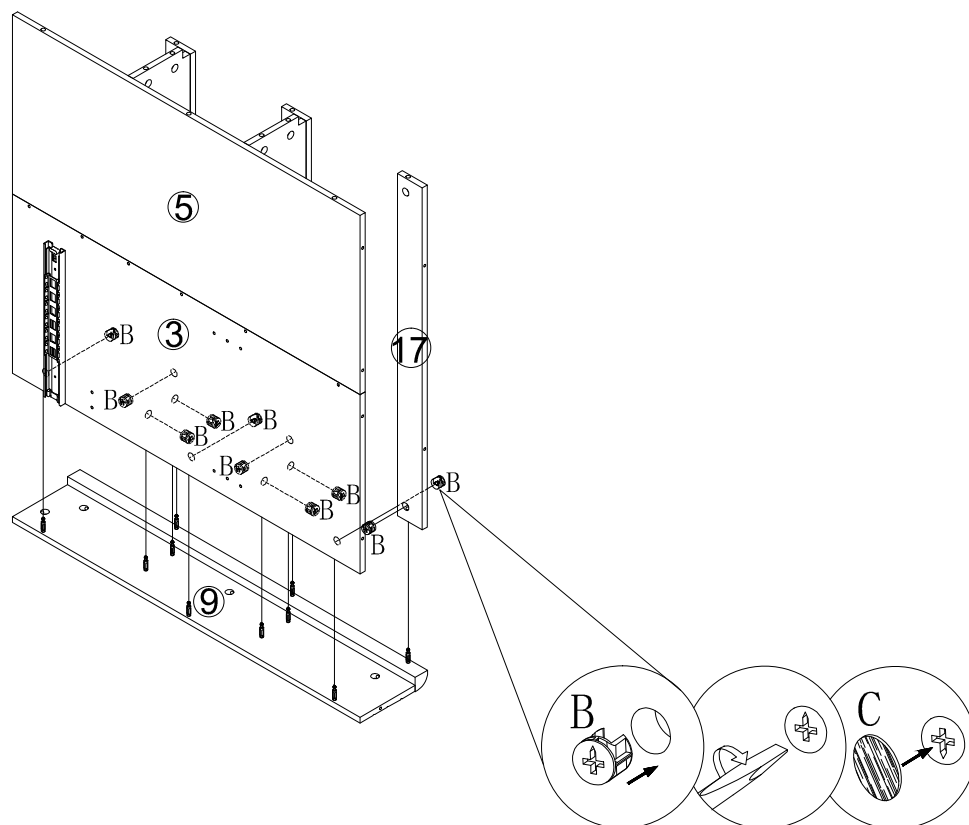


STEP 11

No. B
Quantity: 10 Pcs
Ø15





No. C
Quantity: 10 Pcs
Ø20

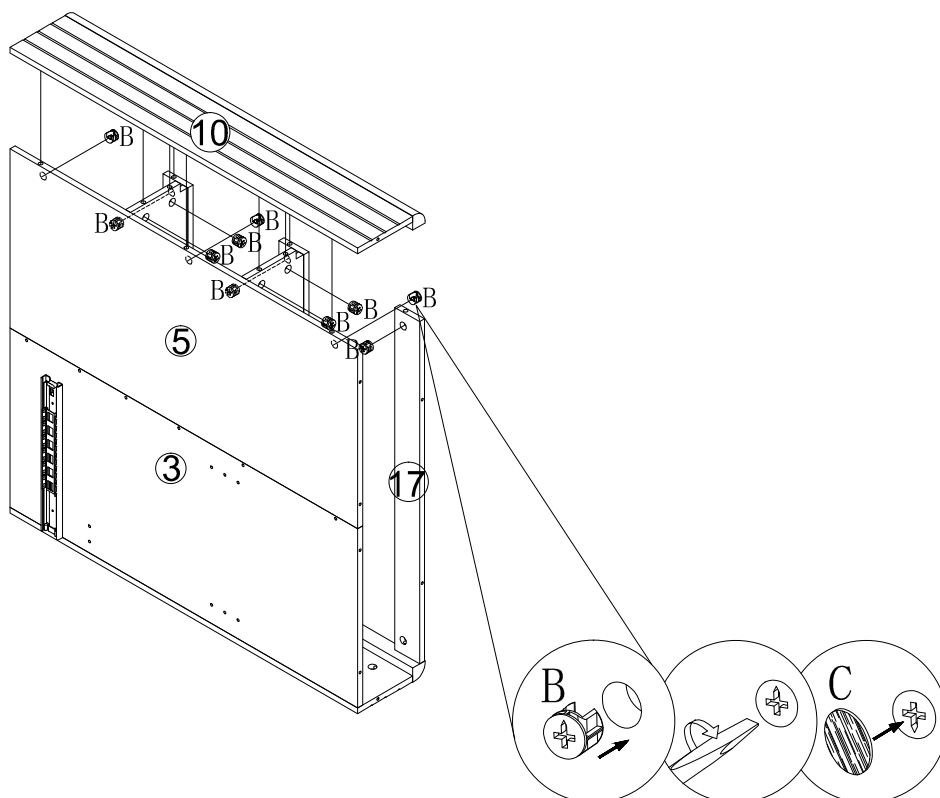

STEP 12

No. D
Quantity: 3 Pcs
8*30mm

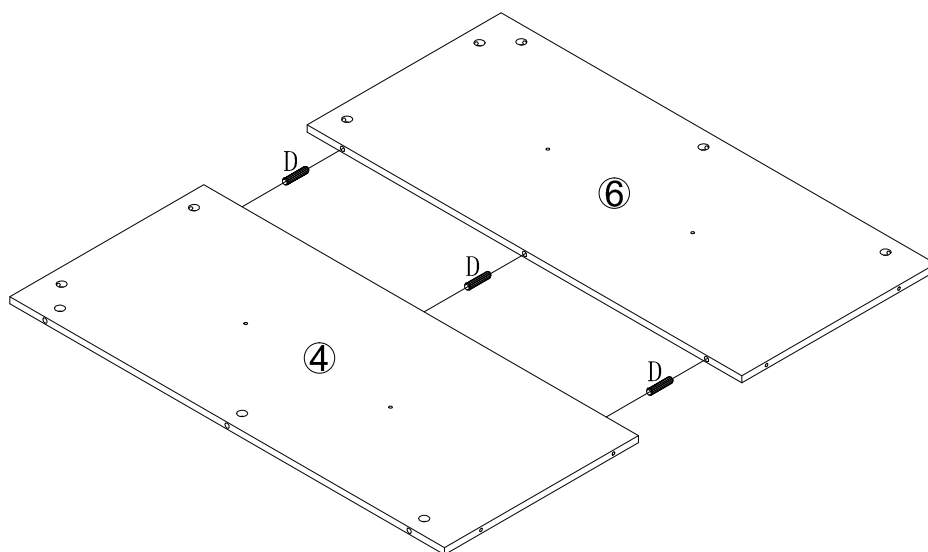



STEP 13

No. H
Quantity: 8 Pcs
M6*50mm





No. L
Quantity: 1 Pc
4#

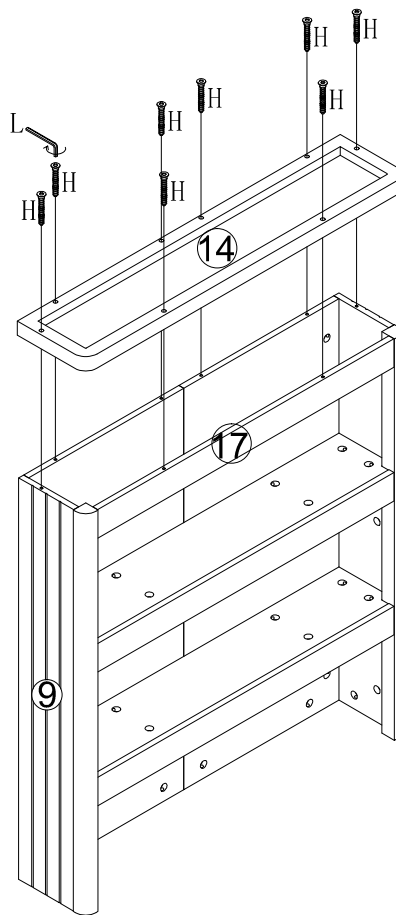


STEP 14

No. A
Quantity: 4 Pcs
8*28 mm

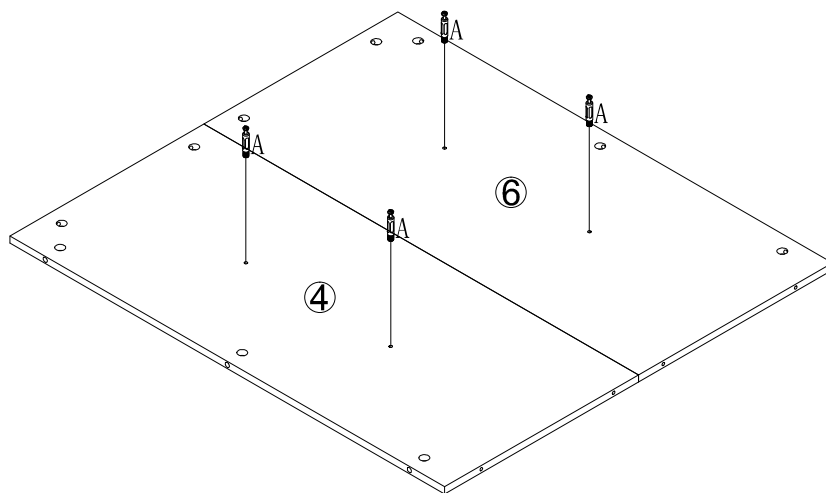

STEP 15

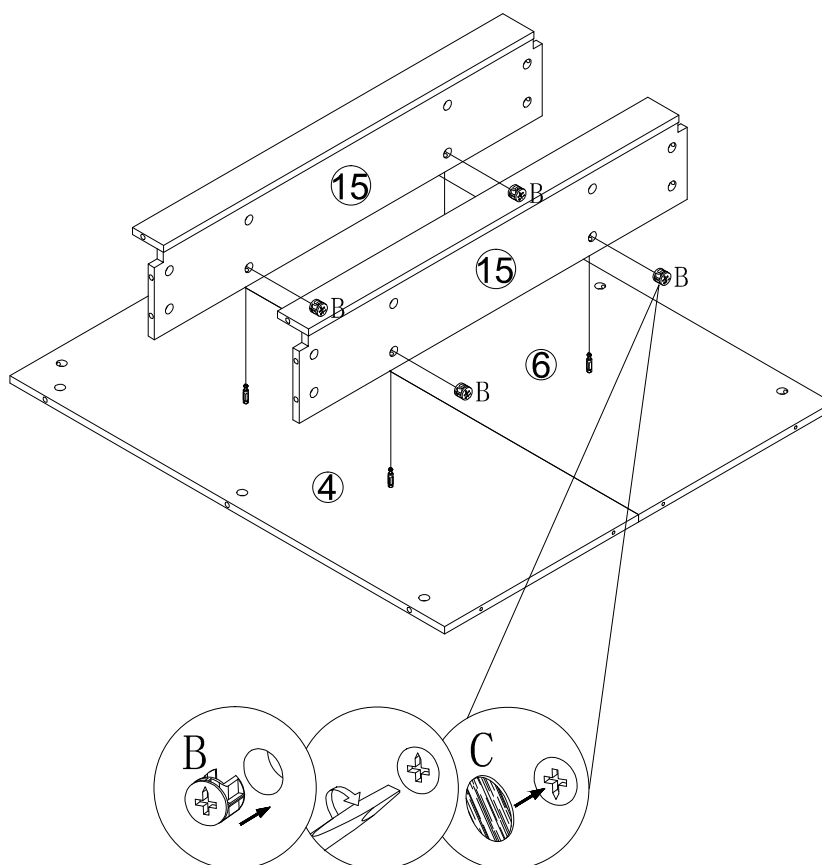


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



STEP 16

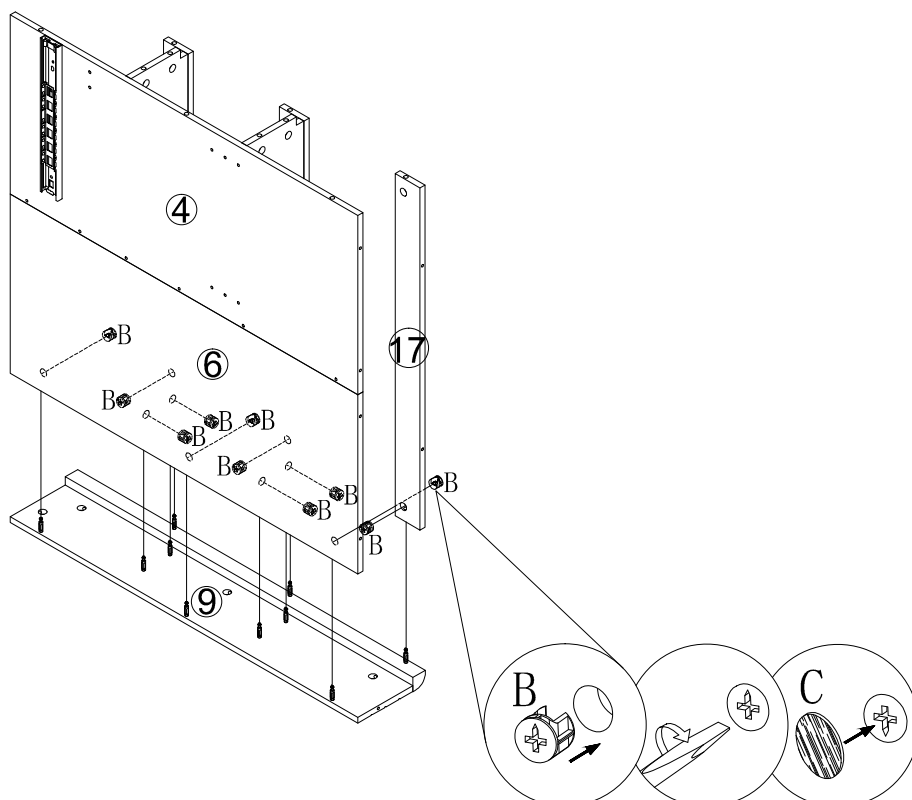

No. B
Quantity: 10 Pcs
Ø15



No. C
Quantity: 10 Pcs
Ø20




STEP 17

No. B
Quantity: 10 Pcs
Ø15



No. C
Quantity: 10 Pcs
Ø20


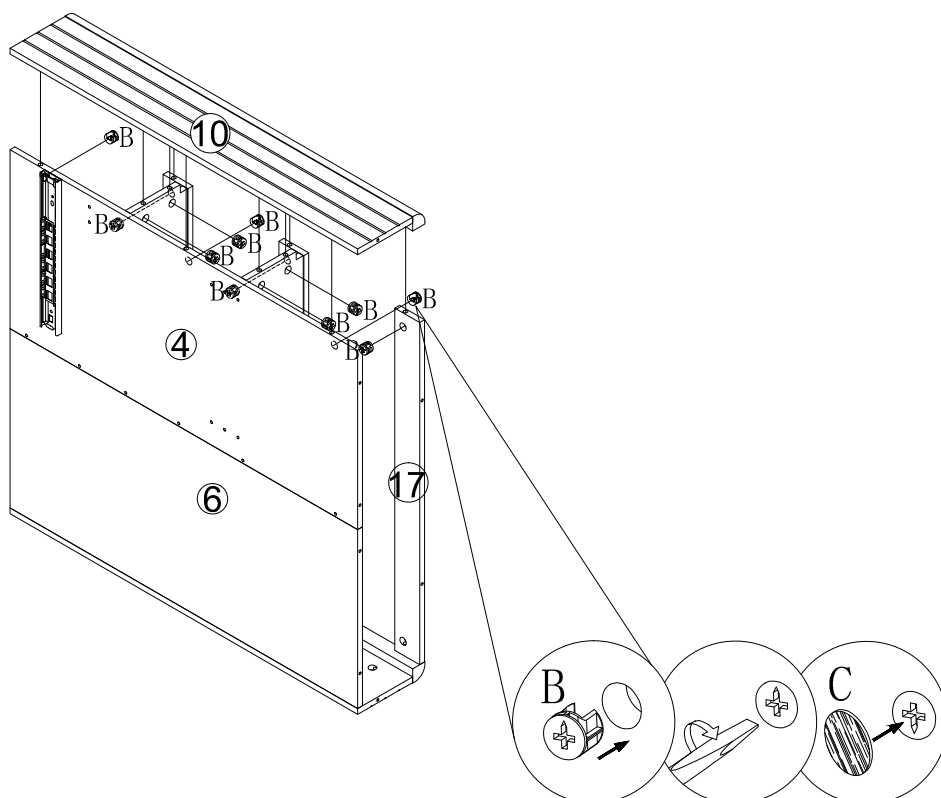


STEP 18

No. H
Quantity: 8 Pcs
M6*50mm




No. L
Quantity: 1 Pc
4#

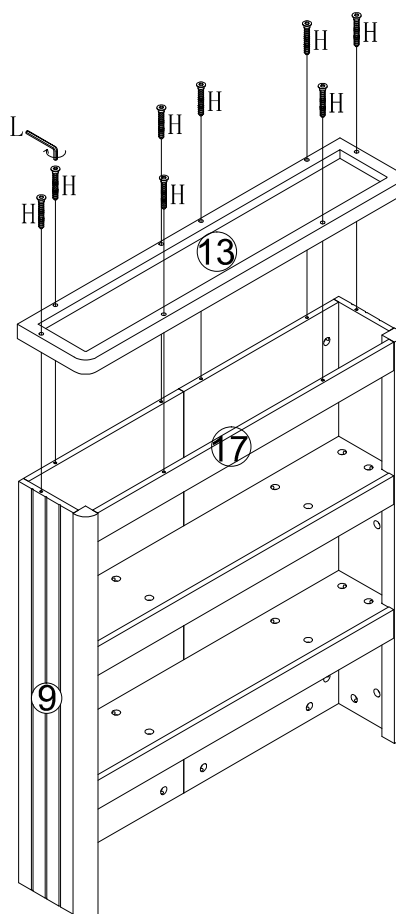

STEP 19



No. D
Quantity: 1 Pcs
8*30mm



No. H
Quantity: 2 Pcs
M6*40mm





No. L
Quantity: 1 Pc
4#

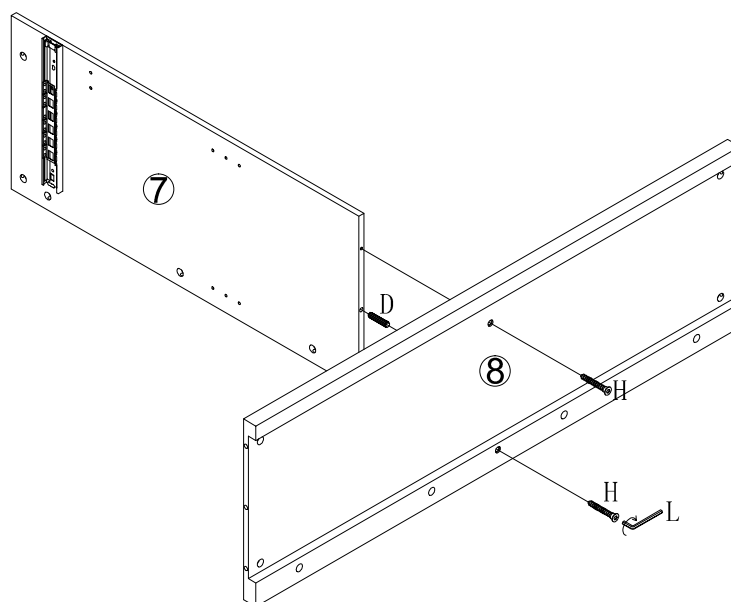


STEP 20

No. D
Quantity: 4 Pcs
8*30mm

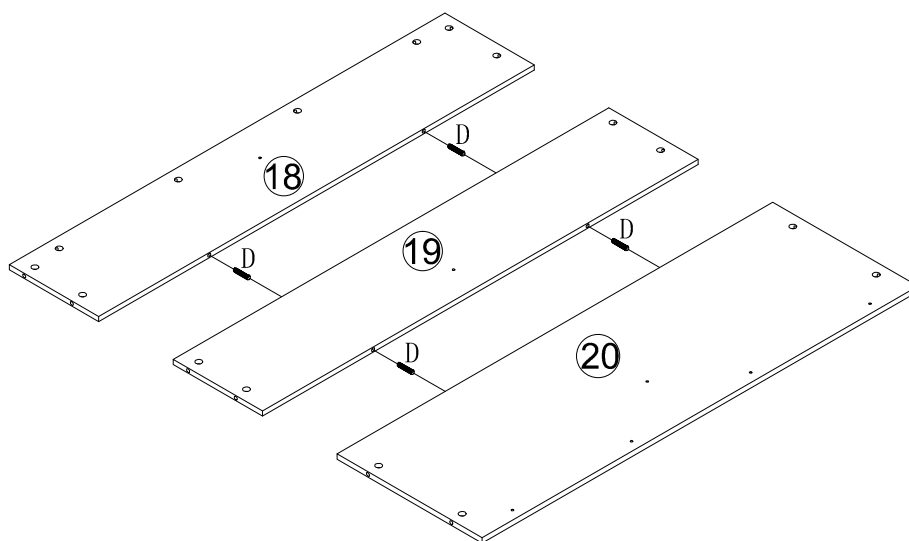


STEP 21

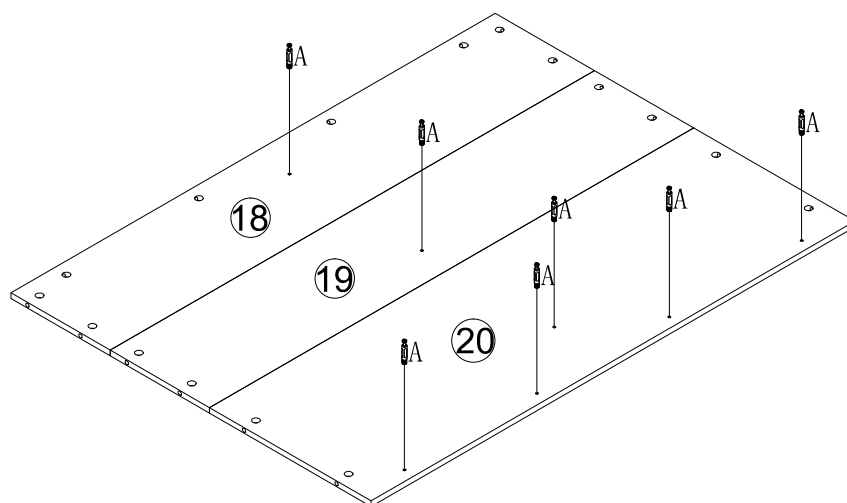

No. A
Quantity: 7 Pcs
8*28 mm




STEP 22

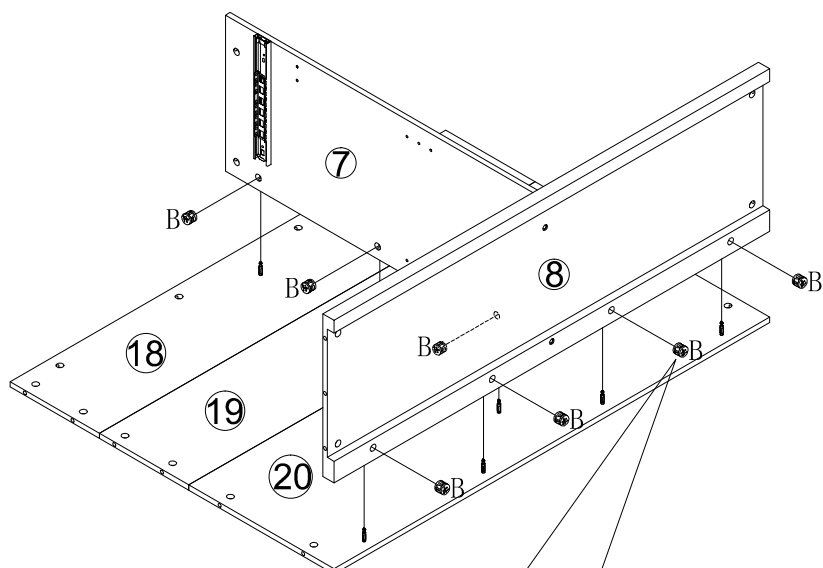


No. B
Quantity: 7 Pcs
Ø15




No. C
Quantity: 7 Pcs
Ø20

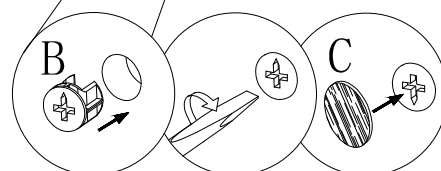

STEP 23

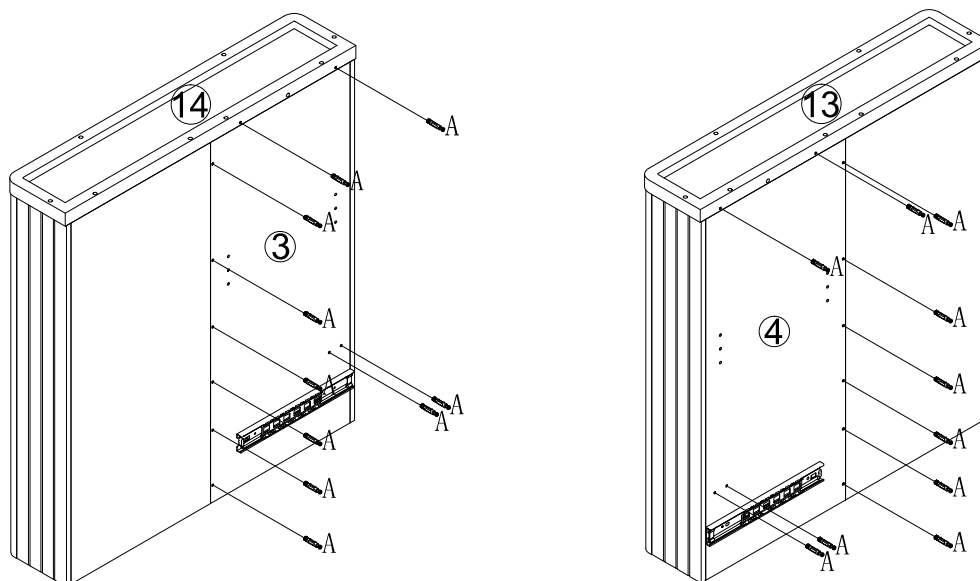


No. A
Quantity: 20 Pcs
8*28 mm



STEP 24

Please note that one side of the panel is suspended during installation, so please support the top panel with your hand.

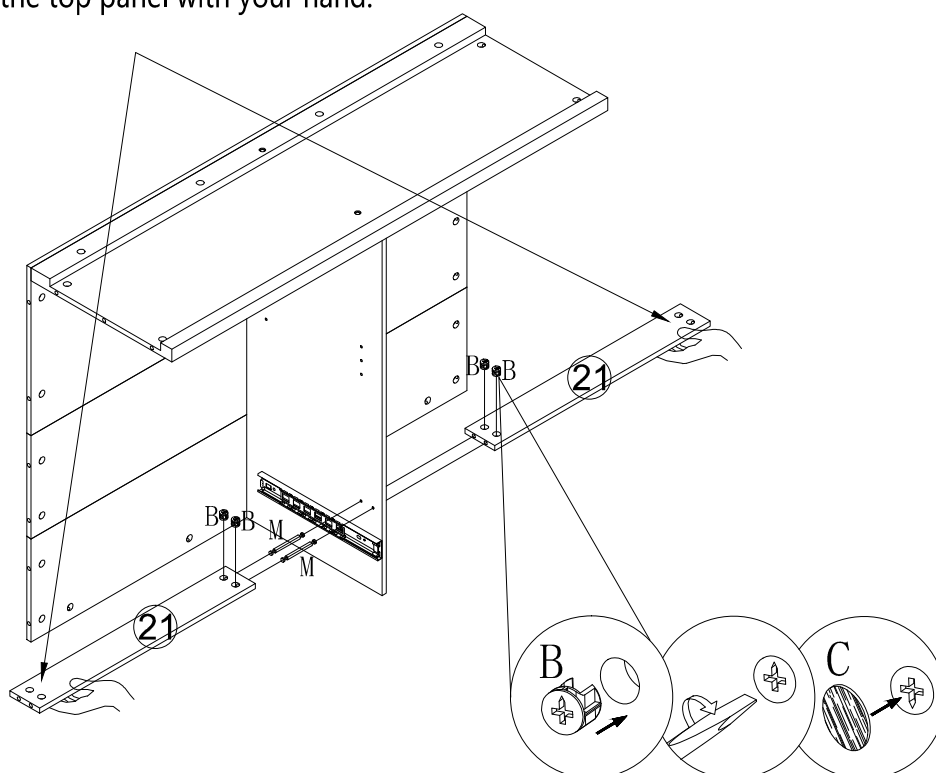


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. M
Quantity: 2 Pcs
6*64mm



STEP 25

Please note that one side of the panel is suspended during installation, so please support the top panel with your hand.



No. B
Quantity: 10 Pcs
Ø15



No. C
Quantity: 10 Pcs
Ø20



No. D
Quantity: 1 Pcs
8*30mm

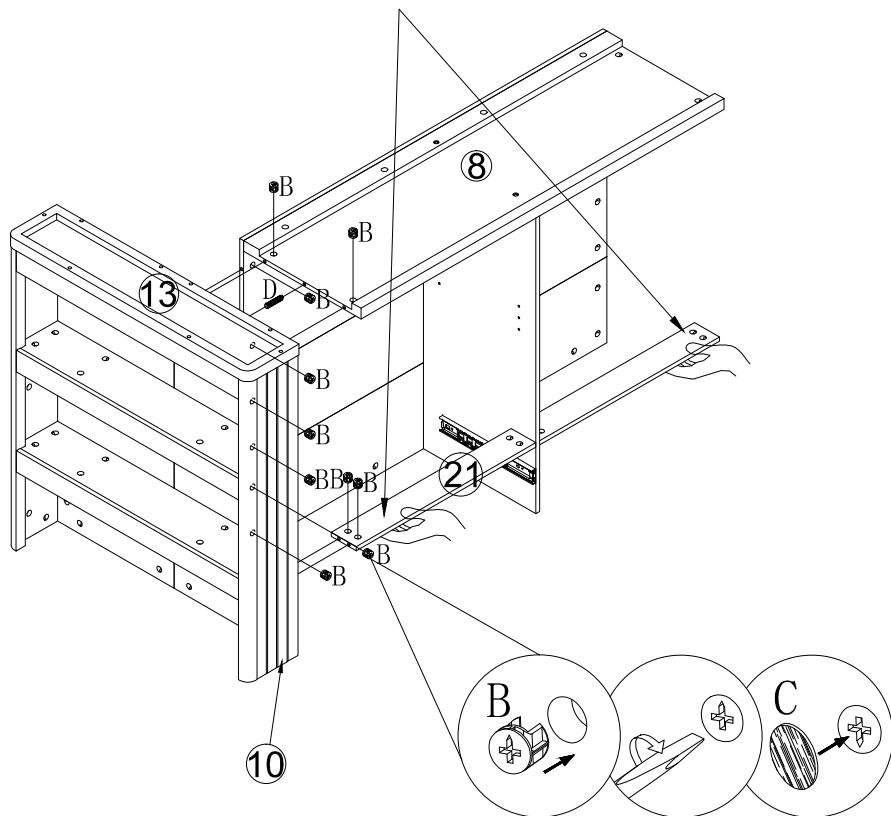

STEP 26

Please note that one side of the panel is suspended during installation, so please support the top panel with your hand.



No. B
Quantity: 10 Pcs
Ø15





No. C
Quantity: 10 Pcs
Ø20




No. D
Quantity: 1 Pcs
8*30mm

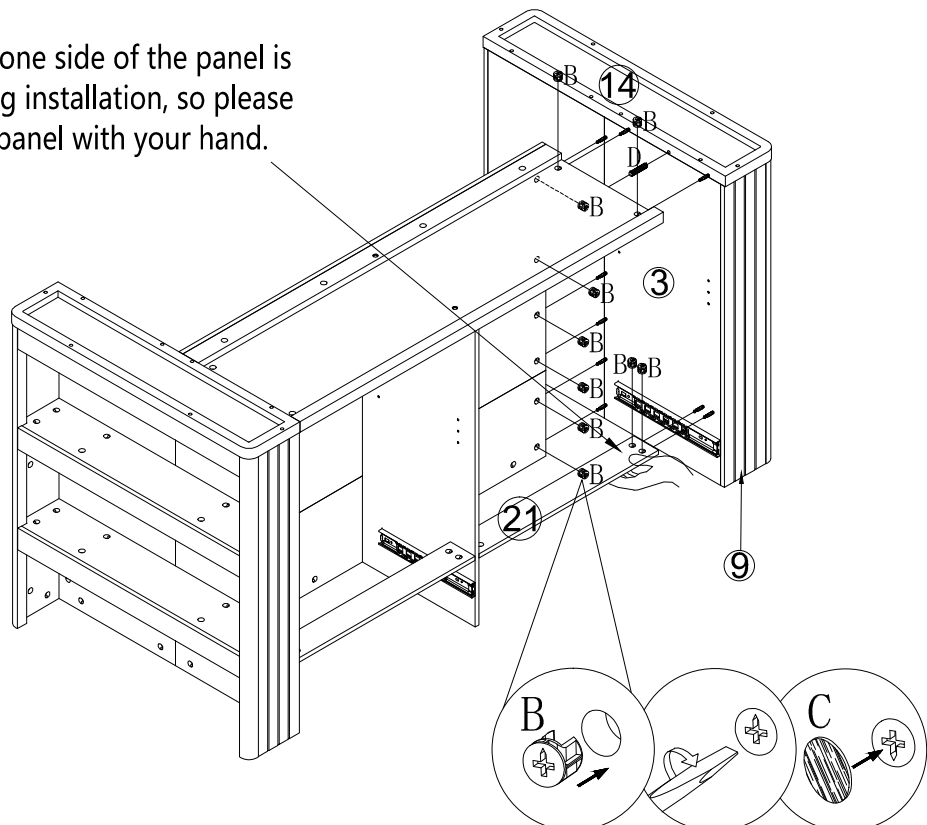

STEP 27

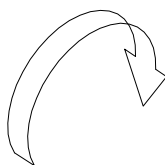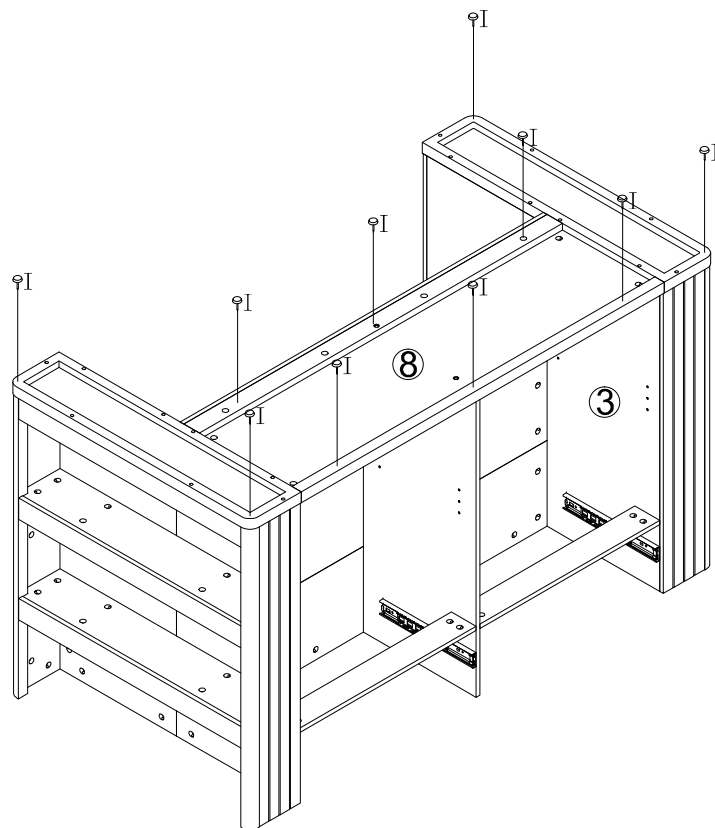


After installing the foot pads, please turn the cabinet over. The turning must be done by two or more people together.

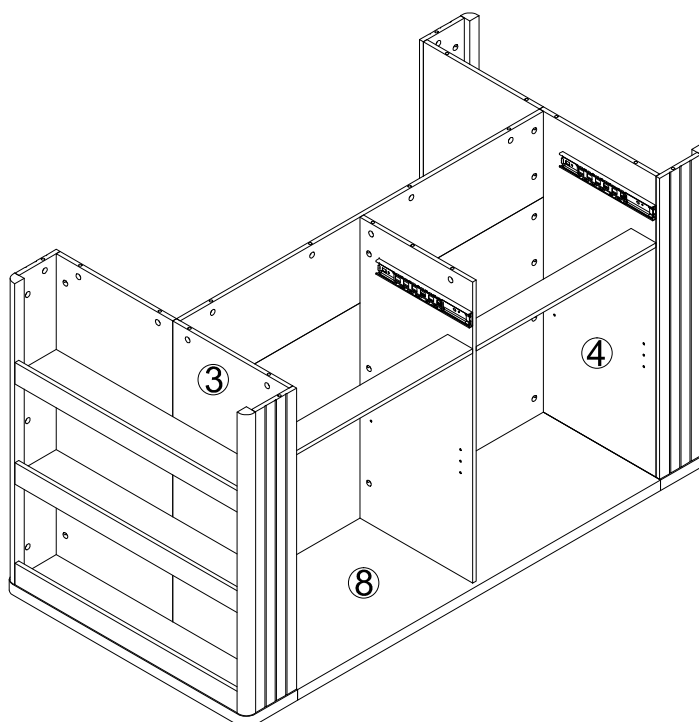


No. I
Quantity: 10 Pcs
Ø15




STEP 28

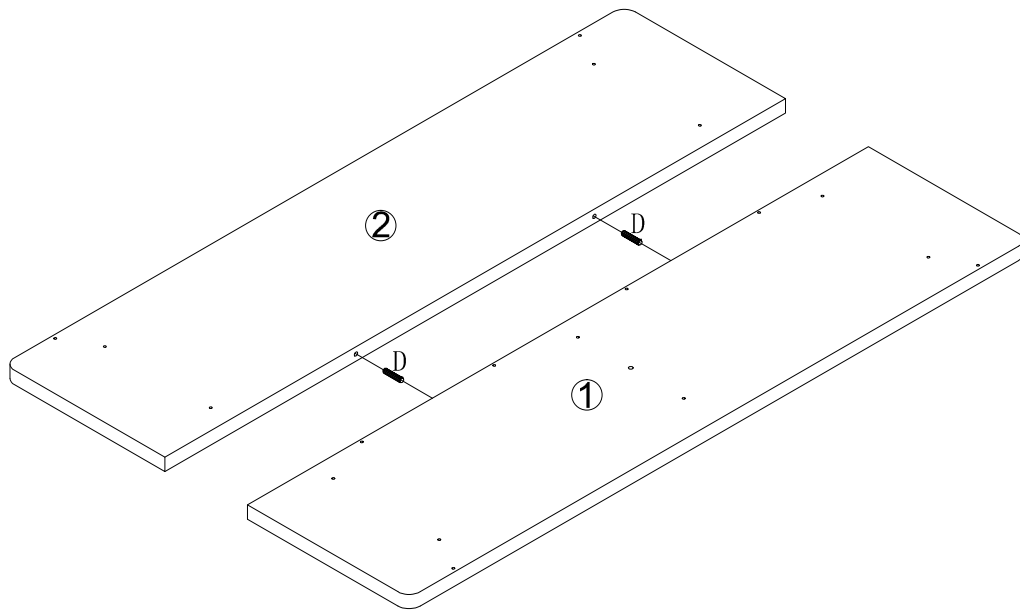

No. D
Quantity: 2 Pcs
8*30mm



STEP 29

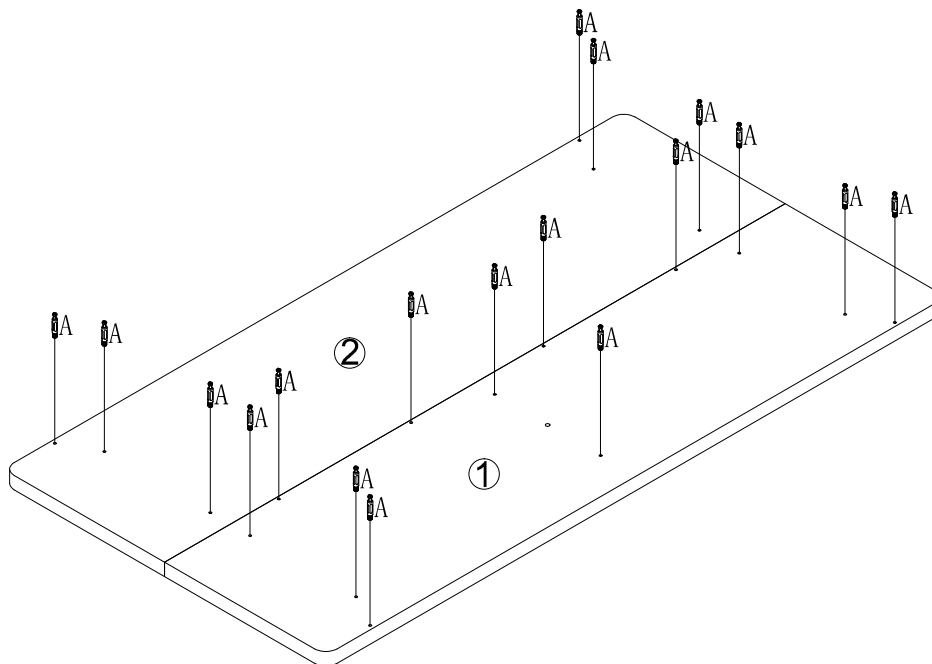

No. A
Quantity: 18 Pcs
8*28 mm



STEP 30



No. B
Quantity: 18 Pcs
Ø15



No. C
Quantity: 18 Pcs
Ø20




No. D
Quantity: 1 Pcs
8*30mm

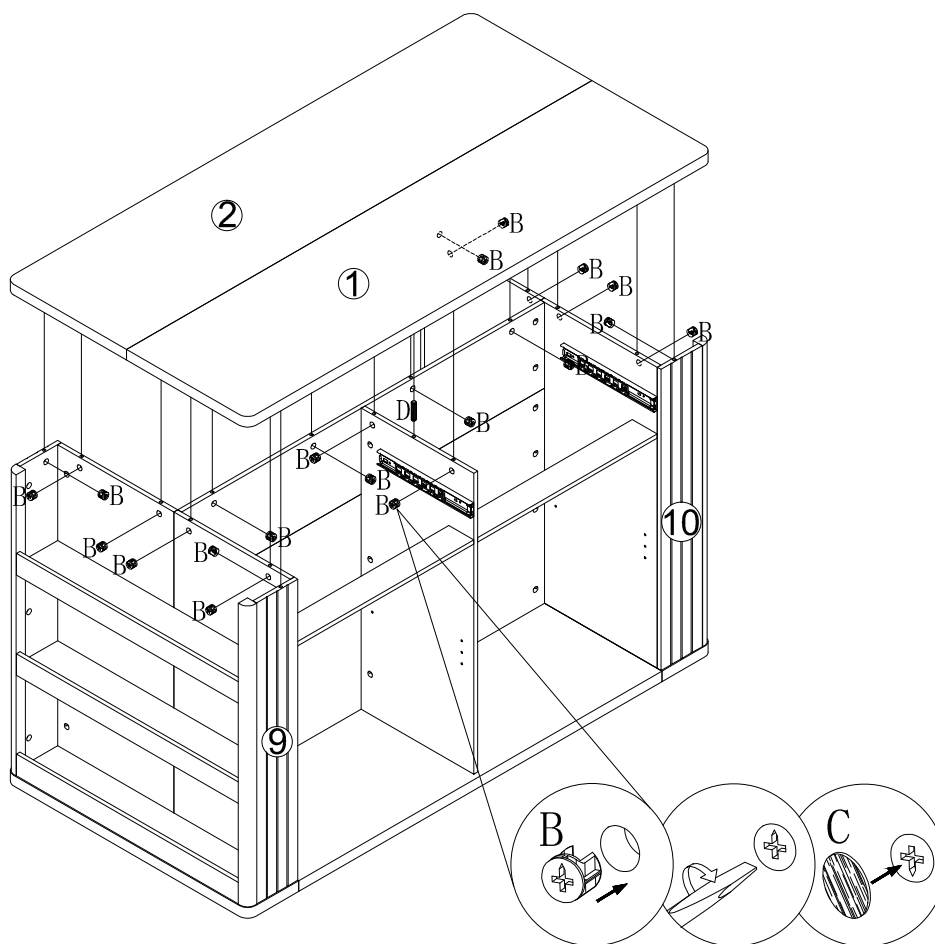


STEP 31


No. J
Quantity: 8 Pcs
M5*15mm

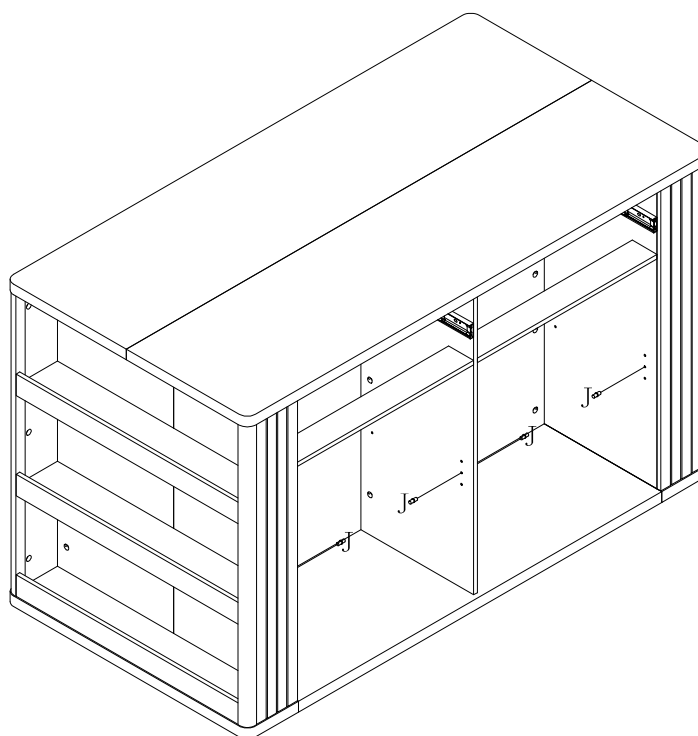

STEP 32

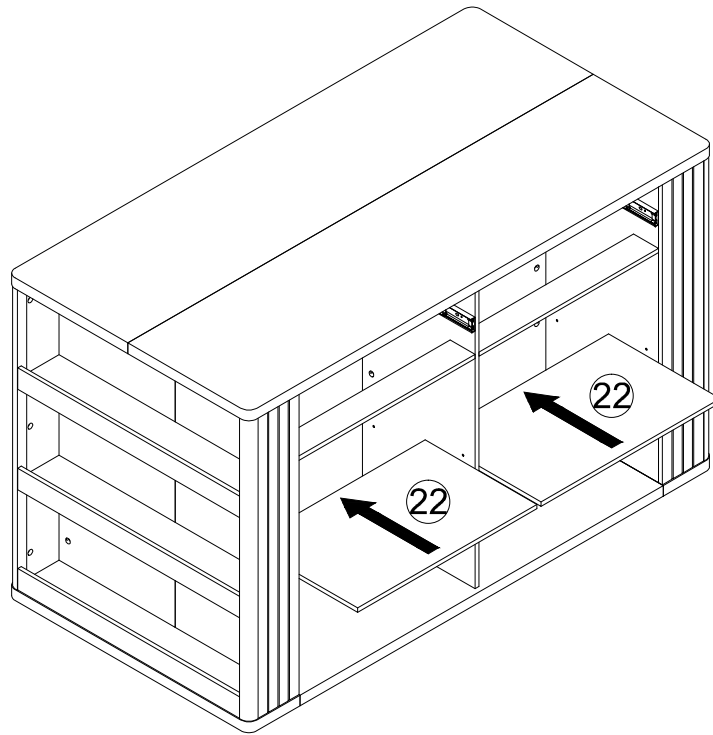

STEP 33

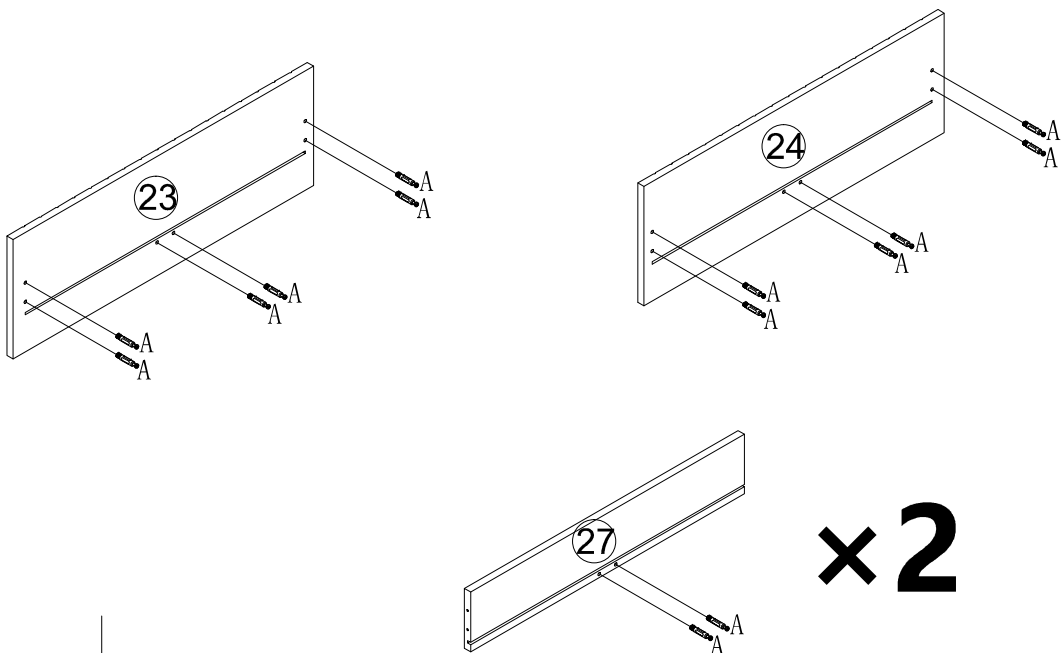

No. A
Quantity: 16 Pcs
8*28 mm



STEP 34



No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. G
Quantity: 8 Pcs
M4*30mm

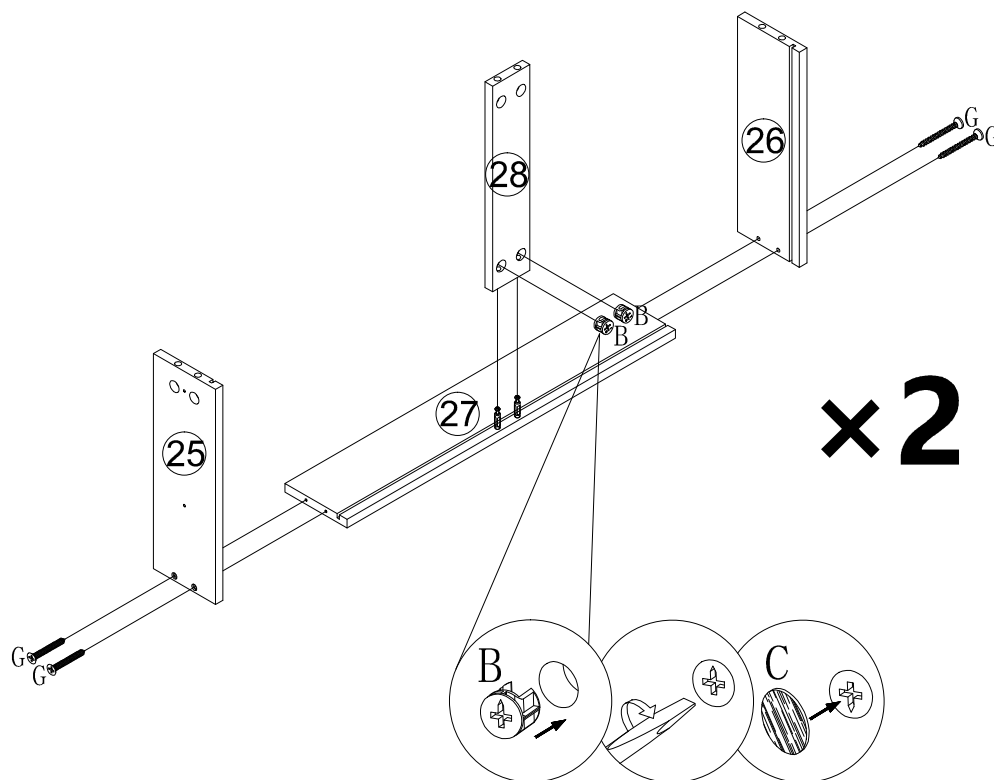

STEP 35

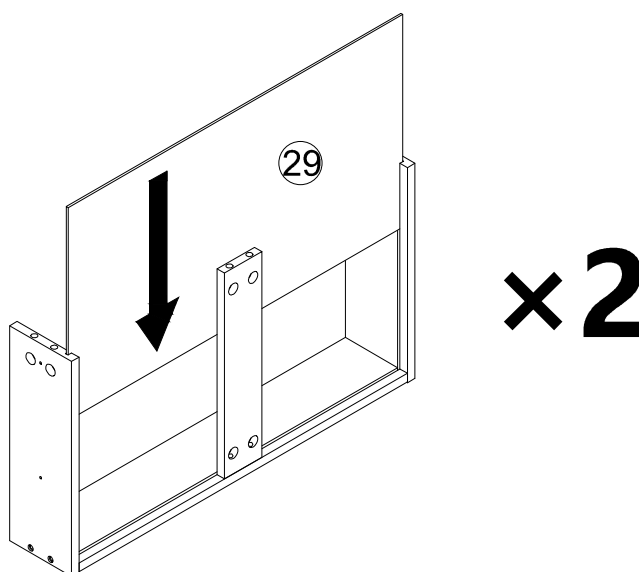



STEP 36

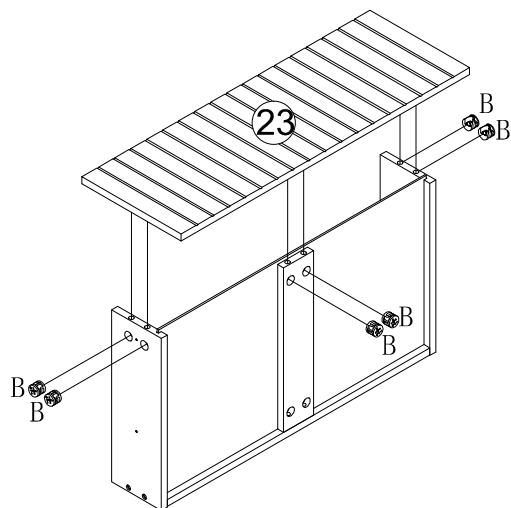


No. B
Quantity: 12 Pcs
Ø15




No. C
Quantity: 12 Pcs
Ø20

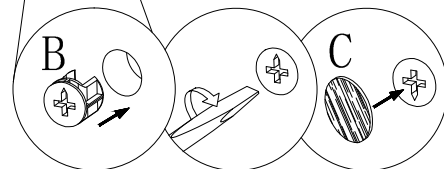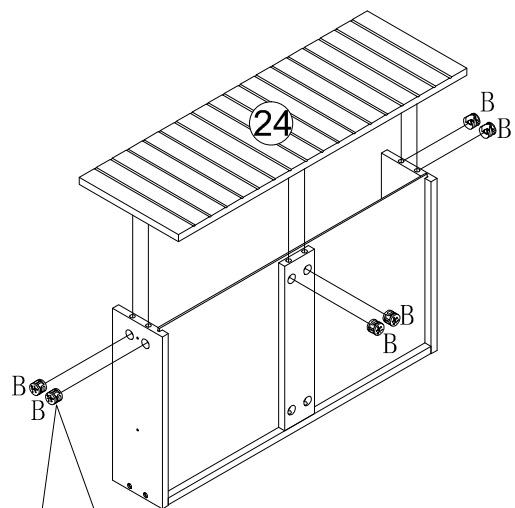

STEP 37

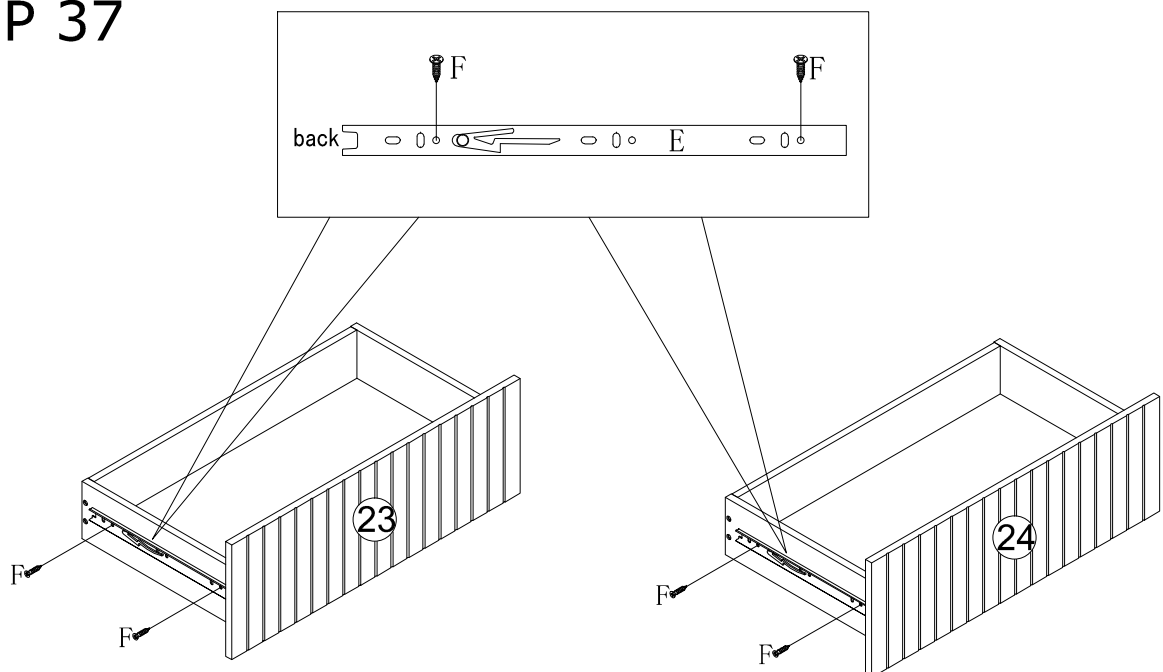


No. E
Quantity: 2 Sets
10"




No. F
Quantity: 8 Pcs
M3.5*12mm



STEP 38

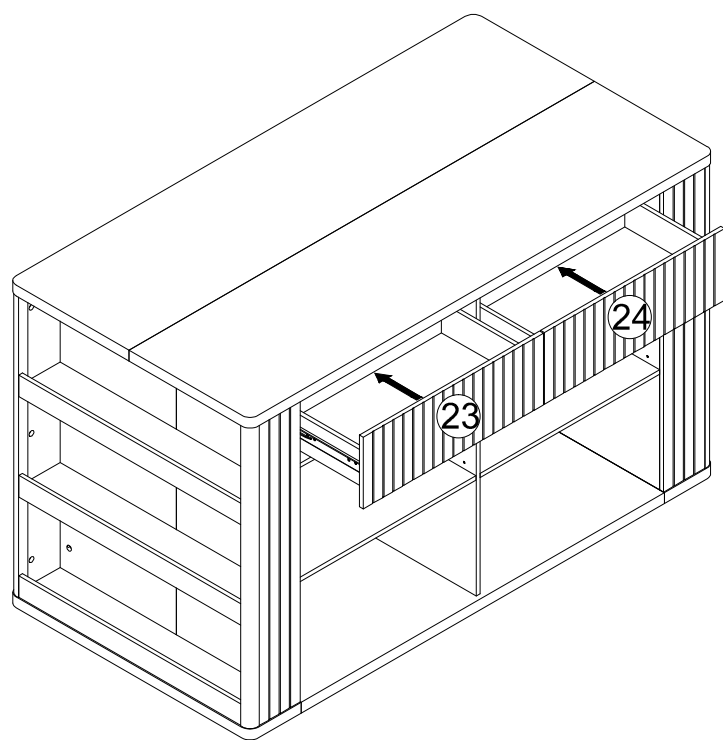

STEP 39

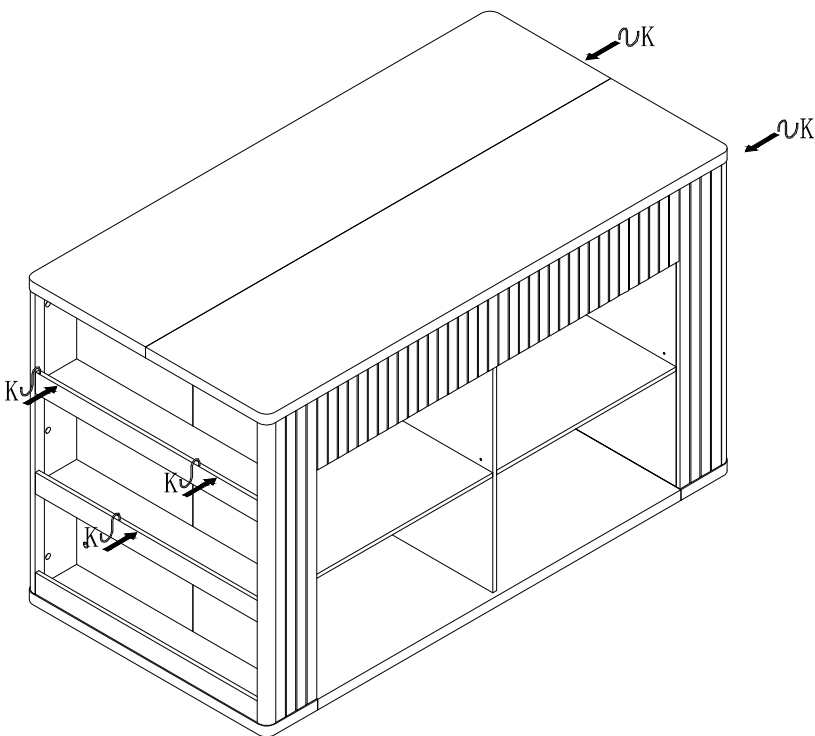

No. K
Quantity: 5 Pcs

