


ART HANGING INSTRUCTION

RECOMMENDED TOOLS

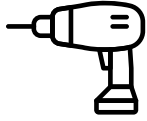


Drill



Tape Measure



Hammer



Level




Pencil


HARDWARE SUPPLIED



Blue Anchor




Screws



Bumpers

MOUNT ART TO DRYWALL SURFACE AS FOLLOWS

1. Mark wall anchor locations; make certain the marks are level and spaced apart as necessary

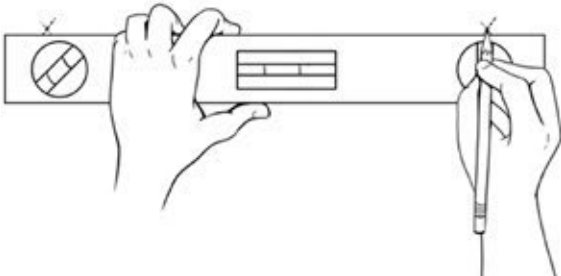

2. Drill holes, 3/16" diameter through drywall




3. Tap the supplied drywall anchors firmly into drilled holes

4. Carefully drive the drywall screws into the anchors, leaving the screw heads protruding from the wall surface as follows:



5. To prevent your picture from marking the wall & keep it hanging level, apply adhesive bumpers to bottom corners on back of the frame.

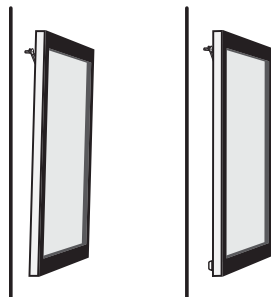

6. Hang your art.

