




Aluminium Greenhouse

ASSEMBLY INSTRUCTIONS

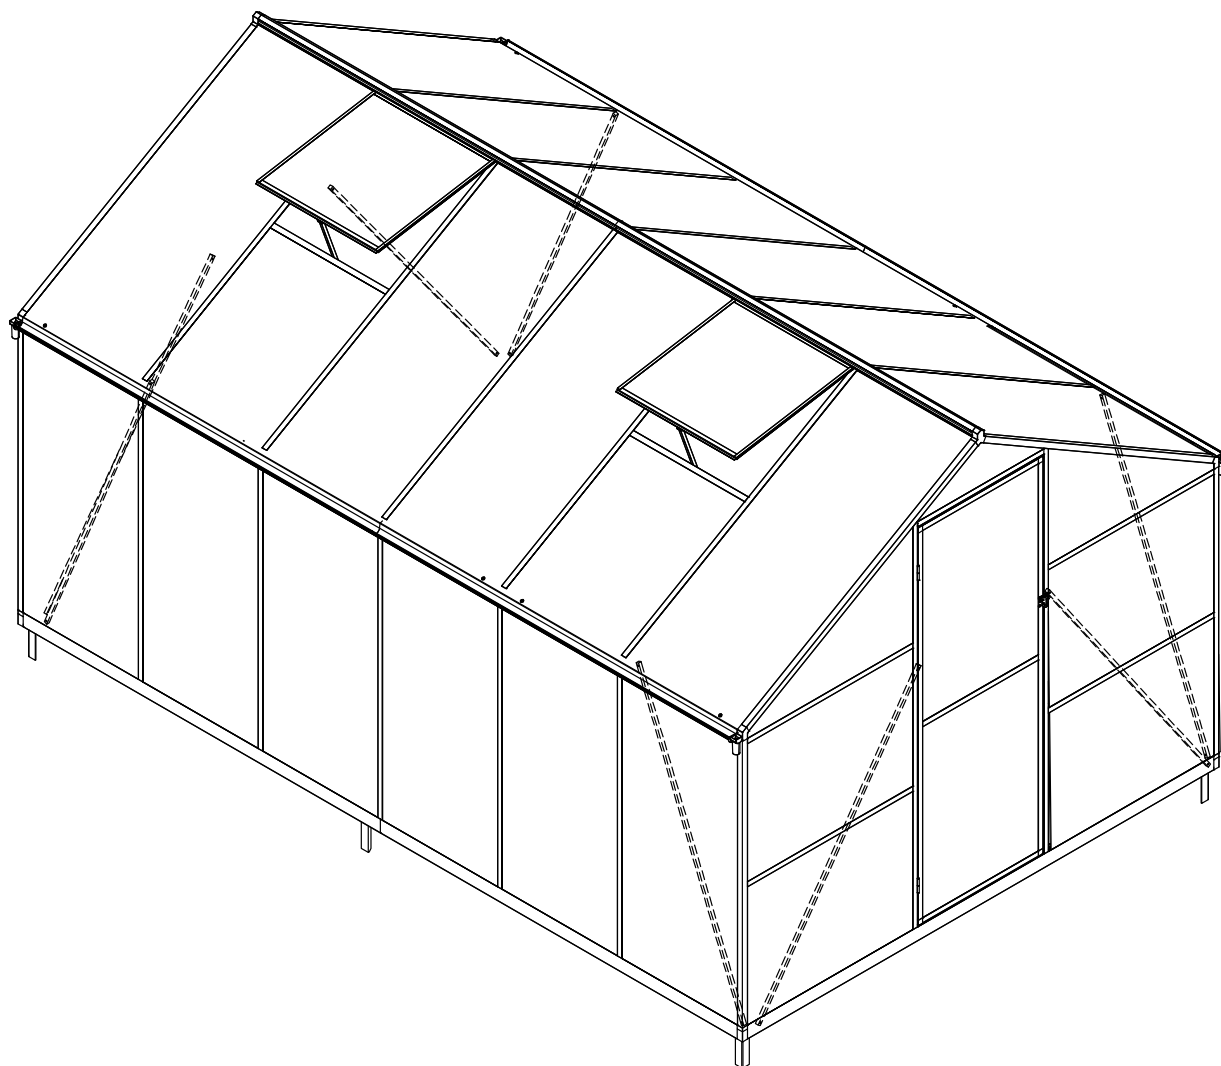

VIWAT@cnrrx.net

Please read all instructions carefully before assembly.
It is best to familiarize yourself with the parts and
collate the appropriate parts for each step.










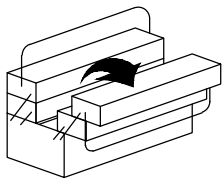









Aluminum Parts :

No.	Picture	Qty.
A1-1		x2
A1-2		x2
A2-1		x2
A2-2		x2
A3-1		x2
A3-2		x2
A4		x2
A5-1		x2
A5-2		x2
A6-1		x1


No.	Picture	Qty.
A6-2		x1
A7-1		x1
A7-2		x1
A8-1		x1
A8-2		x1
A9		x1
A10-1		x2
A10-2		x2
A11-1		x1
A11-2		x1

Aluminum Parts :

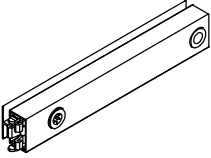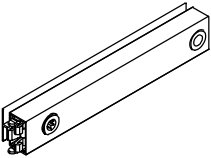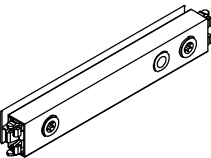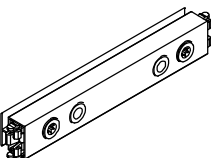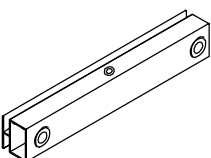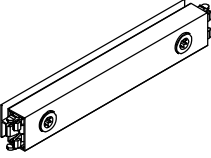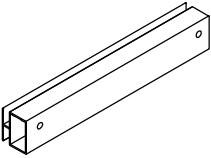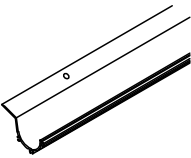No.	Picture	Qty.
A12		x4
A13		x4
A15		x10
A16		x6
A17		x2
A18-1		x1
A18-2		x1
A19		x2
A20		x2
A21		x4

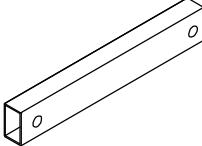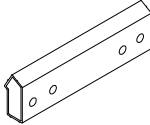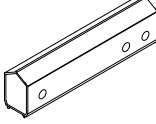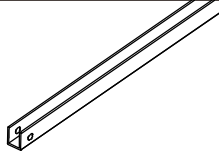No.	Picture	Qty.
A22		x4
A23		x8
A24		x2
A25		x5
A26		x10
A27		x4
A28		x2
A29		x1
A30-2		x2

Plastic Parts:

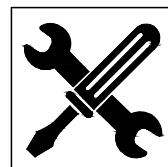

No.	Picture	Qty.
H1		x4
H2		x2
H3		x2








No.	Picture	Qty.
H4		x2
H5		x2






Hardware:

No.	Picture	Qty.	Size
H6		x22	M6x30
H7		x1	
H8		x76	M6x12
H9		x30	M6
H11		x20	St4x8
H12		x4	St5x10
H13		x16	St5x16
H14		x1	


No.	Picture	Qty.	Size
H15		x1	
H16		x2	
H17		x4	
H18		x24	M6x20
H19		x2	
H20		x2	M4X40
H21		x15	
A30-1		x2	

Twin PC Board:

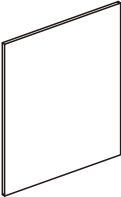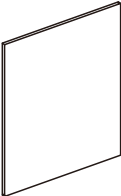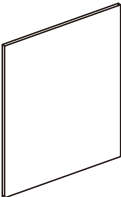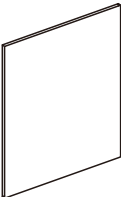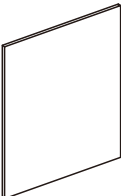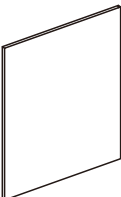
No.	Picture	Qty.
B1		4
B2		4
B3		12
B4		10
B5		2
B6		3
B7-1		1

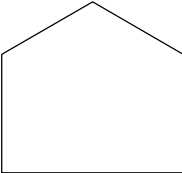No.	Picture	Qty.
B7-2		1
B8		1
B9-1		1
B9-2		1
B10		1
B11		2


The white film faces
outwards if applicable.

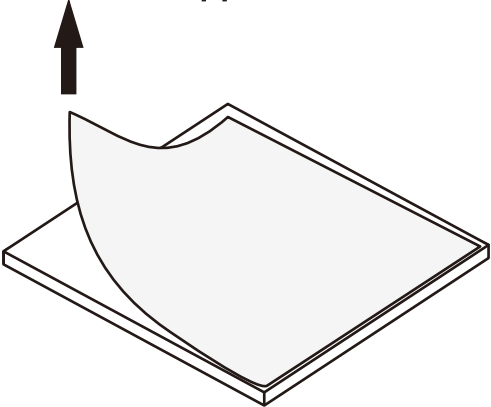


ROOF SECTION

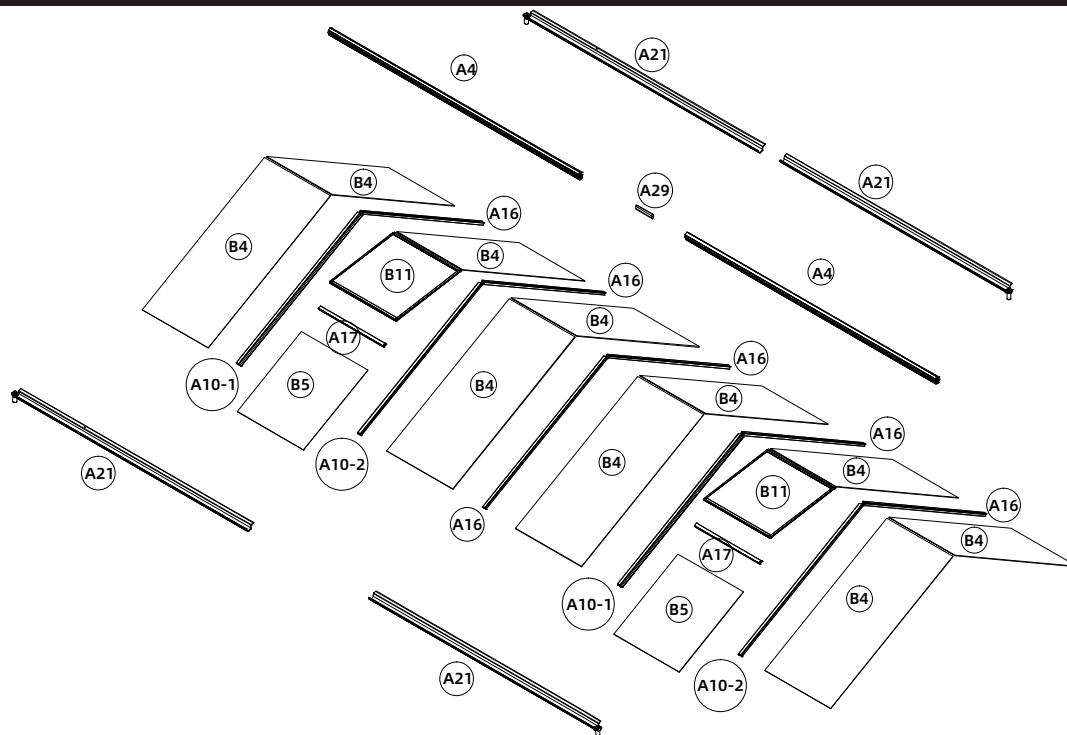

WALL SECTION


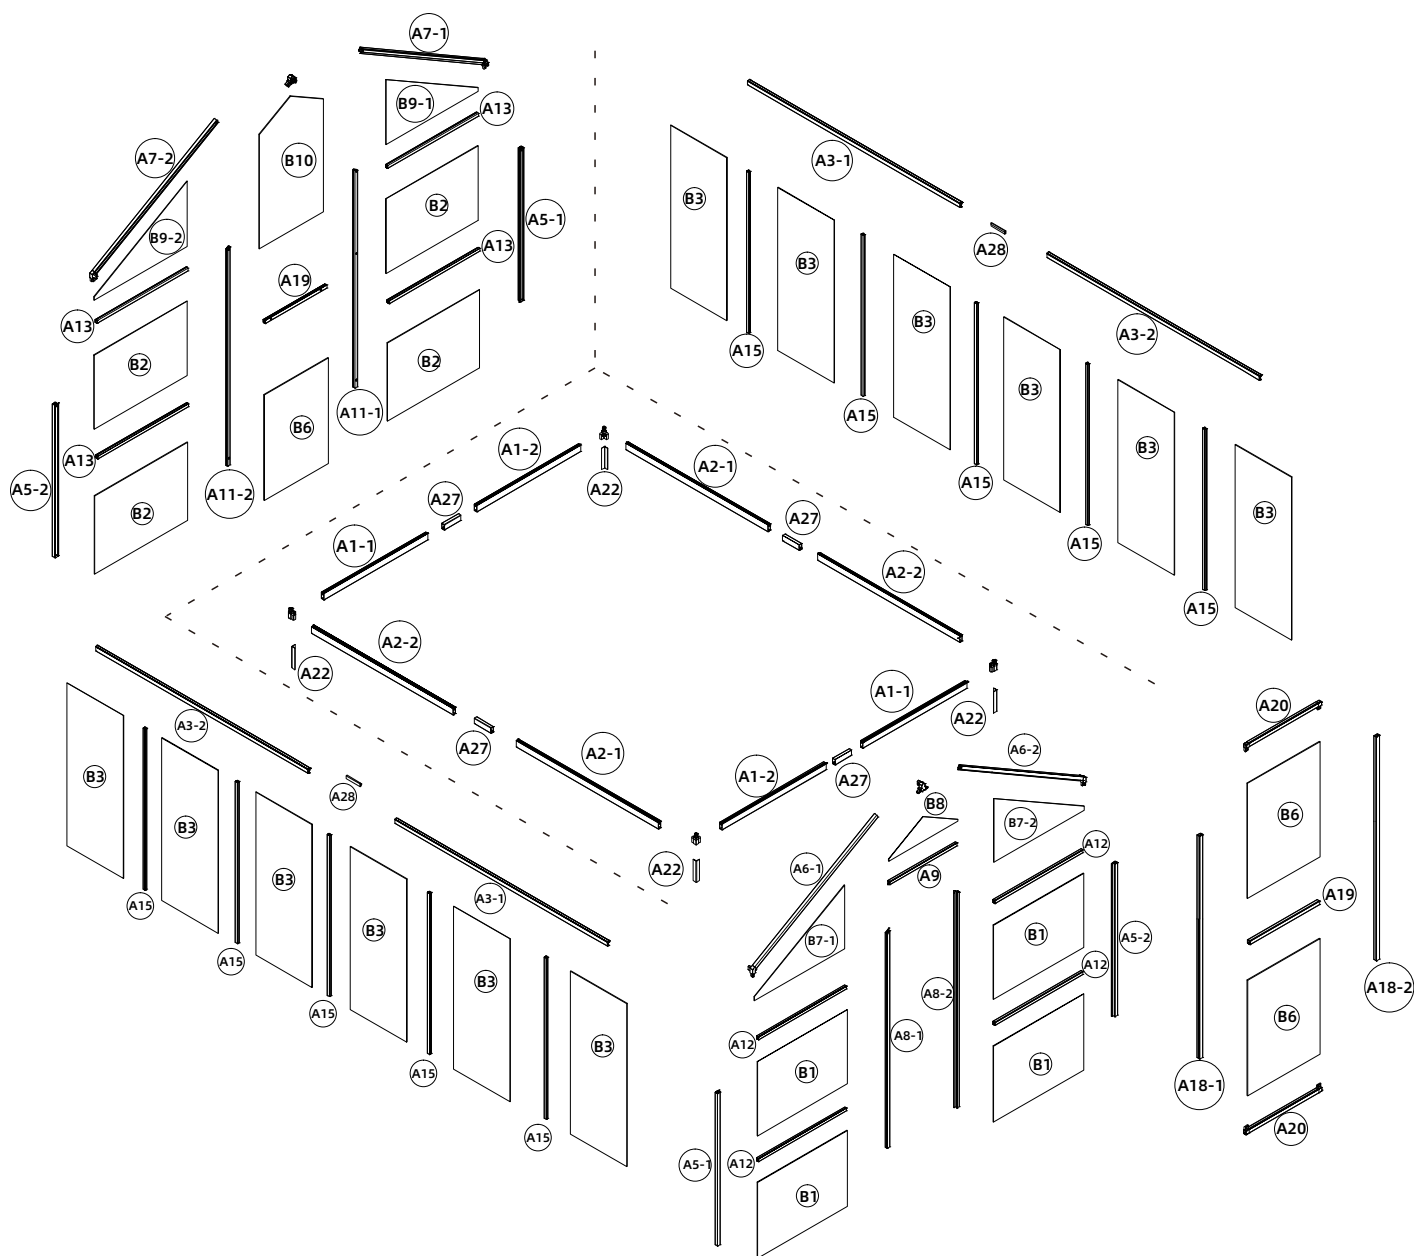


Picture	NO.	Qty.
	A1-1	x2
	A1-2	x2
	A2-1	x2
	A2-2	x2
	A27	x4
	H6	x16
	H9	x16

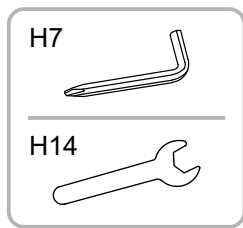


Please merge the fittings until there is no gap before tightening the screws.




Step 1

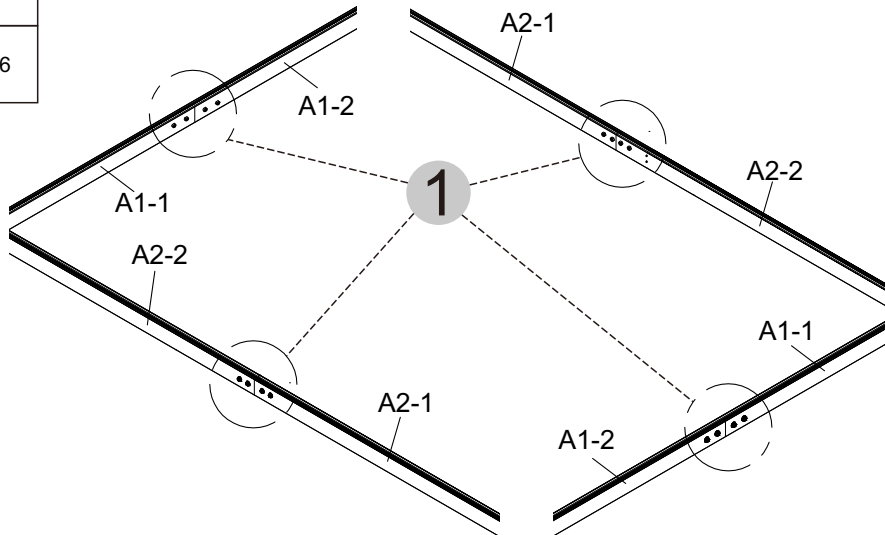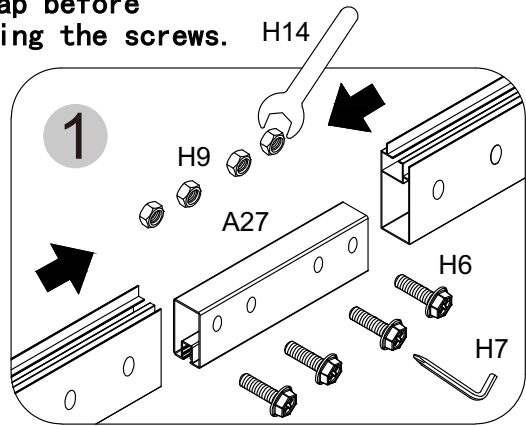


Picture	NO.	Qty.
	H1	x4
	H8	x12
	A22	x4
	A24	x2




Step 2-3

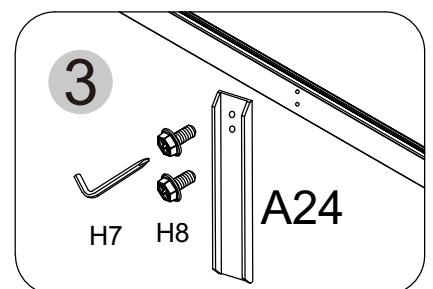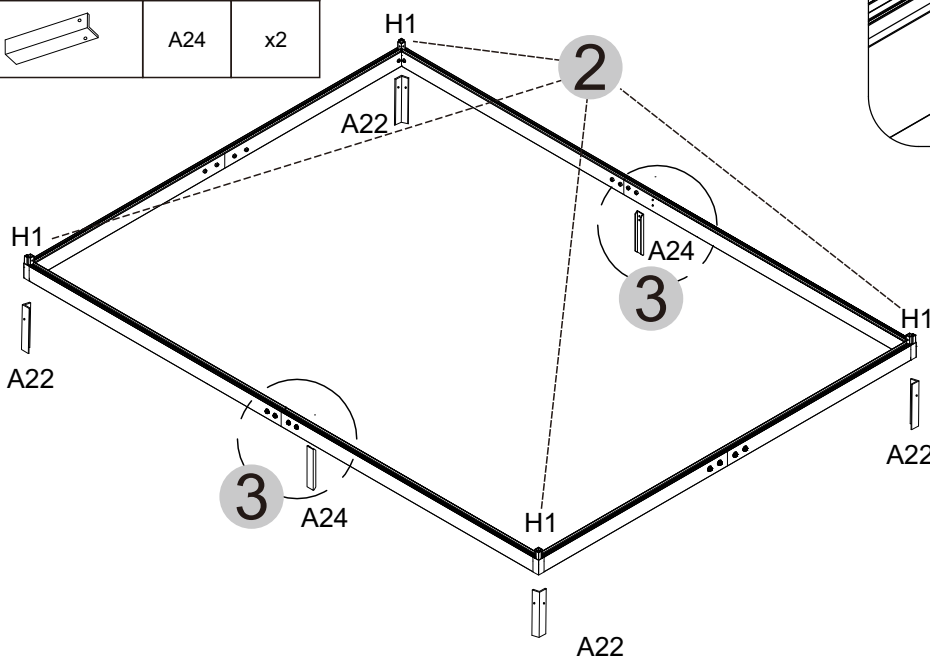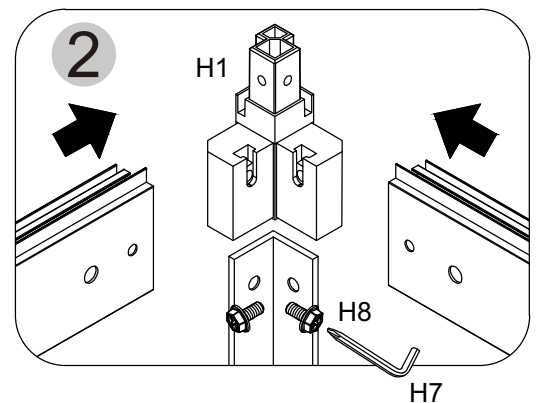

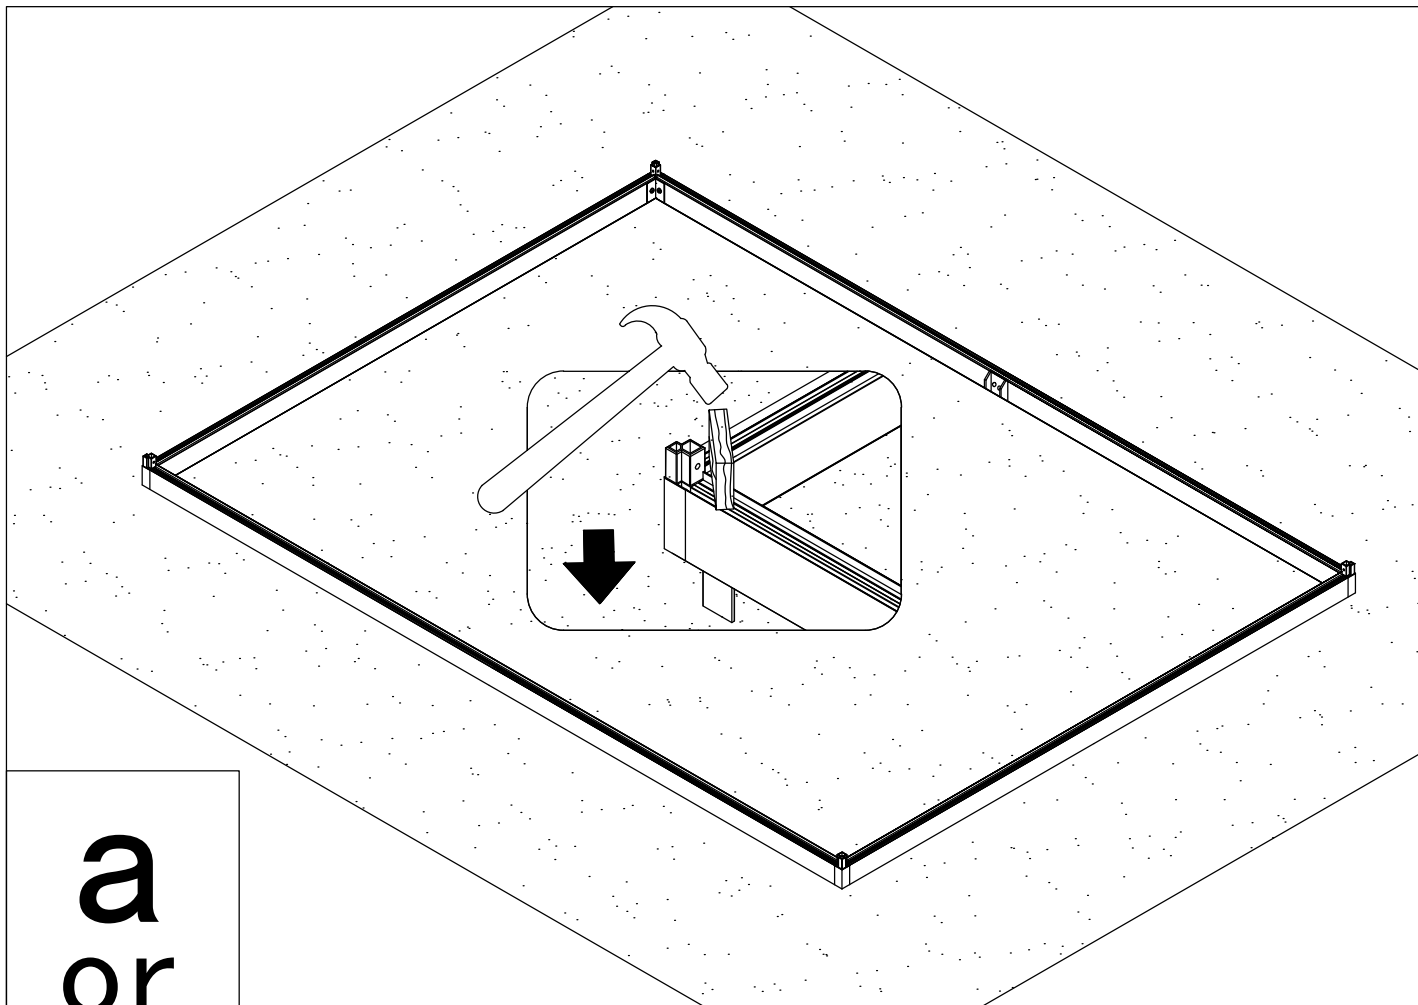

**a
or
b**


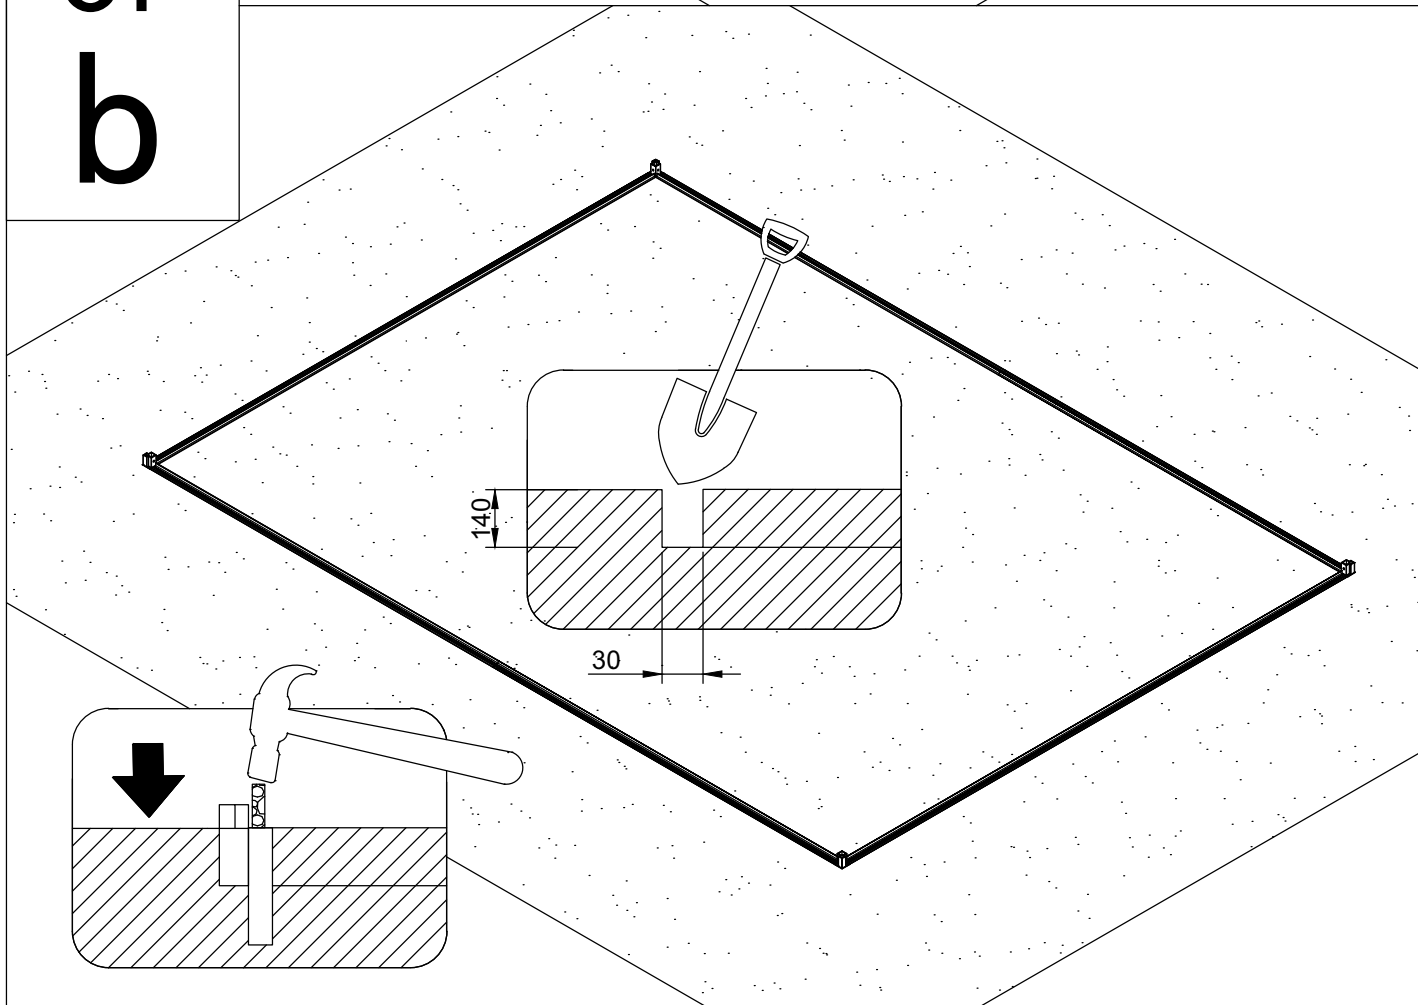


Picture	NO.	Qty.
	A5-1	x2
	A5-2	x2
	H8	x4

H7







Please note
the A5
orientation


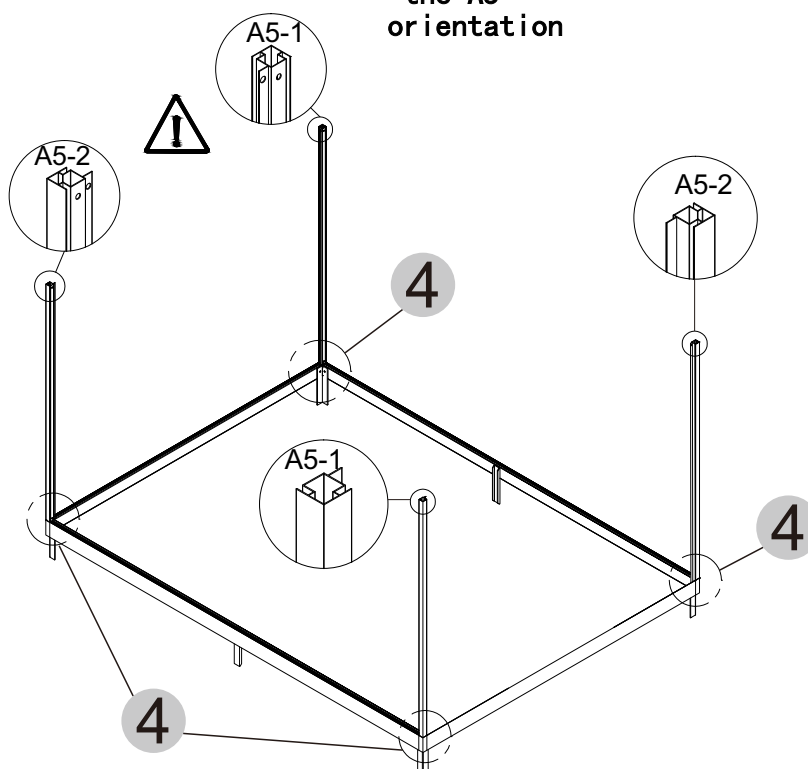
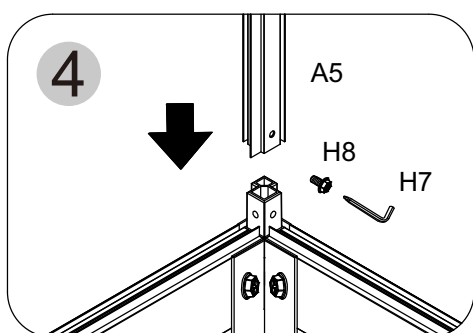




Picture	NO.	Qty.
	B1	x2
	A8-1	x1
	A8-2	x1







H14

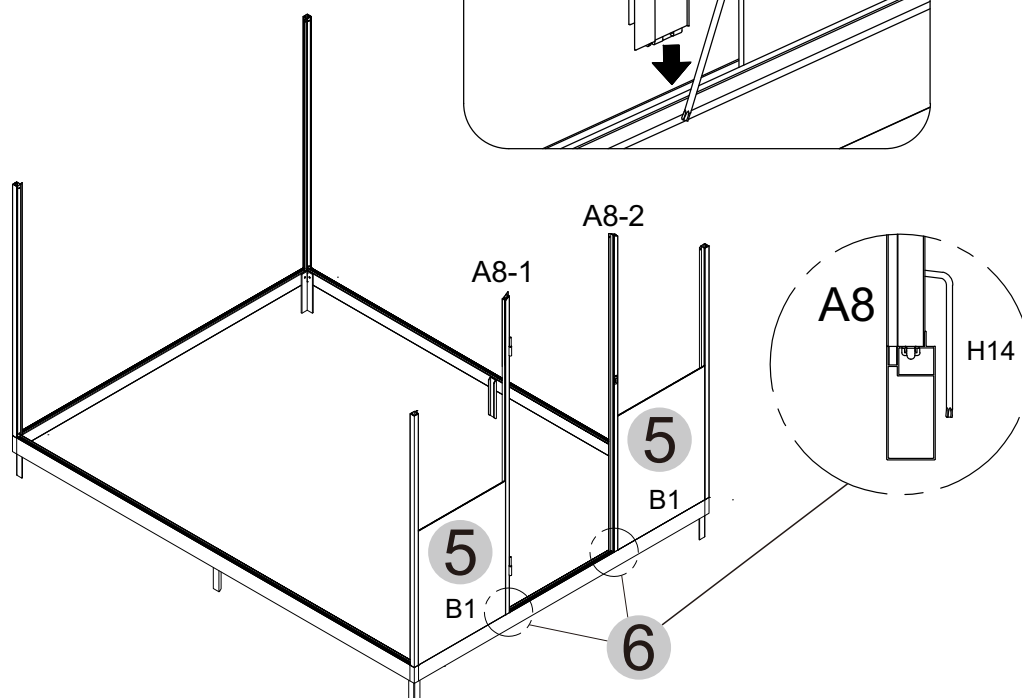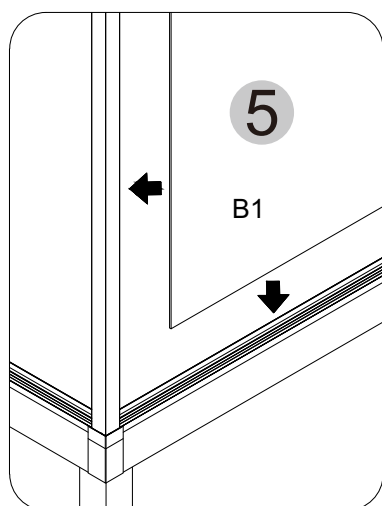






Picture	NO.	Qty.
	B1	x2
	A12	x2
 M6x12	H8	x2

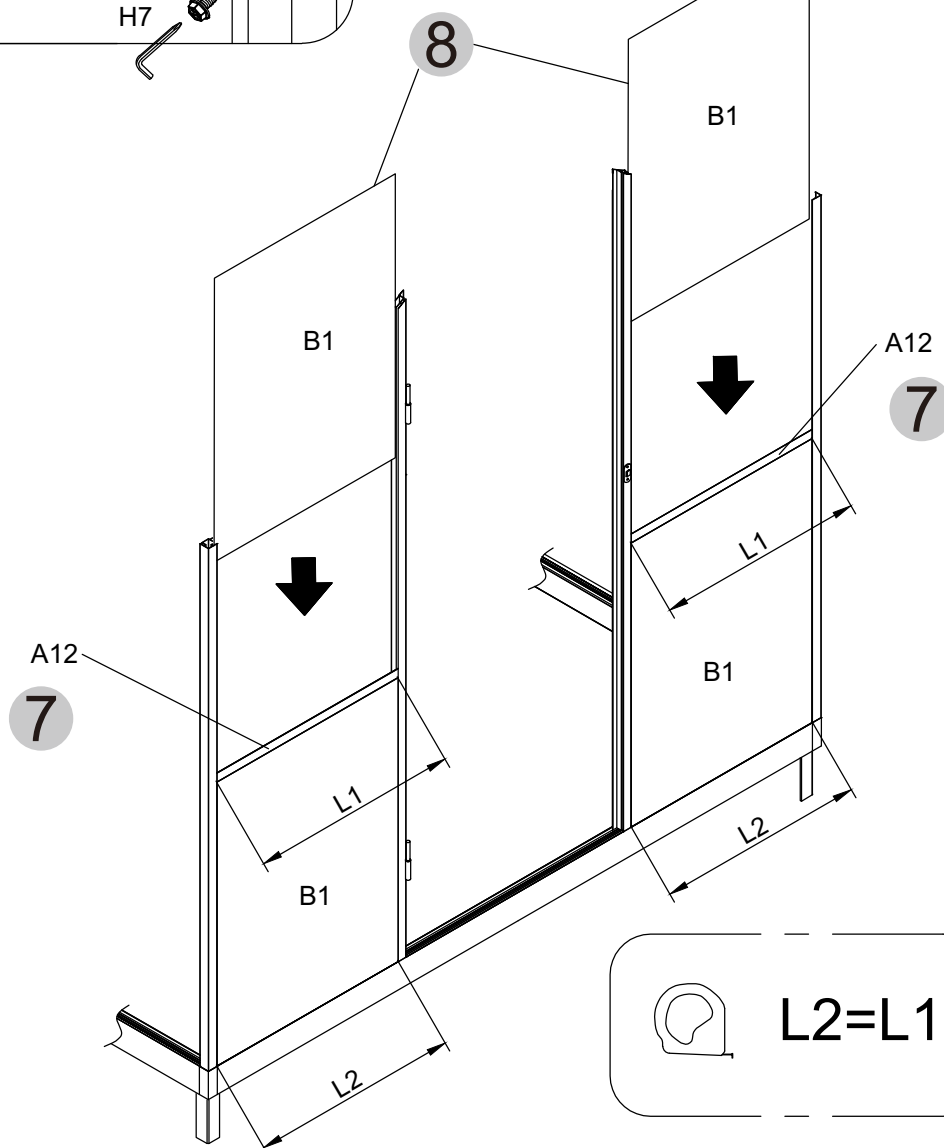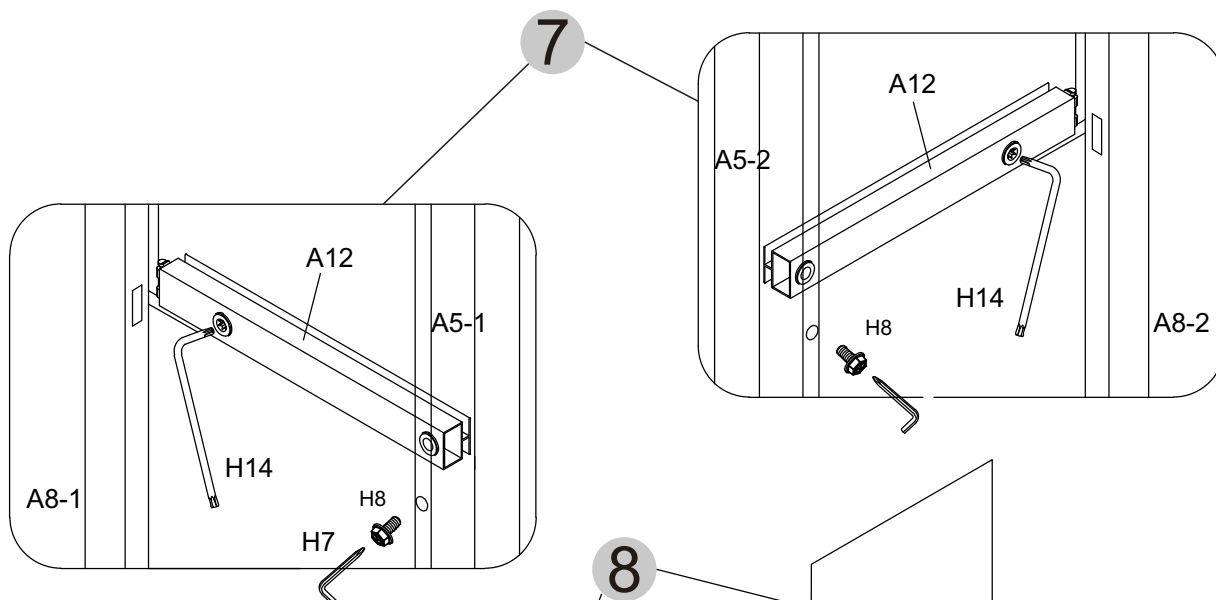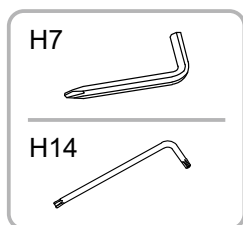


Picture	NO.	Qty.
	A9	x1
	A12	x2
 M6x12	H8	x4
	B7-1	x1
	B7-2	x1

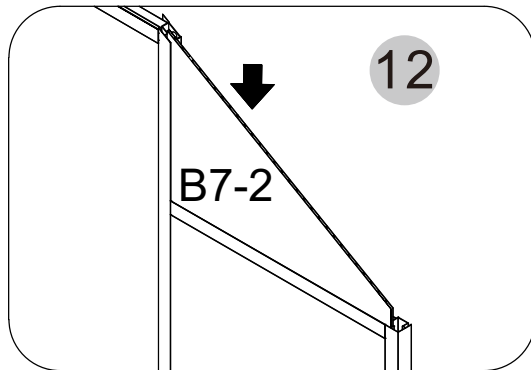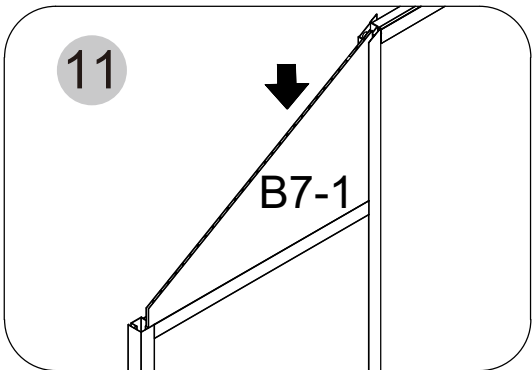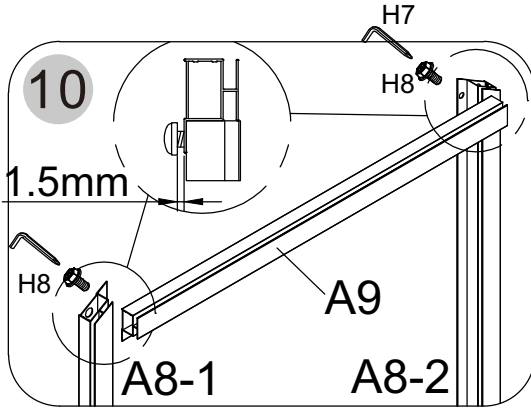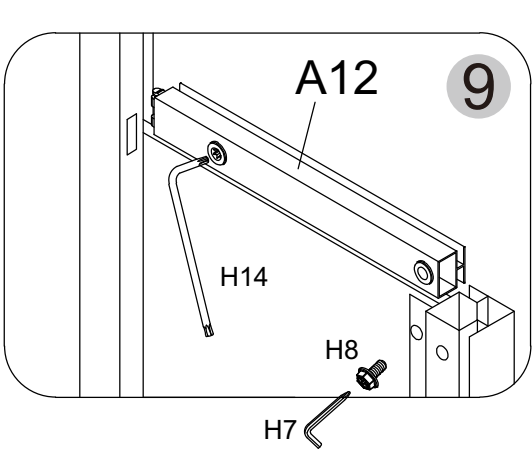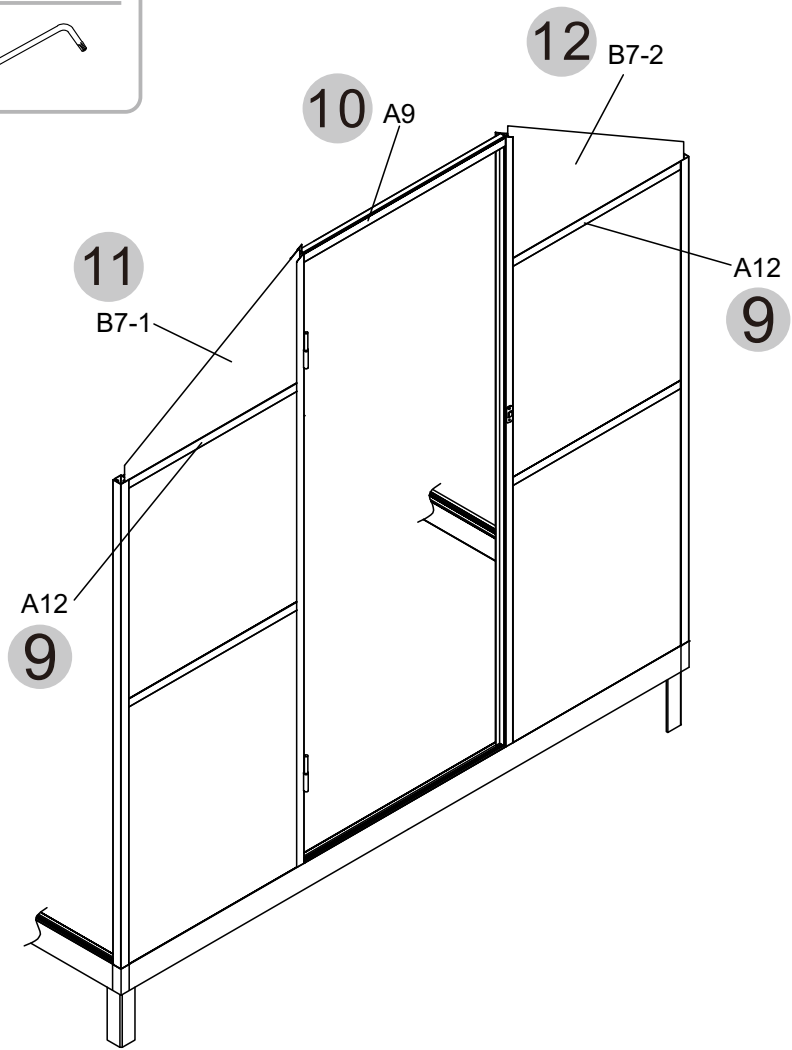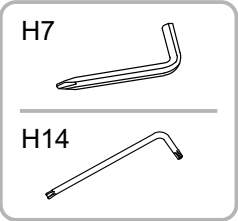




Picture	NO.	Qty.
	A6-1	x1
	A6-2	x1
	H2	x1
	H3	x1
	H8	x8
	B8	x1

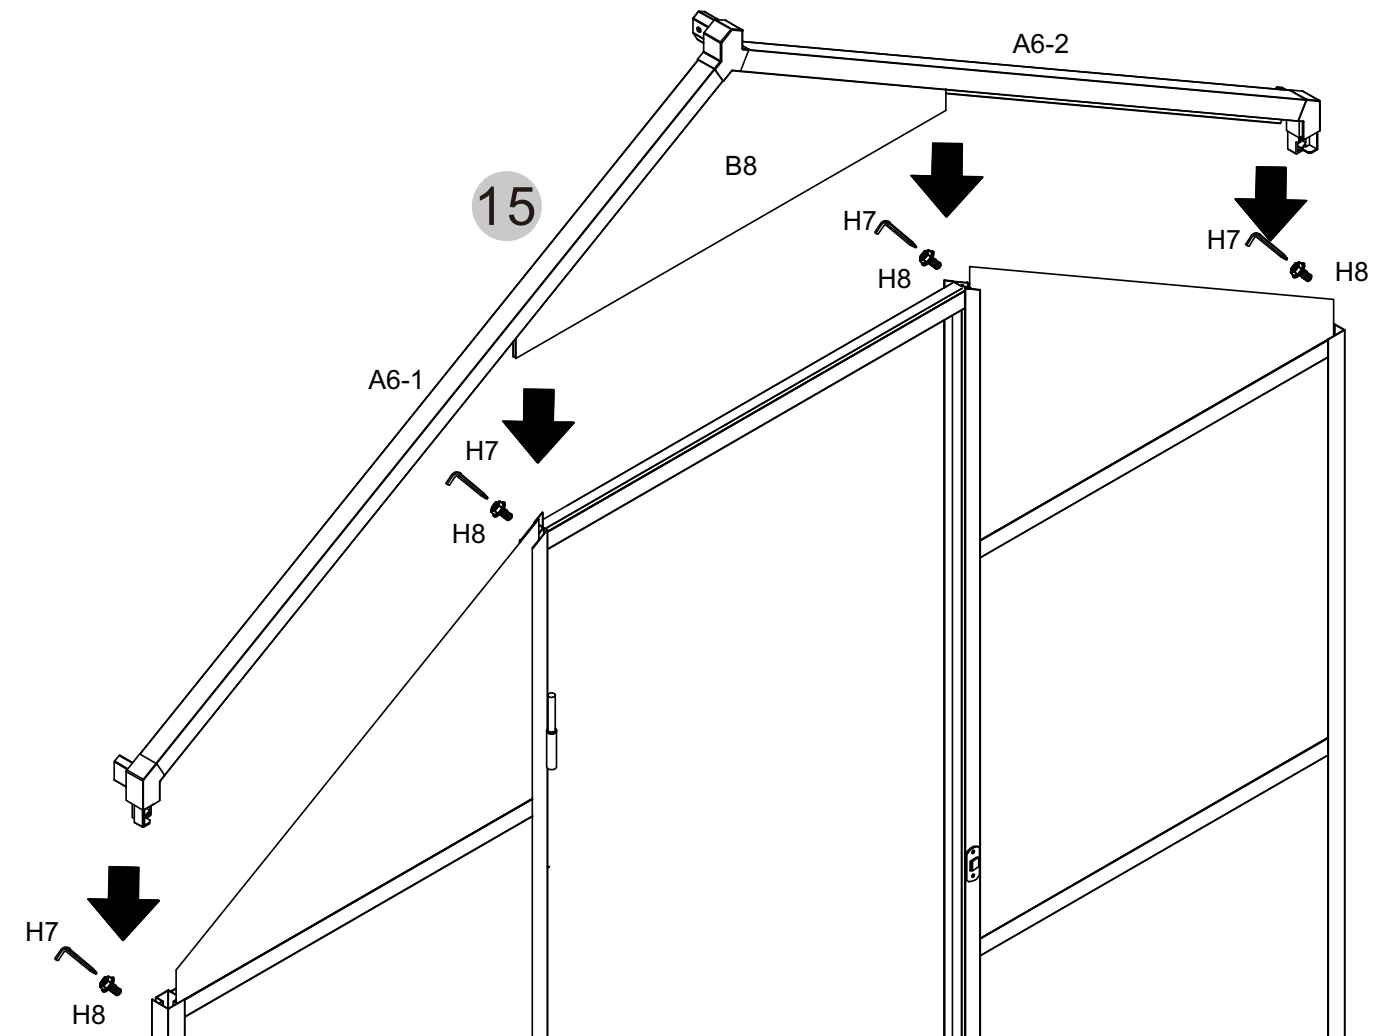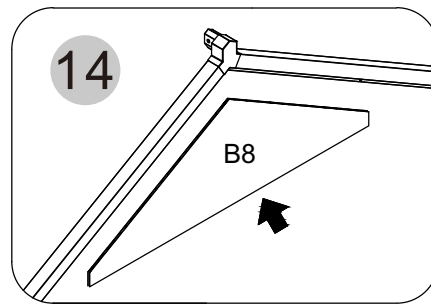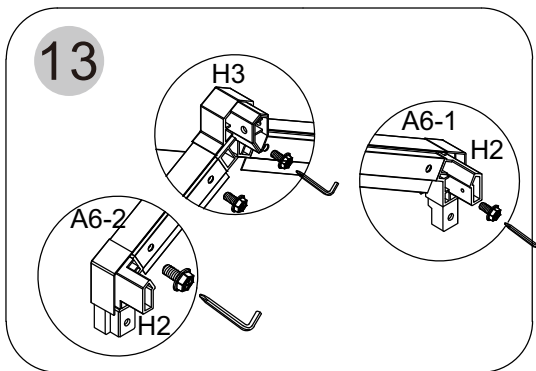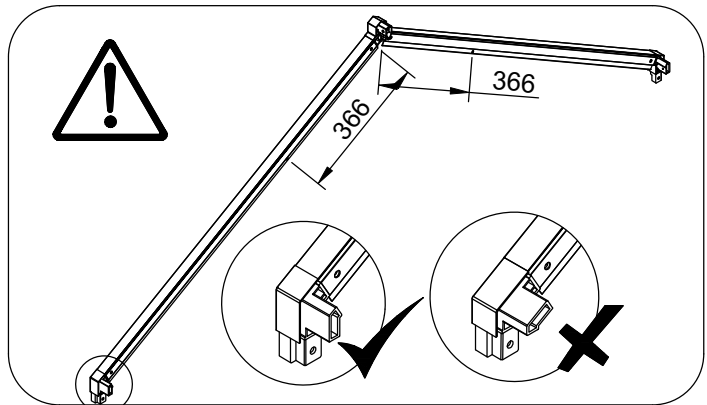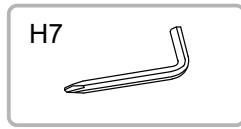


Picture	NO.	Qty.
	A11-1	x1
	A11-2	x1
	B2	x1






Step 16-17



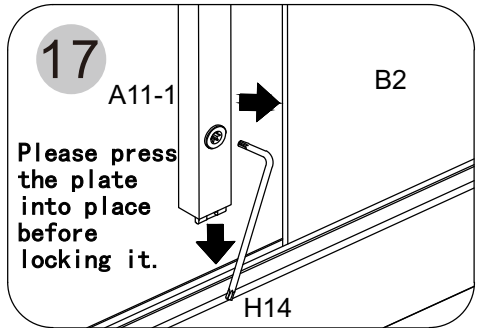
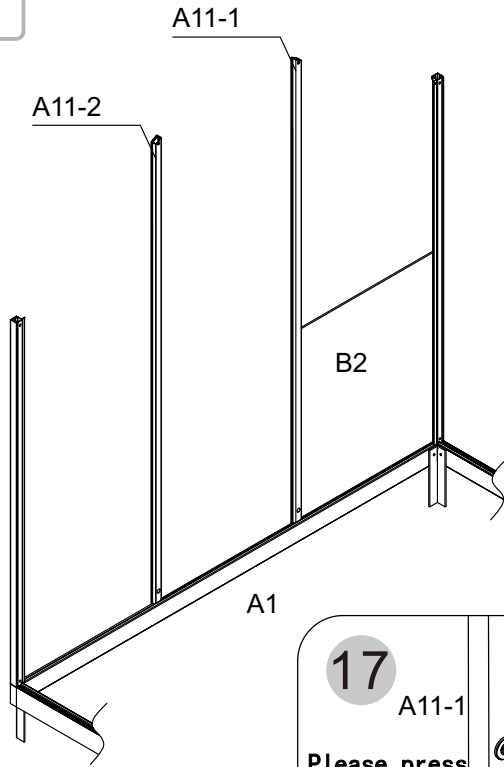
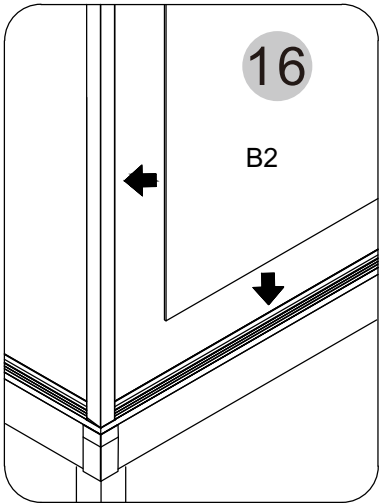



Picture	NO.	Qty.
	B2	x1


Step 18-19



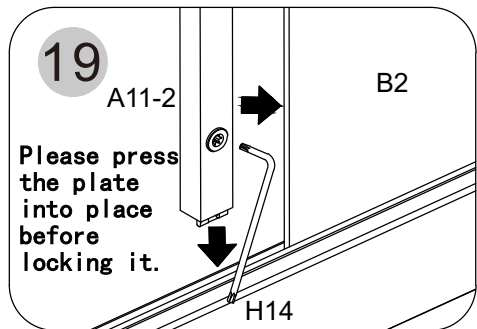
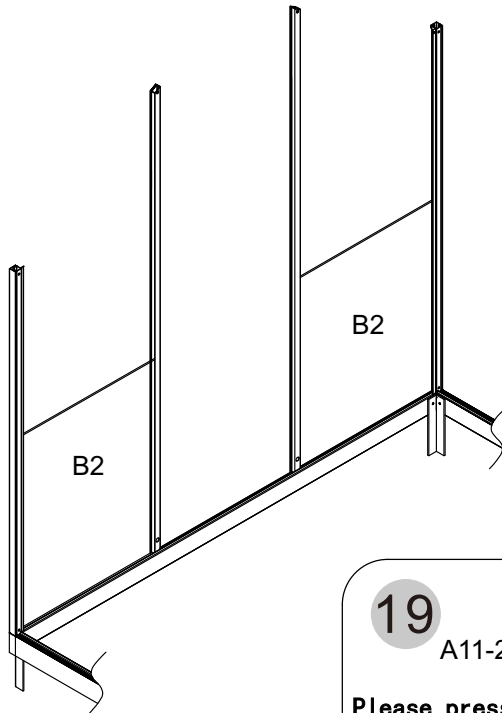
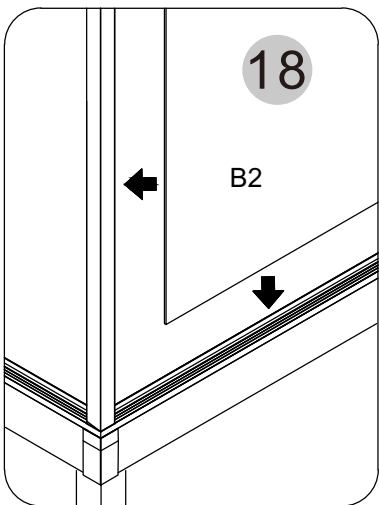


Picture	NO.	Qty.
	A13	x2
	A19	x1
 M6x12	H8	x2
	B6	x1

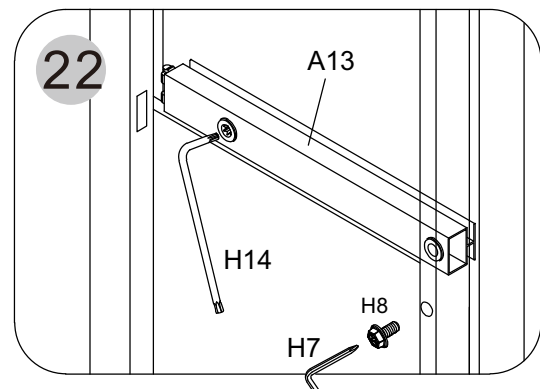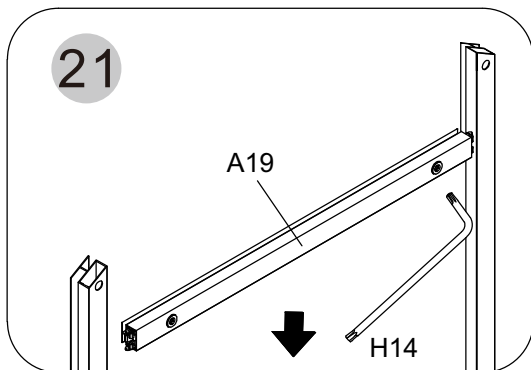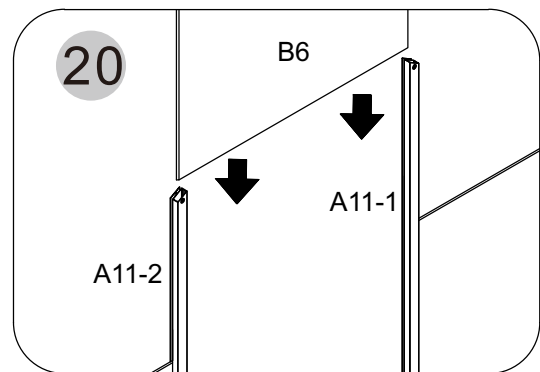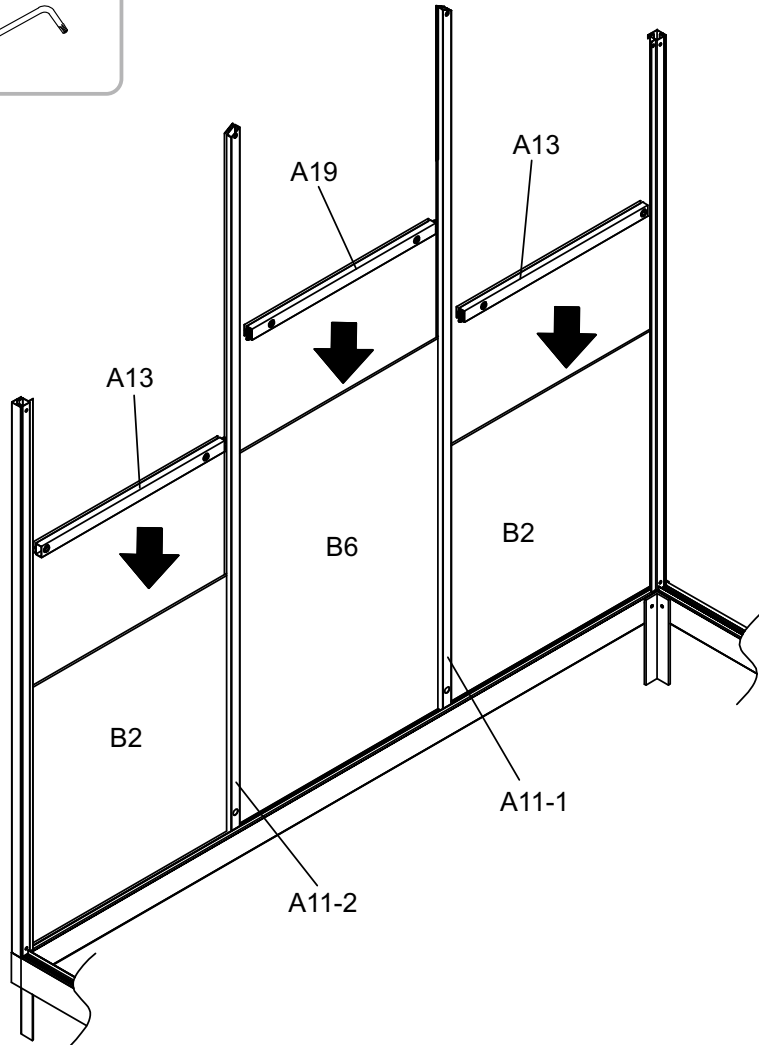
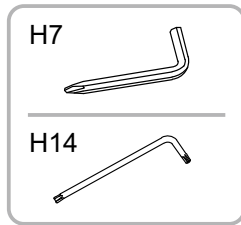


Picture	NO.	Qty.
	A13	x2
 M6x12	H8	x2
	B2	x2

Picture	NO.	Qty.
	B10	x1

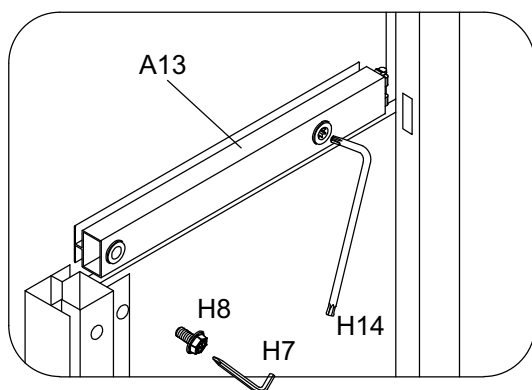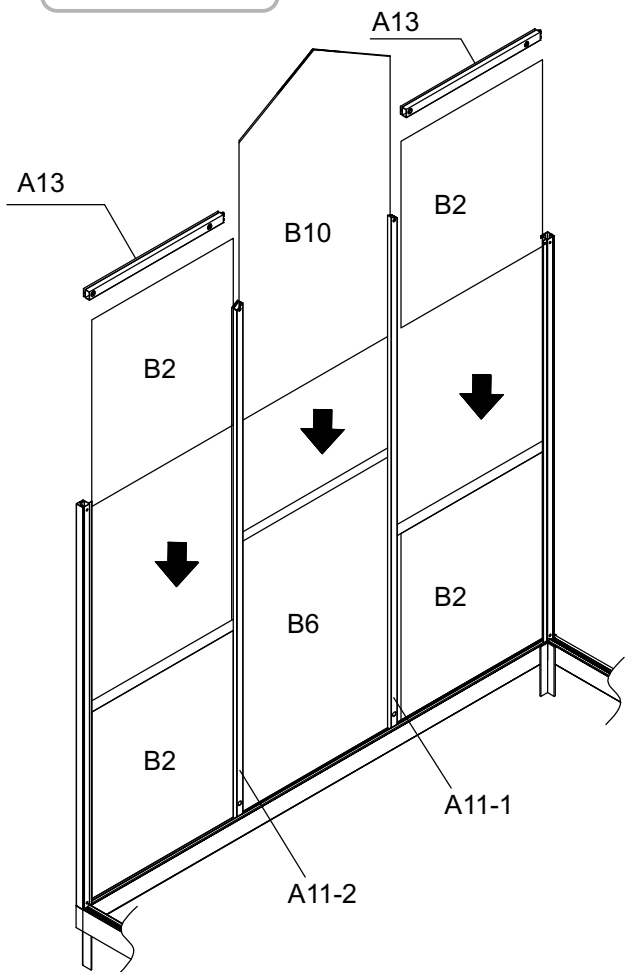
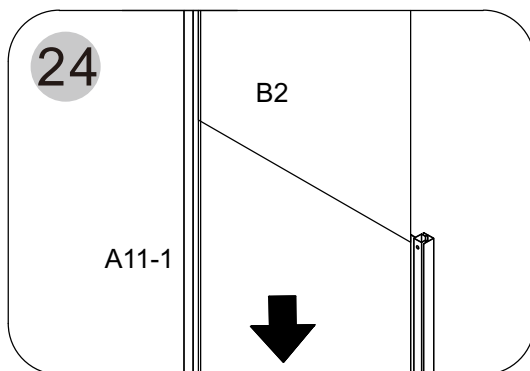
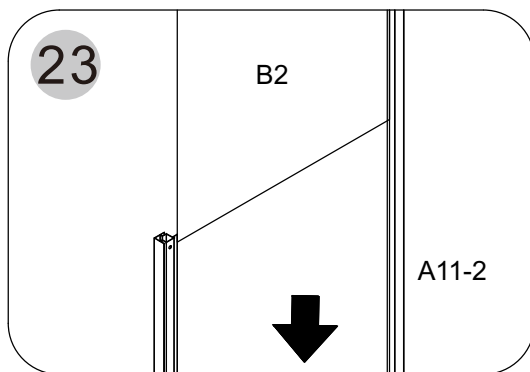
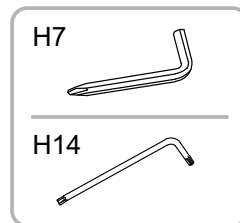


25

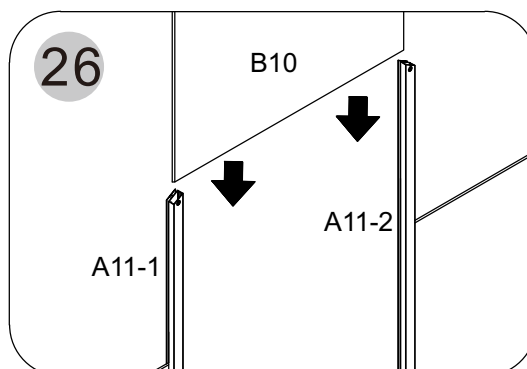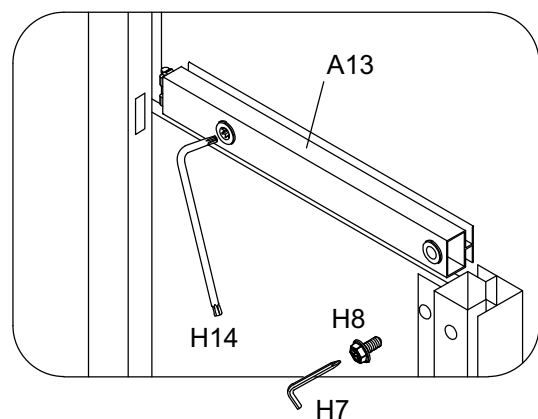









Picture	NO.	Qty.
	A7-1	x1
	A7-2	x1
	H2	x1
	H3	x1
	H8	x8

Picture	NO.	Qty.
	B9-1	x1
	B9-2	x1

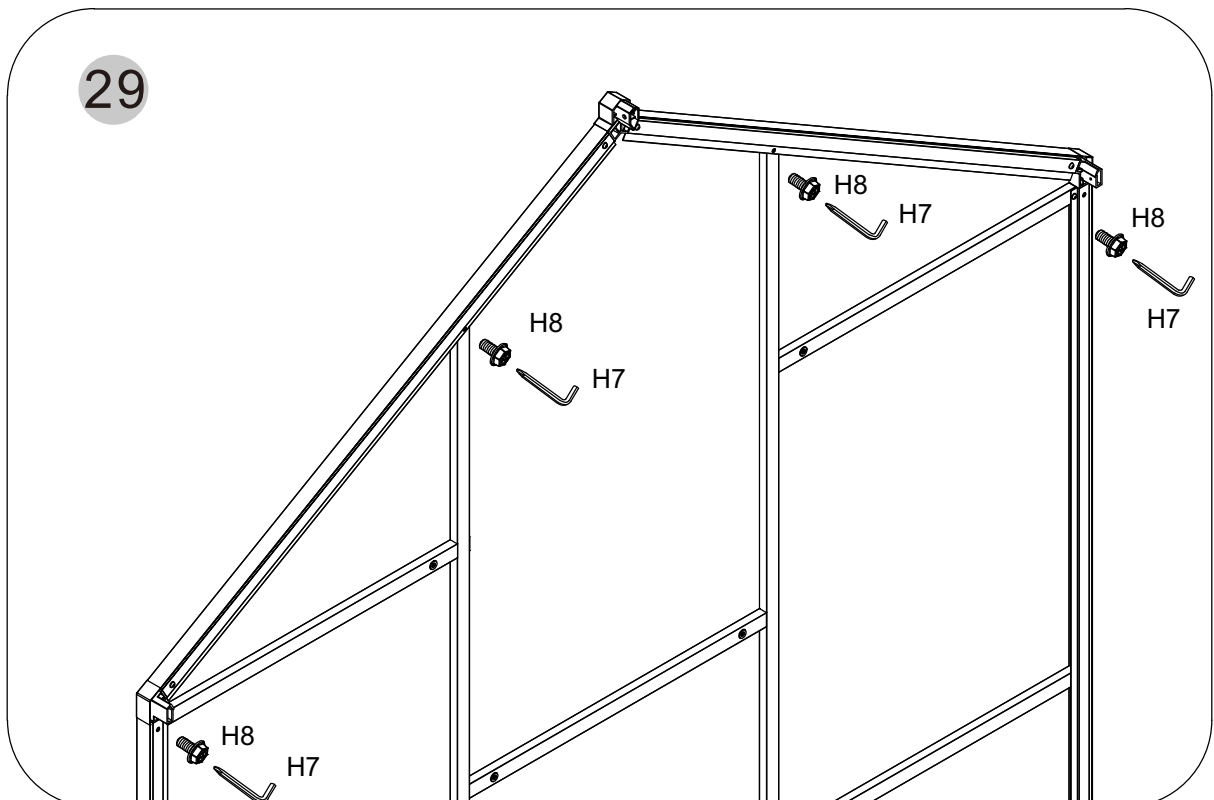
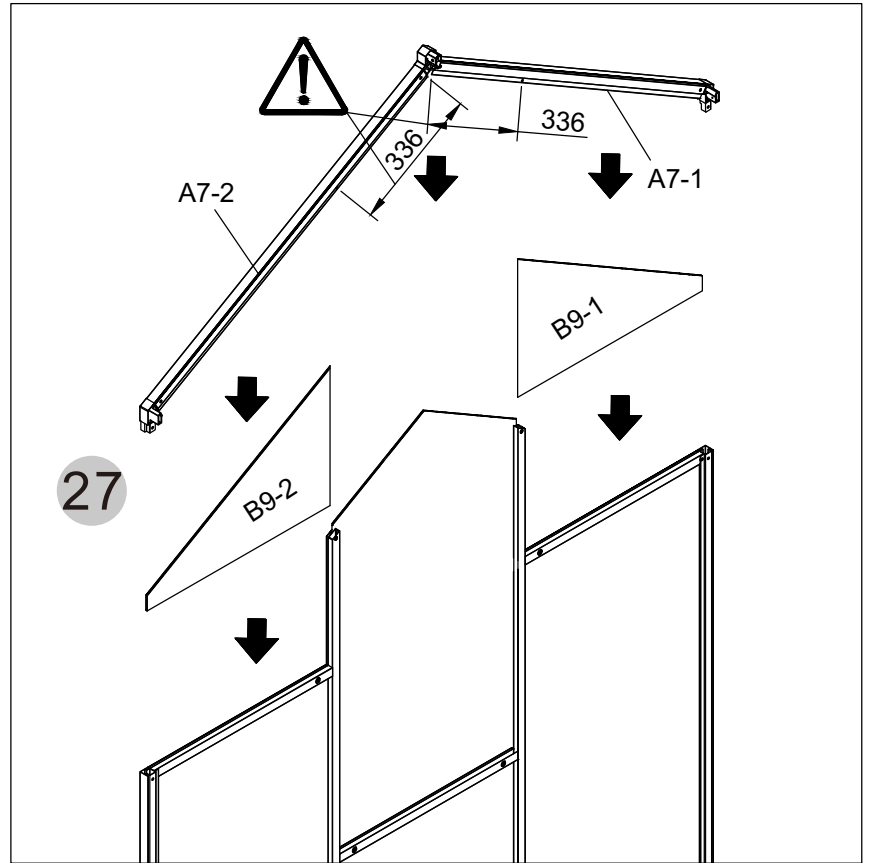
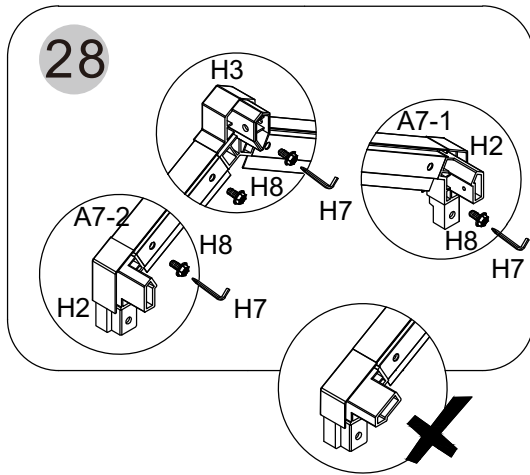




Picture	NO.	Qty.
	A3-1	x2
	A3-2	x2
	A4	x2
	A28	x2
	A29	x1
	A30-2	x2
	B11	x2





Picture	NO.	Qty.
	M6x30	x4
	M6	x12
	H17	x4
	M6x20	x8
	St4x8	x4
	A30-1	x2

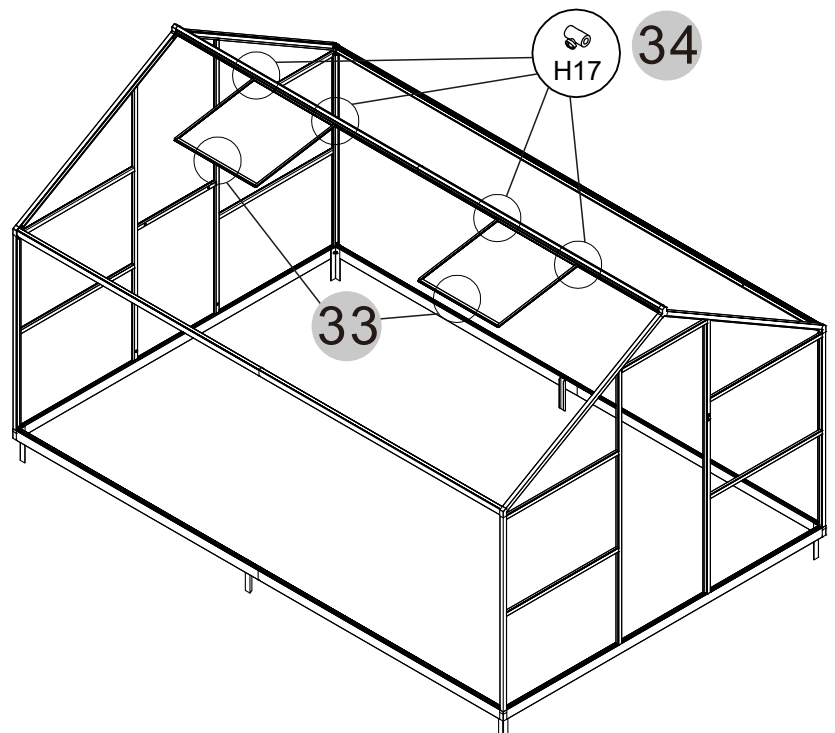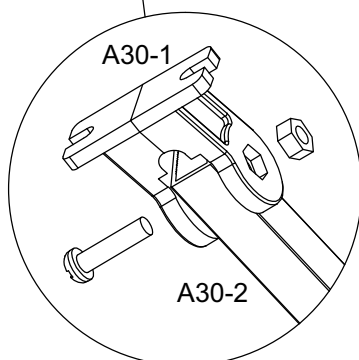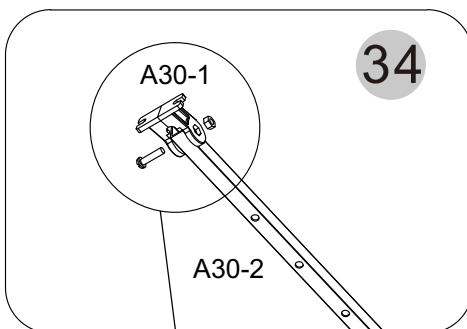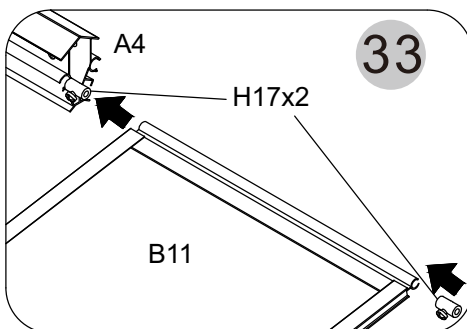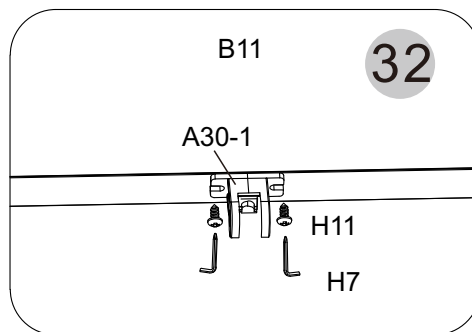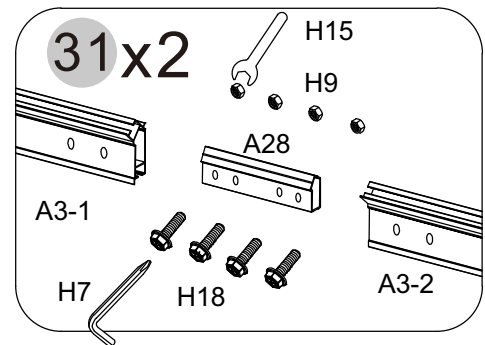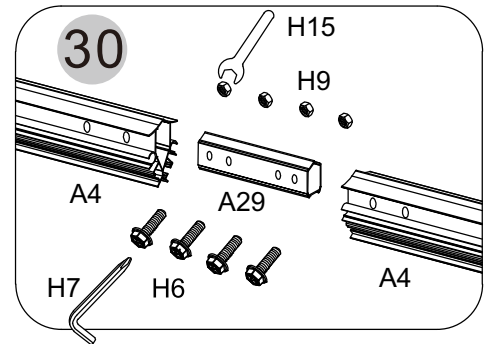
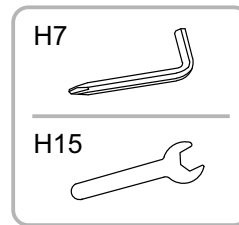


Picture	NO.	Qty.
 M6x30	H6	x2
 M6	H9	x2
 St5x10	H12	x4


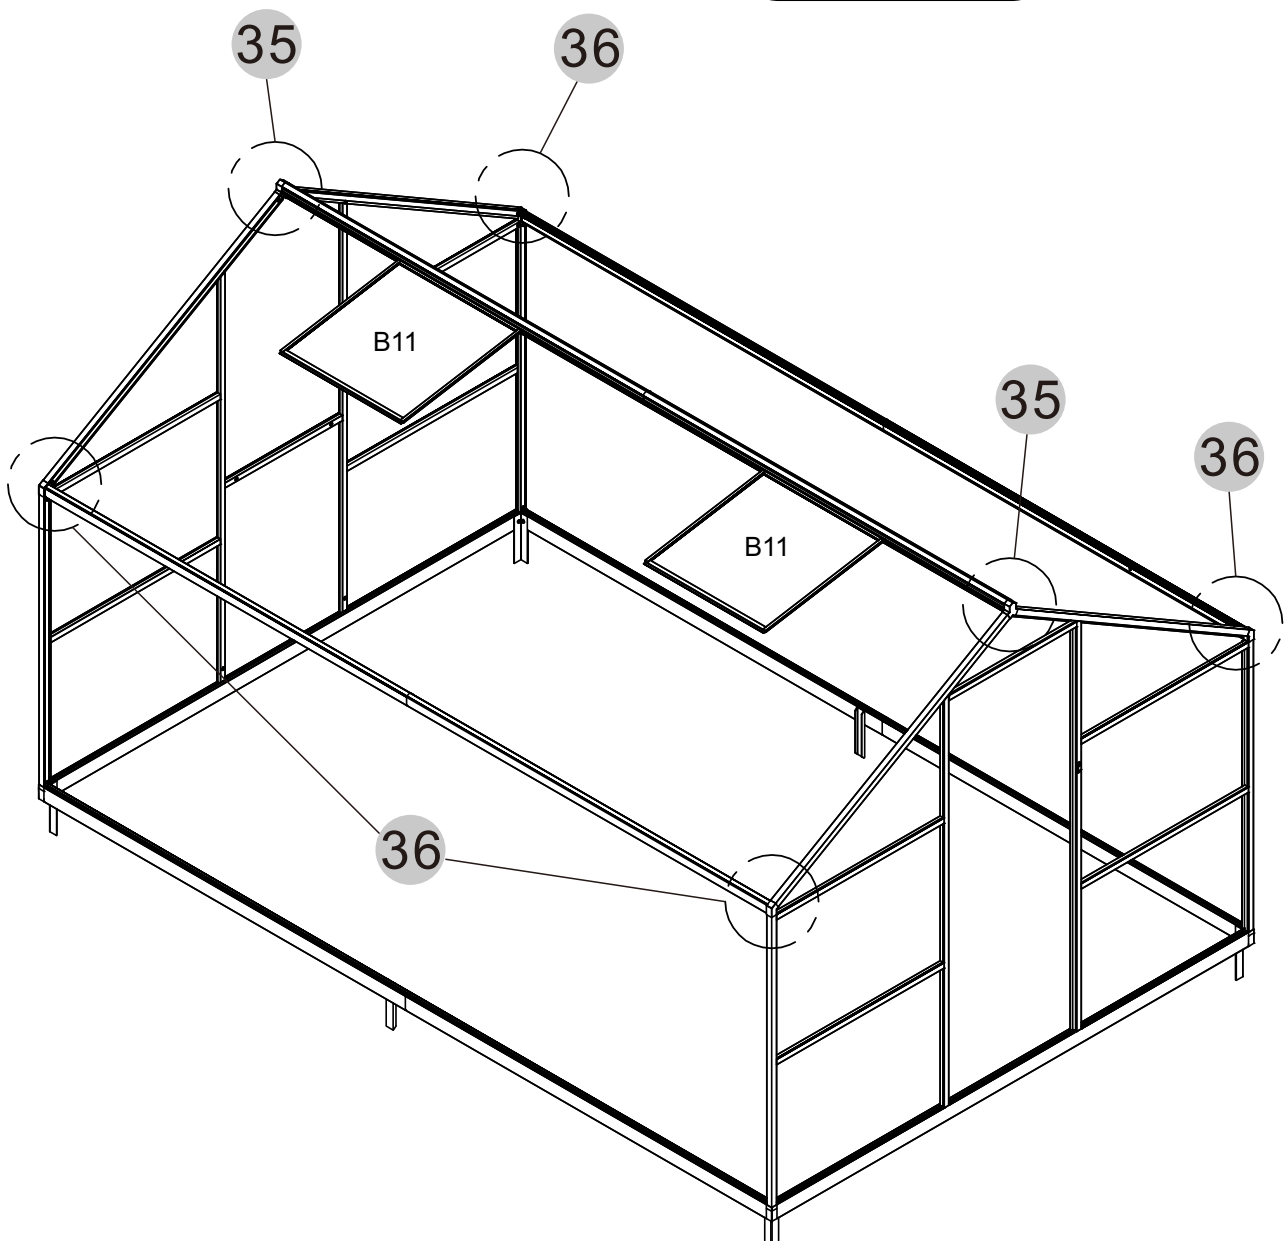
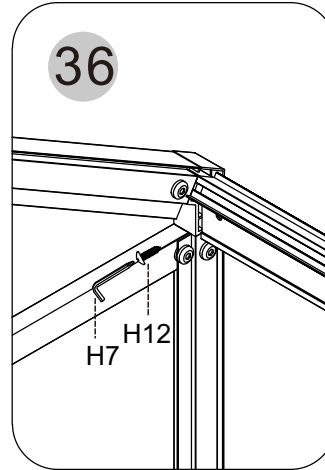
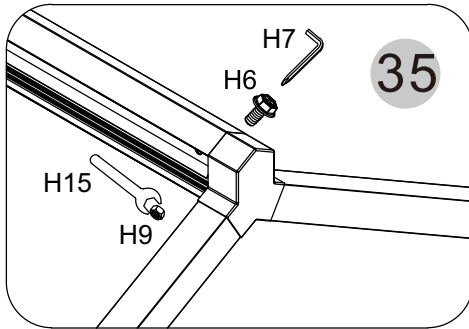
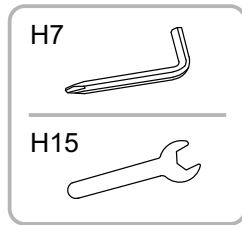


Picture	NO.	Qty.
	A15	x10
	B3	x12

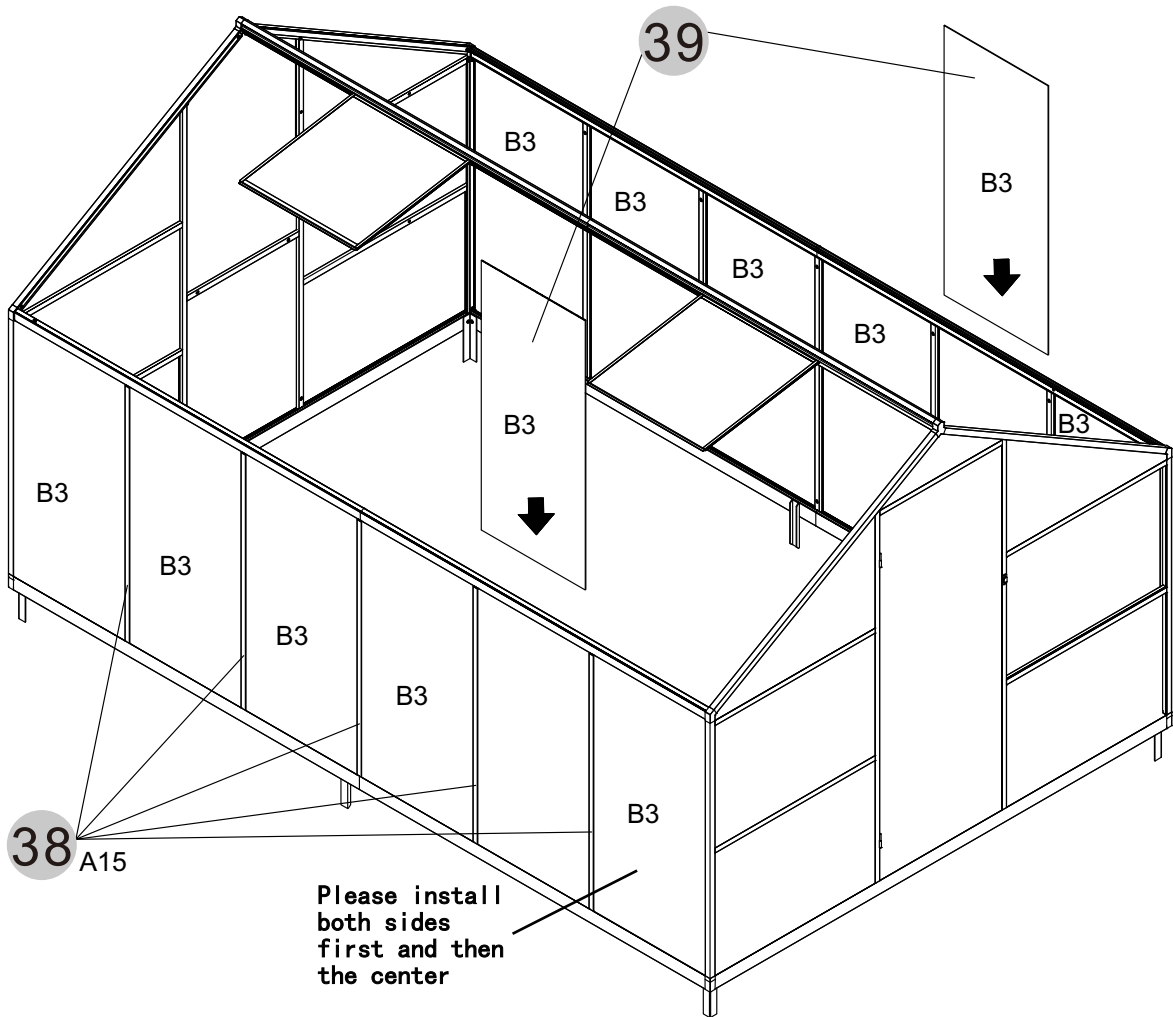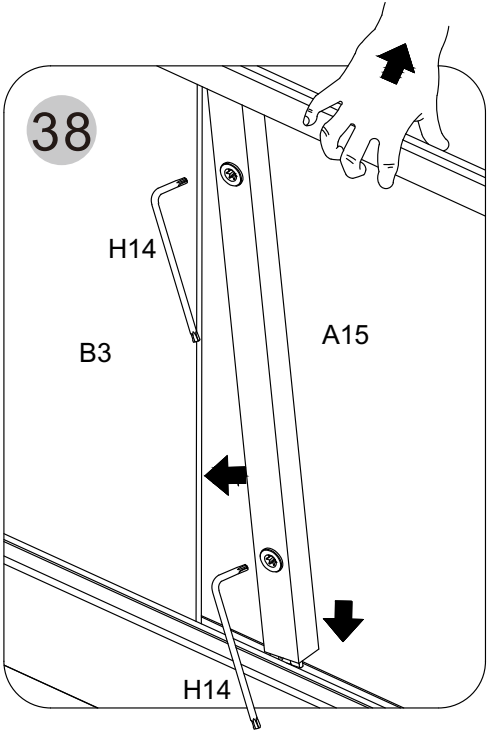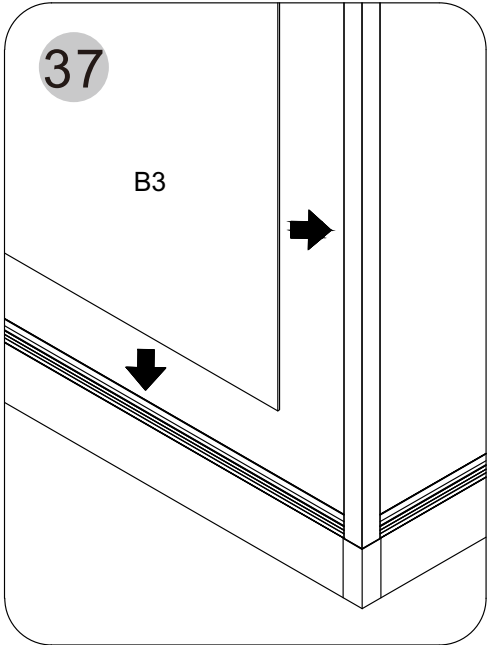








Picture	NO.	Qty.
	B4	x10
	B5	x2

Picture	NO.	Qty.
	A10-1	x2
	A10-2	x2
	A16	x6
	A17	x2
	H8	x4

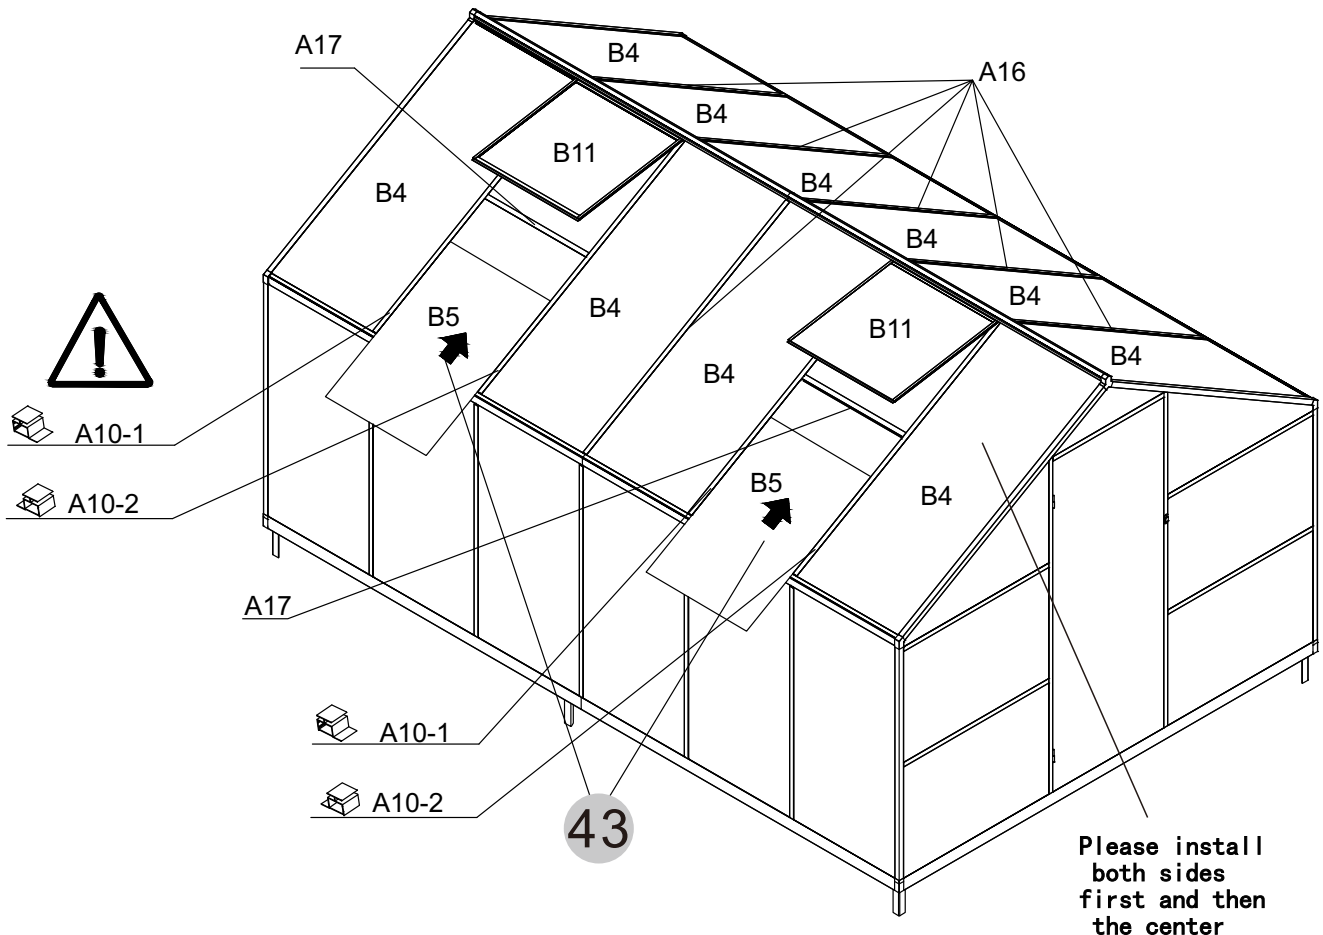
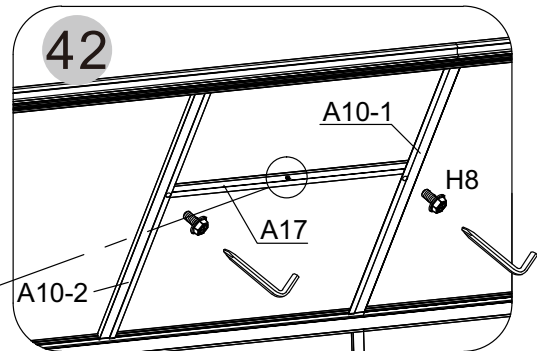
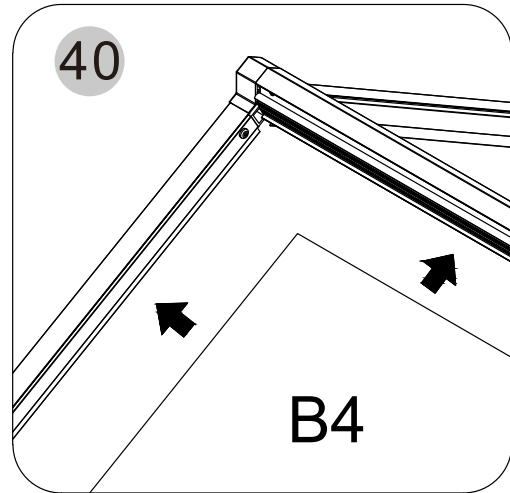
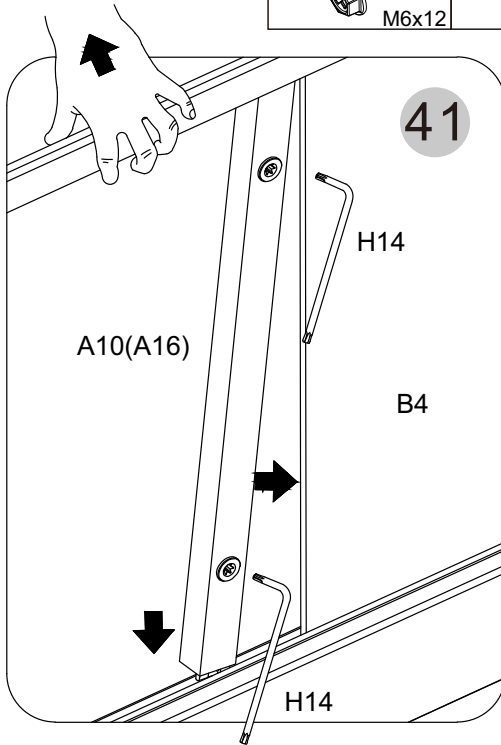
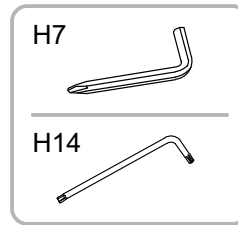


Picture	NO.	Qty.
	A21	x4
	H5	x2
 St4x8	H11	x8
 St5x16	H13	x16








Picture	NO.	Qty.
	H19	x2

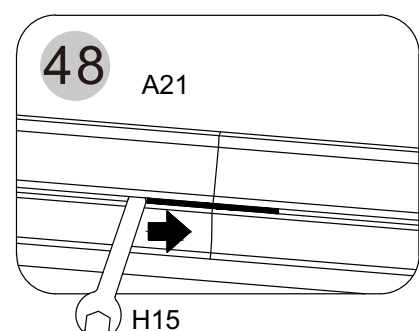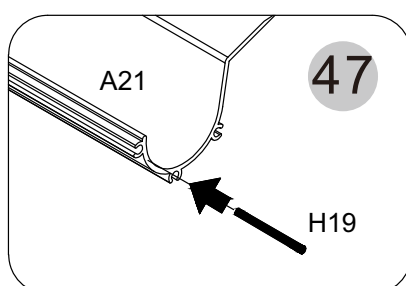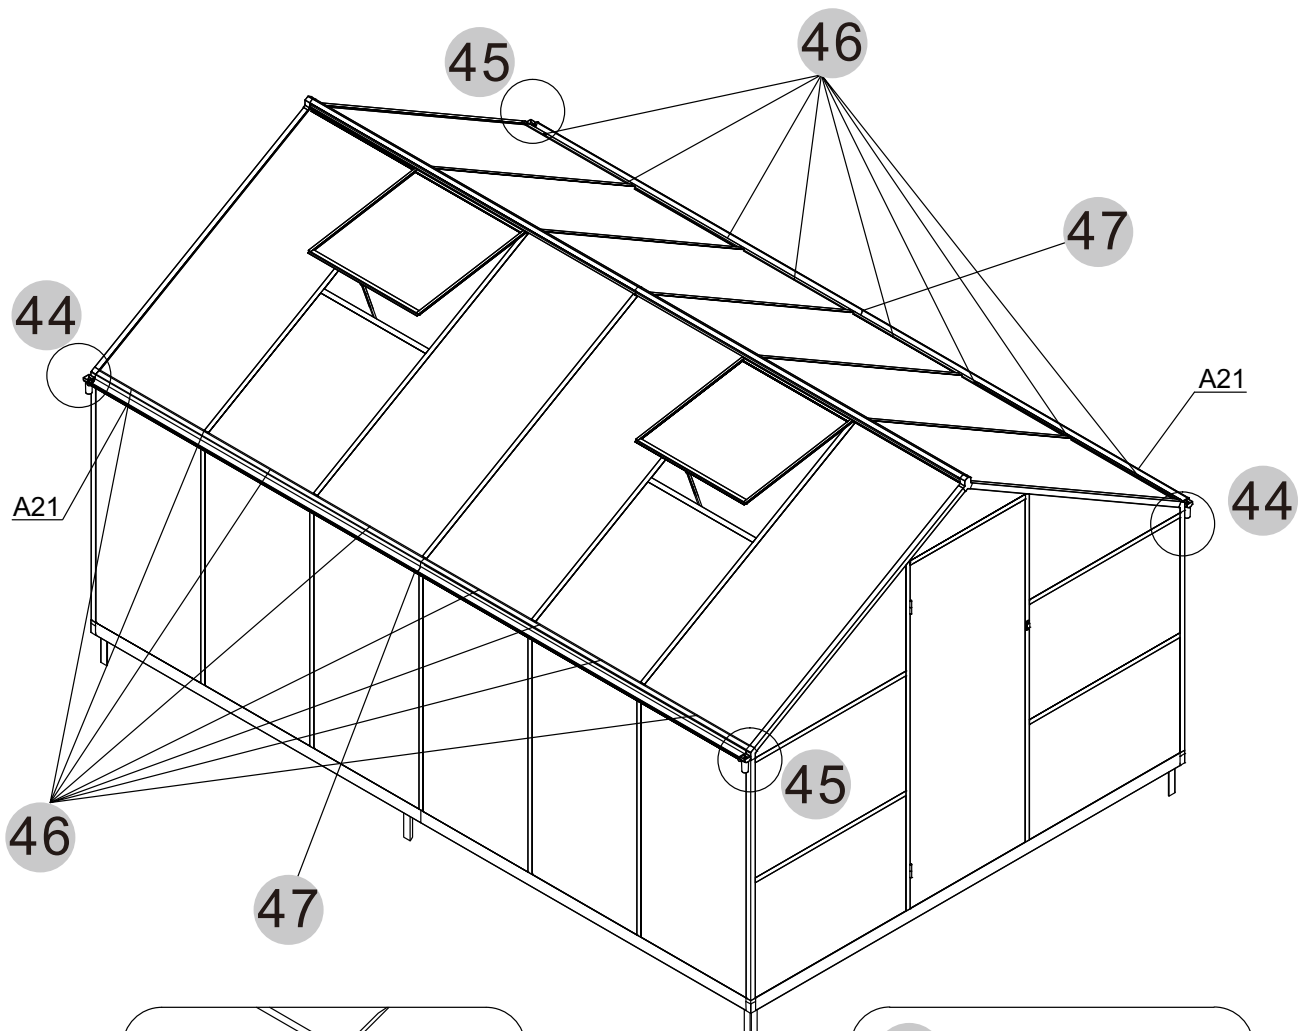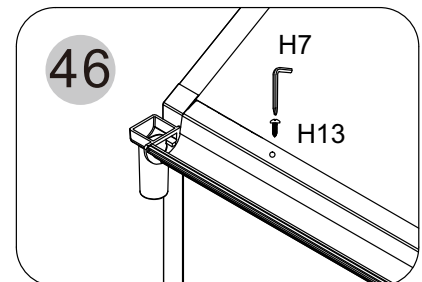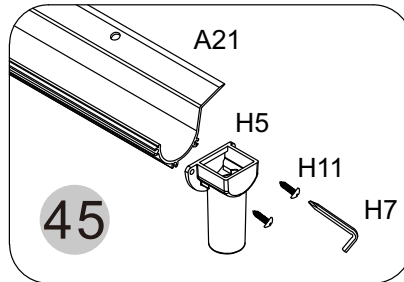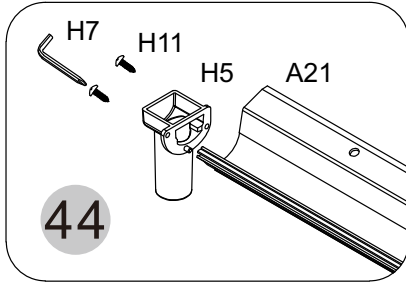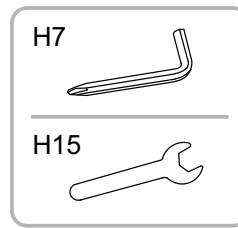










Picture	NO.	Qty.
	H16	x2
	H20	x2

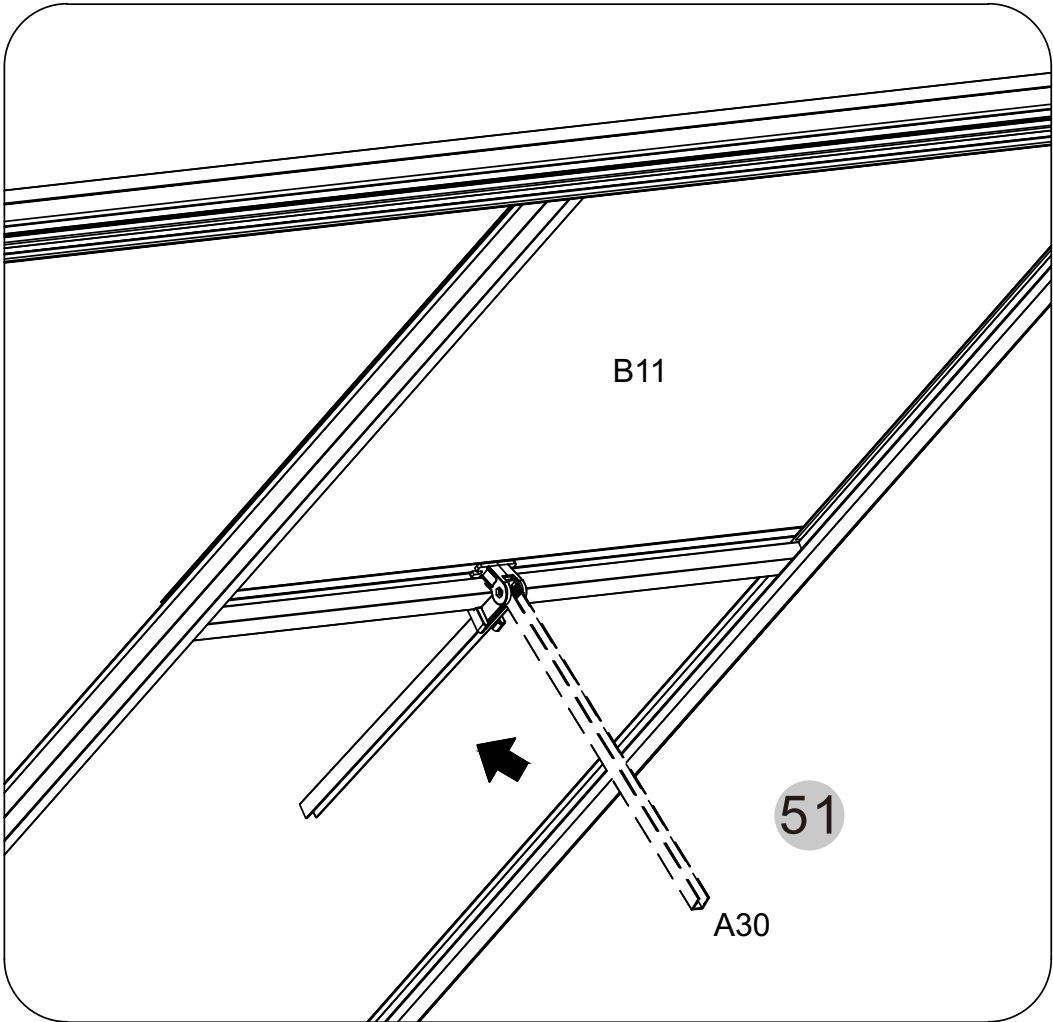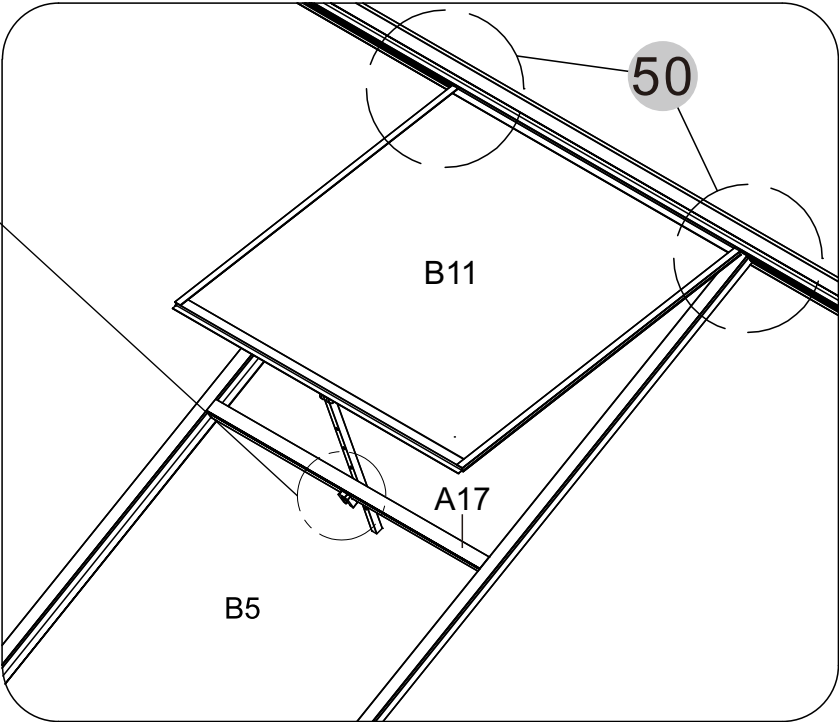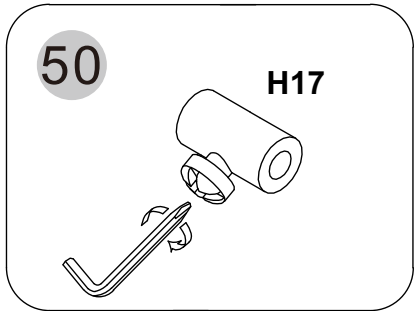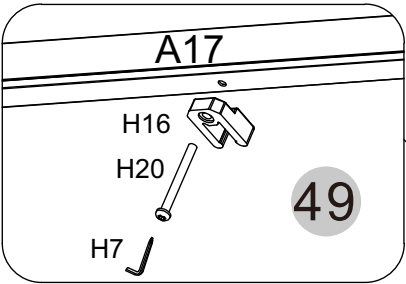









Picture	NO.	Qty.	Picture	NO.	Qty.
	A18-1	x1		H4	x2
	A18-2	x1		H11	x8
	A19	x1		B6	x2
	A20	x2			

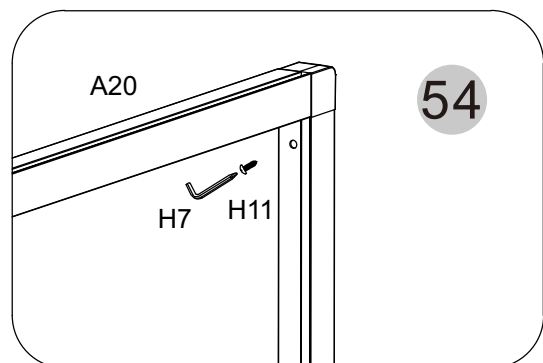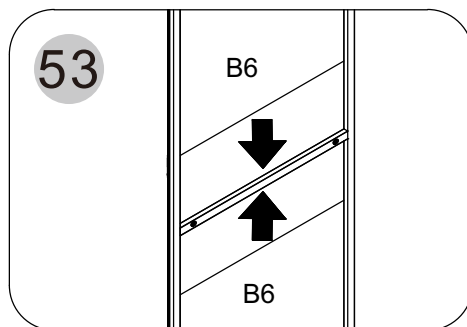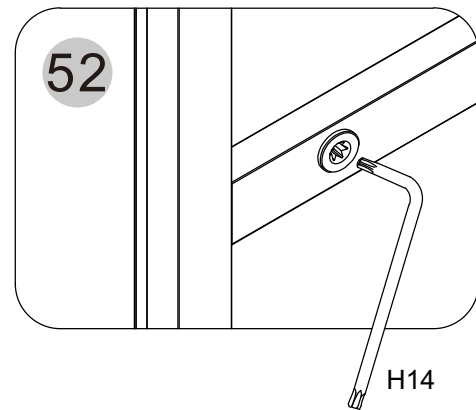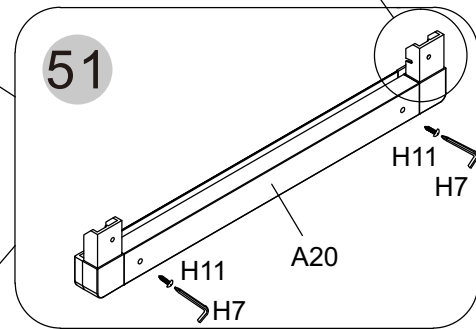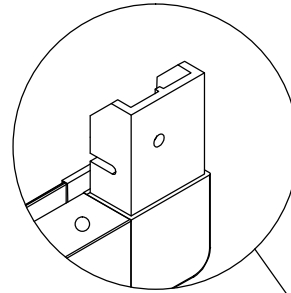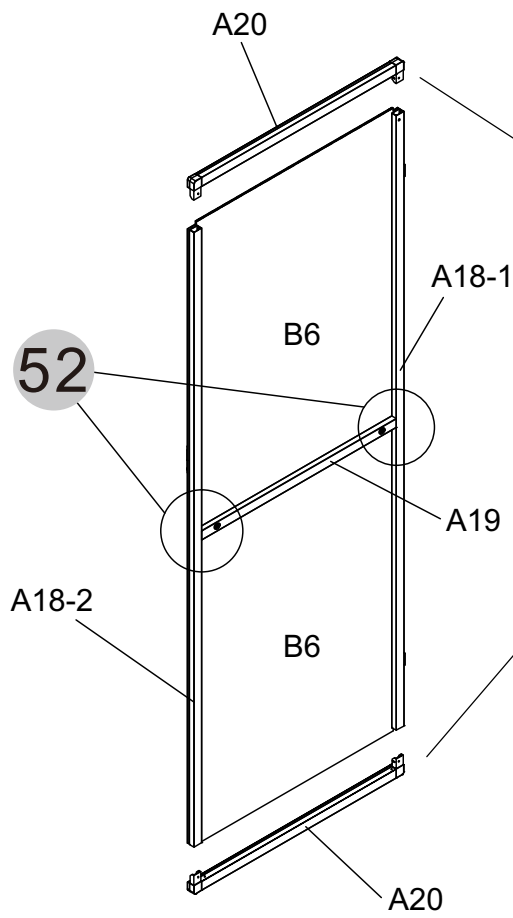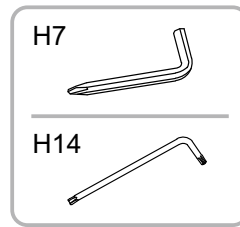

Picture	NO.	Qty.
	A23	x8
 M6x20	H18	x16

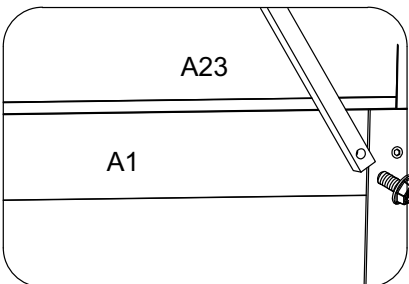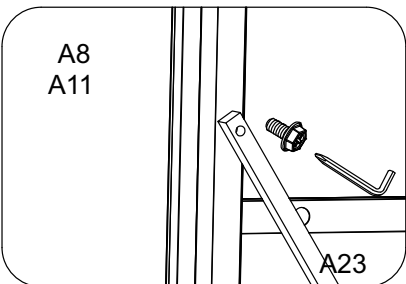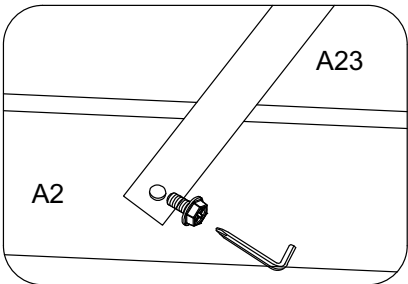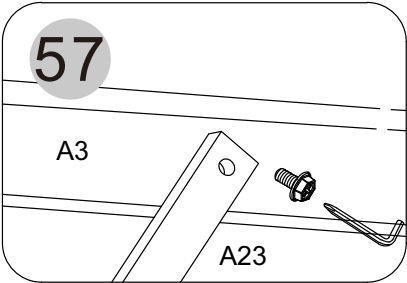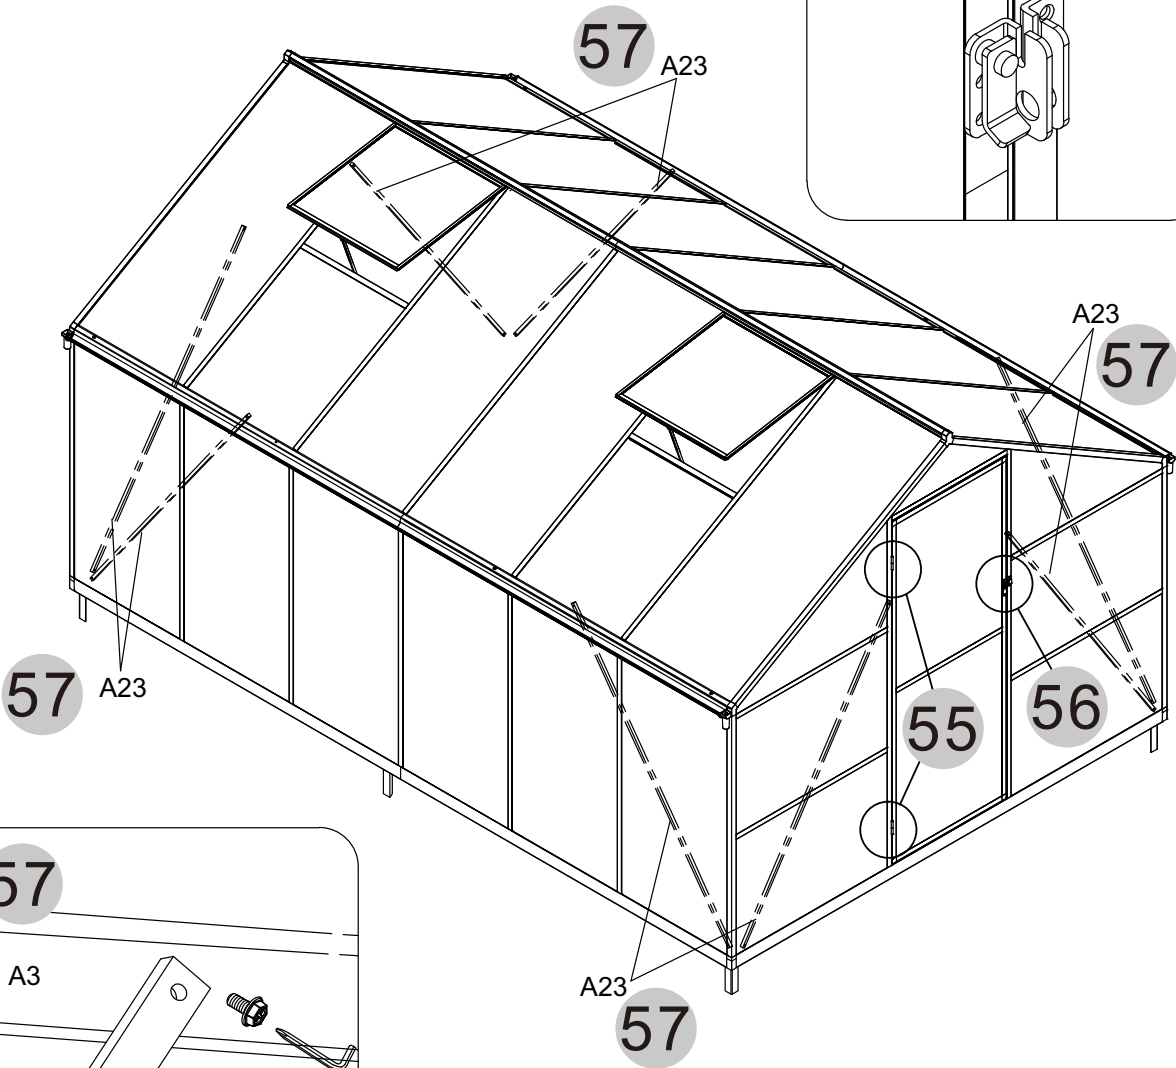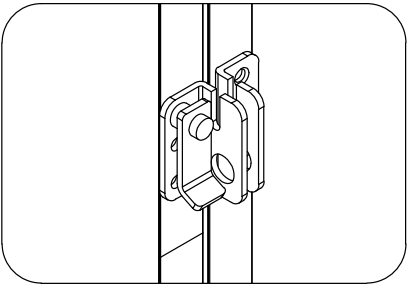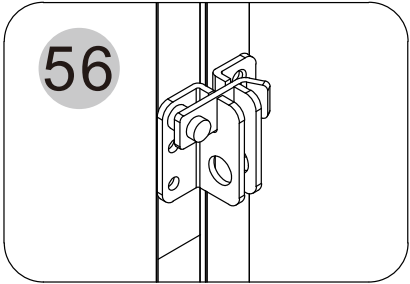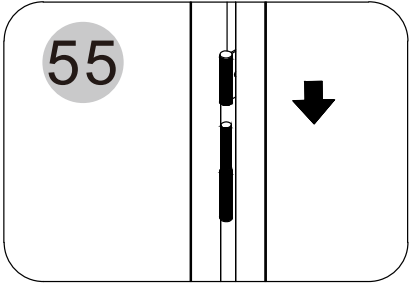

Picture	NO.	Qty.
	A25	x5
	A26	x10
 M6x12	H8	x30
	H21	x15

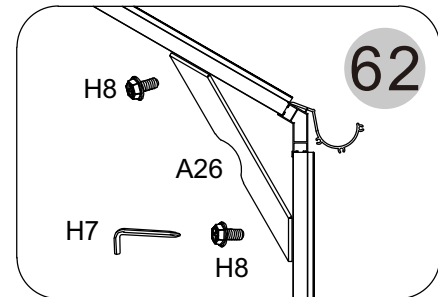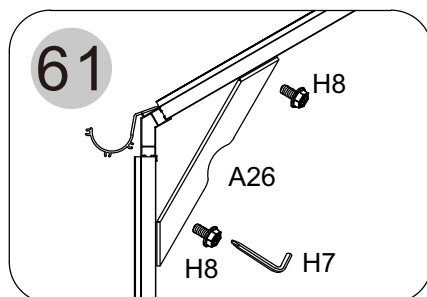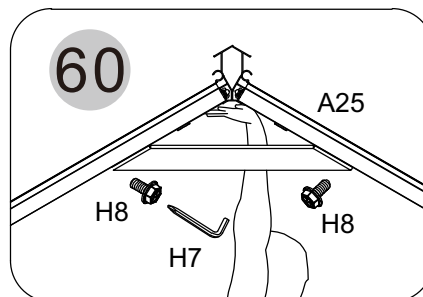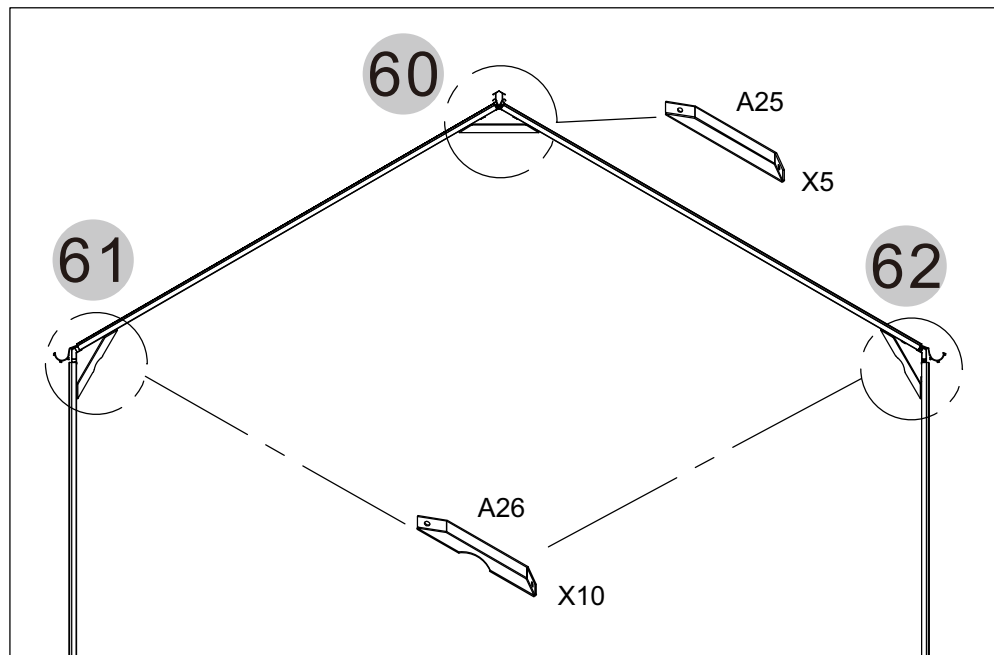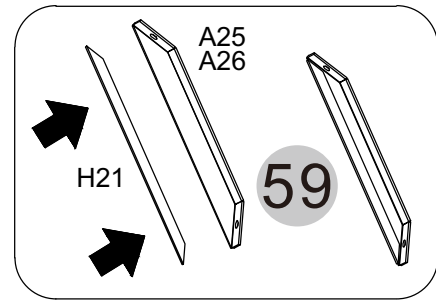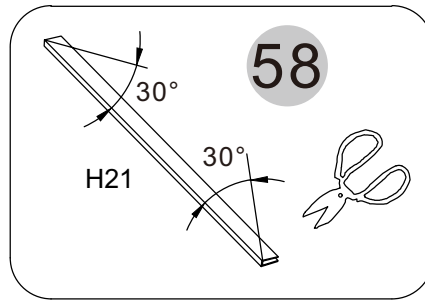

Check and tighten all screws to ensure that the greenhouse is sturdy.