








Assembly instruction for

DESCRIPTION : FAN BACK CHAIR W/WOODEN SEAT


Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly. and follow the assembly step to assemble your newly purchased product correctly and efficiently .


| PART LIST | | | |
|-----------|------------------|------|-----|
| NO | PART DESCRIPTION | CODE | QTY |
| A | CHAIR BACK FRAME | | 1 |
| B | FRONT LEG | | 2 |
| C | BOX SEAT | | 1 |
| D | WOODEN SEAT | | 1 |

| NO. | HARDWARE LIST | | QTY |
|-------------------------------|---|----------------|-----|
| 1 |  | M4 x 32mm | 4 |
| 2 |  | M6 x 40mm | 1 |
| 3 |  | M6 x 60mm | 4 |
| 4 |  | M6 x 70mm | 4 |
| 5 |  | M6 | 9 |
| 6 |  | M6 x 19MM | 9 |
| 7 |  | M4 x 110mm BLK | 1 |
| HARDWARE LOCATED IN CHAIR BOX | | | |



STEP 1

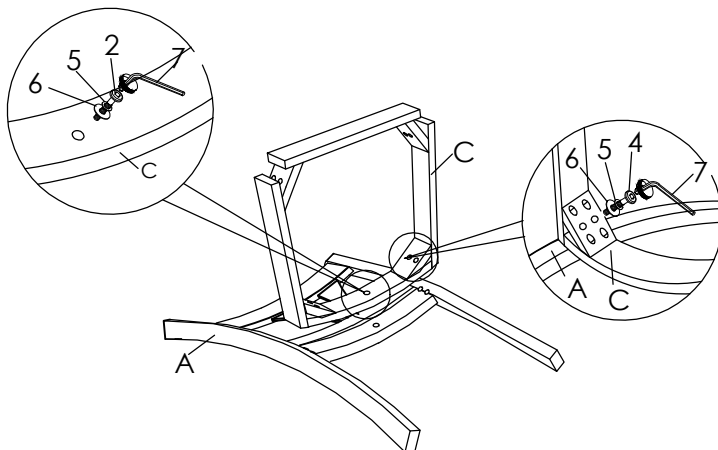

STEP 2

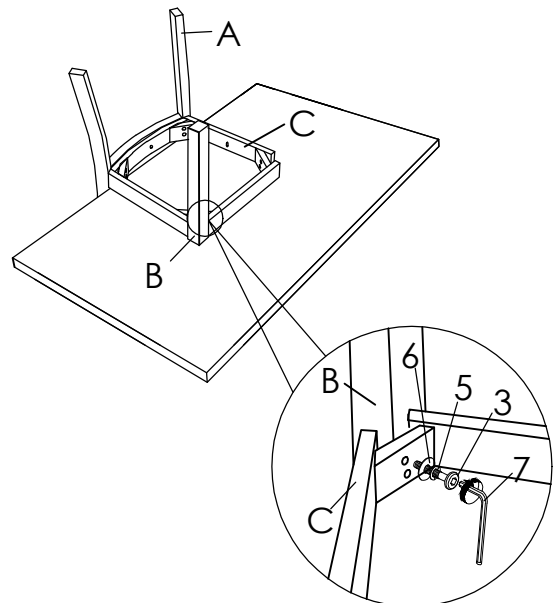

STEP 3

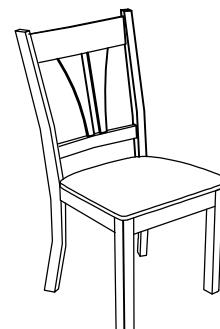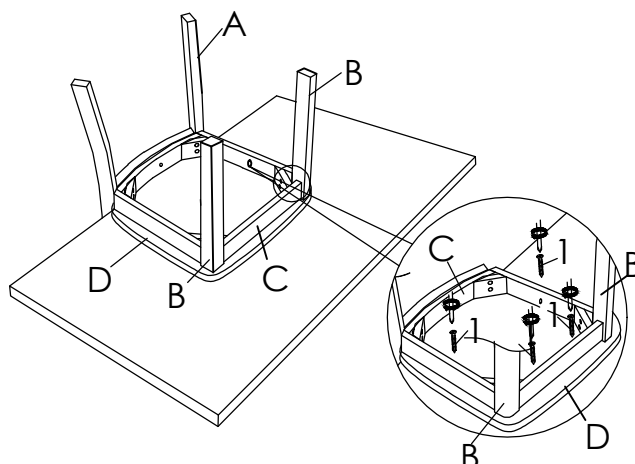

COMPLETE ASSEMBLY