

ASSEMBLY INSTRUCTION

FULL BED

Page : 1 OF 2


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

ASSEMBLY TIPS:

Remove hardware from box and sort by size.

Please check to see that all hardware and part are present prior start of assembly.

HEADBOARD

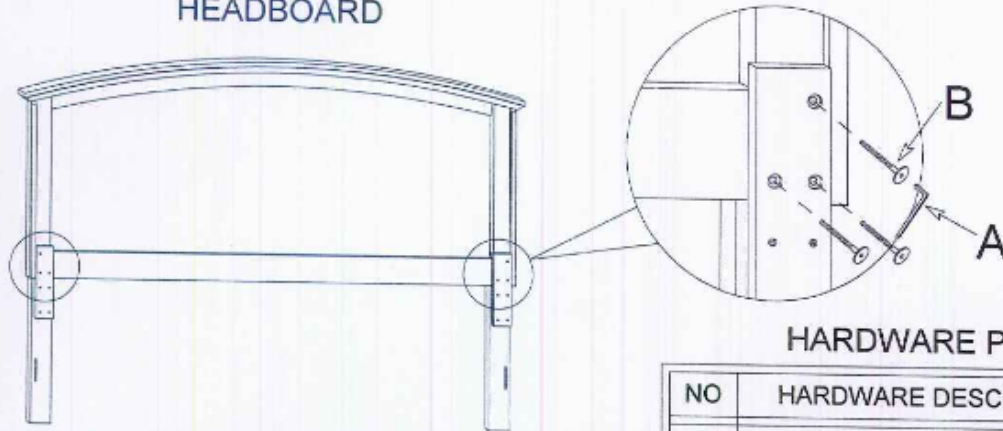

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Bolt M6 x 35mm	6PCS
B.	Allen Key	1PC
Screw Driver Not Provide !!!		

TIPS: Attach & tighten the Headboard Leg (R&L) to the Headboard. Use JCBC Bolt M6 x 35mm & Allen Key to fix.

ASSEMBLY INSTRUCTION


FULL BED 54" x 75"

Page : 2 OF 2

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.


STEP 1.

TIPS : Insert Side Rail to the hole of Headboard.

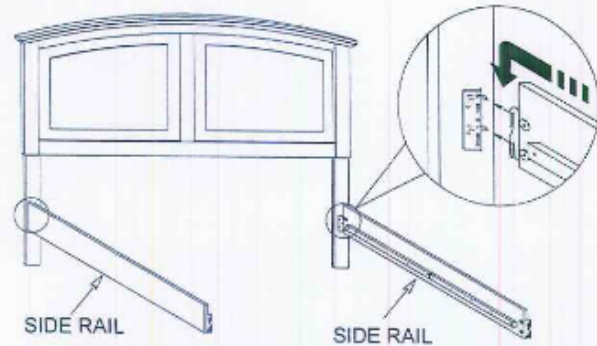

STEP 2.



TIPS : Repeat step 1 to joint foot board.

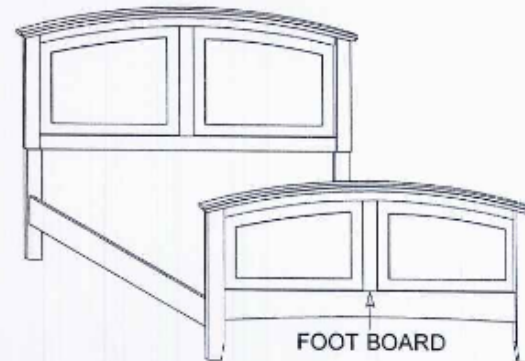

HARDWARE PART 2


NO	HARDWARE DESCRIPTION	QTY
C.	Chipboard Screw M4 x 32mm 	6PCS
D.	JCBC Bolt M6 x 35mm 	3PCS
E.	Adjuster Screw M6 x 24mm 	3PCS
SCREW DRIVER NOT PROVIDE !!!		

STEP 3.

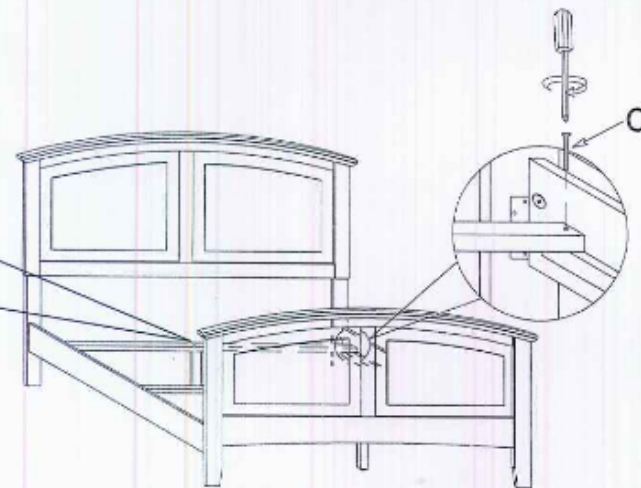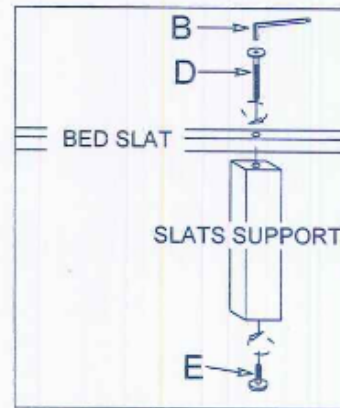

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten with screw through the pre-drilled hole of Bed Slat.

COMPLETE SET

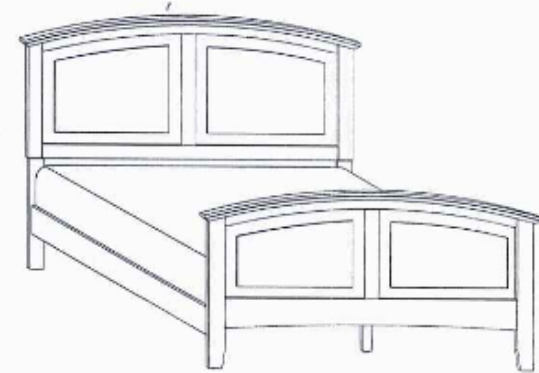

* TOTAL SLAT : 3PCS (WITH JCBC HOLE) + 3PCS (SLATS SUPPORT)