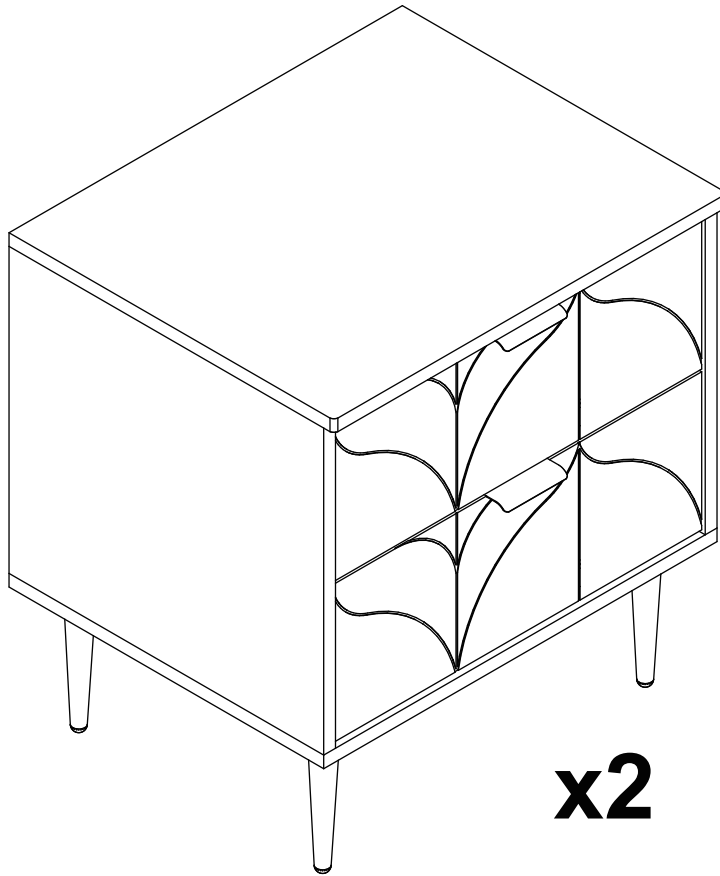


ASSEMBLY INSTRUCTION

Item Number : N606P199349W



TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts there are some issues, please don't hesitate contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.











2. Insert the screws in holes and tighten screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole some parts are difficult to install, please adjust the tightness of the screws.

3. 2 people are recommended to finish.

Parts List			Hardware List		
NO	ITEM	QTY	NO	ITEM	QTY
1	Bottom panel	1	A	Cam Bolt 	16
2	Left side panel	1	B	Dowel 	8
3	Right side panel	1	C	Cam lock 	16
4	Backboard	1	D	Screw (M3.5x12mm) 	16
5	Top panel	1	E	Iron foot 	4
6	Left side panel of drawer	2	F	Screw (M3.5x14mm) 	16
7	Right side panel of drawer	2	G	Screw (M4x25mm) 	8
8	Drawer back panel	2	H	Handle 	2
9	Drawer bottom panel	2	I	Hole sticker 	8
10	Drawer panel	2	J	Backboard buckle 	4
			K	Allen key 	1
			CL	Drawer slide 	2
			CR	Drawer slide 	2
			DL	Drawer slide 	2
			DR	Drawer slide 	2


Part List

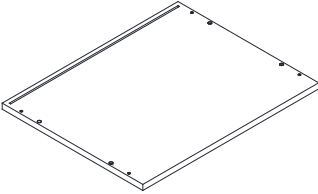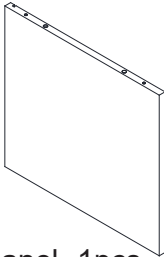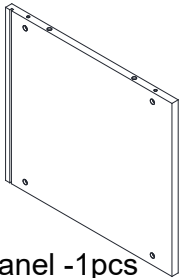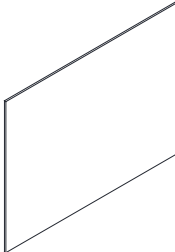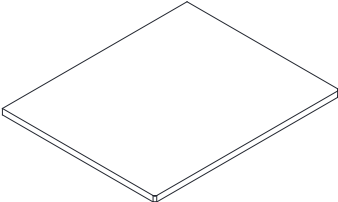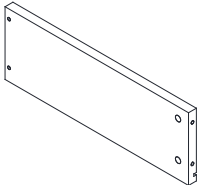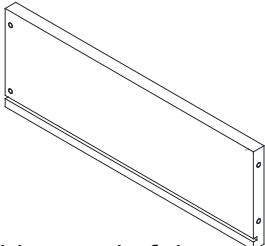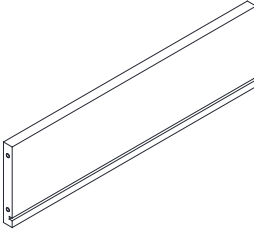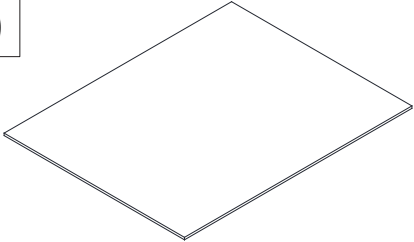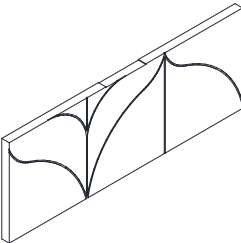Hardware List+N606P199349W

1  Bottom panel -1pc	2  Left side panel -1pcs	3  Right side panel -1pcs
4  Backboard -1pcs	5  Top panel -1pc	6  Left side panel of drawer -2pc
7  Right side panel of drawer -2pcs	8  Drawer back panel -2pc	9  Drawer bottom panel -2pc
10  Drawer panel -2pcs		


Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

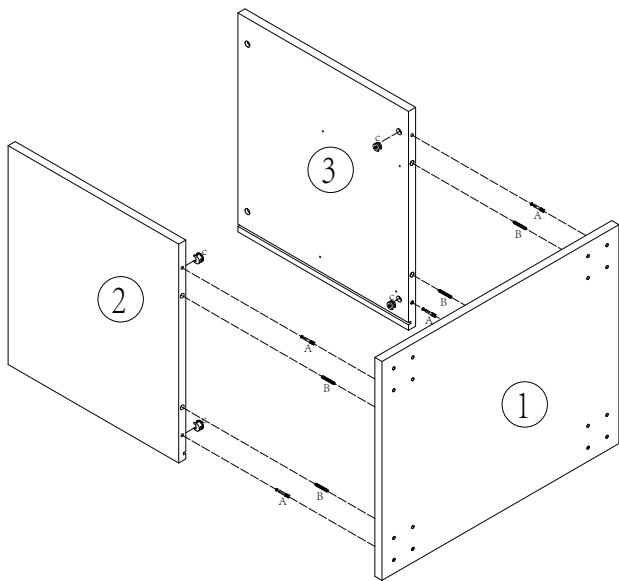Step 1




A Cam Bolt x4	B Dowel x 4	C Cam lock x 4
---------------	-------------	----------------

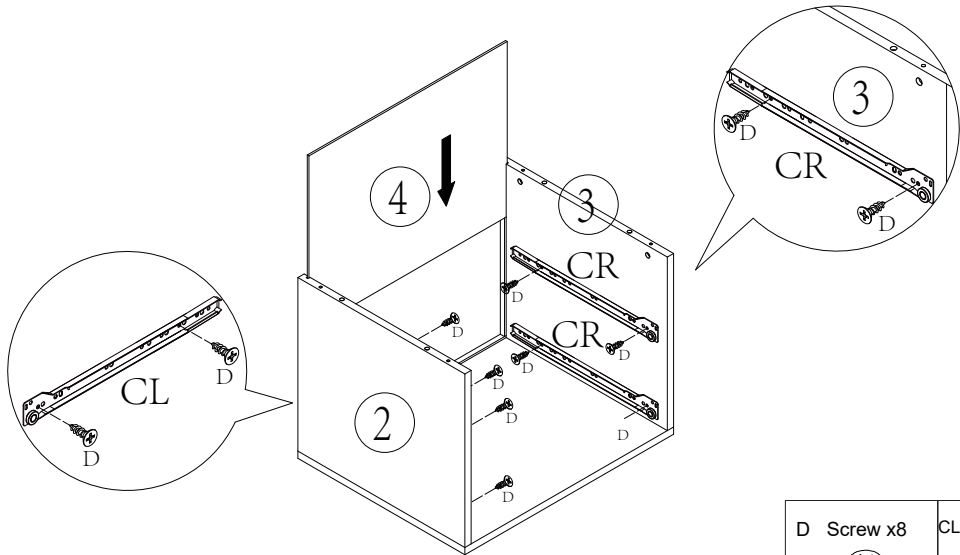Step 2




D Screw x8 M3.5X12mm	CL Drawer slide x 2	CR Drawer slide x 2
-------------------------	---------------------	---------------------

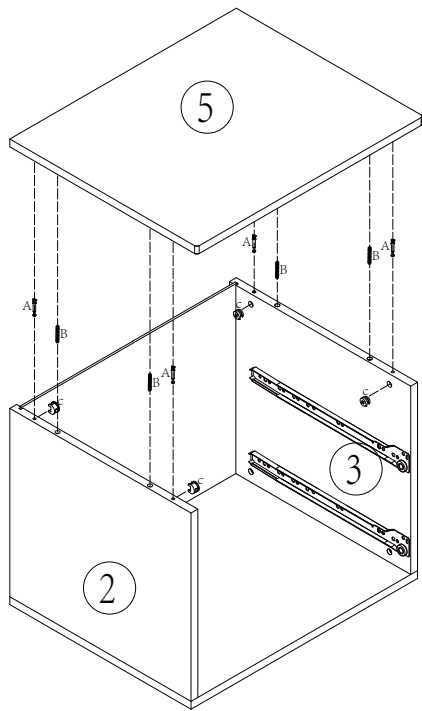
Step 3




A Cam Bolt x4	B Dowel x 4	C Cam lock x 4
---------------	-------------	----------------

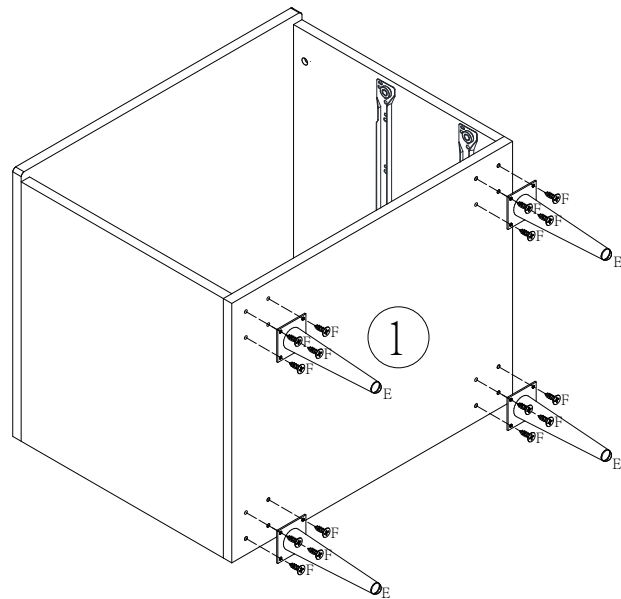
Step 4




E Iron foot X4 	F Screw x 16  M3.5X14mm
---	--

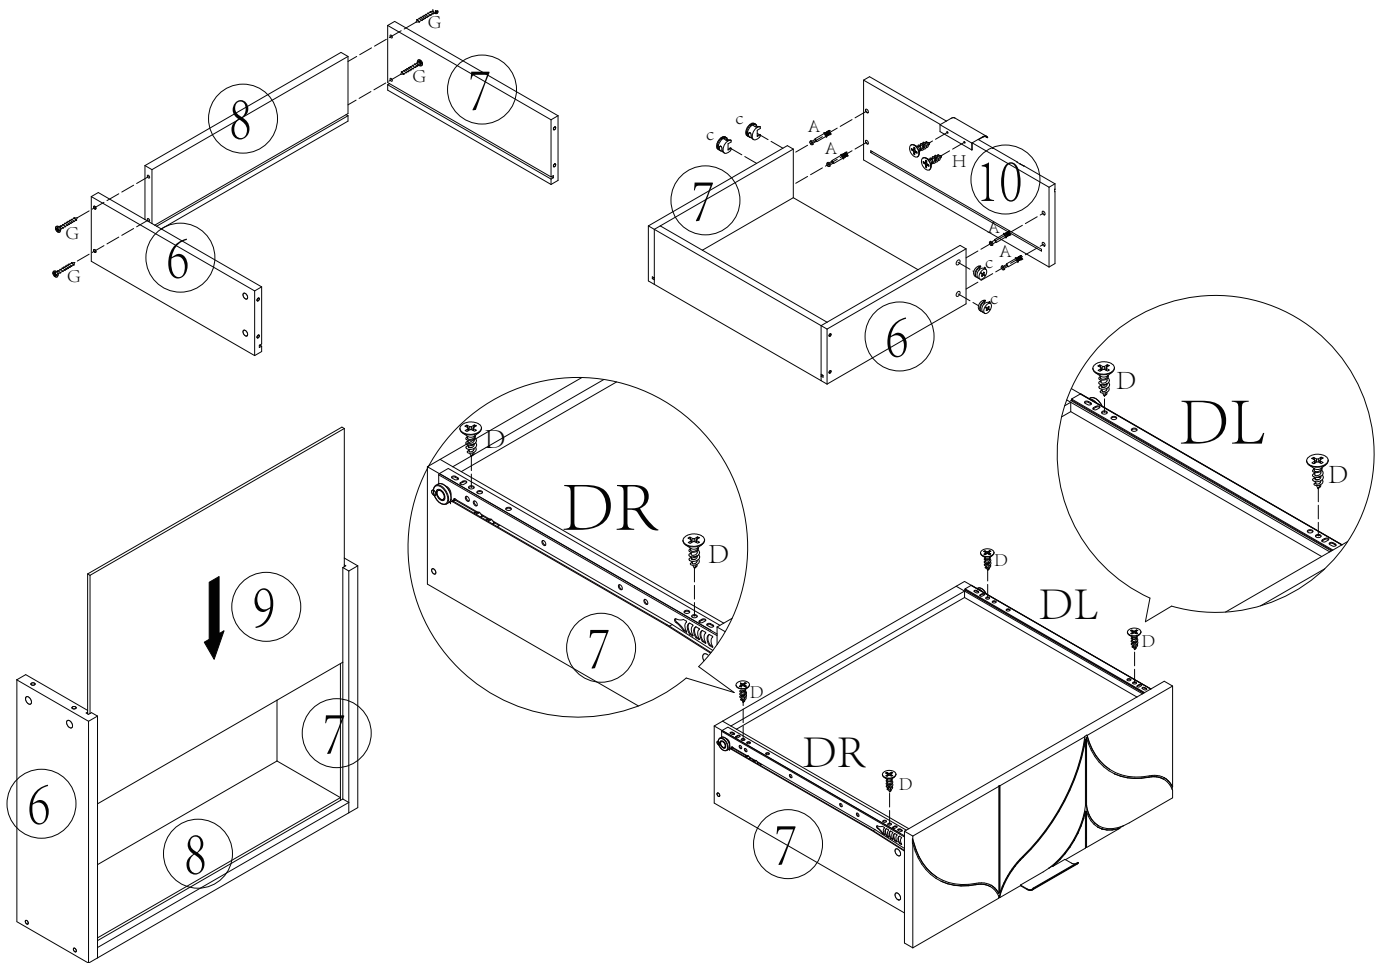Step 5




A Cam Bolt x4 	C Cam lock x 4 	D Screw x4  M3.5X12mm	G Screw x4 	DL Drawer slide x 1 	DR Drawer slide x 1 	H Handle x 1  M3.5X14mm
--	---	--	--	--	--	--

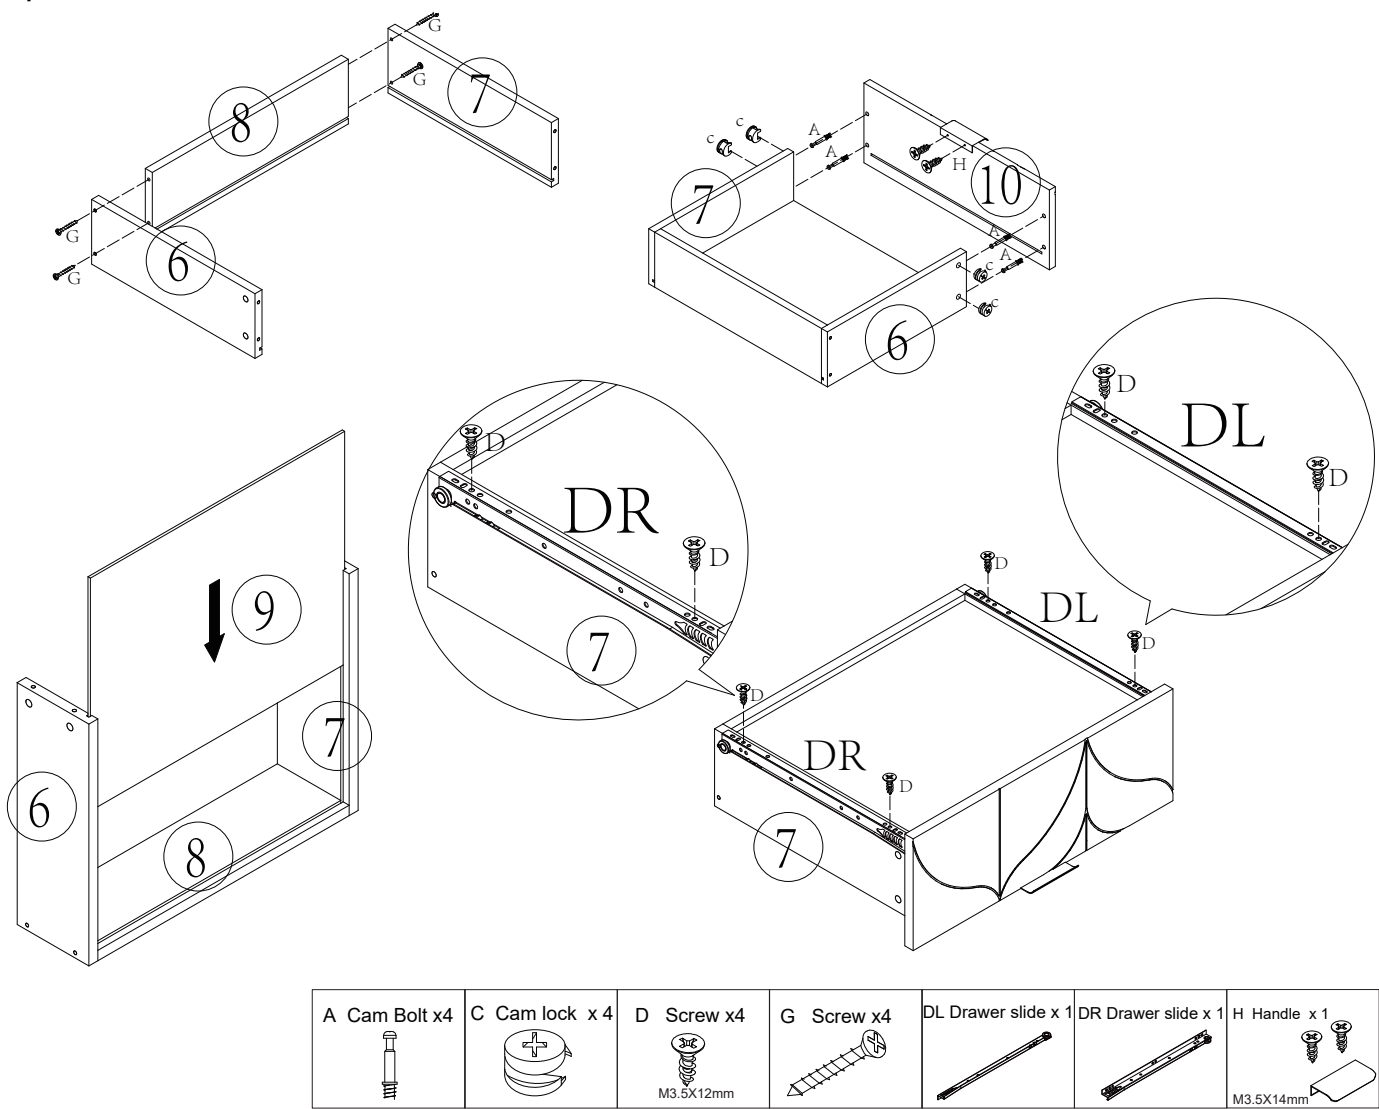
Step 6



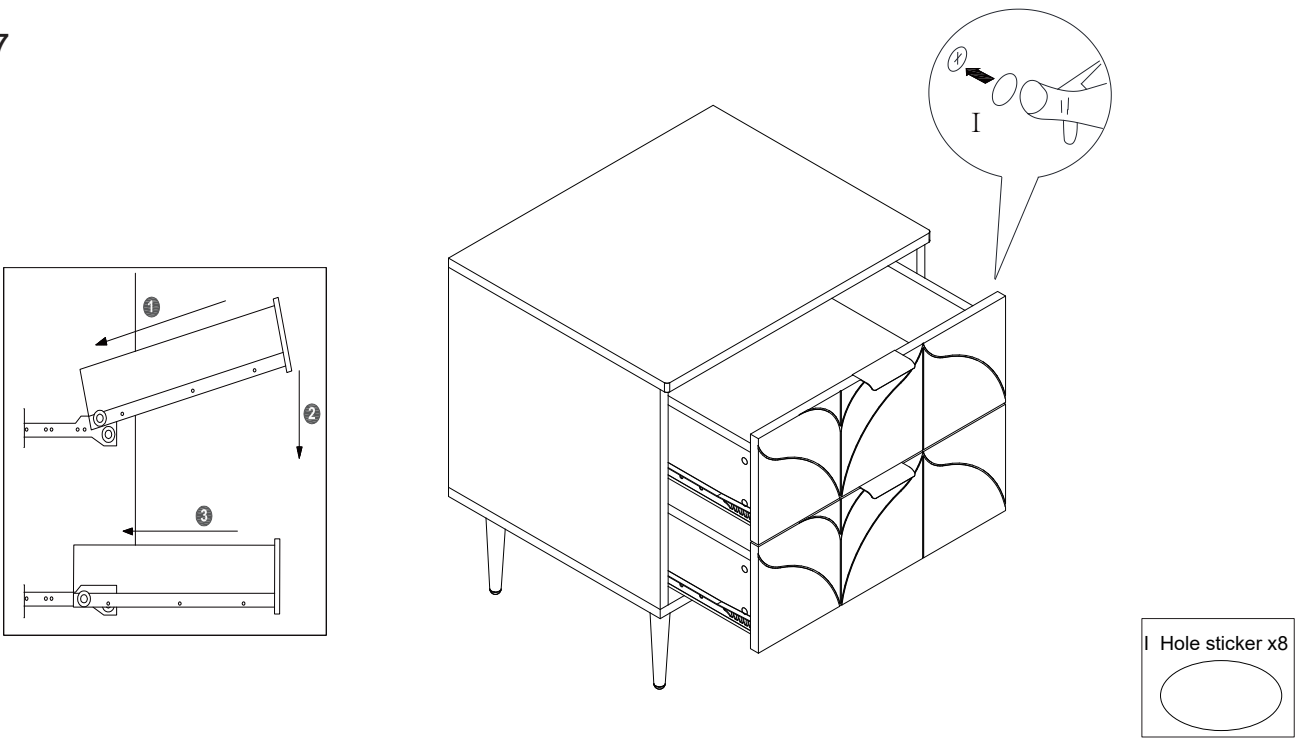Step 7



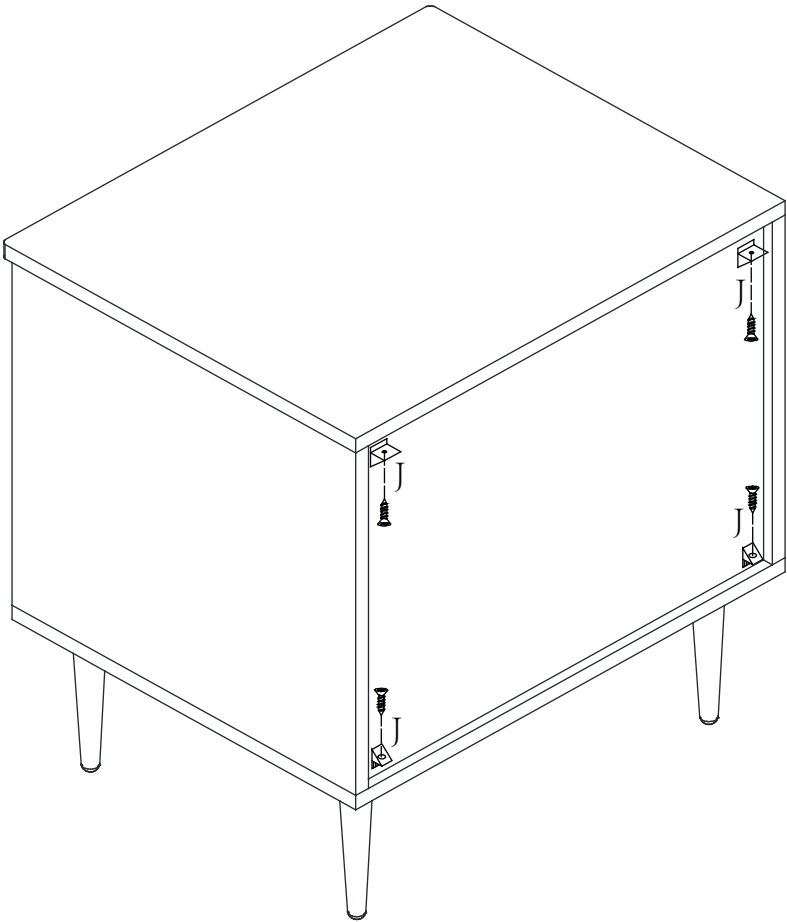Step 8



J Backboard buckle x4

A diagram showing a single J Backboard buckle and a screw. The buckle is a small triangular piece with a 'J' shaped hole and a screw hole. The screw is a standard Phillips head screw.