



NFN111

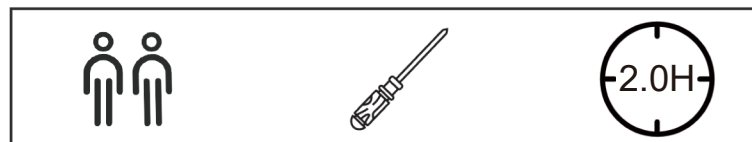


CAUTION:When tightening the screws, tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.













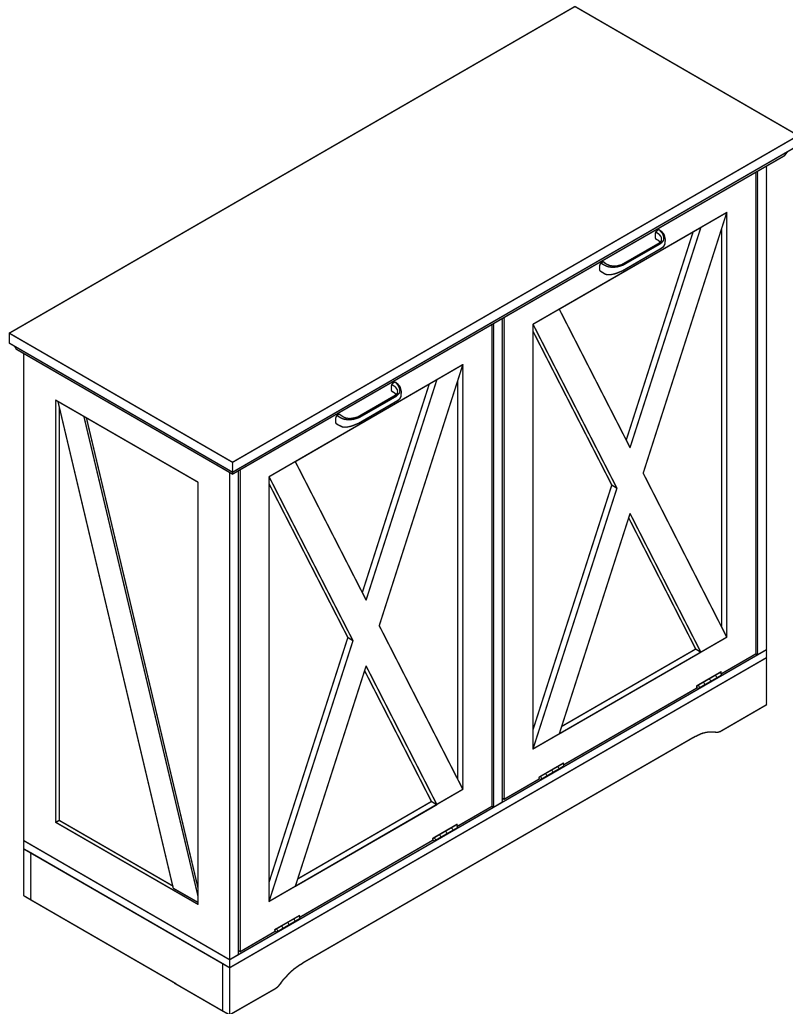



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


E-mail: service@replycenter.net

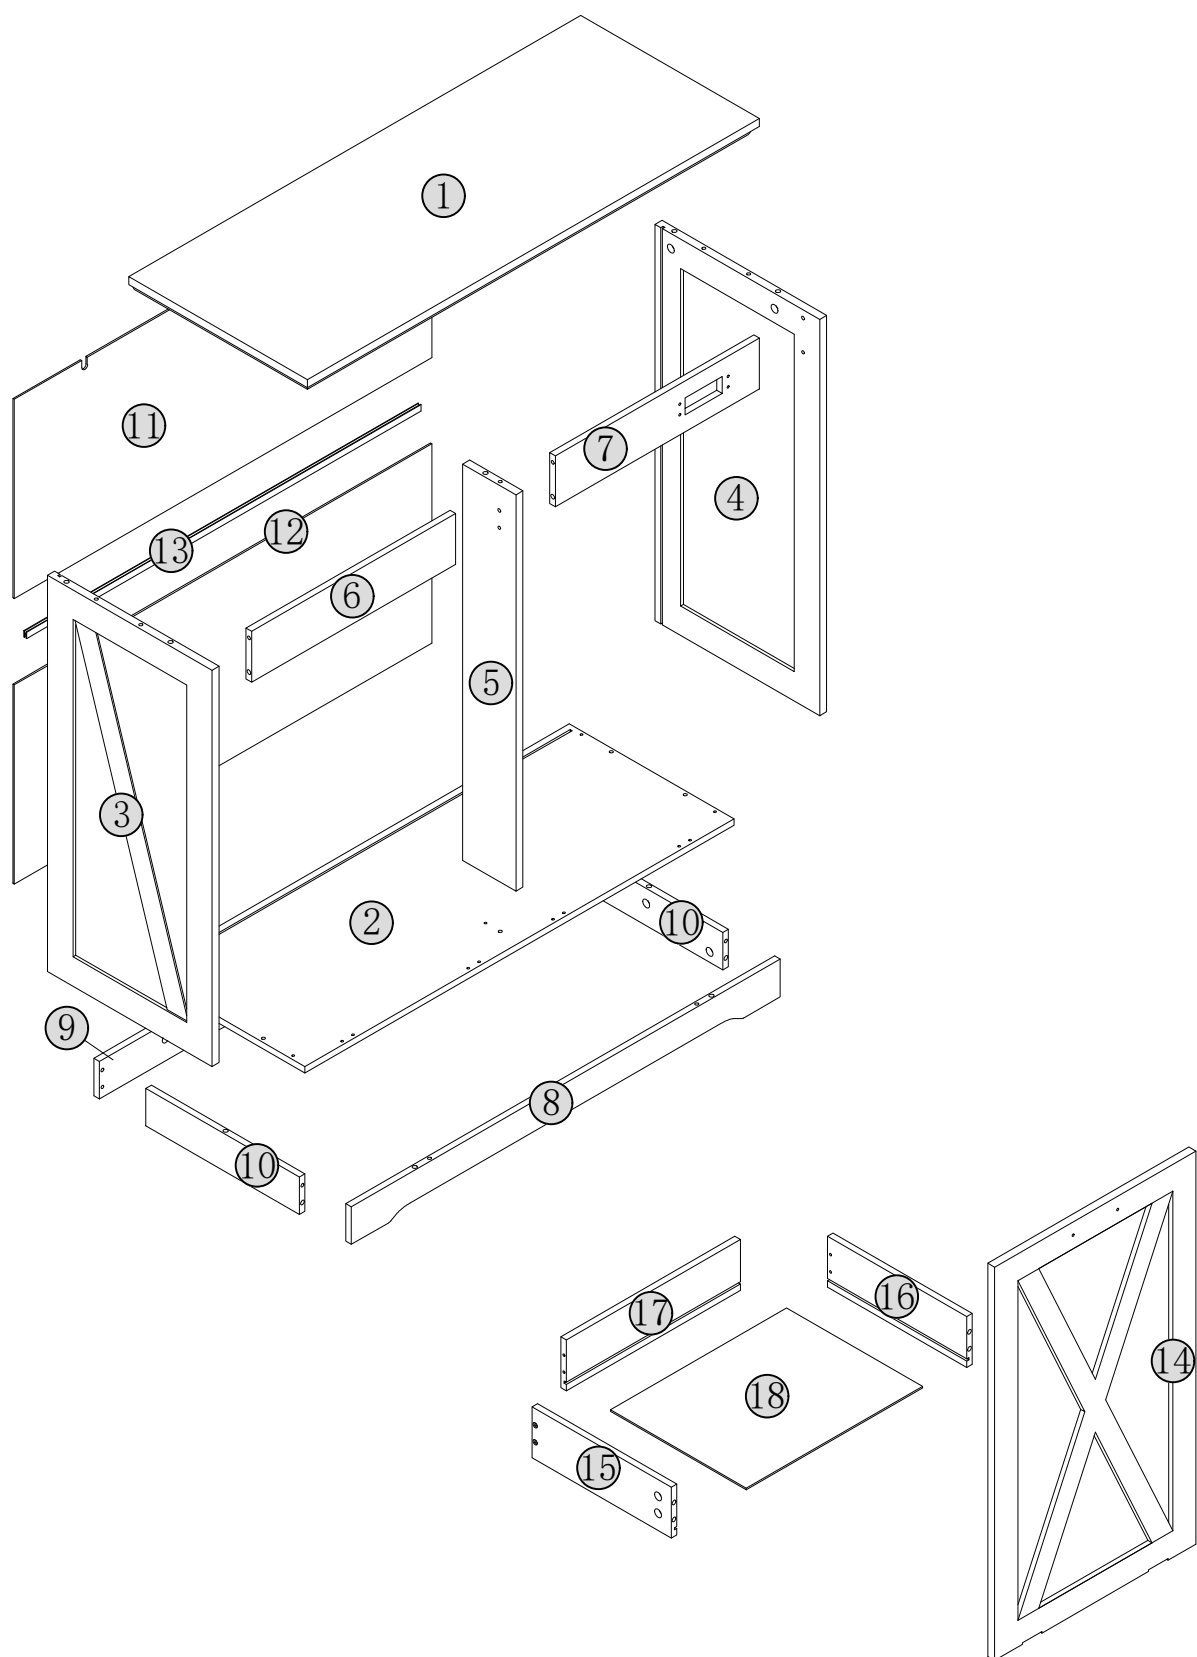


×2

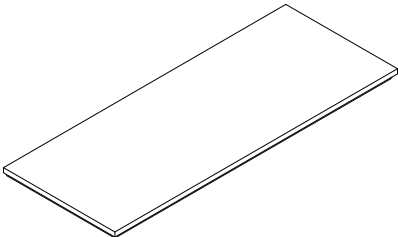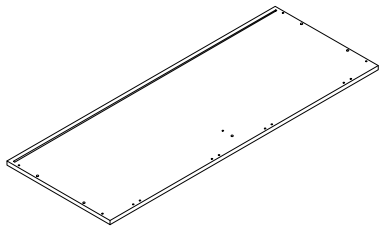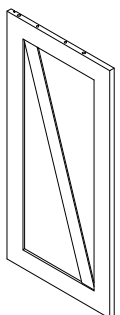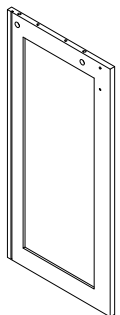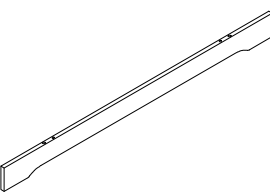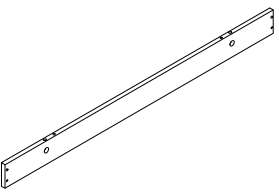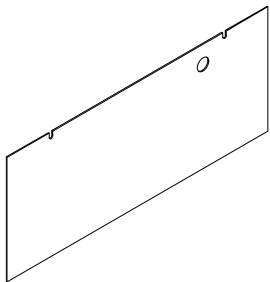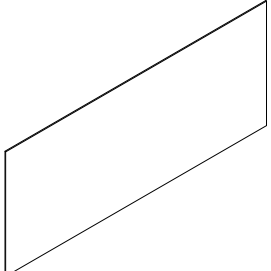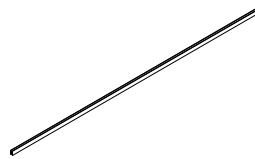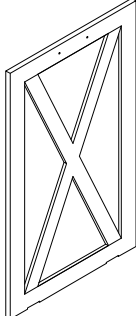①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	⑥  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  2PCS	⑪  1PC	⑫  1PC
⑬  1PC	⑭  2PCS	⑮  2PCS


①⑥  2PCS	①⑦  2PCS	①⑧  2PCS
--	--	--

A×27  ø6×35mm	B×22  ø6×30mm	C×27  ø15×10mm	D×5  ø4×35mm
E×2 	F×2 	G×10  ø4×14mm	H×2 
I×4 	J×20  ø3×12mm	K×8  ø4×30mm	L×2 
M×4  ø4×18mm	N×1 	O×10 	P×10  ø3×14mm
Q×2 	R×2  ø4×40mm		

1

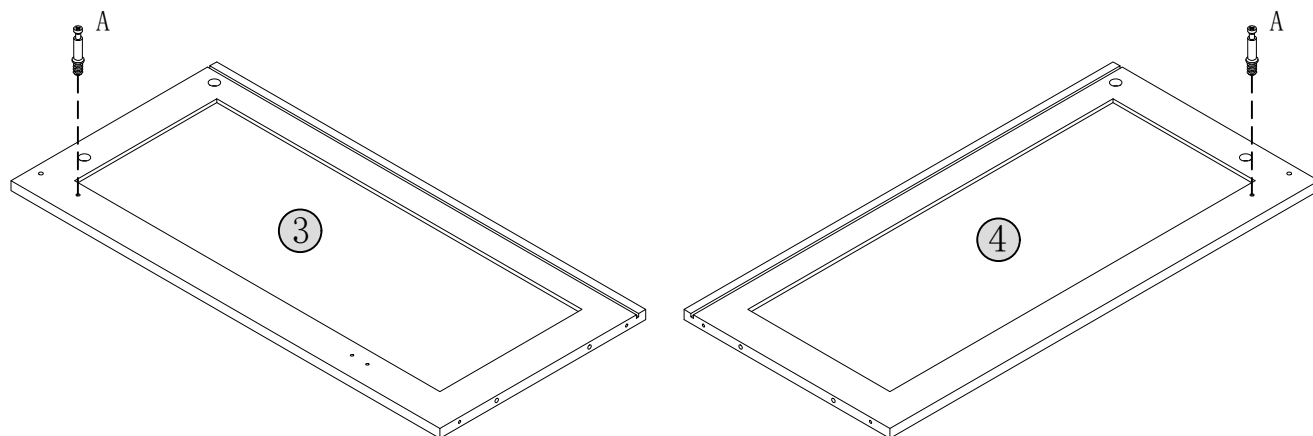 $A \times 2$  $\text{Ø}6 \times 35\text{mm}$


2

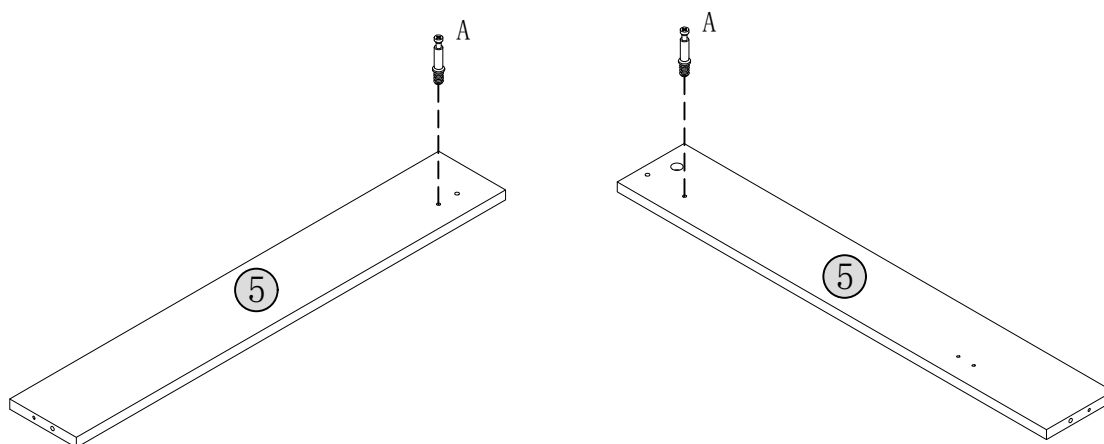 180°

Turn to the other side.

 $A \times 2$  $\text{Ø}6 \times 35\text{mm}$

3

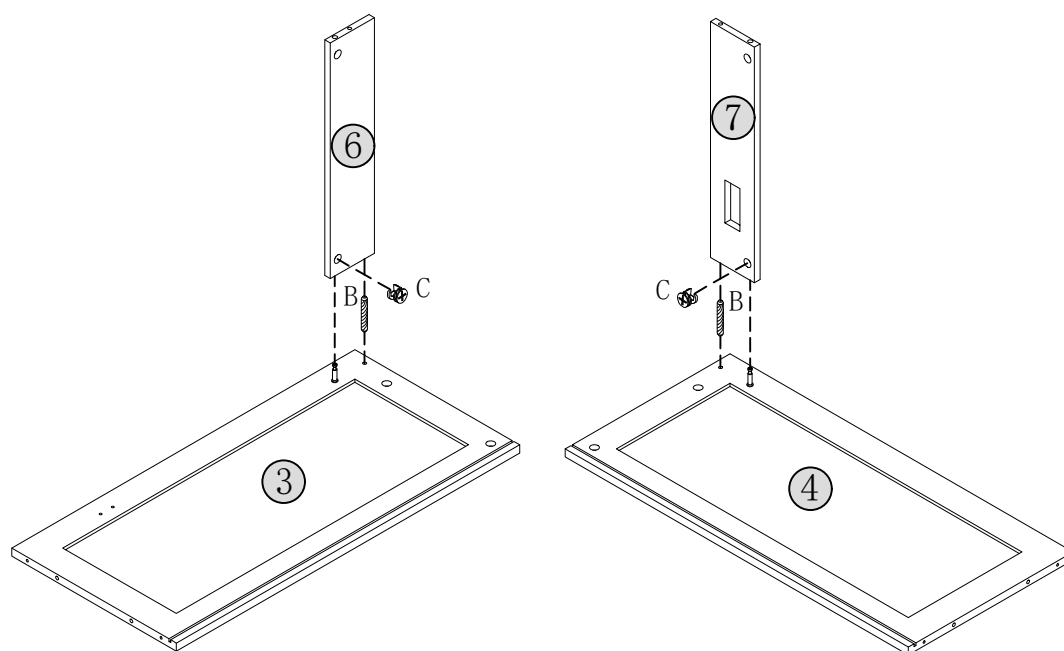


B×2

C×2


 $\phi 6 \times 30\text{mm}$ 
 $\phi 15 \times 10\text{mm}$

4


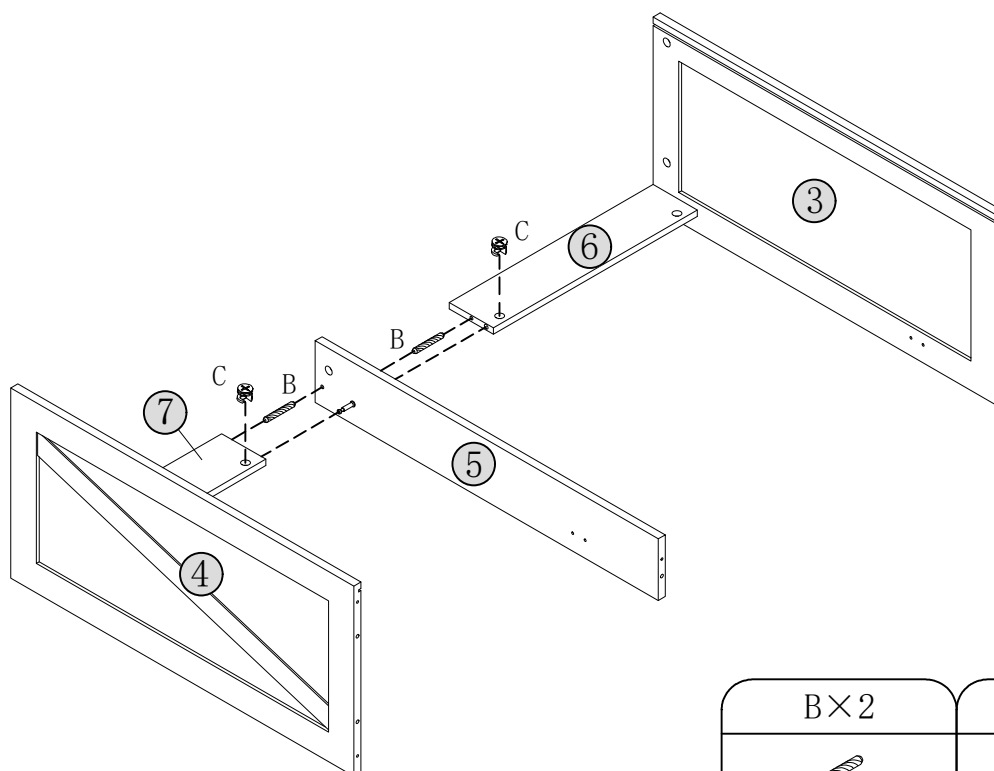


B×2



C×2


 $\phi 6 \times 30\text{mm}$ 
 $\phi 15 \times 10\text{mm}$


5

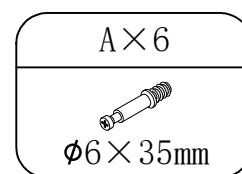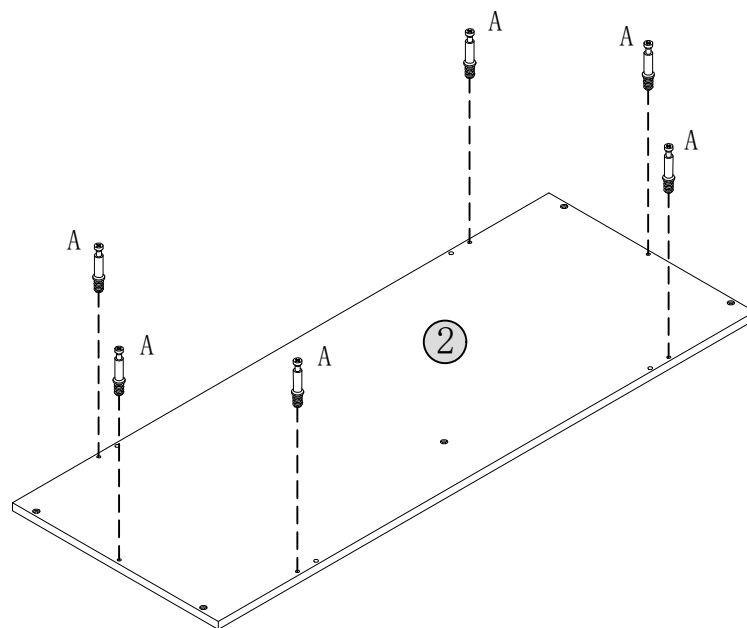


6

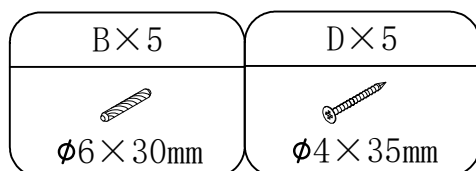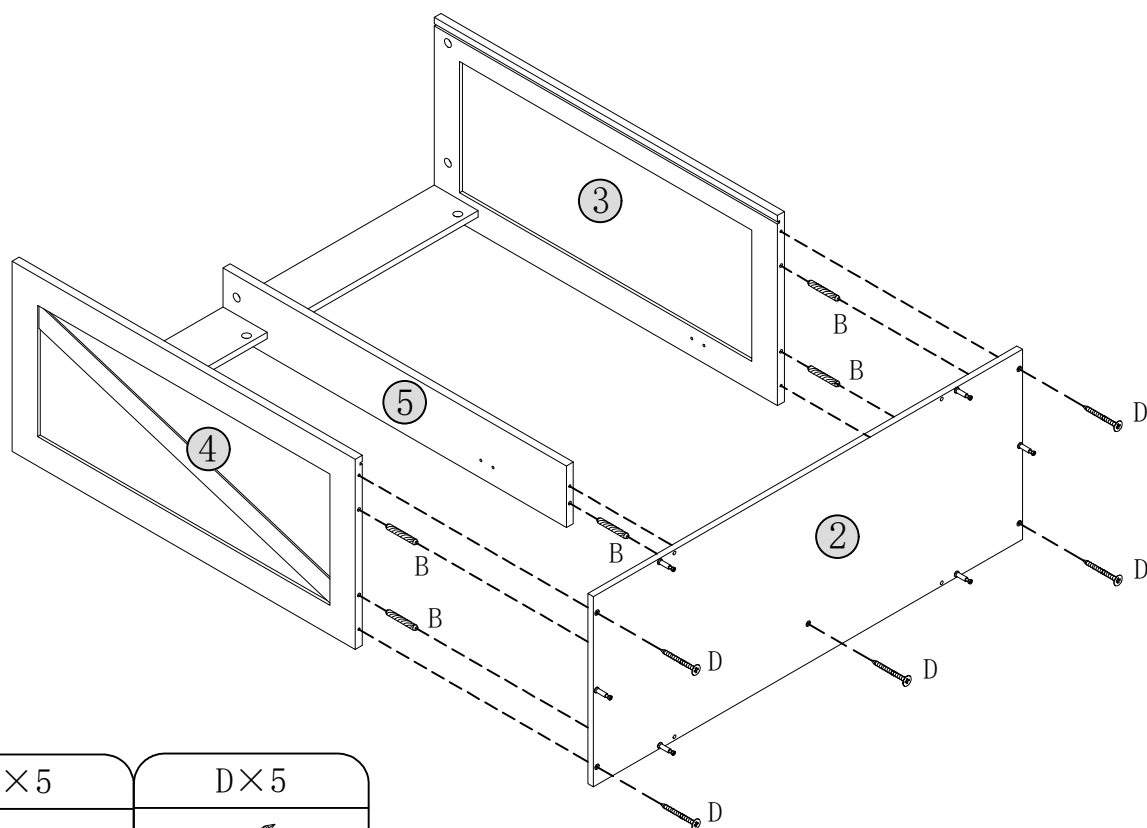


7

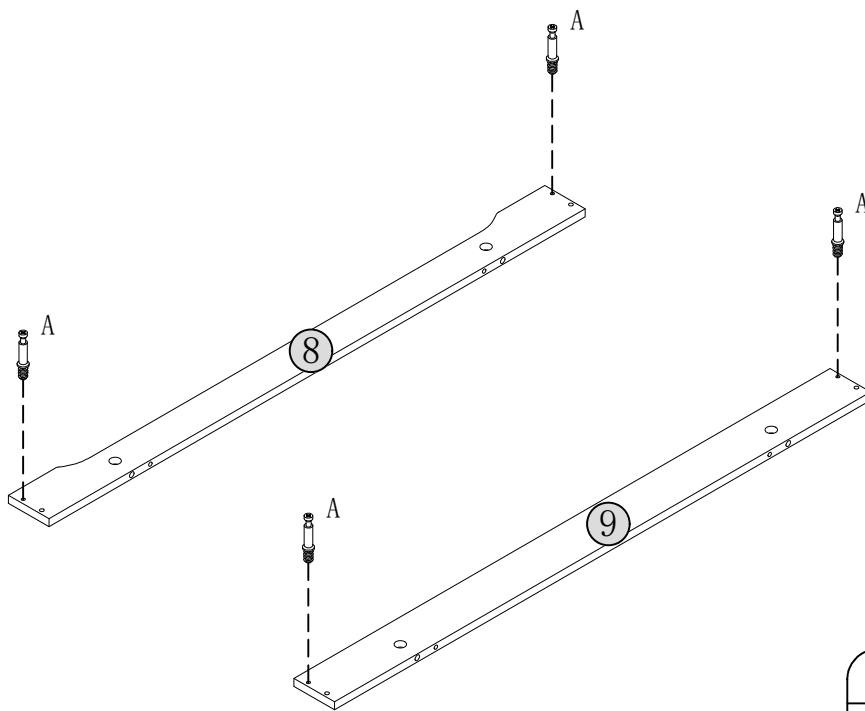 $A \times 4$ 

8

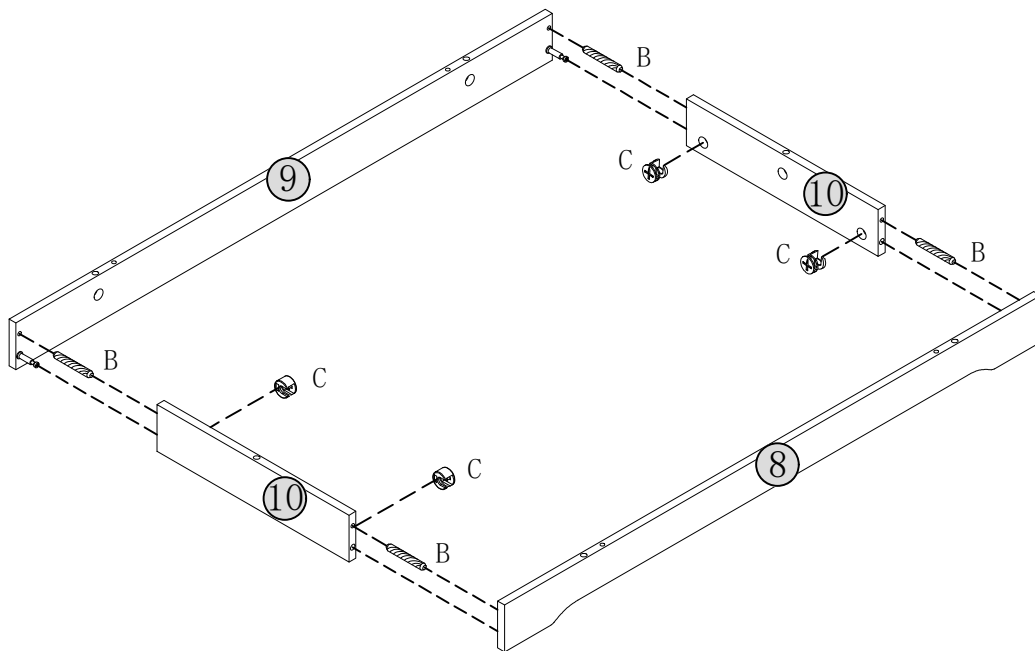 $B \times 4$  $C \times 4$ 

9

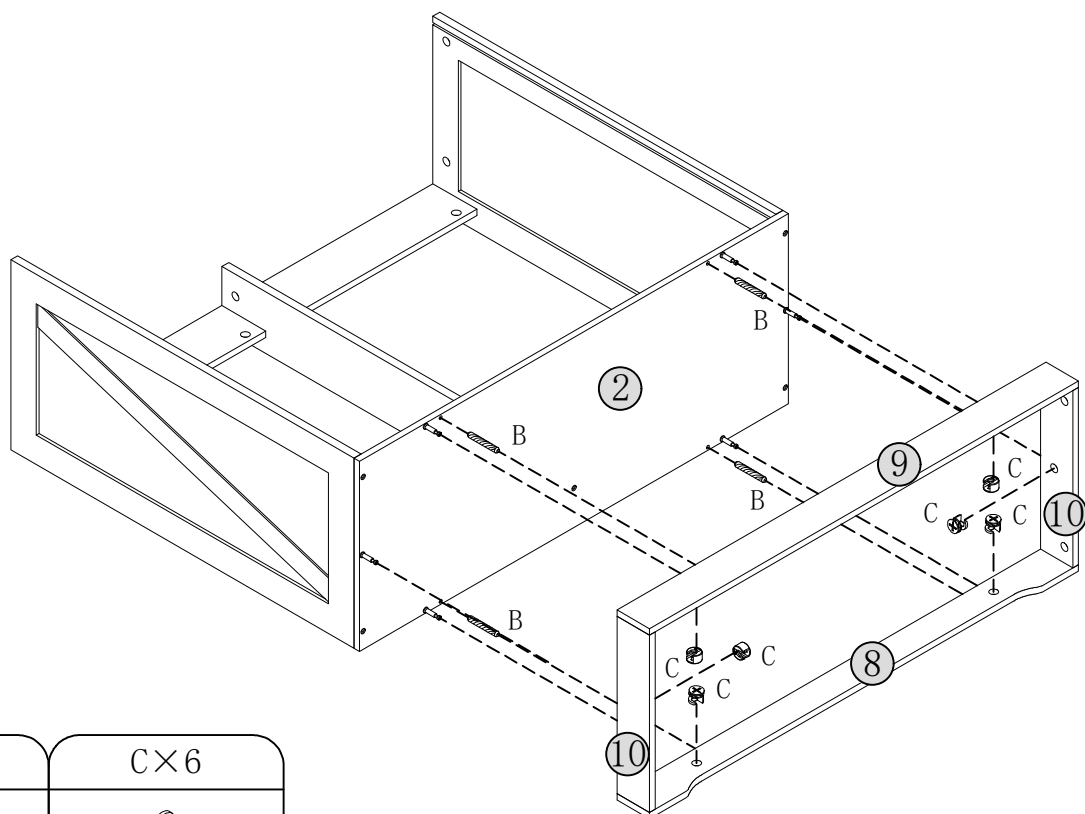



B×4

 $\phi 6 \times 30\text{mm}$


C×6

 $\phi 15 \times 10\text{mm}$

10

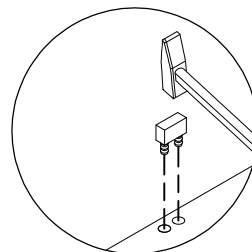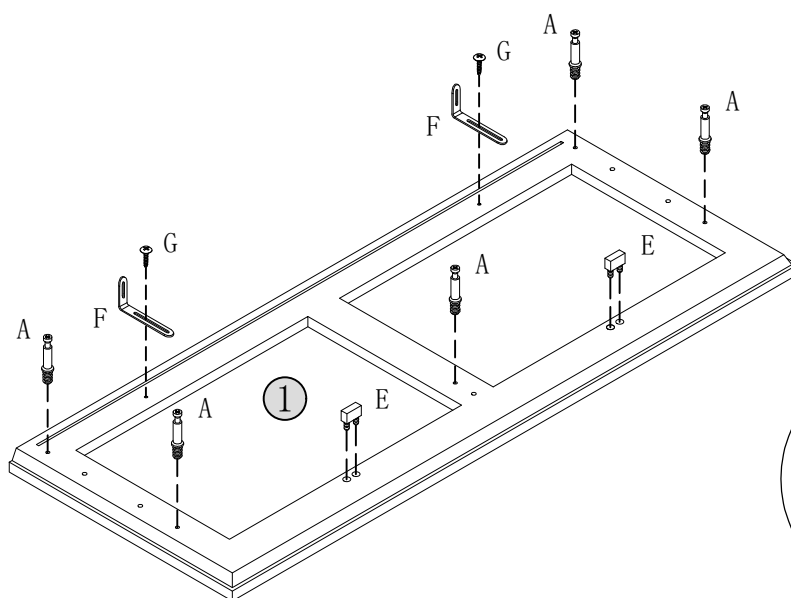

A×5

 $\phi 6 \times 35\text{mm}$

E×2





F×2



G×2

 $\phi 4 \times 14\text{mm}$

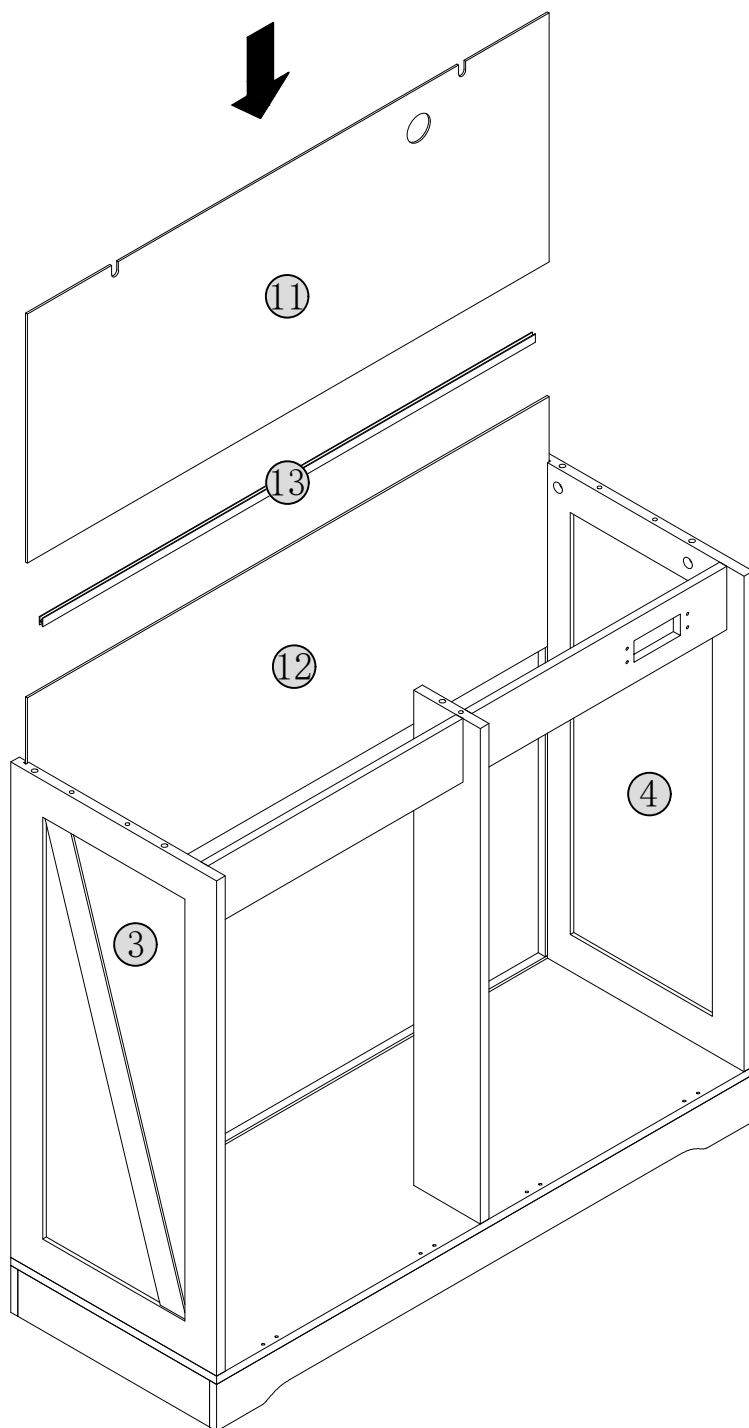

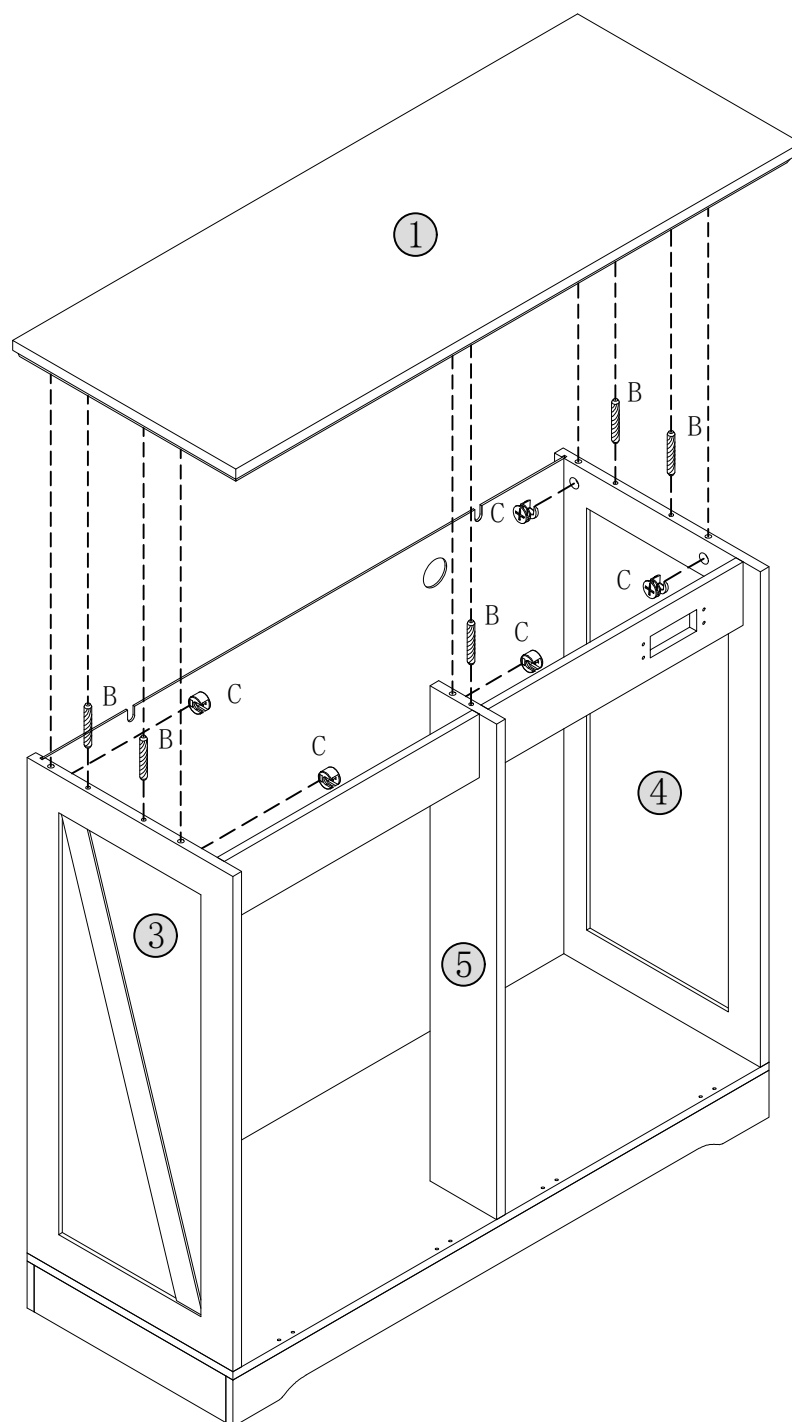

B×5






φ6×30mm


C×5






φ15×10mm


13

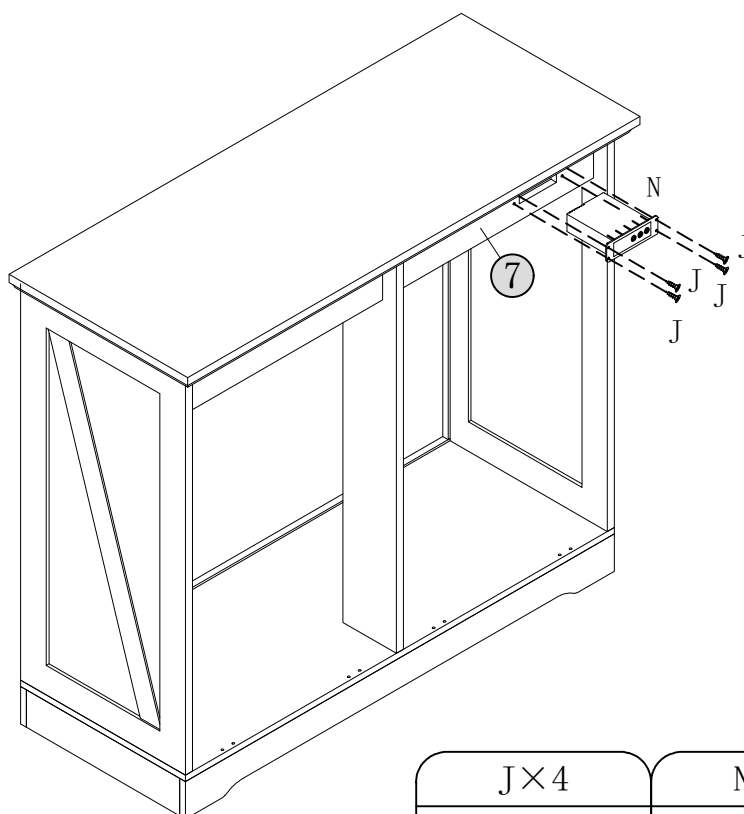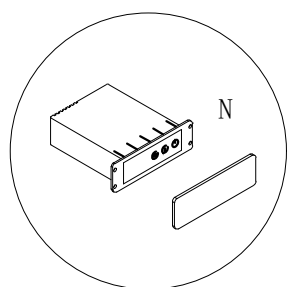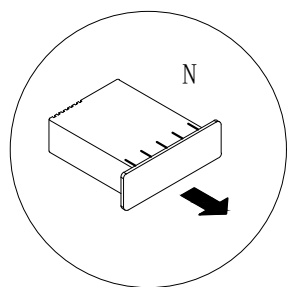


J×4	N×1
 $\phi 3 \times 12\text{mm}$	  

14

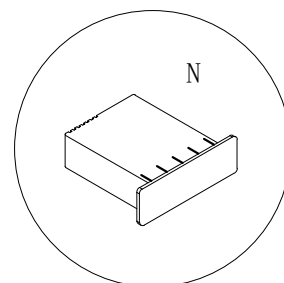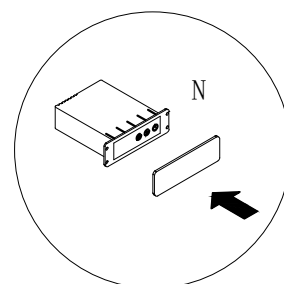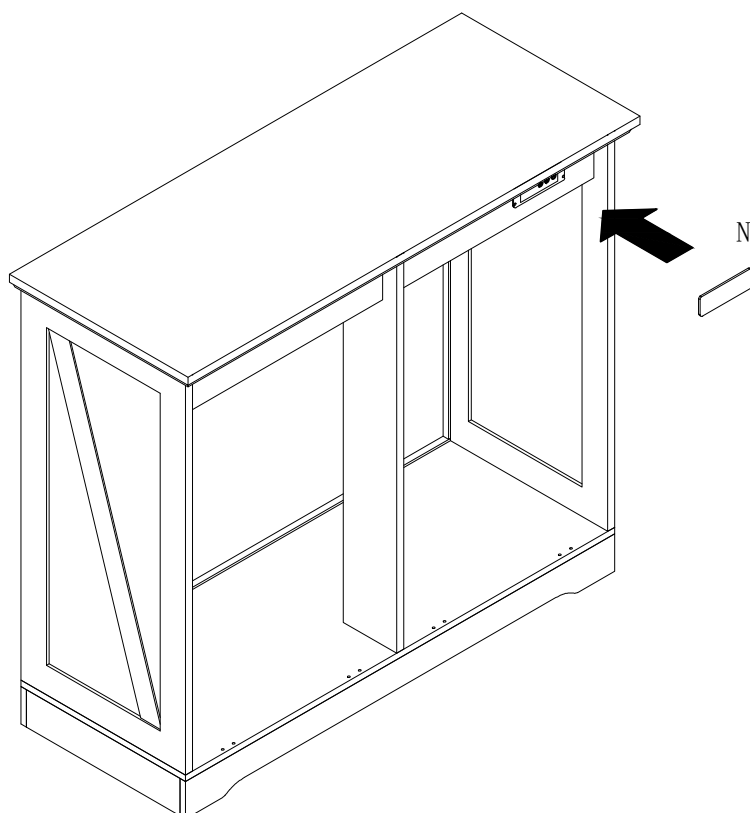


N×1
  


15

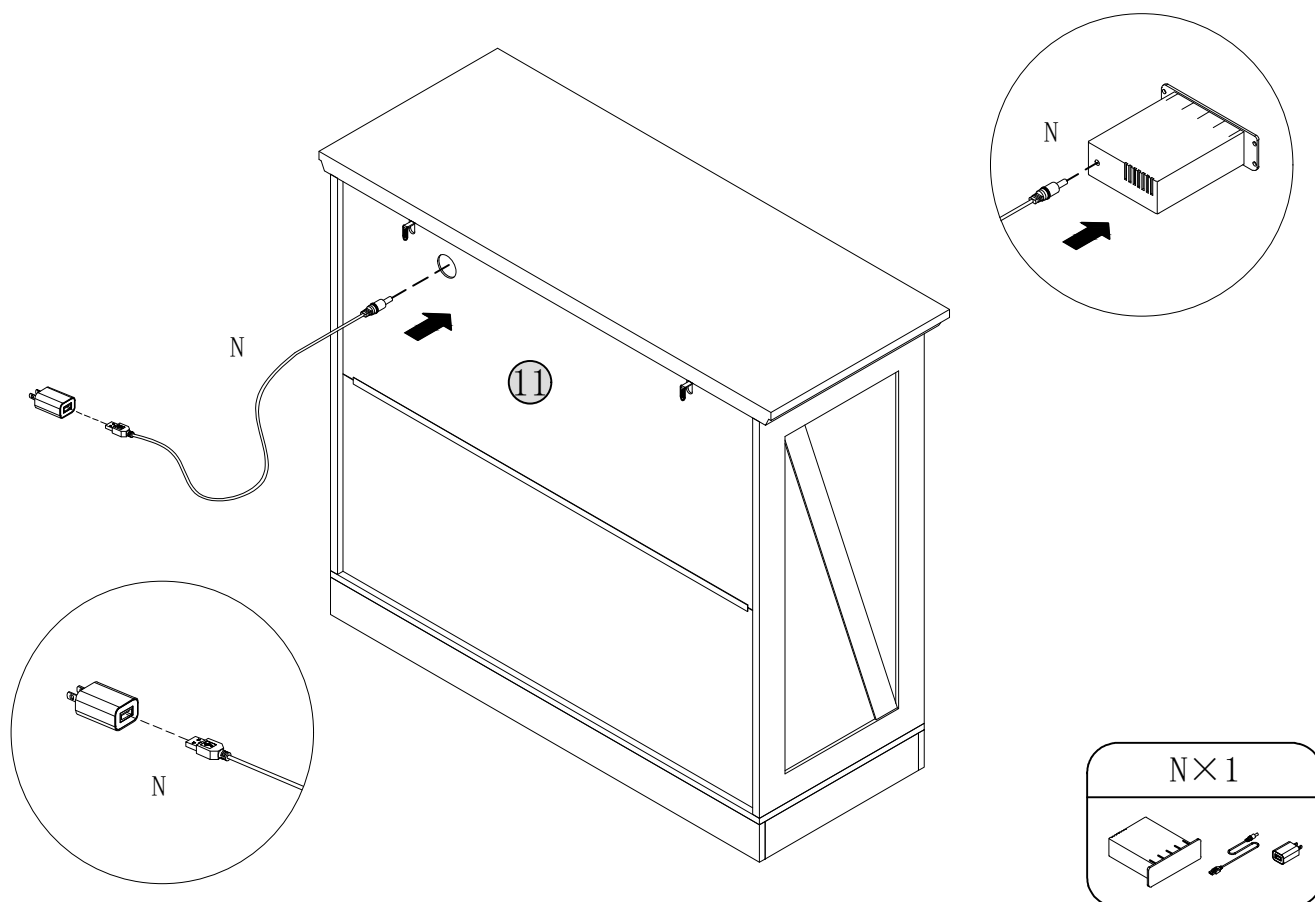


16

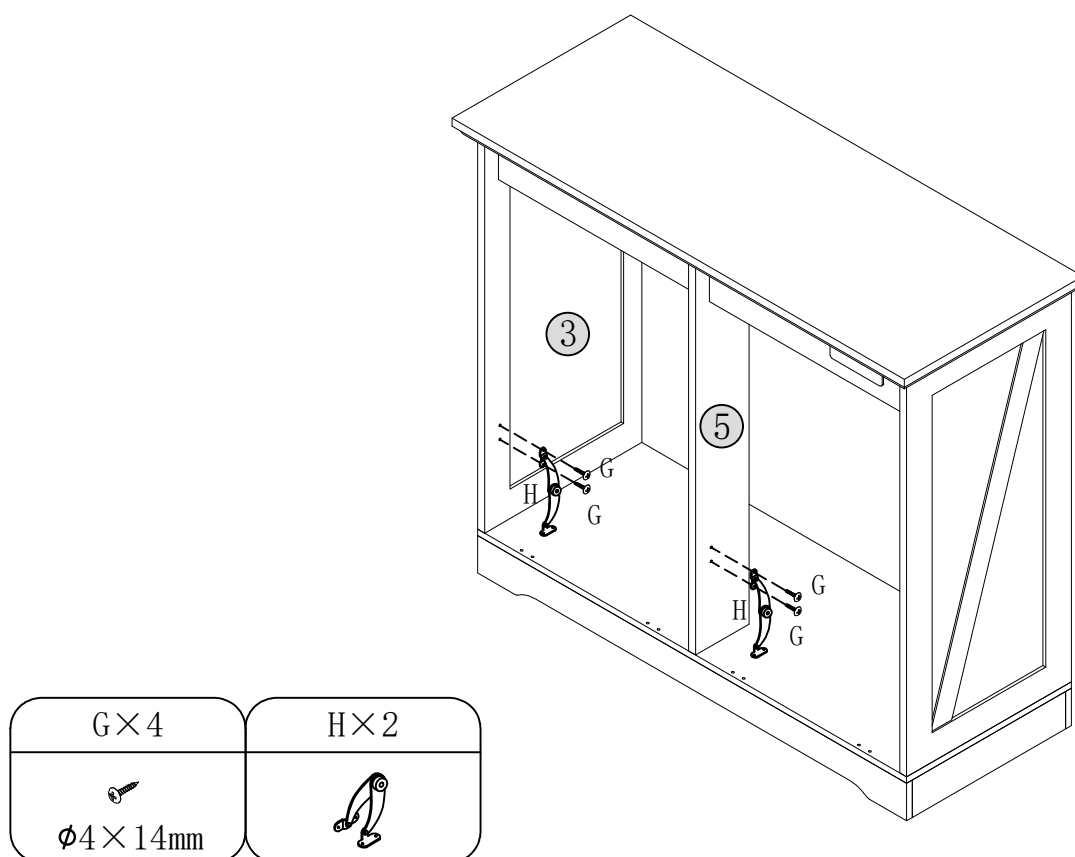


17

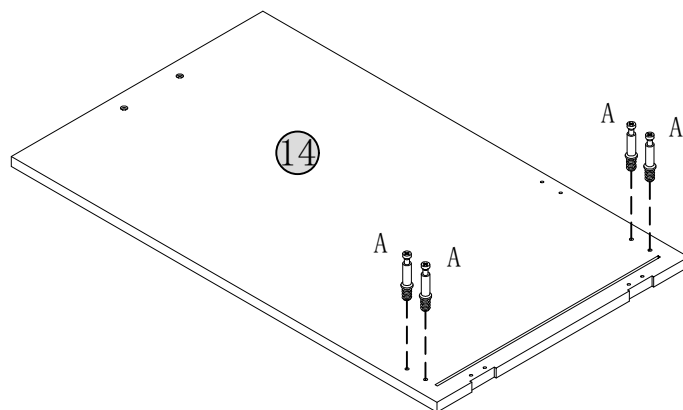


×2

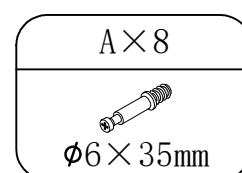


18

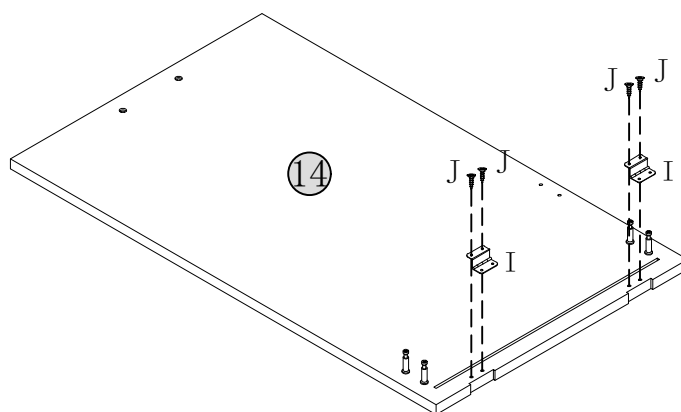


×2

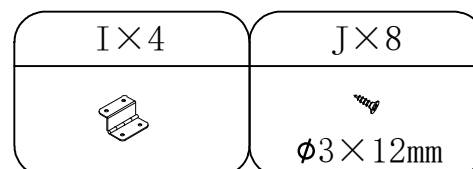


19

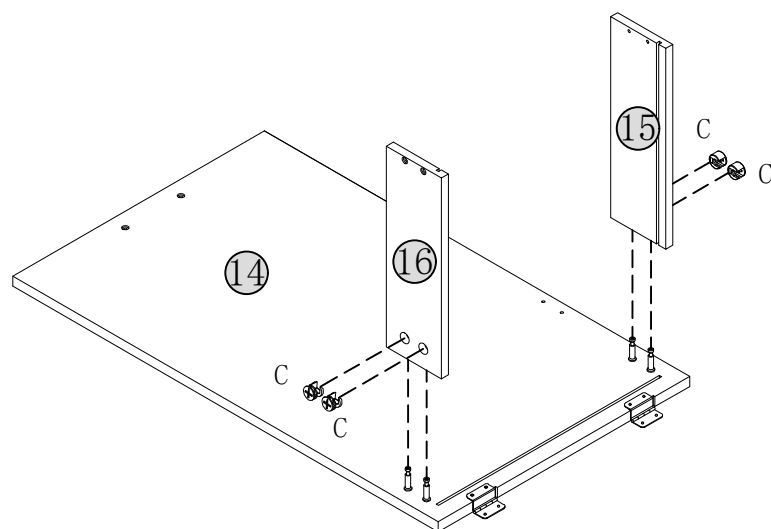

×2

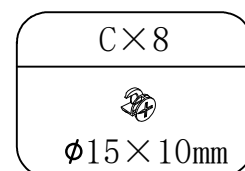


20

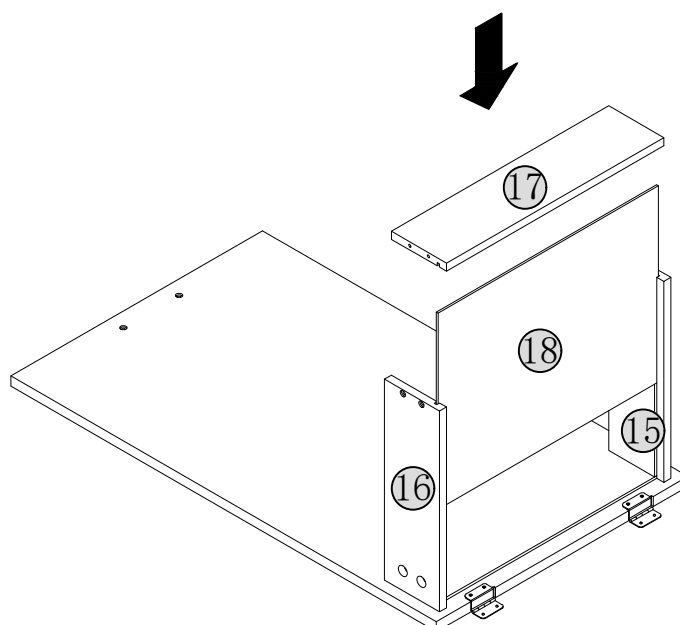


×2


21

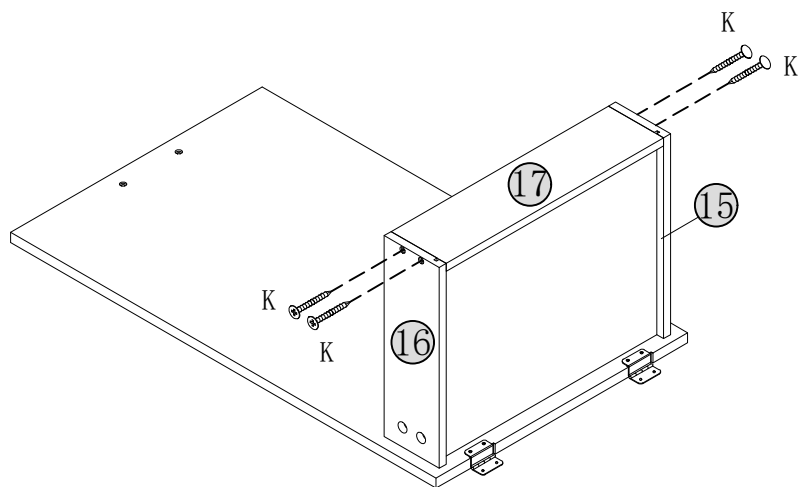

×2

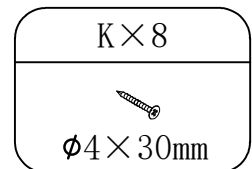


22

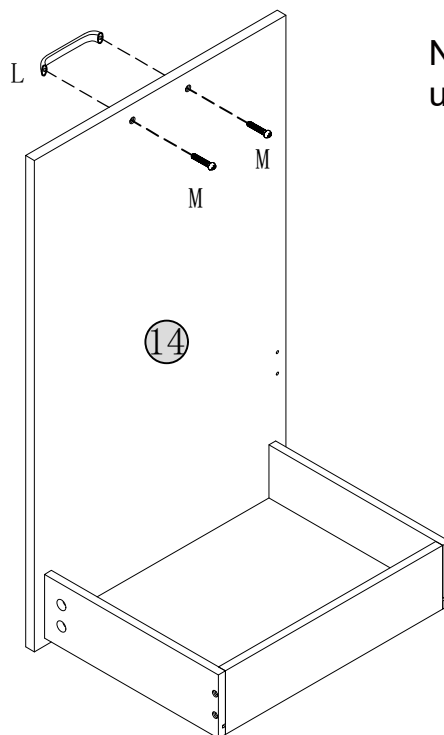


NOTE: Do not tighten the first screw until the handle is installed.

×2

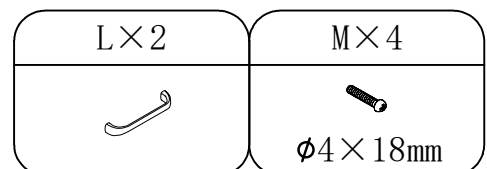

23

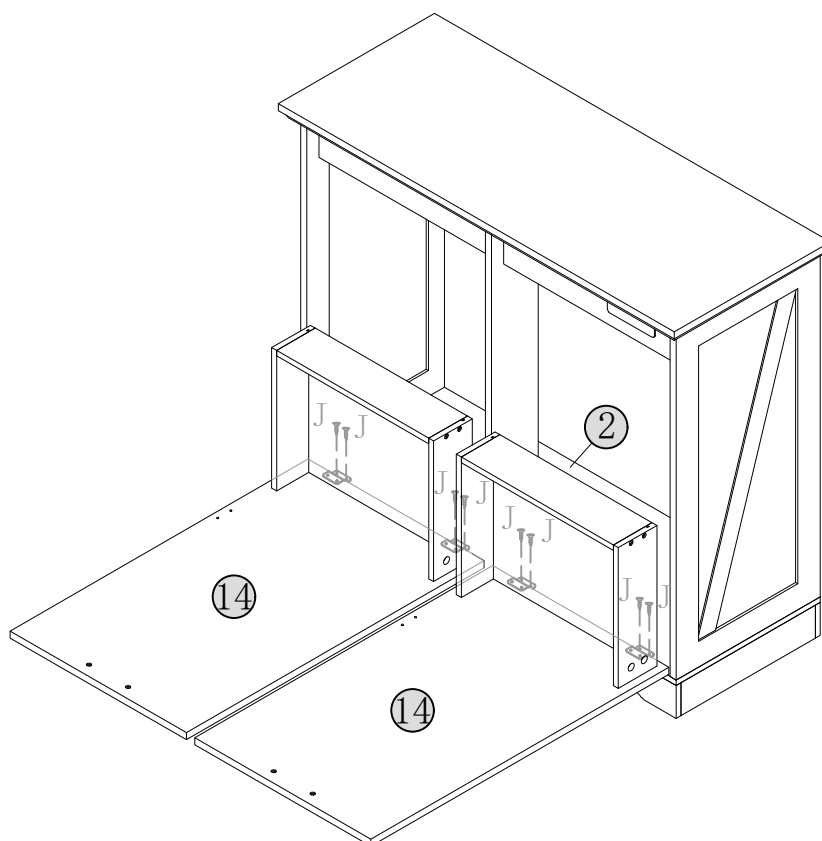


J×8



φ3×12mm


24




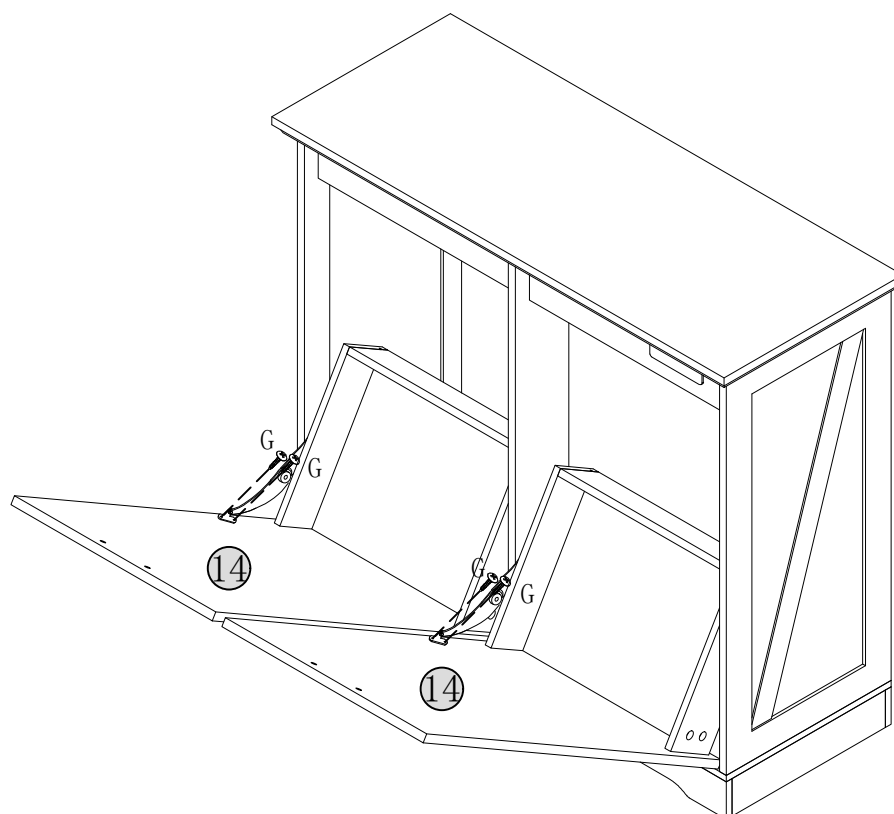


G×4



φ4×14mm

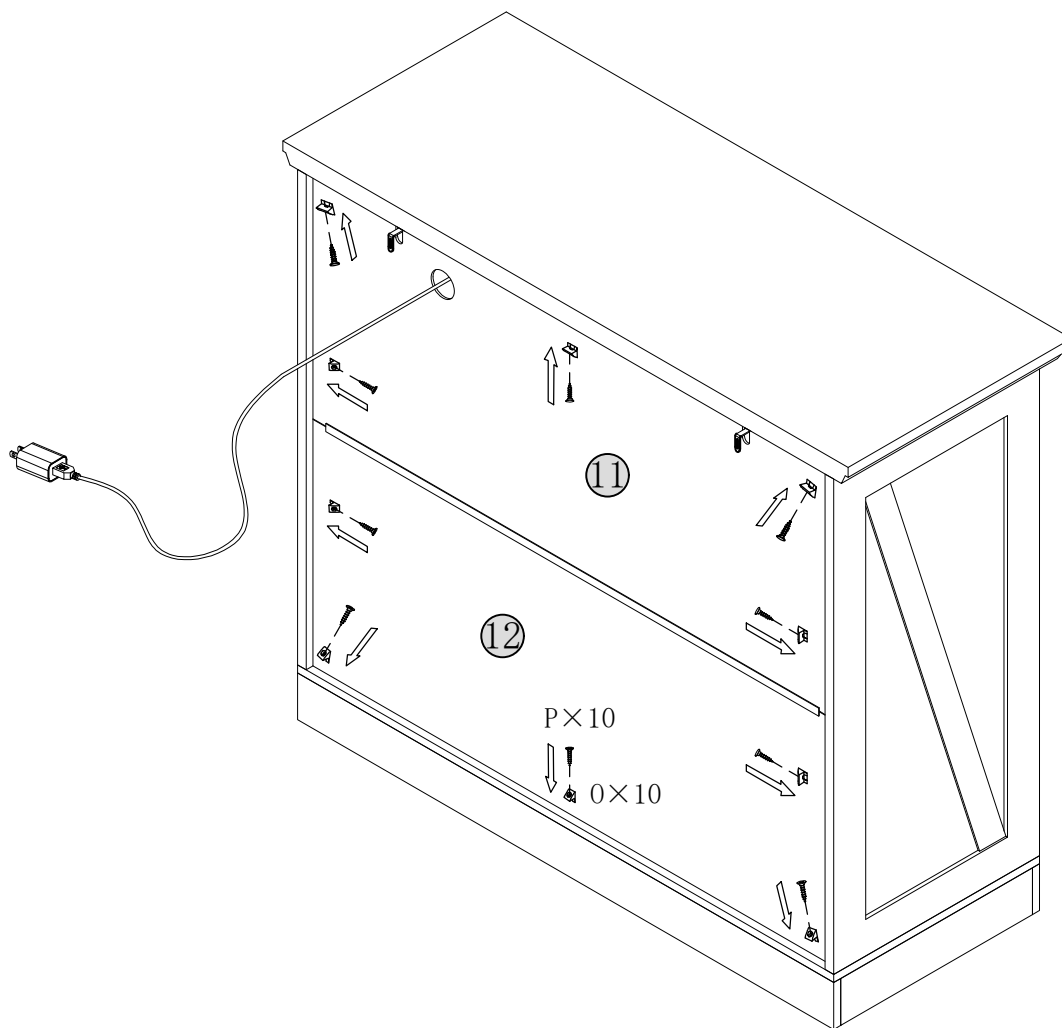 0×10  $P \times 10$  $\phi 3 \times 14 \text{mm}$

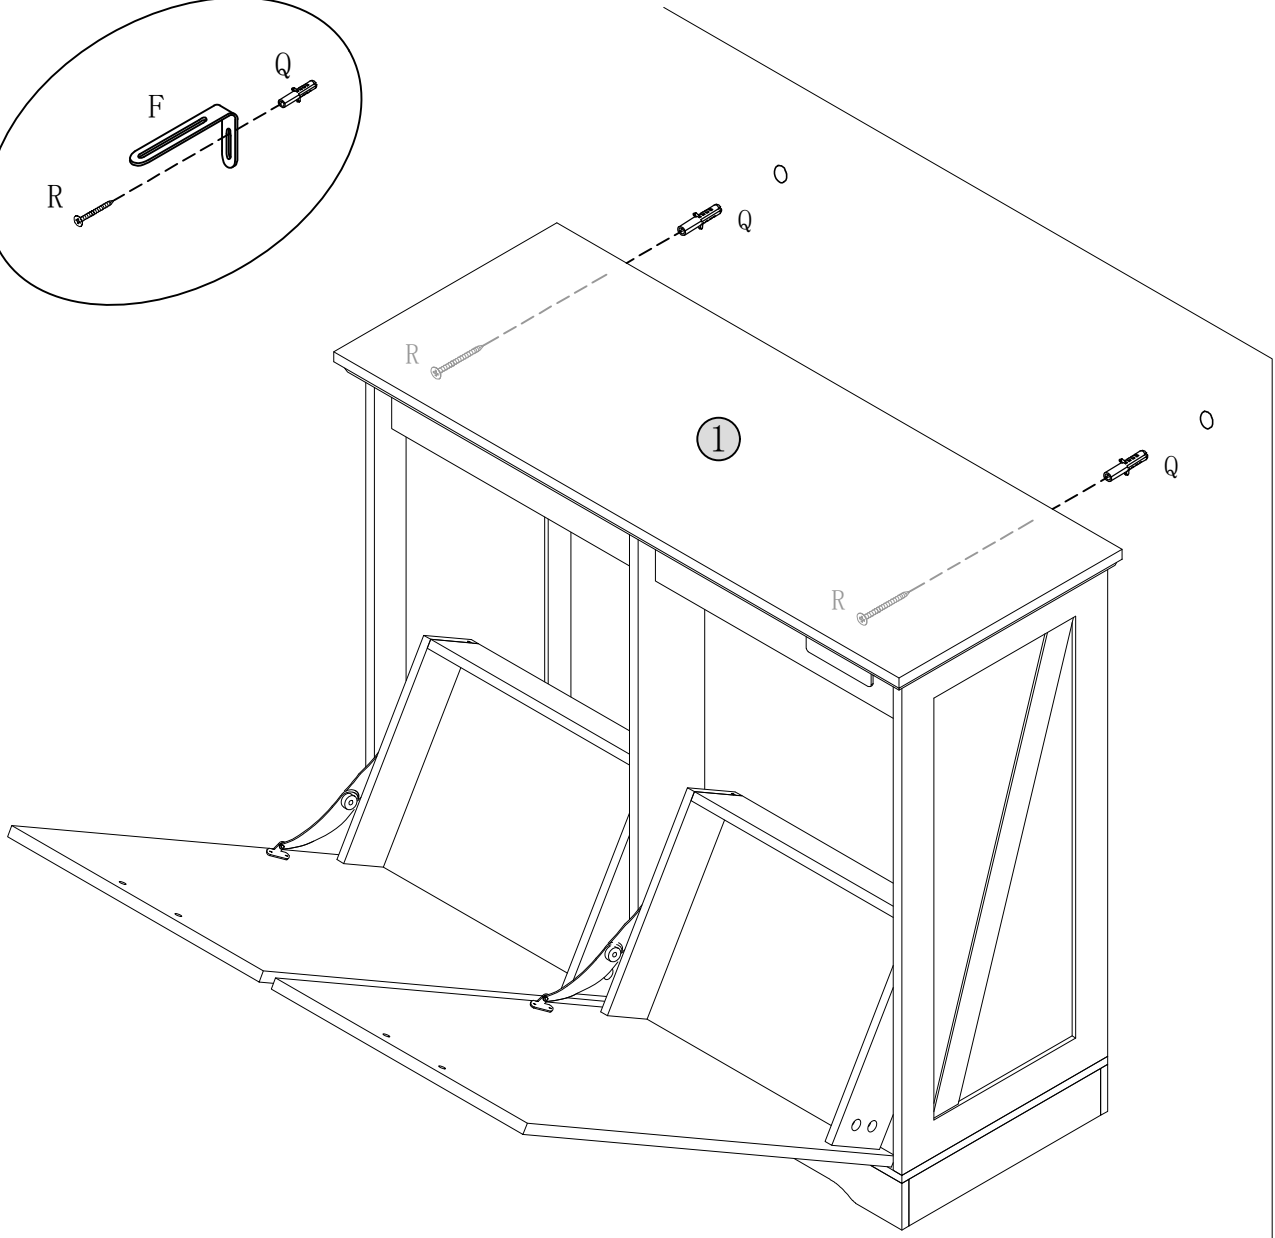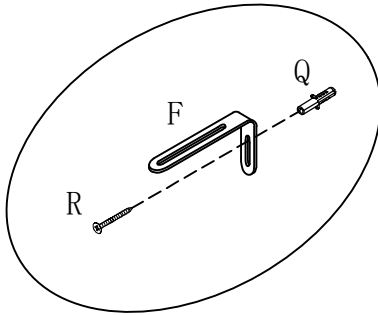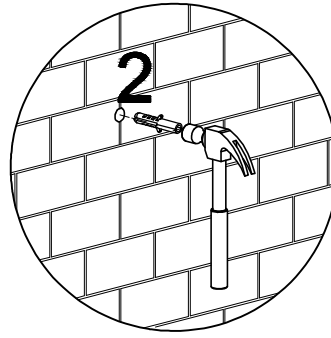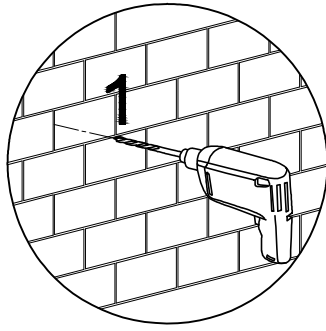 $Q \times 2$  $R \times 2$  $\phi 4 \times 40\text{mm}$