




INSTALLATION INSTRUCTIONS

BWA6032L



BWA6032R

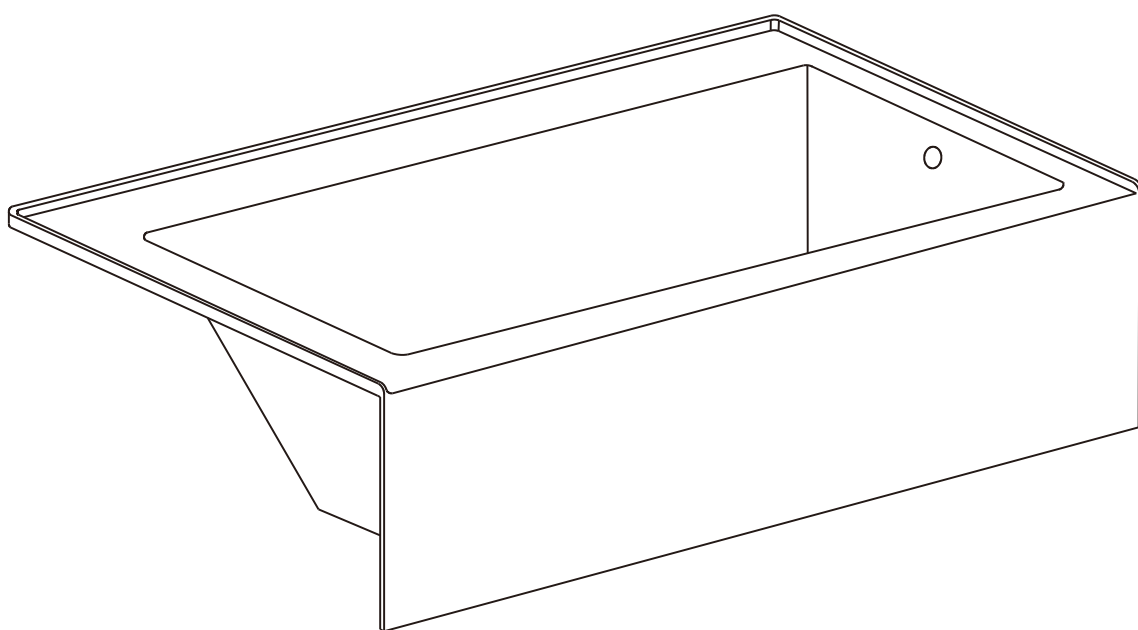


PACKING LIST:

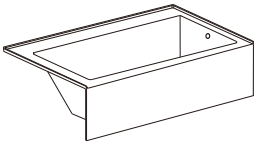①Bathtub 1pc	②Iron Support270 3pcs	③Screw ST6x20 6pcs
		

REQUIRED TOOLS:

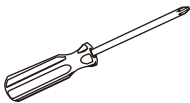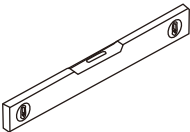Screwdriver	Level
	


CHECKING:After open package, please check tub and accessories careful.

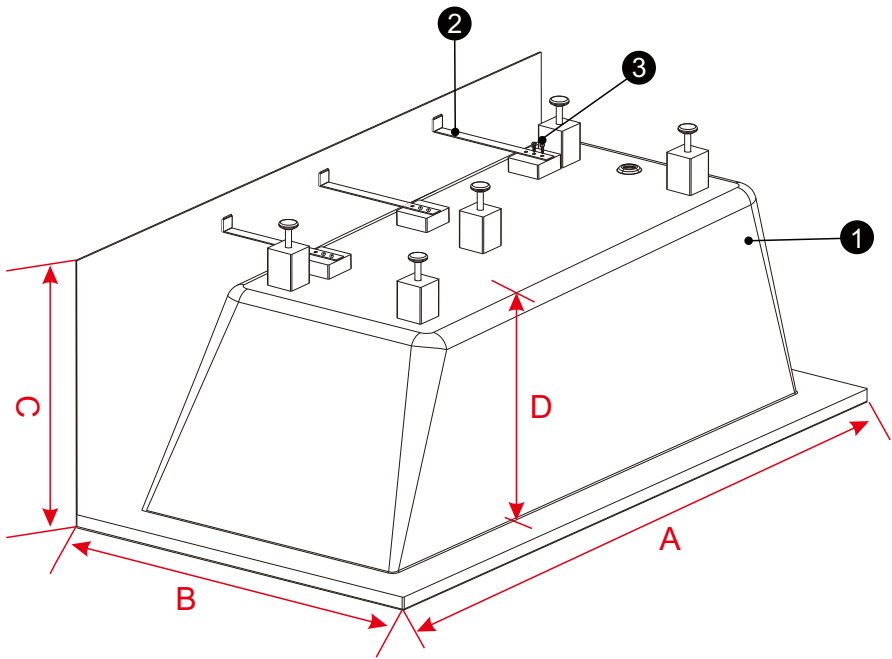




Model	Dimensions*			
	A	B	C	D
BWA6032L	60'' (1524mm)	32'' (812mm)	22'' (560mm)	17-3/8'' (440mm)
BWA6032R	60'' (1524mm)	32'' (812mm)	22'' (560mm)	17-3/8'' (440mm)

Installation process:



Step1. Put the tub on the mat, tub mounted upside down, then install iron support.

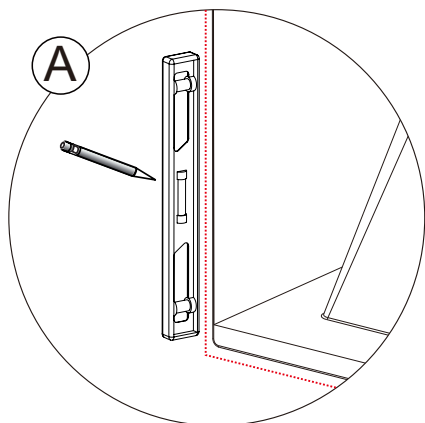

A: Using the level to make sure apron vertical to the ground.

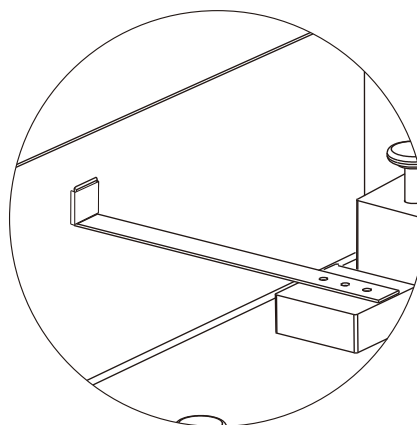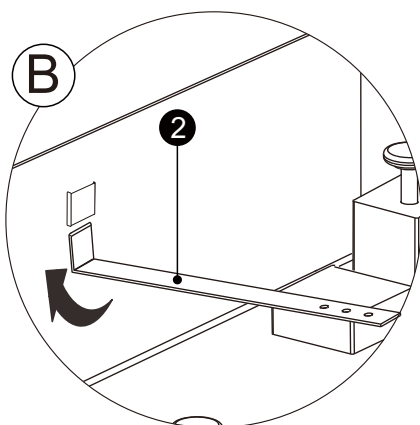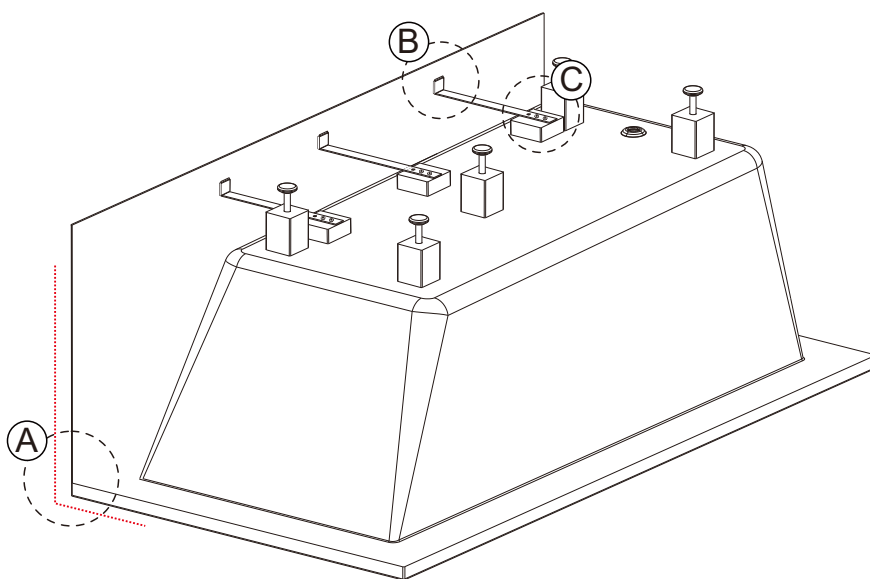


B: Insert the supporting cast iron bar as picture showed.

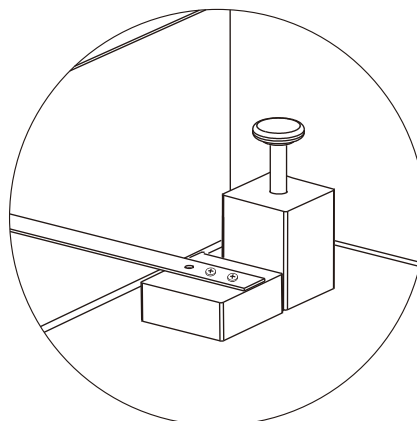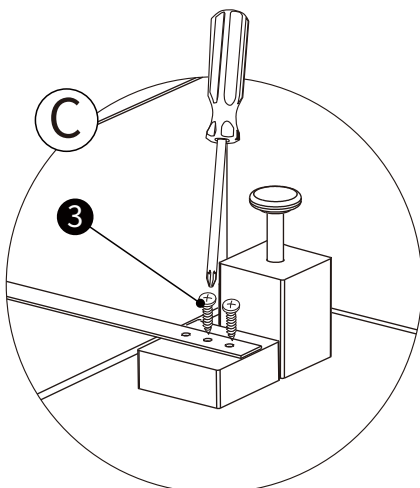

C: Using two ST6x 20 screws to fix the iron support on the solid wood.

Step2. After the installation of the first flat iron, go on the second one, before installation, make skirt panel vertical to the ground, with the method as A of step1, at the same time make sure skirt panel flat surface, with the method as A of step2, then begin installation for iron support, installation method as step1.

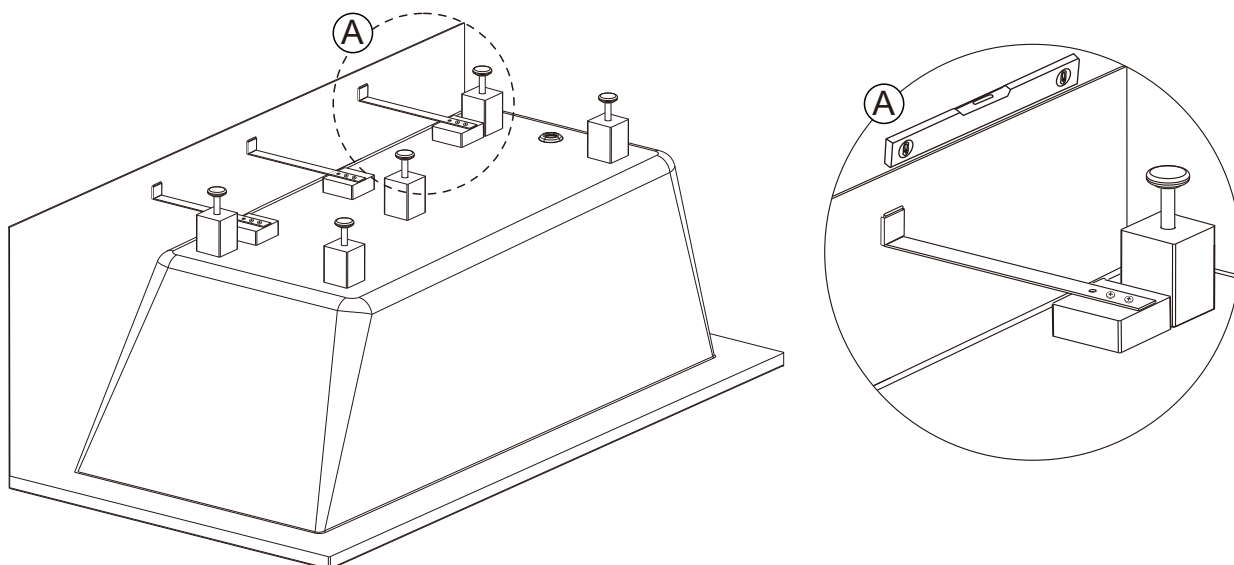

Step3. Apron are fixed firmly with bathtubs bottom , then adjust feet to make bathtub level the finished installation.

*If you use the prelevelled feet, step 3 is no necessary.

