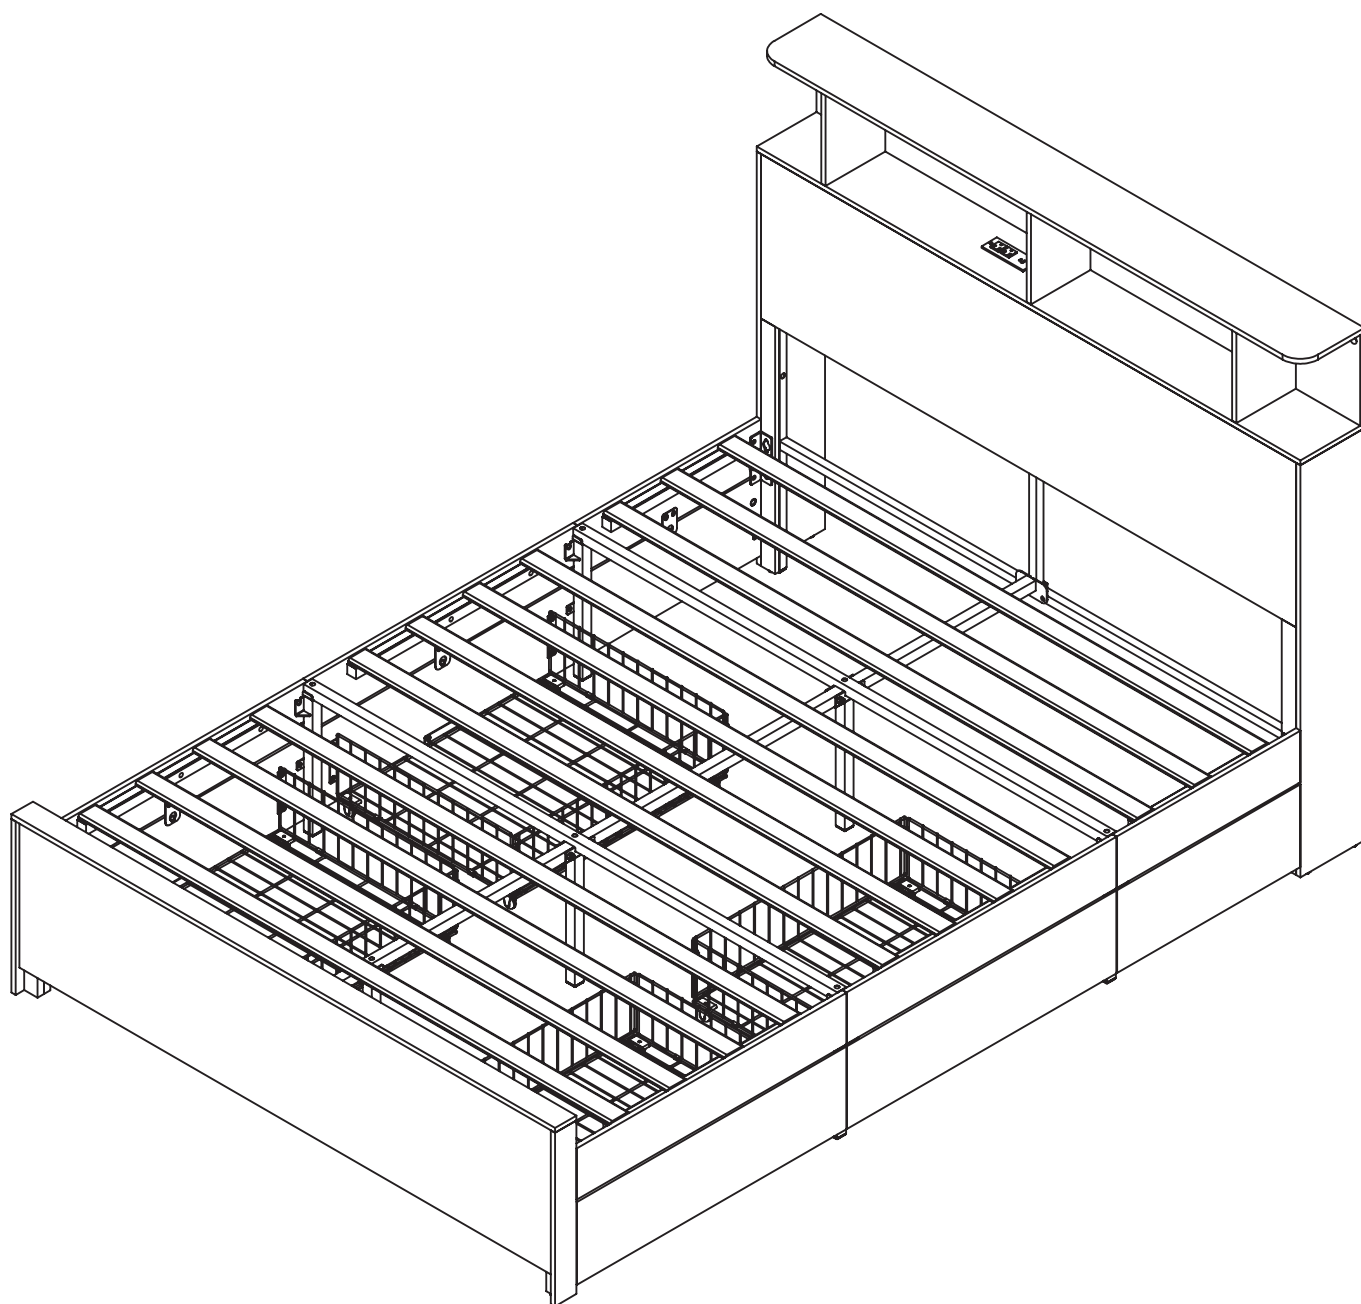


## Panel bed Assembly Instructions



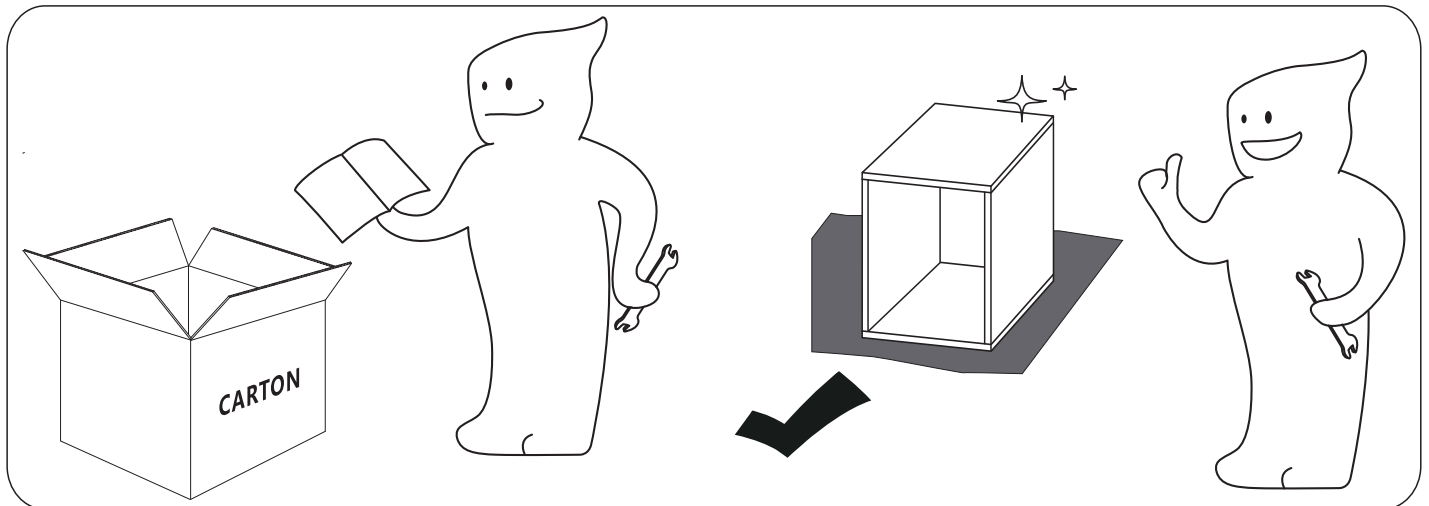
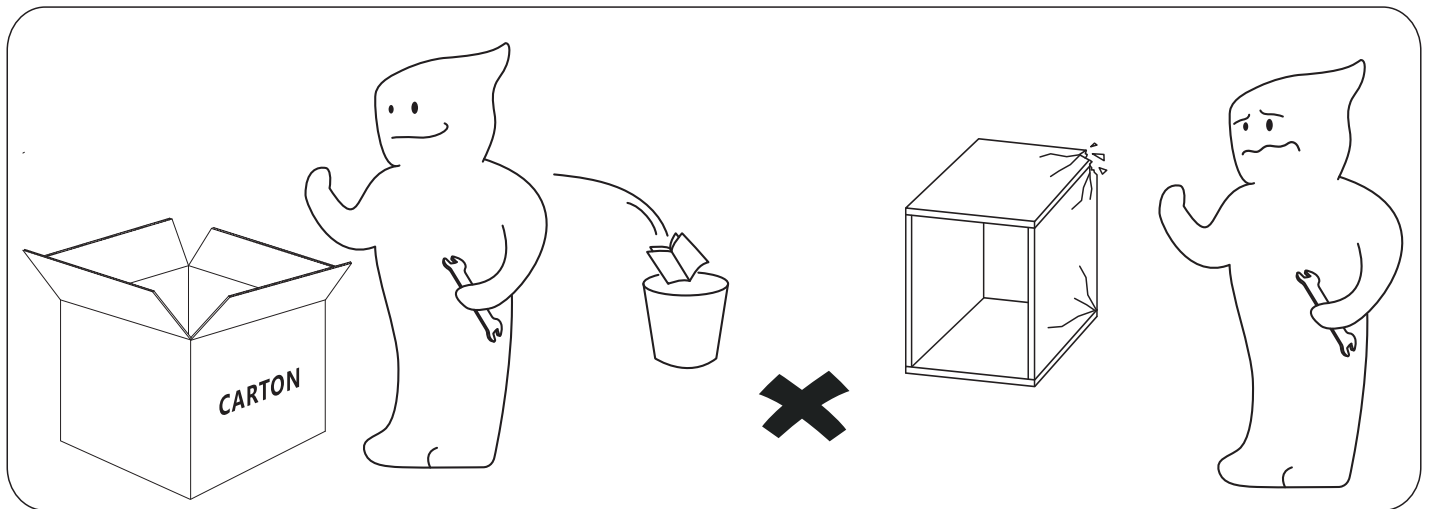
### **Dear Customers,**

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADE IN CHINA




**Please follow the instruction manuals and use a pad to protect the product during your assembly.**




**Note:**

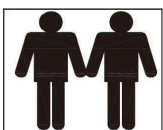- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**
























**For easier and better assembly, 2 or more adults are required.**



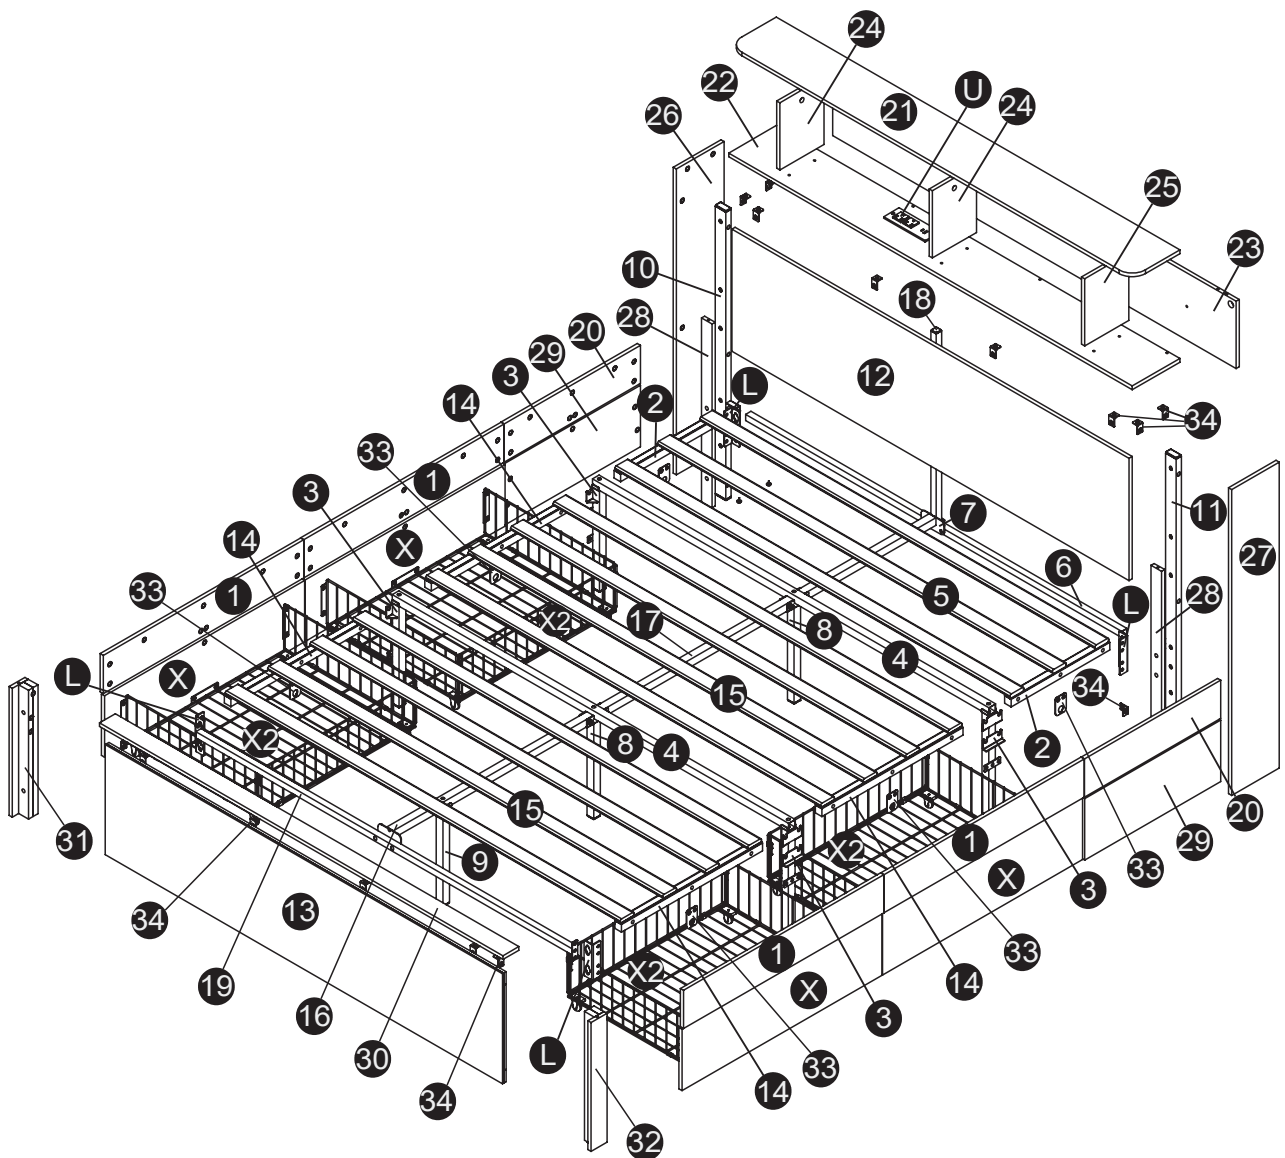


















# ASSEMBLY INSTRUCTIONS
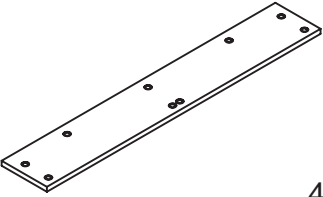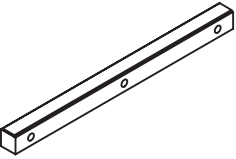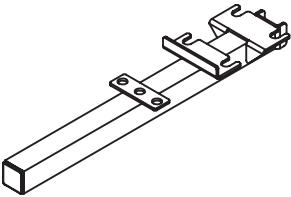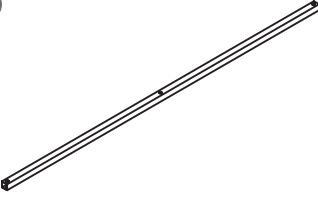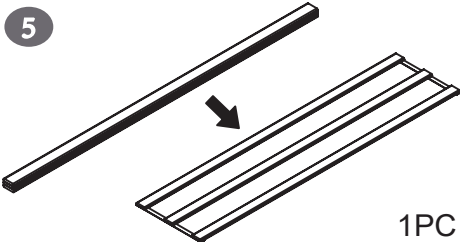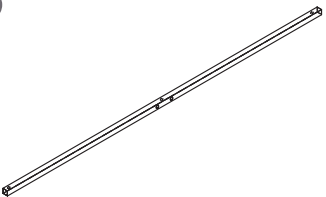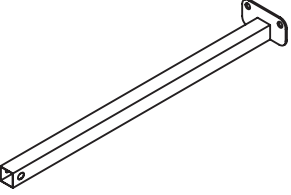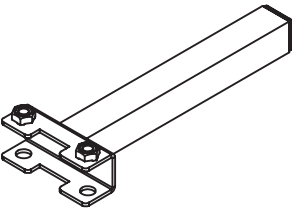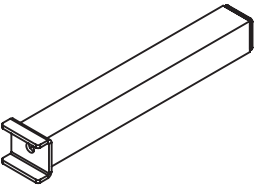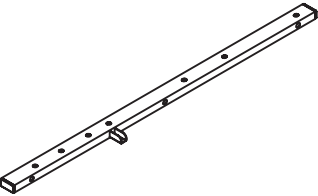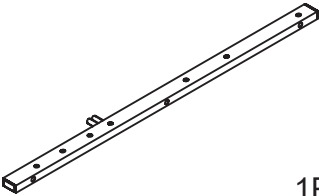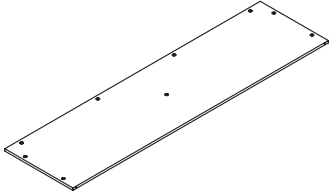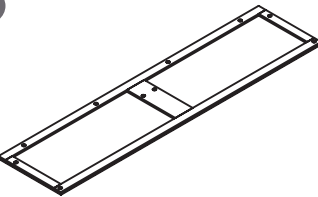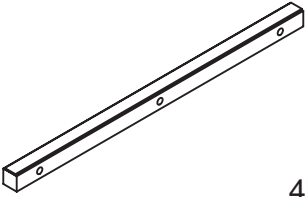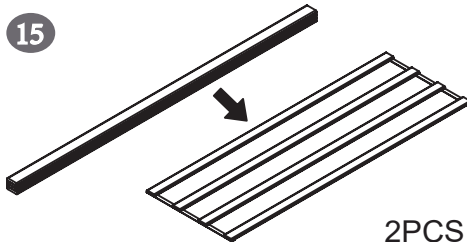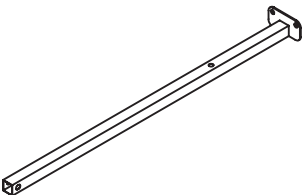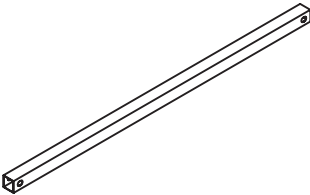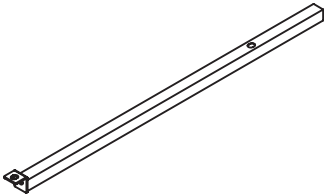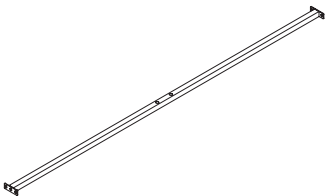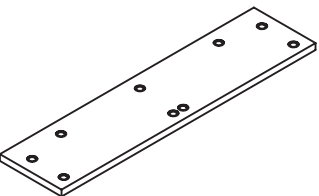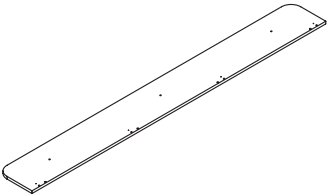
## PARTS LIST

 <p>1</p> <p>4PCS</p>	 <p>2</p> <p>2PCS</p>	 <p>3</p> <p>4PCS</p>
 <p>4</p> <p>2PCS</p>	 <p>5</p> <p>1PC</p>	 <p>6</p> <p>1PC</p>
 <p>7</p> <p>1PC</p>	 <p>8</p> <p>2PCS</p>	 <p>9</p> <p>1PC</p>
 <p>10</p> <p>1PC</p>	 <p>11</p> <p>1PC</p>	 <p>12</p> <p>1PC</p>
 <p>13</p> <p>1PC</p>	 <p>14</p> <p>4PCS</p>	 <p>15</p> <p>2PCS</p>
 <p>16</p> <p>1PC</p>	 <p>17</p> <p>1PC</p>	 <p>18</p> <p>1PC</p>
 <p>19</p> <p>1PC</p>	 <p>20</p> <p>2PCS</p>	 <p>21</p> <p>1PC</p>

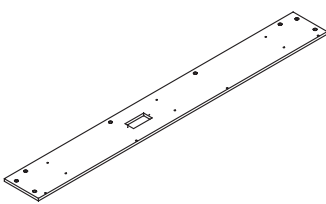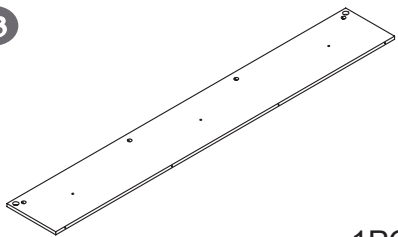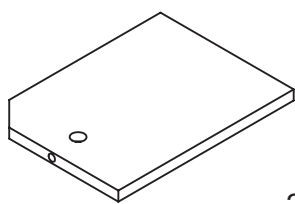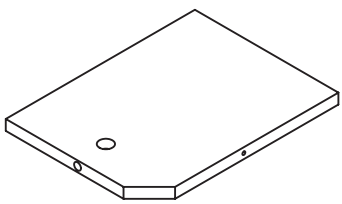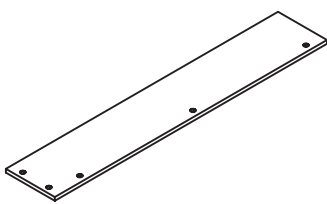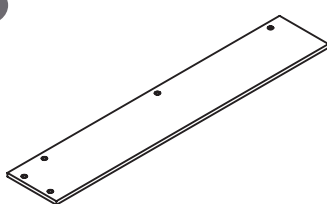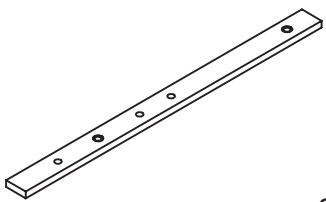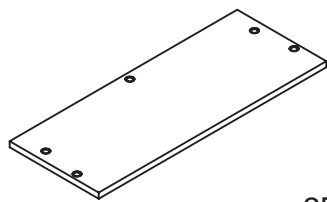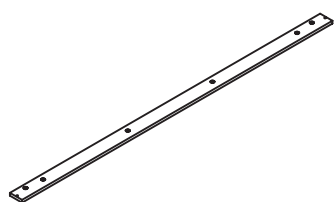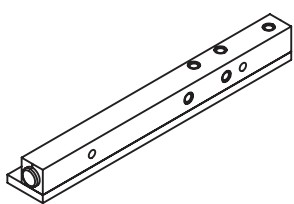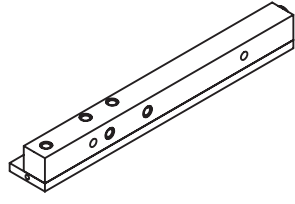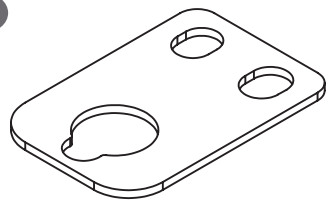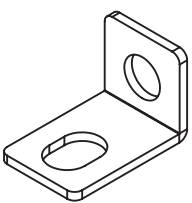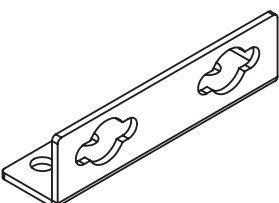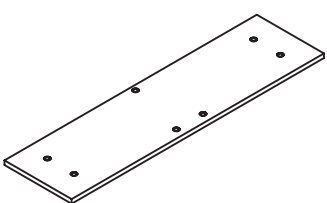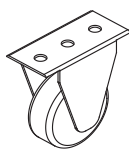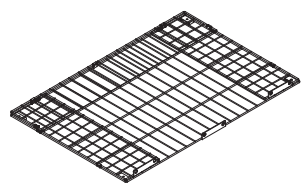





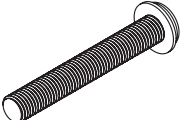














# ASSEMBLY INSTRUCTIONS

## PARTS LIST

<b>22</b>  1PC	<b>23</b>  1PCS	<b>24</b>  2PCS
<b>25</b>  1PC	<b>26</b>  1PC	<b>27</b>  1PC
<b>28</b>  2PCS	<b>29</b>  2PCS	<b>30</b>  1PC
<b>31</b>  1PC	<b>32</b>  1PC	<b>33</b>  6PCS
<b>34</b>  16PCS	<b>L</b>  4PCS	<b>X</b>  4PCS
<b>V</b>  16PCS	<b>X2</b>  4PCS	

# ASSEMBLY INSTRUCTIONS

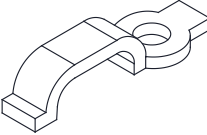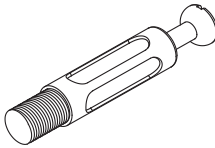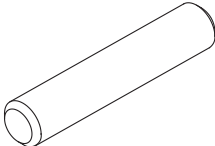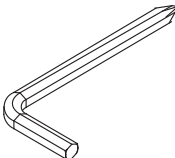

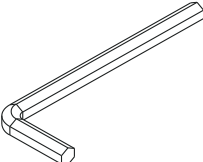
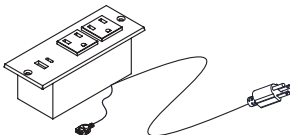
## PARTS LIST

<b>A</b>  M8x12 92PCS	<b>B</b>  M8x14 Colored Zinc 6PCS	<b>C</b>  M8x18 white Zinc 13PCS
<b>D</b>  M8x30 9PCS	<b>E</b>  M8x35 Colored Zinc 25PCS	<b>F</b>  M8x45 14PCS
<b>G</b>  M8x50 Colored Zinc 8PCS	<b>H</b>  M4x10 16PCS	<b>I</b>  M5x40 13PCS
<b>J</b>  ST4.2x12 2PCS	<b>M</b>  ST3.2x12 4PCS	<b>N</b>  4PCS
<b>O</b>  φ7x40 7PCS	<b>P</b>  φ15x9.5 7PCS	<b>Q</b>  φ6x40 8PCS
<b>R</b>  M8 1PC	<b>S</b>  M5 1PC	<b>T</b>  M4 1PC
<b>W</b>  M8 1PC	<b>U</b>  1PC	<b>K</b>  1PC

# ASSEMBLY INSTRUCTIONS

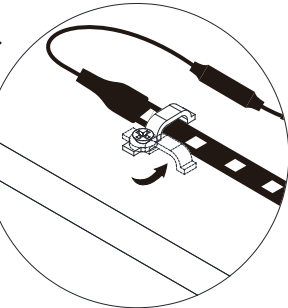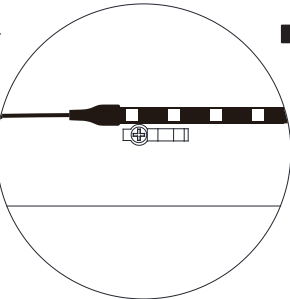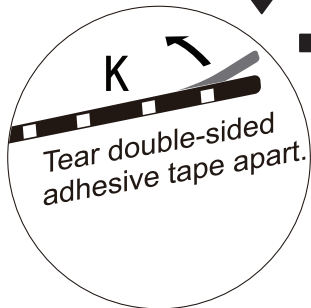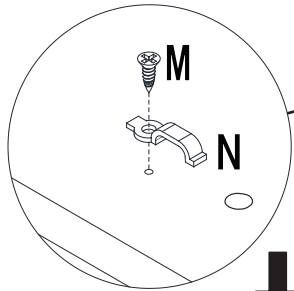1


Accessory N is not locked tight at first



Fastening accessories N


K		1pc
M	 ST3. 2x12	4pcs
N		4pcs

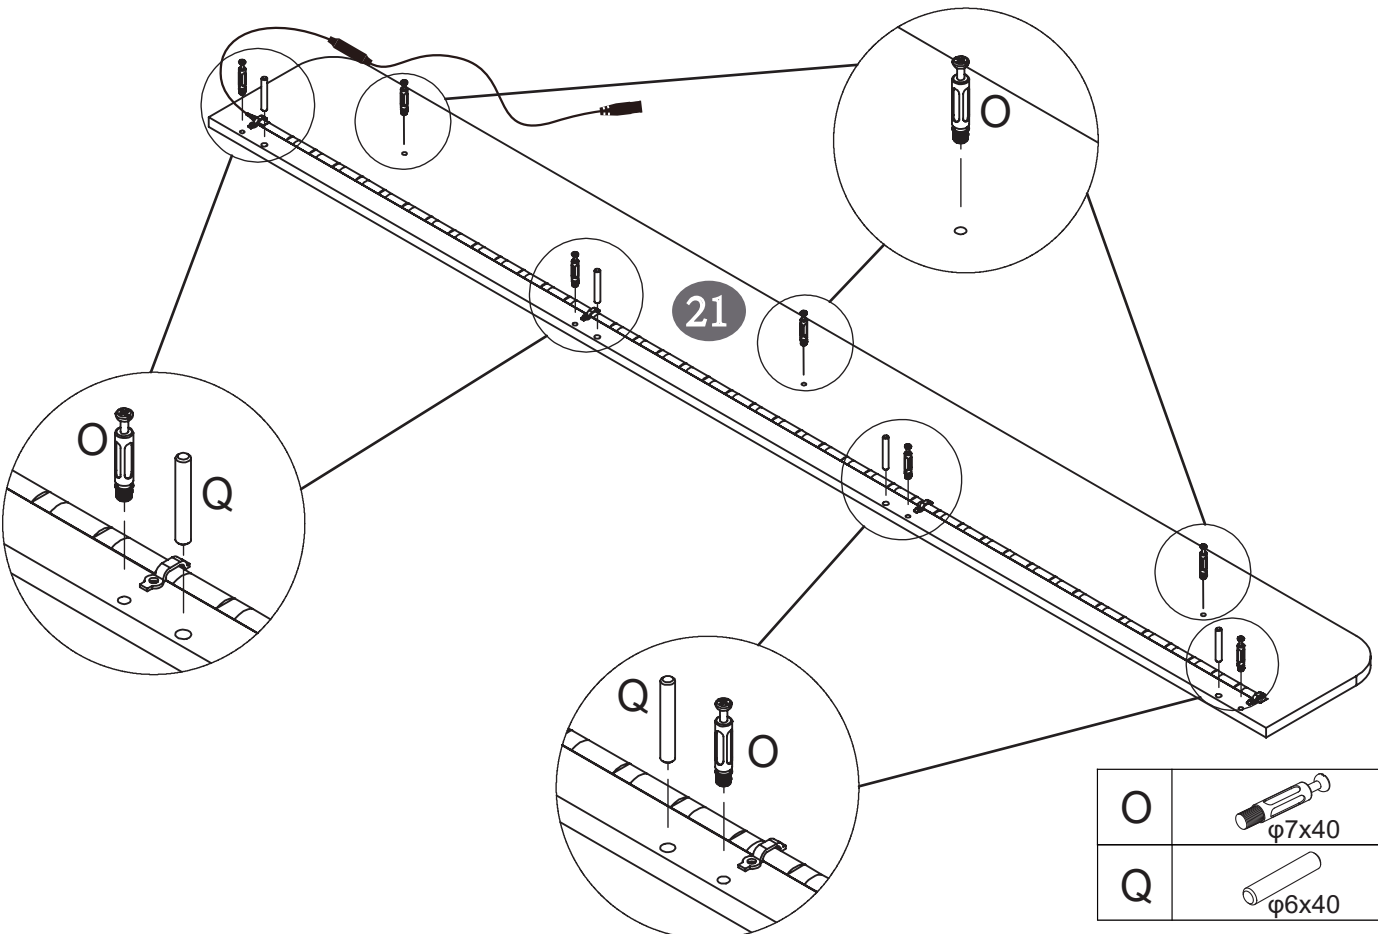2






O	 φ7x40	7pcs
Q	 φ6x40	4pcs

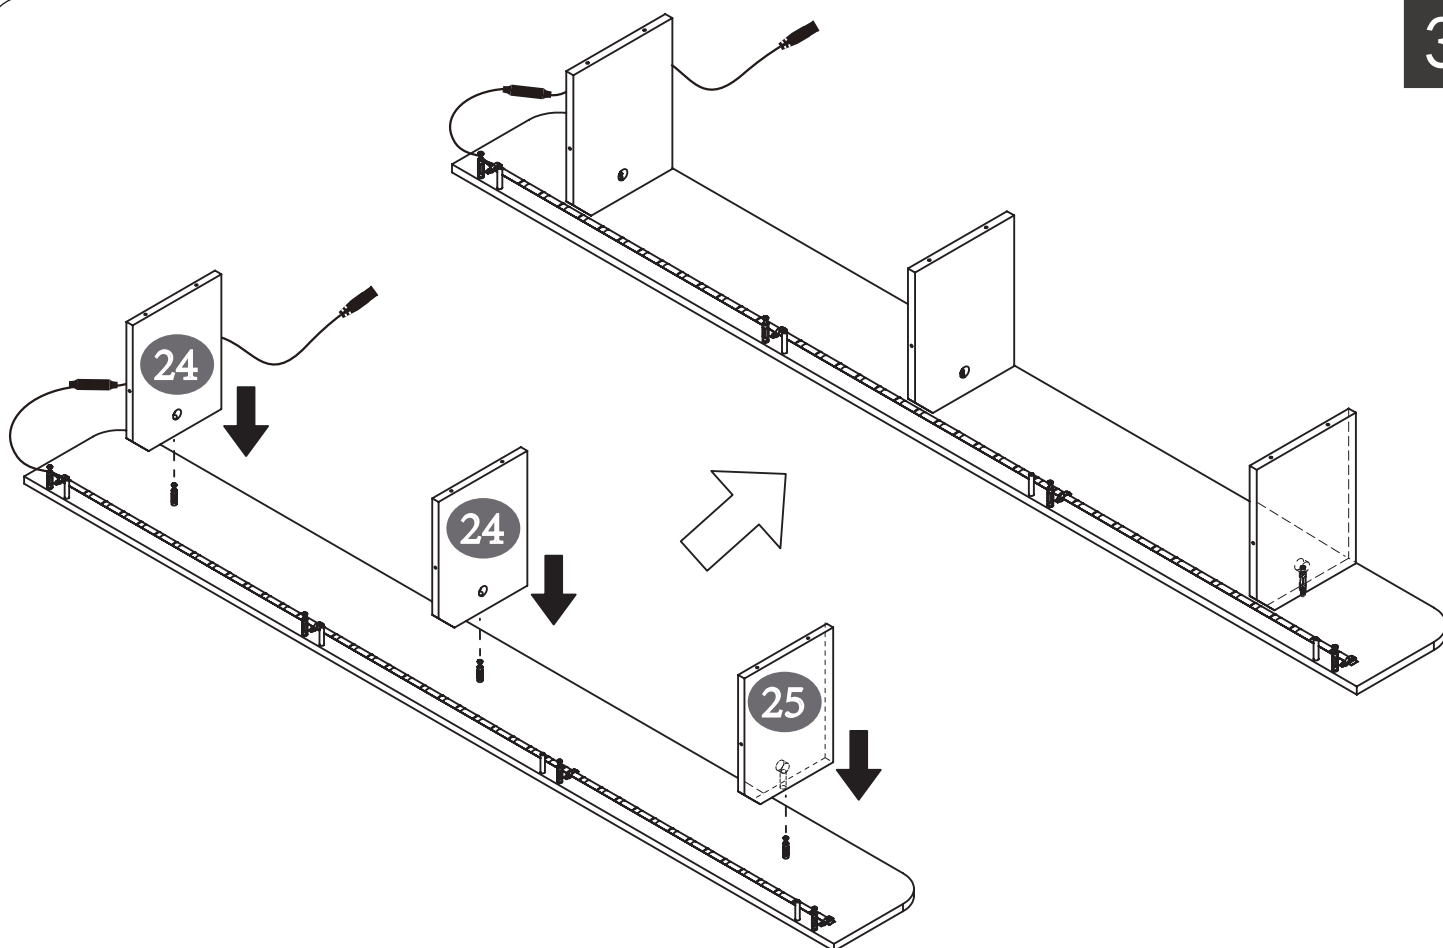3




4

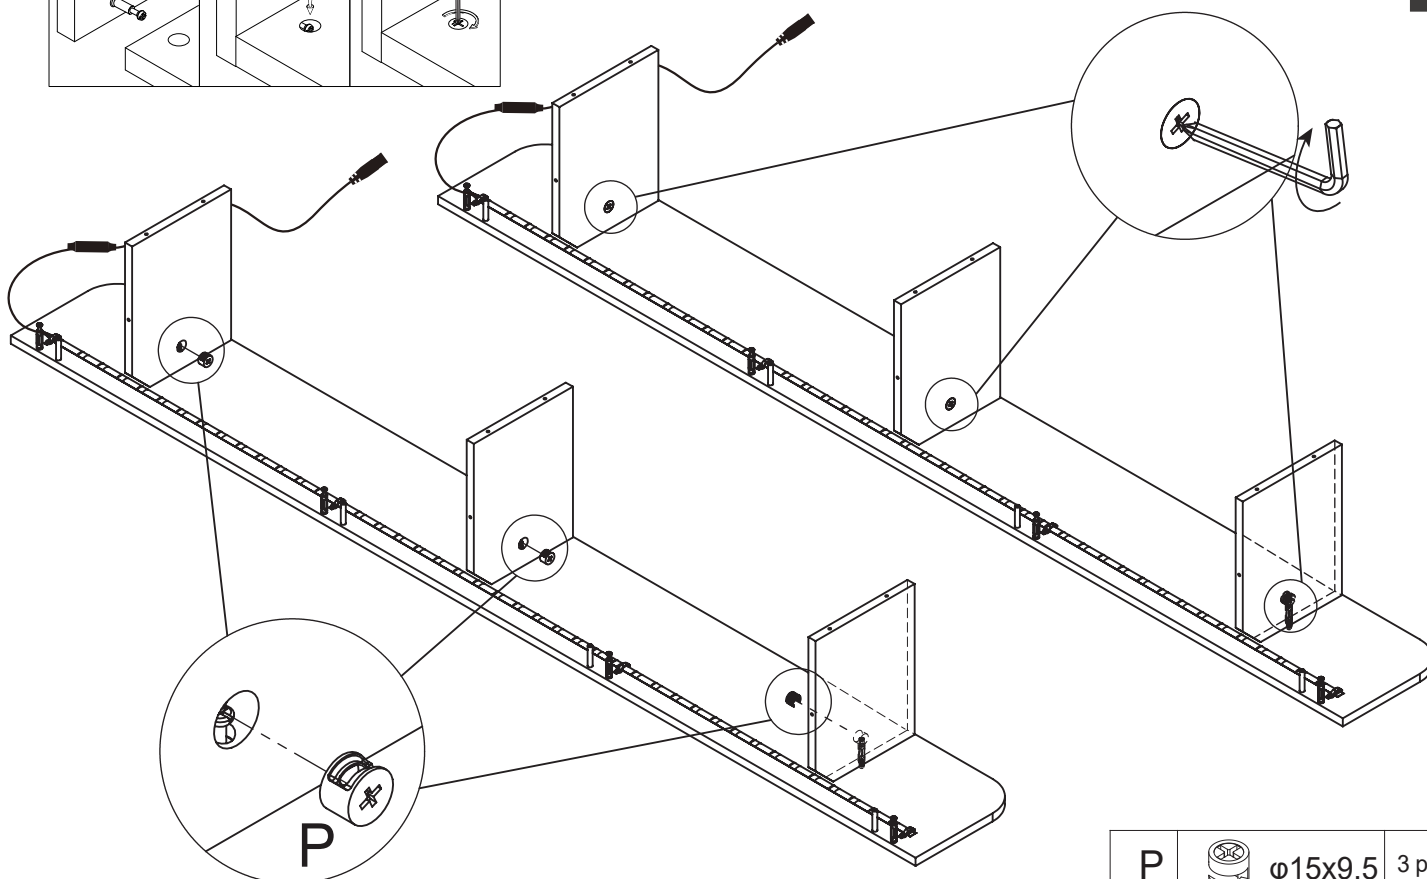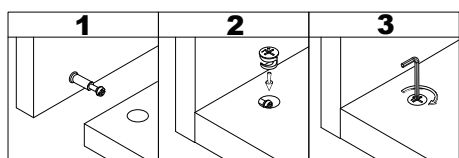


P		φ15x9.5	3 pcs
---	---	---------	-------

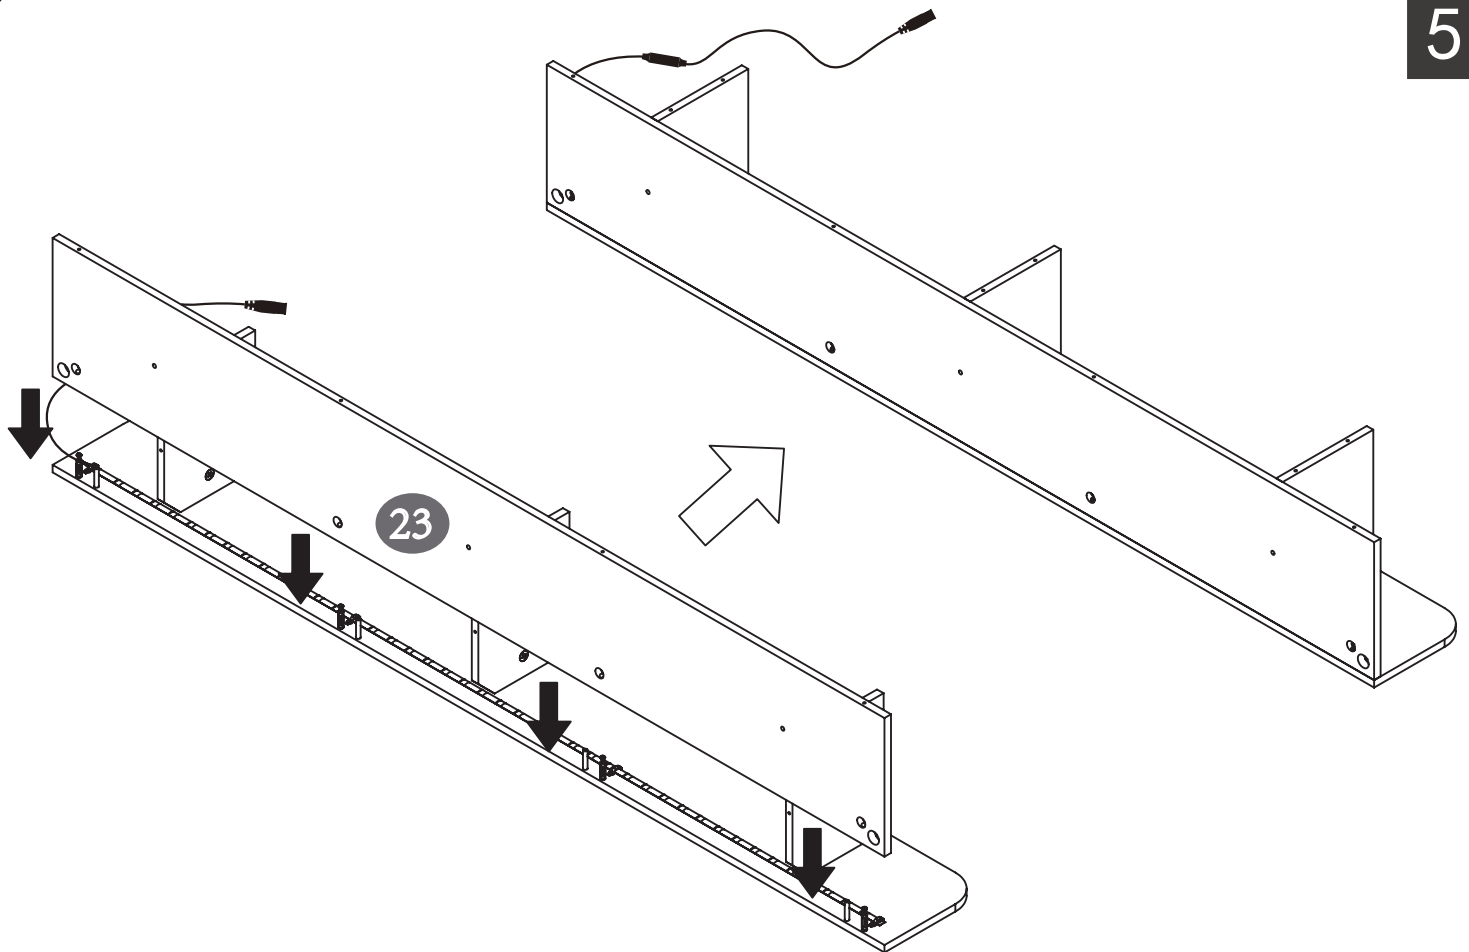5




6

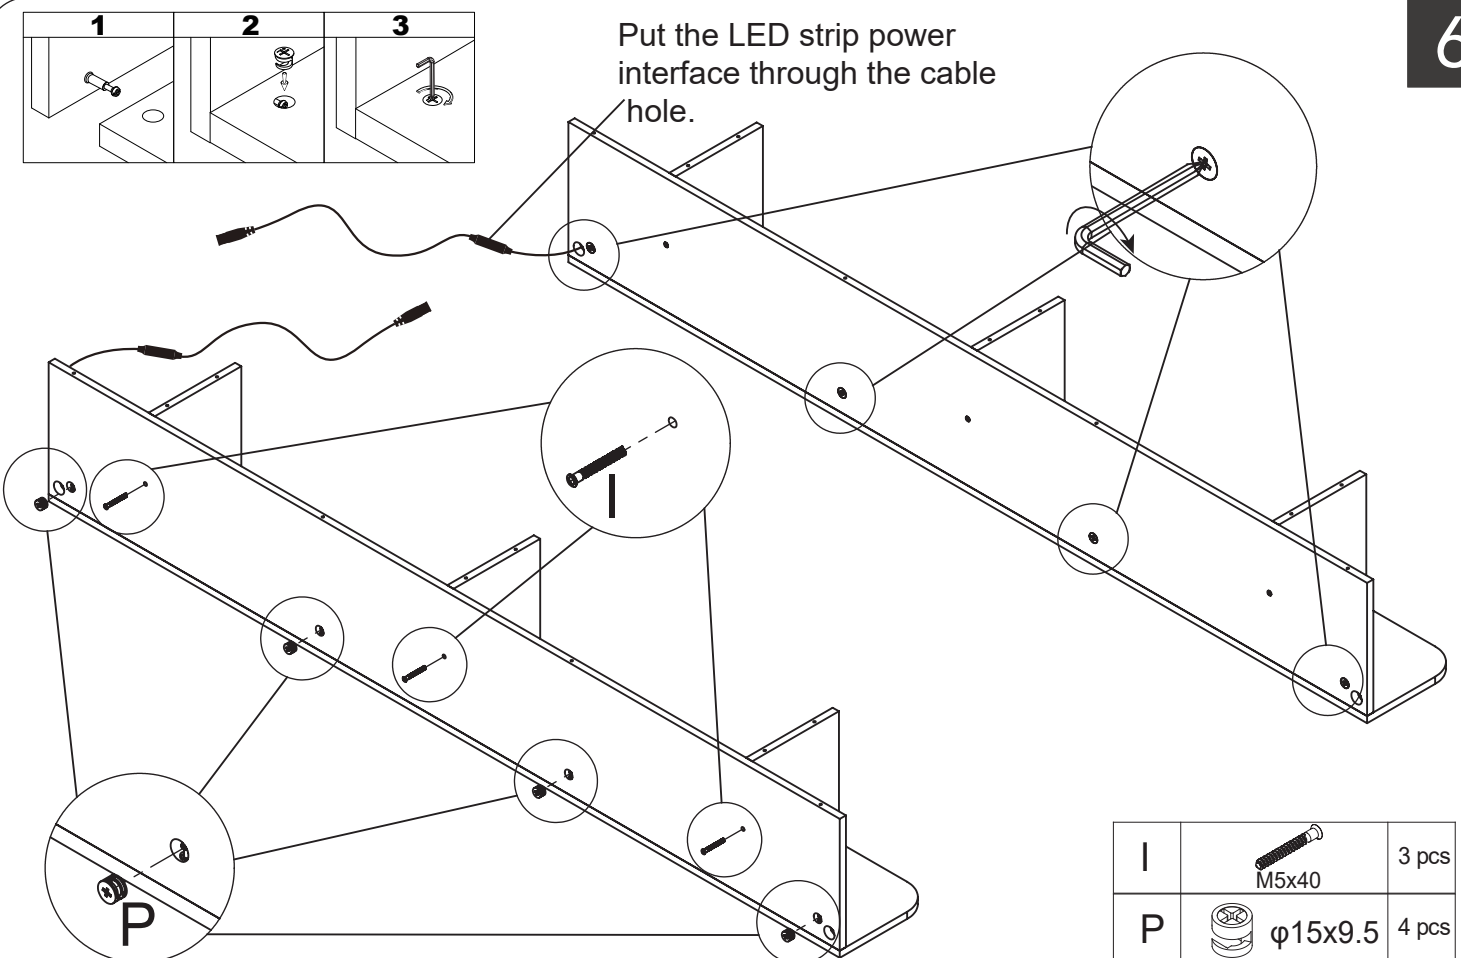


# ASSEMBLY INSTRUCTIONS

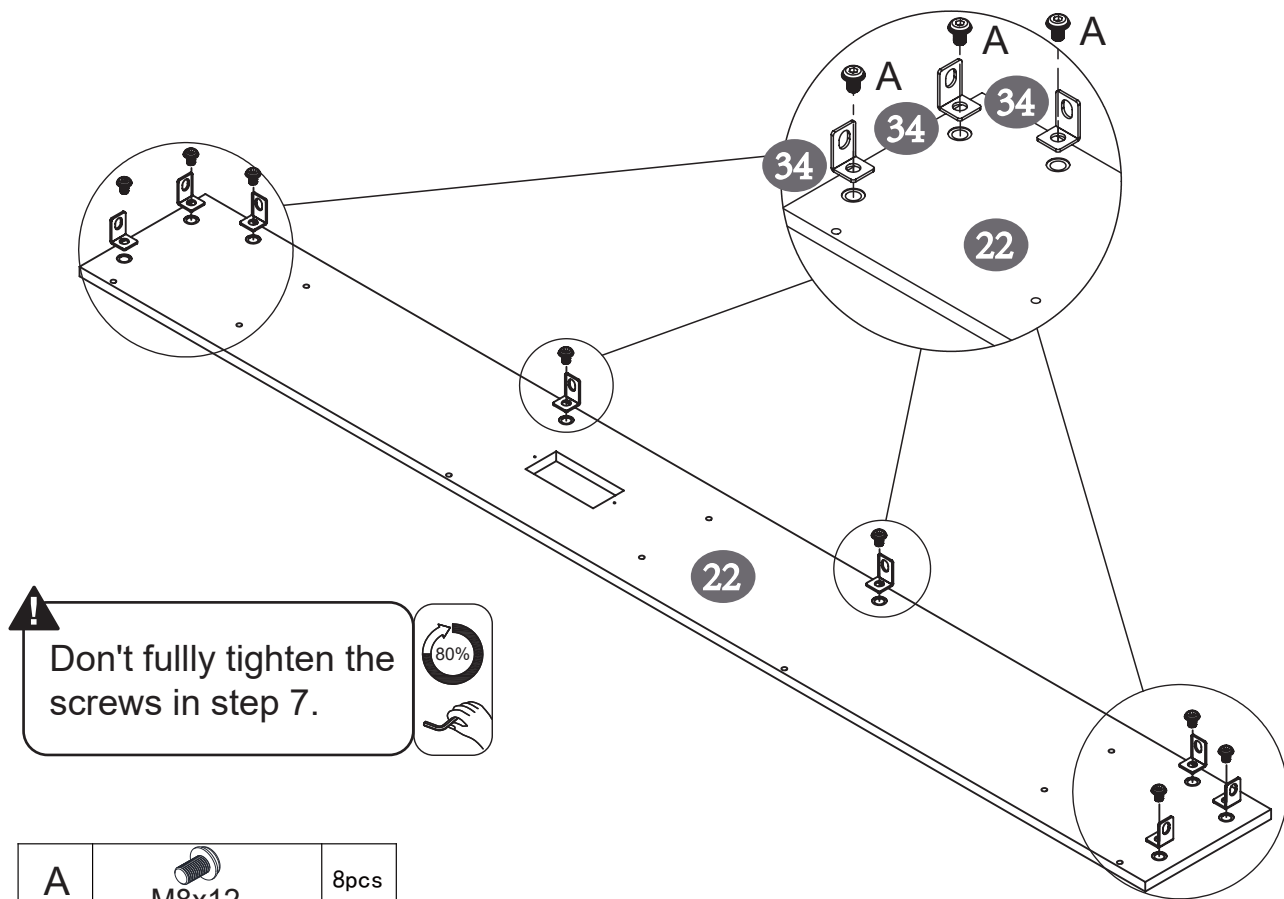7



8

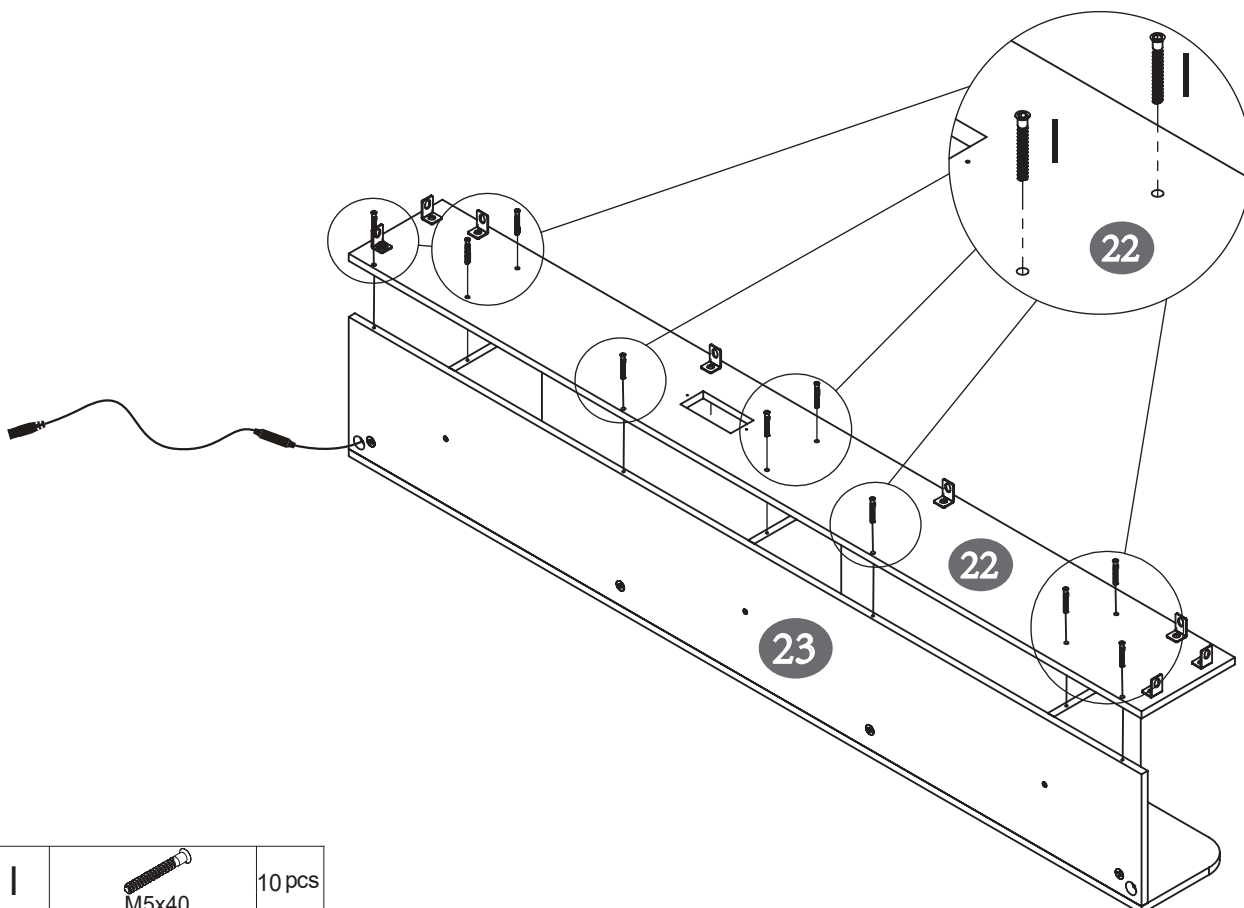




# ASSEMBLY INSTRUCTIONS

9



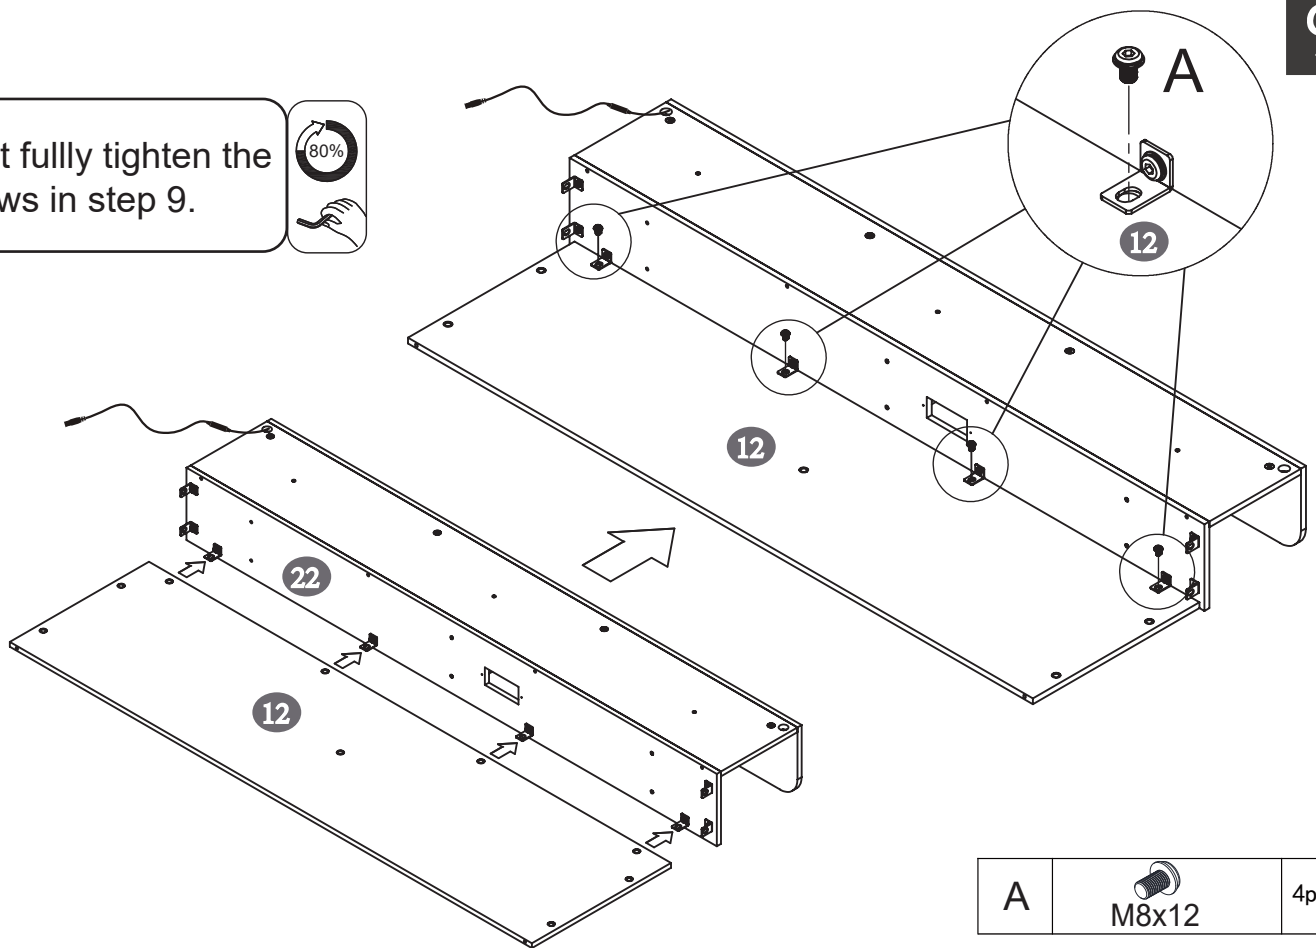Don't fully tighten the screws in step 9.




A


M8x12

4pcs

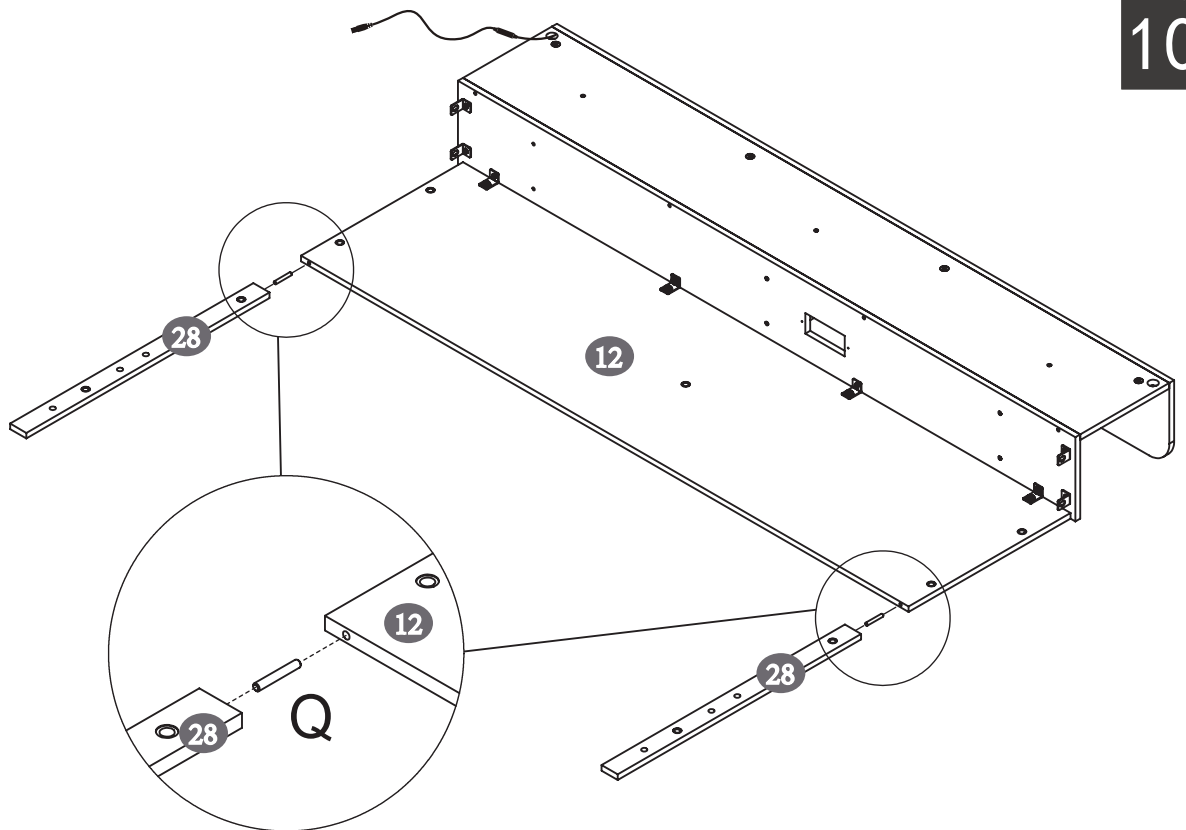10



Q

  
φ6x40


2pcs

# ASSEMBLY INSTRUCTIONS

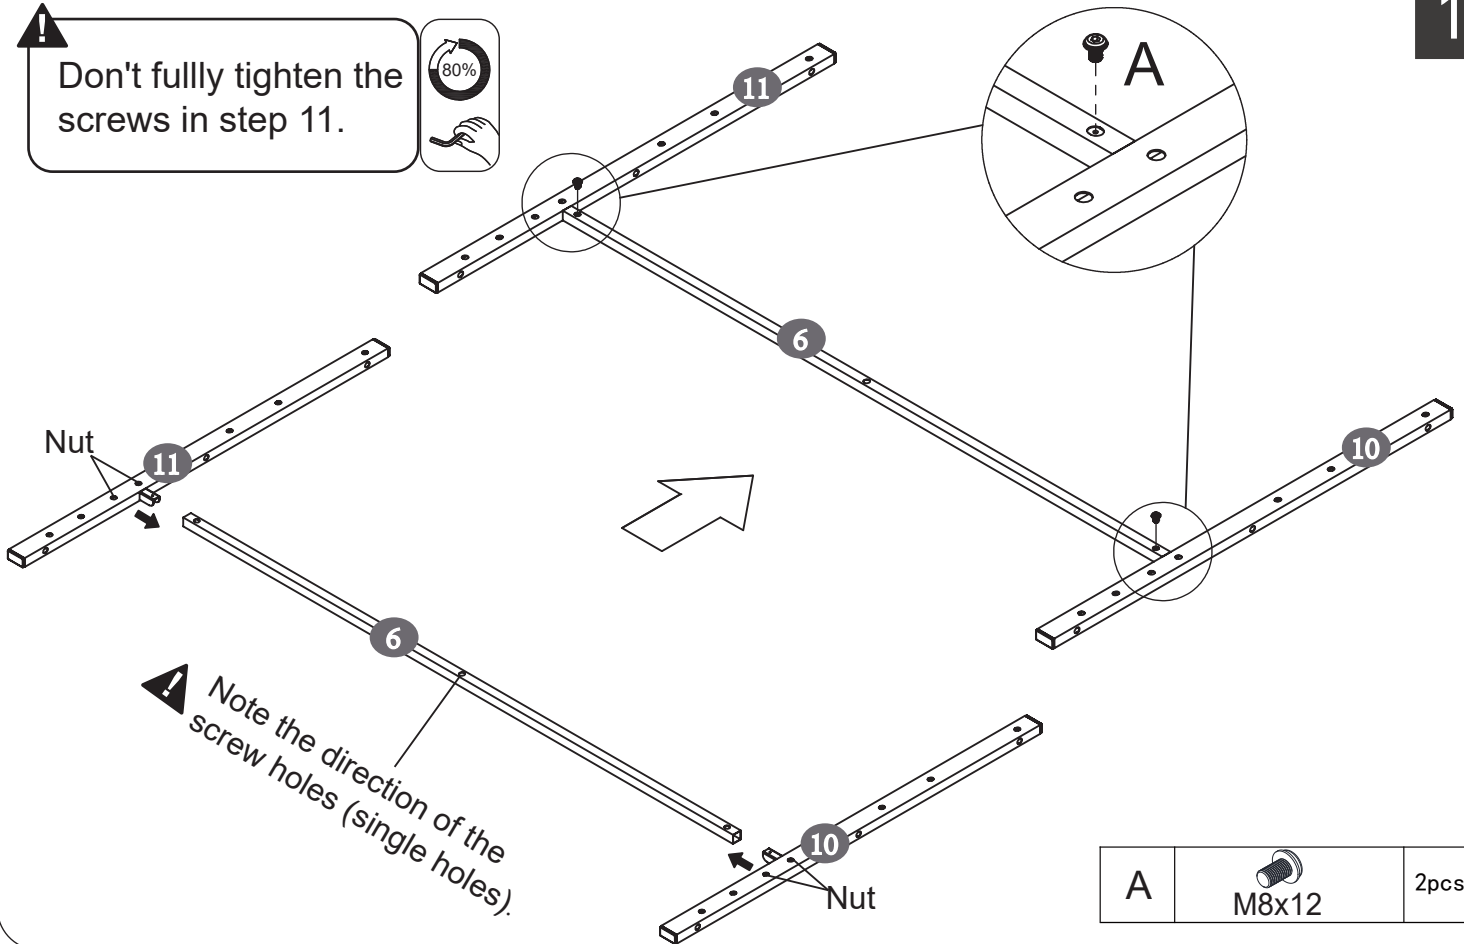11



Don't fully tighten the screws in step 11.




A	 M8x12	2 pcs
---	---	-------

12



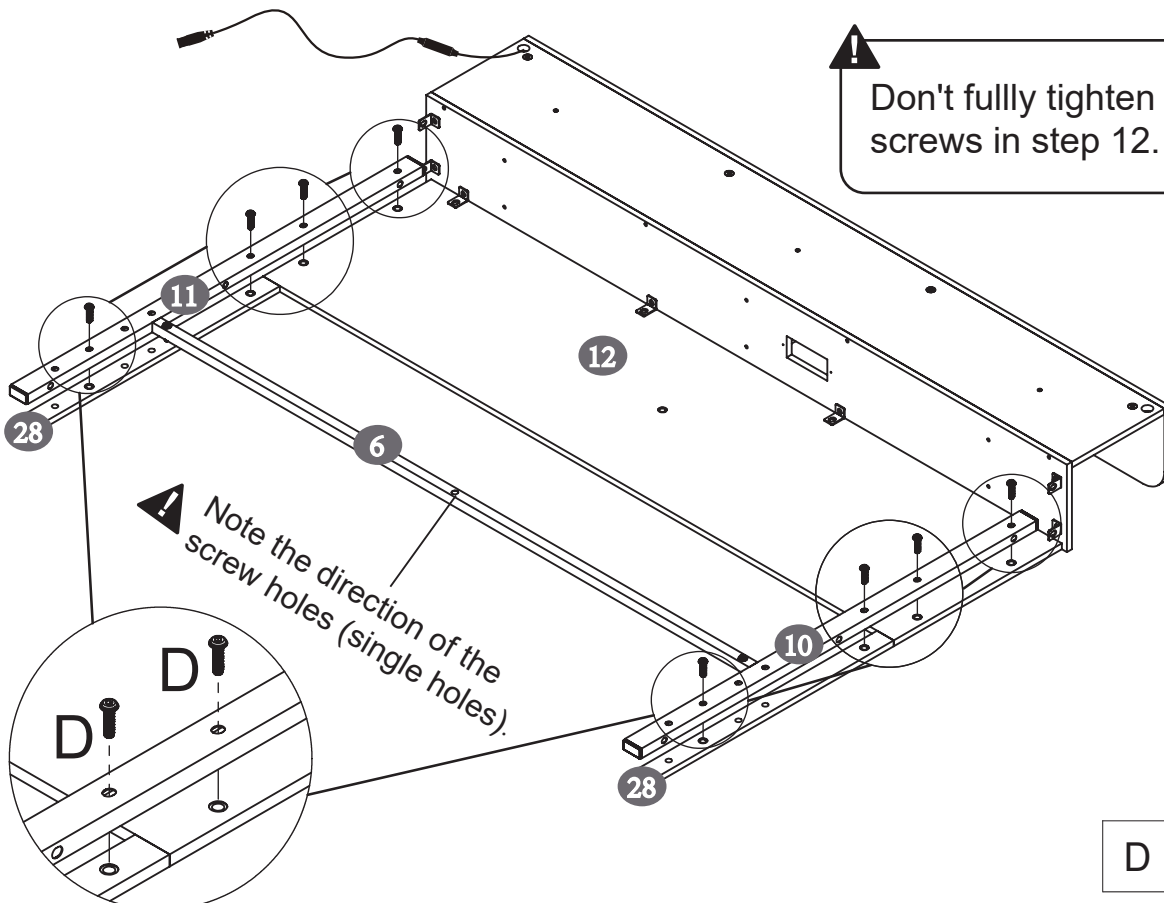Don't fully tighten the screws in step 12.




D	 M8x30	8 pcs
---	---	-------

# ASSEMBLY INSTRUCTIONS

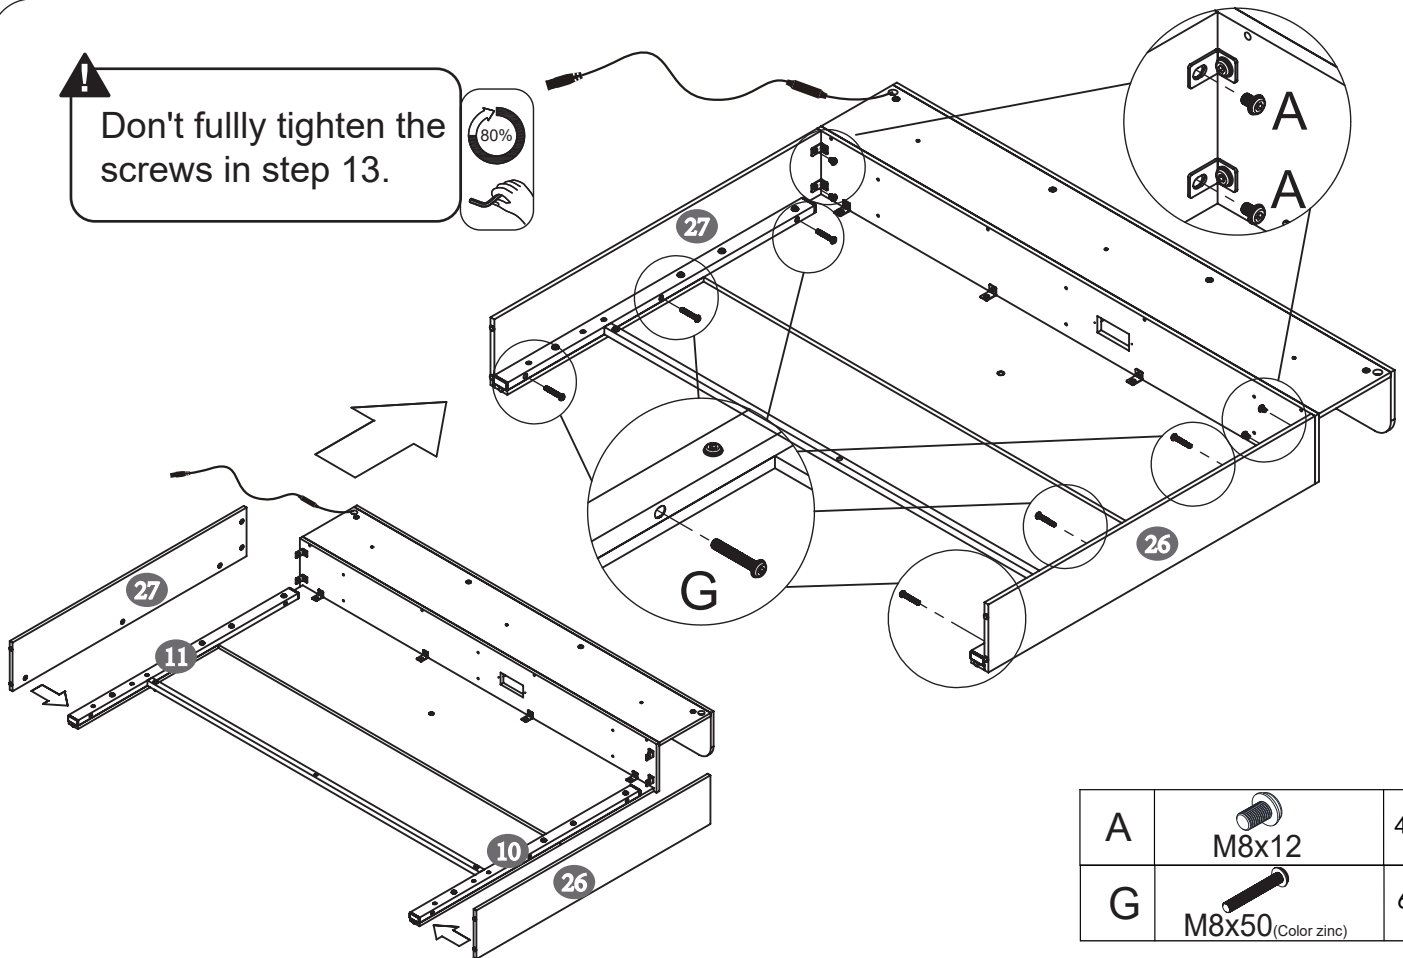13



Don't fully tighten the screws in step 13.






A	 M8x12	4pcs
G	 M8x50 (Color zinc)	6pcs

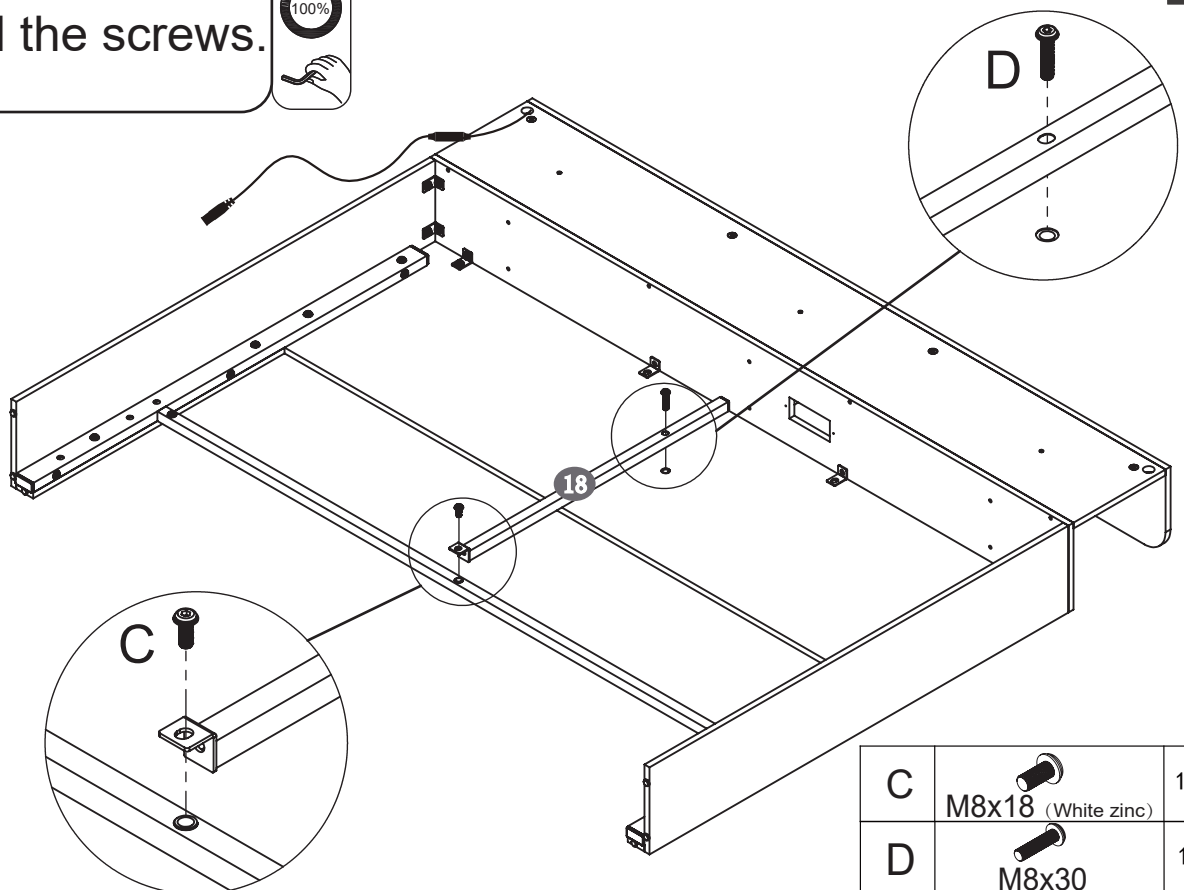
14




Tighten all the screws.



C	 M8x18 (White zinc)	1pc
D	 M8x30	1pc

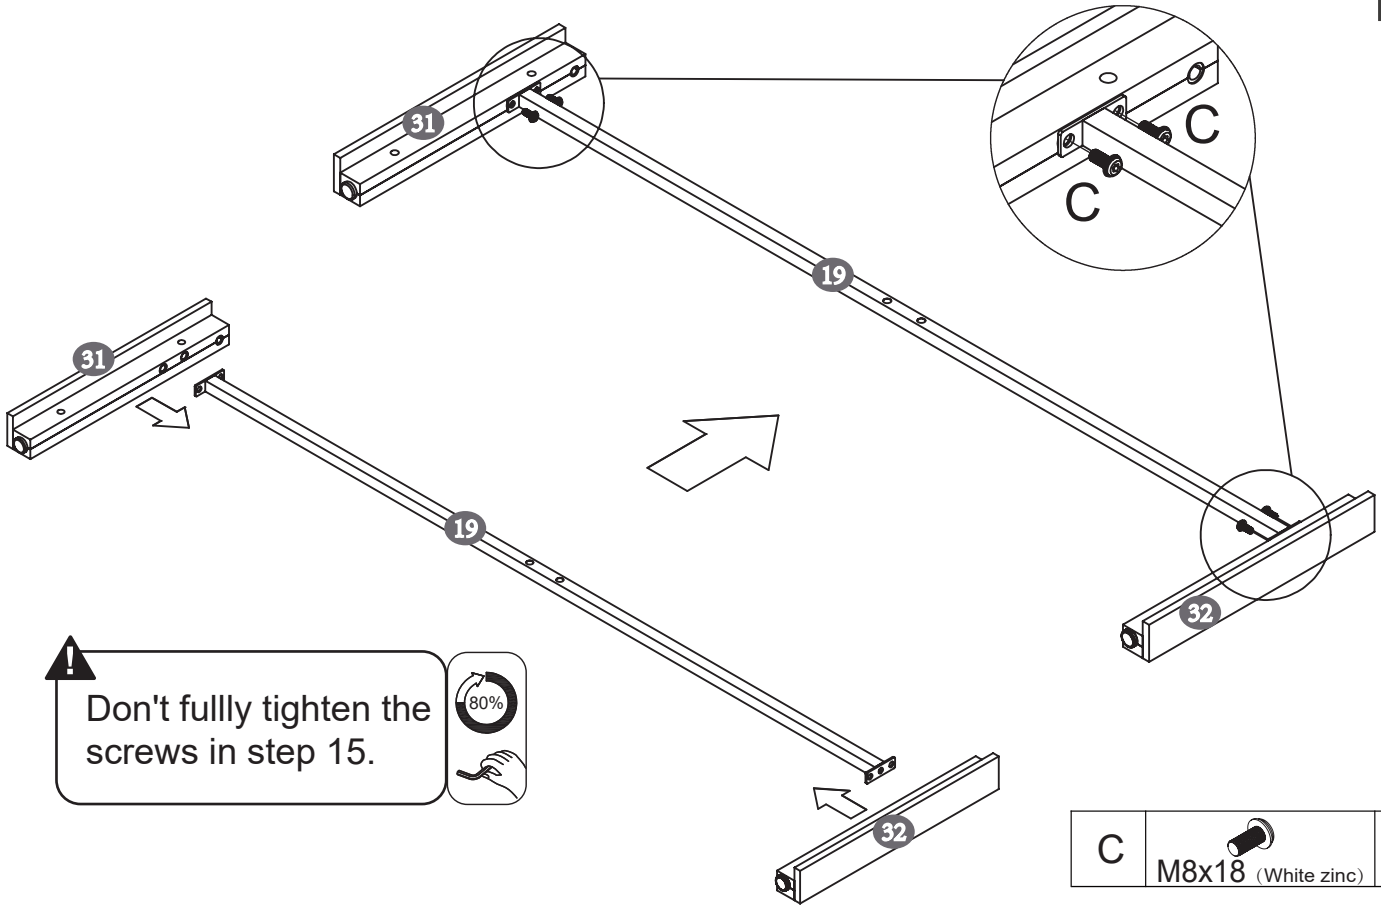


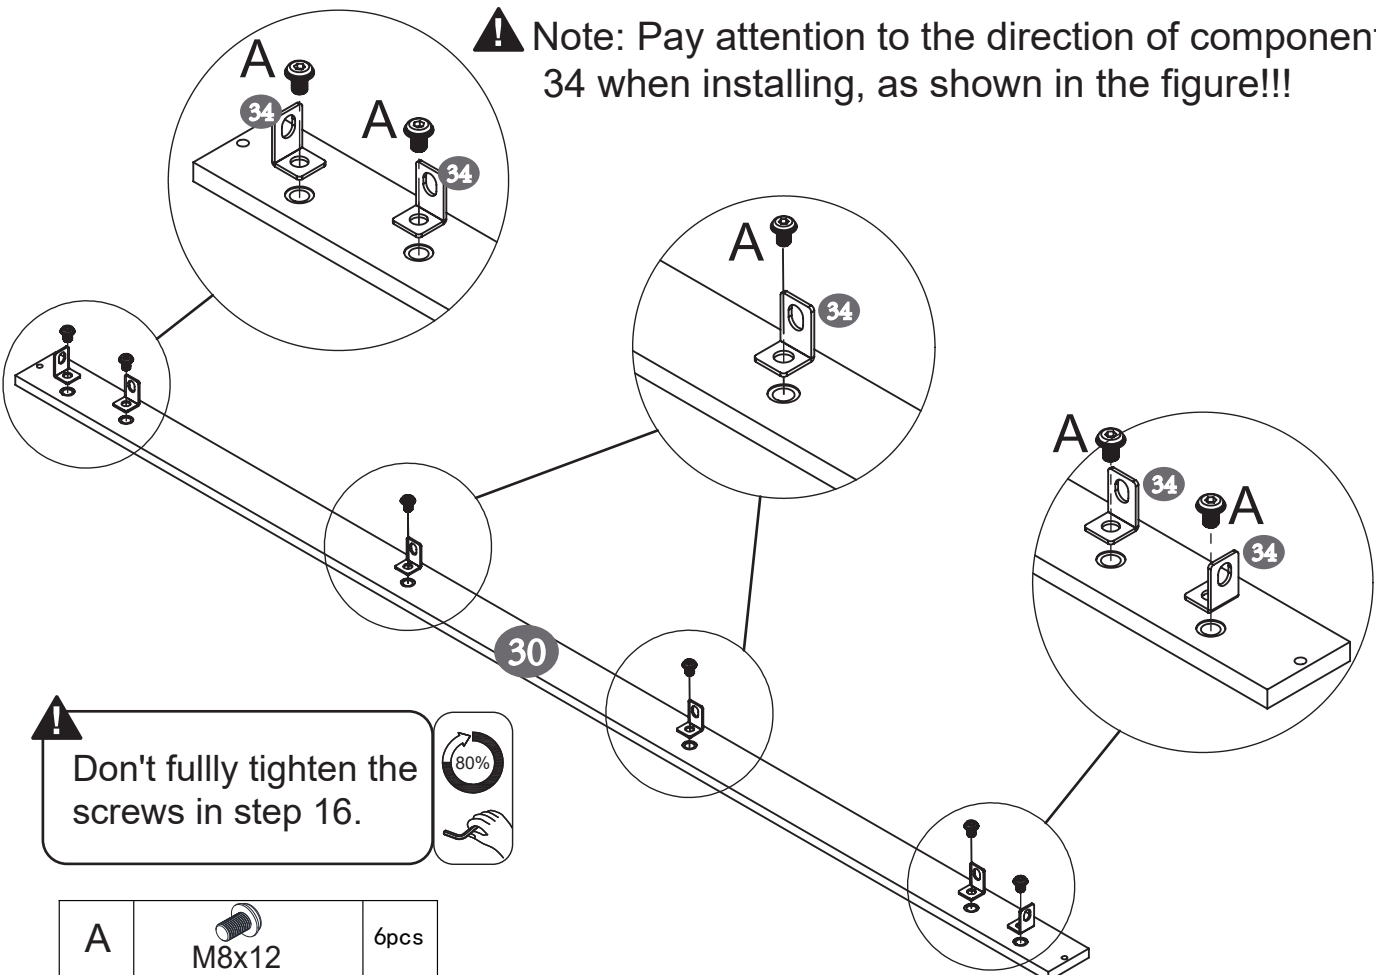**!** Note: Pay attention to the direction of component 34 when installing, as shown in the figure!!!




# ASSEMBLY INSTRUCTIONS

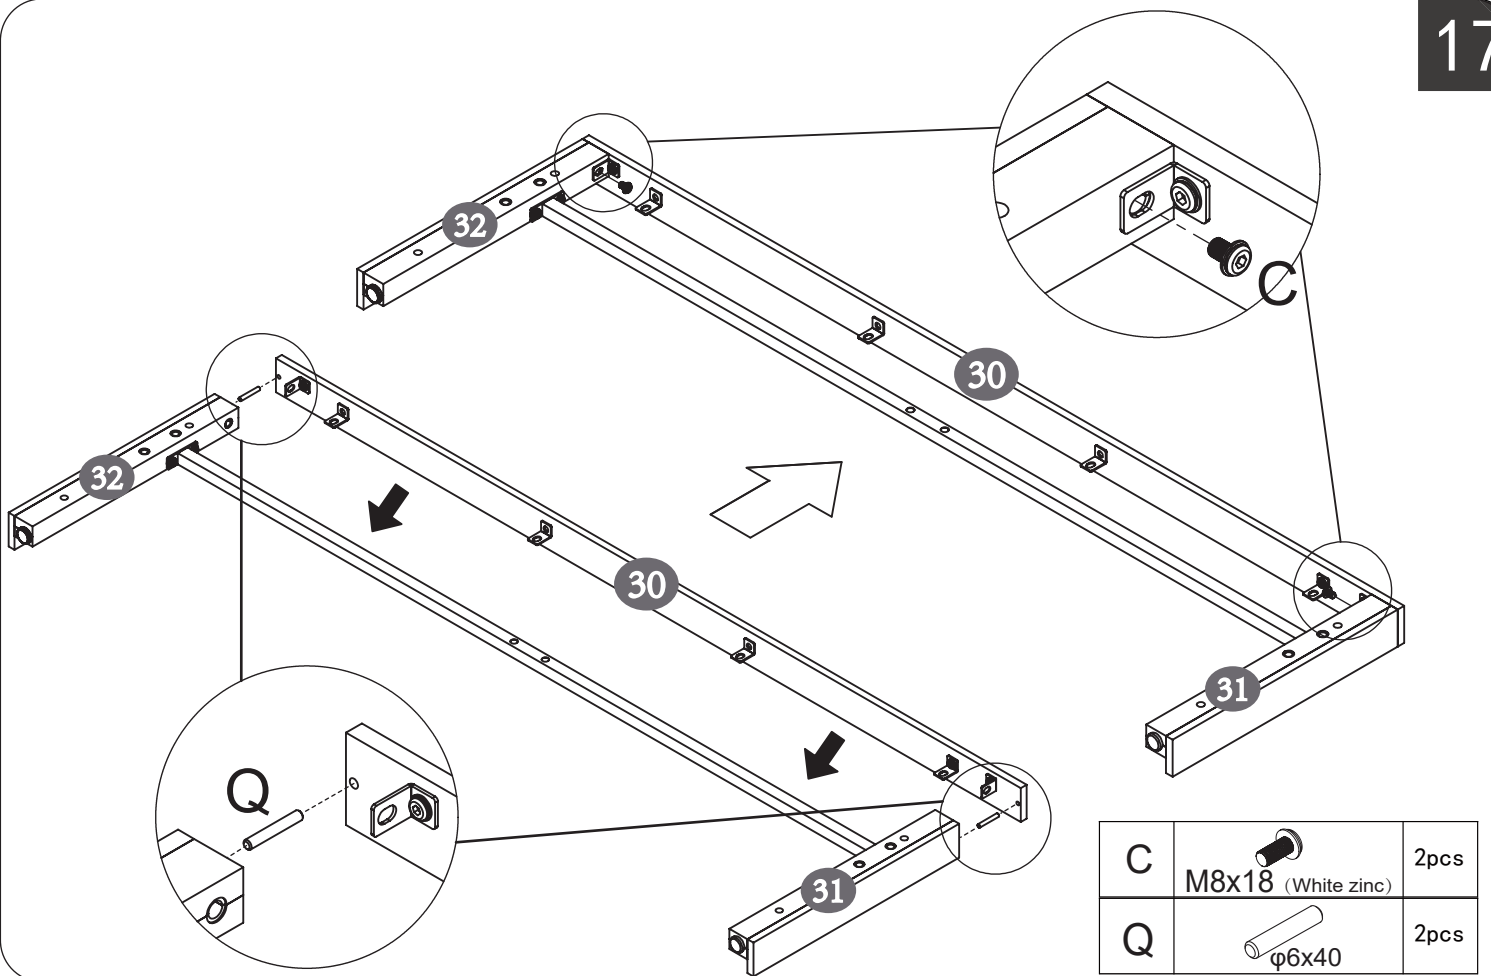17




18

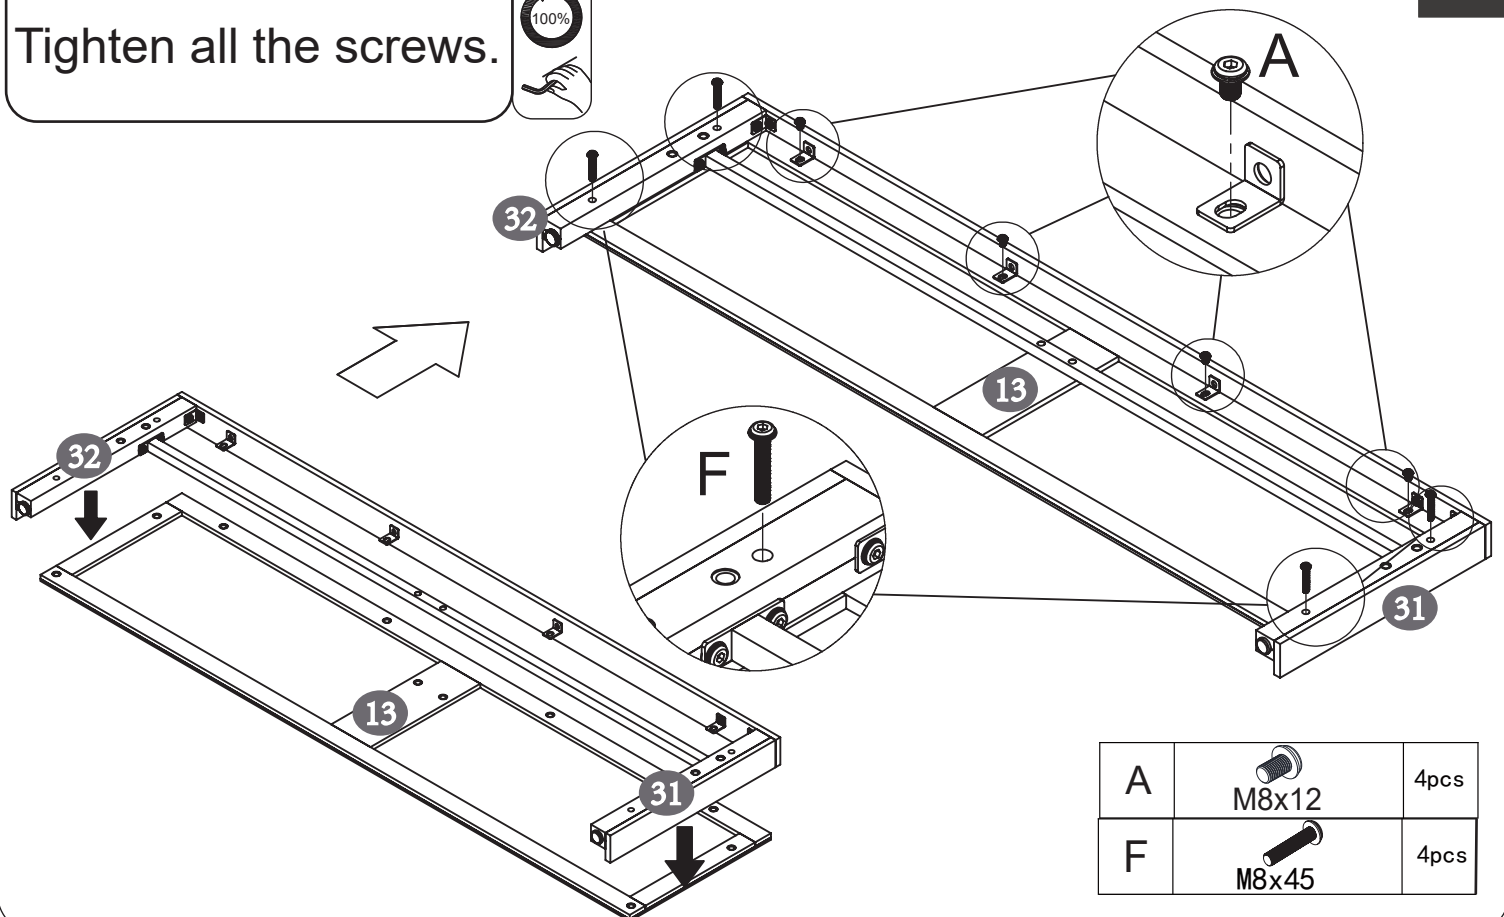Tighten all the screws.




19

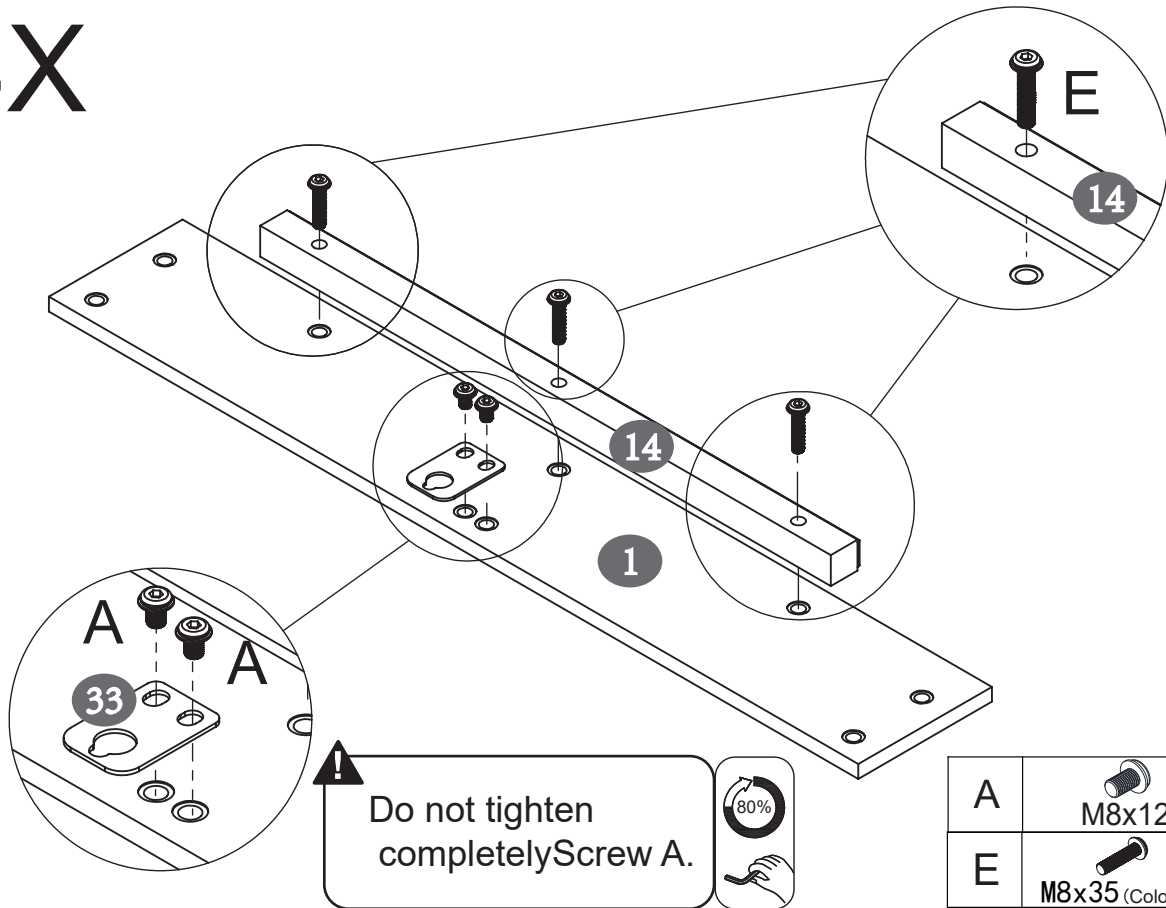4X




20

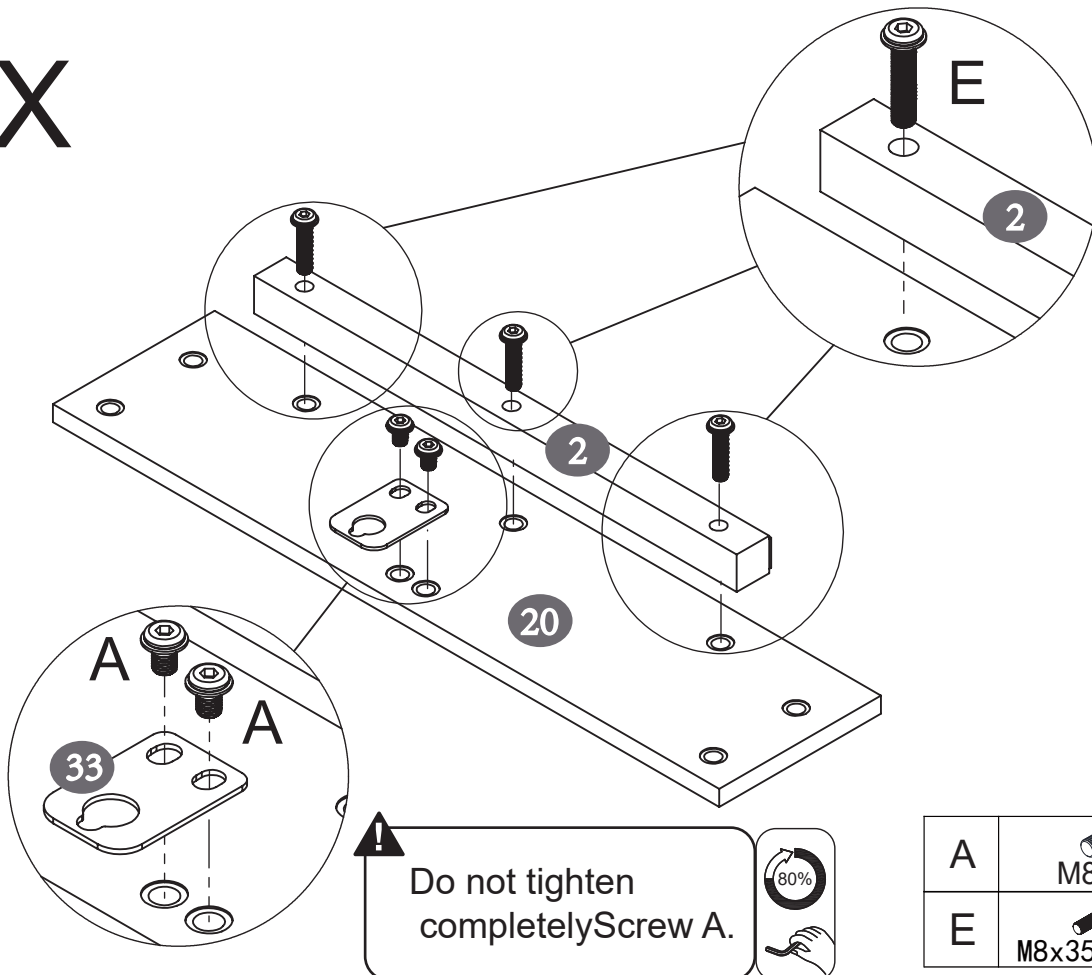2X




# ASSEMBLY INSTRUCTIONS

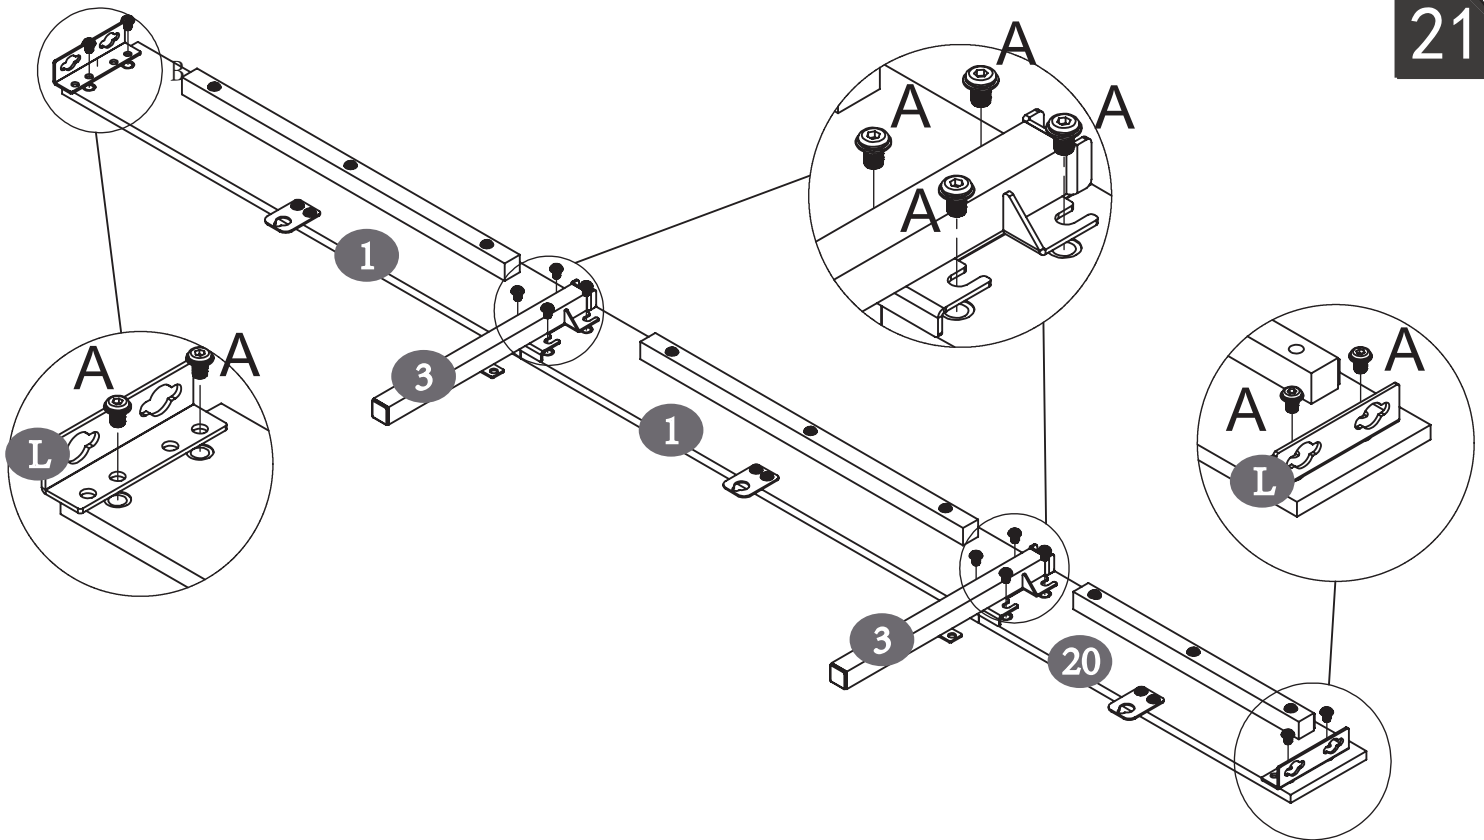21



A		12pcs
---	---	-------

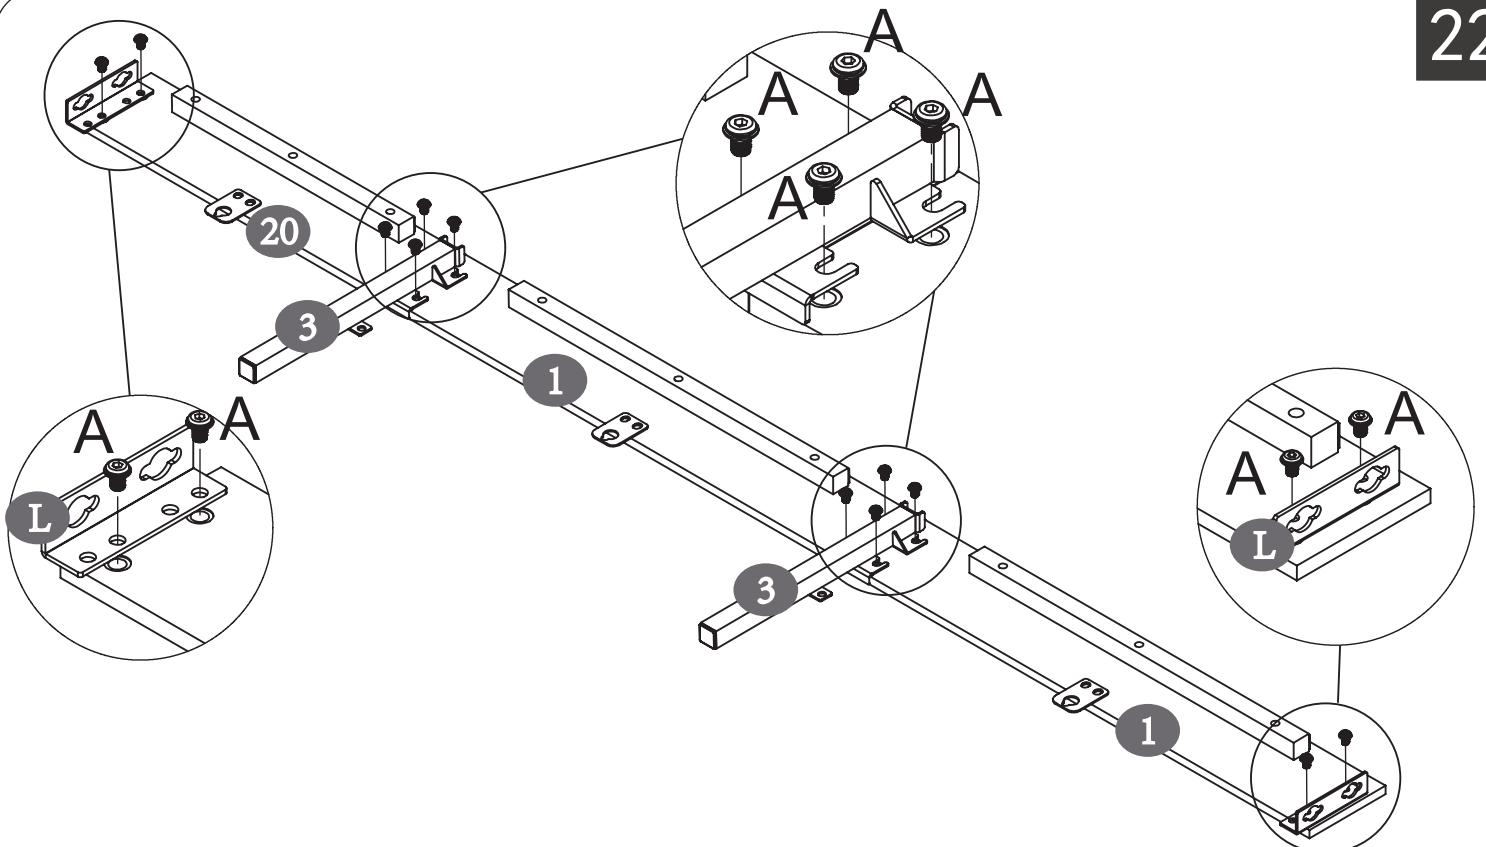22




A		12pcs
---	---	-------




# ASSEMBLY INSTRUCTIONS

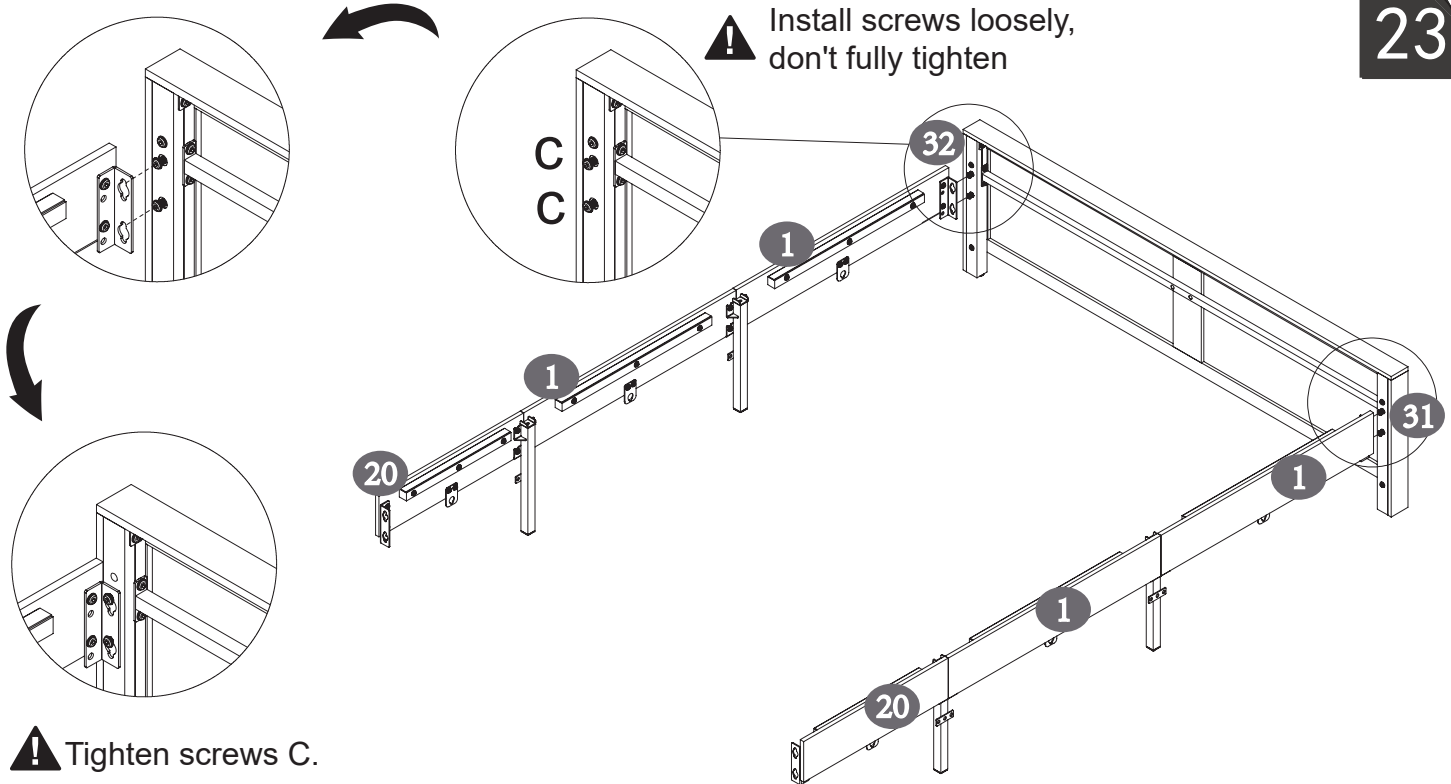
23



C	 M8x18 (White zinc)	4pcs
---	--	------

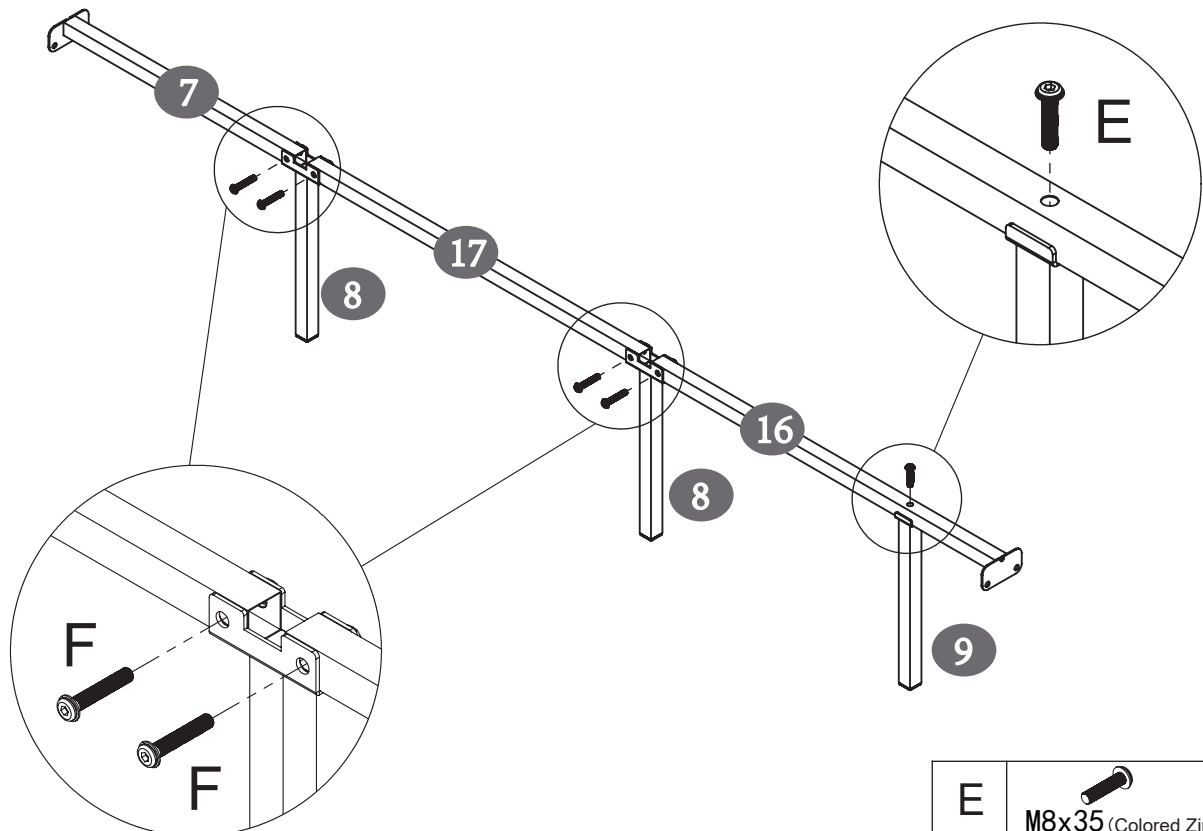24




E	 M8x35 (Colored Zinc)	1pc
F	 M8x45	4pcs






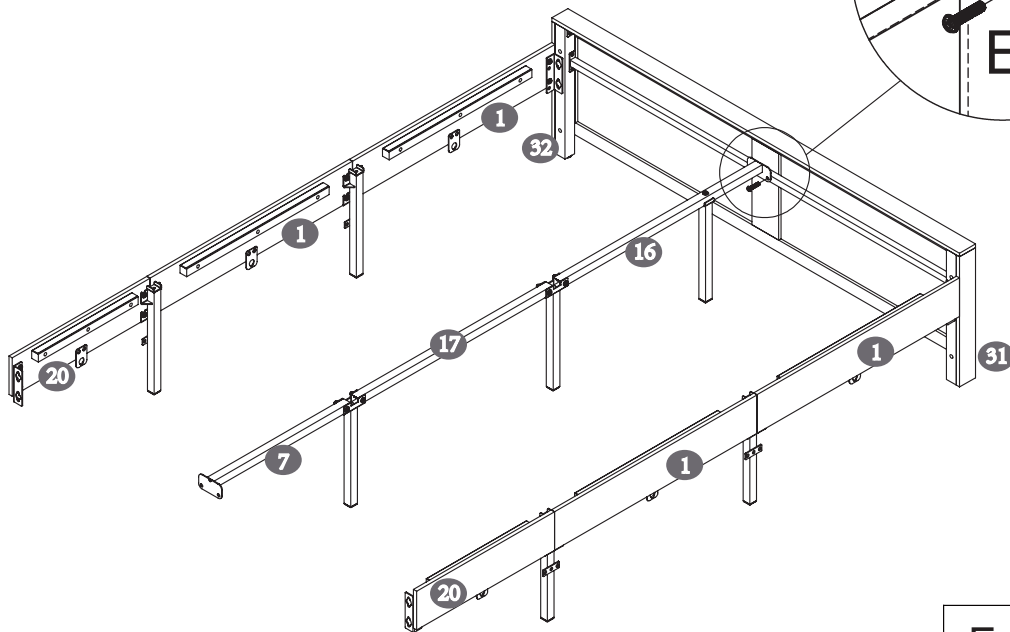
Don't fully tighten the screws in step 25.




E	 M8x35 (Colored Zinc)	2pcs
---	--	------

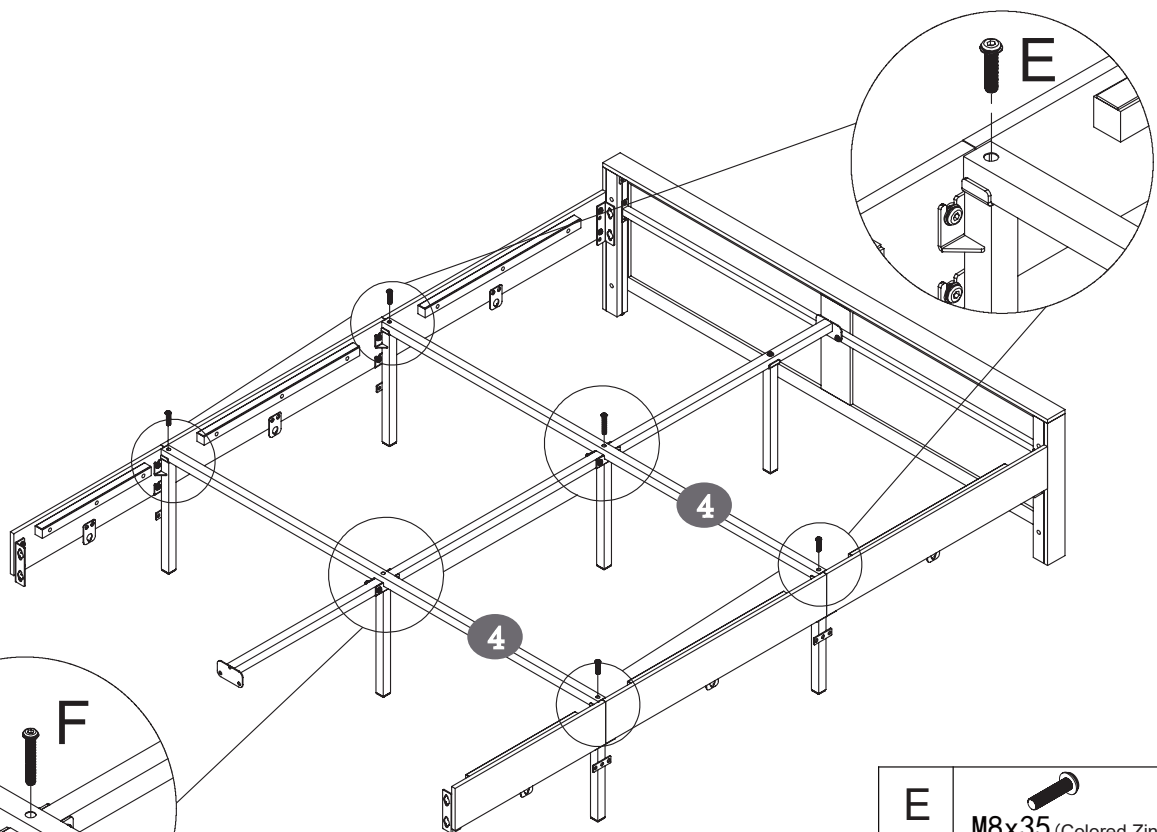


E	 M8x35 (Colored Zinc)	4pcs
G	 M8x50 (Colored Zinc)	2pcs

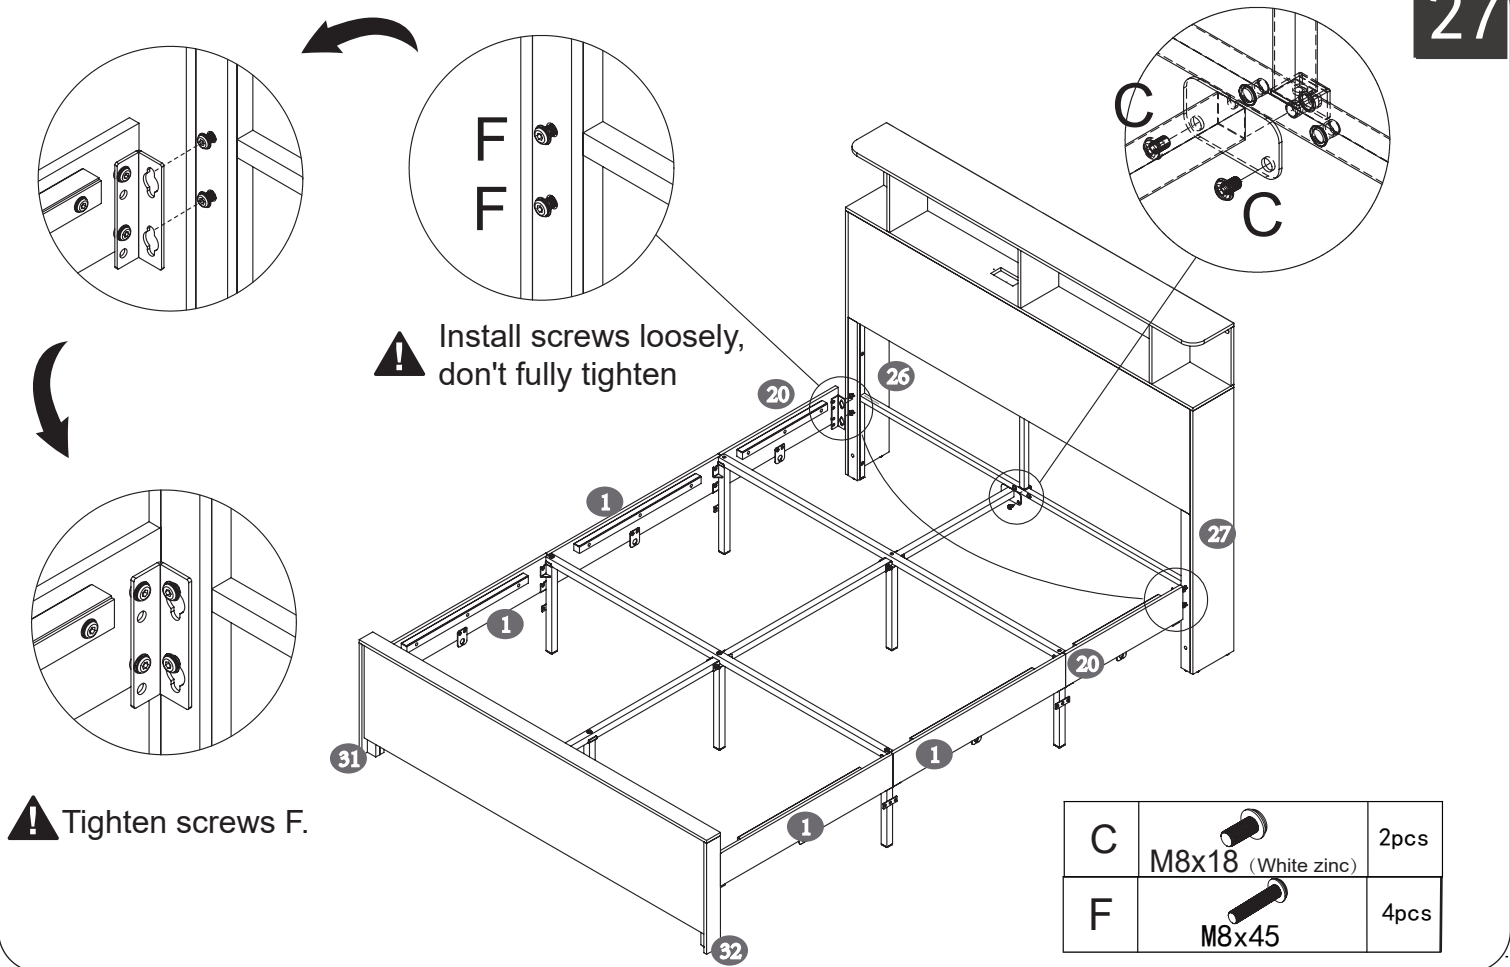27




28

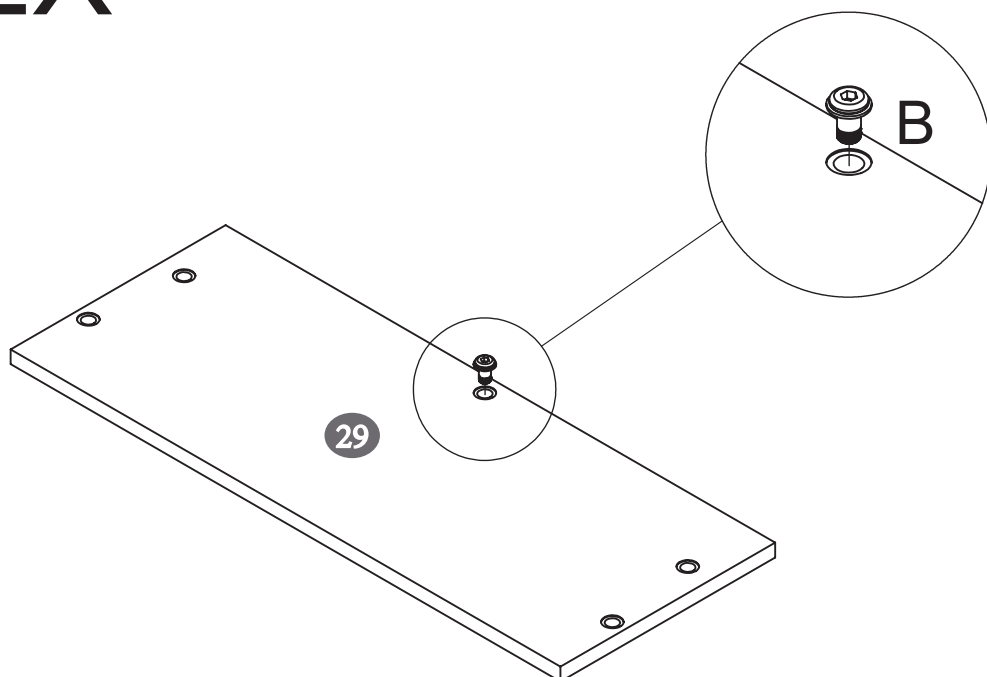2X




B	M8x14 (Color zinc)	2pcs
---	--------------------	------

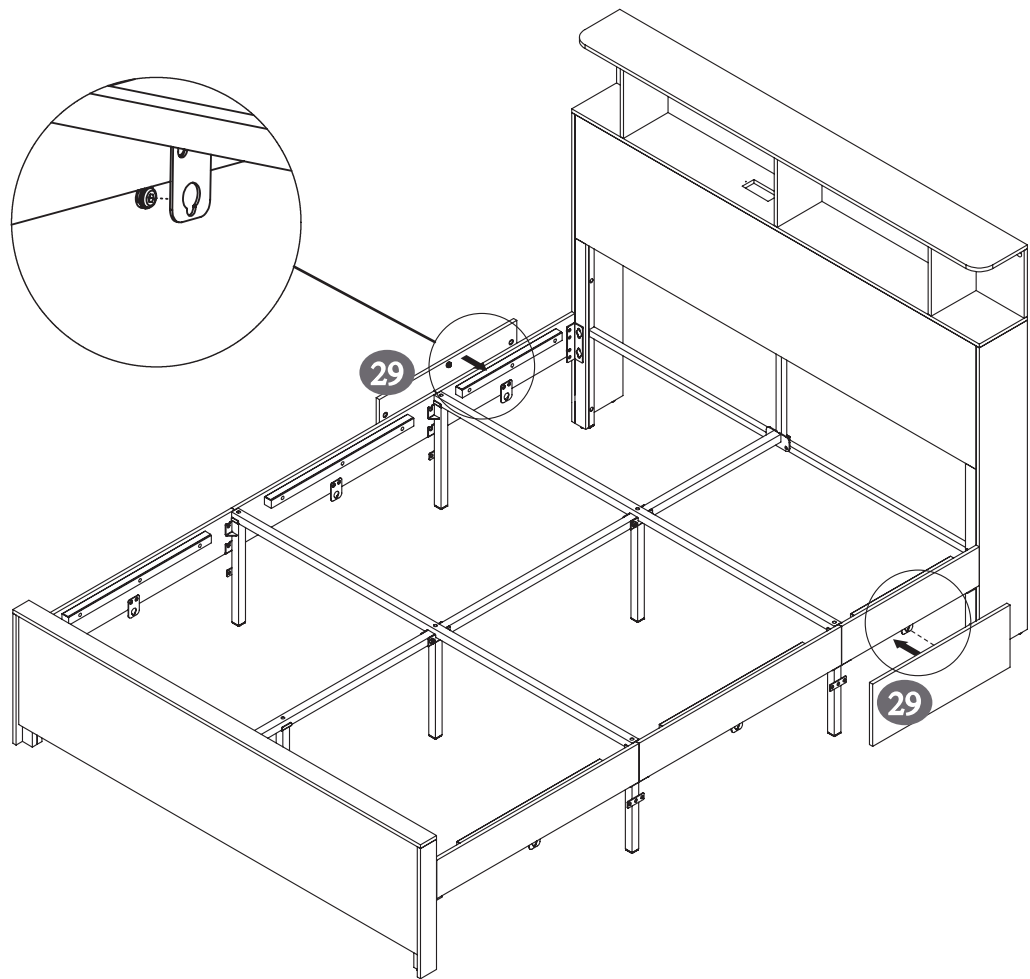29



30

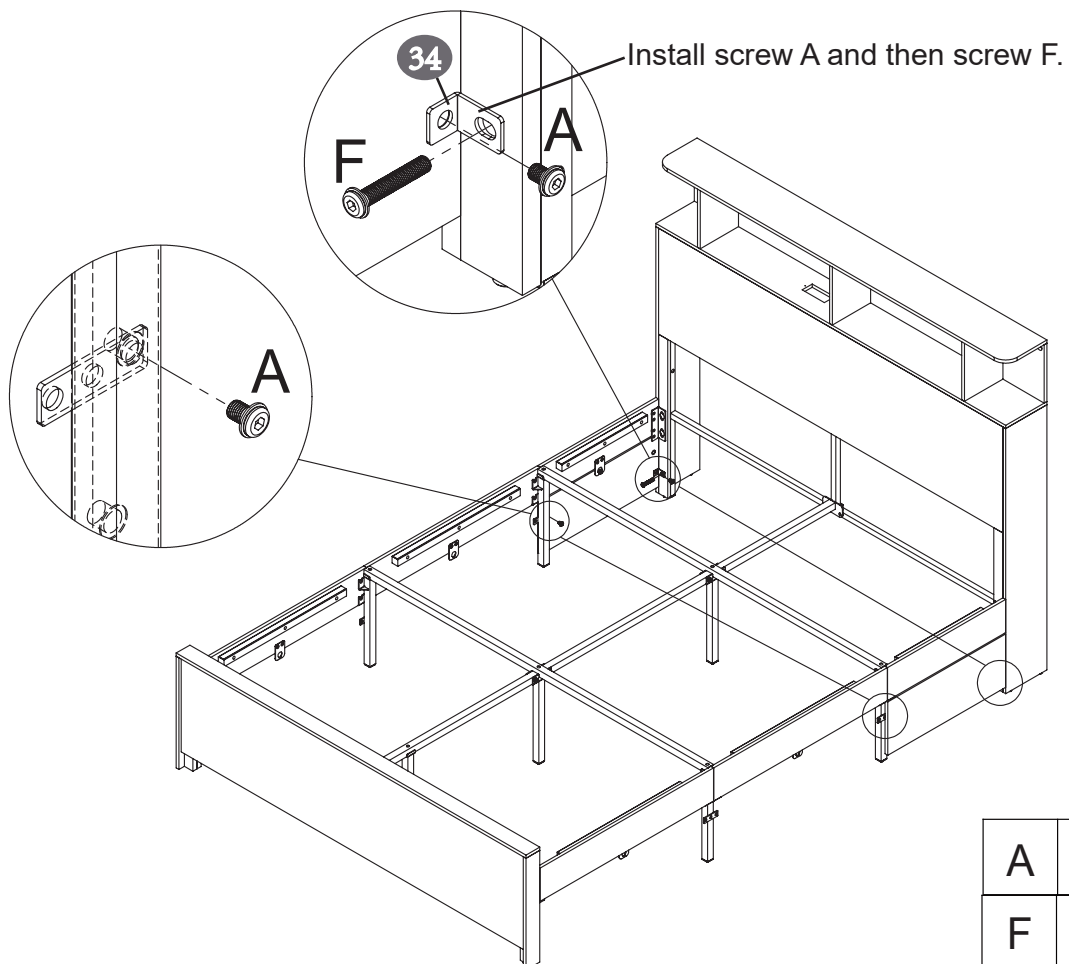


A	 M8x12	4pcs
F	 M8x45	2pcs

## 4X

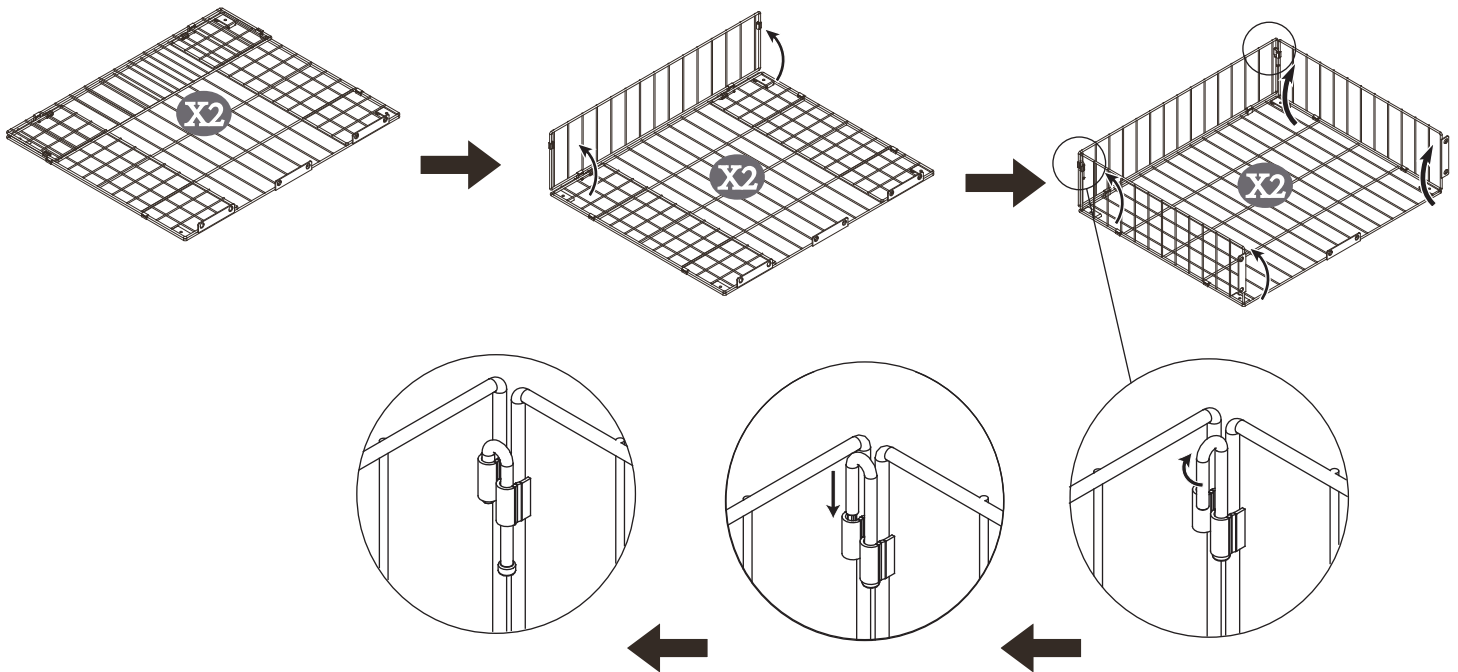
31


⚠ Please mind to unfold the wire drawer and insert the locking pin !




## 4X

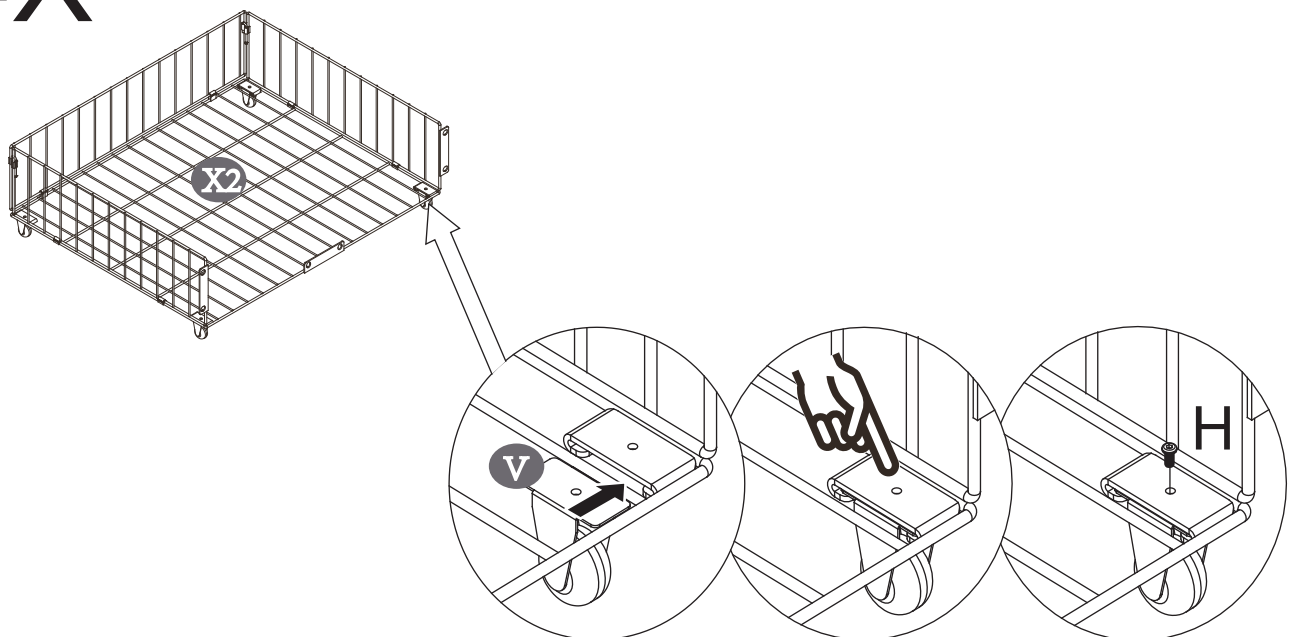
32




H		M4x10	16PCS
---	---	-------	-------

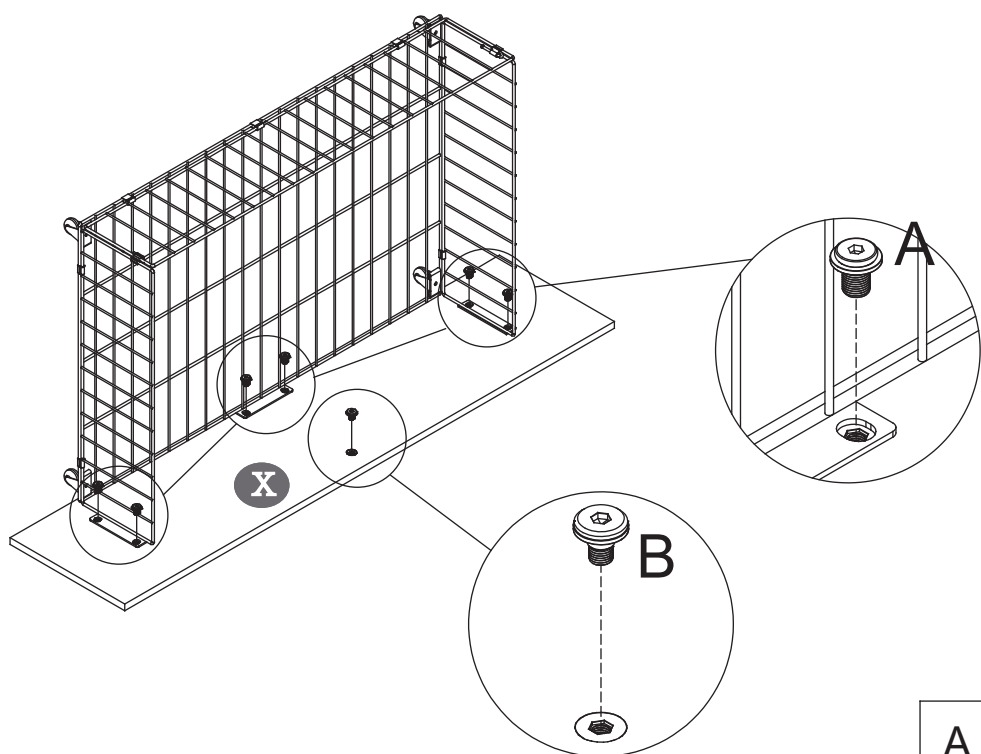


A	 M8x12	24pcs
B	 M8x14 (Color zinc)	4pcs

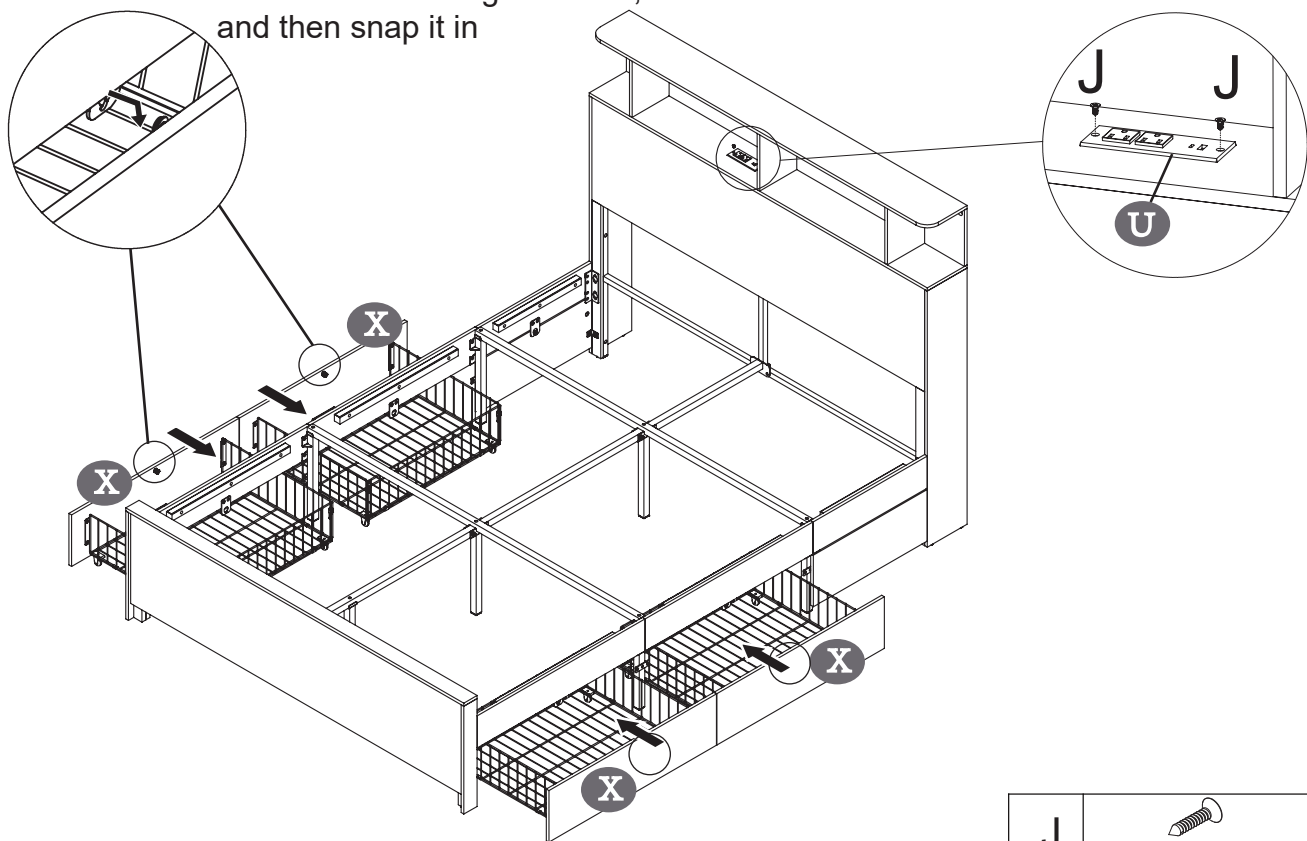 Gently lift the drawer, align the screw with the gourd hole, and then snap it in




J	 ST4.2x12	2pcs
---	--	------

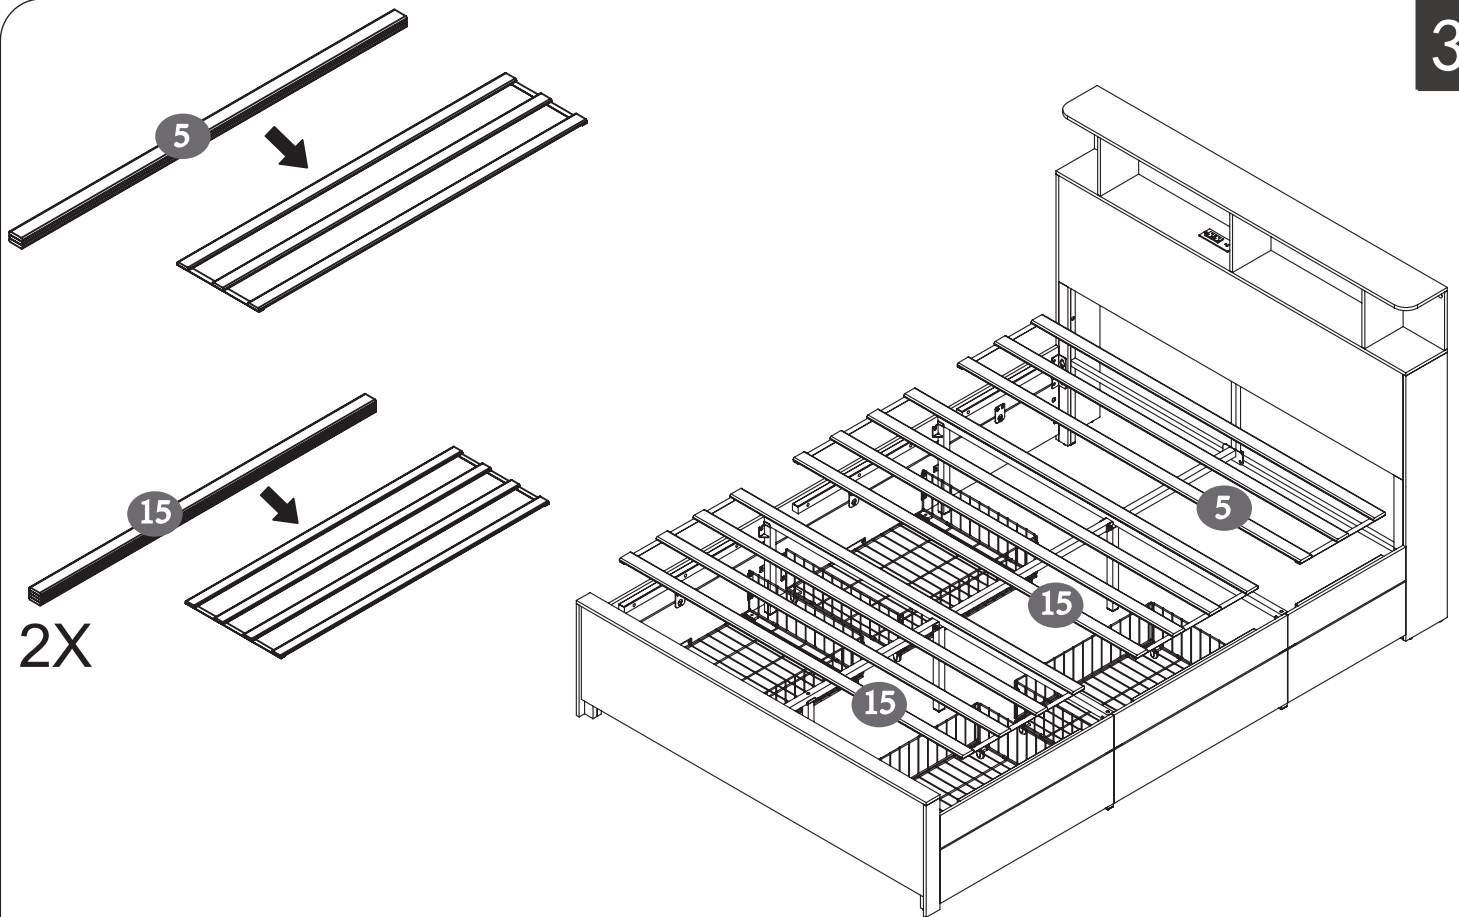
35



36

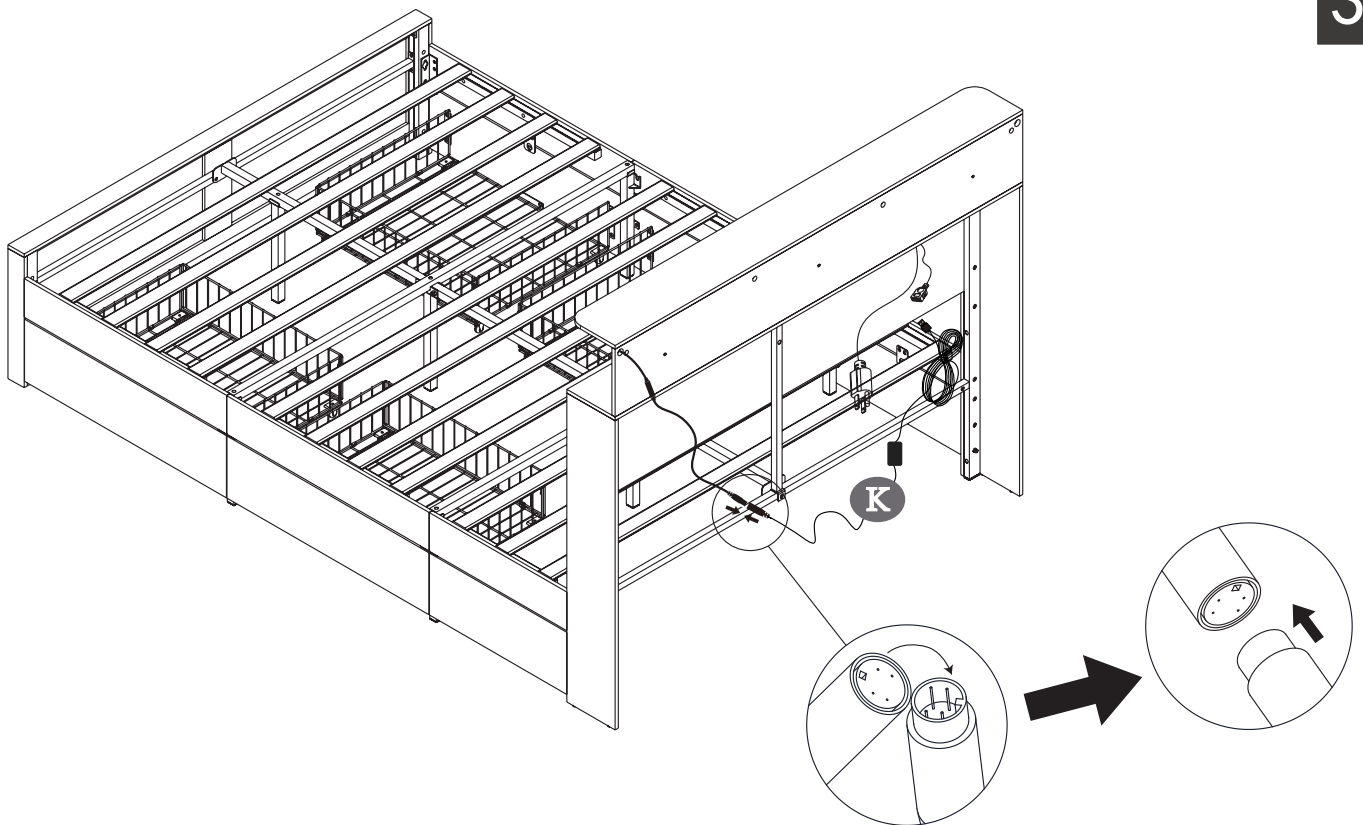

K		1pc
---	---	-----

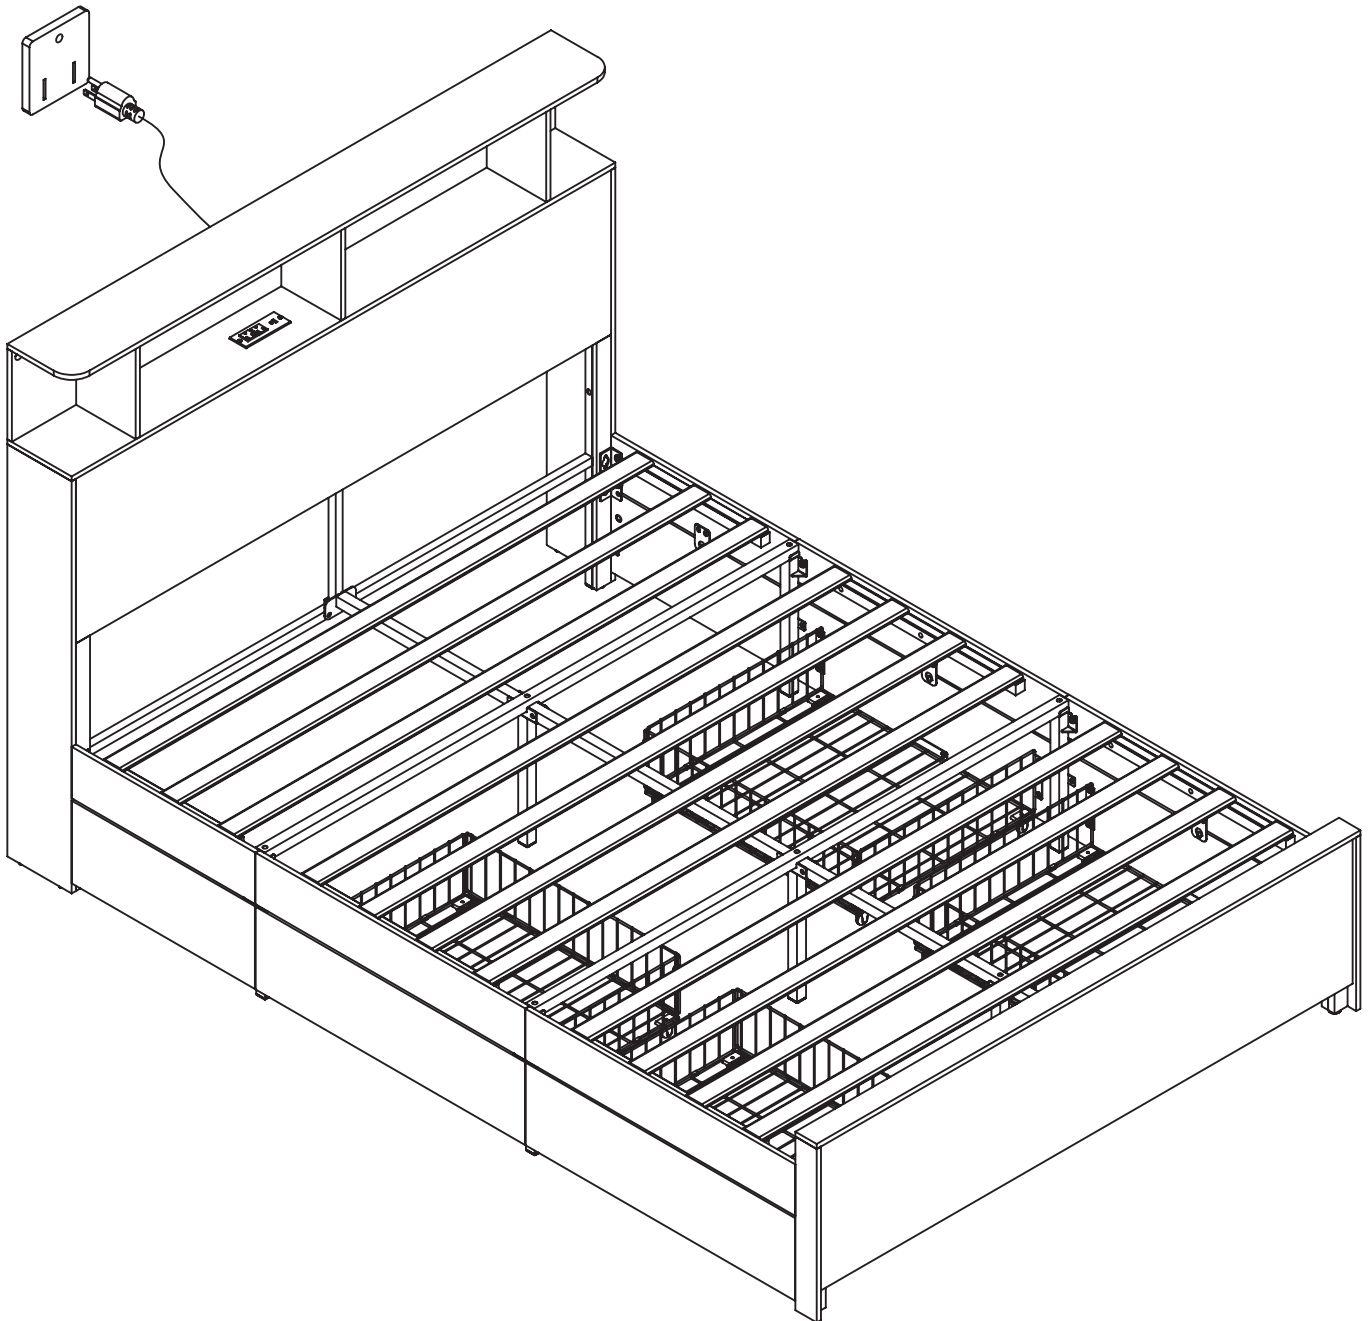

Make sure the assembly holes are aligned.  
TIGHTEN ALL THE SCREWS COMPLETELY.



Installation Complete