

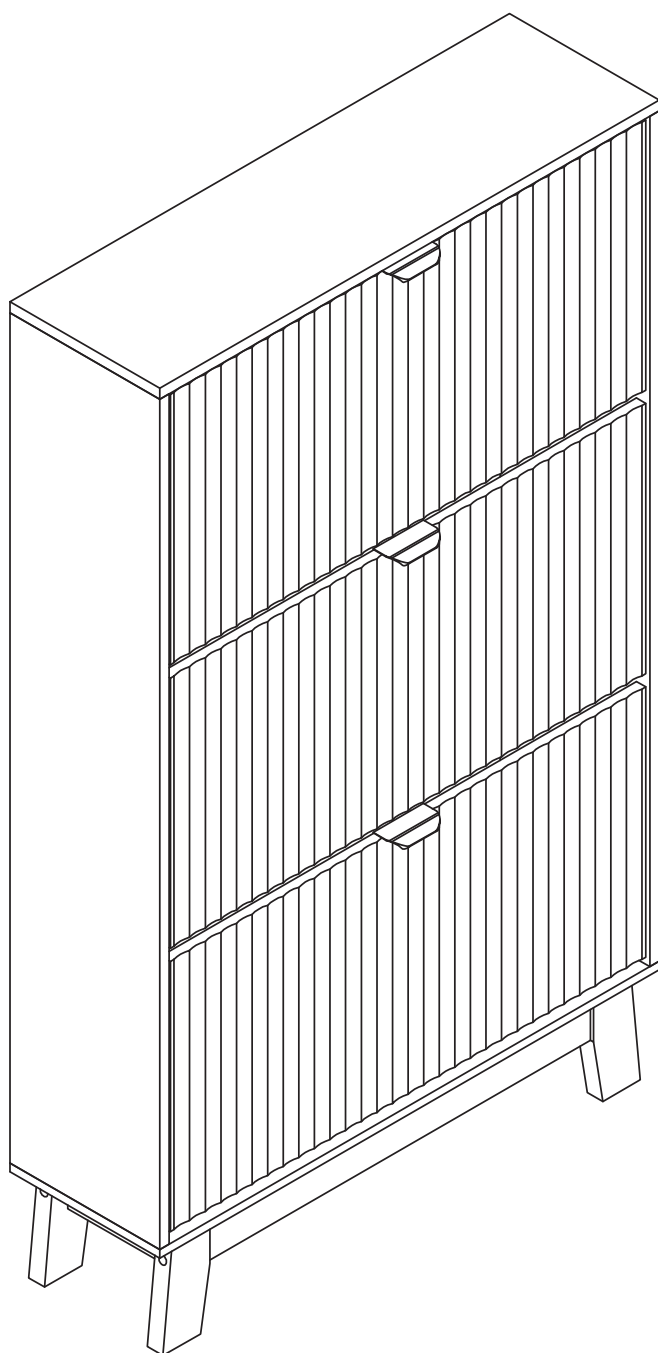
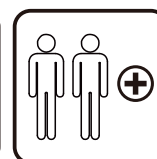
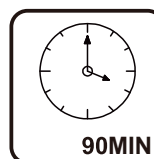


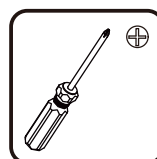


# HLG137


Version:1.0

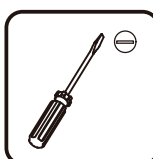


**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

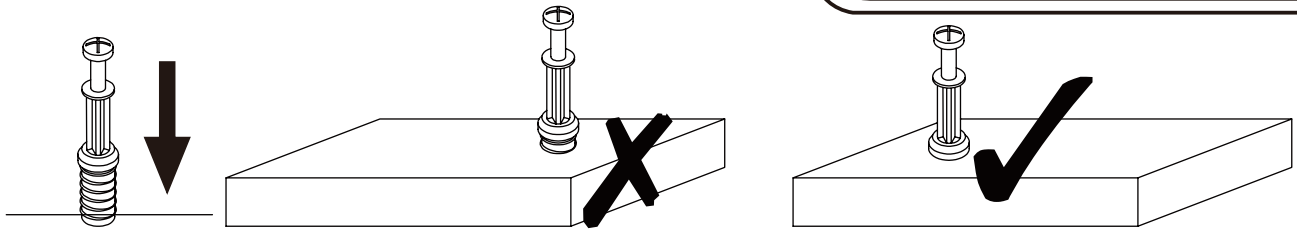


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

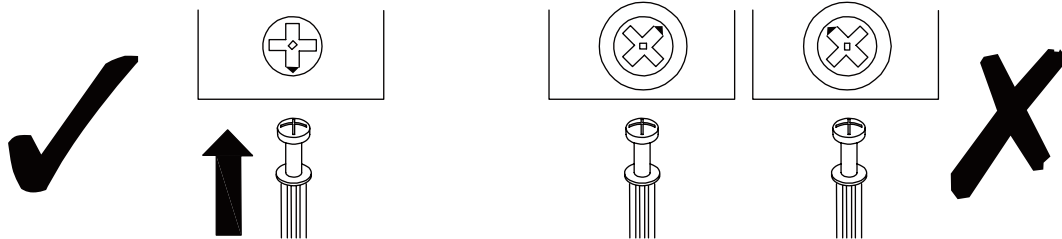












**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

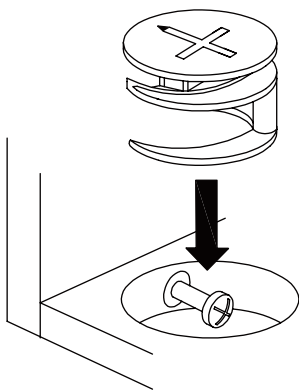


**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.







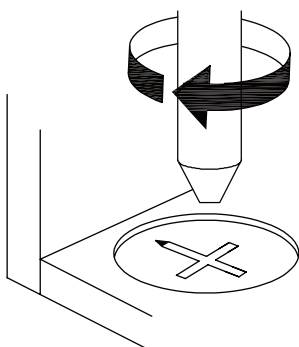


**EN\_Turn** cam lock clockwise to tighten.
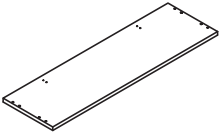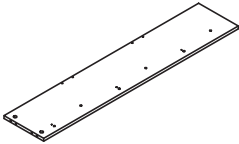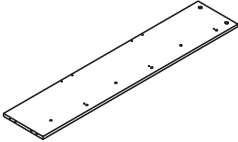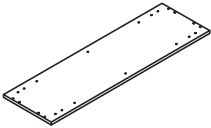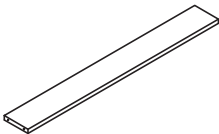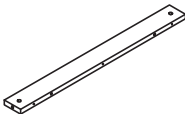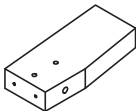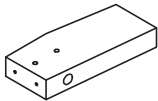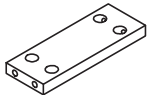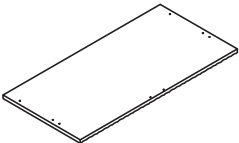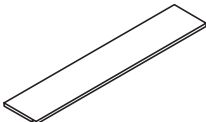
| NO. | PARTS                                                                               | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------|-----|-------|
| ①   |    | x1  |       |
| ②   |    | x1  |       |
| ③   |    | x1  |       |
| ④   |    | x1  |       |
| ⑤   |   | x2  |       |
| ⑥   |  | x2  |       |
| ⑦   |  | x2  |       |
| ⑧   |  | x2  |       |
| ⑨   |  | x2  |       |
| ⑩   |  | x3  |       |
| ⑪   |  | x6  |       |

[illegible]

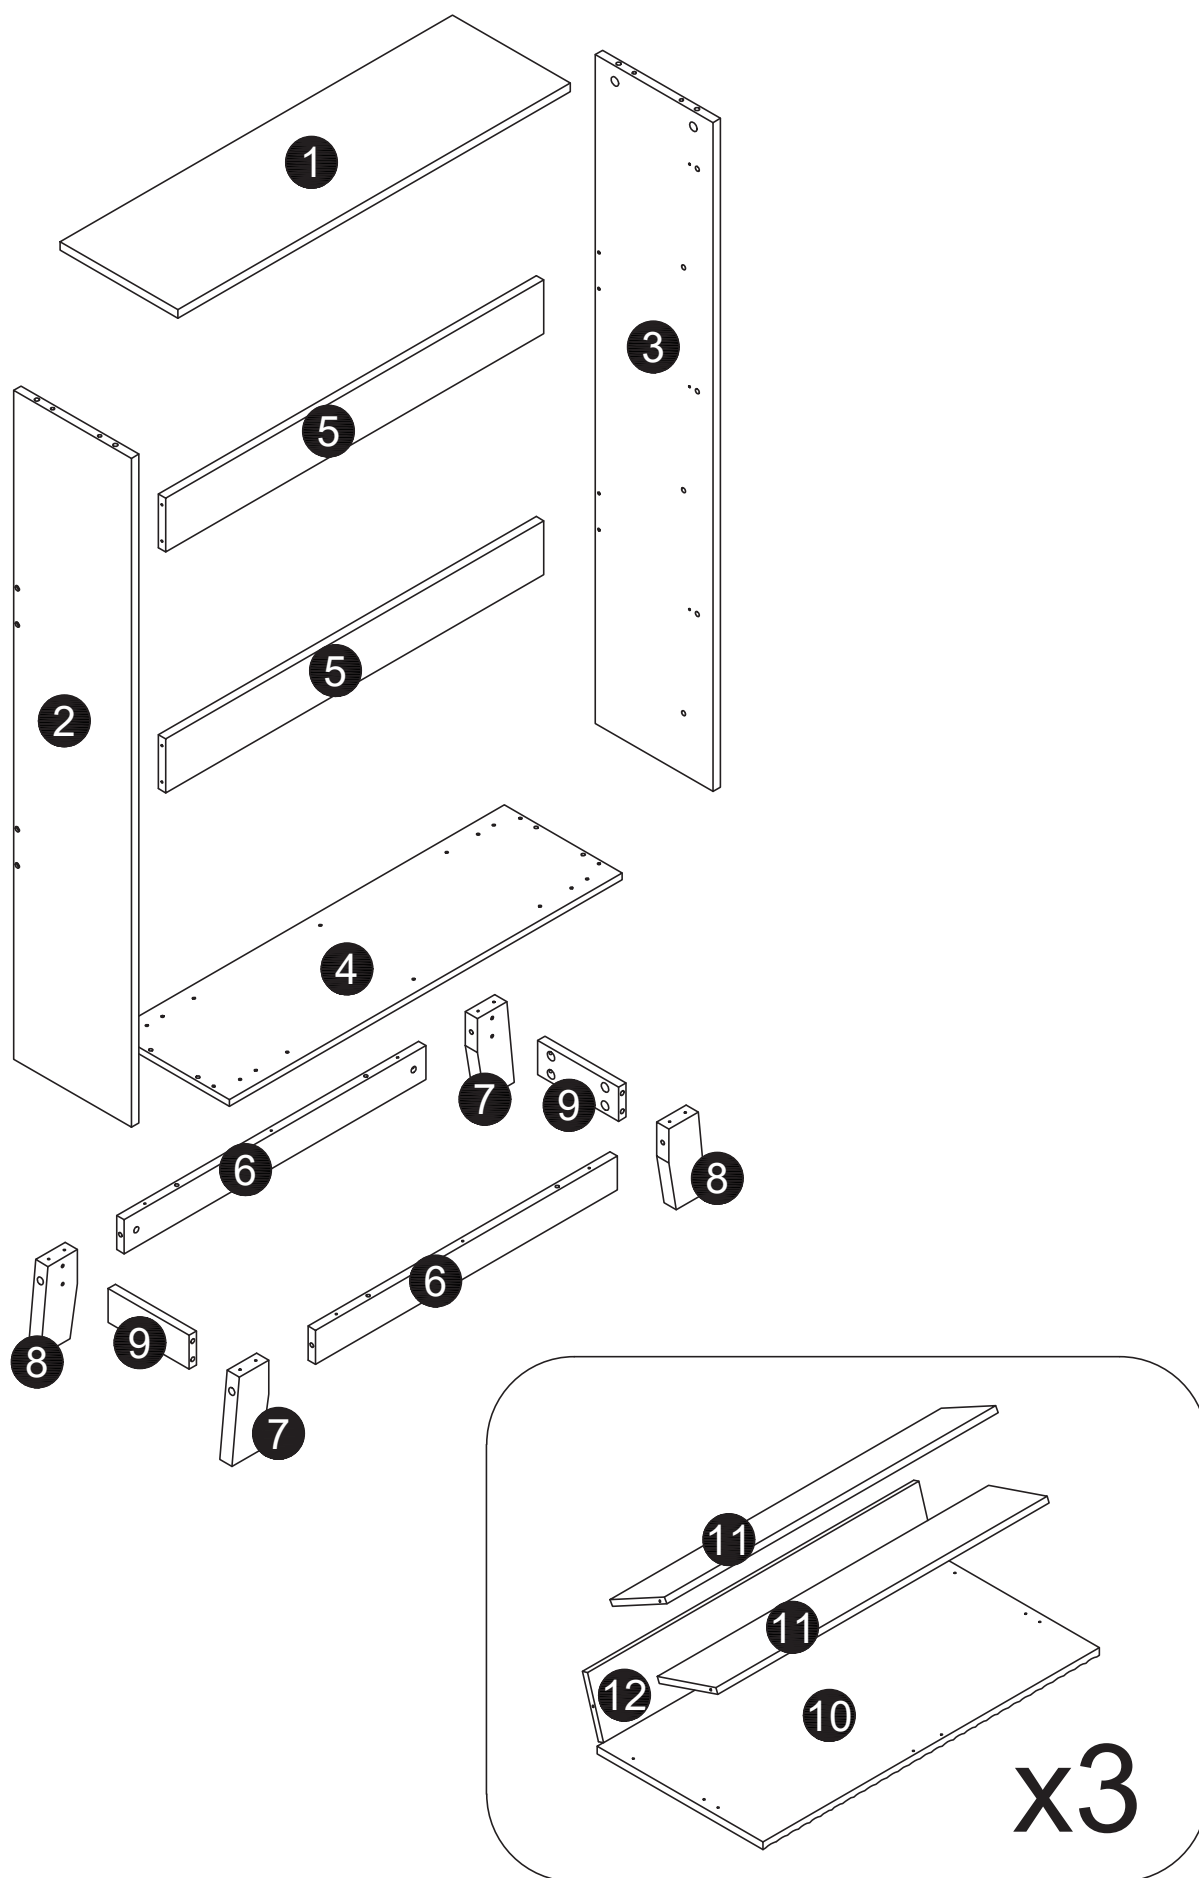

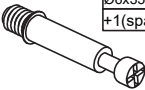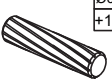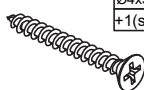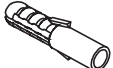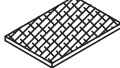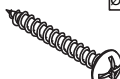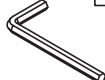
|                                                                                                                                                                                 |                                                                                                                                                                      |                                                                                                                                                                     |                                                                                                                                                                     |                                                                                                                                                                         |                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
|  <div> <b>A</b> x12<br/>           Ø6x35mm<br/>           +1(spare)         </div>             |  <div> <b>B</b> x12<br/>           Ø15x10mm<br/>           +1(spare)         </div> |  <div> <b>C</b> x12<br/>           Ø6x30mm<br/>           +1(spare)         </div> |  <div> <b>D</b> x14<br/>           Ø4x35mm<br/>           +1(spare)         </div> |  <div> <b>E</b> x48<br/>           Ø3.5x12mm<br/>           +4(spare)         </div> |  <div> <b>F</b> x6         </div> |
|  <div> <b>G</b> x6         </div>                                                              |  <div> <b>H</b> x6         </div>                                                   |  <div> <b>I</b> x4         </div>                                                  |  <div> <b>J</b> x4         </div>                                                  |  <div> <b>K</b> x3         </div>                                                    |  <div> <b>L</b> x3         </div> |
|  <div> <b>M</b> x2<br/>           Ø4x14mm<br/>           M-1<br/>           M-2         </div> |  <div> <b>N</b> x2<br/>           Ø6x30mm         </div>                            |  <div> <b>O</b> x8<br/>           15mm<br/>           +2(spare)         </div>     |  <div> <b>P</b> x4         </div>                                                  |  <div> <b>Q</b> x14<br/>           Ø4x30mm         </div>                            |  <div> <b>R</b> x3         </div> |
|  <div> <b>S</b> x1<br/>           M5         </div>                                            |                                                                                                                                                                      |                                                                                                                                                                     |                                                                                                                                                                     |                                                                                                                                                                         |                                                                                                                      |




E x6



F x6

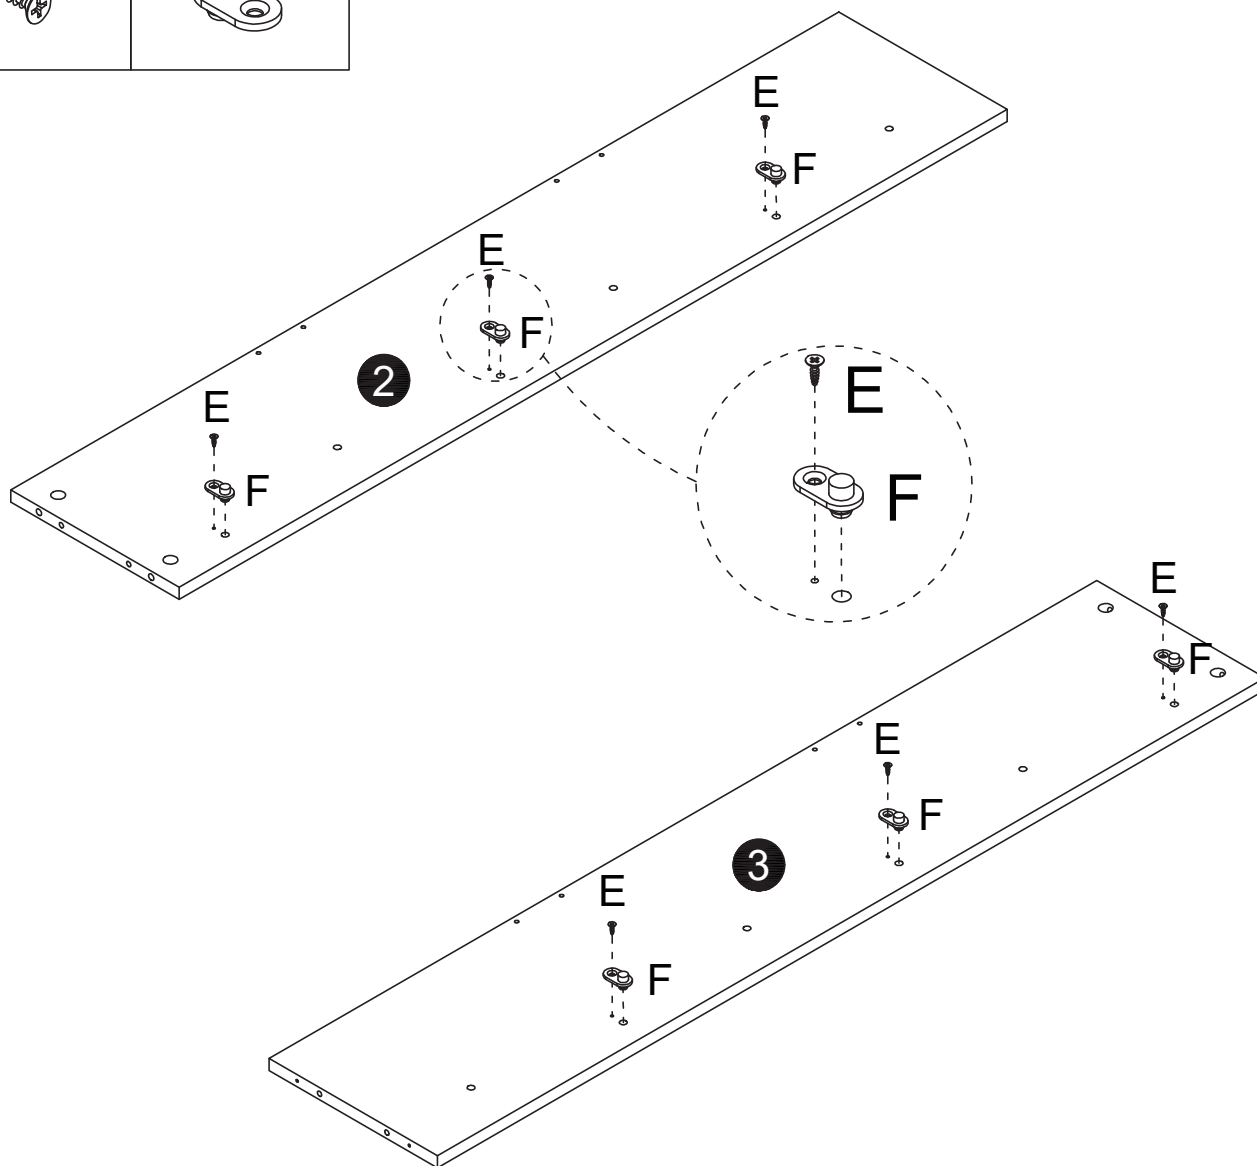

A x8

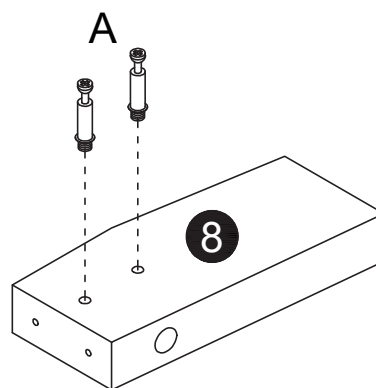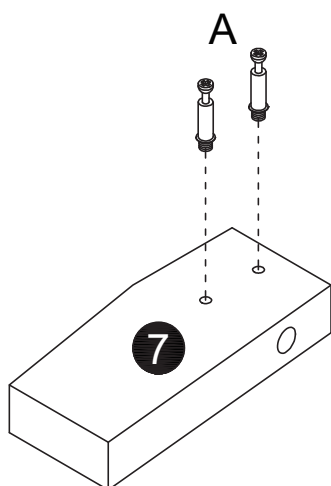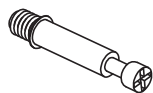



x2

03

B x8



P x4

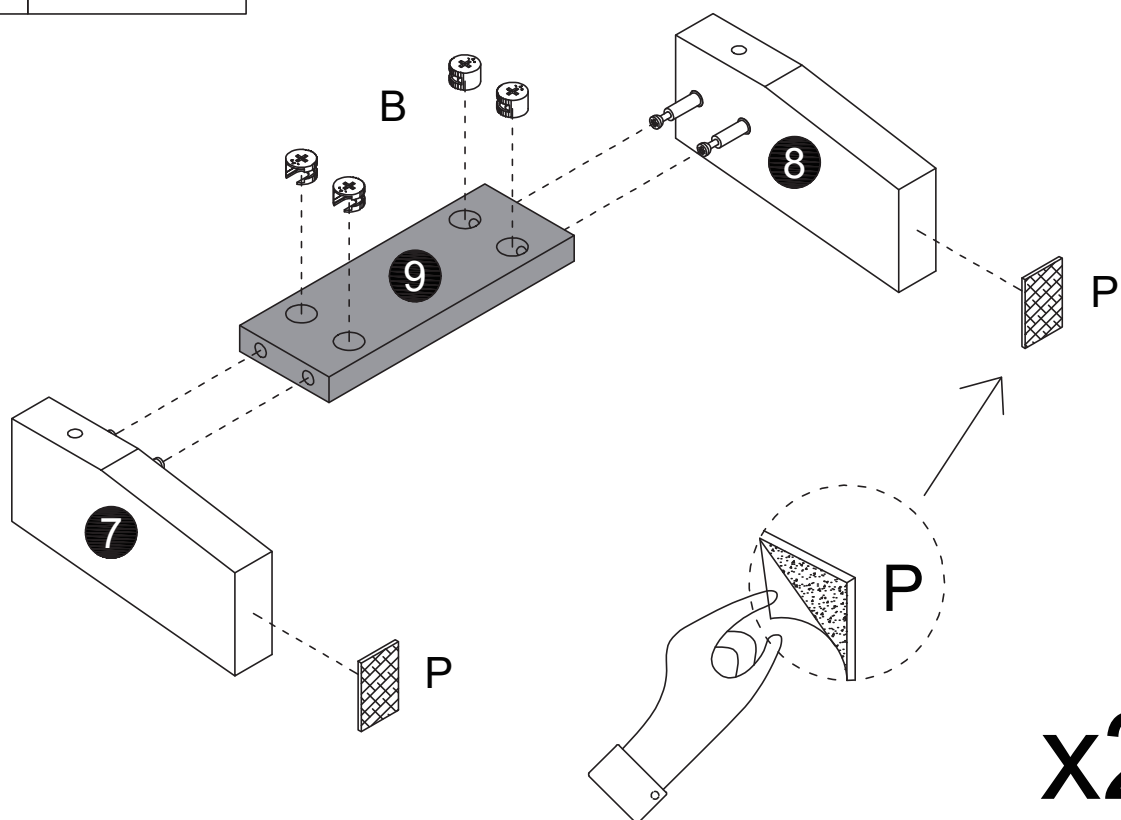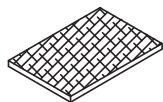


04

I x4




J x4

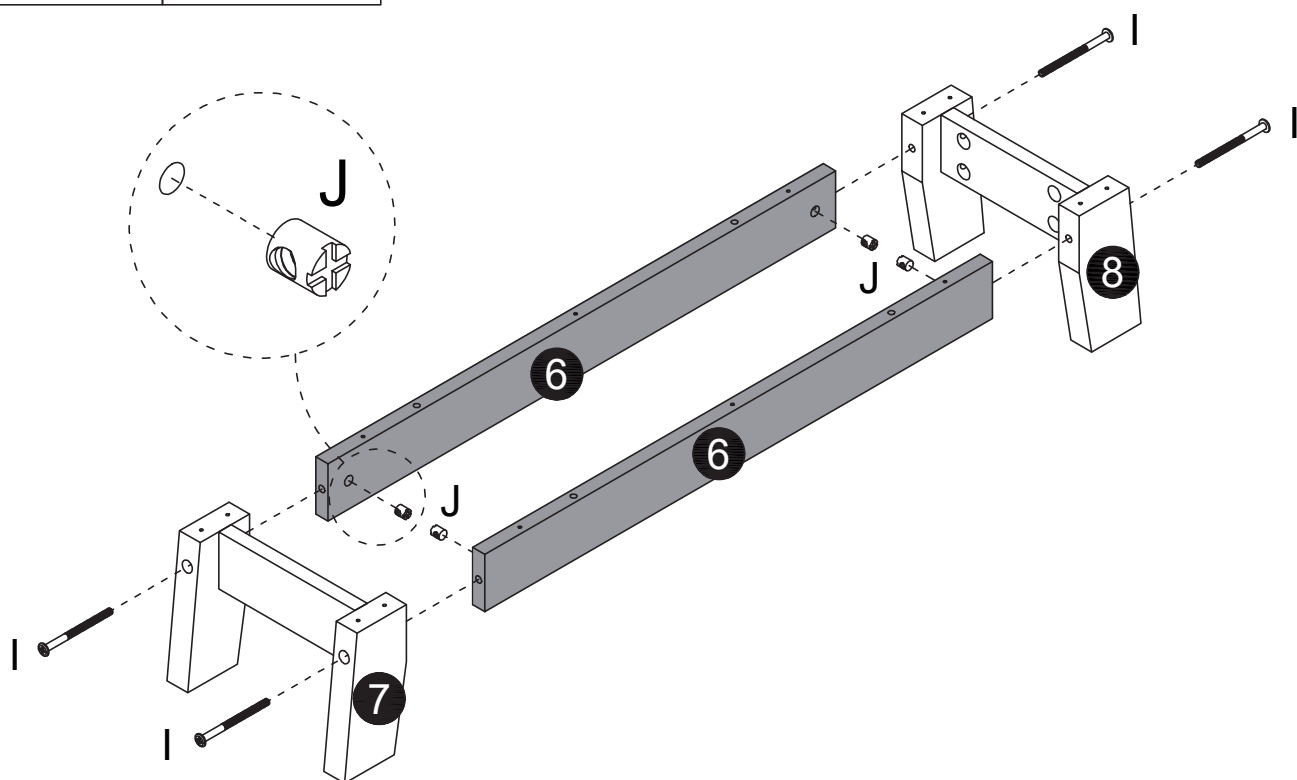



C x4

Q x14

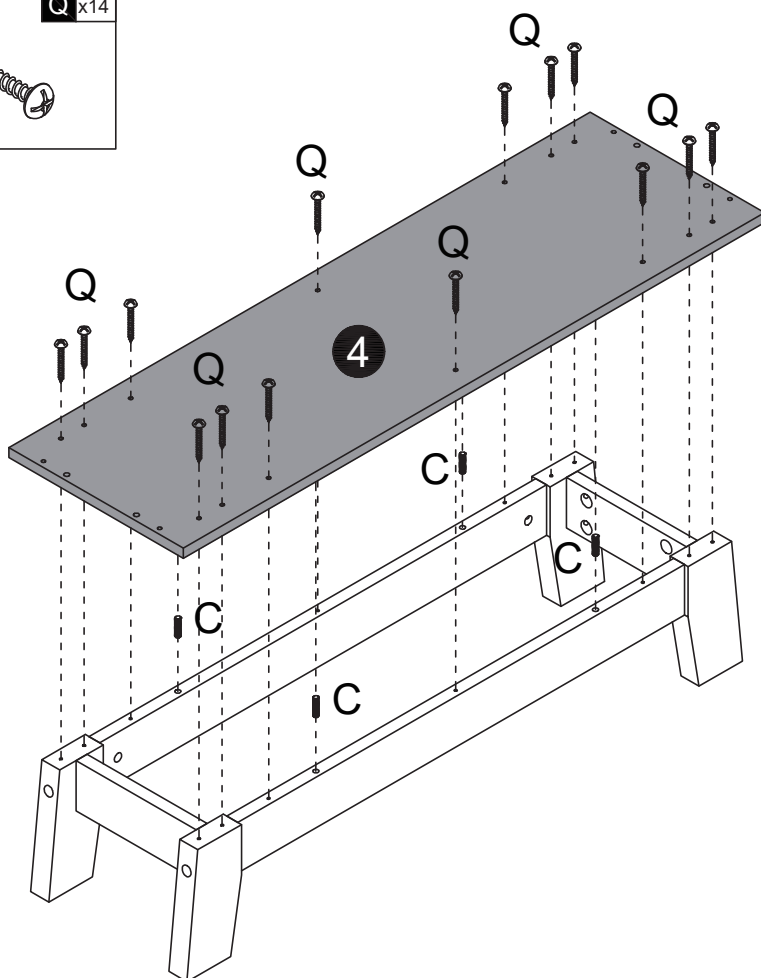


C x4


D x4

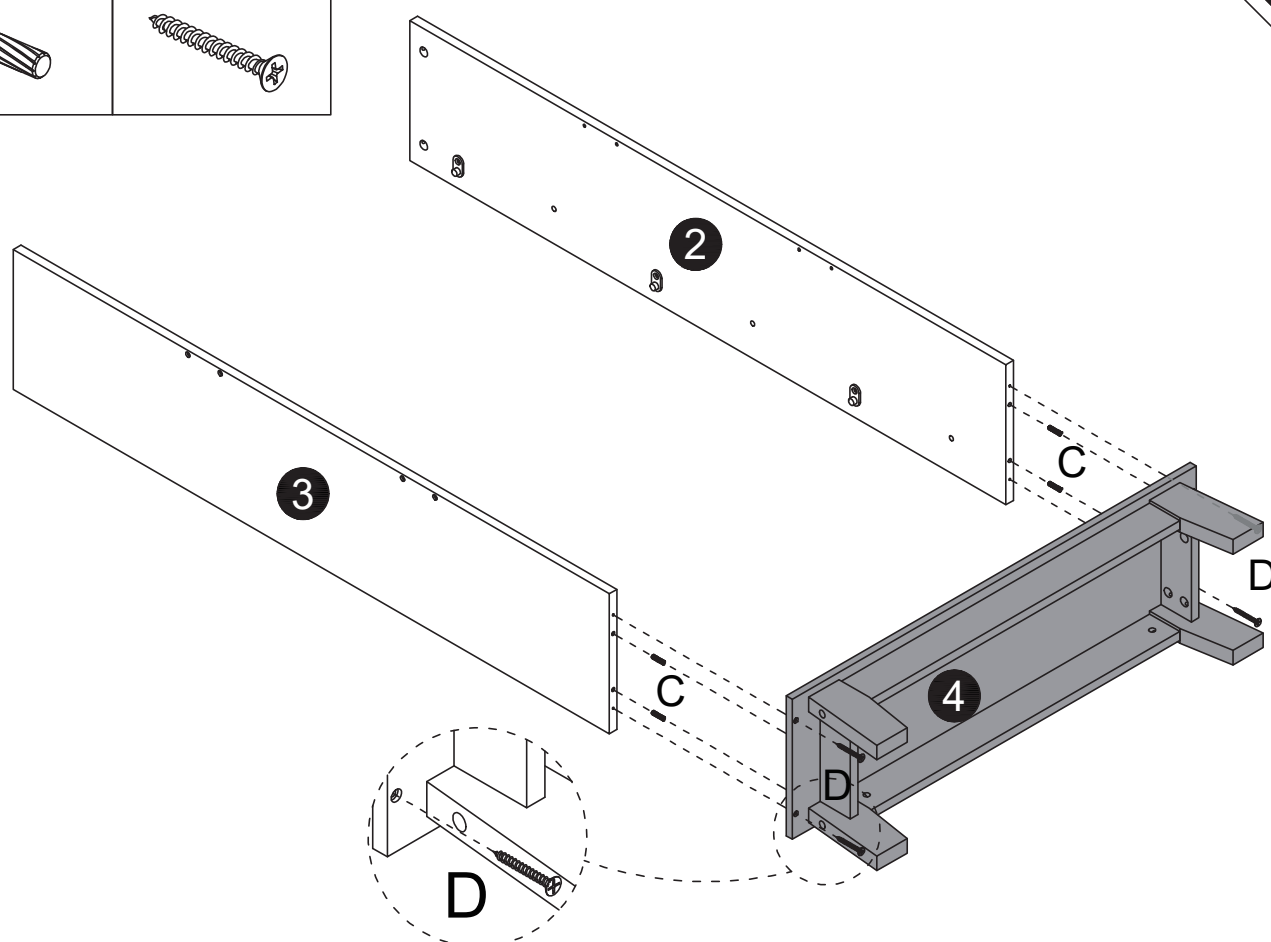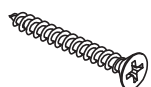


D x8

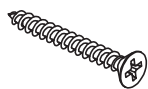

07

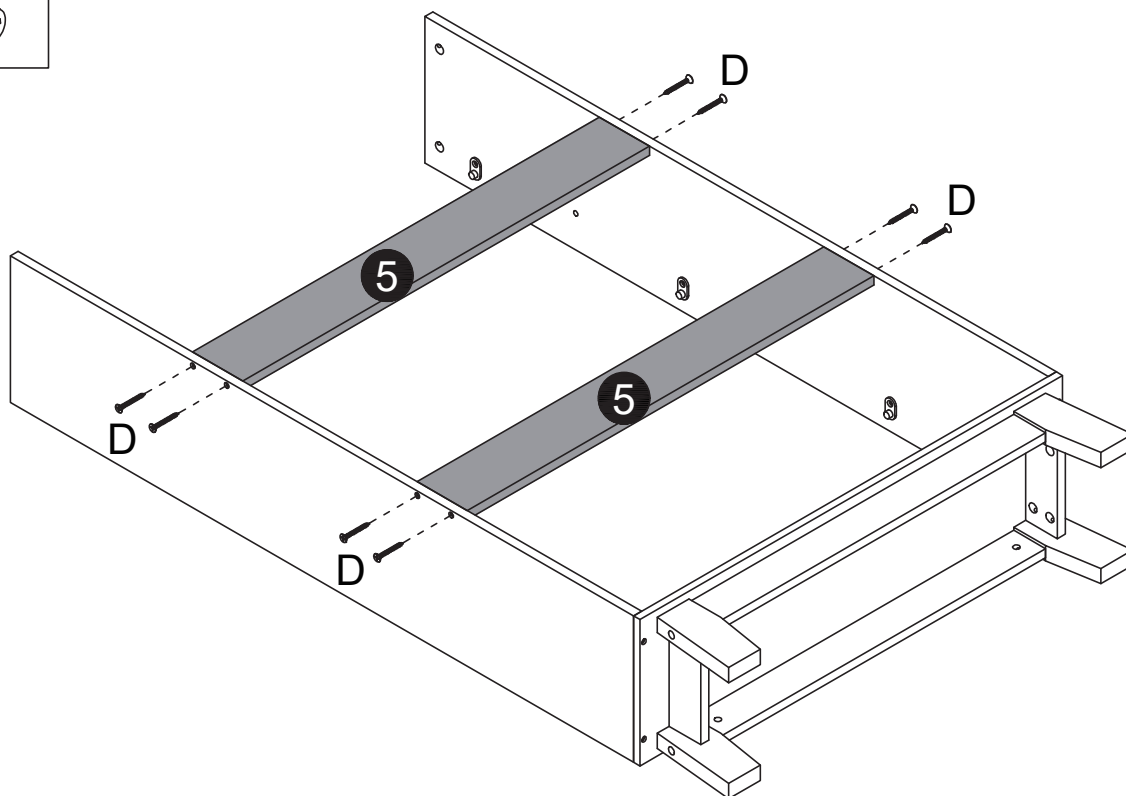

A x4

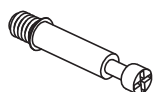


M x2



M-1

M-2

08

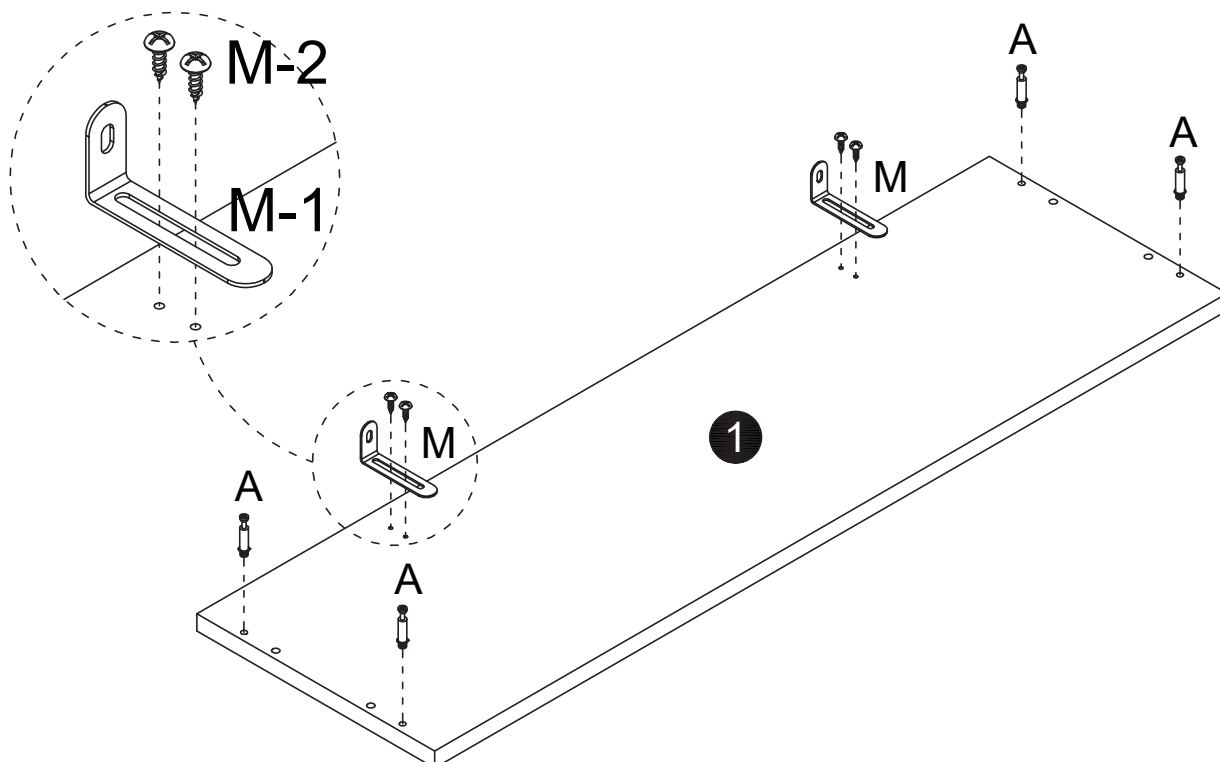


B x4




C x4




09

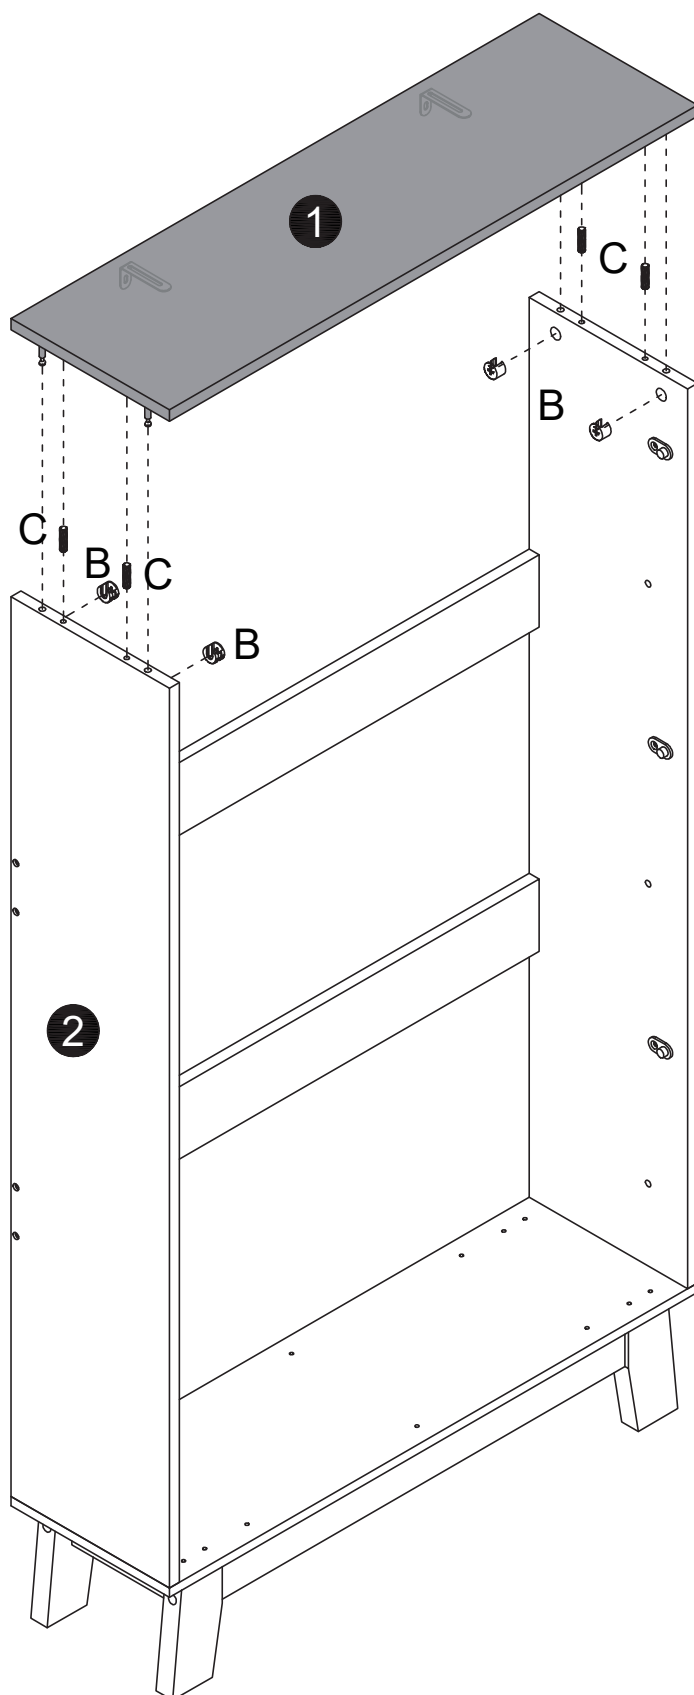


D x2

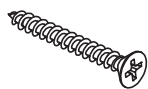

N x2

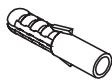


WALL

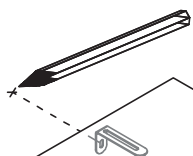

(1)x2

First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.


WALL

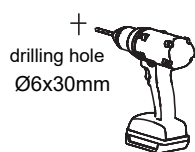

(2)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

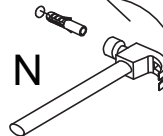

(3)x2


Then, put the expansion bolt into the hole

WALL

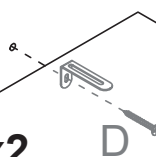

(4)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

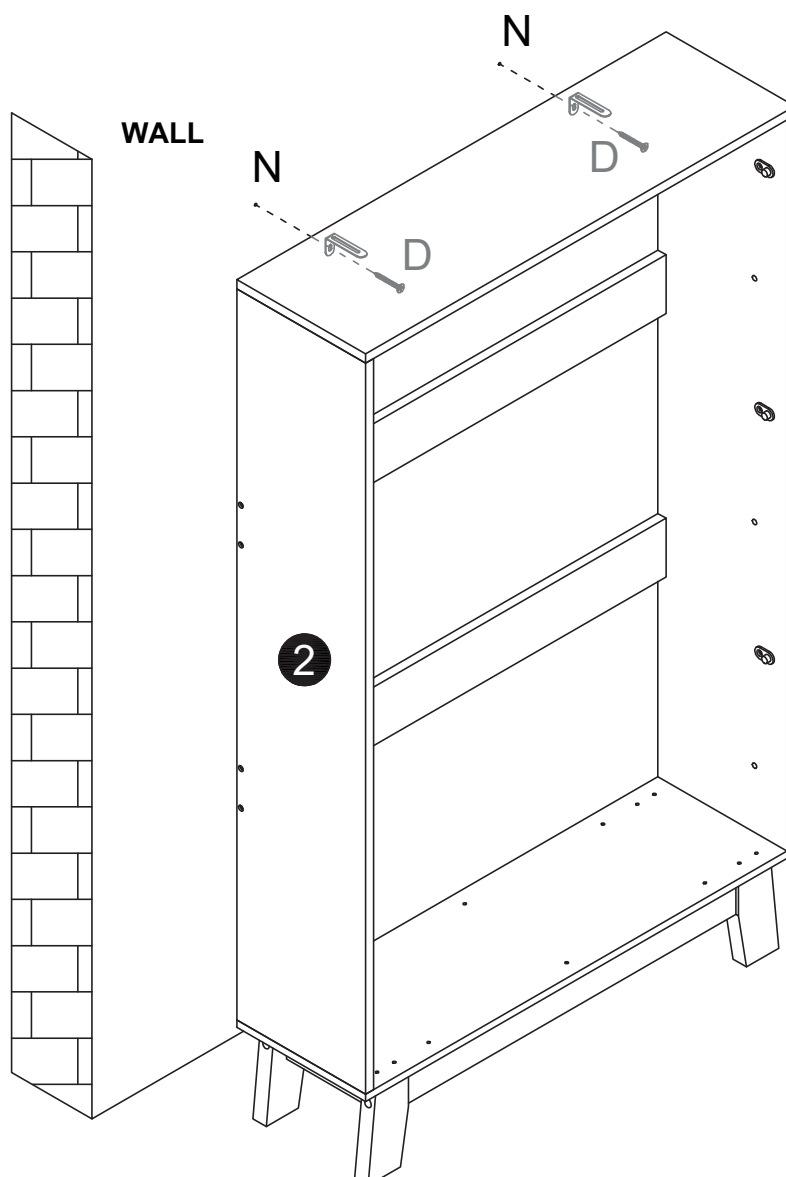


E x36

K x3

L x3

R x3

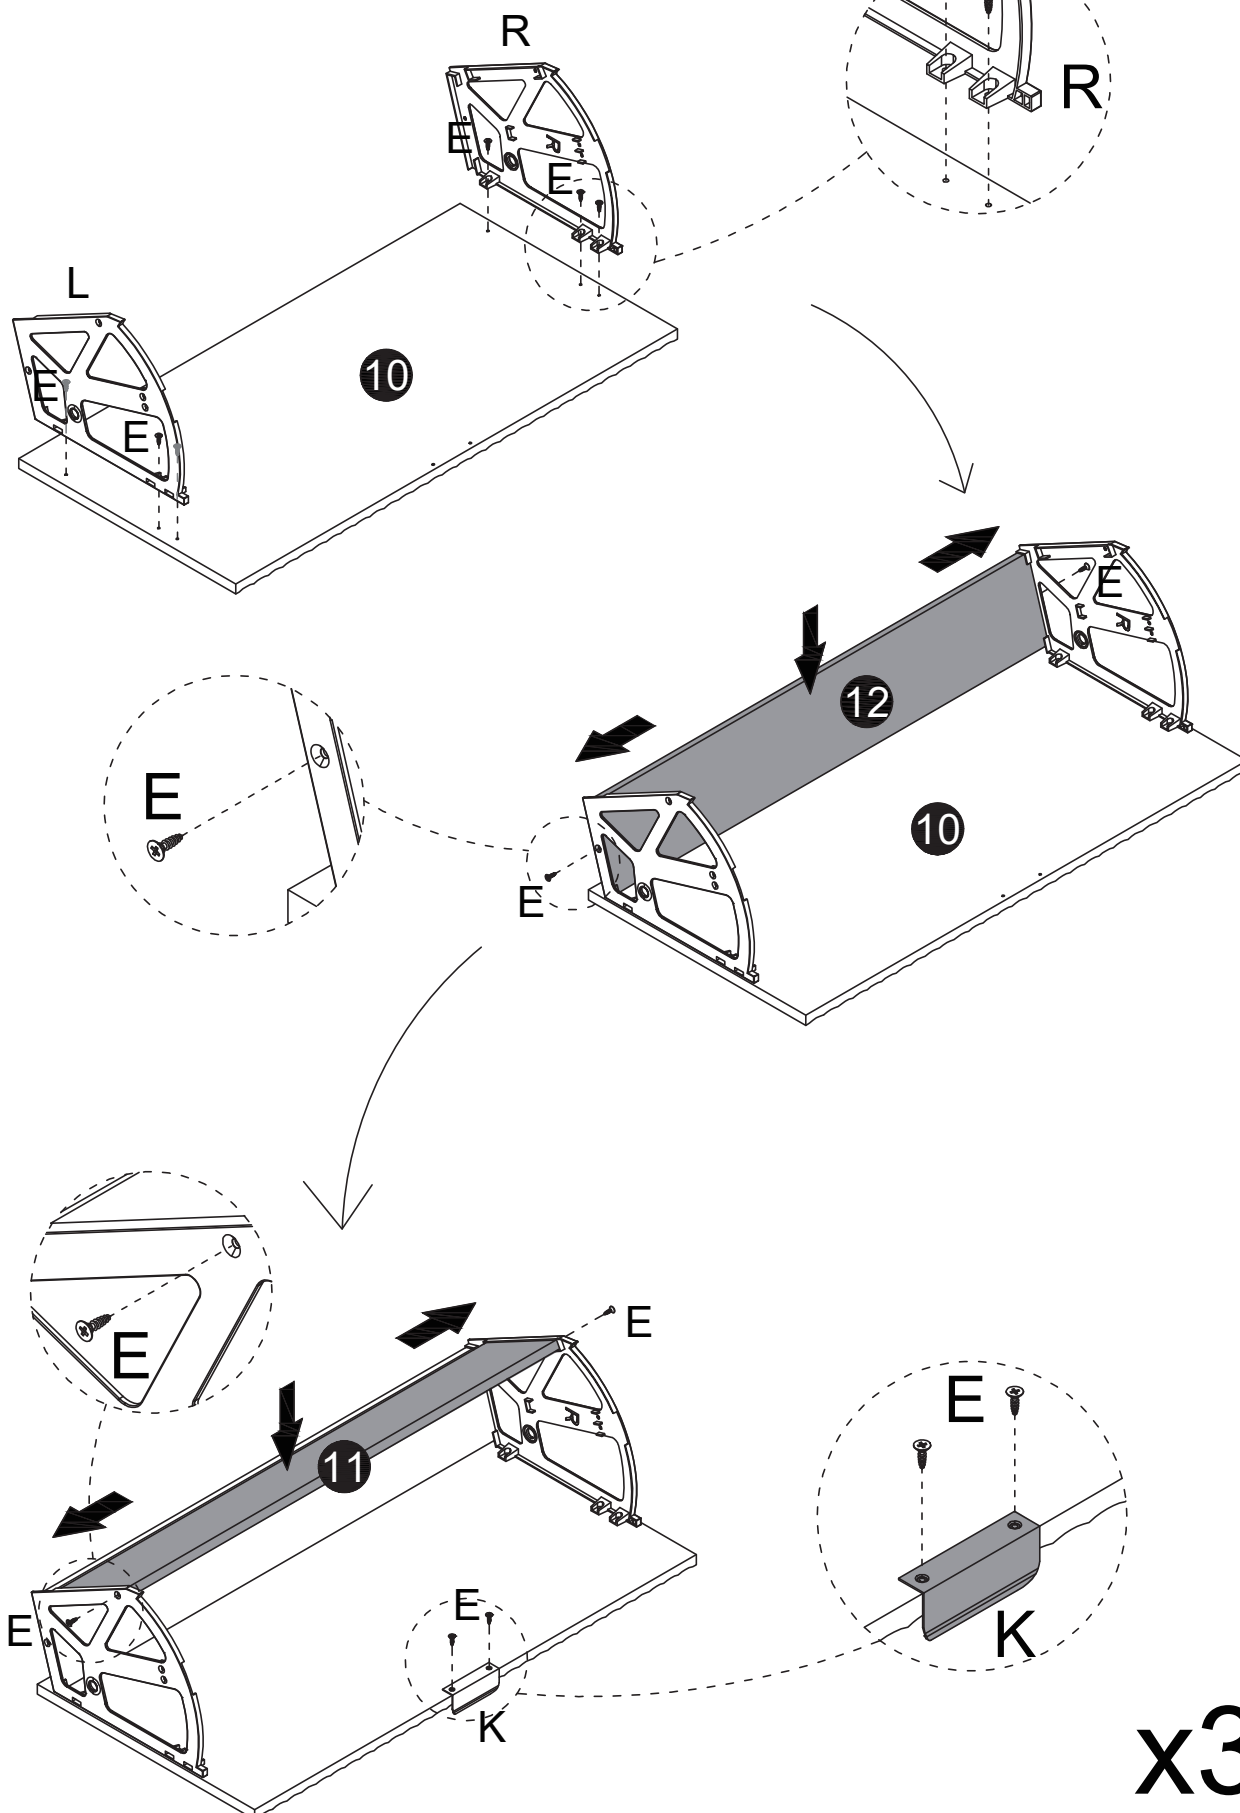

x3


G x6





H x6



S x1

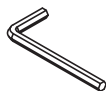


Please do not forcefully lock  
the installation screws to the  
maximum limit to avoid  
damaging the side panel.


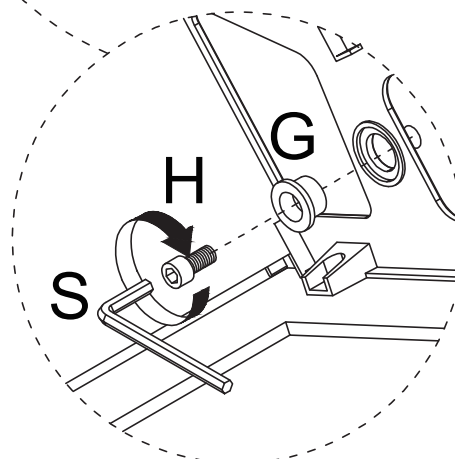
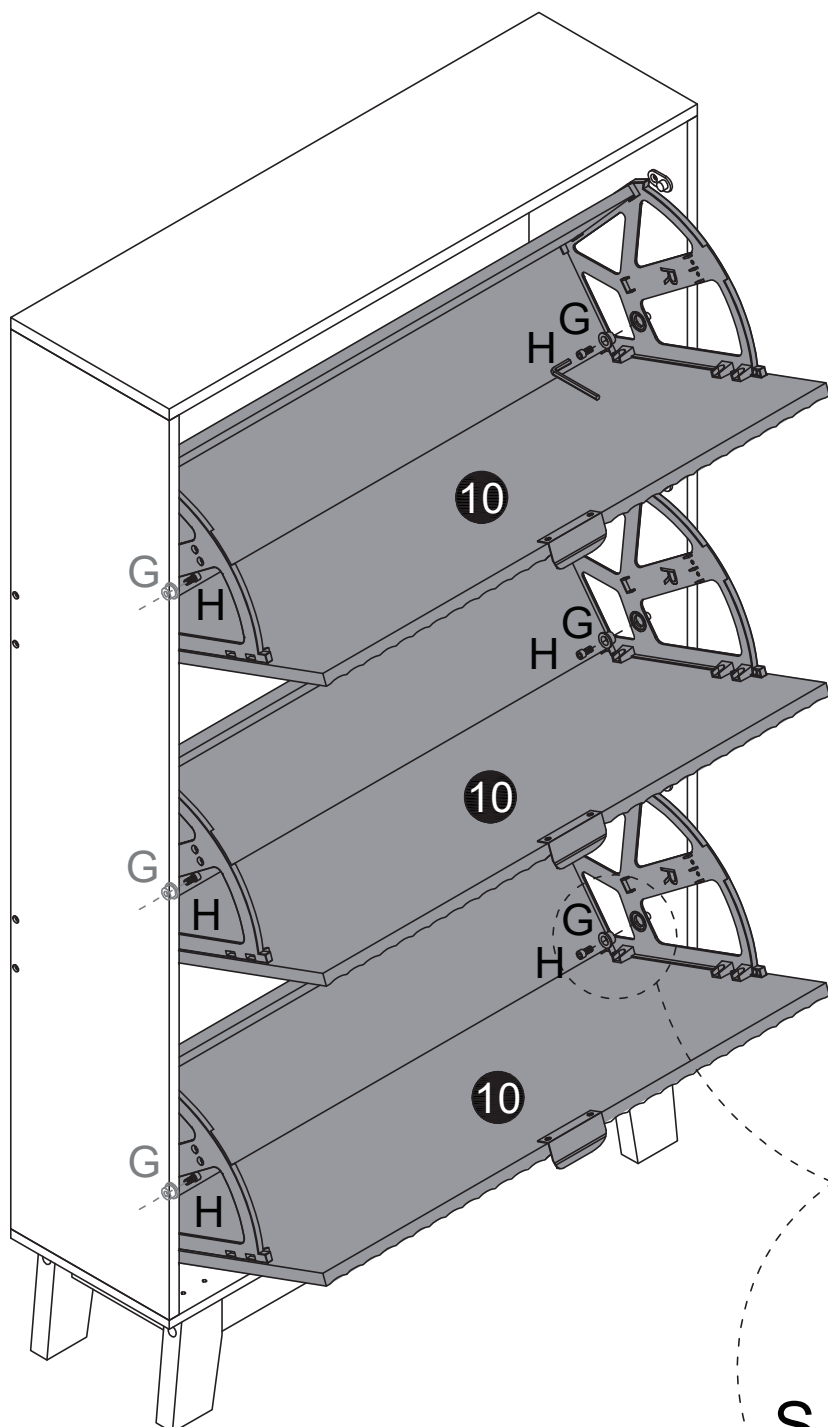


E x6

13

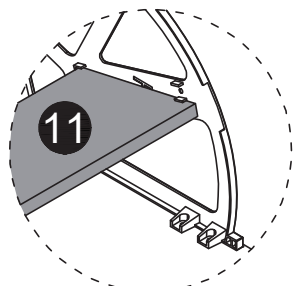

OR

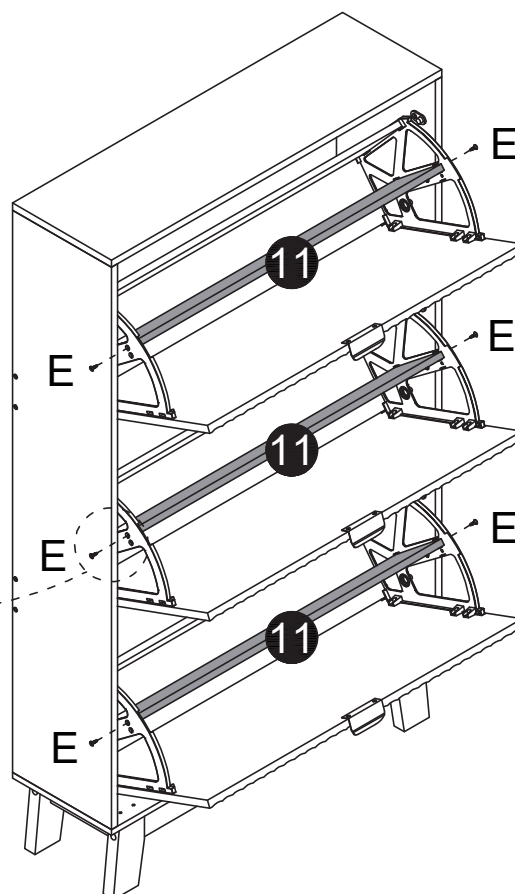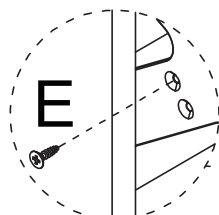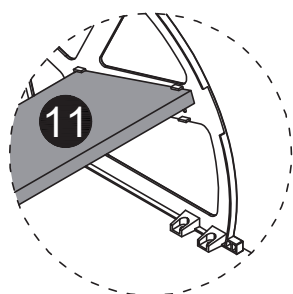

O x8

Done

