
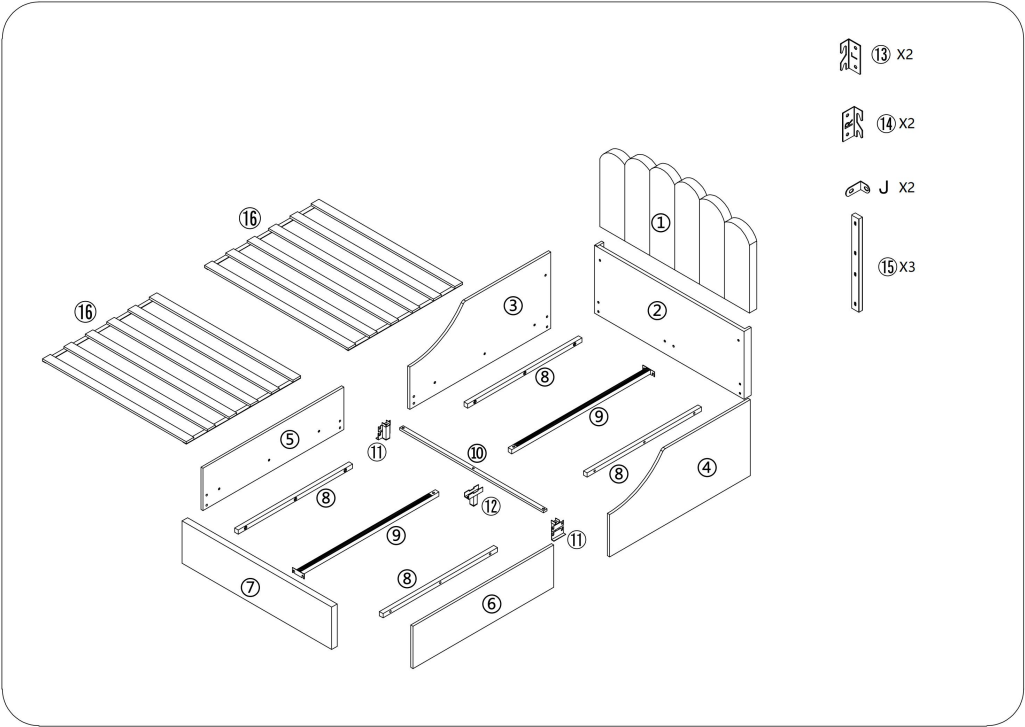
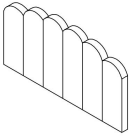
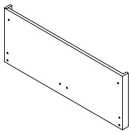




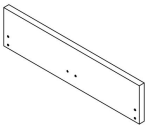








|   |                                                                                     |       |     |
|---|-------------------------------------------------------------------------------------|-------|-----|
| A |  | M8x18 | X32 |
| B |  | M8x35 | X28 |
| C |  | M8x45 | X1  |
| D |  | D5mm  | X1  |

|                                                                                     |                                                                                     |                                                                                   |                                                                                    |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|    |    |  |  |  |
| 1 x1                                                                                | 2 x1                                                                                | 3 x1                                                                              | 4 x1                                                                               | 5 x1                                                                                |
|    |    |  |  |  |
| 6 x1                                                                                | 7 x1                                                                                | 8 x4                                                                              | 9 x2                                                                               | 10 x1                                                                               |
|    |    |  |  |  |
| 11 x2                                                                               | 12 x1                                                                               | 13 x2                                                                             | 14 x2                                                                              | 15 x3                                                                               |
|  |  |                                                                                   |                                                                                    |                                                                                     |
| 16 x2                                                                               | J x2                                                                                |                                                                                   |                                                                                    |                                                                                     |

## Step 1


|   |                                                                                     |       |       |
|---|-------------------------------------------------------------------------------------|-------|-------|
| B |  | M8x35 | 12PCS |
| D |  | D5    | 1PC   |

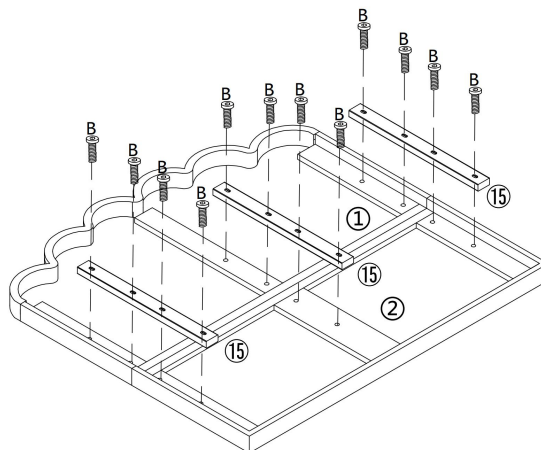

## Step 2

|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |   | M8x18 | 6PCS |
| D |  | D5    | 1PC  |


Please pre-install the screws to 50% first.

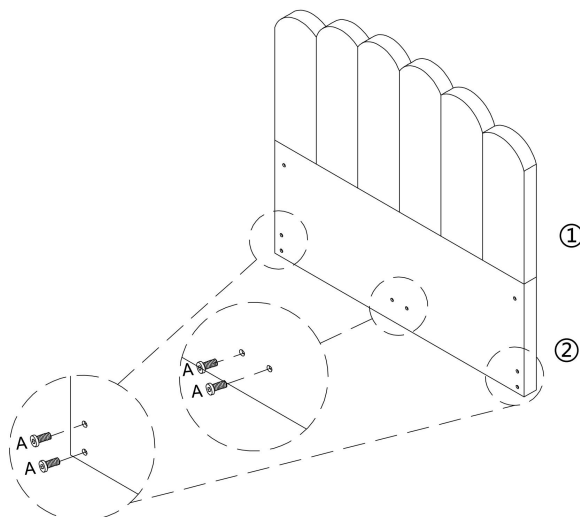

### Step 3


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 6PCS |
| D |  | D5    | 1PC  |

Please pre-install the screws to 50% first.

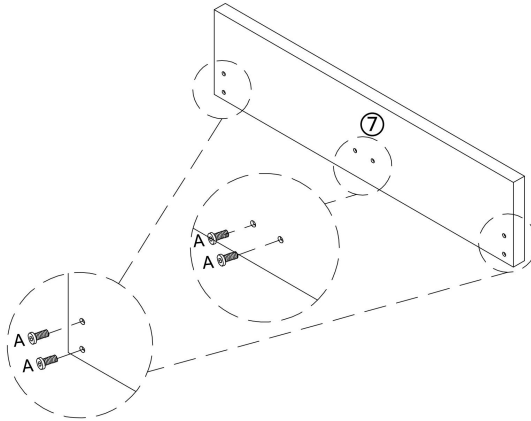


### Step 4


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| B |  | M8x35 | 4PCS |
| C |  | M8x45 | 1PCS |
| D |  | D5    | 1PC  |

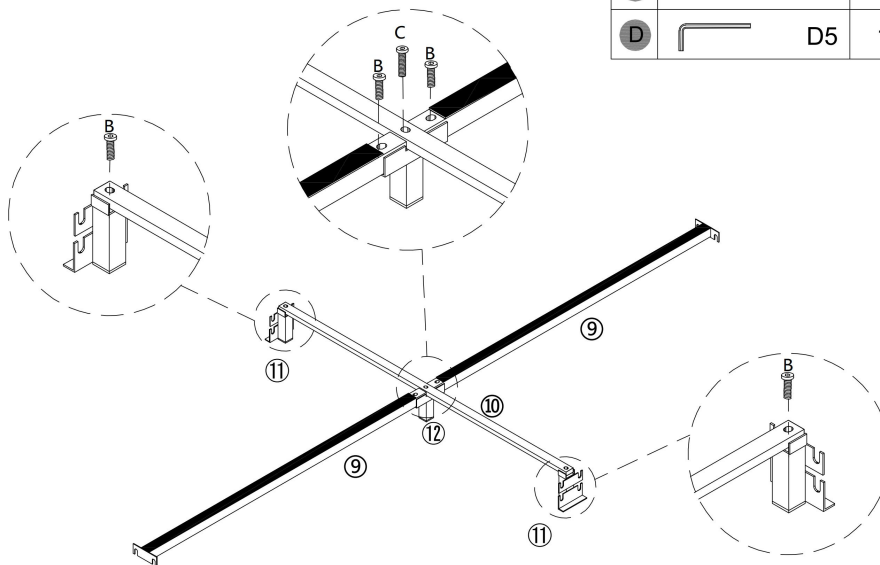

## Step 5

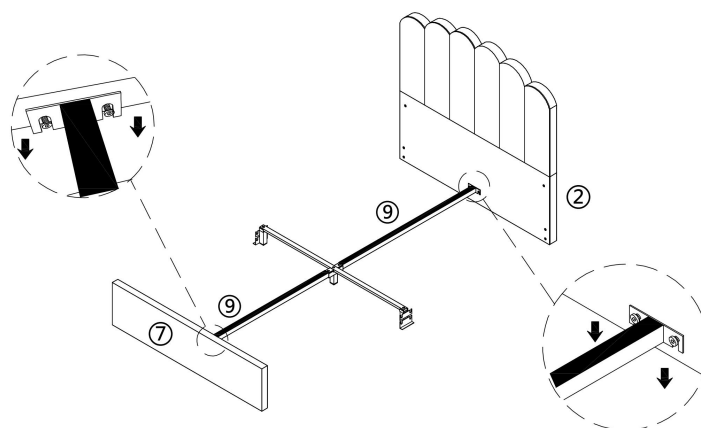


## Step 6

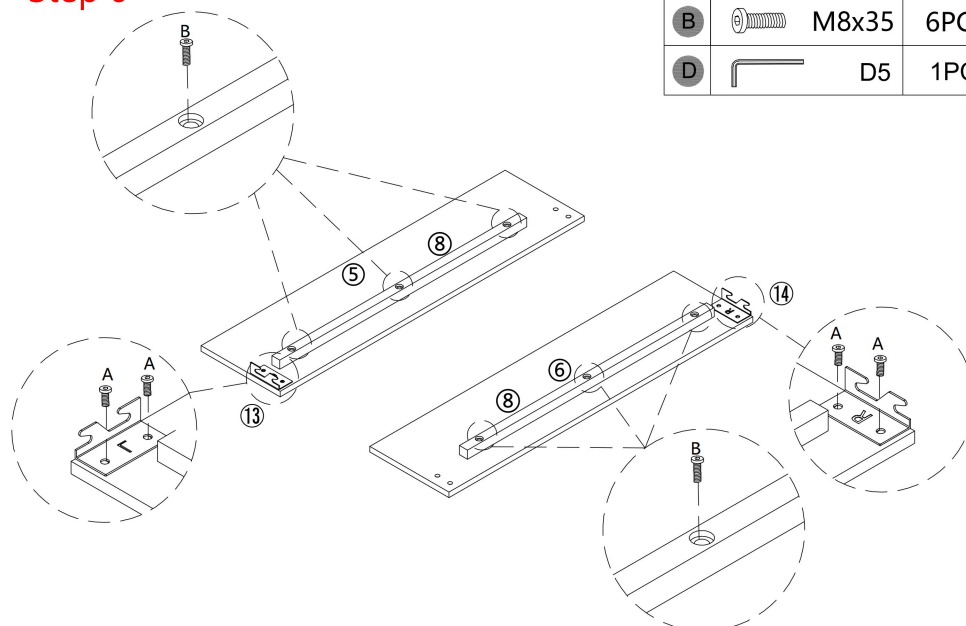

|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| B |  | M8x35 | 6PCS |
| D |  | D5    | 1PC  |


## Step 7

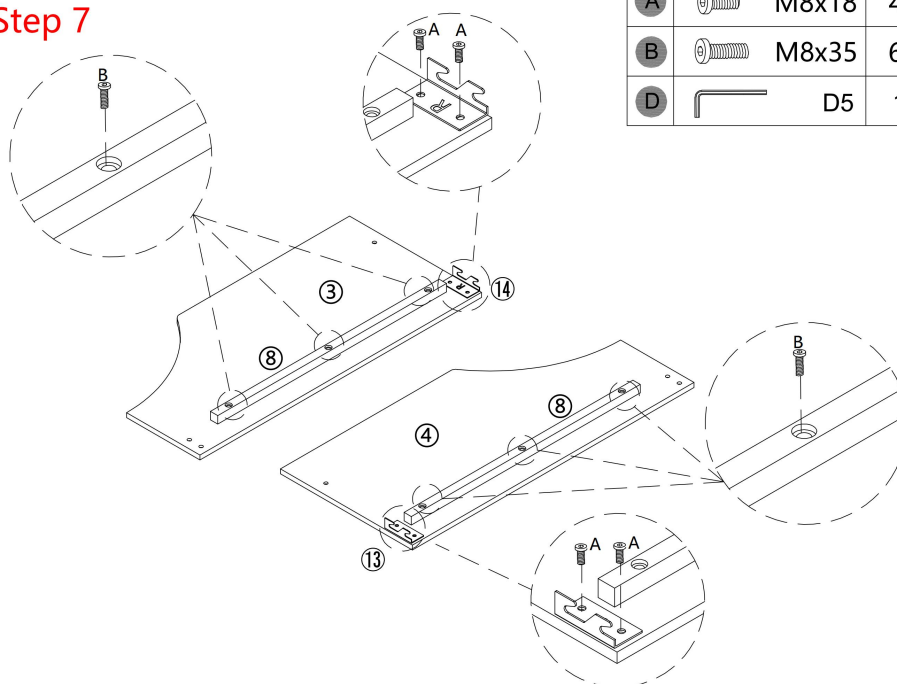

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| B |  | M8x35 | 6PCS |
| D |  | D5    | 1PC  |

## Step 8

Please pre-install the screws to 50% first.

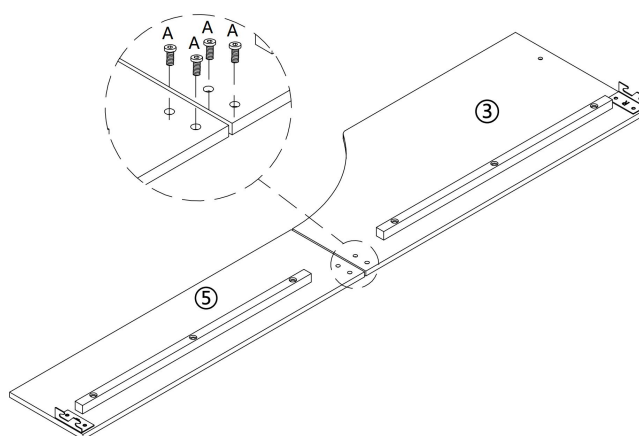


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |   | M8x18 | 4PCS |
| D |  | D5    | 1PC  |

## Step 9


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| D |  | D5    | 1PC  |

Please pre-install the screws to 50% first.

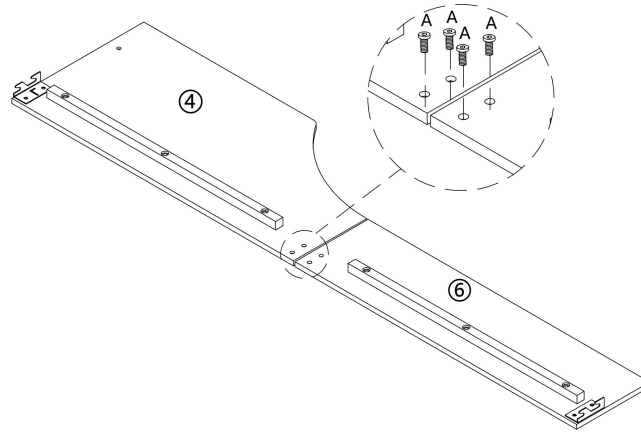

## Step 10

Pass the screws of Part 5 and Part 3 through the middle of the screw mounting position on Part 11 and snap them into place, then hang Part 13 onto Part 7, and hang Part 14 onto Part 2.

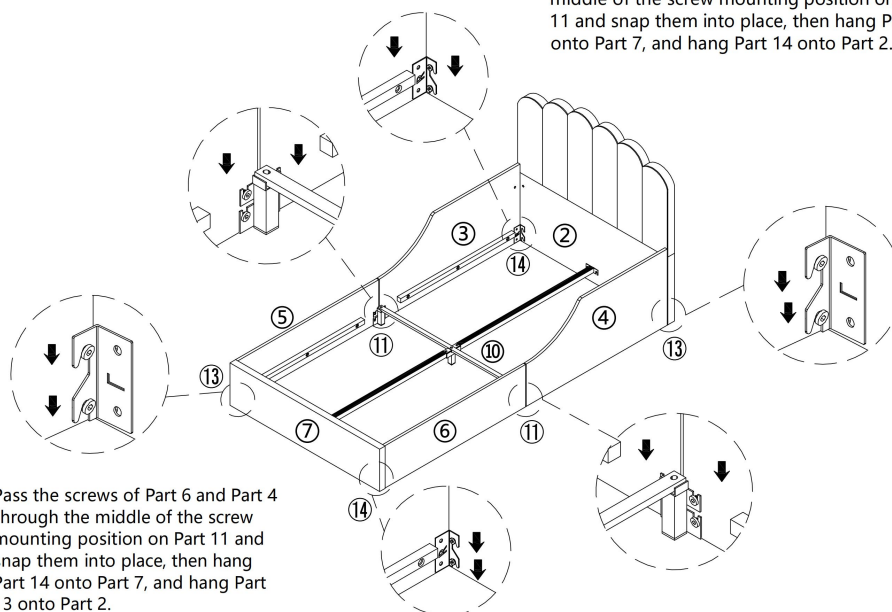


Pass the screws of Part 6 and Part 4 through the middle of the screw mounting position on Part 11 and snap them into place, then hang Part 14 onto Part 7, and hang Part 13 onto Part 2.


## Step 11

Tighten all screws at this step.


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| D |  | D5    | 1PC  |

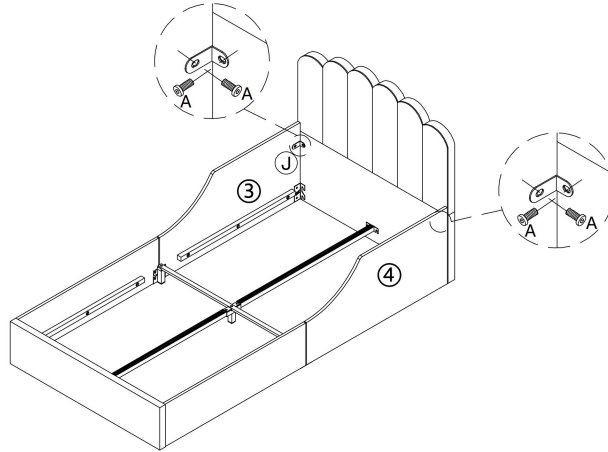

## Step 12

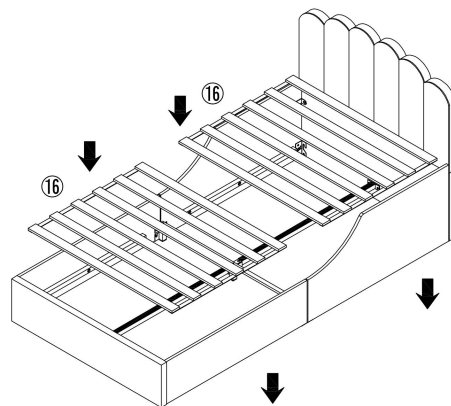

## Step 13

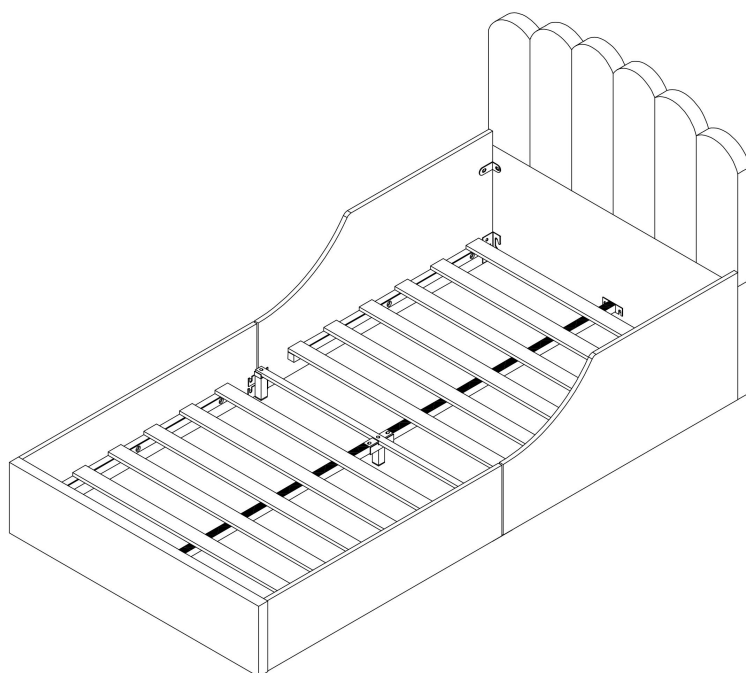

Ventilation Warning: It is recommended to ventilate for 48 hours after installation.