



Recessed Toilet Paper Holder

Installation Instructions

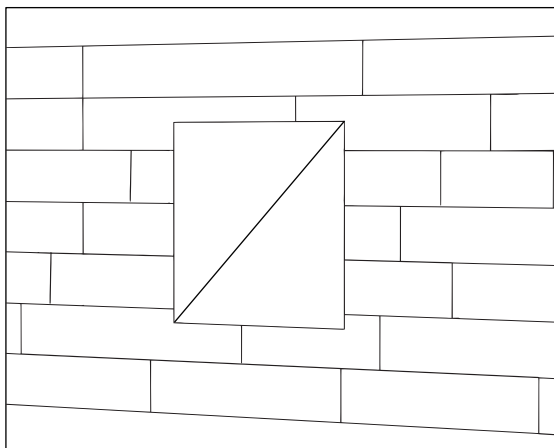


1. Mark a 5-1/4 in. x 5-1/4 in. opening in the wall.


NOTE: Before cutting, confirm no wall studs, electrical wires or water pipes are behind this area. Use level (not included) to ensure the cut lines are straight and square.

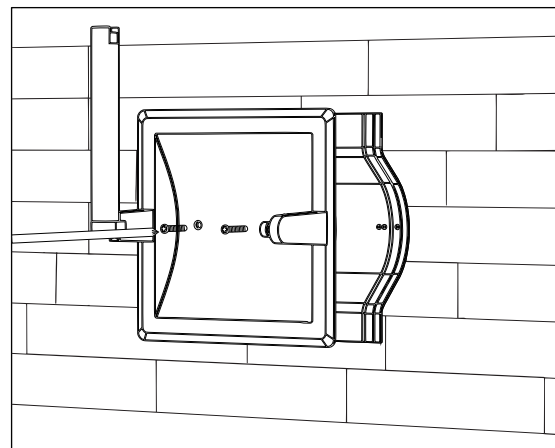

2. Attach the clamp to the accessory by inserting the screws through the accessory into the bracket. Turn screws three full turns. Do NOT fully tighten

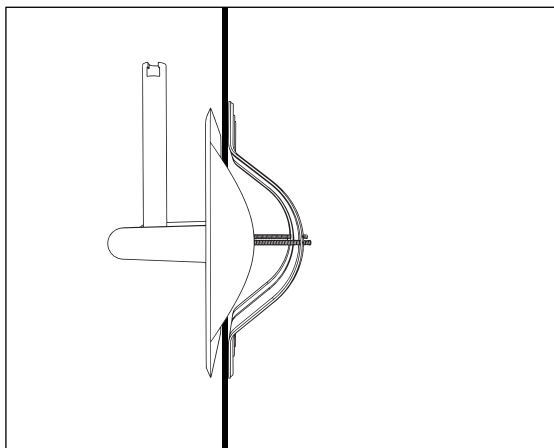

3. Angle the clamp through the hole by first tilting it to one side, and then the other. Be careful not to damage the wall board. And position the accessory squarely with the flange (outer edge) pressed firmly against the wall.

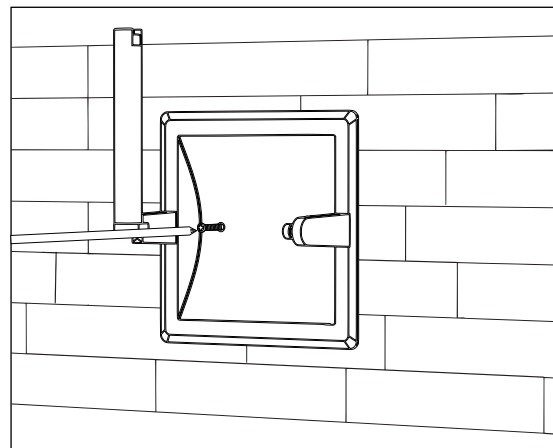

4. Tighten the screws until the clamp is firmly secured against the inside of the wall.