



ASSEMBLY INSTRUCTION

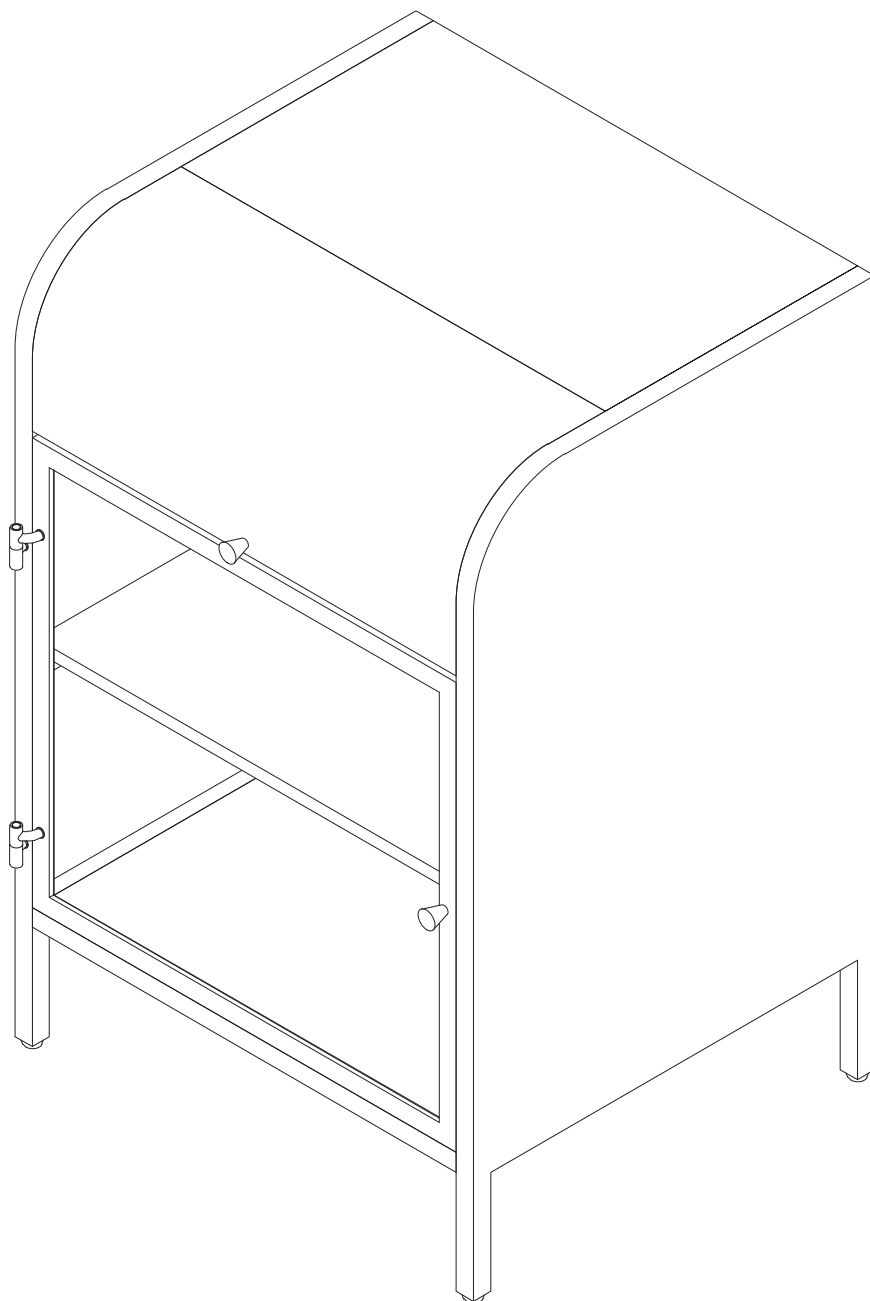

2 PERS.



20 MIN



Pozi Screwdriver(Not Provided)






Hexagonal wrench(Provided)

Please note:





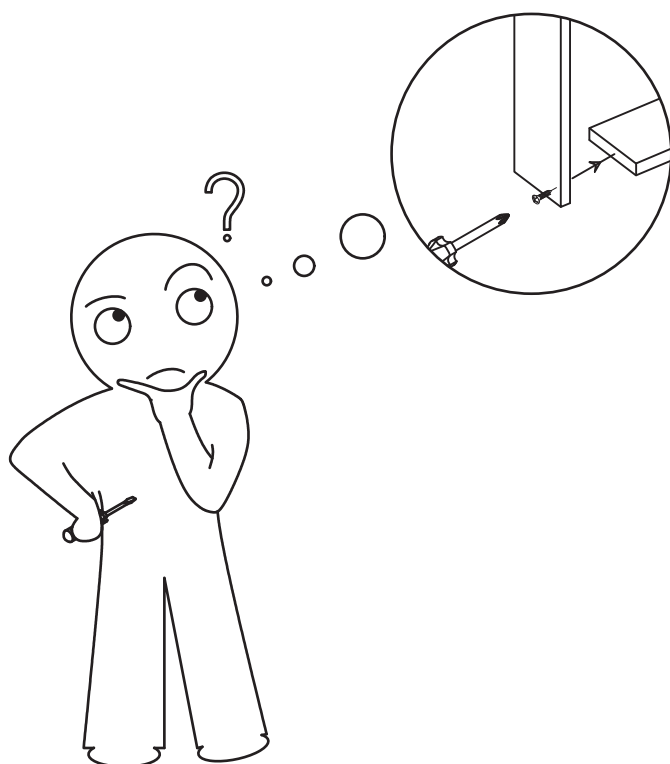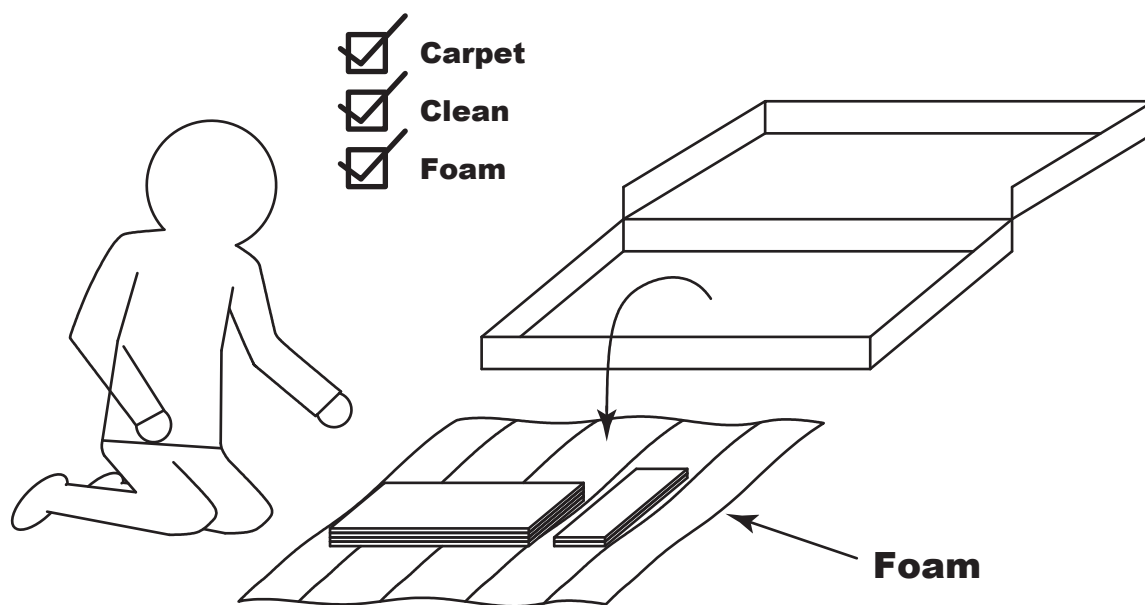


Before installation, please confirm:

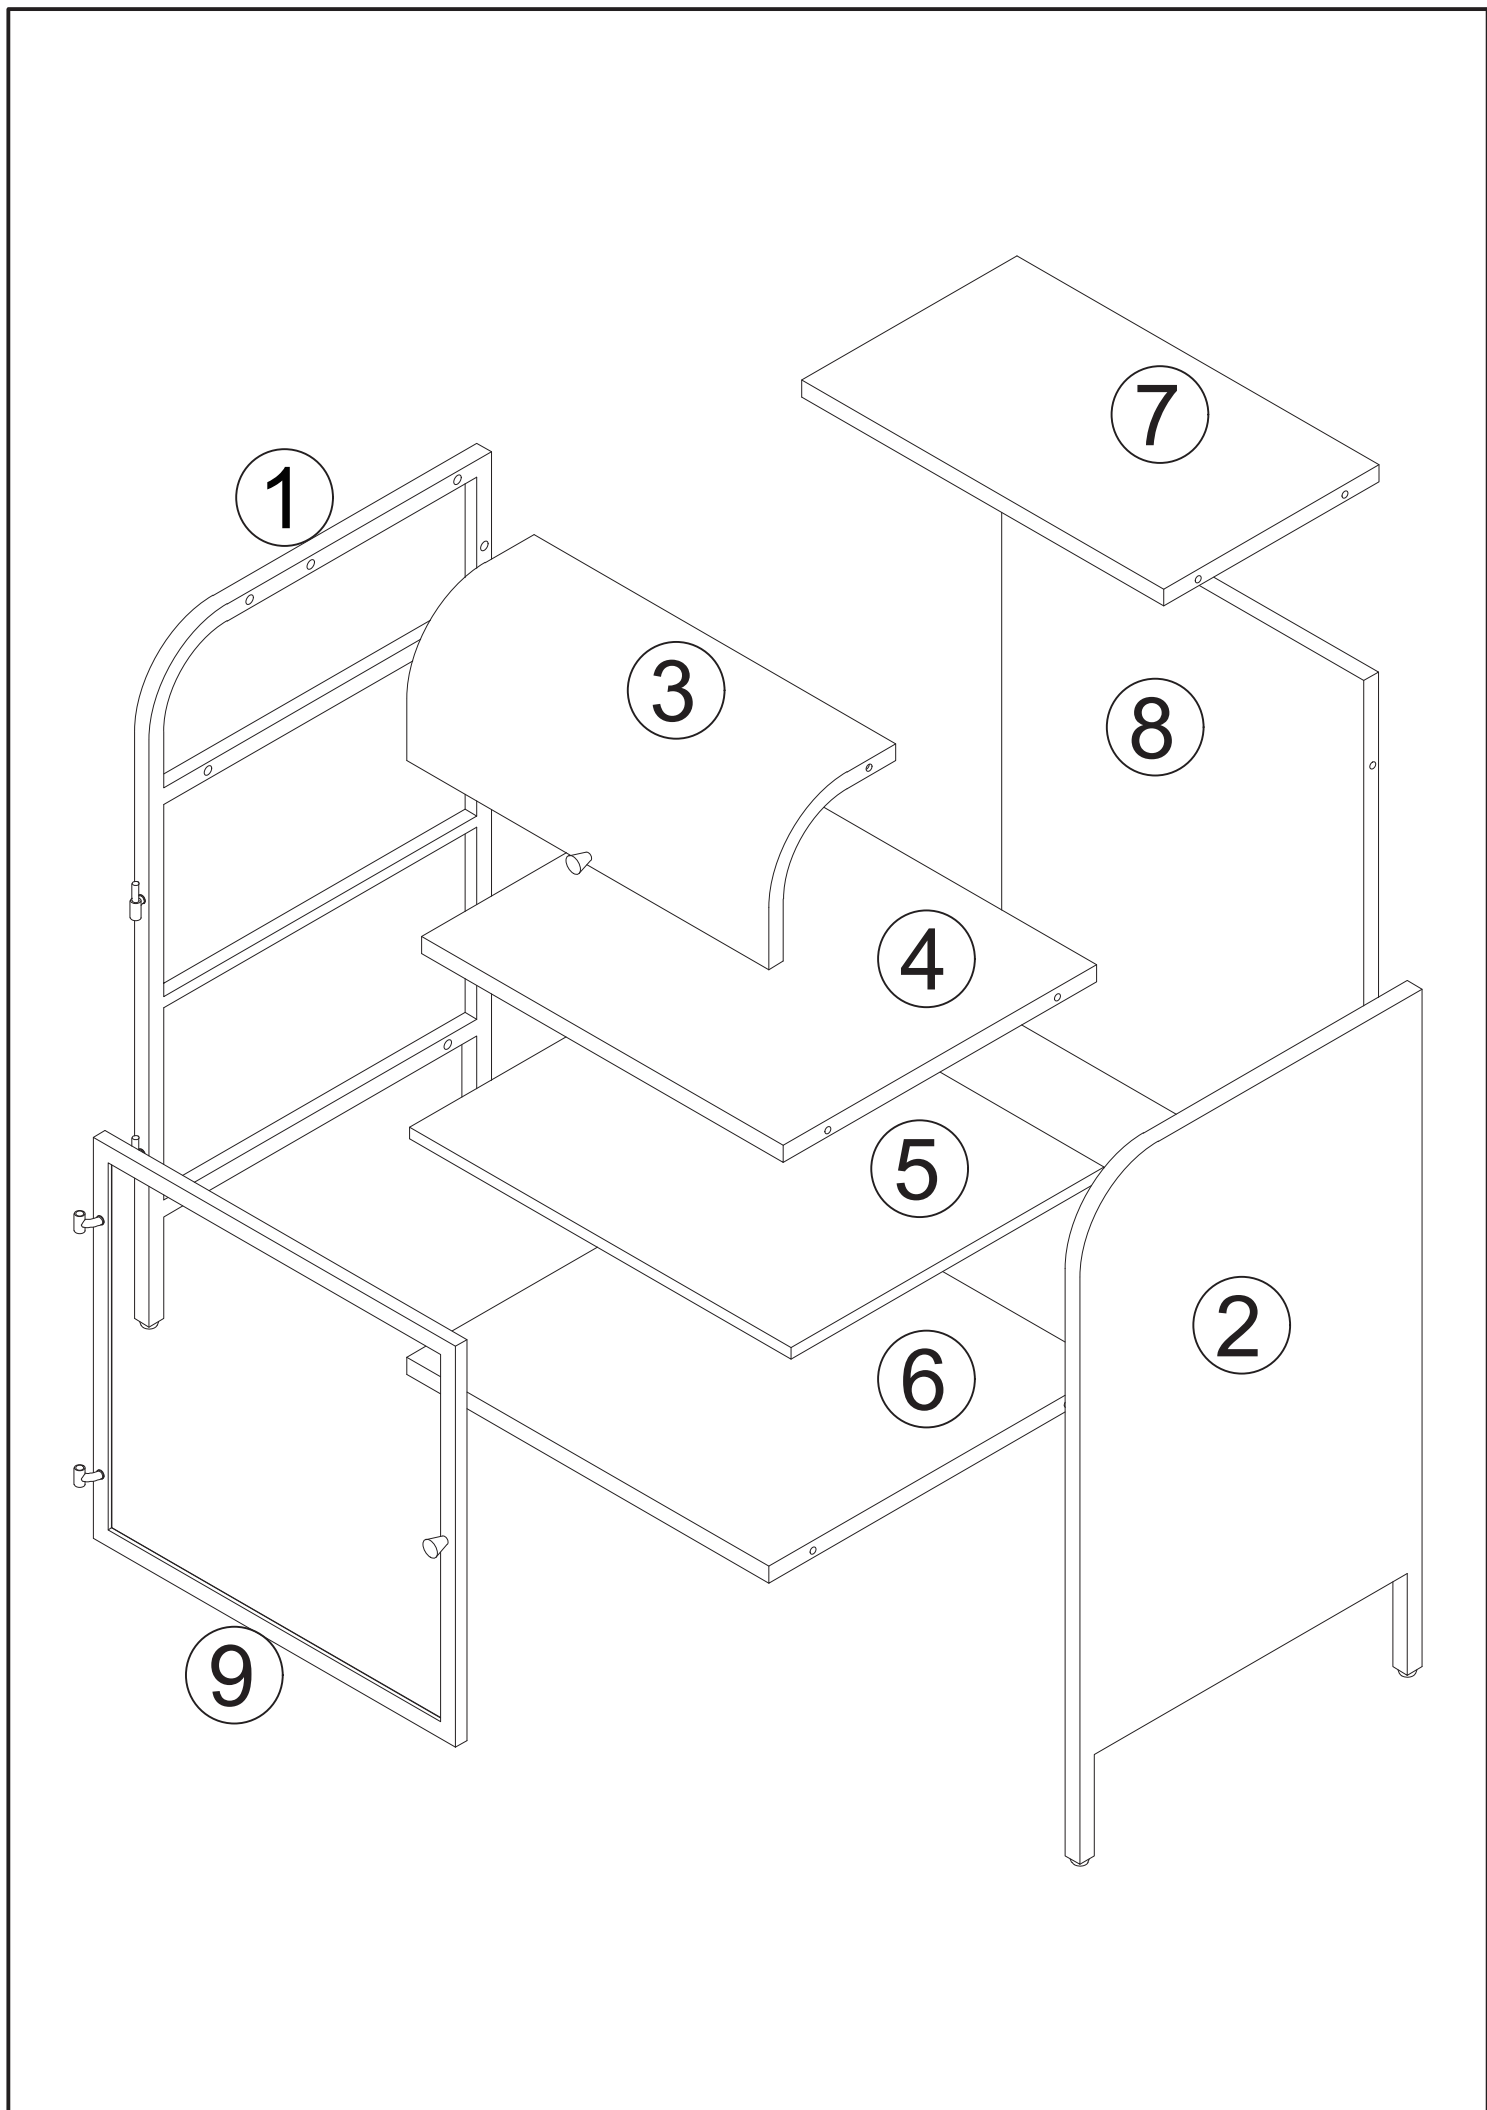1. Please kindly separate the hardware package and board to avoid screws scratching the board.
2. You can install our product on the carpet, which is better to install.
3. If there is no carpet, you can clean the floor to avoid small stones and other sundries, or assemble the products on the foam of our package to prevent product damage during the assembly process.



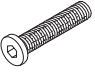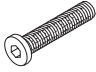


Hardware

A	x14	B	x4	C	x1	D	x1
							
6x20mm		6x25mm		3x24mm		3x10mm	
E	x1	F	x1	H	x2		
							


Attention:

1.Before installing the product, please place the product components on a carton or carpet for installation. Do not place the product directly on the ground to avoid bumps.

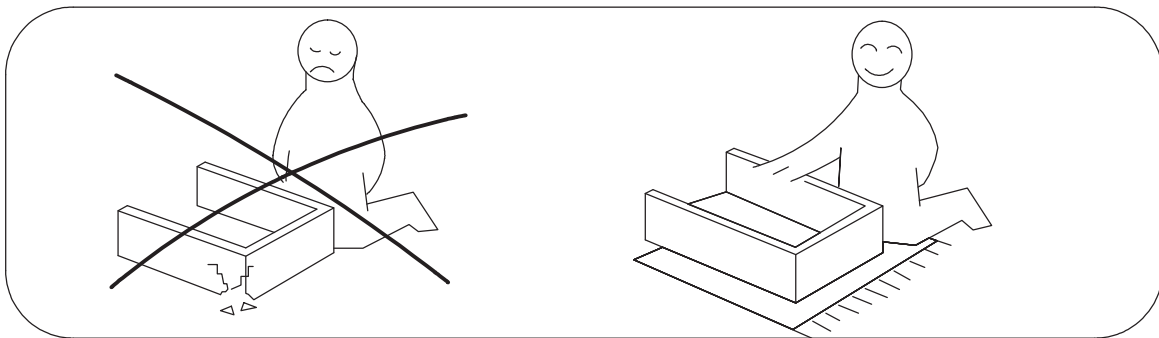


2.For avoiding difficult assembly,you don't need fixing screws fully tightly in the process. Just adjust the screw after finishing the all steps.


3.When installing the screws, you can tilt the hexagonal wrench outward to rotate it.

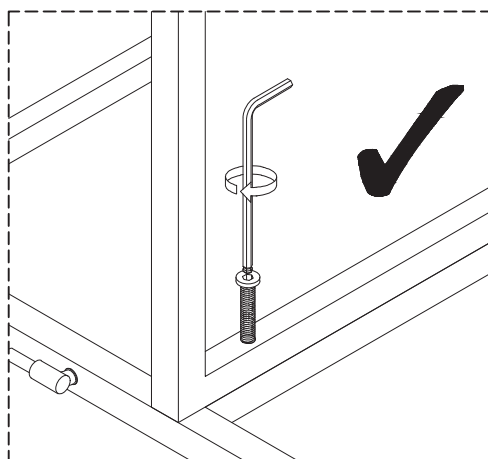


OR

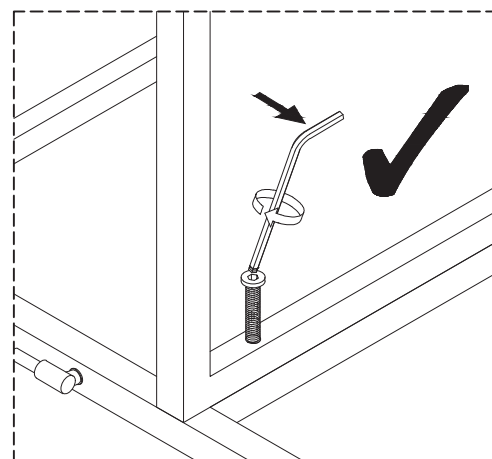

1

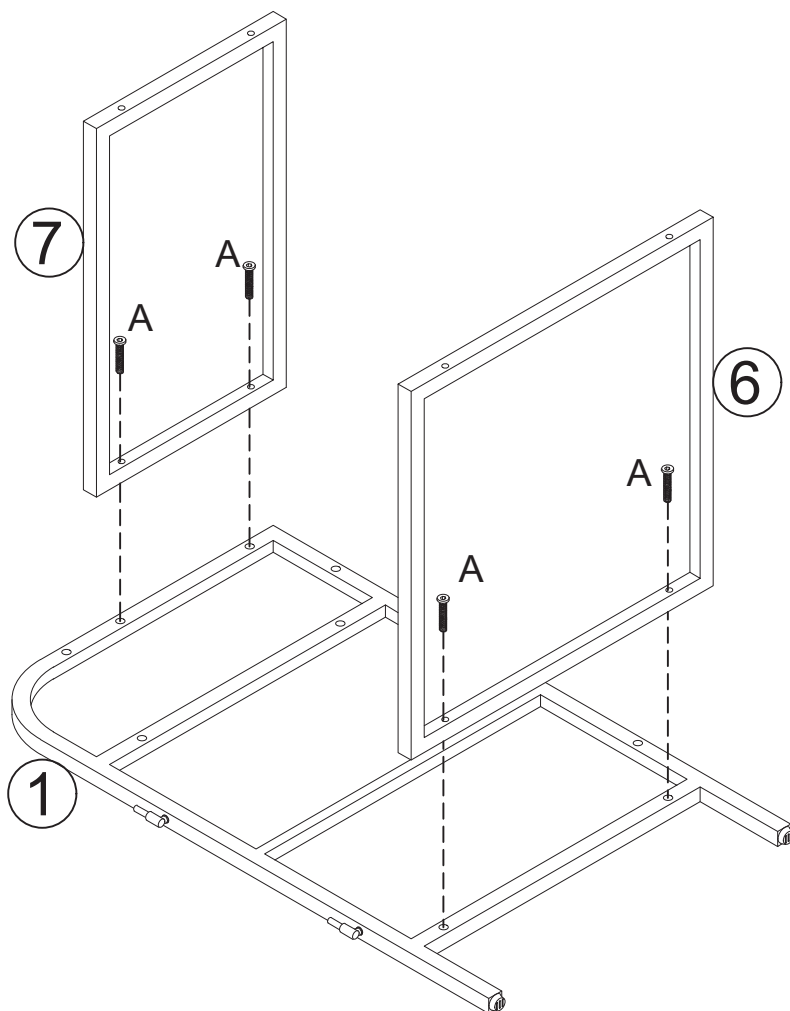


A x4




6x20mm

2

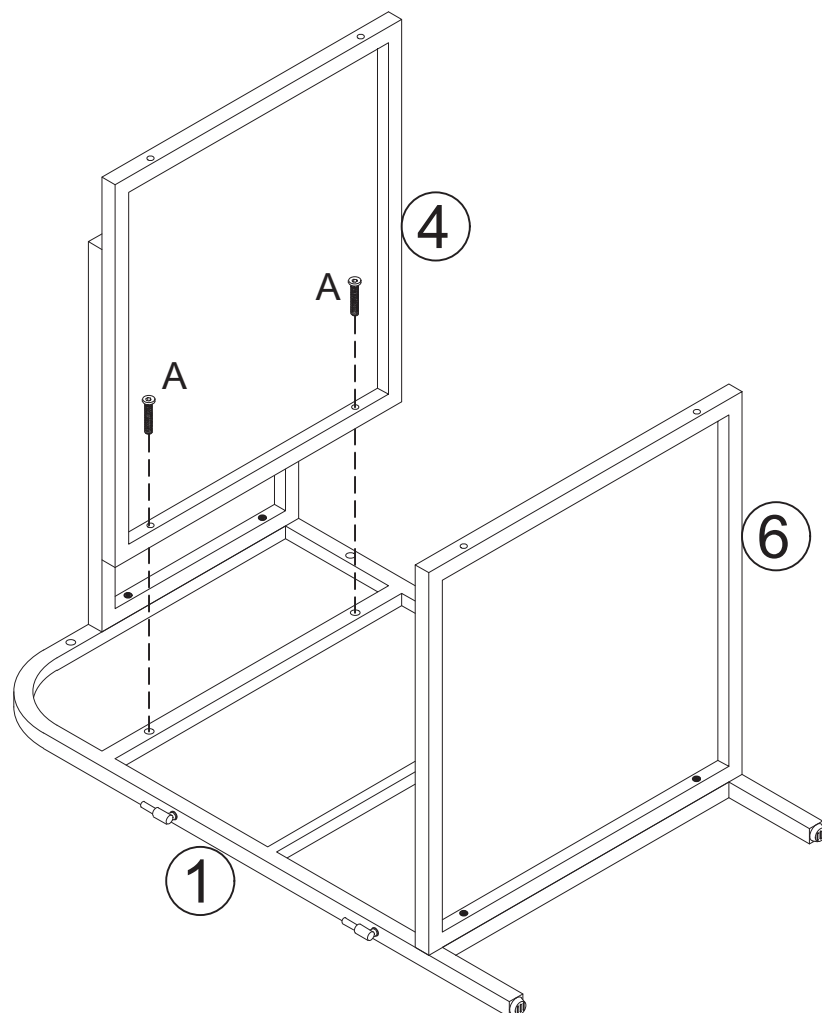


A x2




6x20mm

3

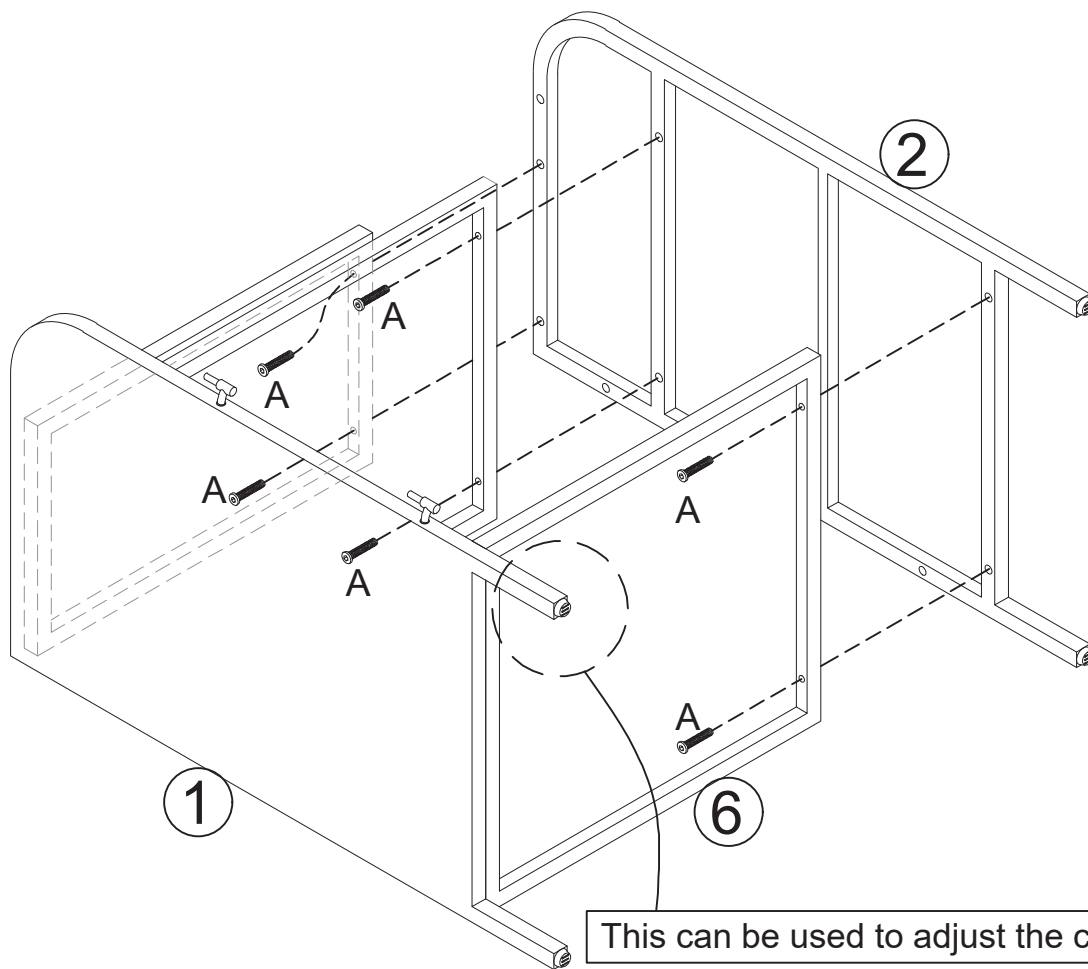

4

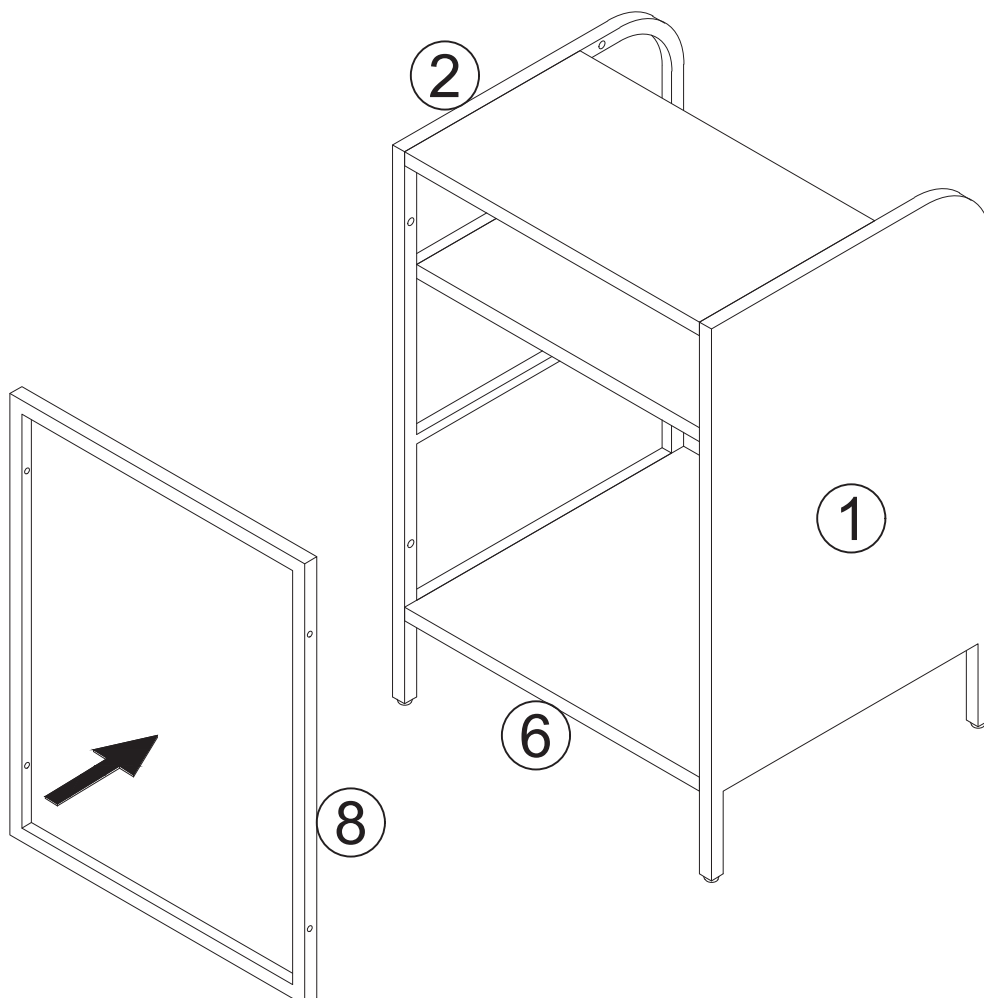


5

B


x4



6x25mm

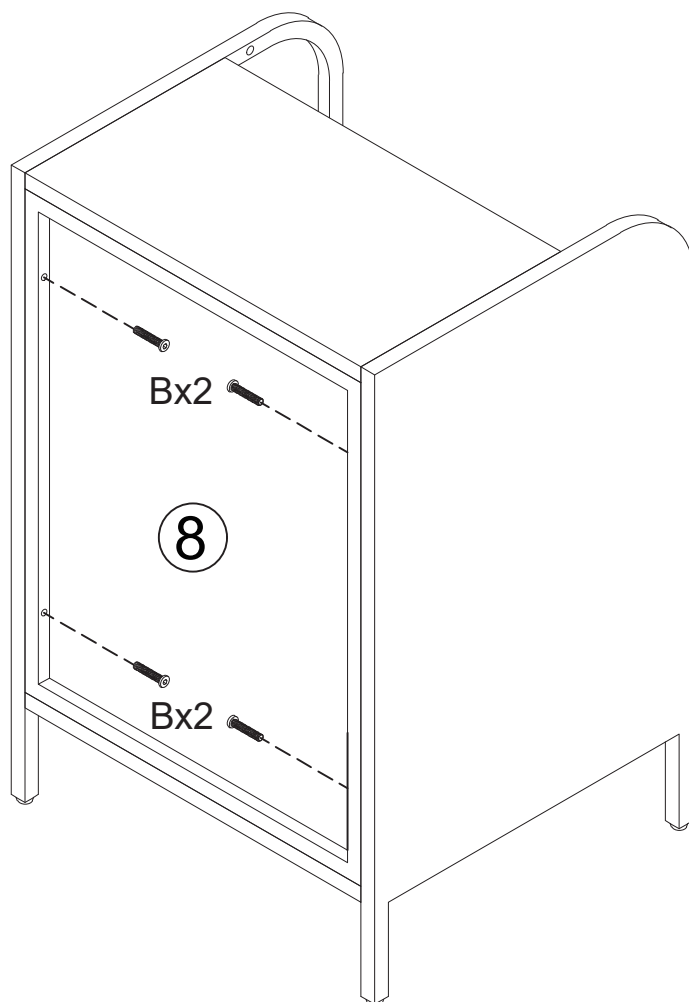


6


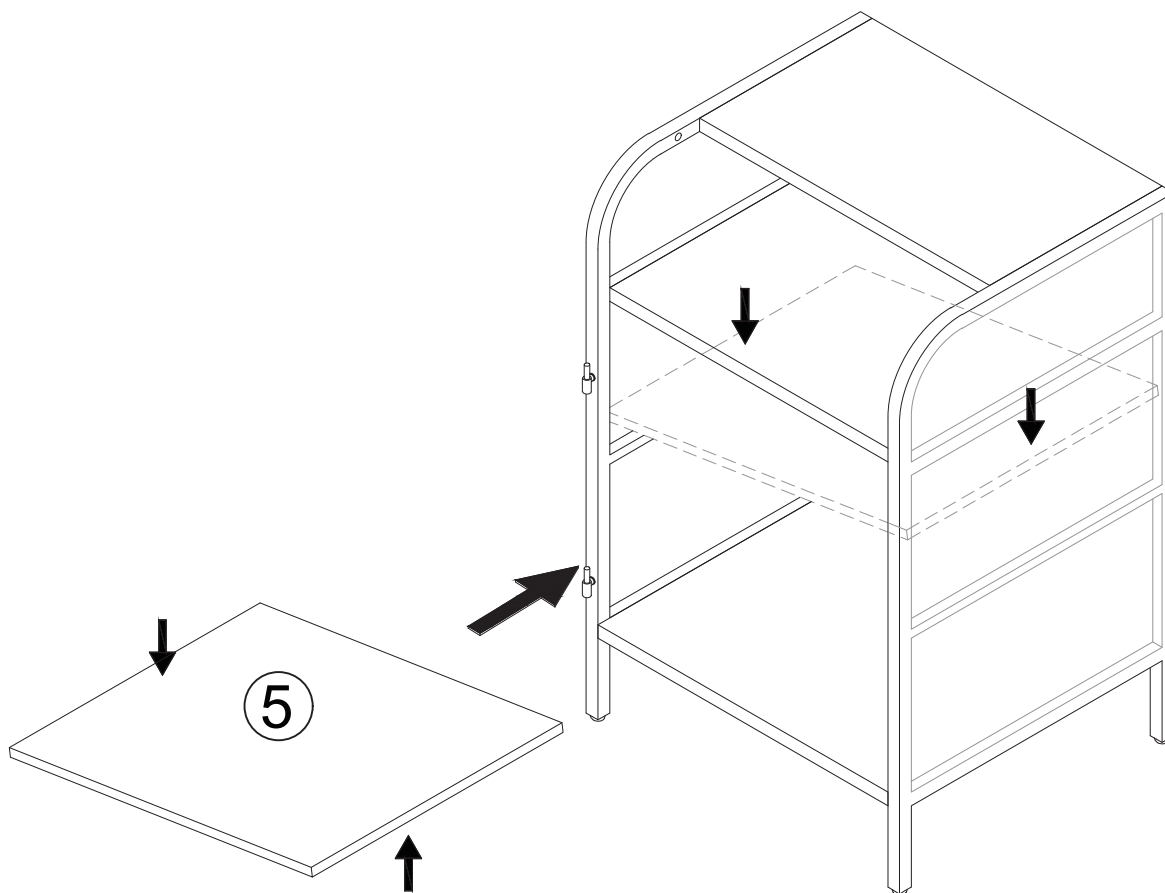


Please aslant put the board (5) into it

7

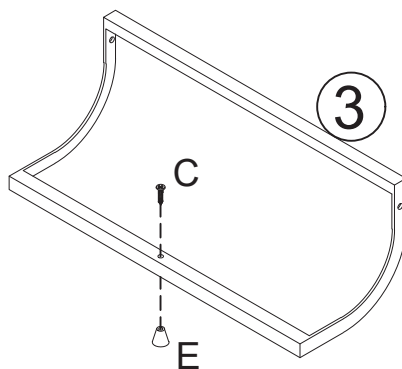

Attention:

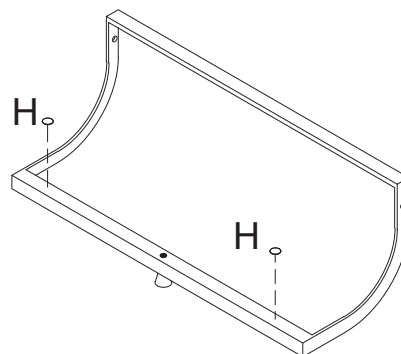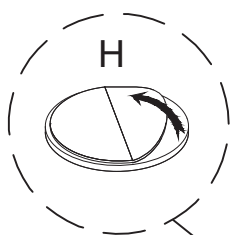

The small pad can reduce the noise in the process of closing.

C x1



3x24mm


E x1



H x2



8

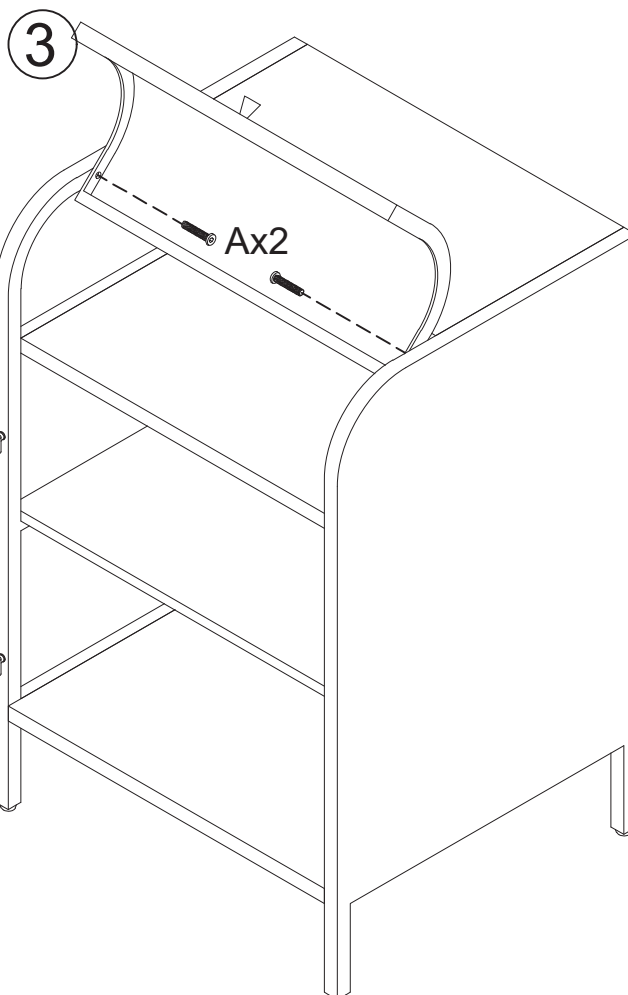




A x2



6x20mm

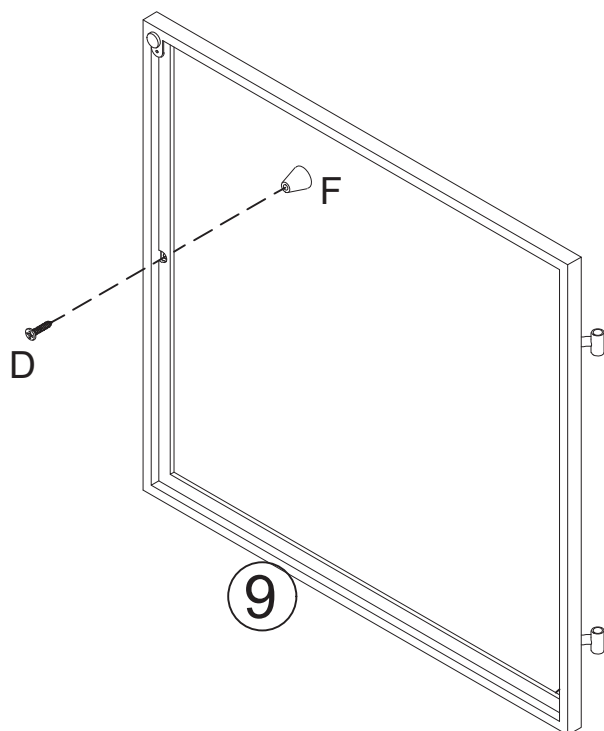9



D	x1
	
3x10mm	
F	x1
	

10

