


INSTALLATION STEPS


WIDESPREAD BATHROOM FAUCET

Installation instruction


BEFORE YOU BEGIN

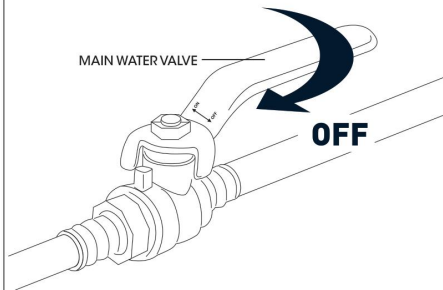


THE SIZE OF COUNTER BASIN'S HOLE AS ABOVE

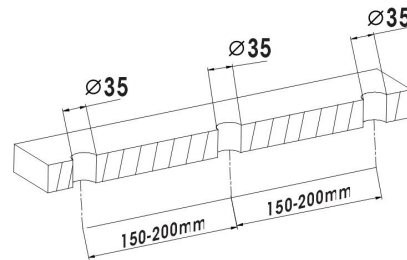


1

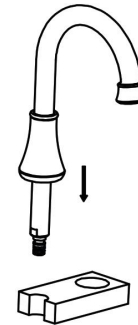


2

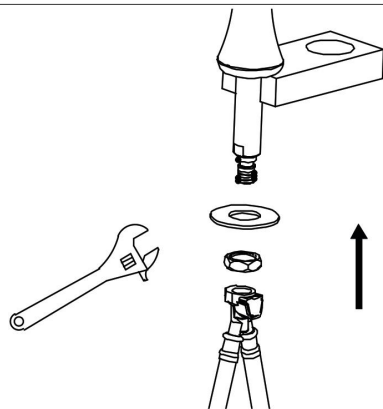


3

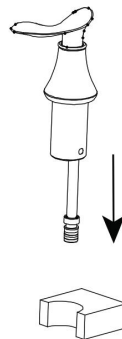


4




5

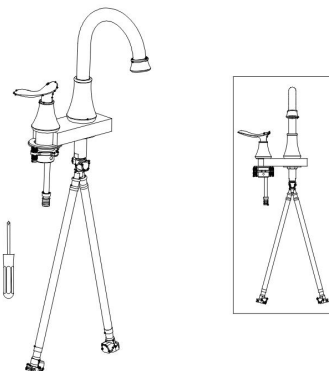

6

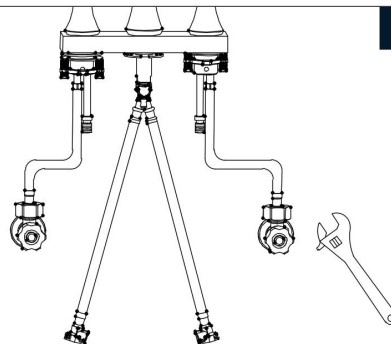

7

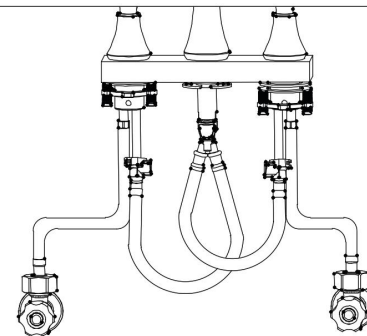

MB/BN/BG/CH/ORB

CARE INSTRUCTIONS

Rinse the product with clear water. Dry the product with a soft cloth.

DO NOT:

Use abrasive cleansers, cloths, or paper towels. Use any cleaning agents containing acid, polish, wax, alcohol, ammonia, bleach, solvent or any other corrosive or harsh chemical cleansers.

RECOMMENDED TOOLS

Plumber's putty



Thread seal tape



Included

