

cabinet

Product ID. 7AVEN



Scan for Support
support@garvee.com



Distributed by
GARVEE.com

V260616WC04

SKU: LC-116-2 DRAWER CABINET

USER'S MANUAL



 Team
Assembly
Recommended

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips




Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

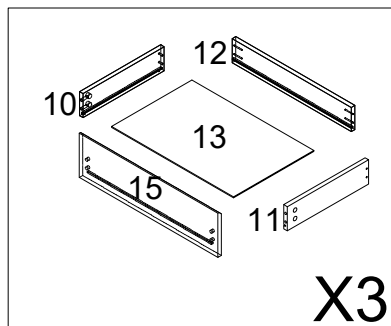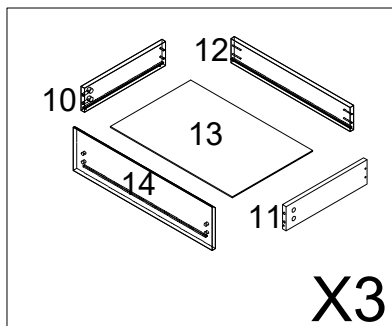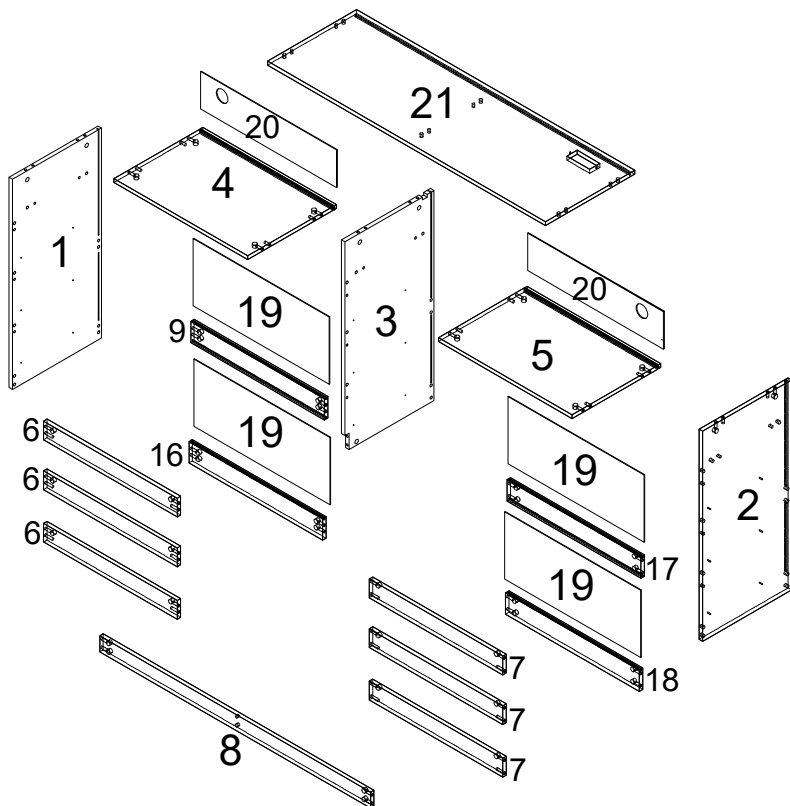


Board Identification


Package A

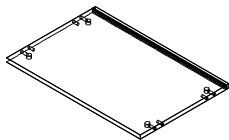


4
577mm*383mm
Qty:1

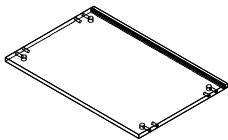


5
577mm*383mm
Qty:1




6
577mm*70mm
Qty:3




7
577mm*70mm
Qty:1

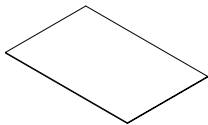


13
534.5mm*347mm
Qty:6

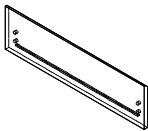


14
598.5mm*165mm
Qty:3

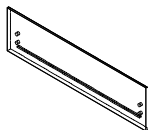

15
598.5mm*165mm
Qty:3

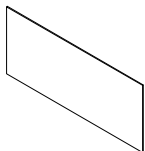

19
587mm*251mm
Qty:4

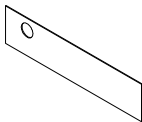

20
587mm*140mm
Qty:2


Board Identification

Package B




1

785mm*384mm
Qty:1




2

785mm*384mm
Qty:1




3

785mm*384mm
Qty:1




7

577mm*70mm
Qty:2

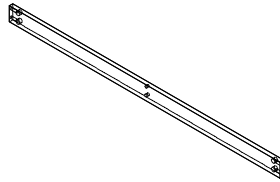

8

1169mm*60mm
Qty:1



9

577mm*80mm
Qty:1




10

350mm*90mm
Qty:6



11

350mm*90mm
Qty:6



12

522.5mm*90mm
Qty:6




16

577mm*80mm
Qty:1




17

577mm*80mm
Qty:1



18

577mm*80mm
Qty:1

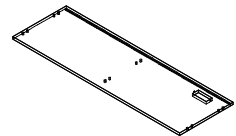


21


1200mm*385mm
Qty:1

Parts List


Package B

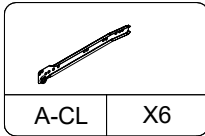


LEFT CABINET MEMBER

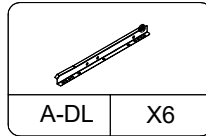


LEFT DRAWER RUNNER

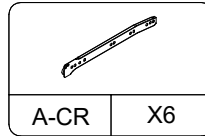


RIGHT CABINET MEMBER

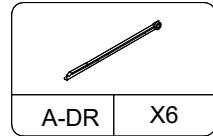


RIGHT DRAWER RUNNER

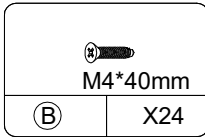


SCREW

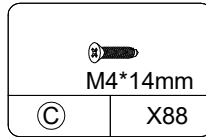


SCREW

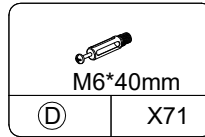


CAM BOLT

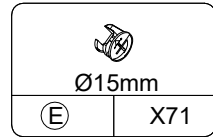


CAM LOCK

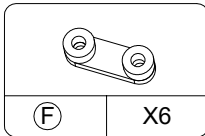


STRIP CLIP

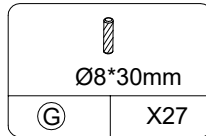


DOWEL

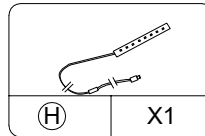



LED STRIP

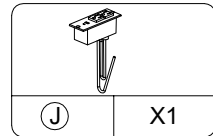


SOCKET

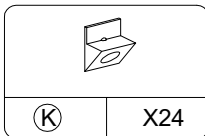

ANTI-TIP KIT

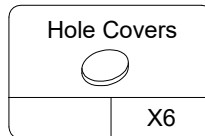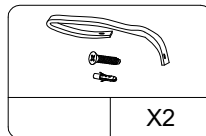

COVER STICKS

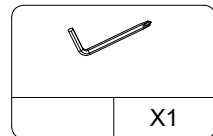


Parts List


Cam Lock Fastening System

insert the cam bolt into
the hole first, then insert
the cam lock and lock it.


1

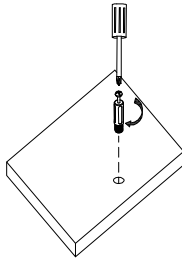

2

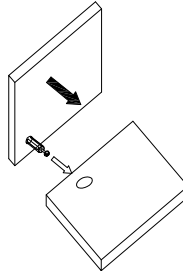


3

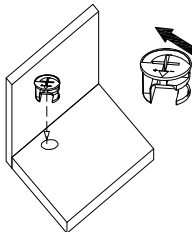



The opening must point toward
the edge of the board

4

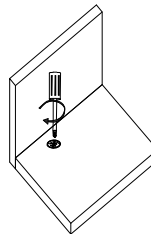



Step 1

	M4*14mm			M6*40mm			M4	
	Ⓒ	X6		Ⓓ	X11			X1

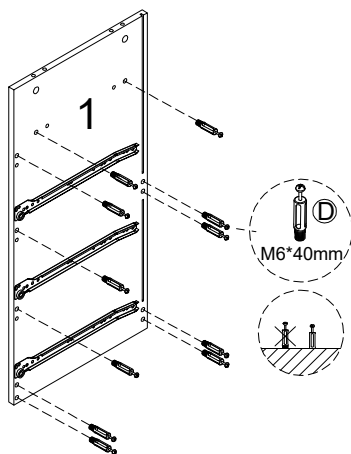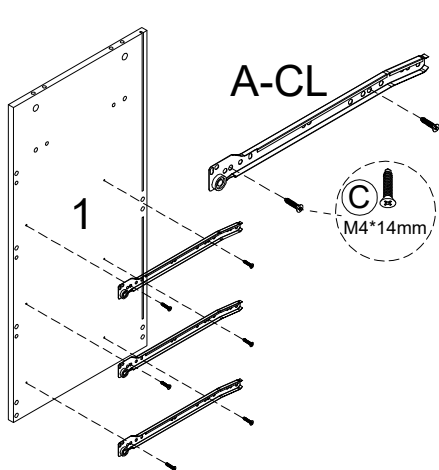


Step 2

	M4*14mm			M6*40mm			M4	
	Ⓒ	X6		Ⓓ	X11			X1

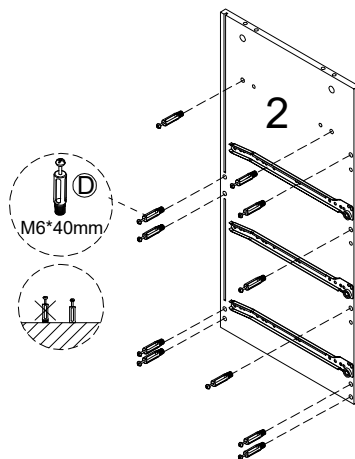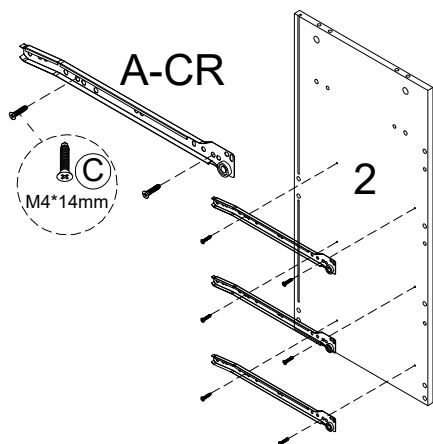

Step 3

			
M4*14mm		M4	
©	X12		X1

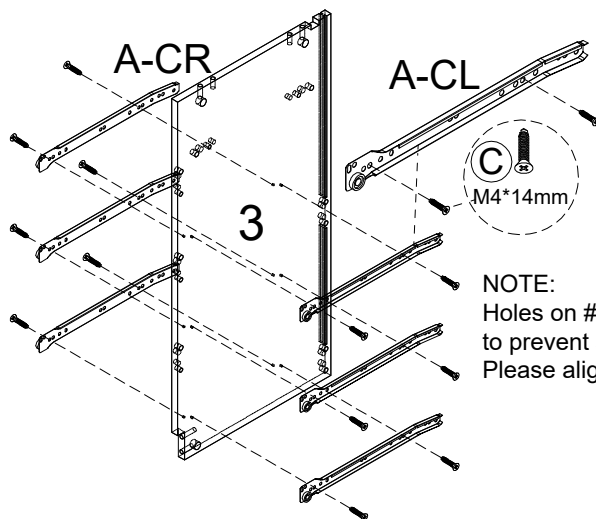


NOTE:


Holes on #3 are staggered by design to prevent screws from hitting each other. Please align the slides accordingly.

Step 4


							
M6*40mm		Ø8*30mm		Ø15mm		M4	
©	X19	©	X3	©	X3		X1

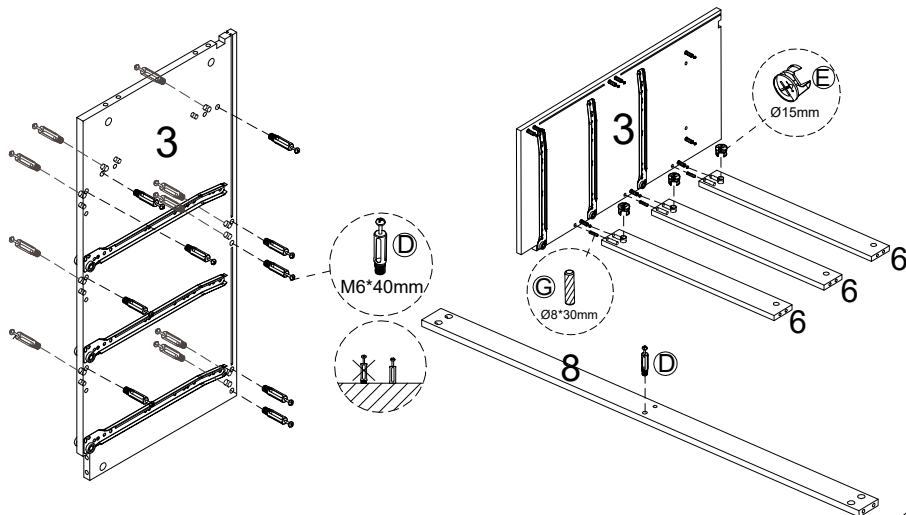

Step 5

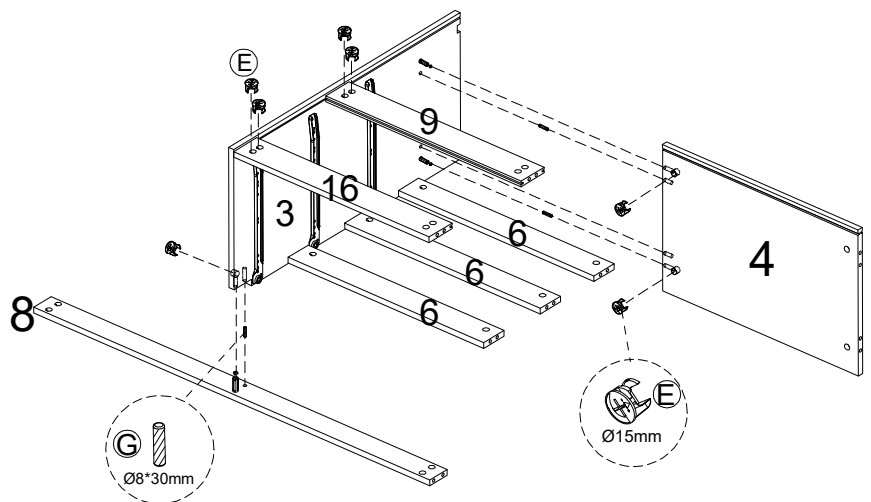


Step 6

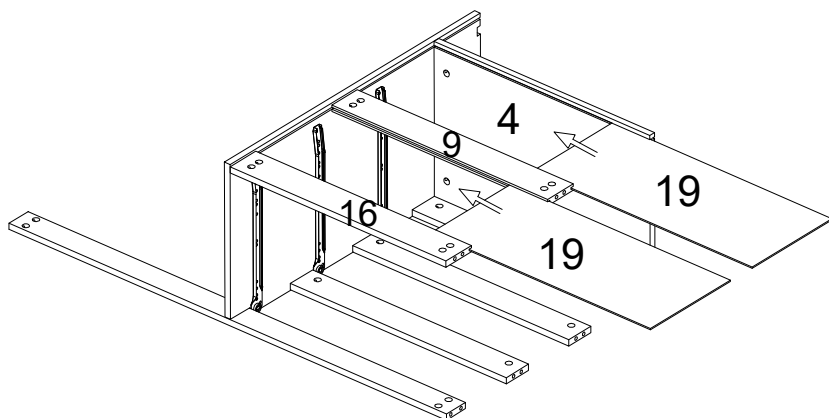


Step 7

		
Ø8*30mm	Ø15mm	M4
G X5	E X11	X1

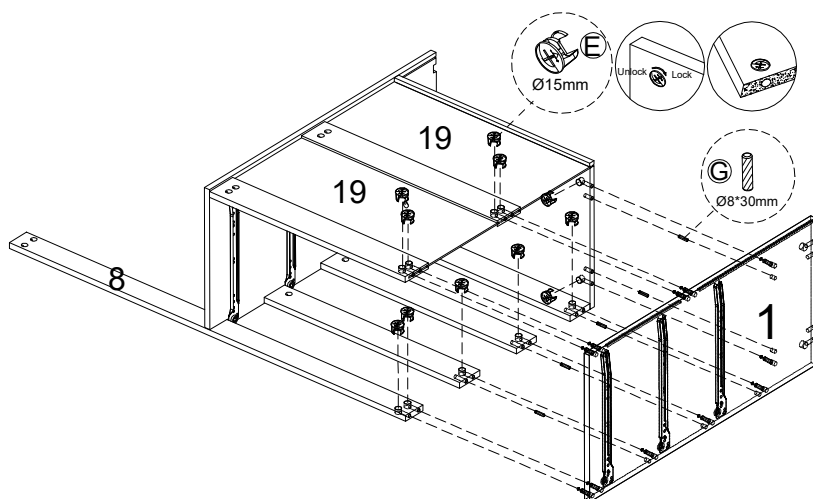

Step 8

		
Ø8*30mm	Ø15mm	M4
G X3	E X3	X1

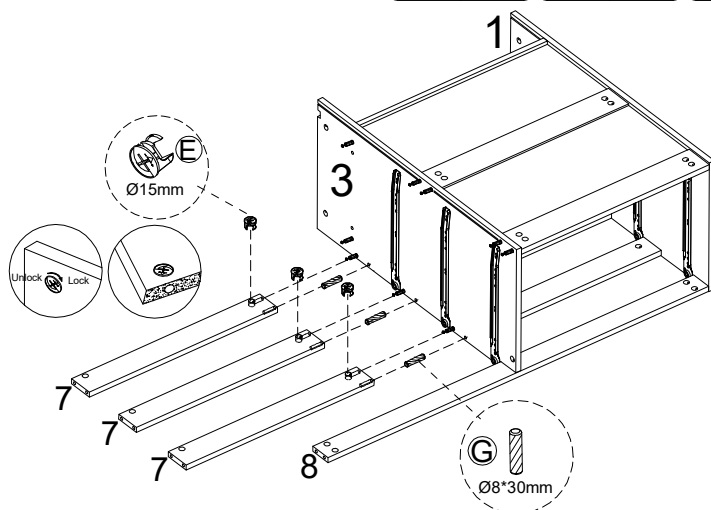


Step 9


 Ø8*30mm	
(G)	X2

 Ø15mm	
(E)	X6


 M4	
	X1

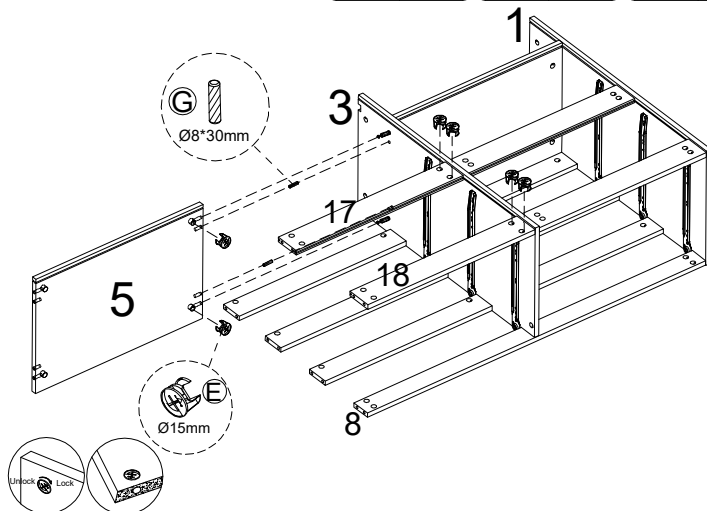


Step 10

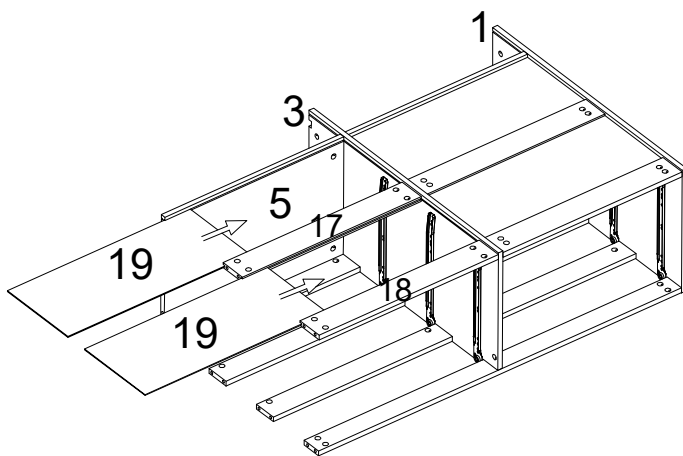

Step 11

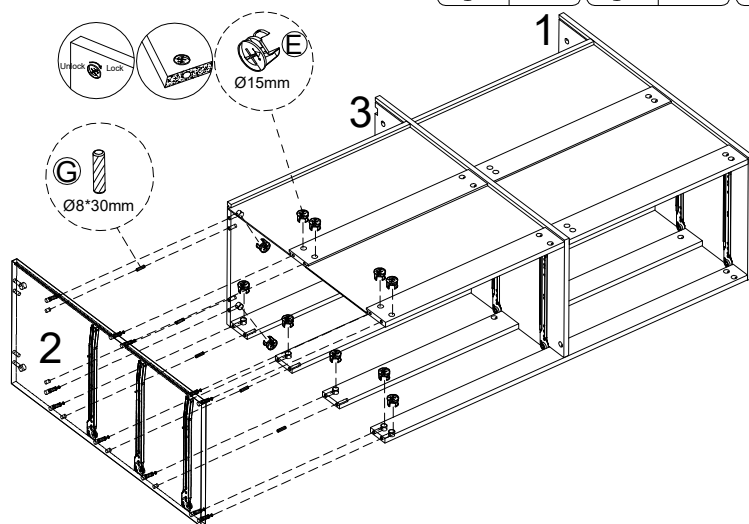


Step 12

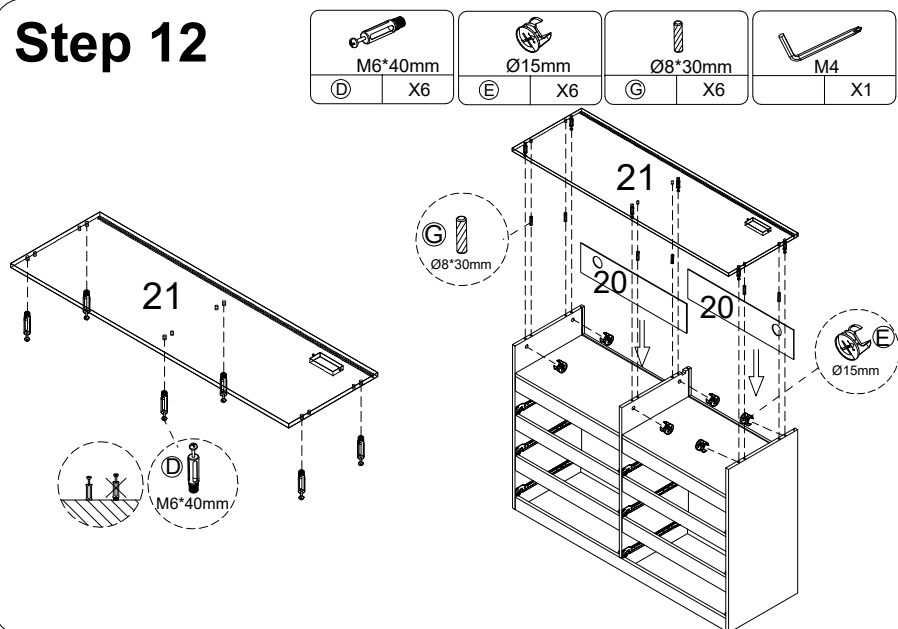

Step 13

	M4*40mm
(B)	X24

	M4
	X1

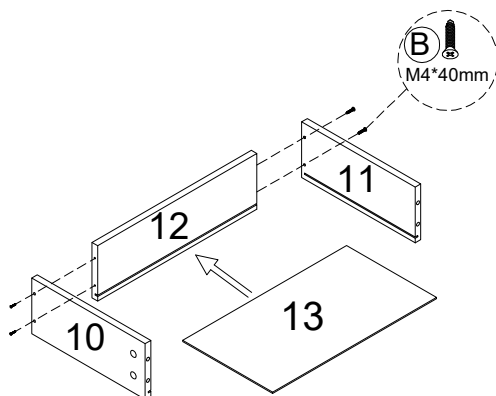


X6

Step 14

	M6*40mm
(D)	X12

	Ø15mm
(E)	X12


	M4
	X1

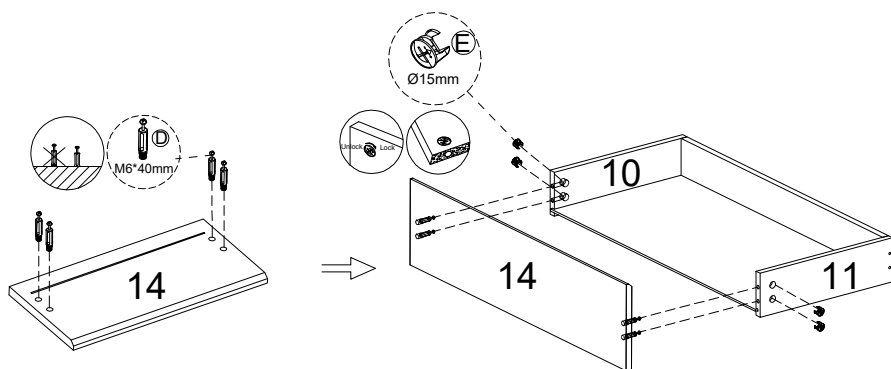


X3

14


Step 15

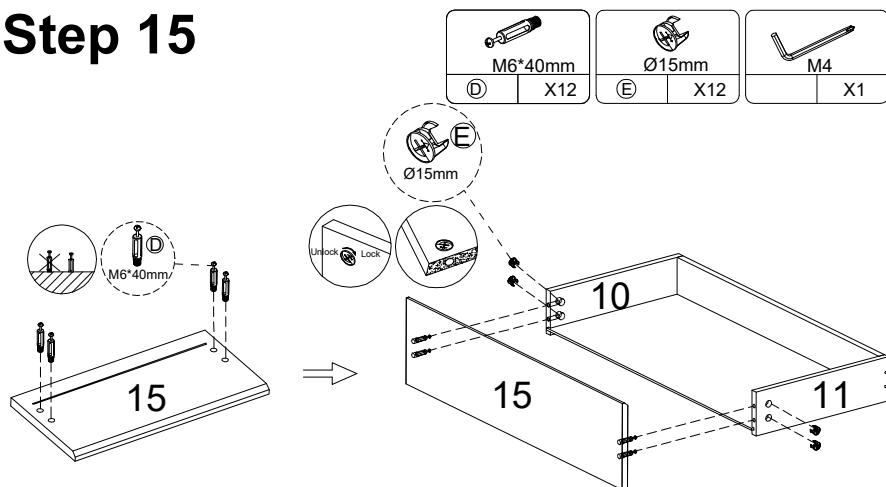


Step 16

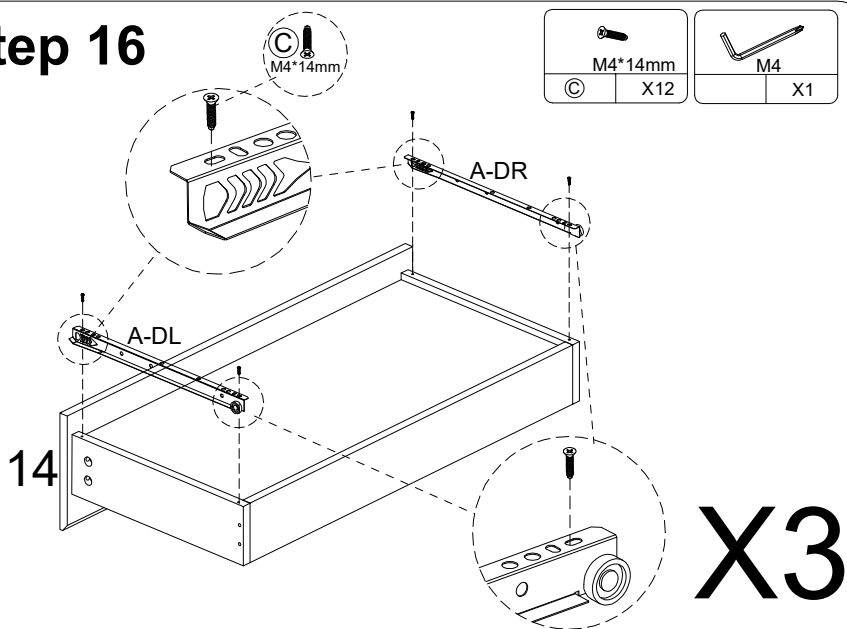

Step 17


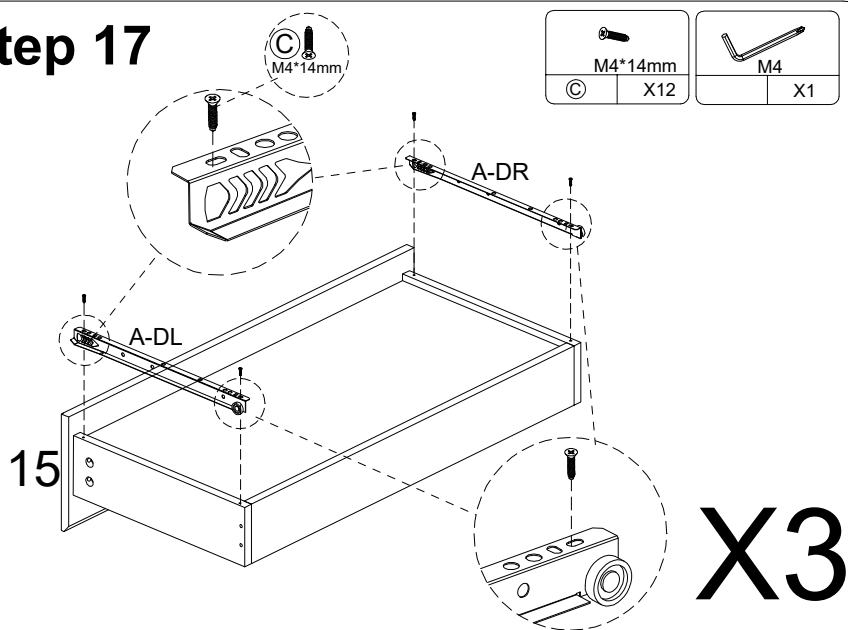


Step 18

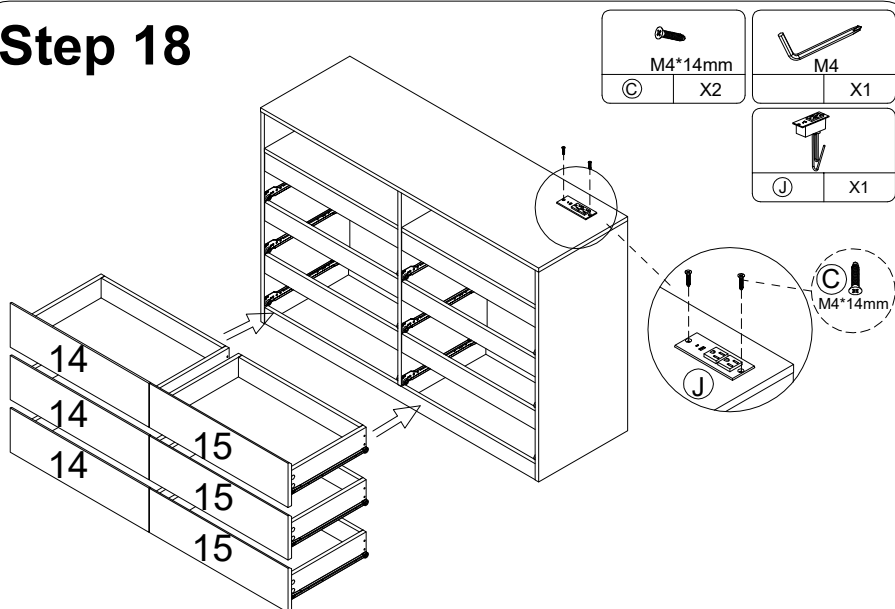

Step 17




							
M4*14mm						M4	
C X12		F X6		H X1		X1	

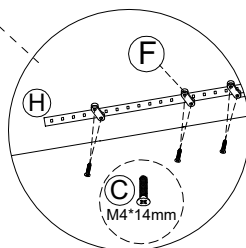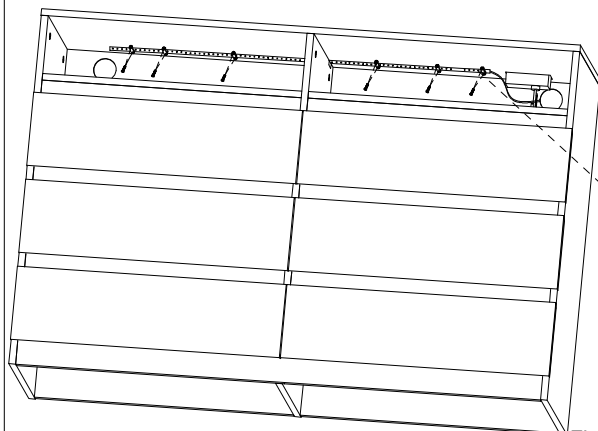

Flexible Placement:
LED strip clips are provided for optional
installation at your preferred location.

Step 18

							
M4*14mm						M4	
C X26		K X24		X2		X1	

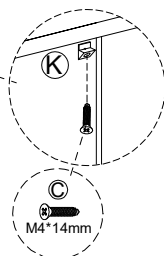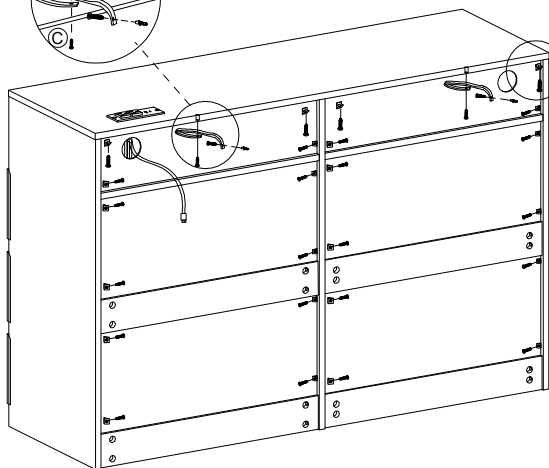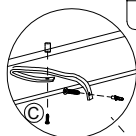

GARVEE
support@garvee.com