

Assembly Instruction

Tools



Tools Supplied:

- Allen key

Extra Tools required:

- Flathead Screwdriver
- Pozi Screwdriver
- Spanner
- Scissors

Safety

- Please take the time to carefully read through whole instructions before you commence.
- Keep these instructions for future reference.
- Unpack, inspect and check off all of the contents.
- Please dispose of all packaging safely.
- Small component parts could choke a child if swallowed.
- We strongly recommend that you keep children well away from the work area.
- It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and to protect your floor.
- This product is heavy. Take extreme care when lifting to avoid personal injury or damage to the product.
- Assemble the product as close to its intended final position in the room as possible.



General Care



Wipe clean with a slightly damp soft cloth.



Avoid the use of all household cleaners and abrasives.



When moving your furniture, carefully lift into place.



Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Recommendations

Periodical re-tightening of fixings.

Notes


We've tried to make this piece of furniture as easy to assemble as possible.

In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact our customer service

Warning

This unit is heavy! Please use an assistant when lifting

Hardware Pack for an ottoman storage bed

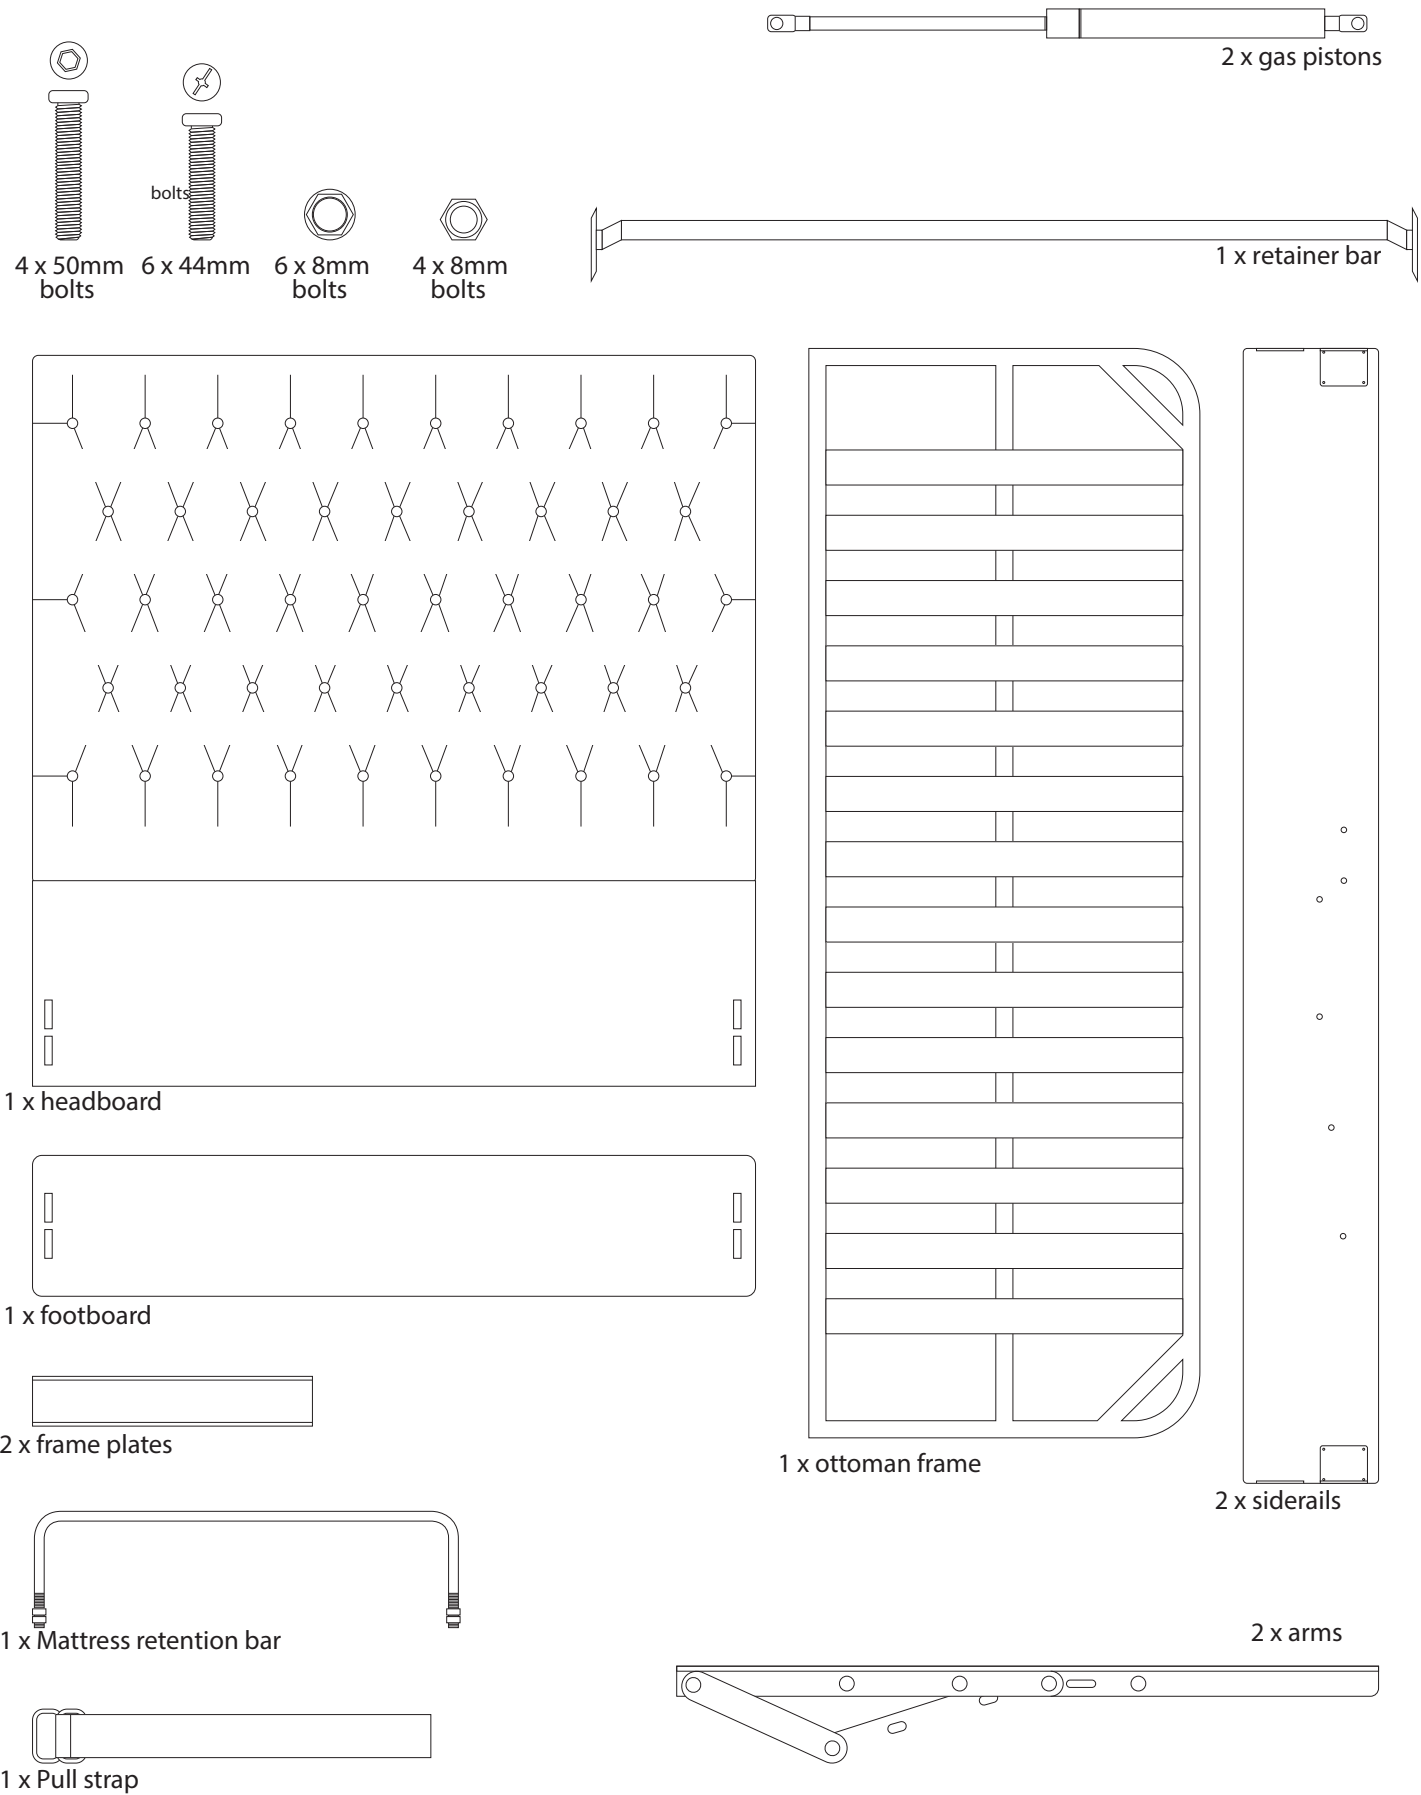

Instructions for an ottoman storage bed

Step 1
Lay out all components of bed



Step 2
Lay out all components of bed



Step 3
Lay out all components of bed




Step 4
Lay out all components of bed



Step 5
Lay out all components to bed

▼ Under-bed storage

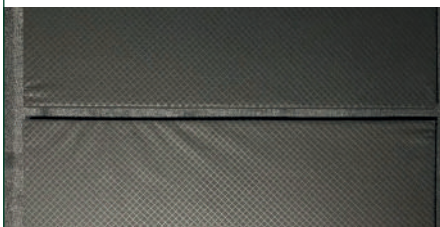

Step 6
Locate at the bottom of the headboard and footboard feet location to pierce through or screw in depending on type of feet ordered



Step 7
Pierce sticker and screw in feet for the headboard



Step 8
If you have opted for a different type of leg which requires to be screwed please screw this in



Step 9
Place headboard straight and hook on the side rails to the headboard
Bracket pictures may vary



Step 10

Place feet onto the footboard of the bed



Step 11

If you have opted for an alternative style of foot please screw in to the footboard




Step 12

Place the second side rail and hook on to both headboard and footboard
Bracket pictures may vary




Step 13

Screw in all side rail bolts and secure frame

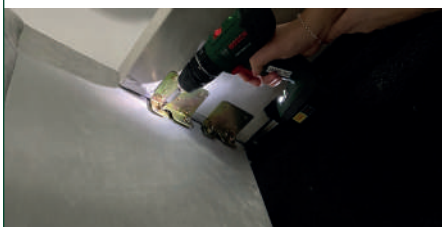

Step 14

Ensure if you have opted for an ottoman the screws are facing the headboard

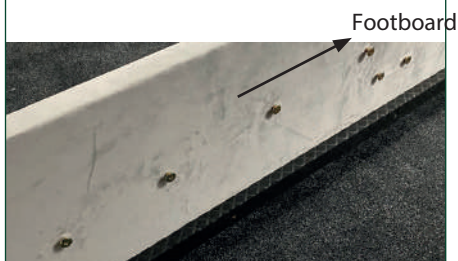

Step 15

Screw in the ottoman arms onto the side rail



Step 16

Screw in the centre support bar to both side rails




Step 17

The bed should look like this when made up




Step 18

Unscrew the bolts on the ottoman arms

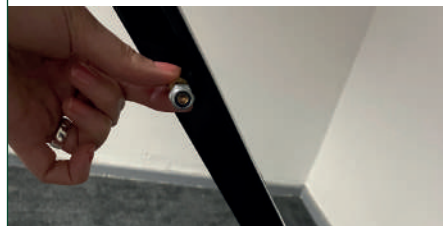

Step 19

Attach the gas bar and re-screw the bolts on top and bottom

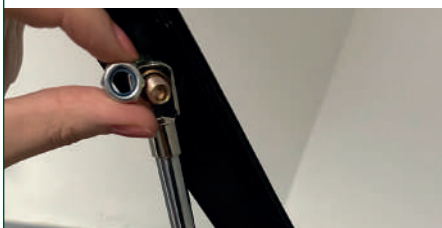

Step 20

Open the ottoman frame




Step 21

Please ensure the hinge side is facing down



Step 22

Attach the 2 metal plates to lock in the frame from folding in again

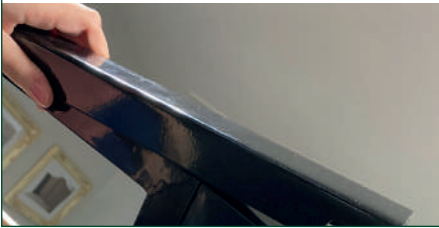


Step 23

Place the allen key bolts in from the top




Step 24

Attach bolt and screw in using tools provided

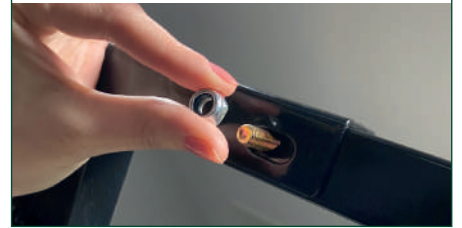


Step 25

Please attach the mattress retention bar

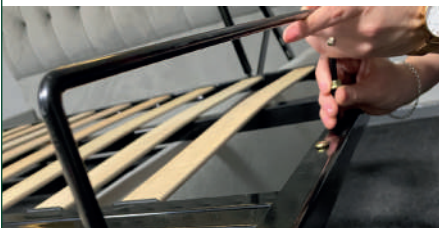


Step 26

4 screws are on this please remove 2 from the bottom and re attach once glided in to holes

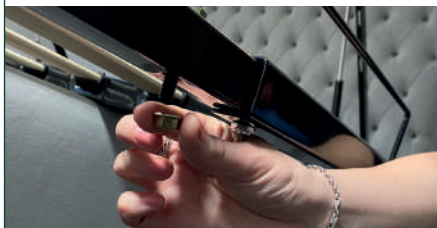

Step 27

Place the ottoman frame on top of the metal hinges 2 people required and slot in remainder bolts to secure the frame in place

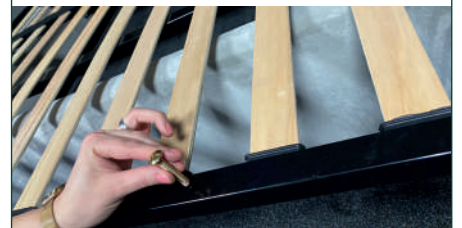


Step 28

Once the frame is held up it should look like this




Step 29

Please screw in bolts to secure the frame

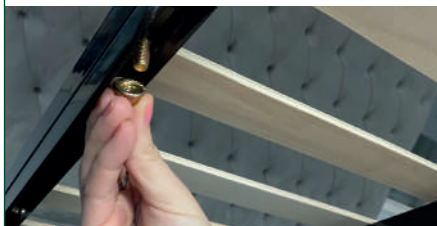

Step 30

Attach the pull up strap to the foot end of the frame

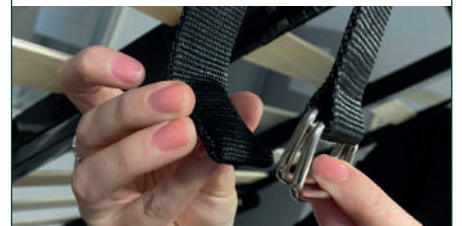

Step 31

Please then slide in the under-bed storage boards



Assembly for ottoman storage bed is complete


Hardware pack for a slatted bed frames



Instructions for a slatted bed frames

Step 1

Please lay out all contents on to a flat surface

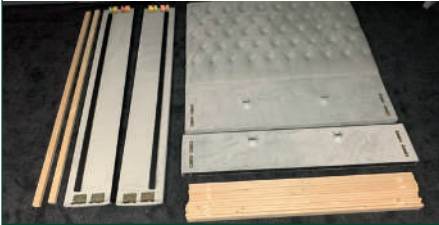

Step 2

Please attach the feet and assemble the bed and insert the centre support rail into the bracket on both the headboard and footboard



Step 3

The bed should look like this



Step 4

Please place the slats on to the centre support rails



Step 5

Roll out the slats on the bed, or space the slats out evenly




Step 6

You may screw in on the edges and onto the side profile of the side rails




Step 7

Your bed is complete

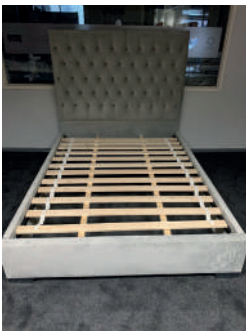


Step 1

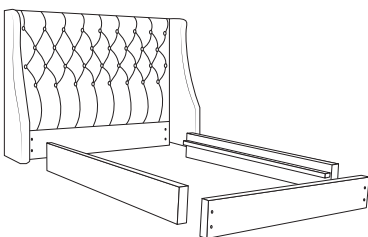


Screw in the side rails on all four corners (Brackets and screws pre attached).

Step 2

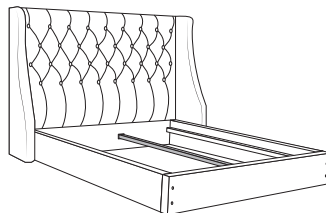

Place the wooden support rail in the centre of the bed – this remains loose in the middle but will need screws when point 3 is actioned

Step 3

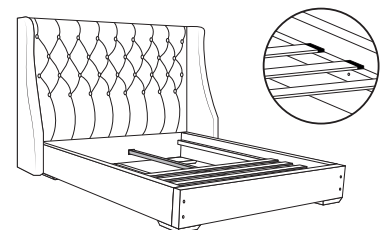

Place the slats on top, and screw between 4-6 on either side using the screws provided.