


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

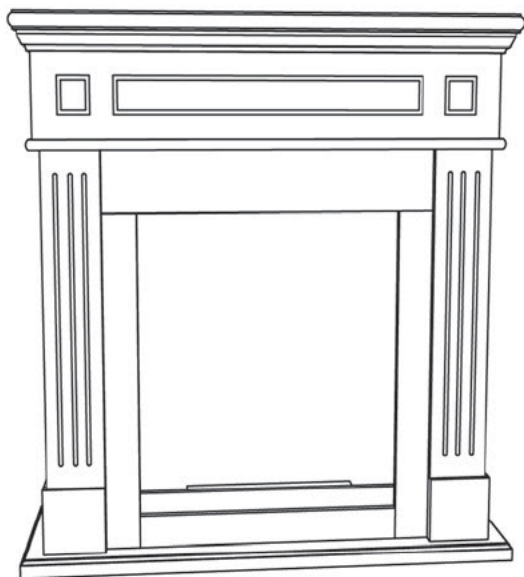

ELECTRIC FIREPLACE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



WARNING

Unit can tip over causing severe injury or death.
Anchor unit to study on wall (if instructed to).
Do Not allow children to climb on unit.
Put heavy items on lower shelves or drawers.



CERTIFIED UNDER CANADIAN AND
AMERICAN NATIONAL STANDARDS: ETL



[Helpful Hints]

PEOPLE NEEDED FOR ASSEMBLY: 1-2
ESTIMATED ASSEMBLY TIME: 1 HOUR

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemical or abrasive cleaner on this item.


-Never push, pull, or drag your furniture.




PACKING LIST




①



②



③




④



⑤



⑥



⑦




⑧




⑨




⑩

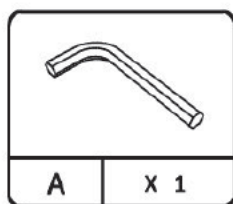


ALLEN KEY

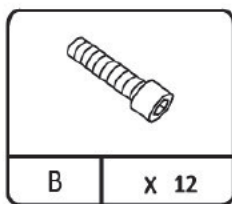


M6X2.8 SCREW

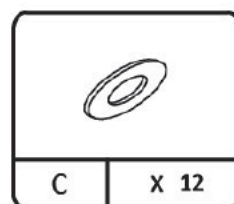


WASHER

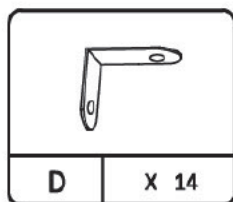

L SHAPE BRACKET

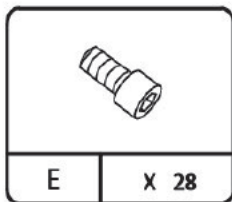

M6X1.2 SCREW

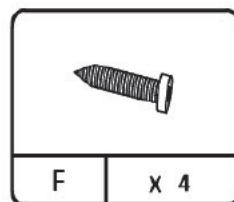


ST4.2X9.5 SCREW

DIMENSIONS








ASSEMBLY

Before installing this fireplace, please read the following steps carefully.

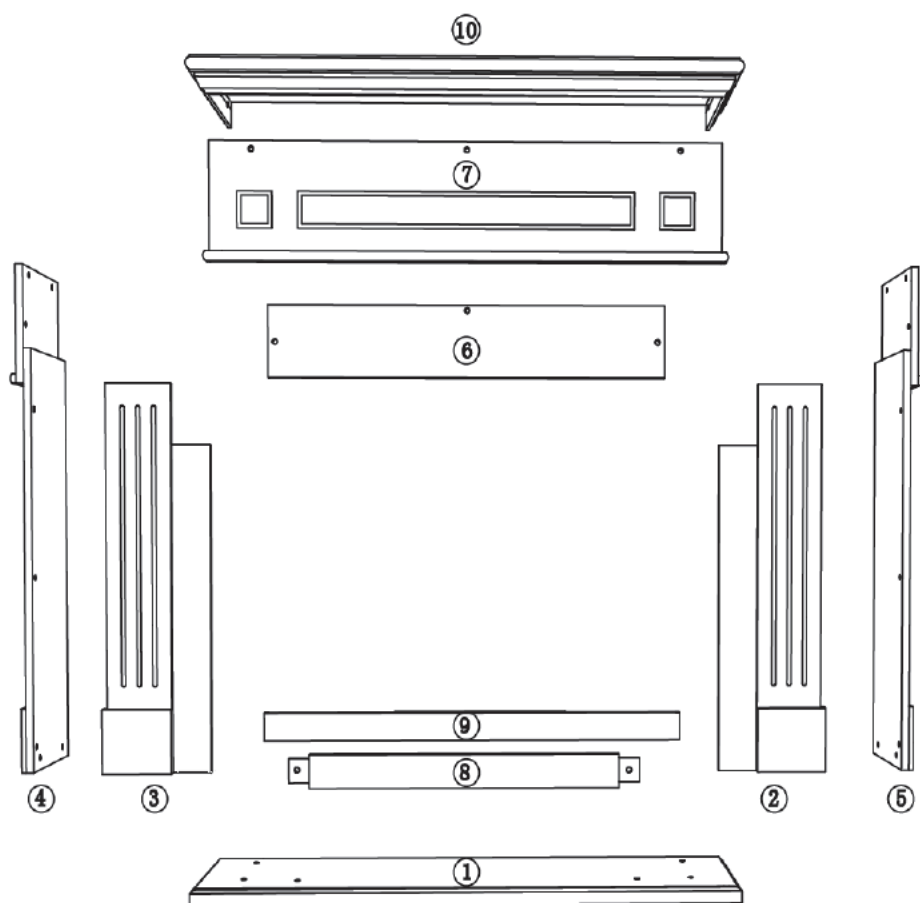





STEP 1:

Install two side panels(4)+(5) onto the front panel(2)+(3) with Allen Key as shown in the picture.

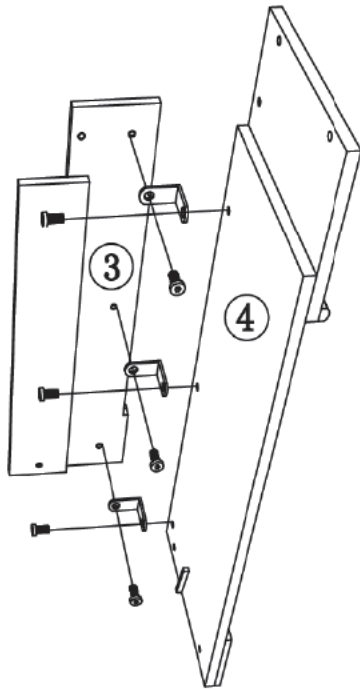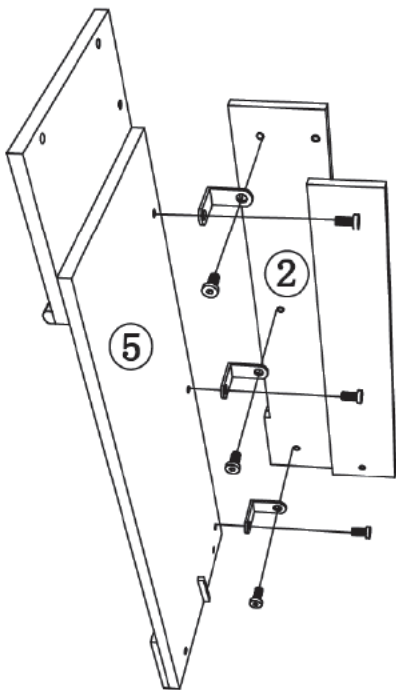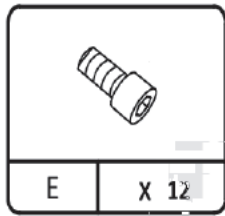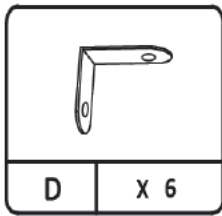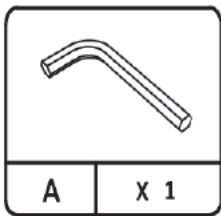





STEP 2:

Install the panels installed in the previous step onto the bottom seat(1) with Allen Key as shown in the picture.

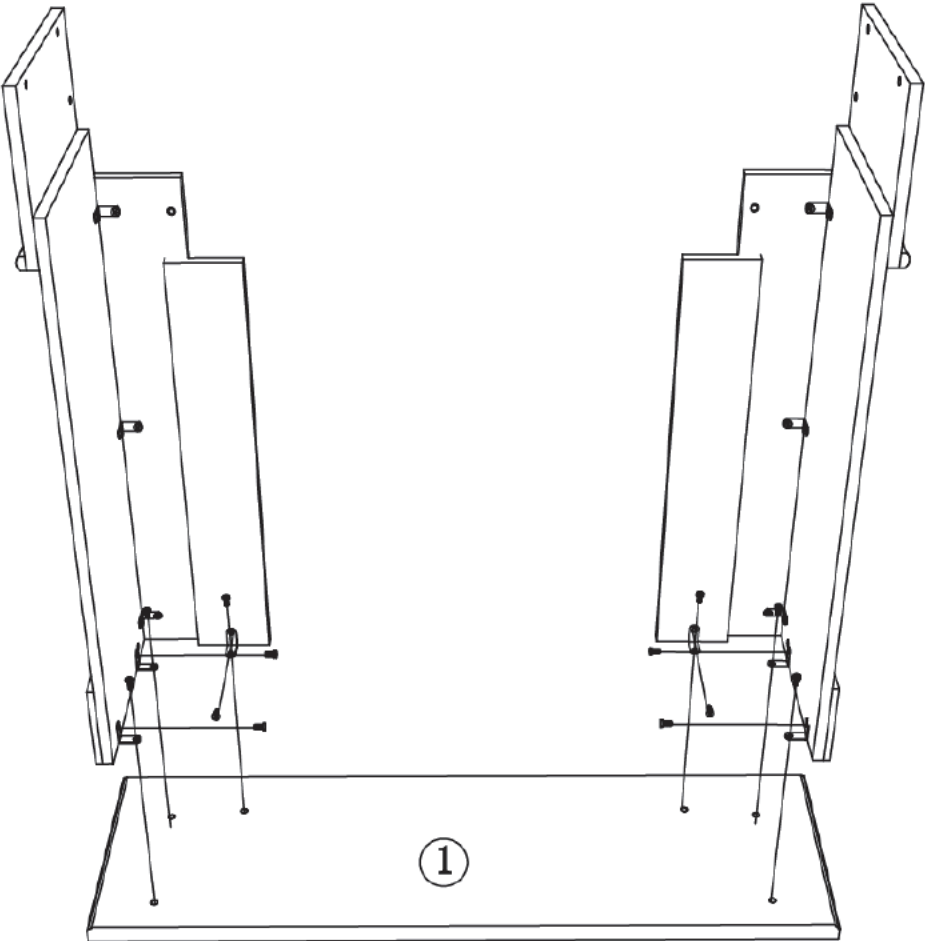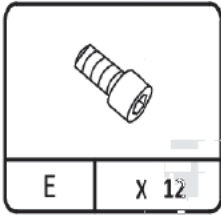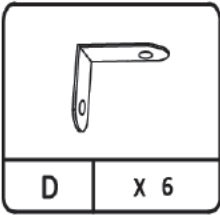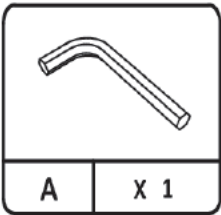





STEP 3:

Install the panel(7) onto the panels installed in the previous step with Allen Key as shown in the picture.

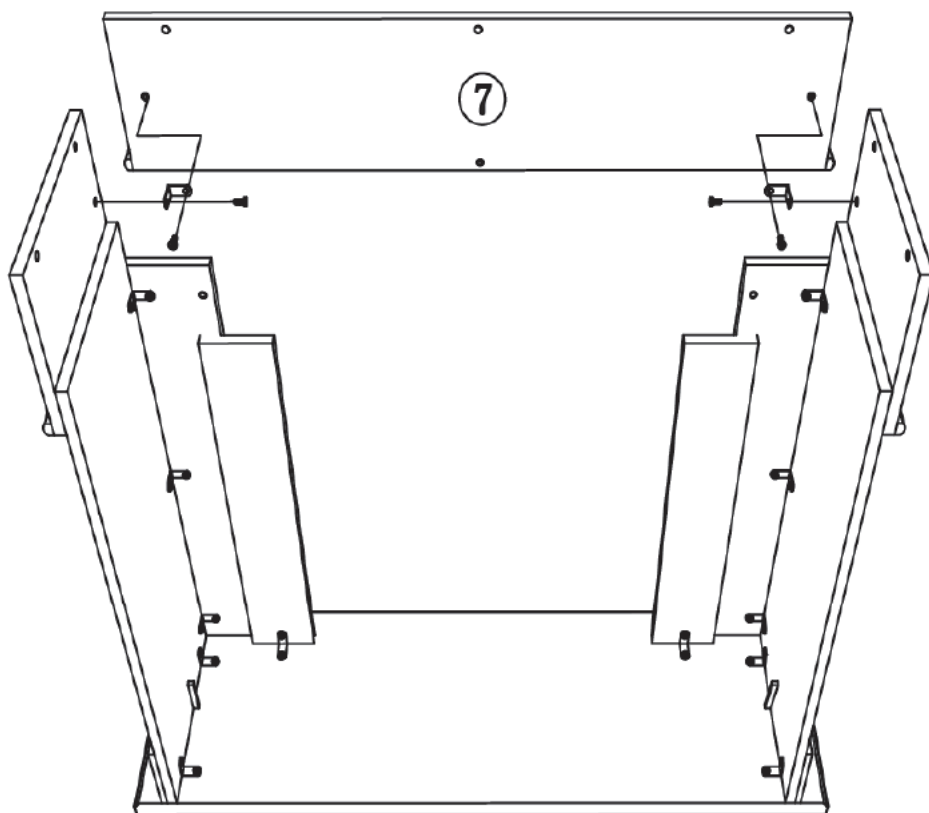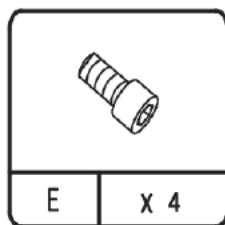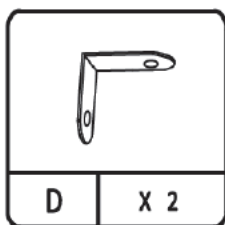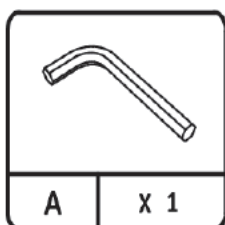


STEP 4:

Install the panels(6)+(8) onto the panels installed in the previous step with Allen Key as shown in the picture.

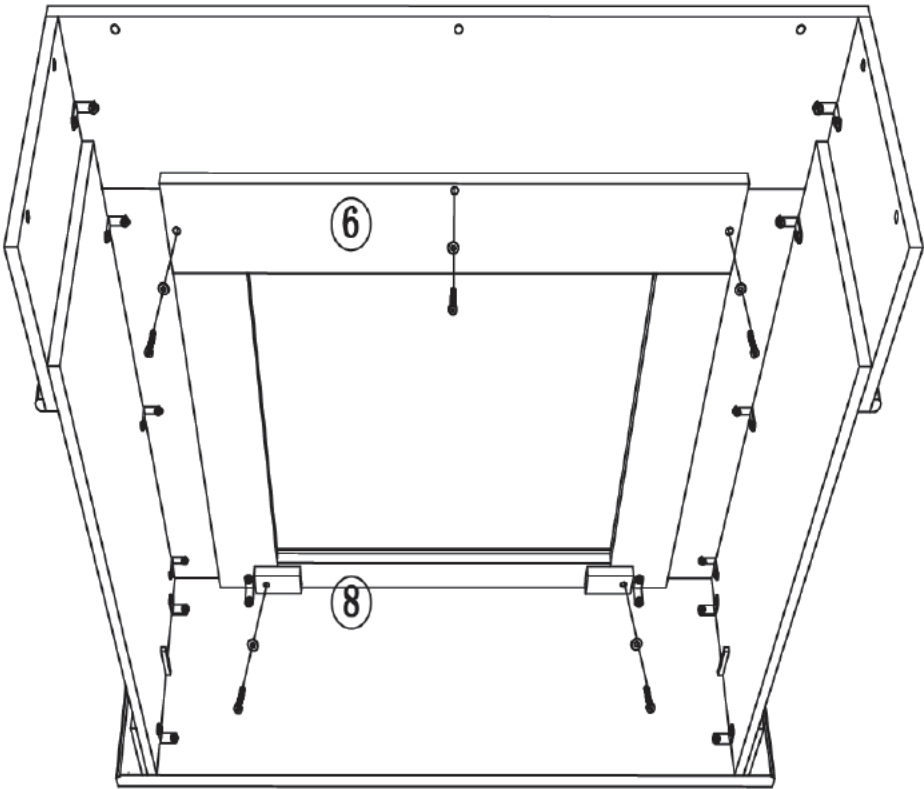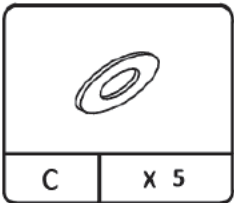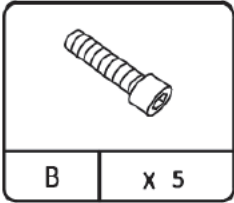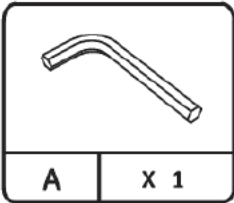





STEP 5:

Insert the panel(9) onto the panels installed in the previous step as shown in the picture.

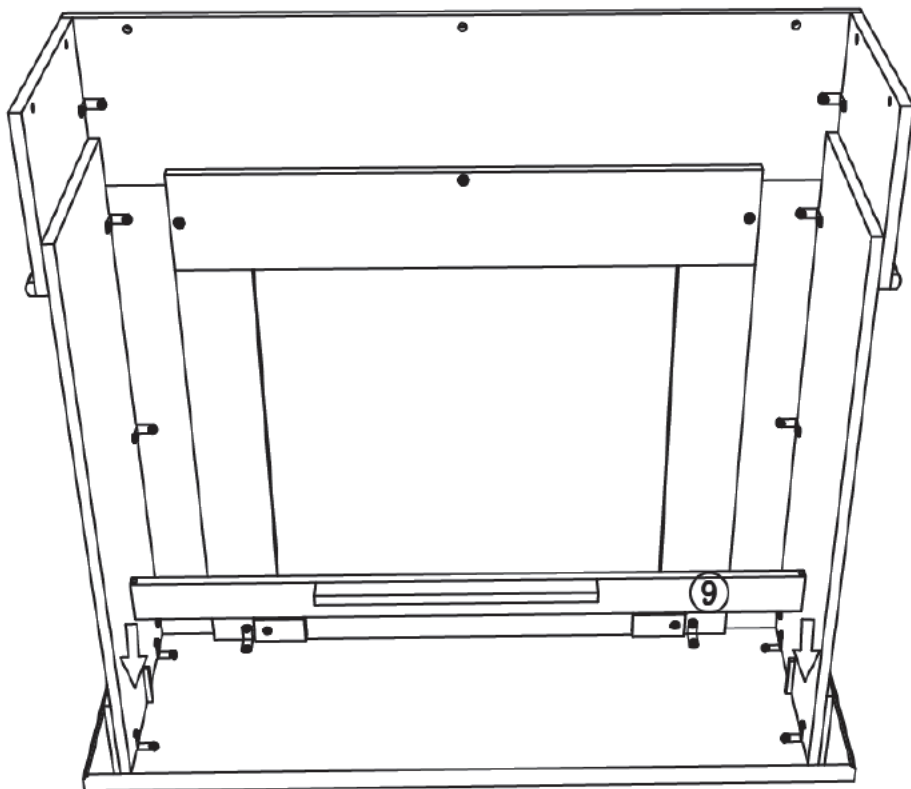

STEP 6:

Install the panels(10) onto the panels installed in the previous step with Allen Key as shown in the picture.

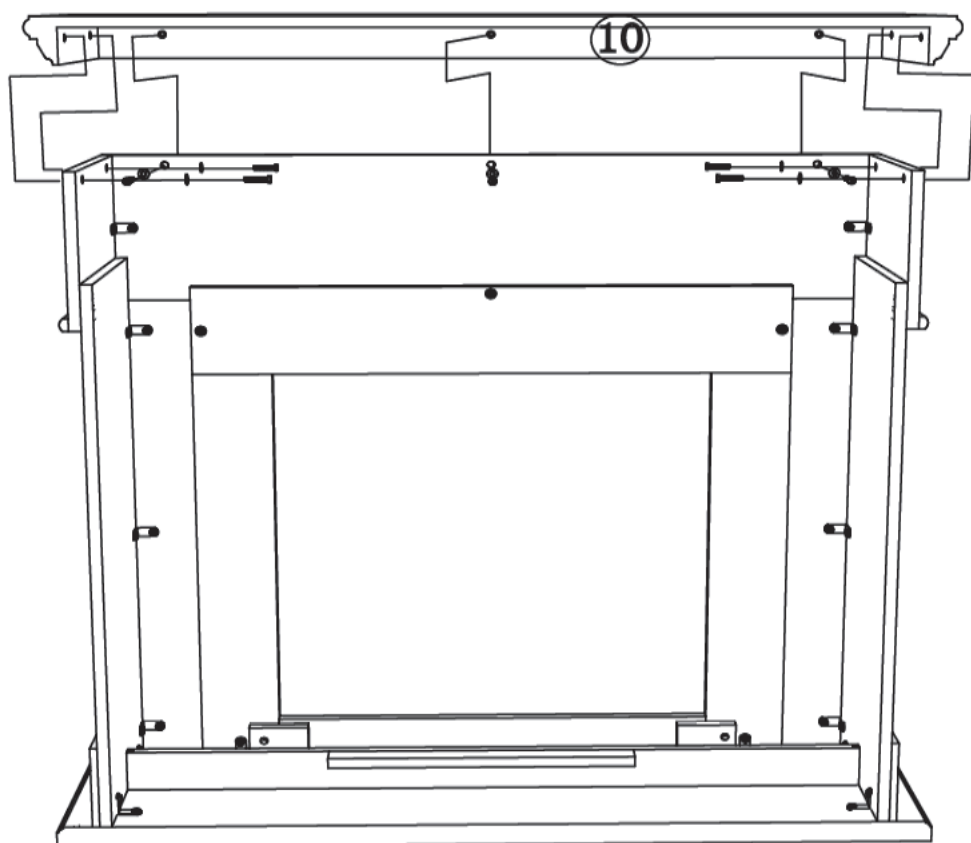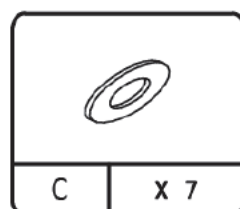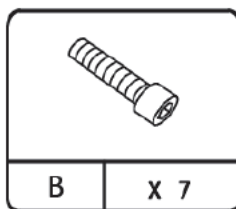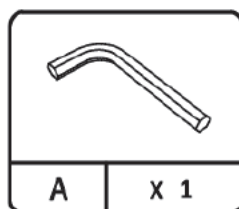

STEP 7:

Insert the fireplace into the mantel from front to back.

