




Product Installation Instructions

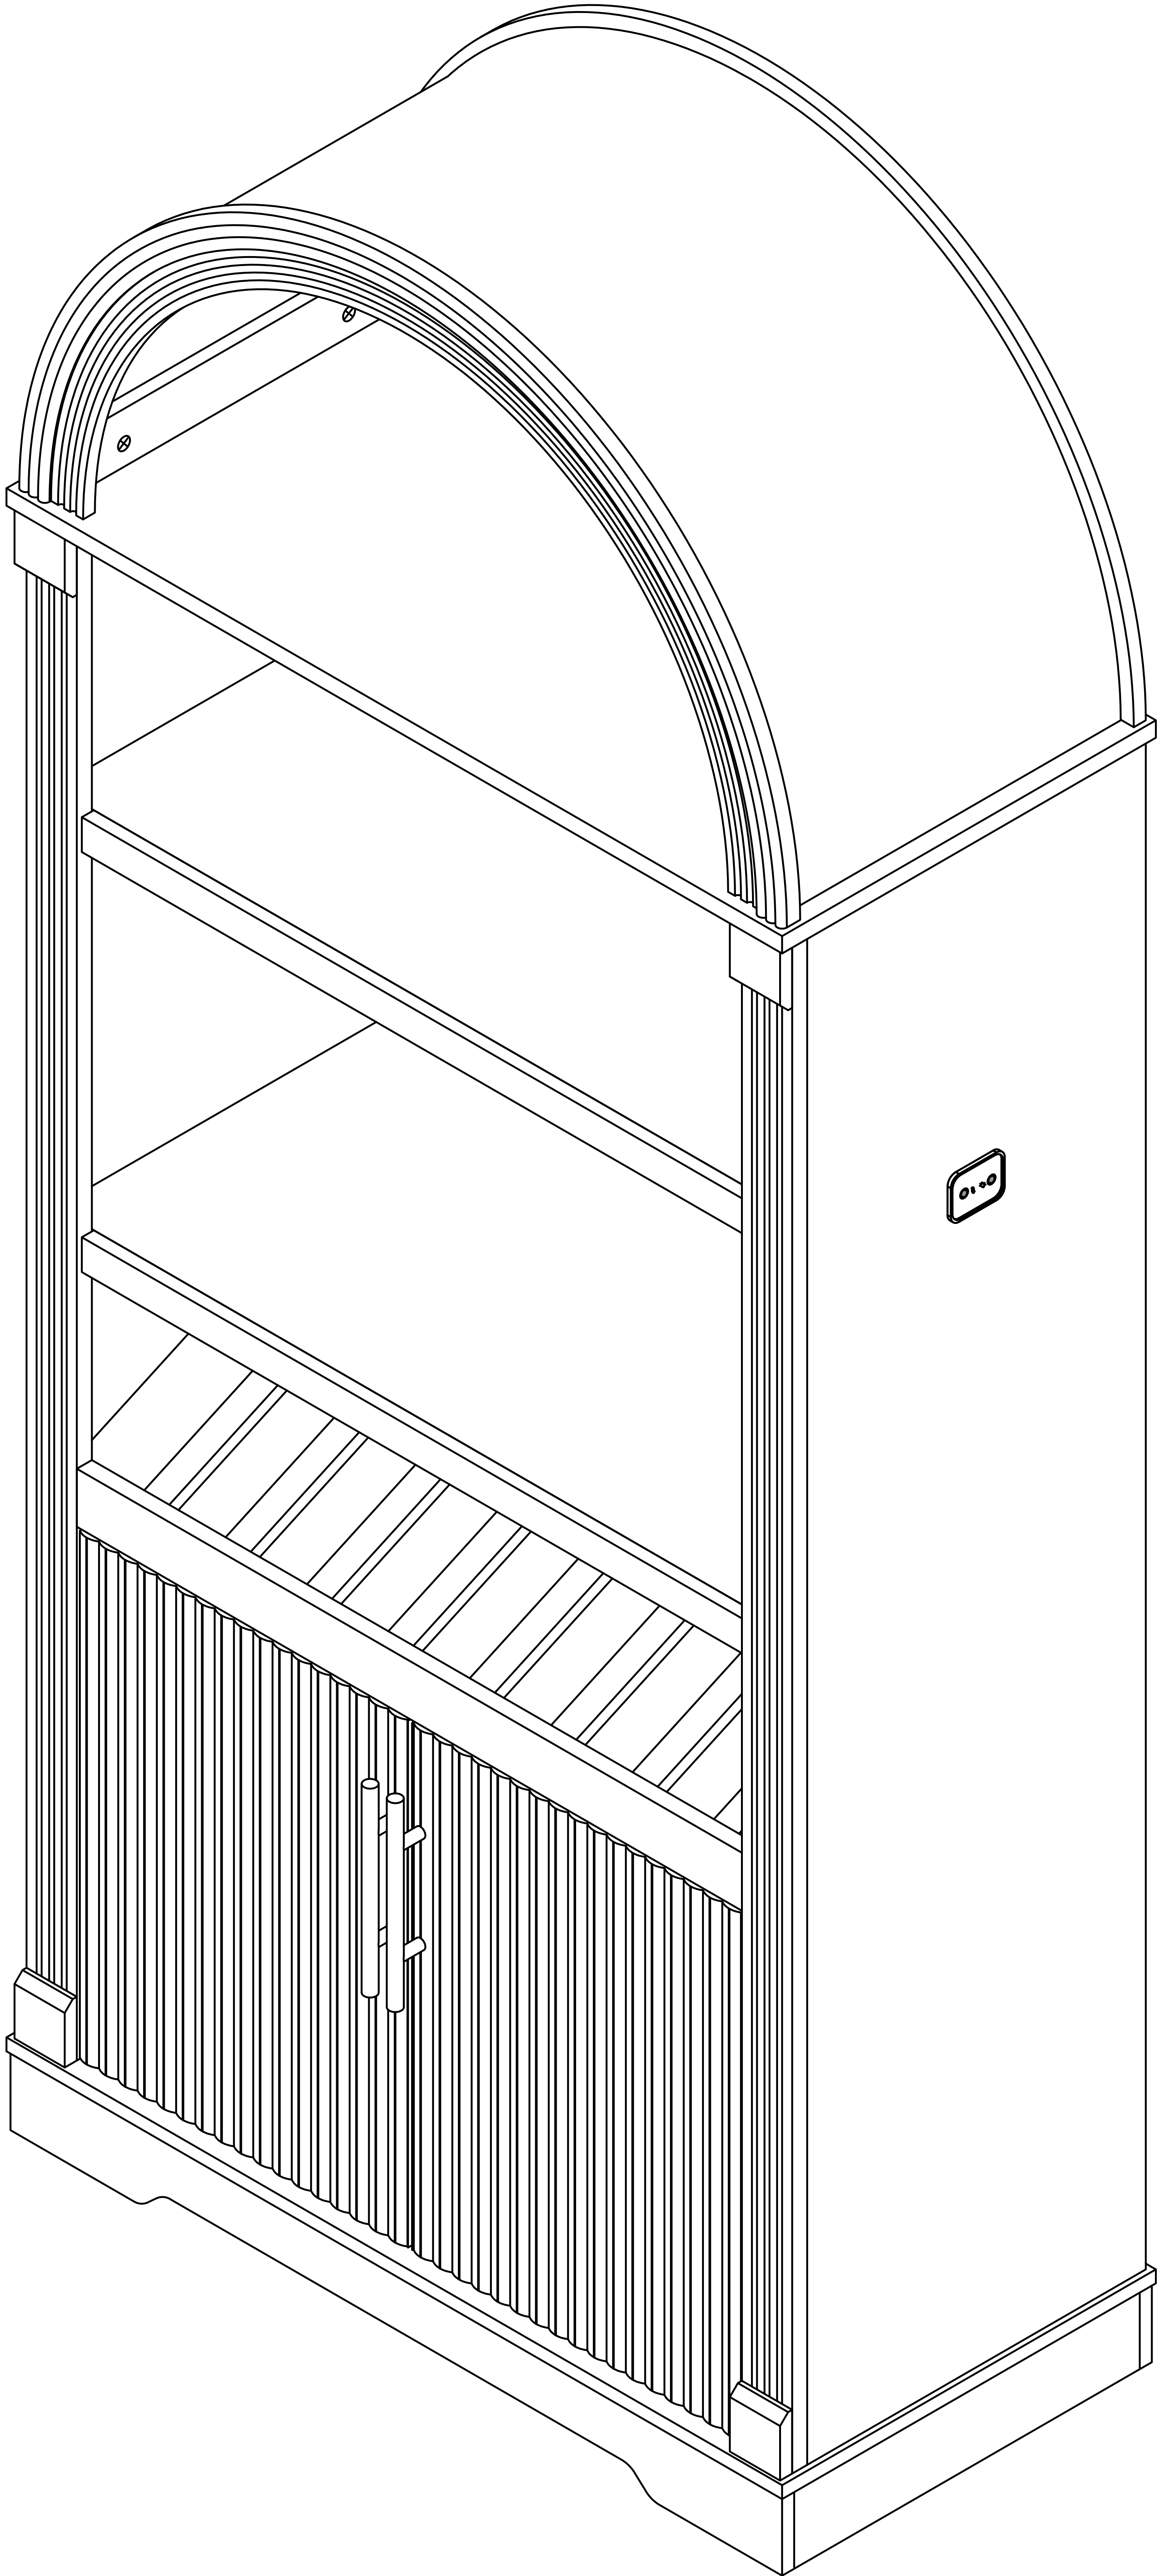


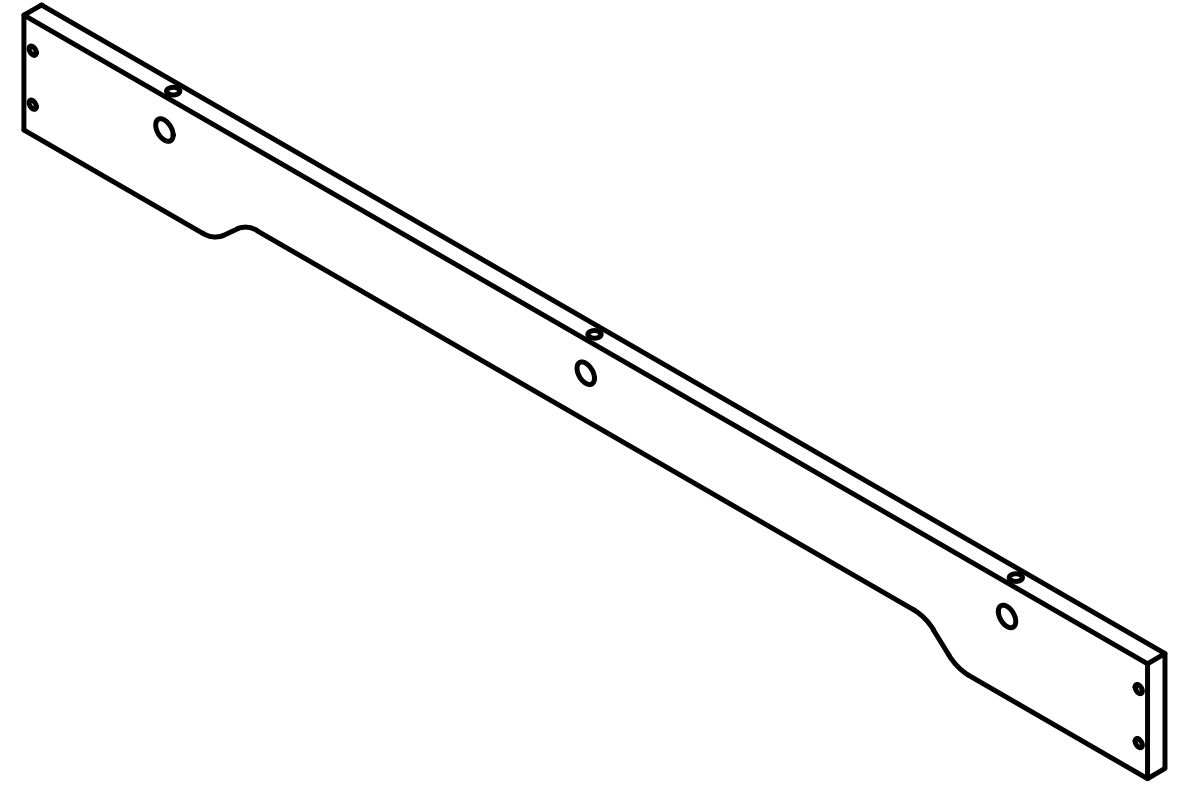


Ax1

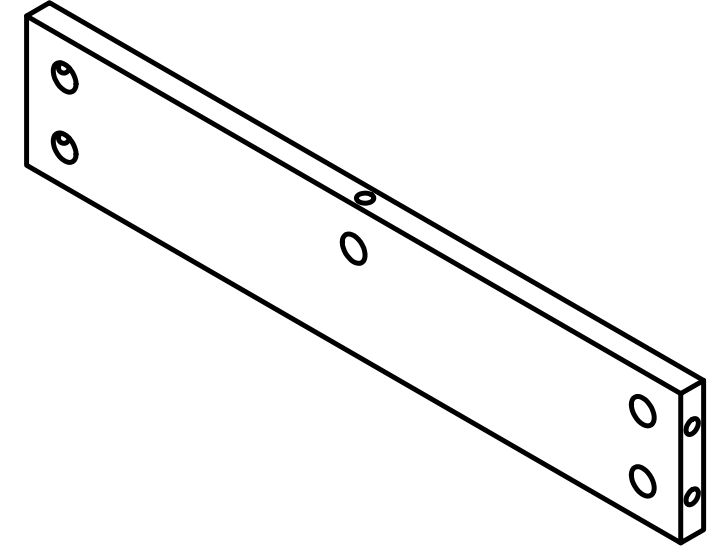


Bx2

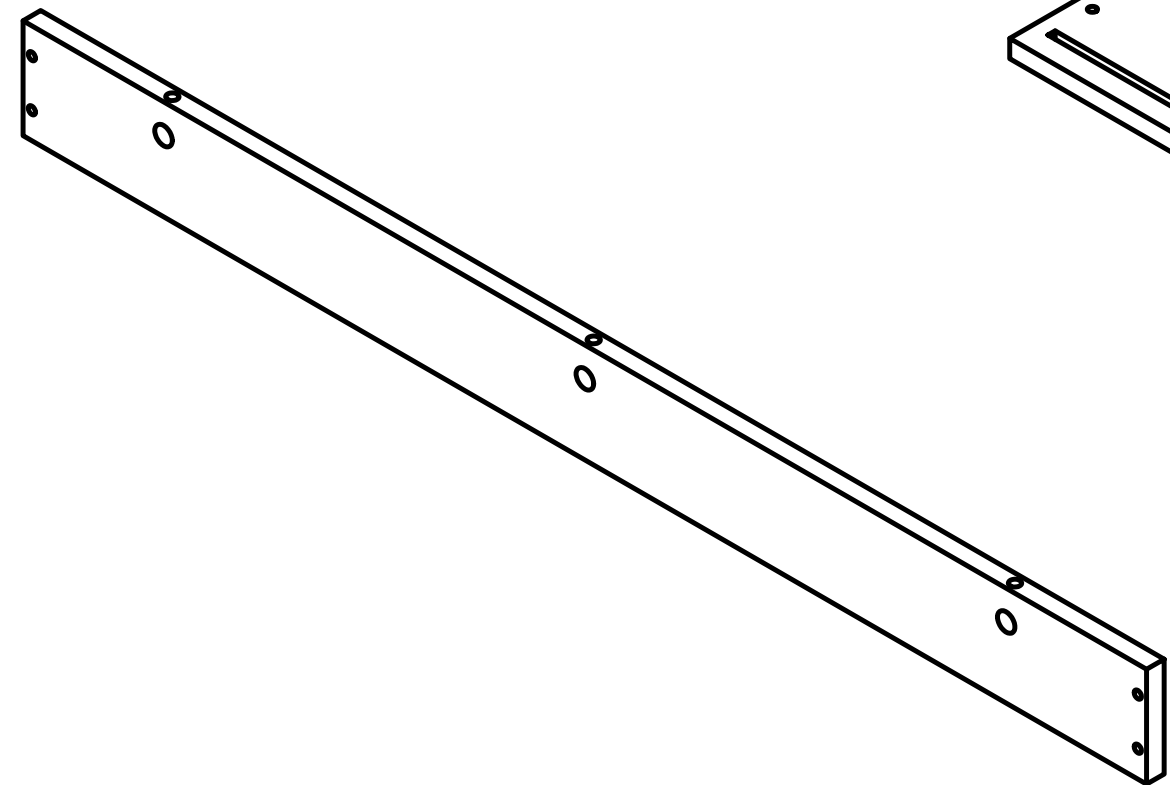


Cx1

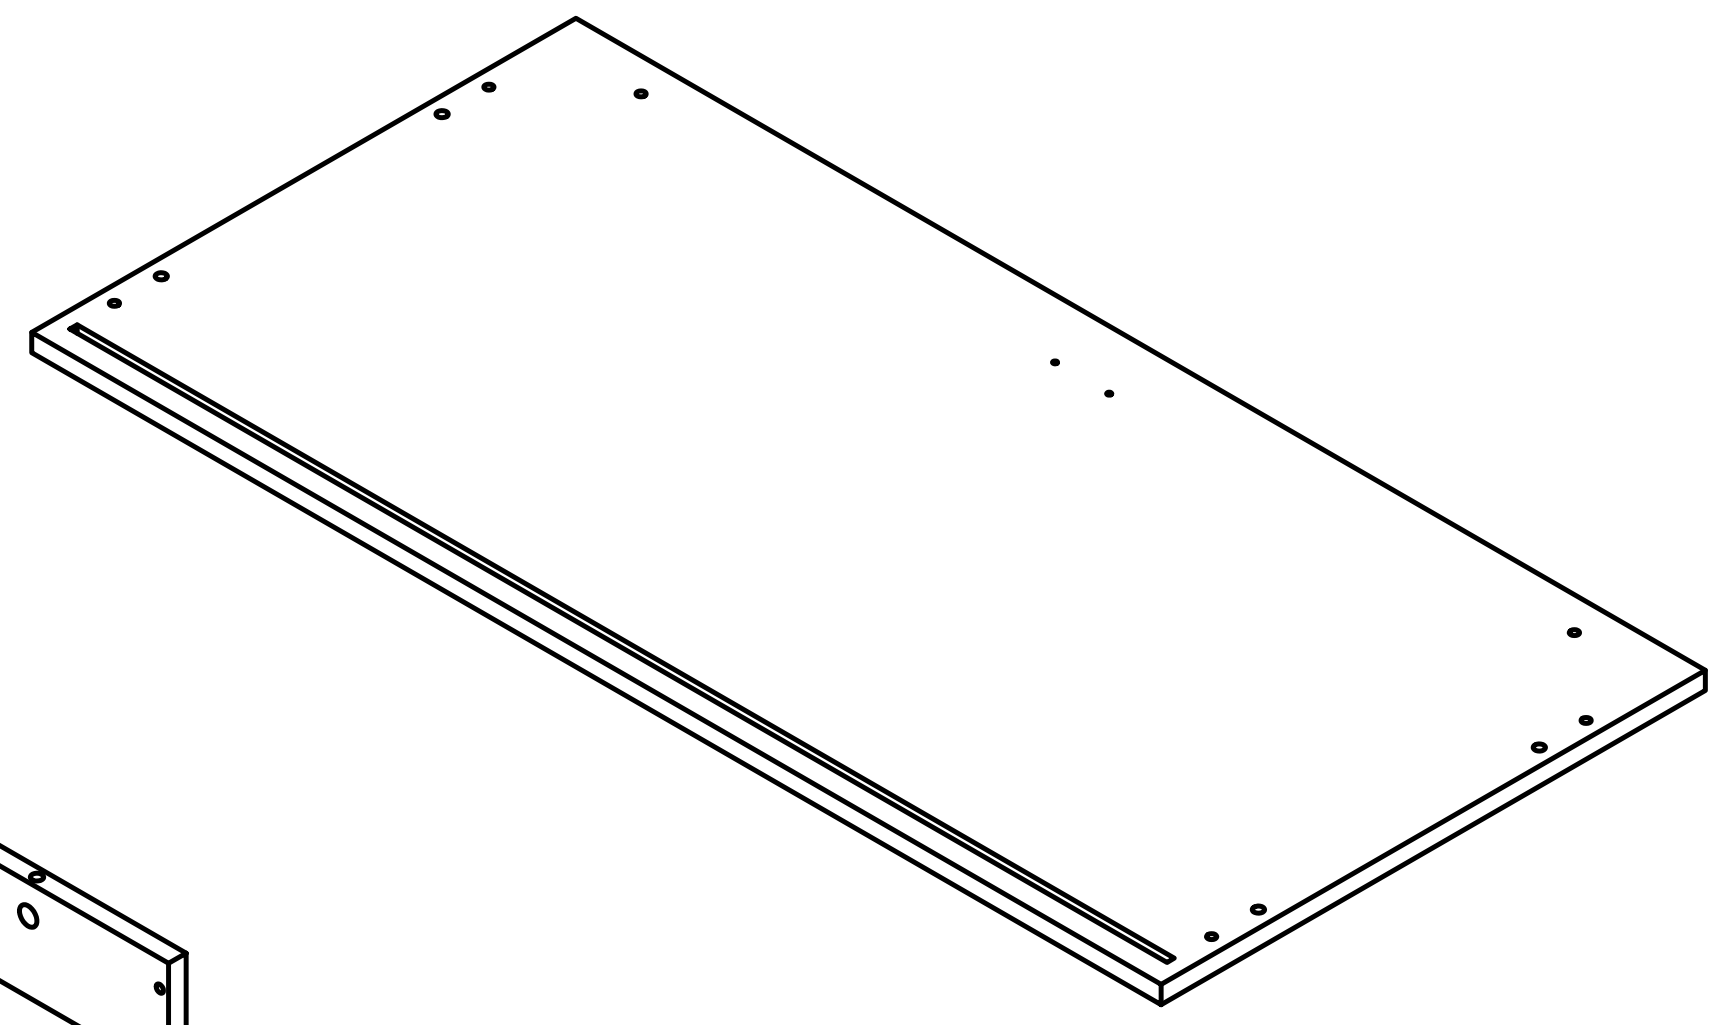


Dx1

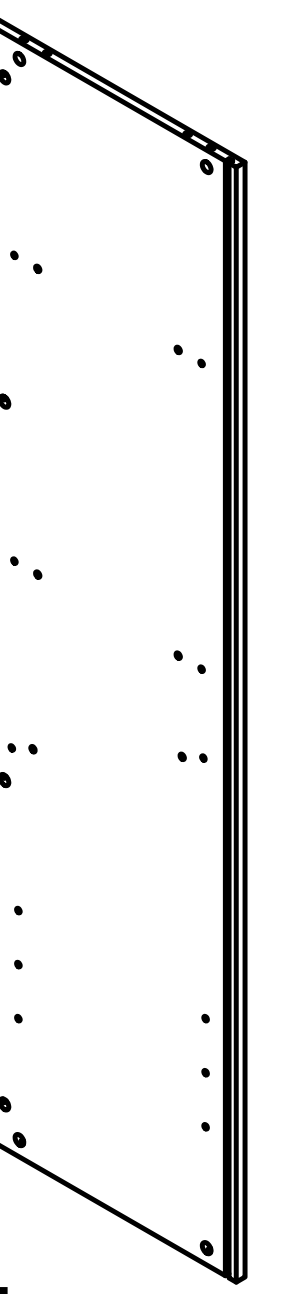


Ex1

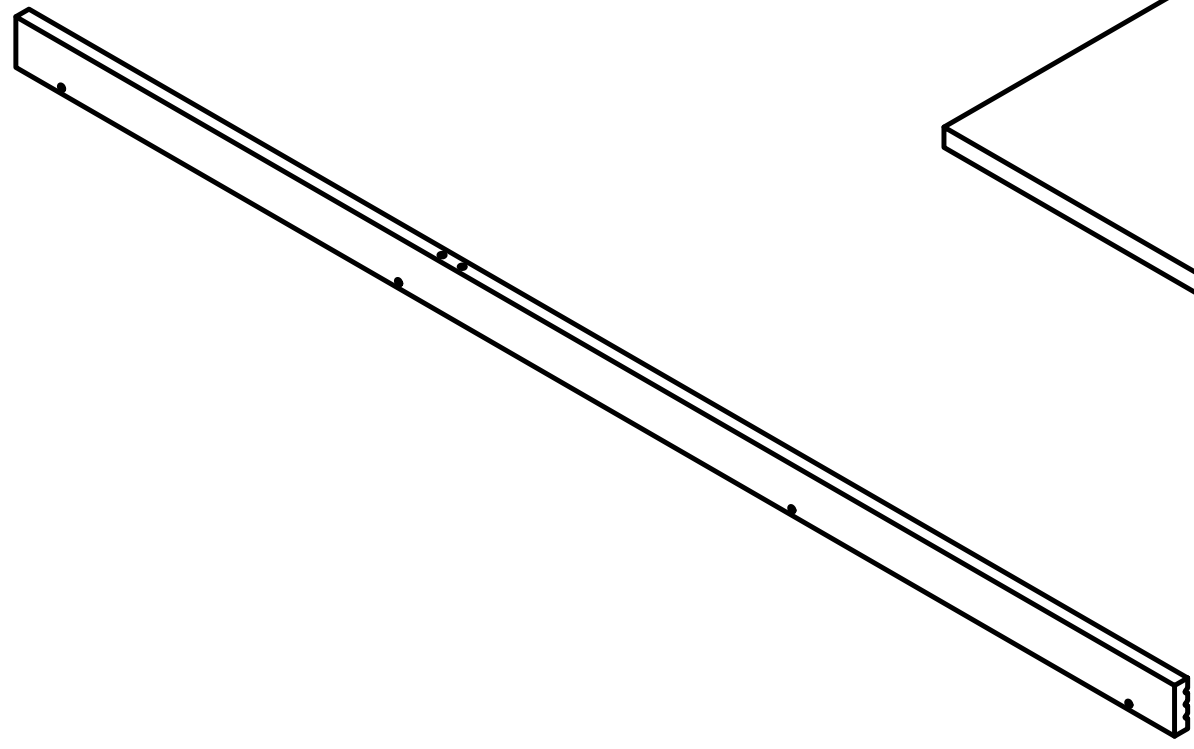


Fx1

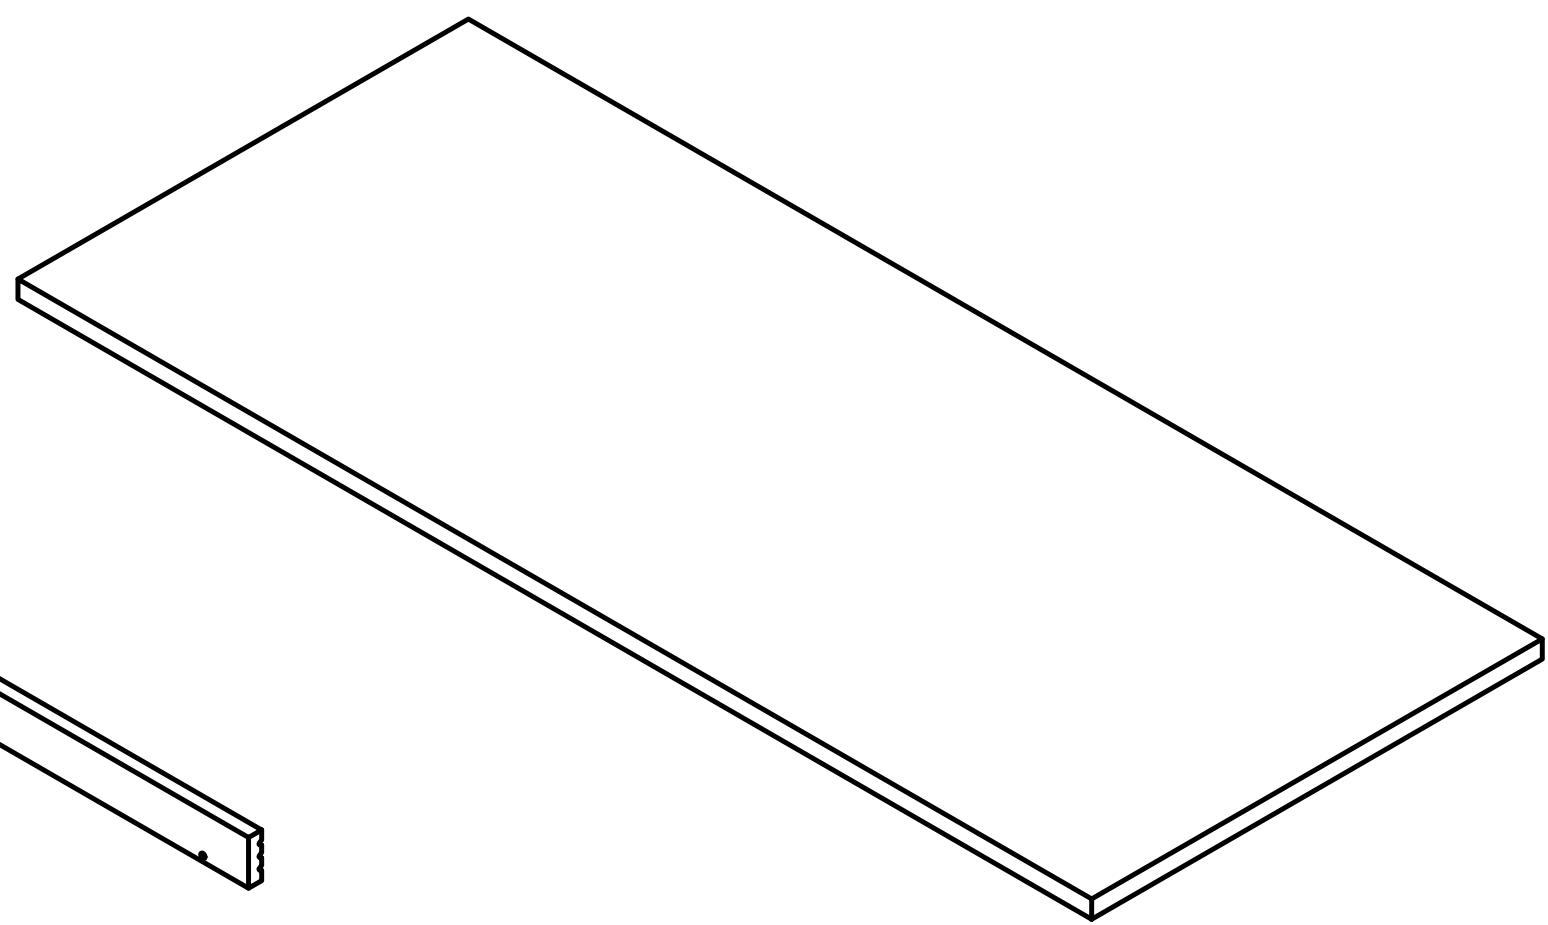


Gx1

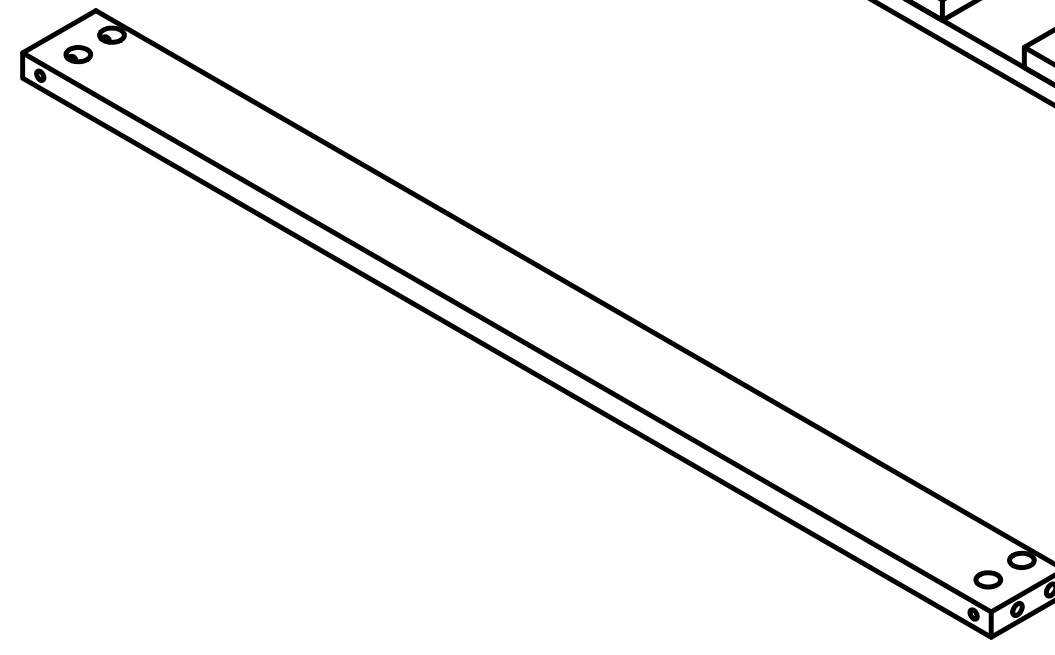


Hx1

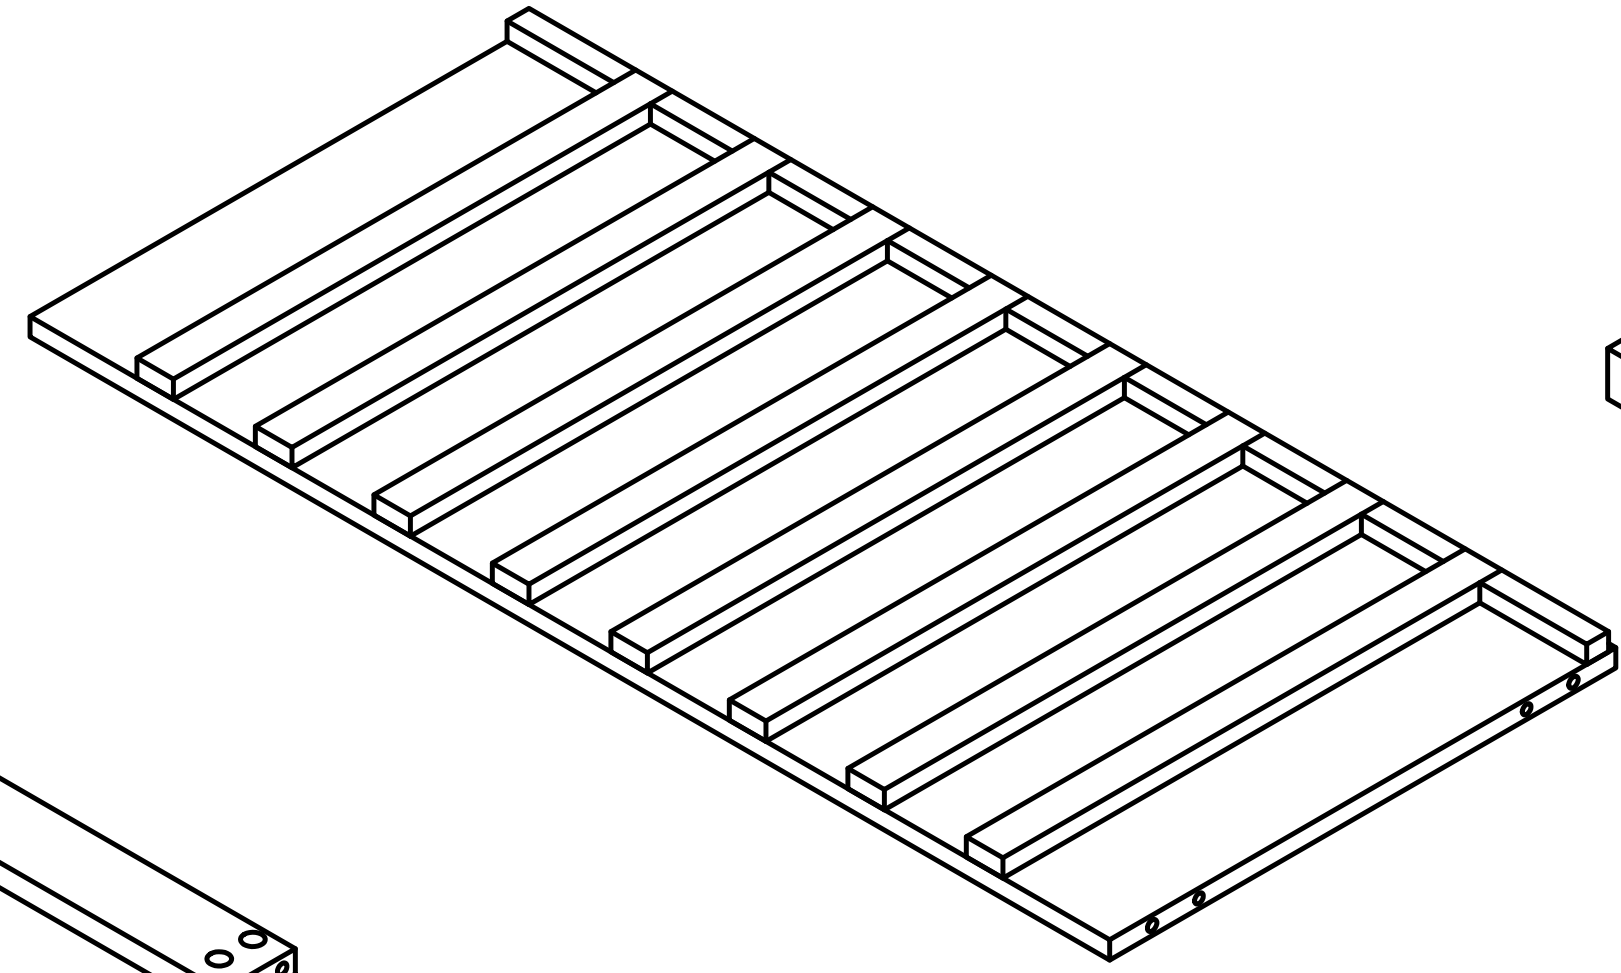


Ix1

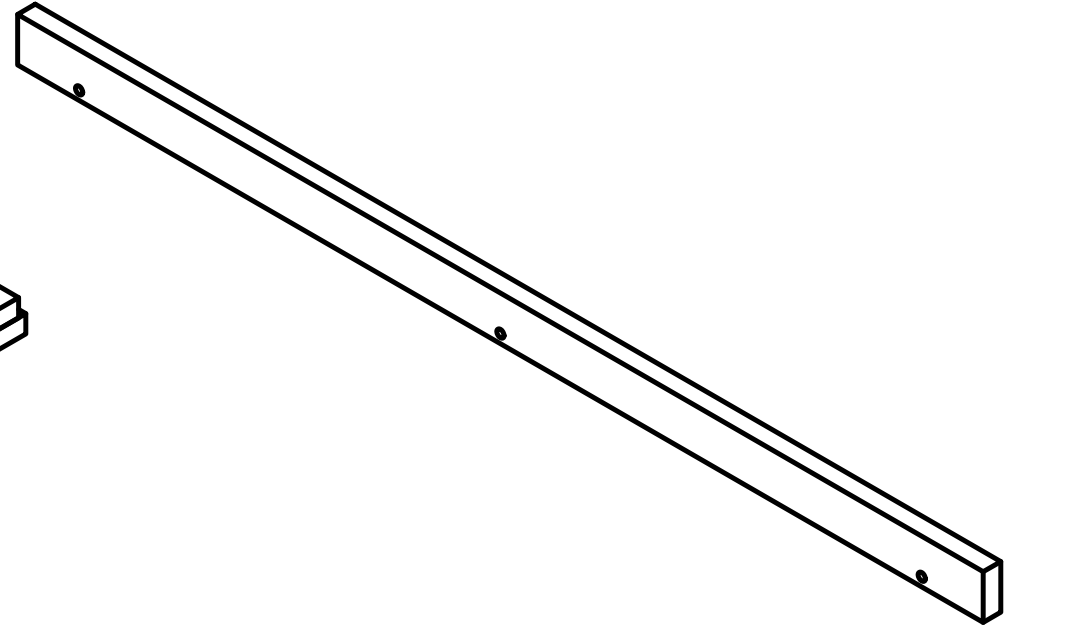


Jx2

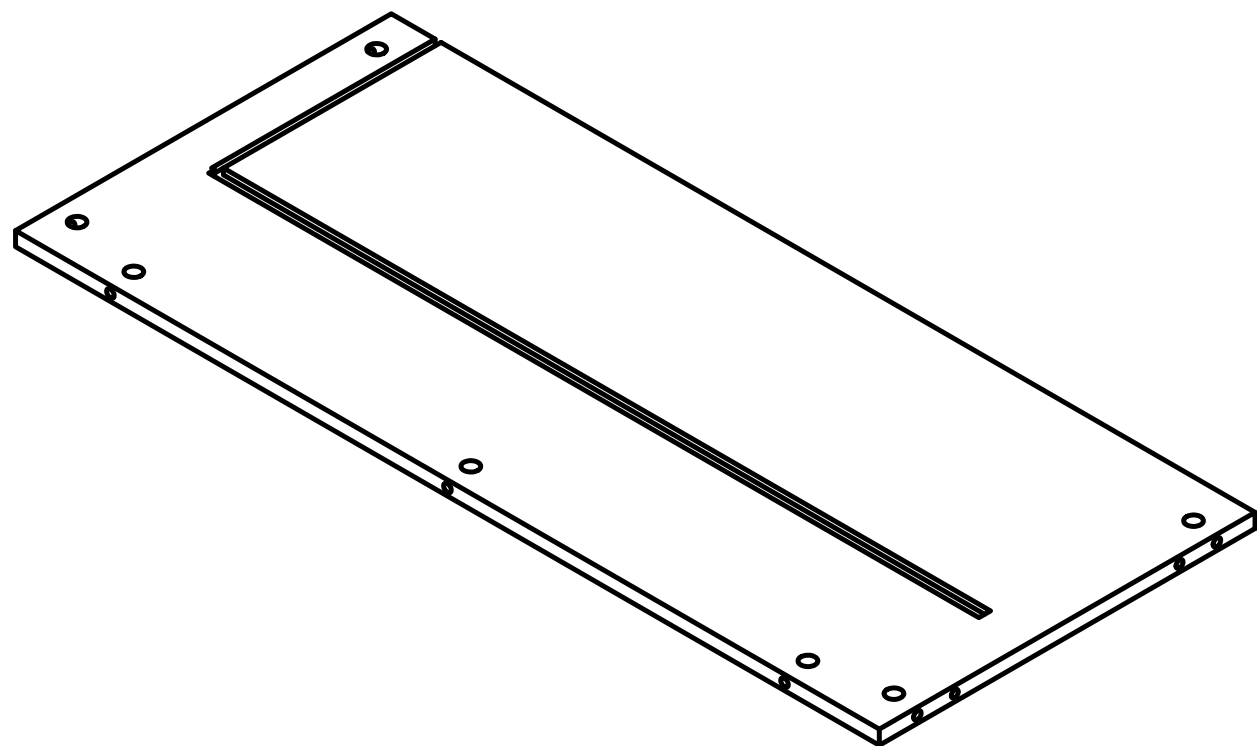


Kx2

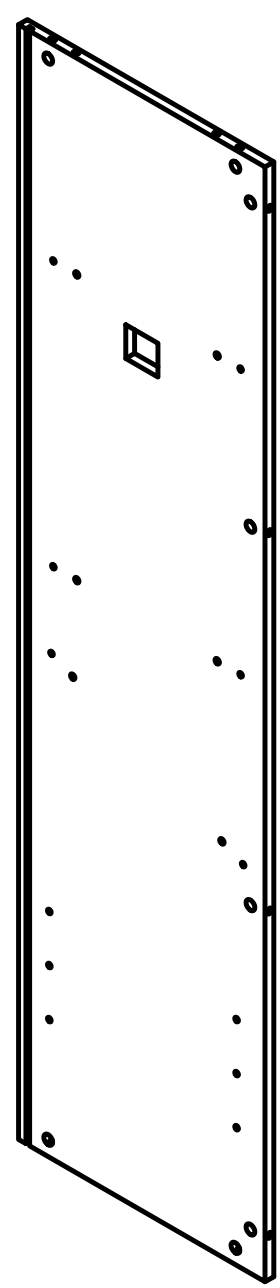


Lx1

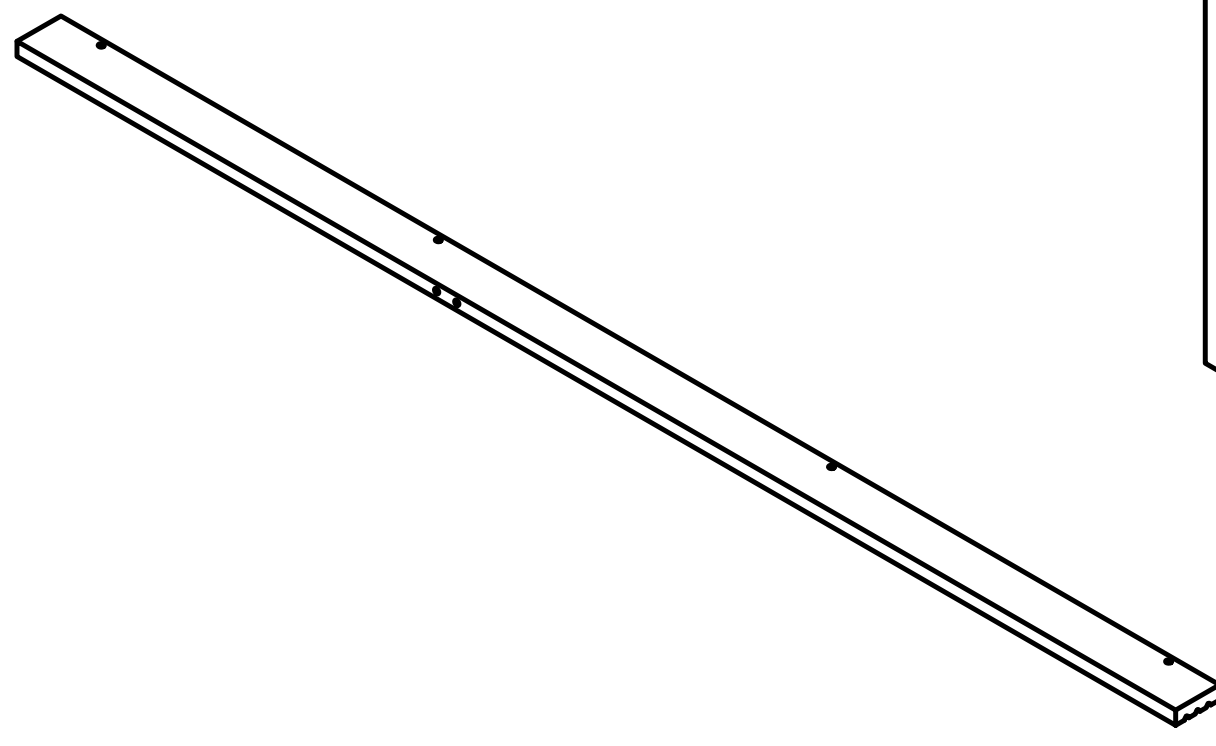


Mx1

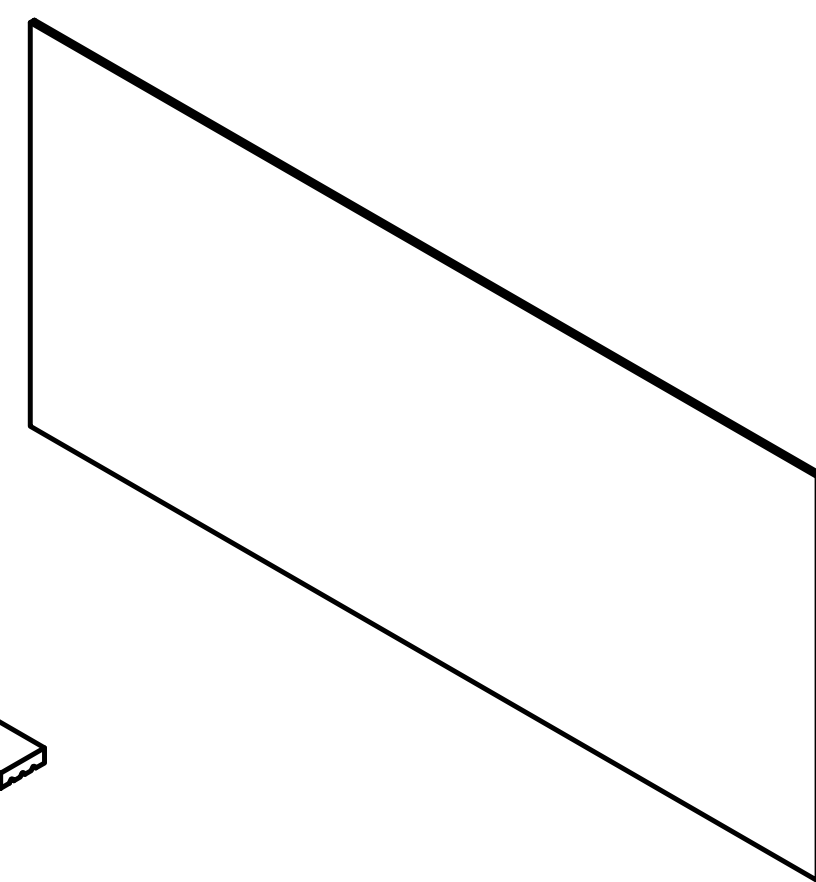


N₁x2

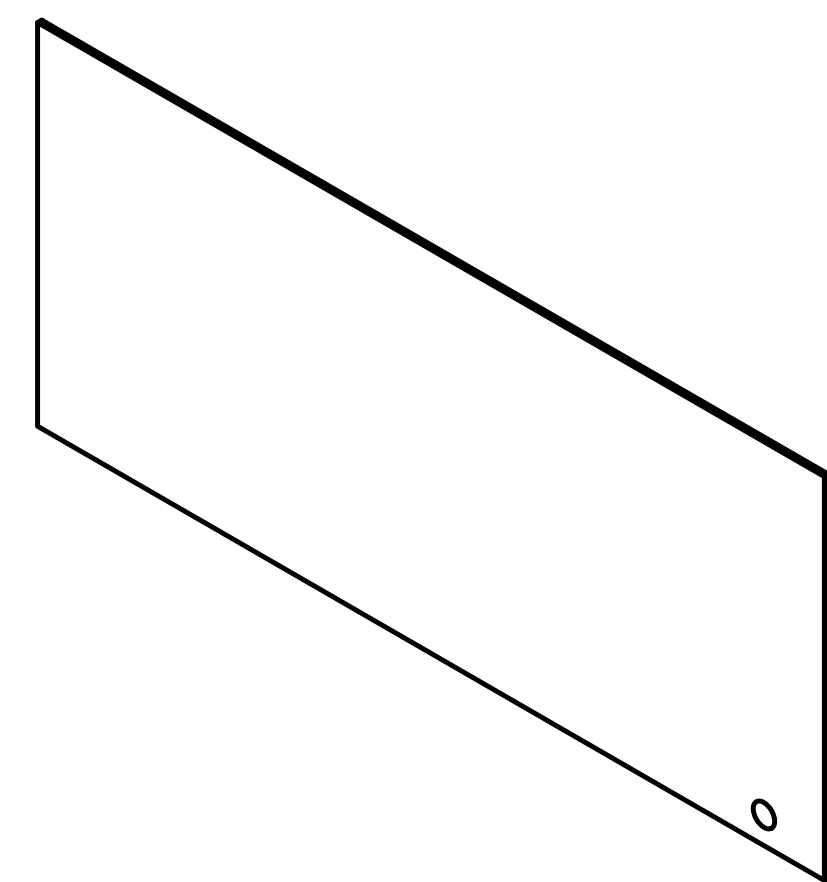


N₂x1

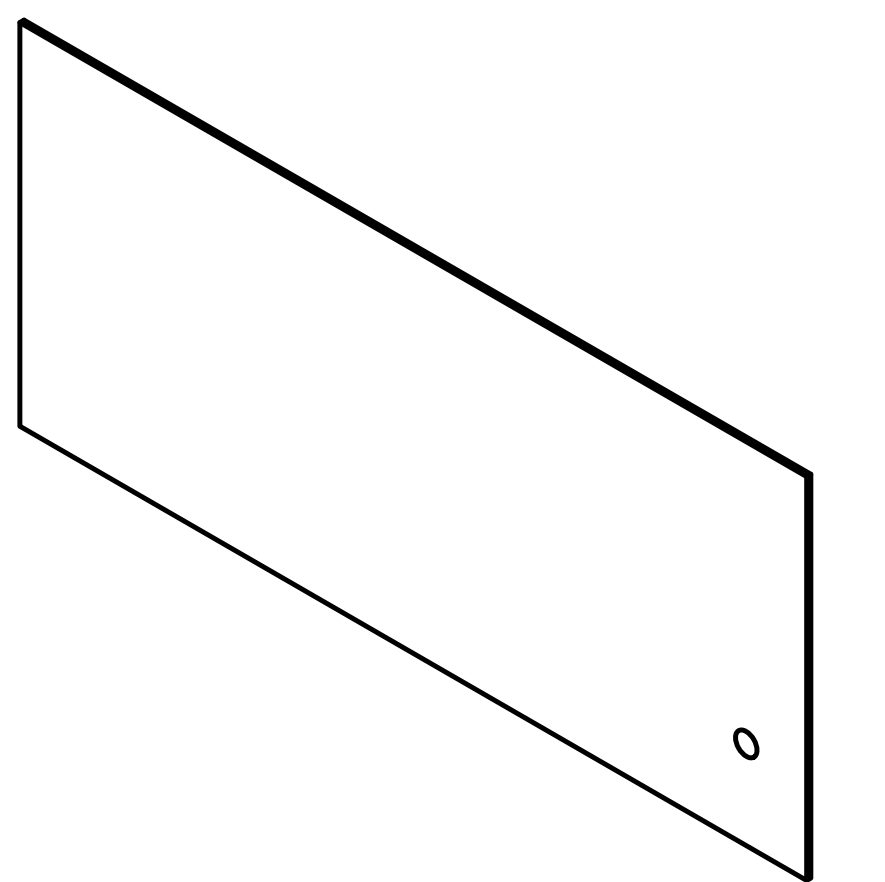


N₃x1

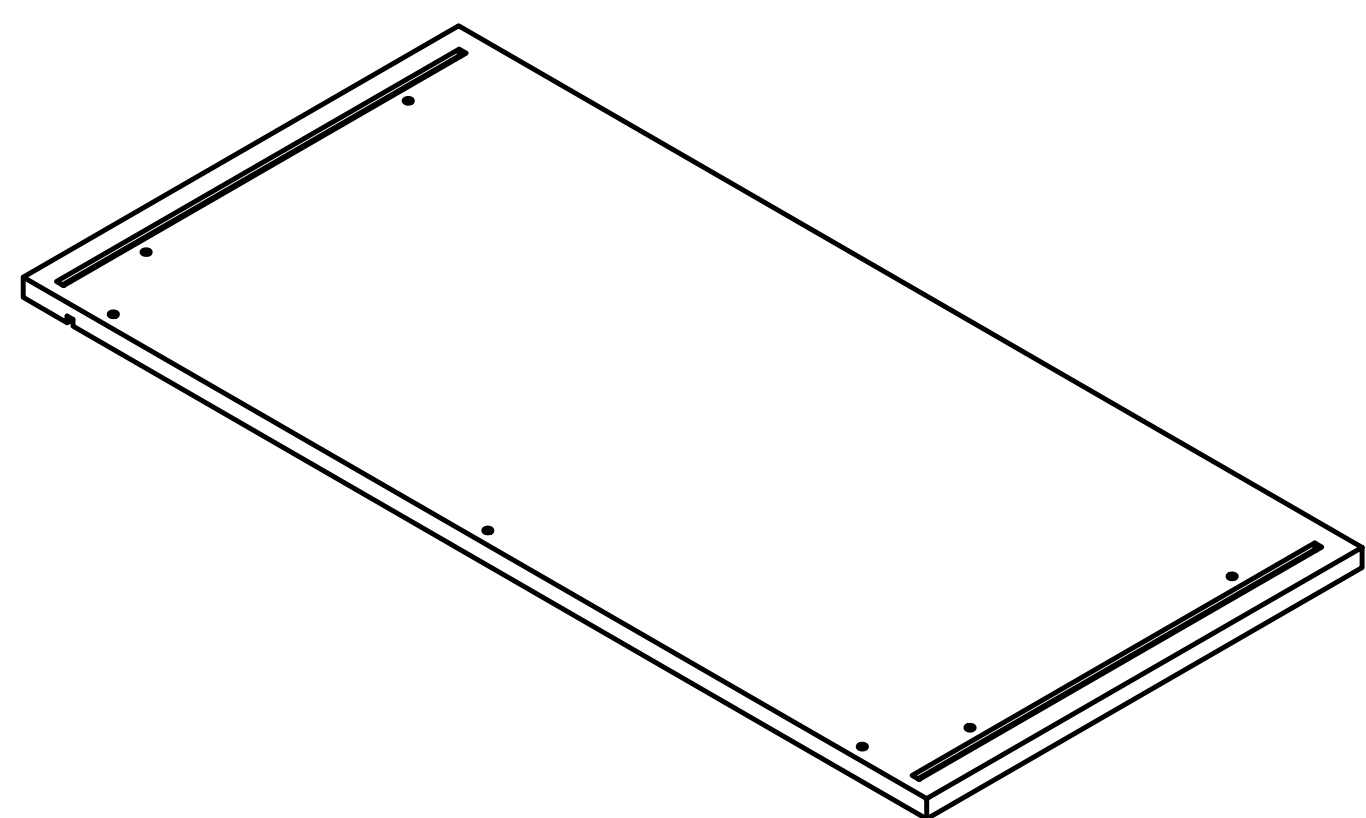


Ox1

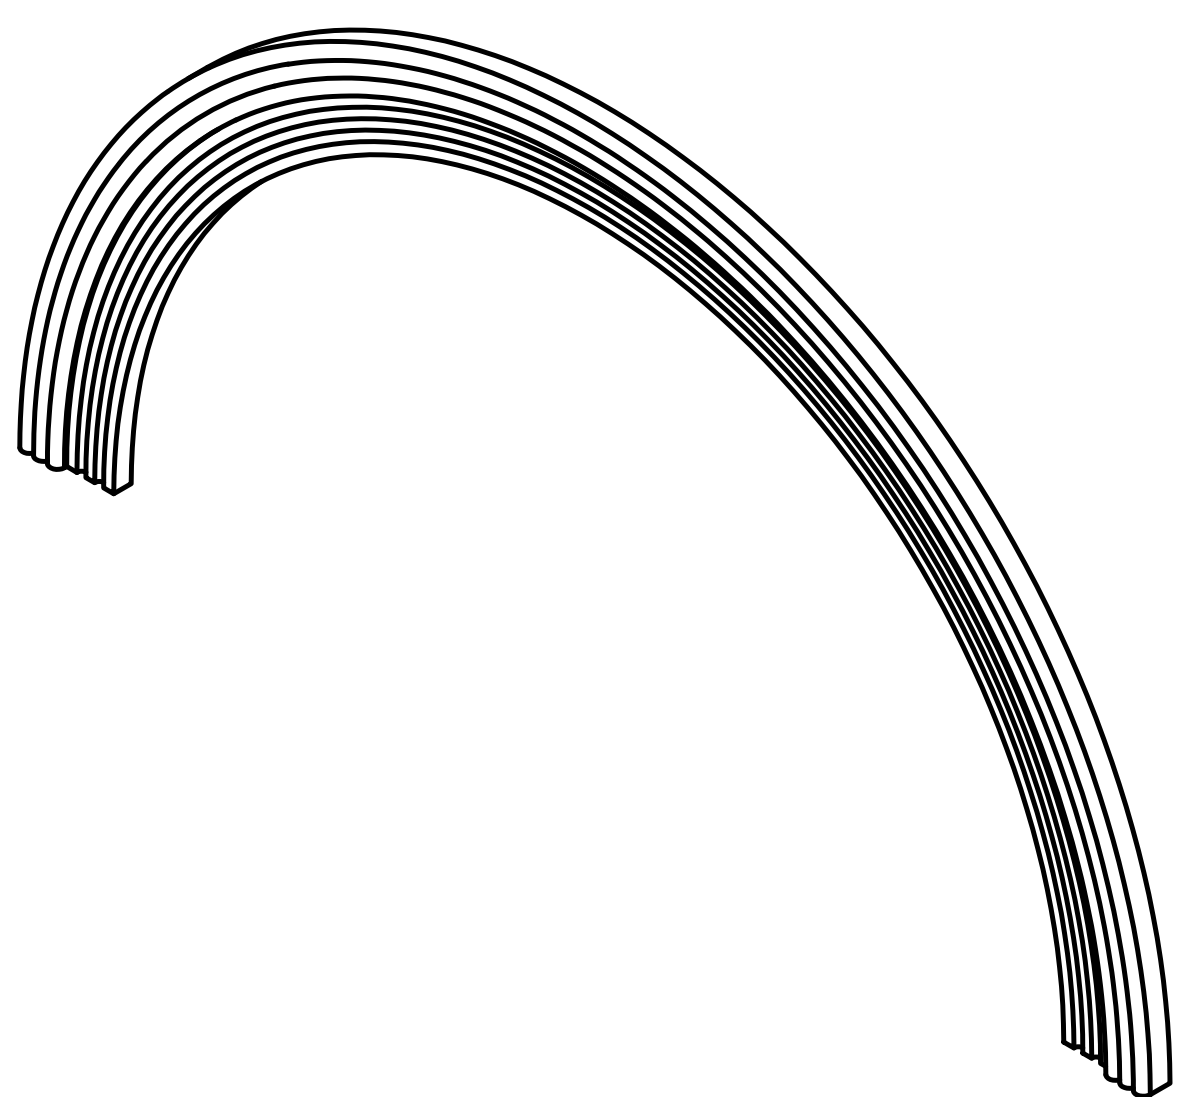


Px1

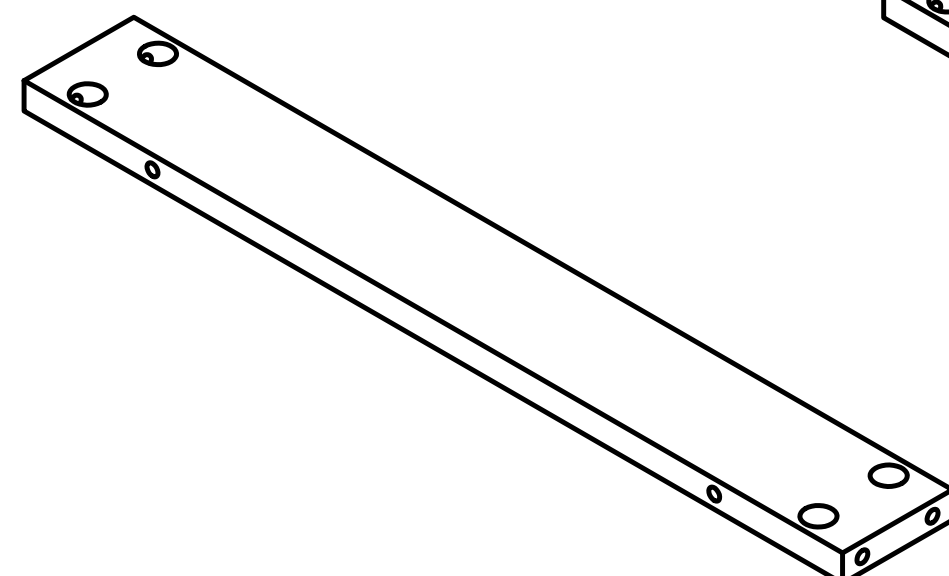


Qx2

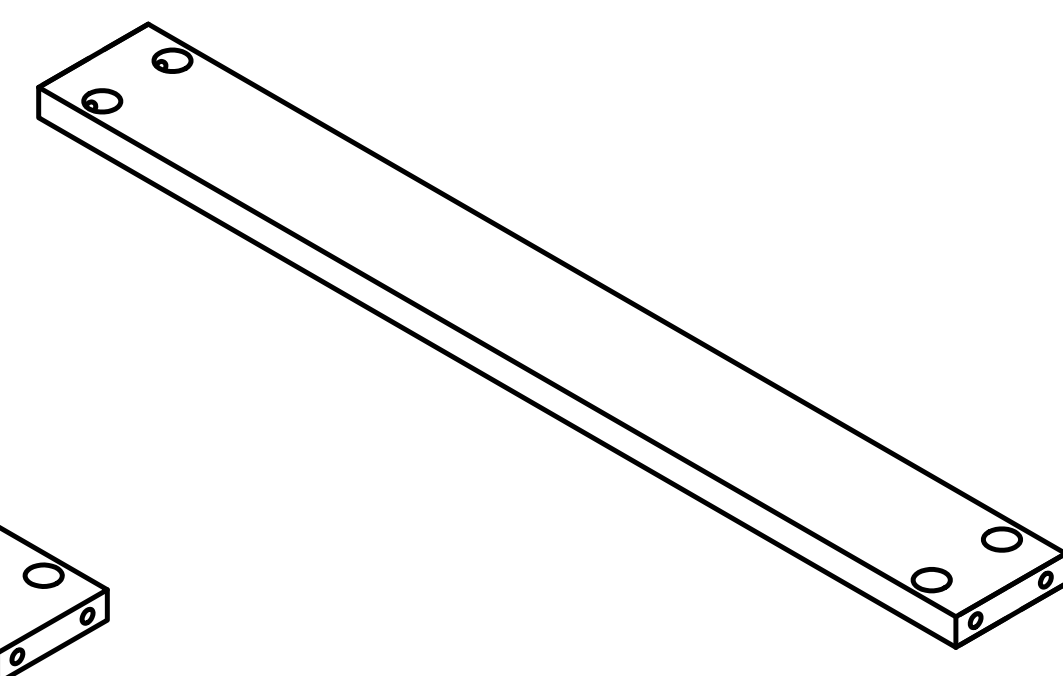


Rx1

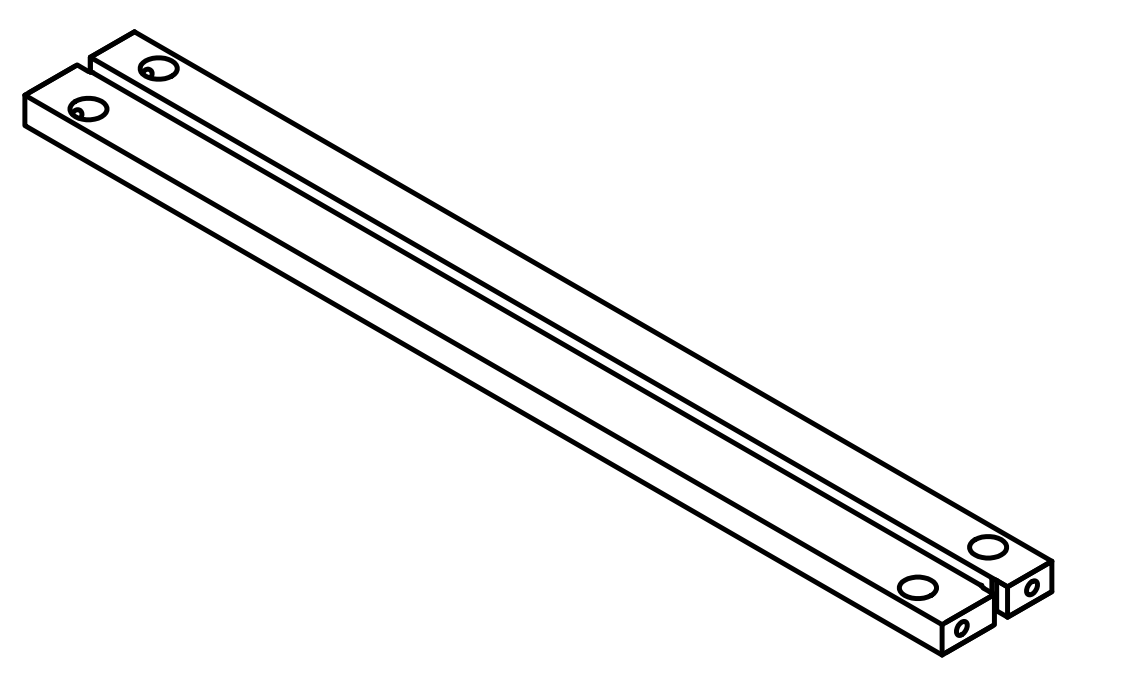


Sx1

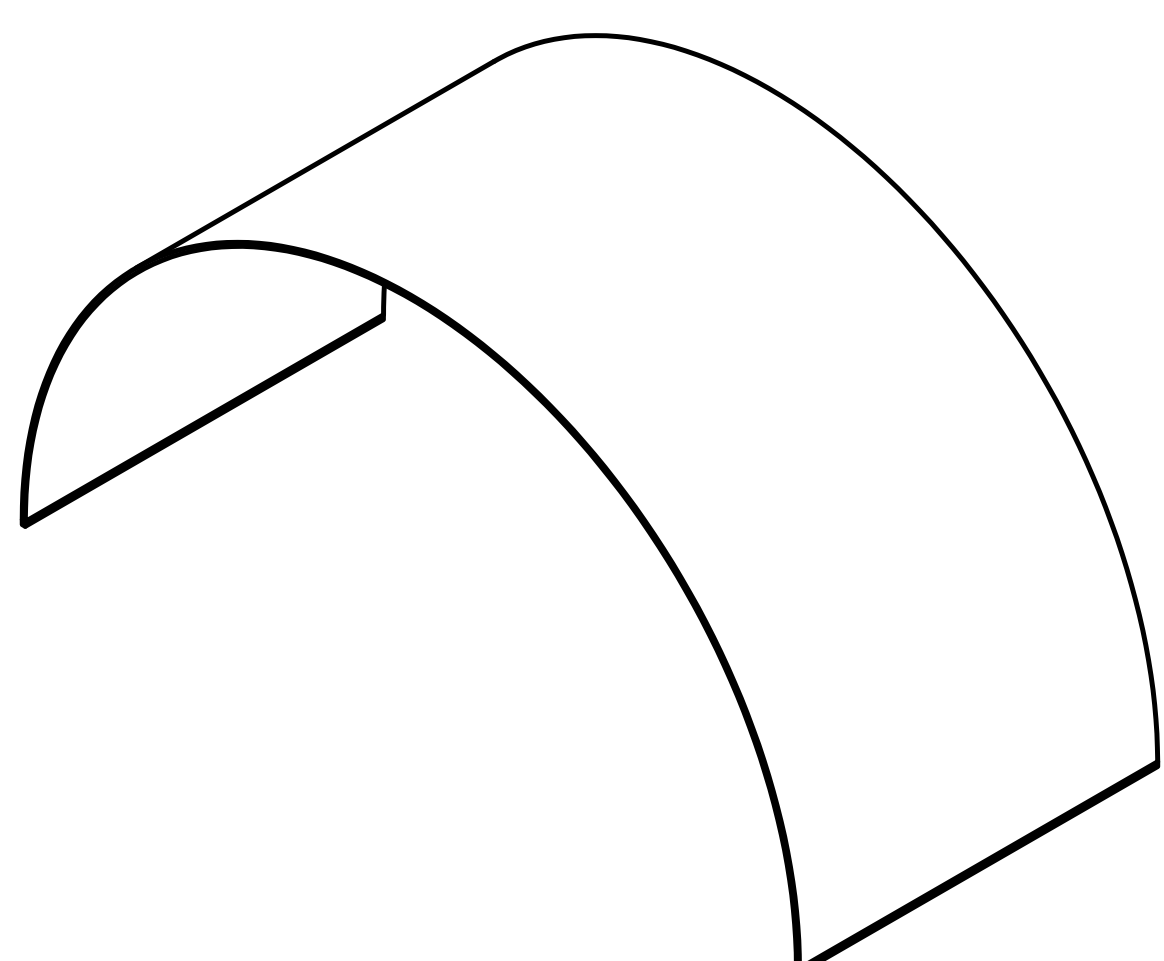


Tx1

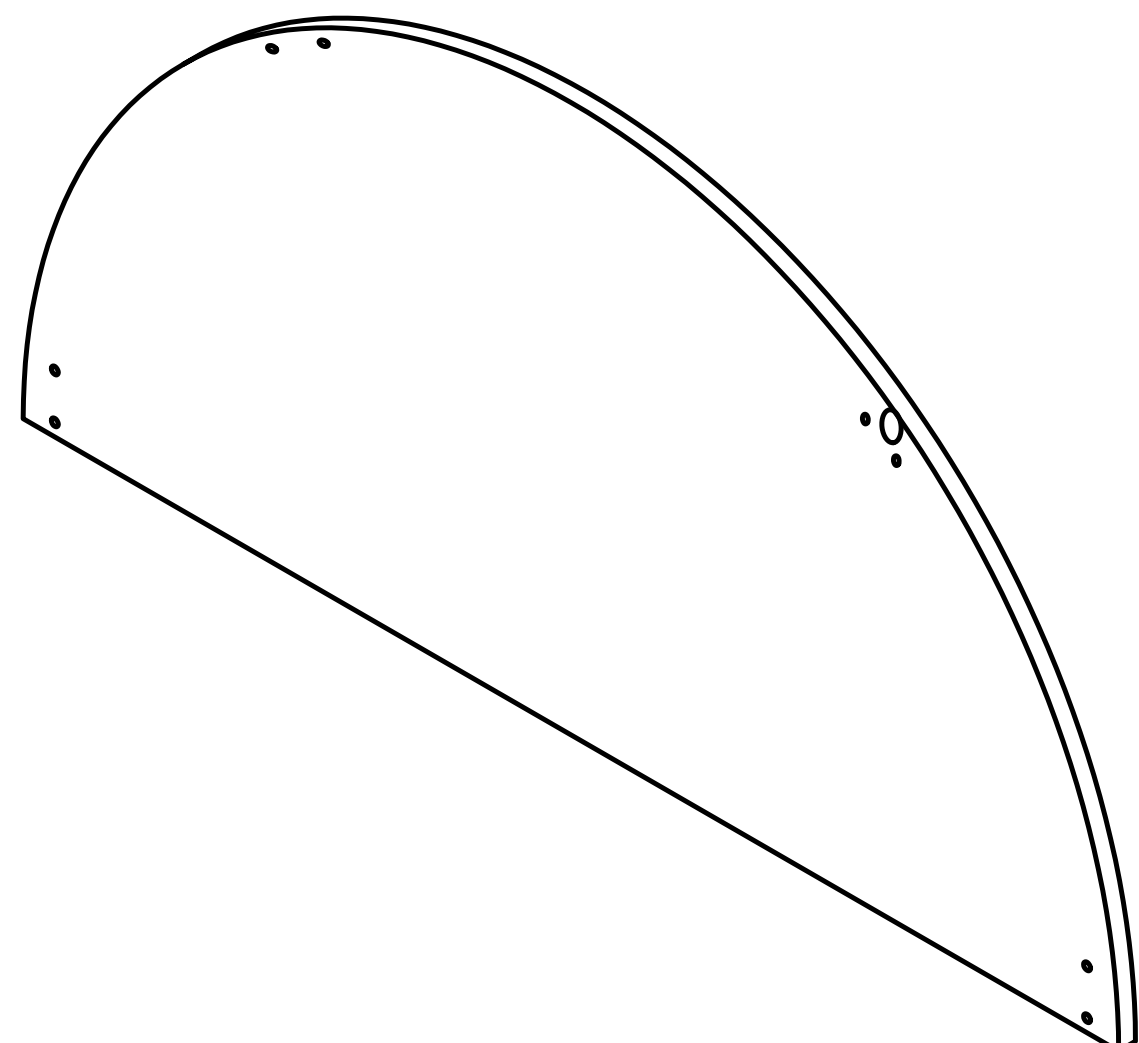

Ux1

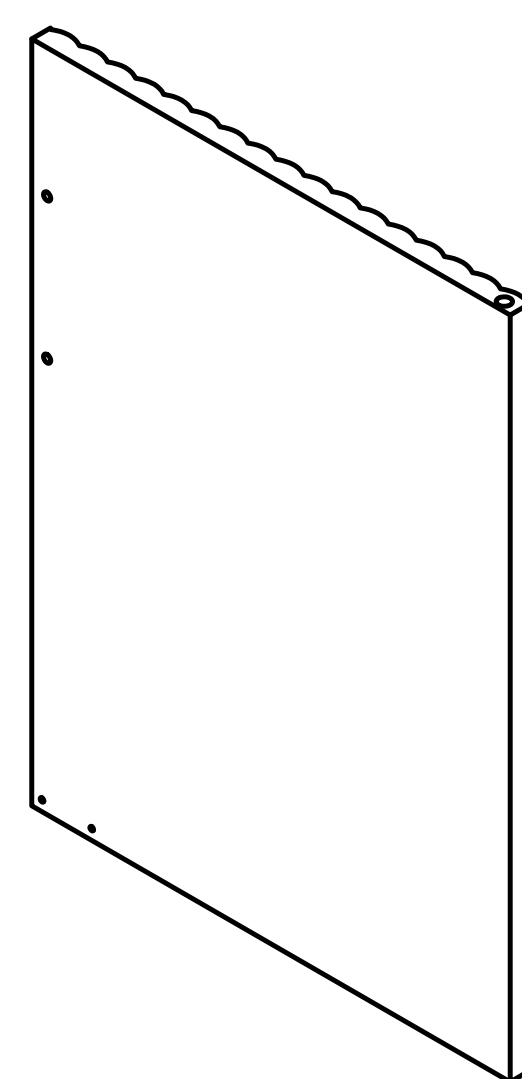

Vx1



















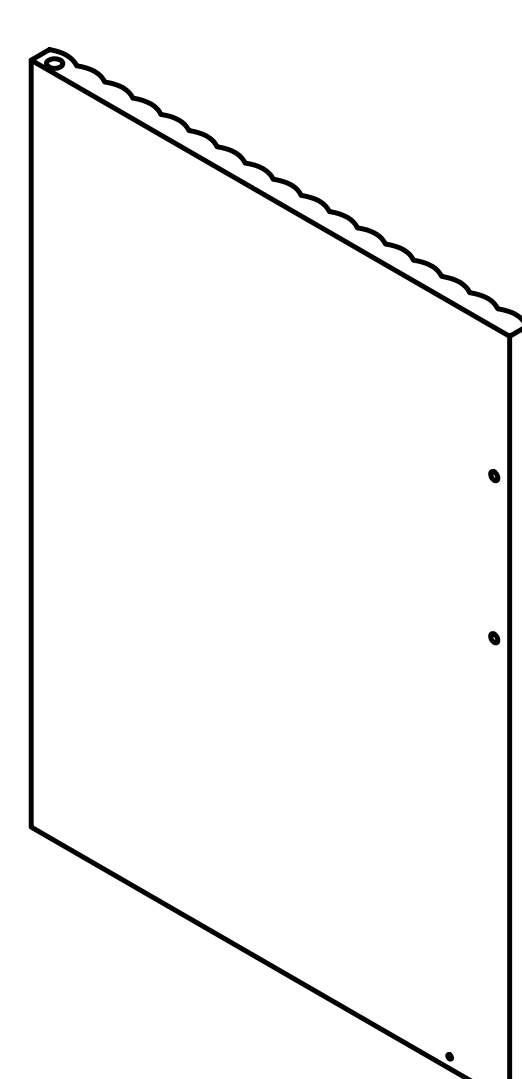


Wx1




1

Accessories list

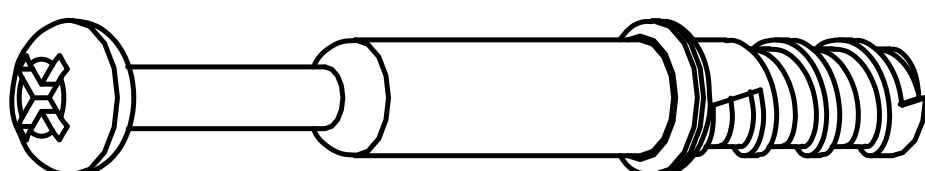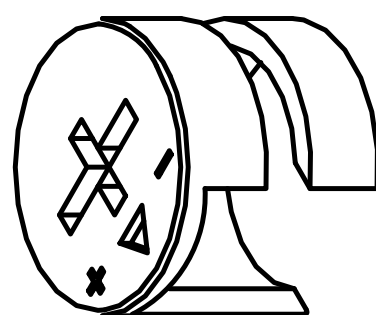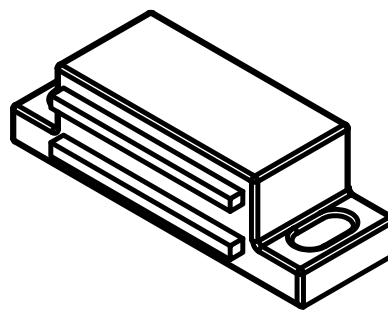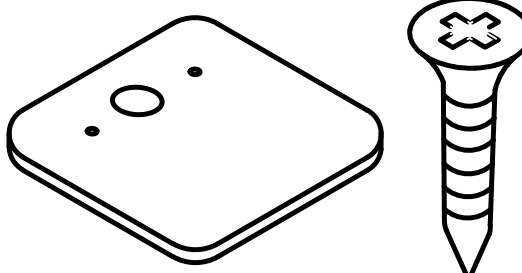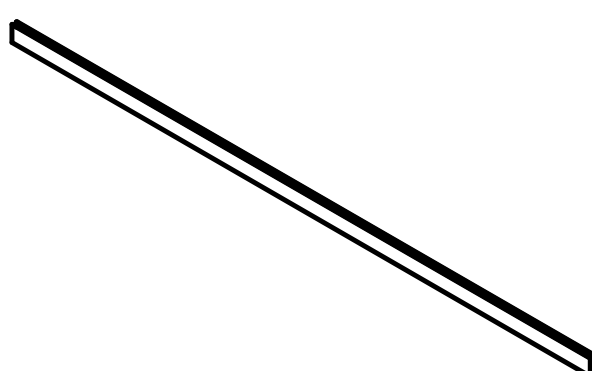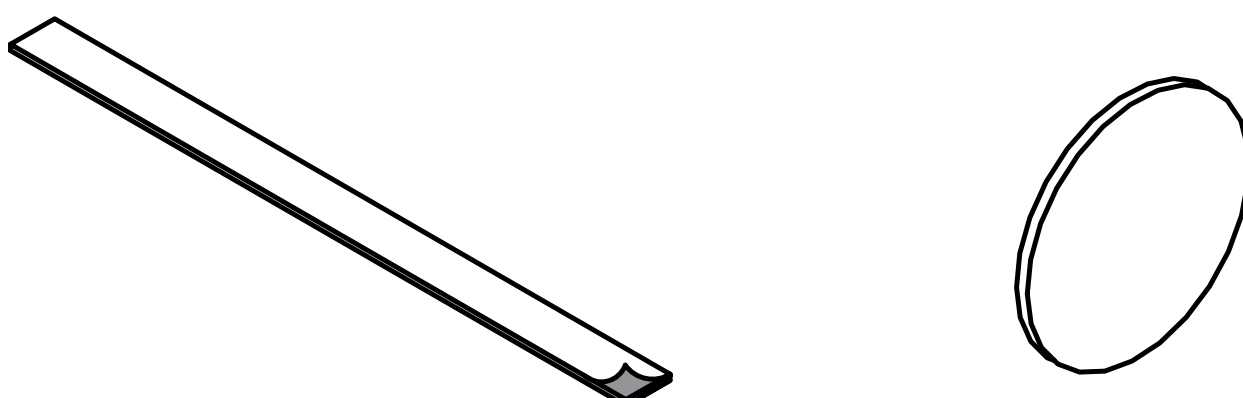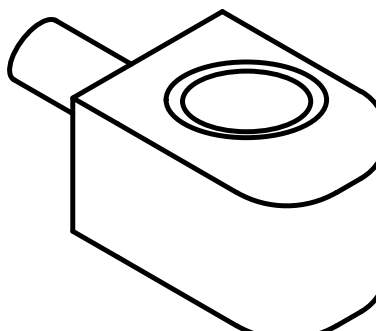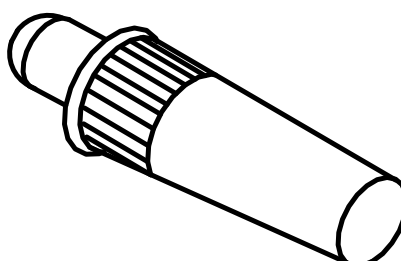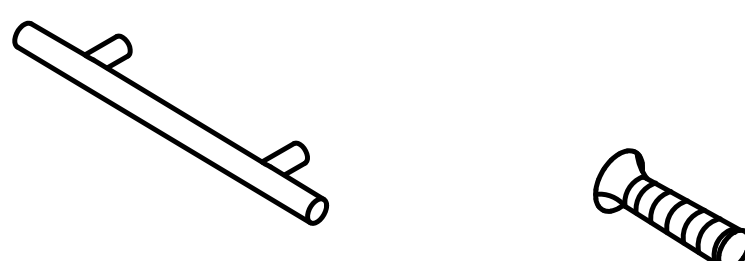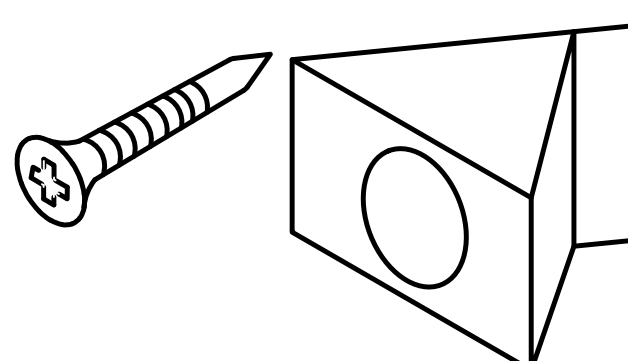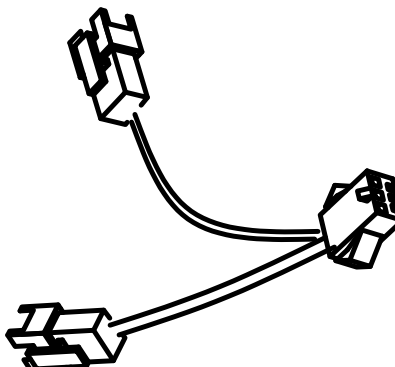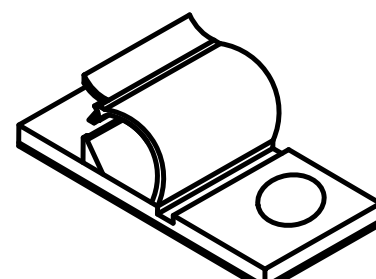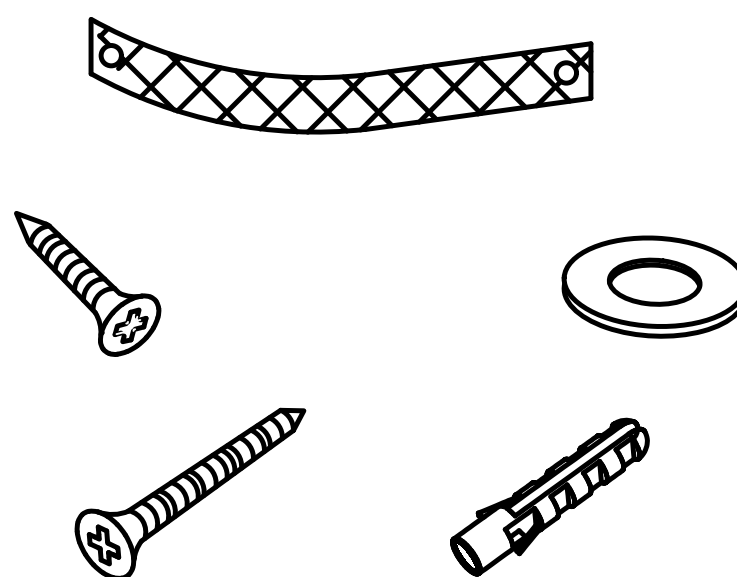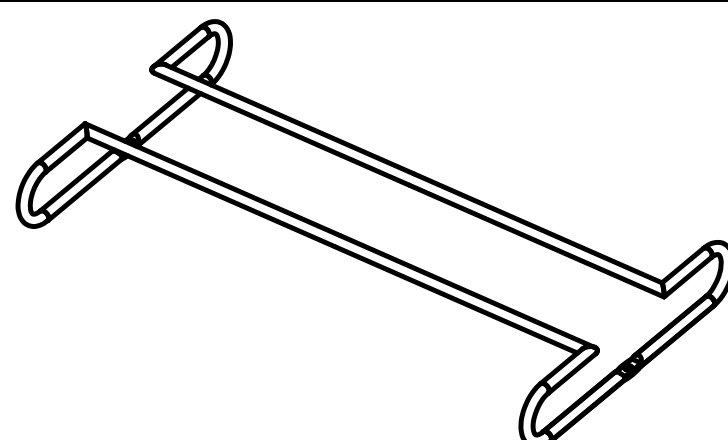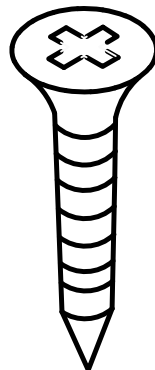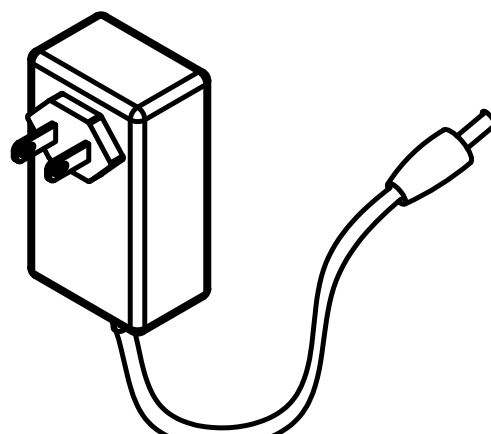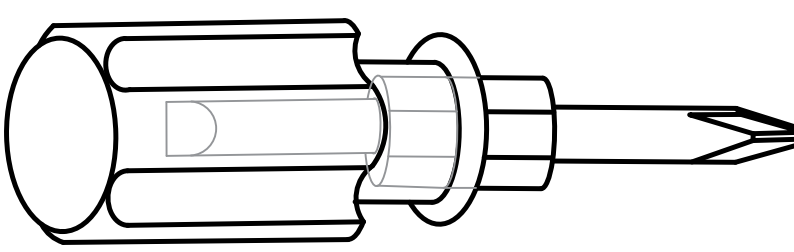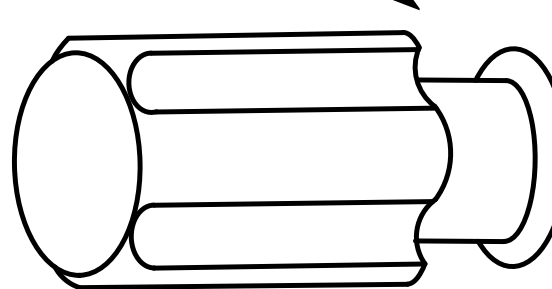
1			Two In One Screw (6x28mm)		77pcs +7pcs			
2			Two In One Nut (10x12mm)		77pcs +7pcs			
3			Wood Chipping (6x30mm)		20pcs +2pcs			
4			Non-slip pads		8pcs +2pcs			
5			Magnetic Attraction & Screw (3x12mm)		1pcs	2pcs +1pcs	2pcs	2pcs +1pcs
6			Backboard card strip		3pcs			
7			Wire		1pcs			
8			Sticker (Ø20mm)		1pcs	4pcs +2pcs		
9			Shelf support		4pcs +1pcs			
10			Door shaft		4pcs			
11			Handle & screw (4x22mm)		2pcs	4pcs +2pcs		
12			Fixing clip & screw (3x16mm)		12pcs +2pcs			
13			Forked line		2pcs			
14			Wire Clamp		3pcs +1pcs			
15			anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)		1pcs			
					1pcs	2pcs		
					1pcs	1pcs		
16			Wine glass hanger & Screw (3x16mm)		4pcs	8pcs +2pcs		
			AC/DC Adapter(12V 3.0A) 1pcs		Double-head screwdriver, use as required 1pcs 			

Product structure decomposition

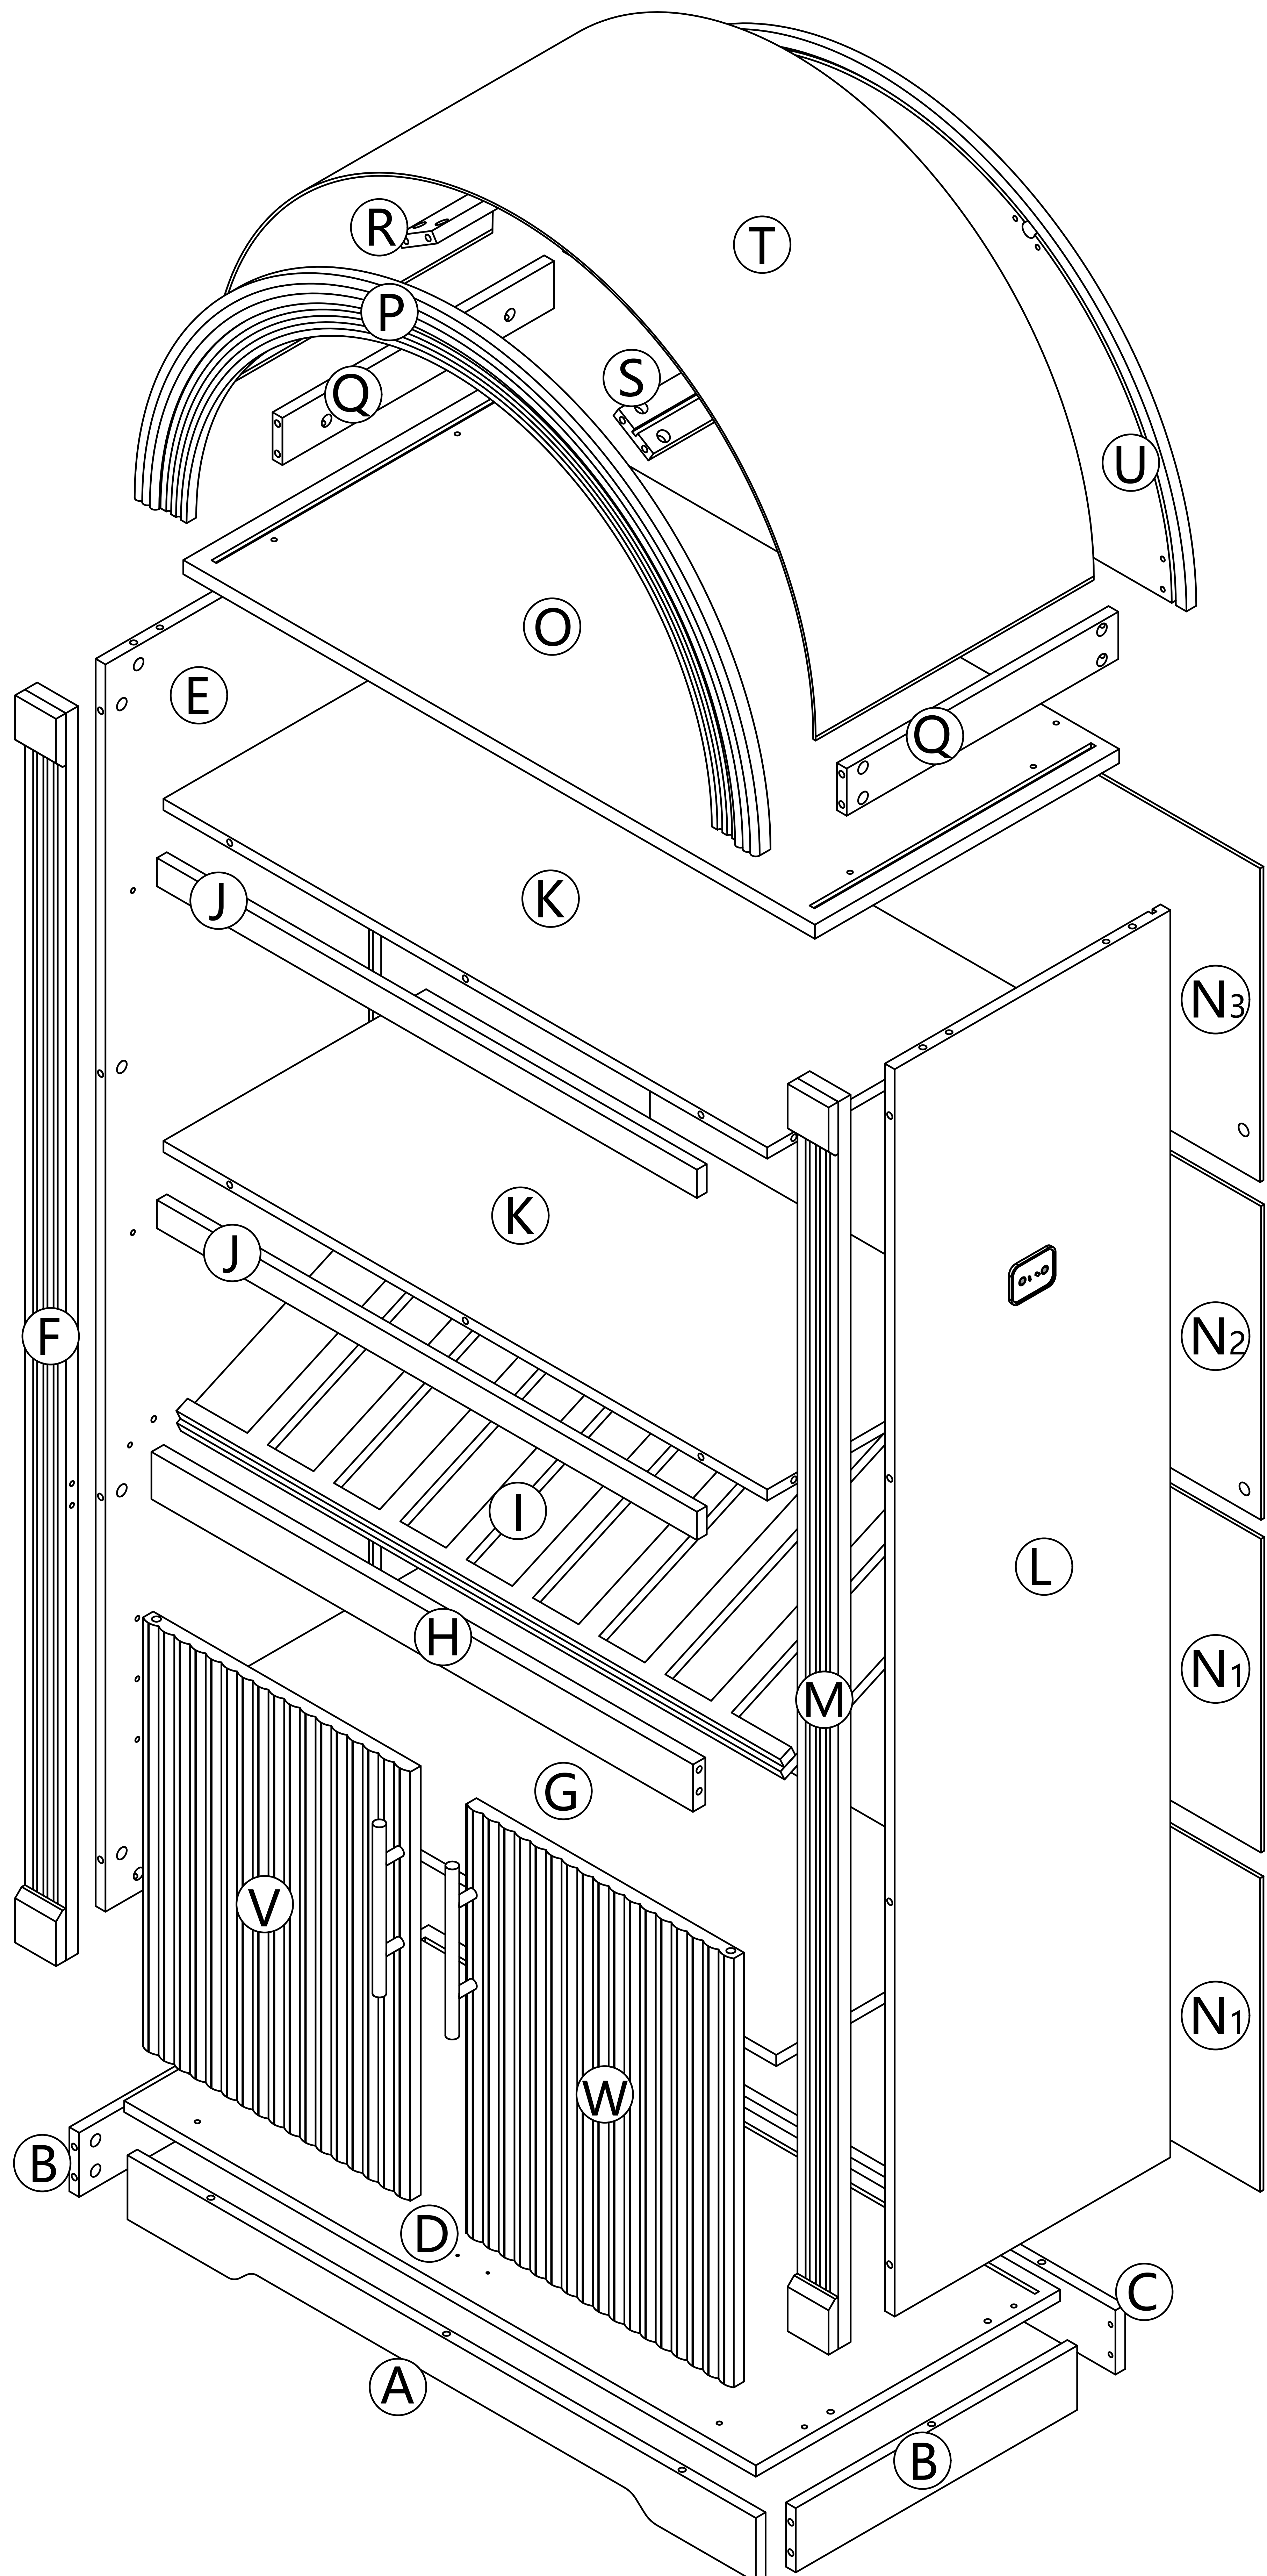


Screw installation method




Step1

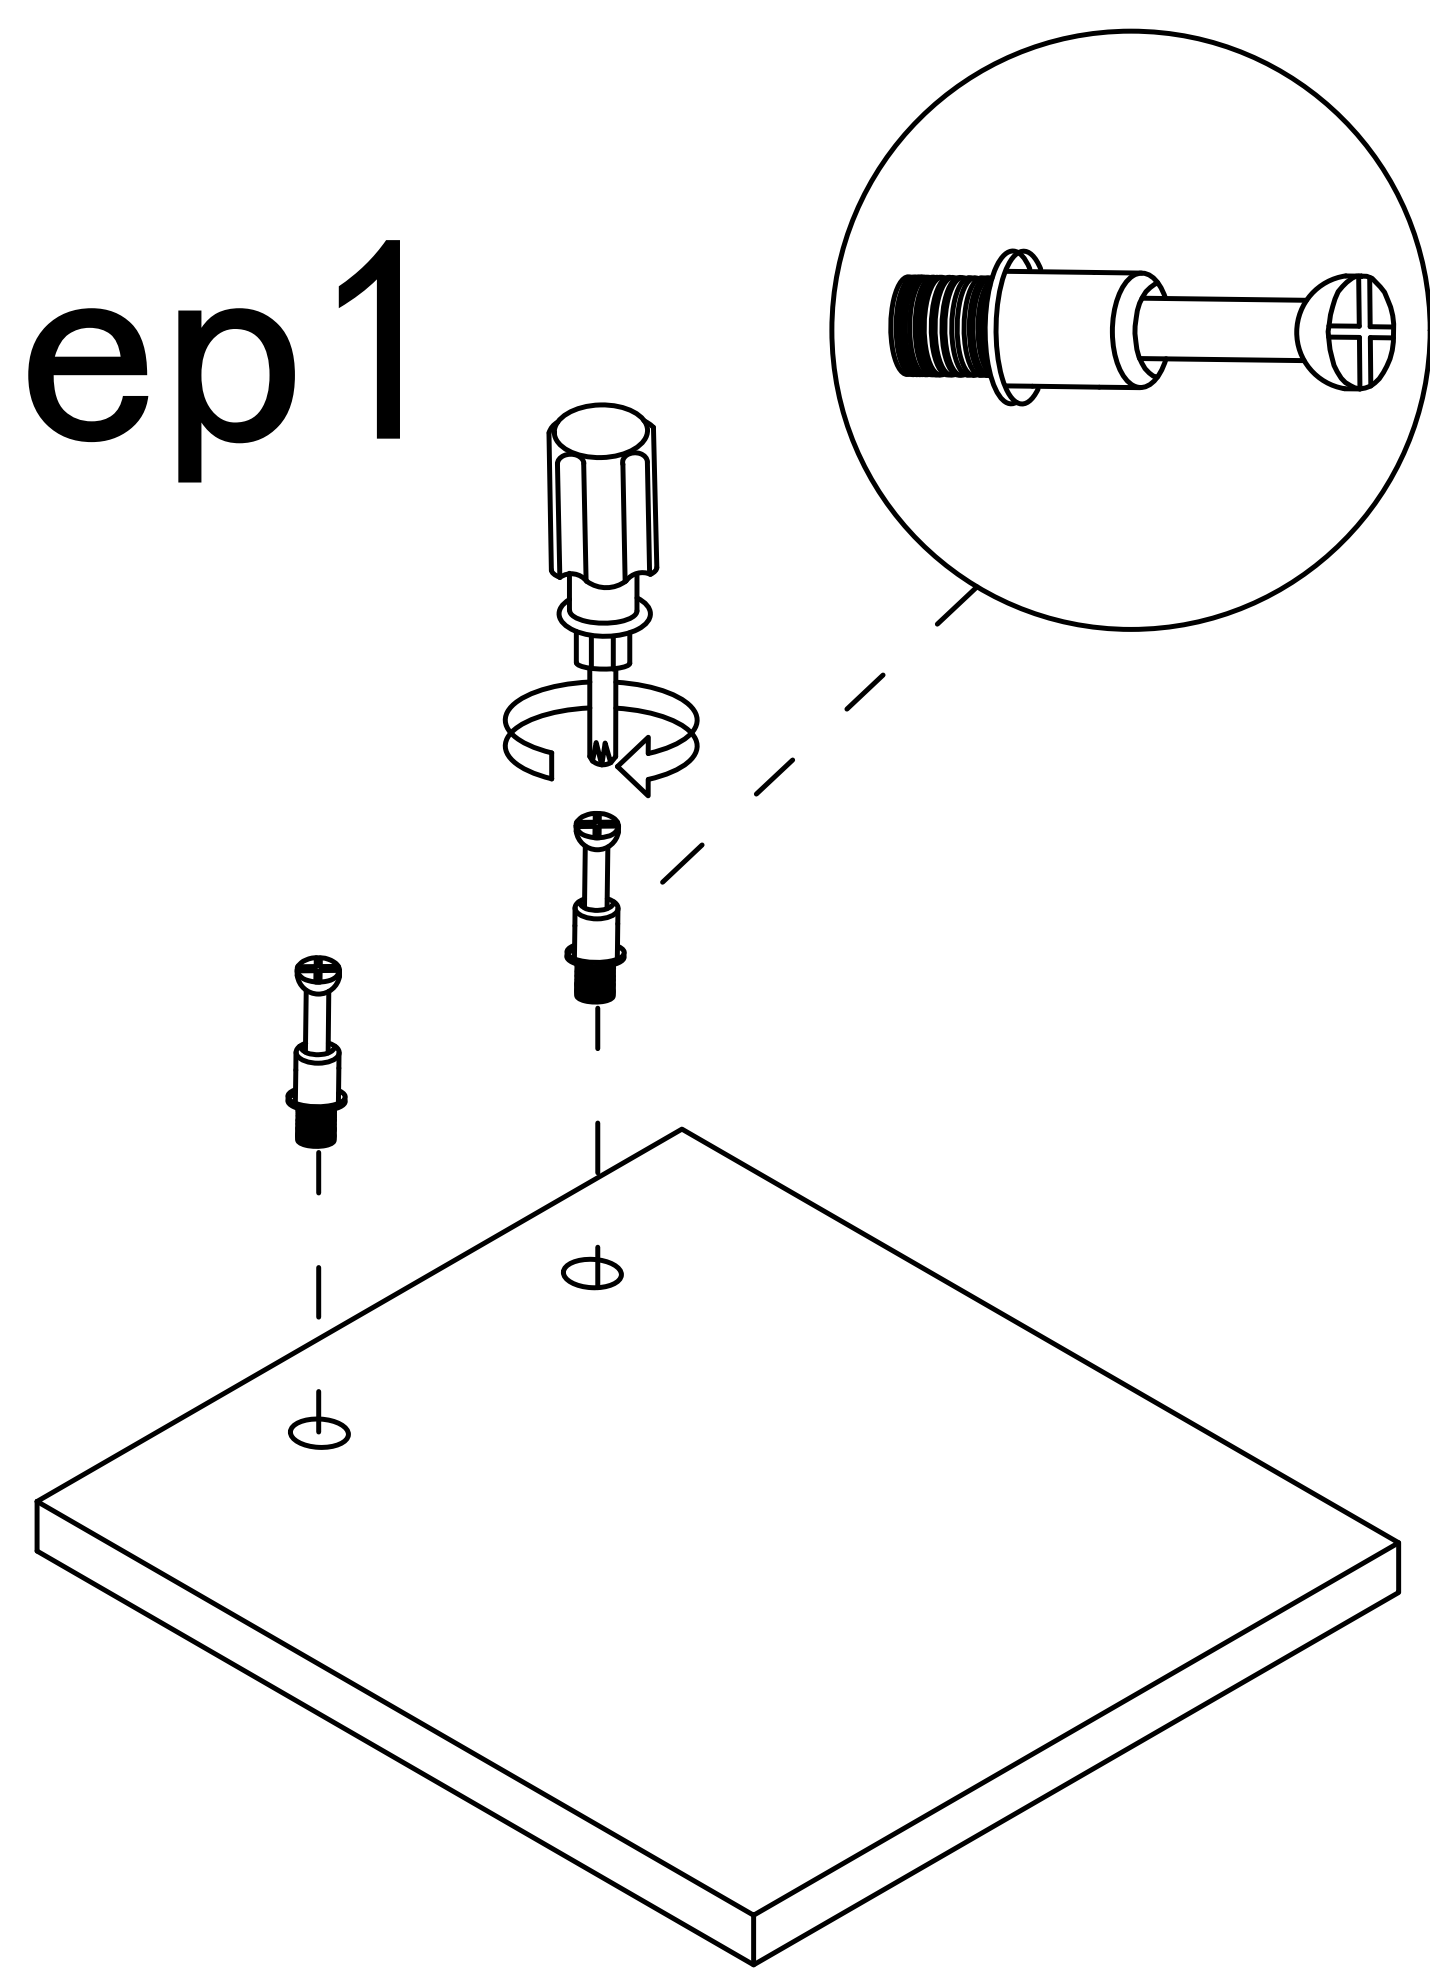

Step2

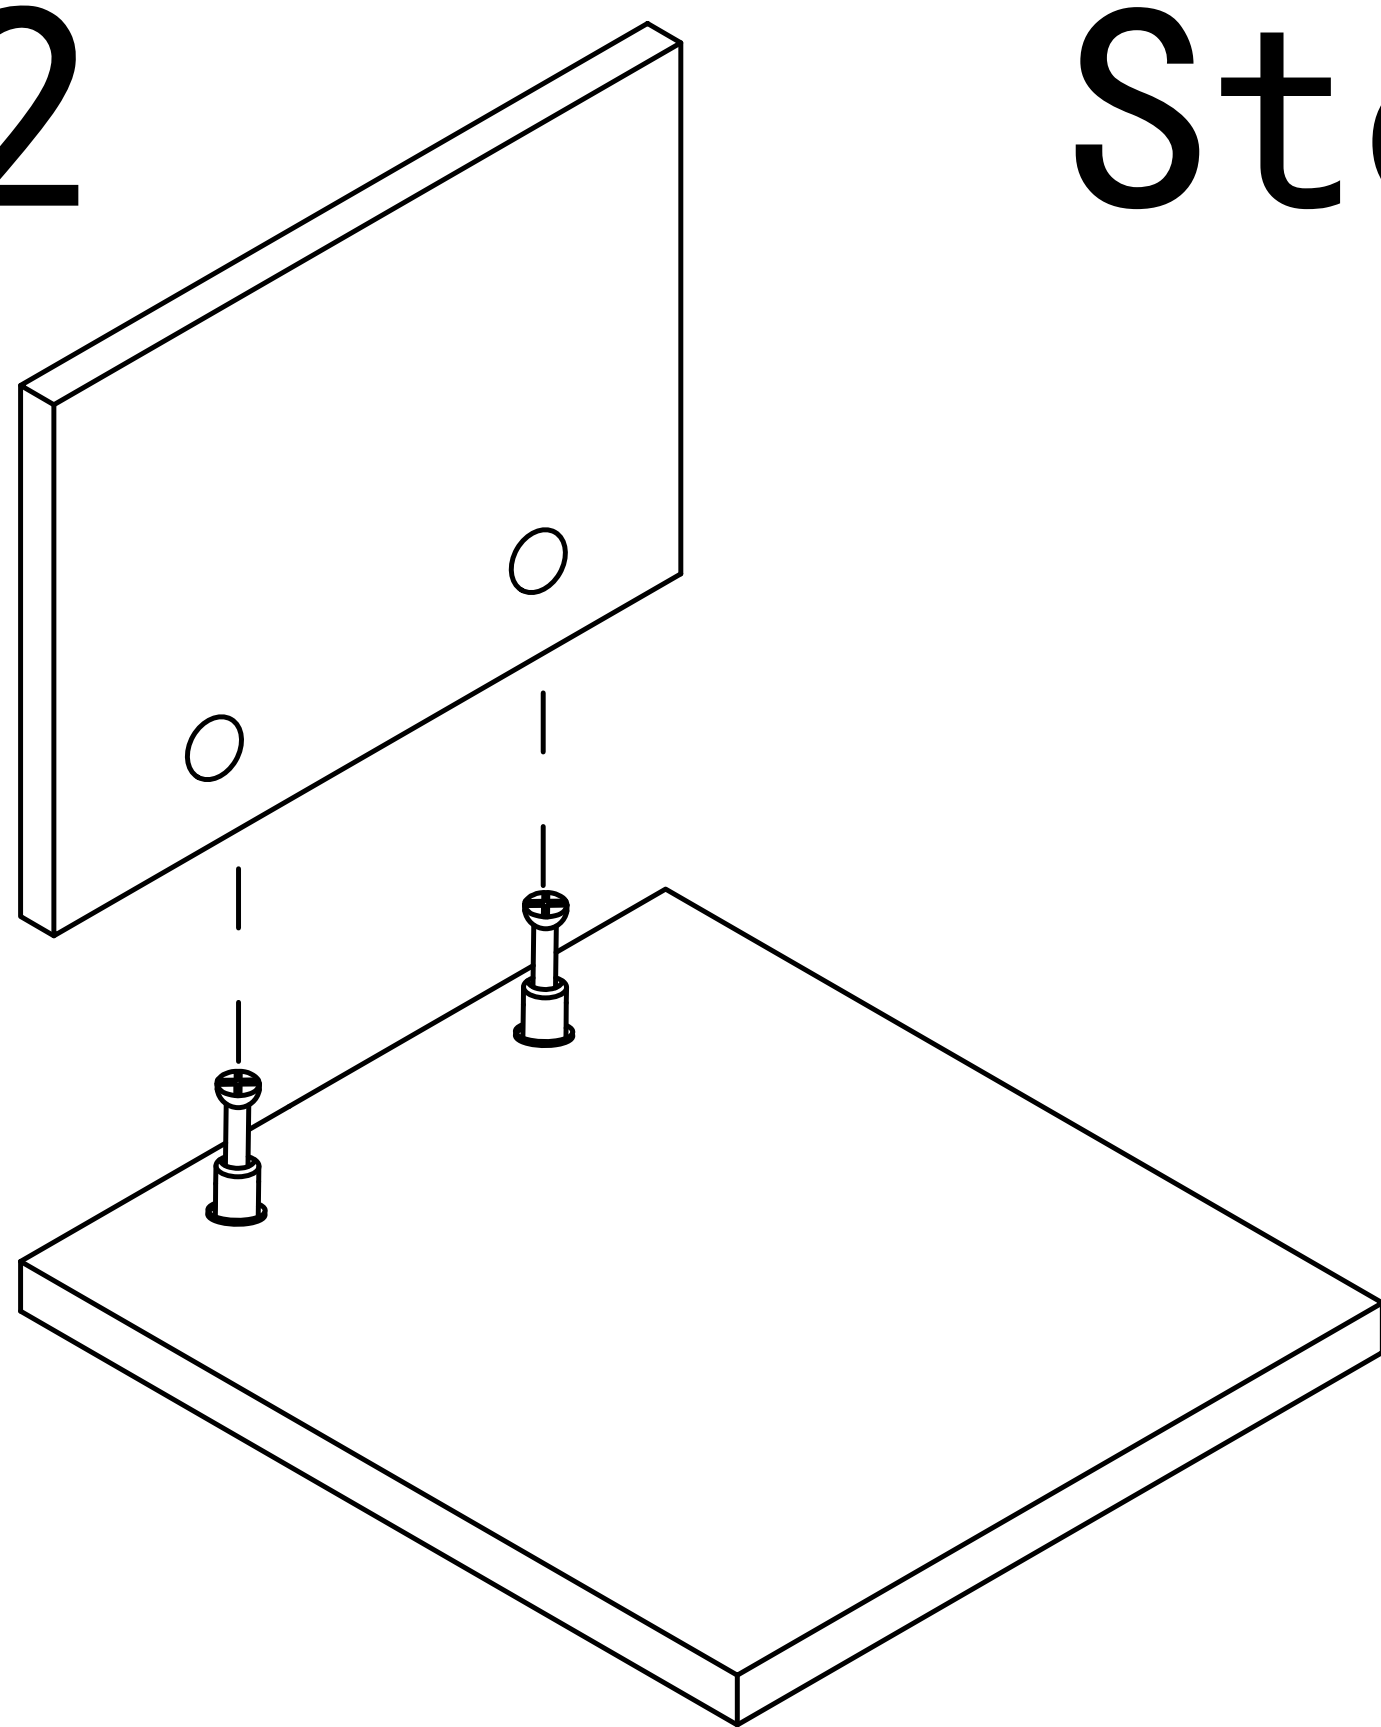


Step3

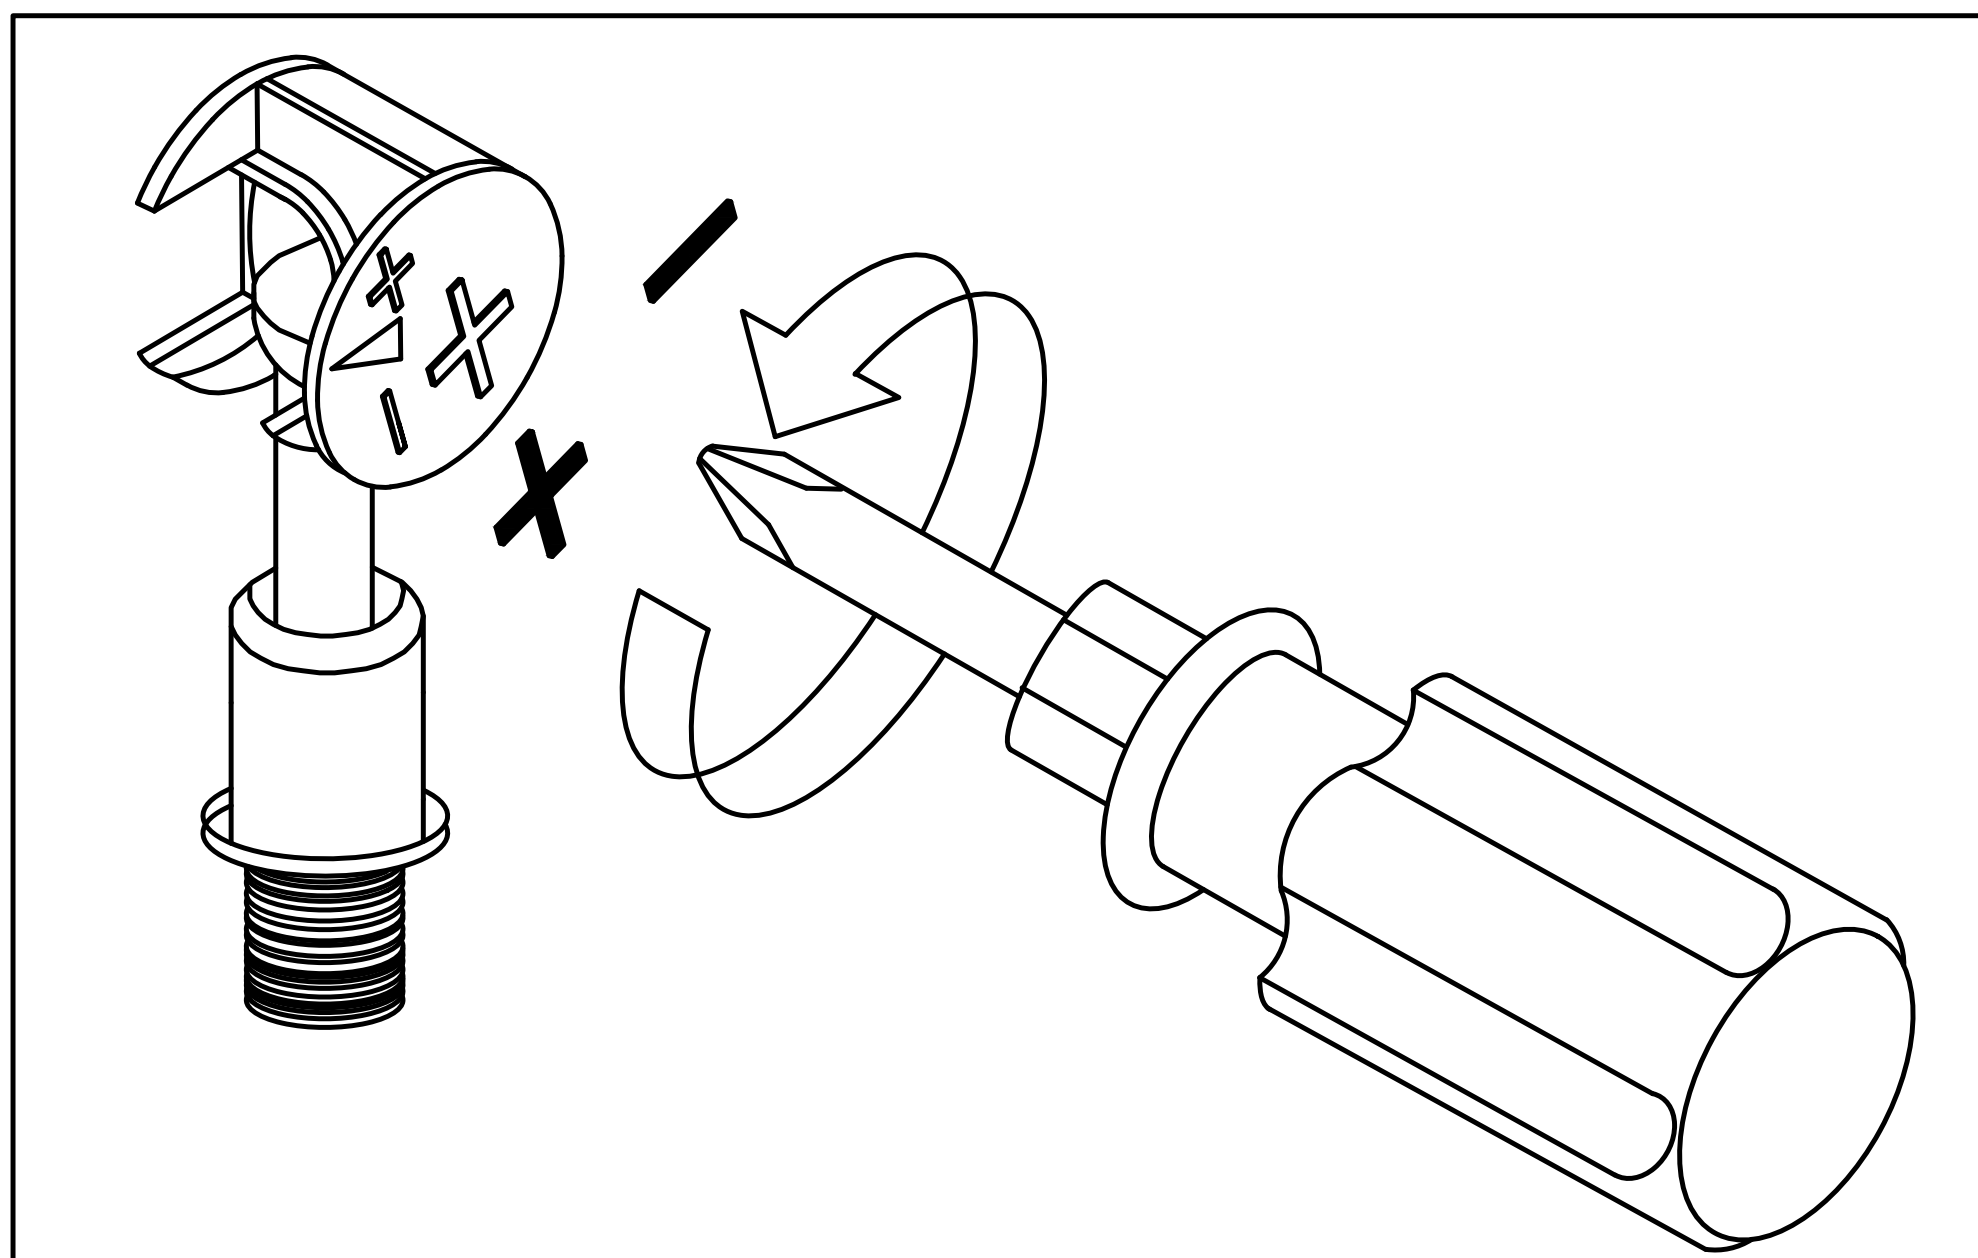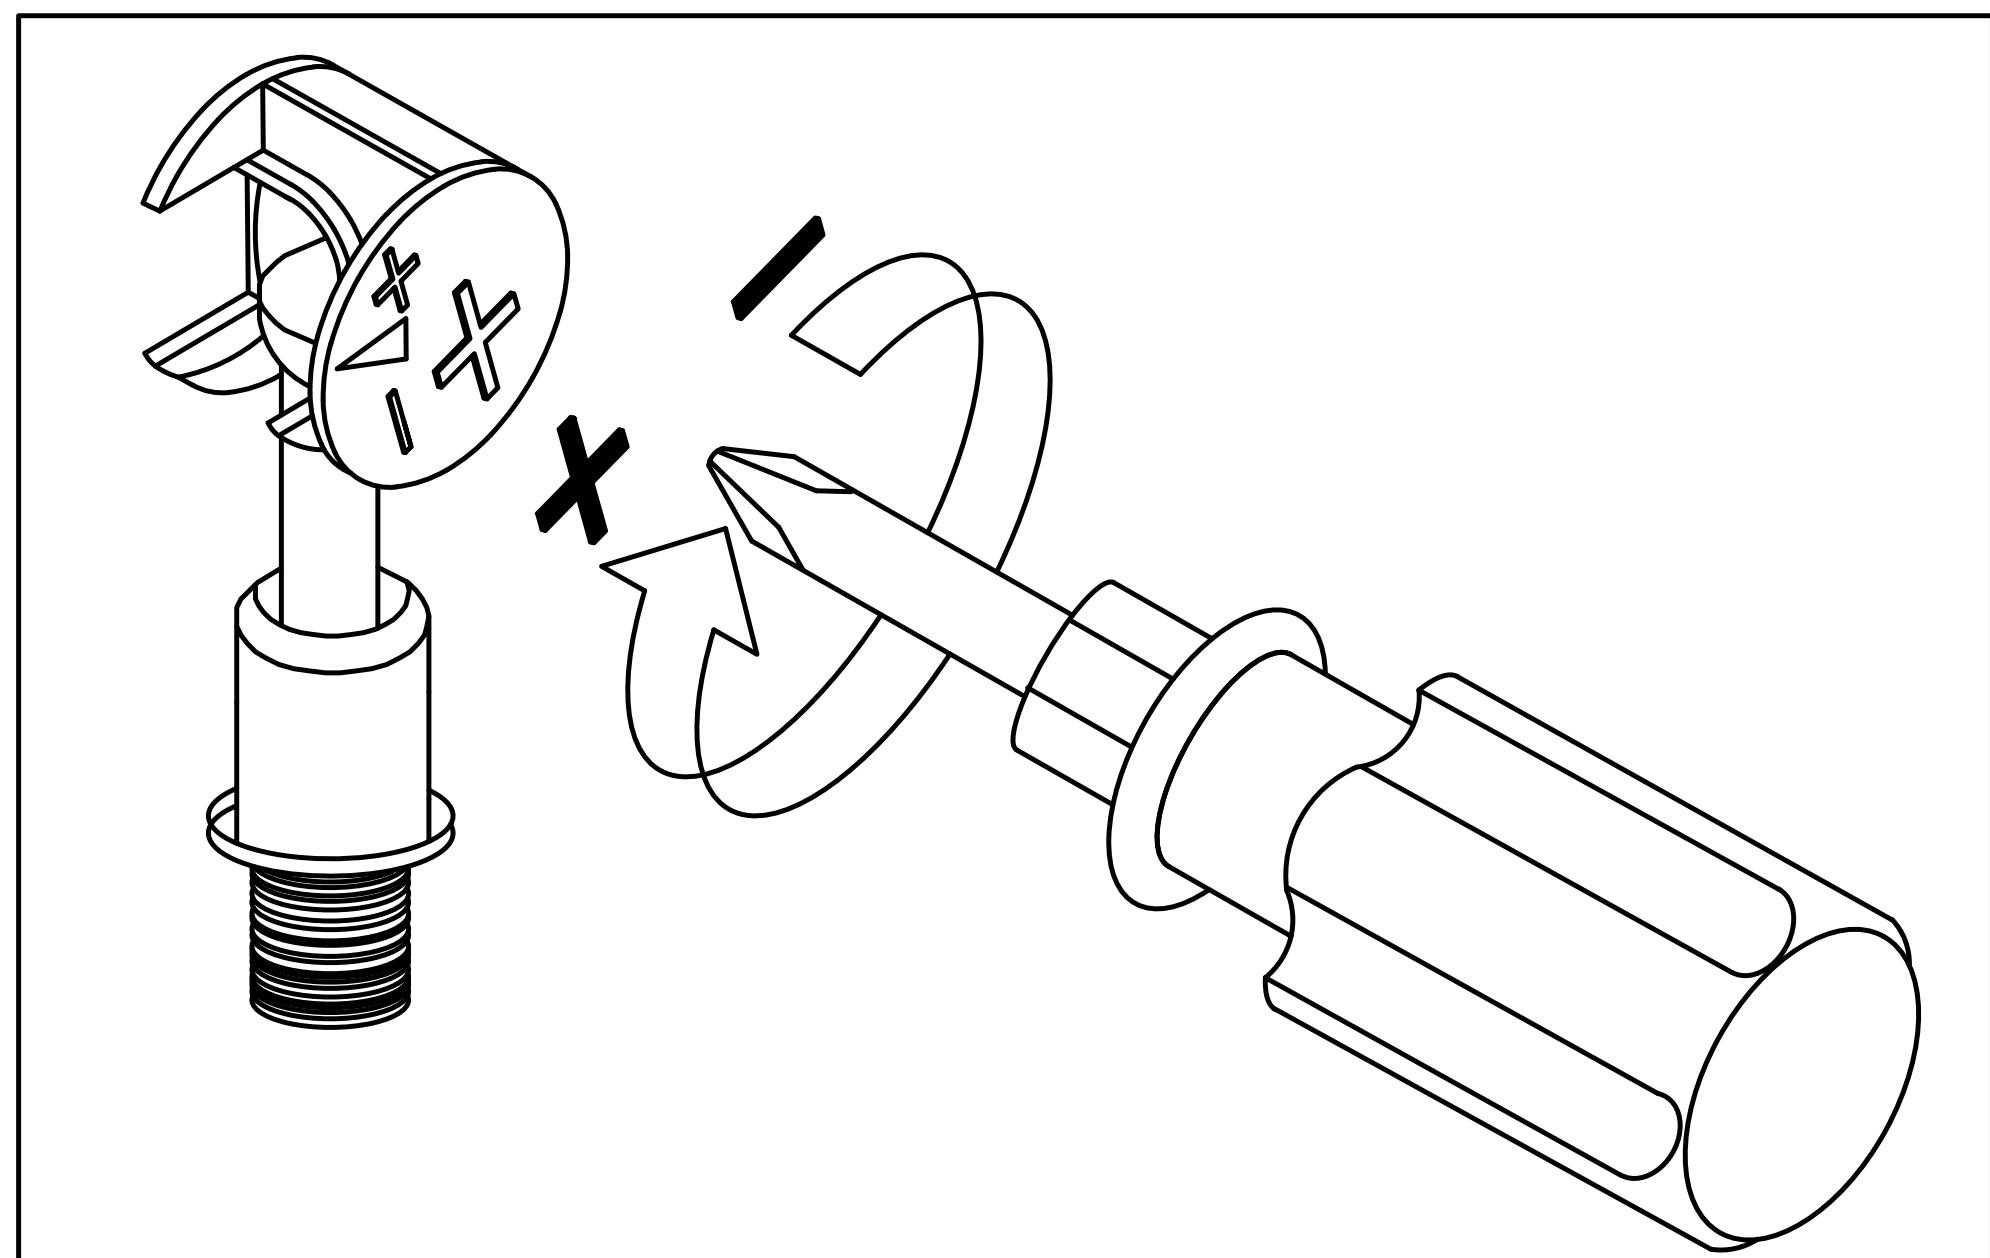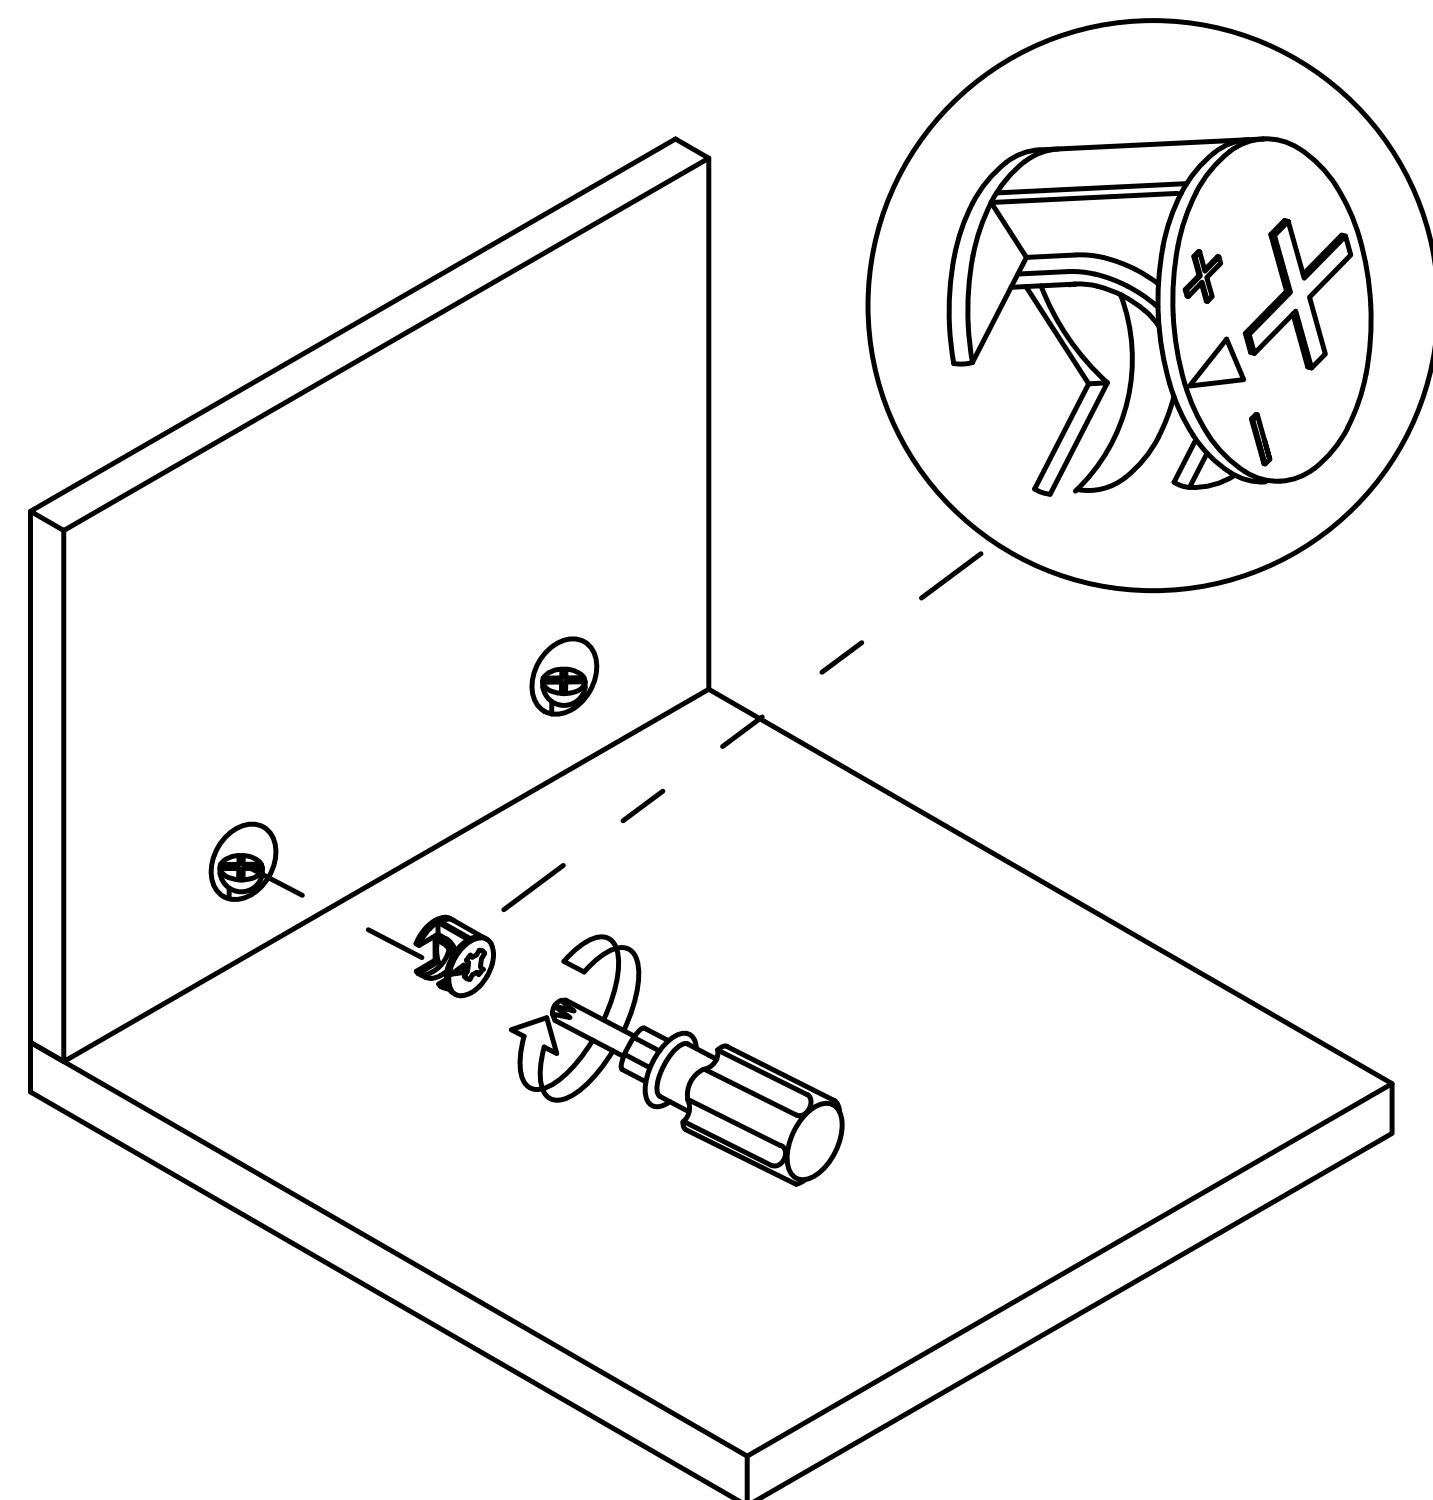


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

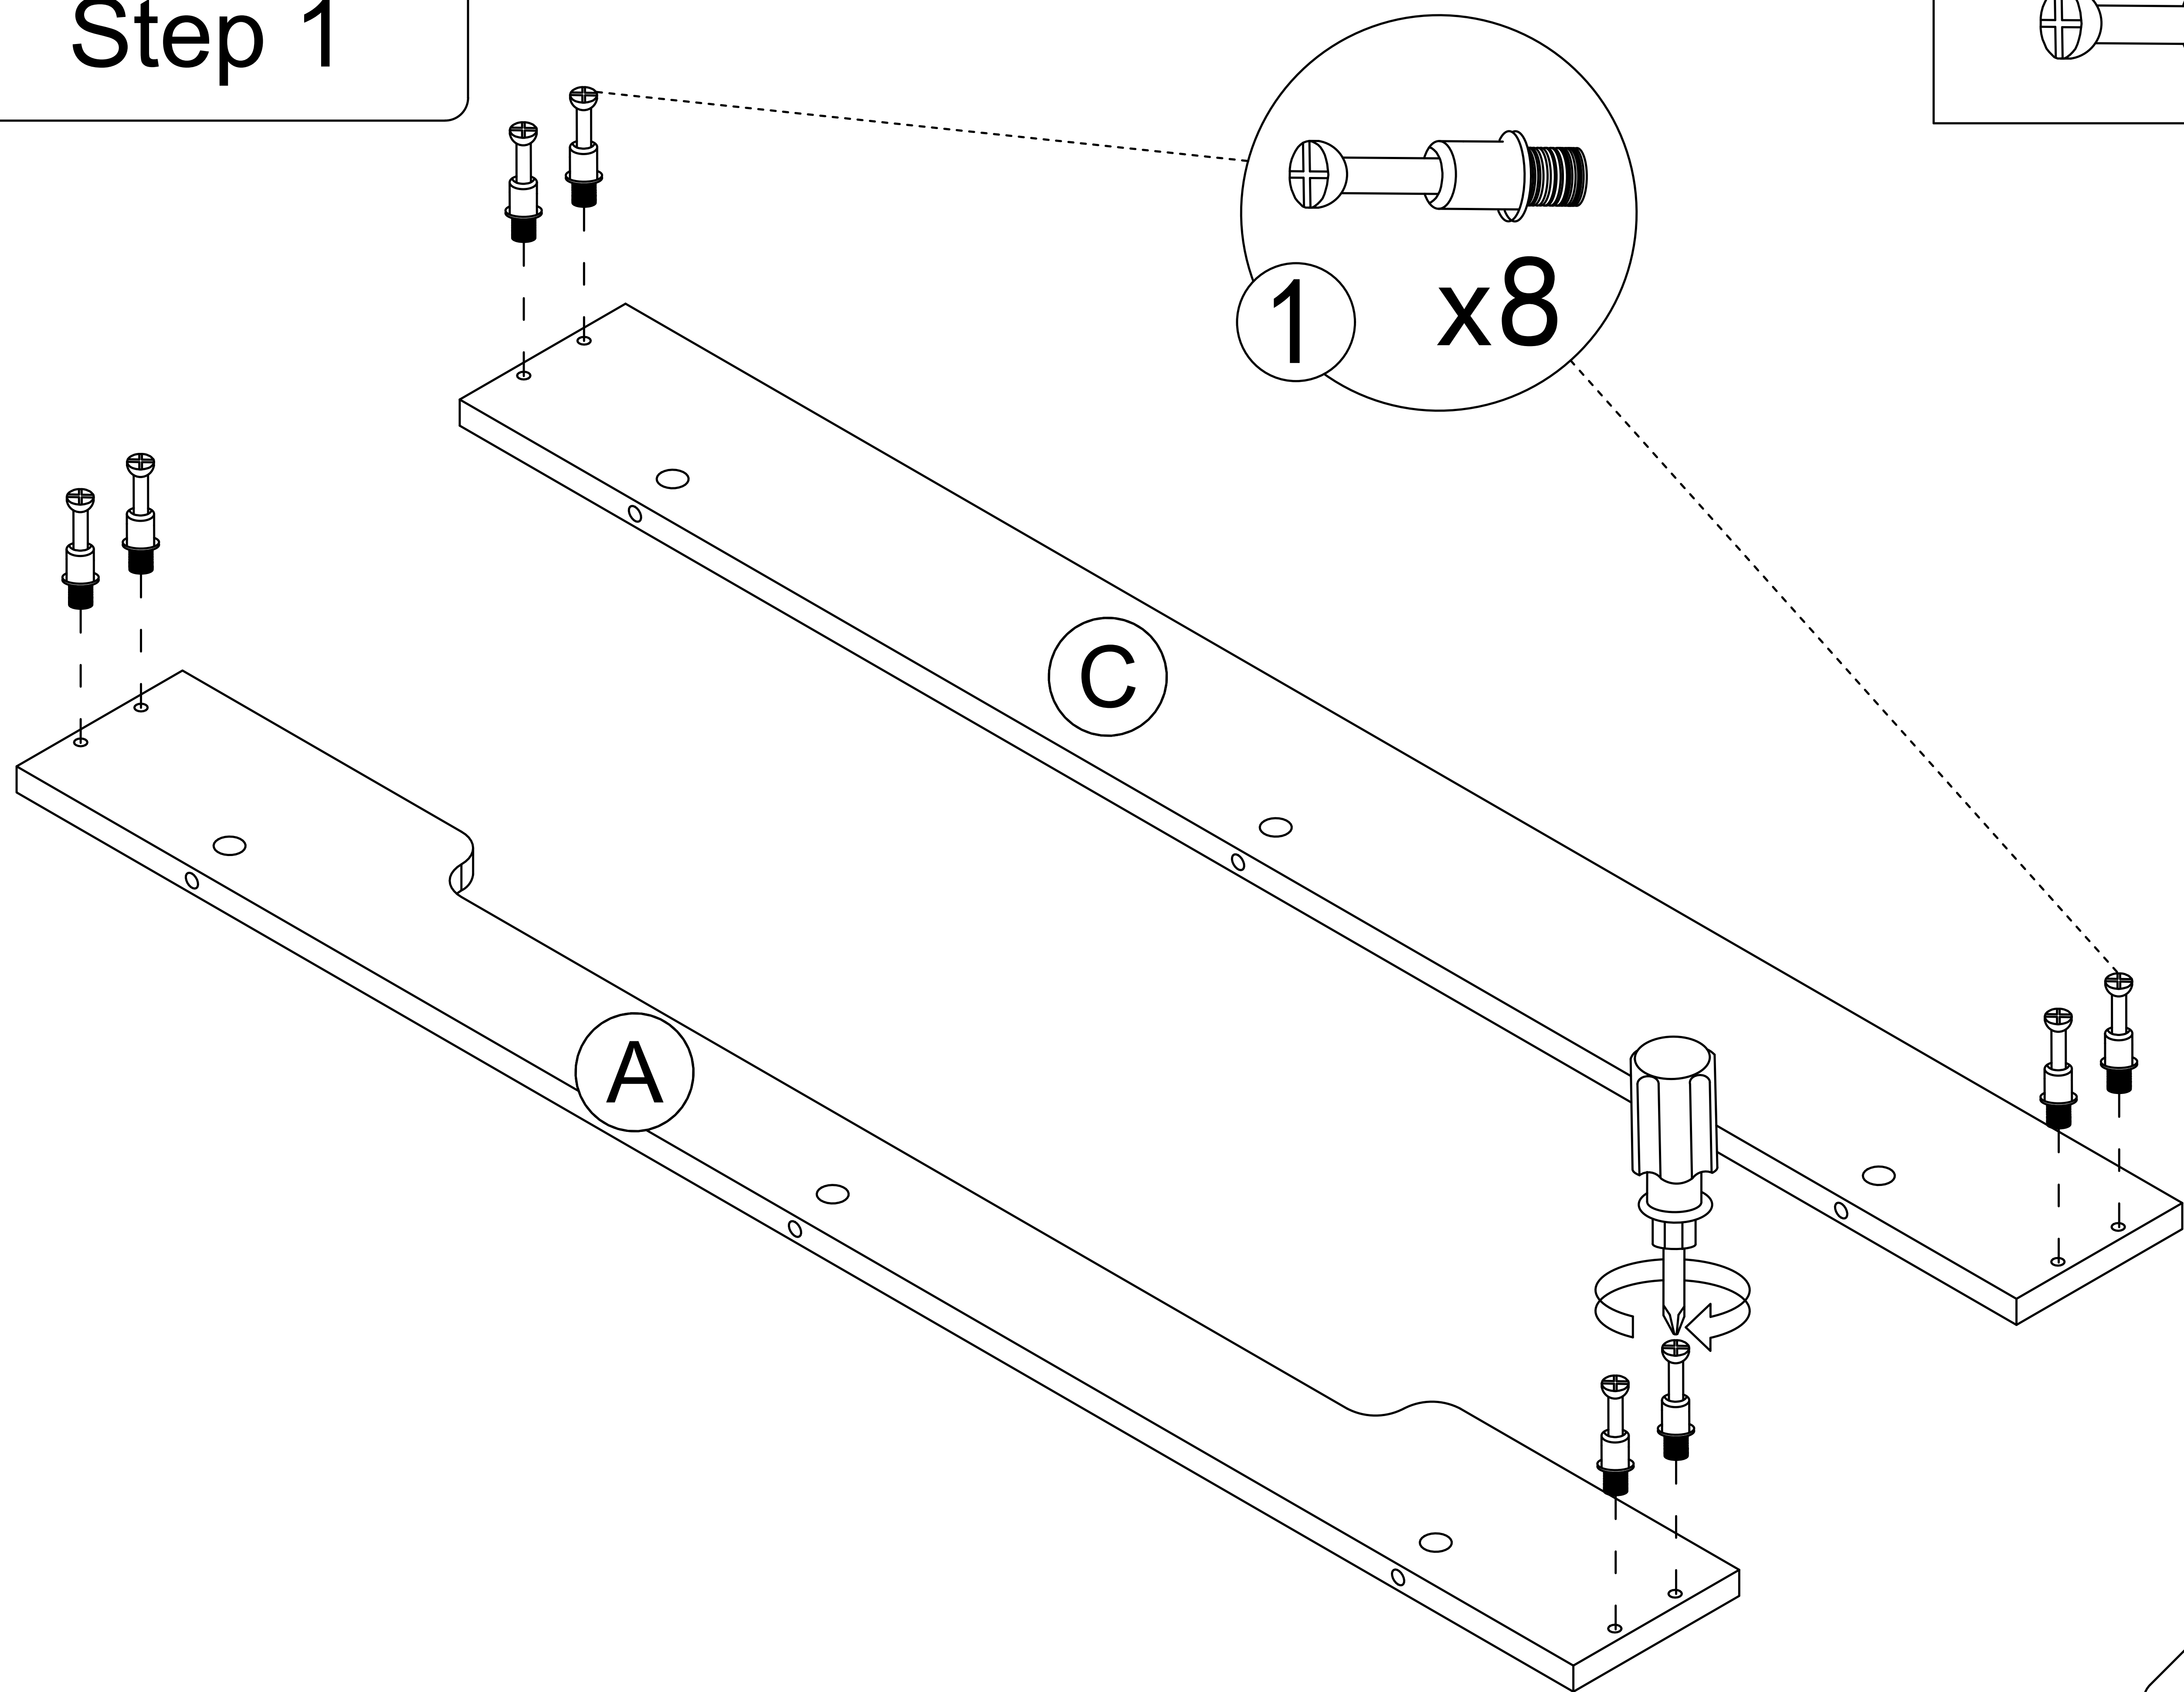

1

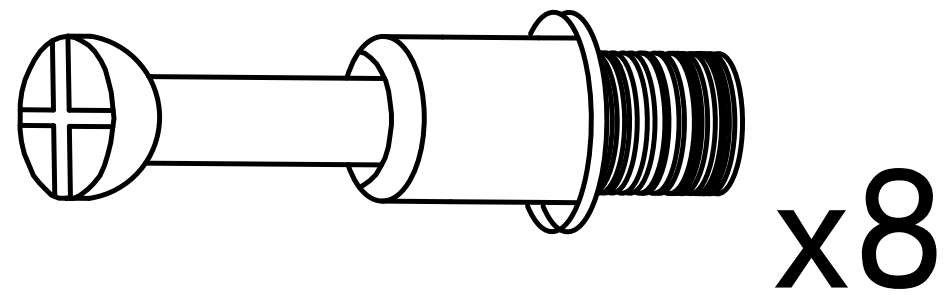


1

x8



4

Step 2

2

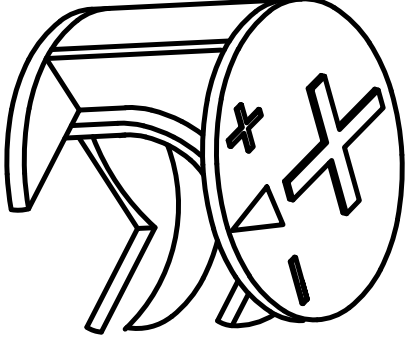


x4

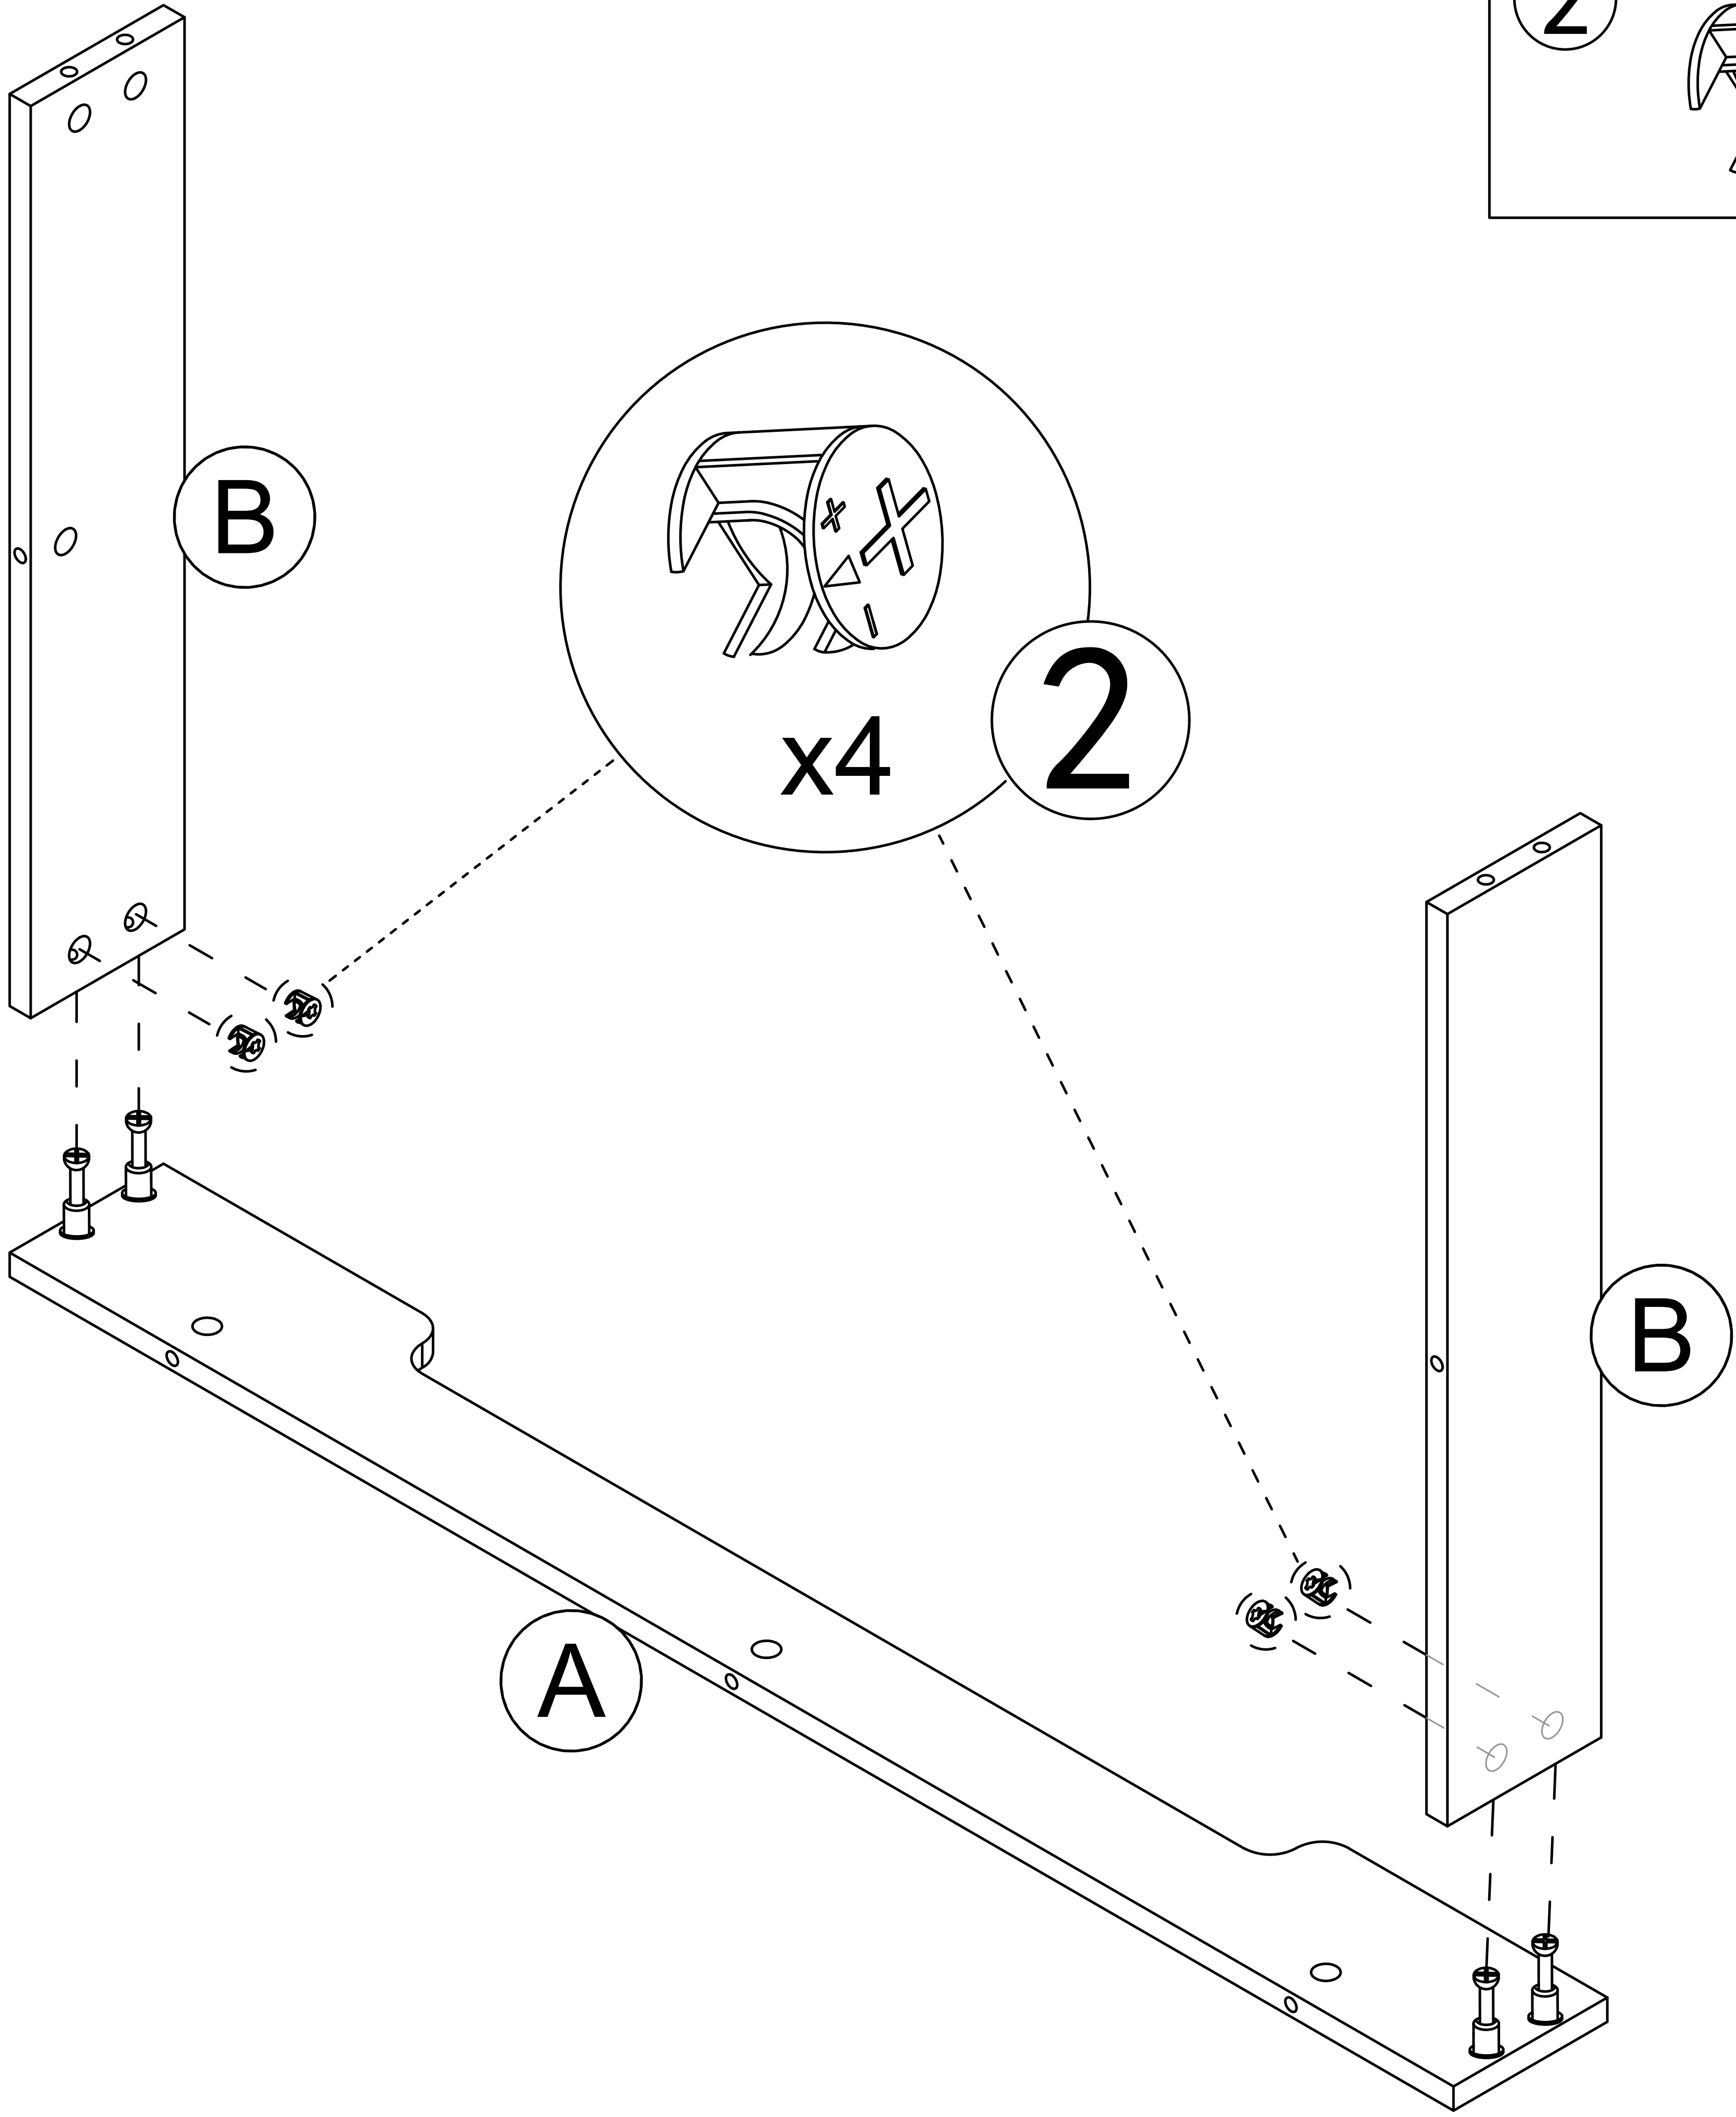
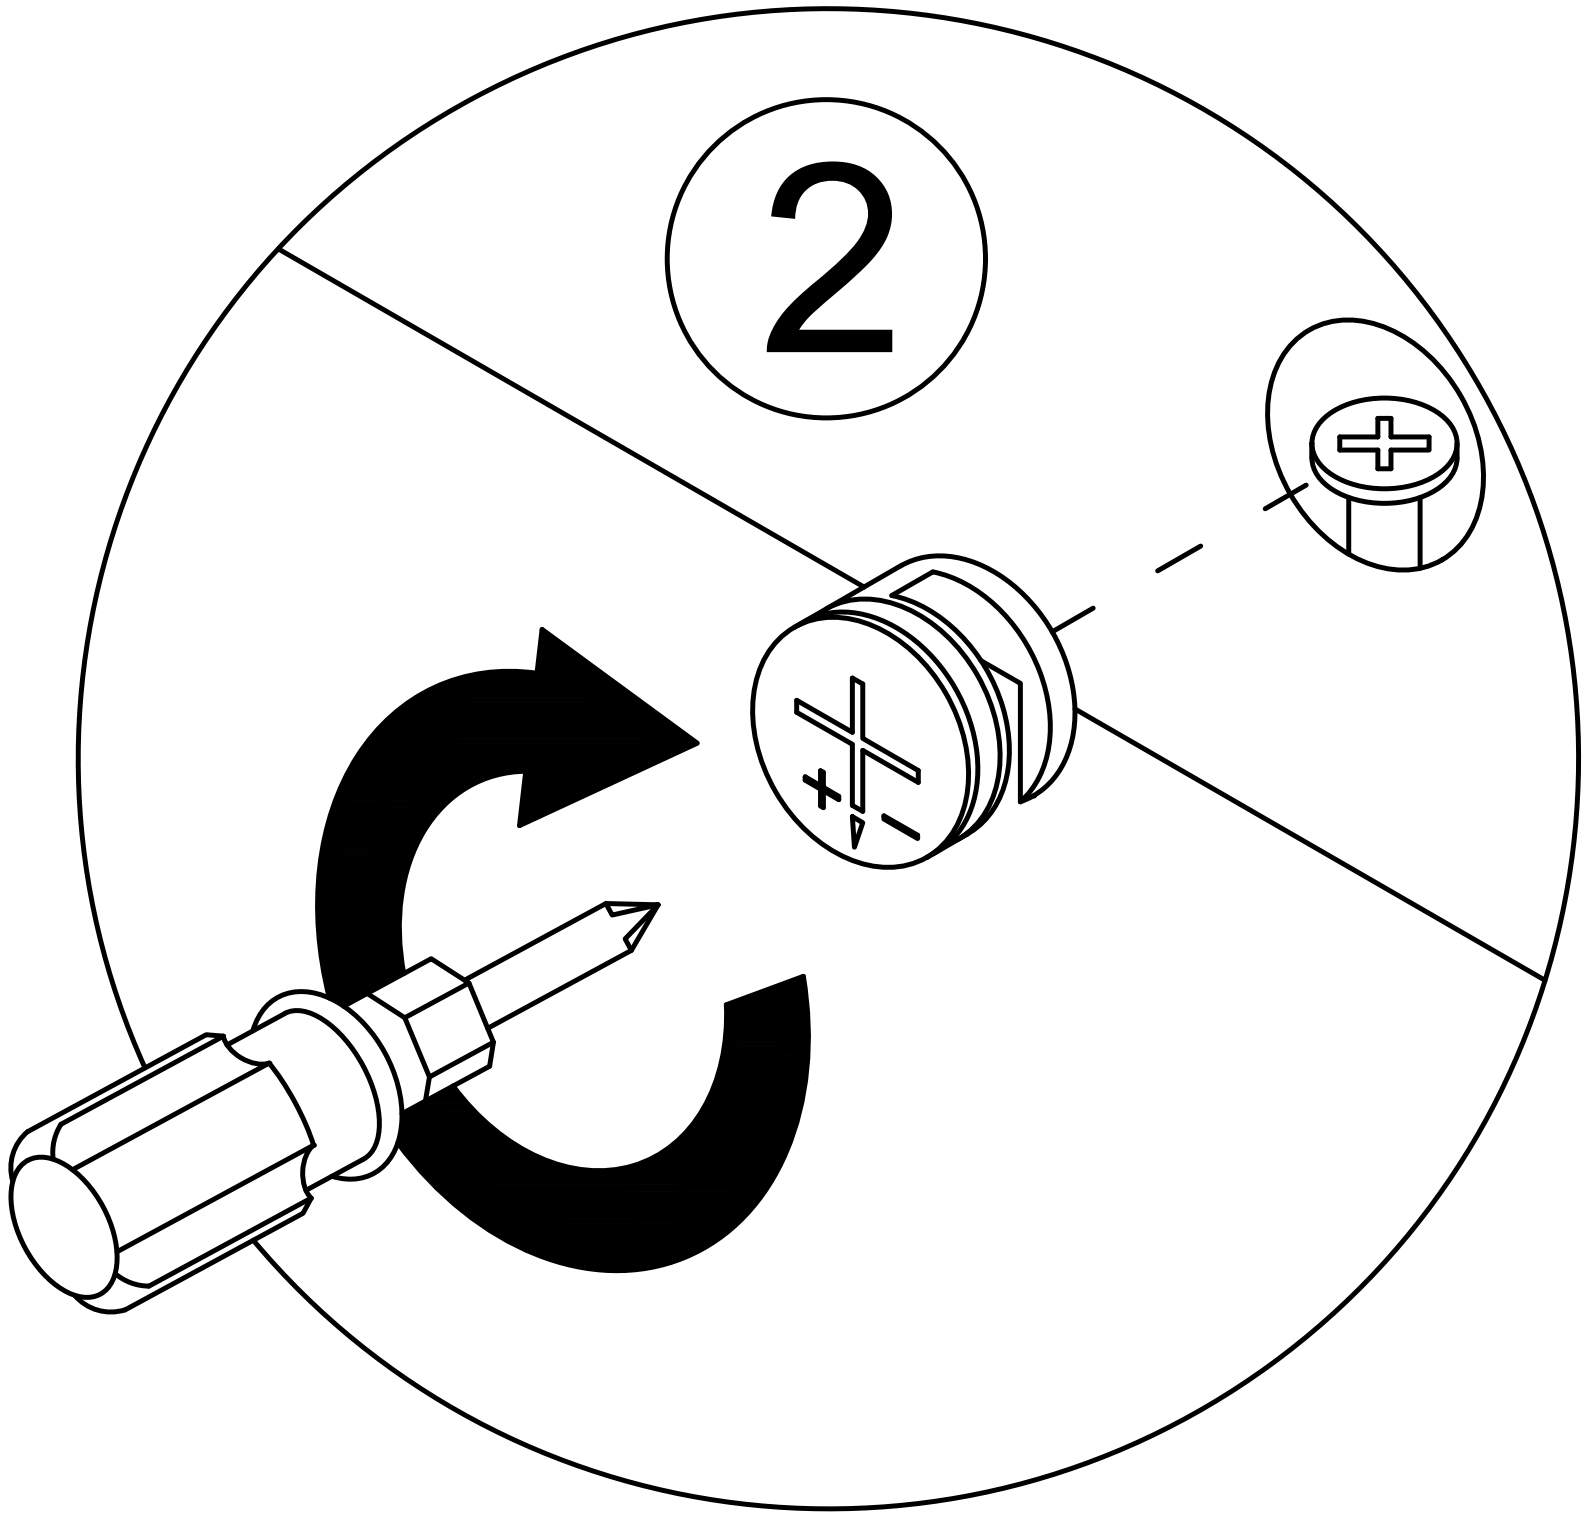


Step 3



2

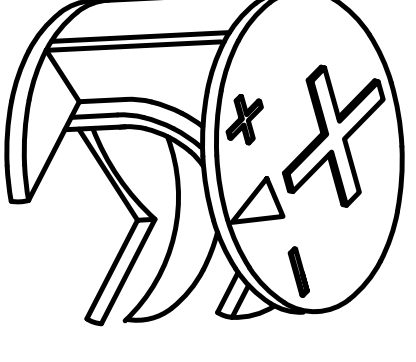



x4

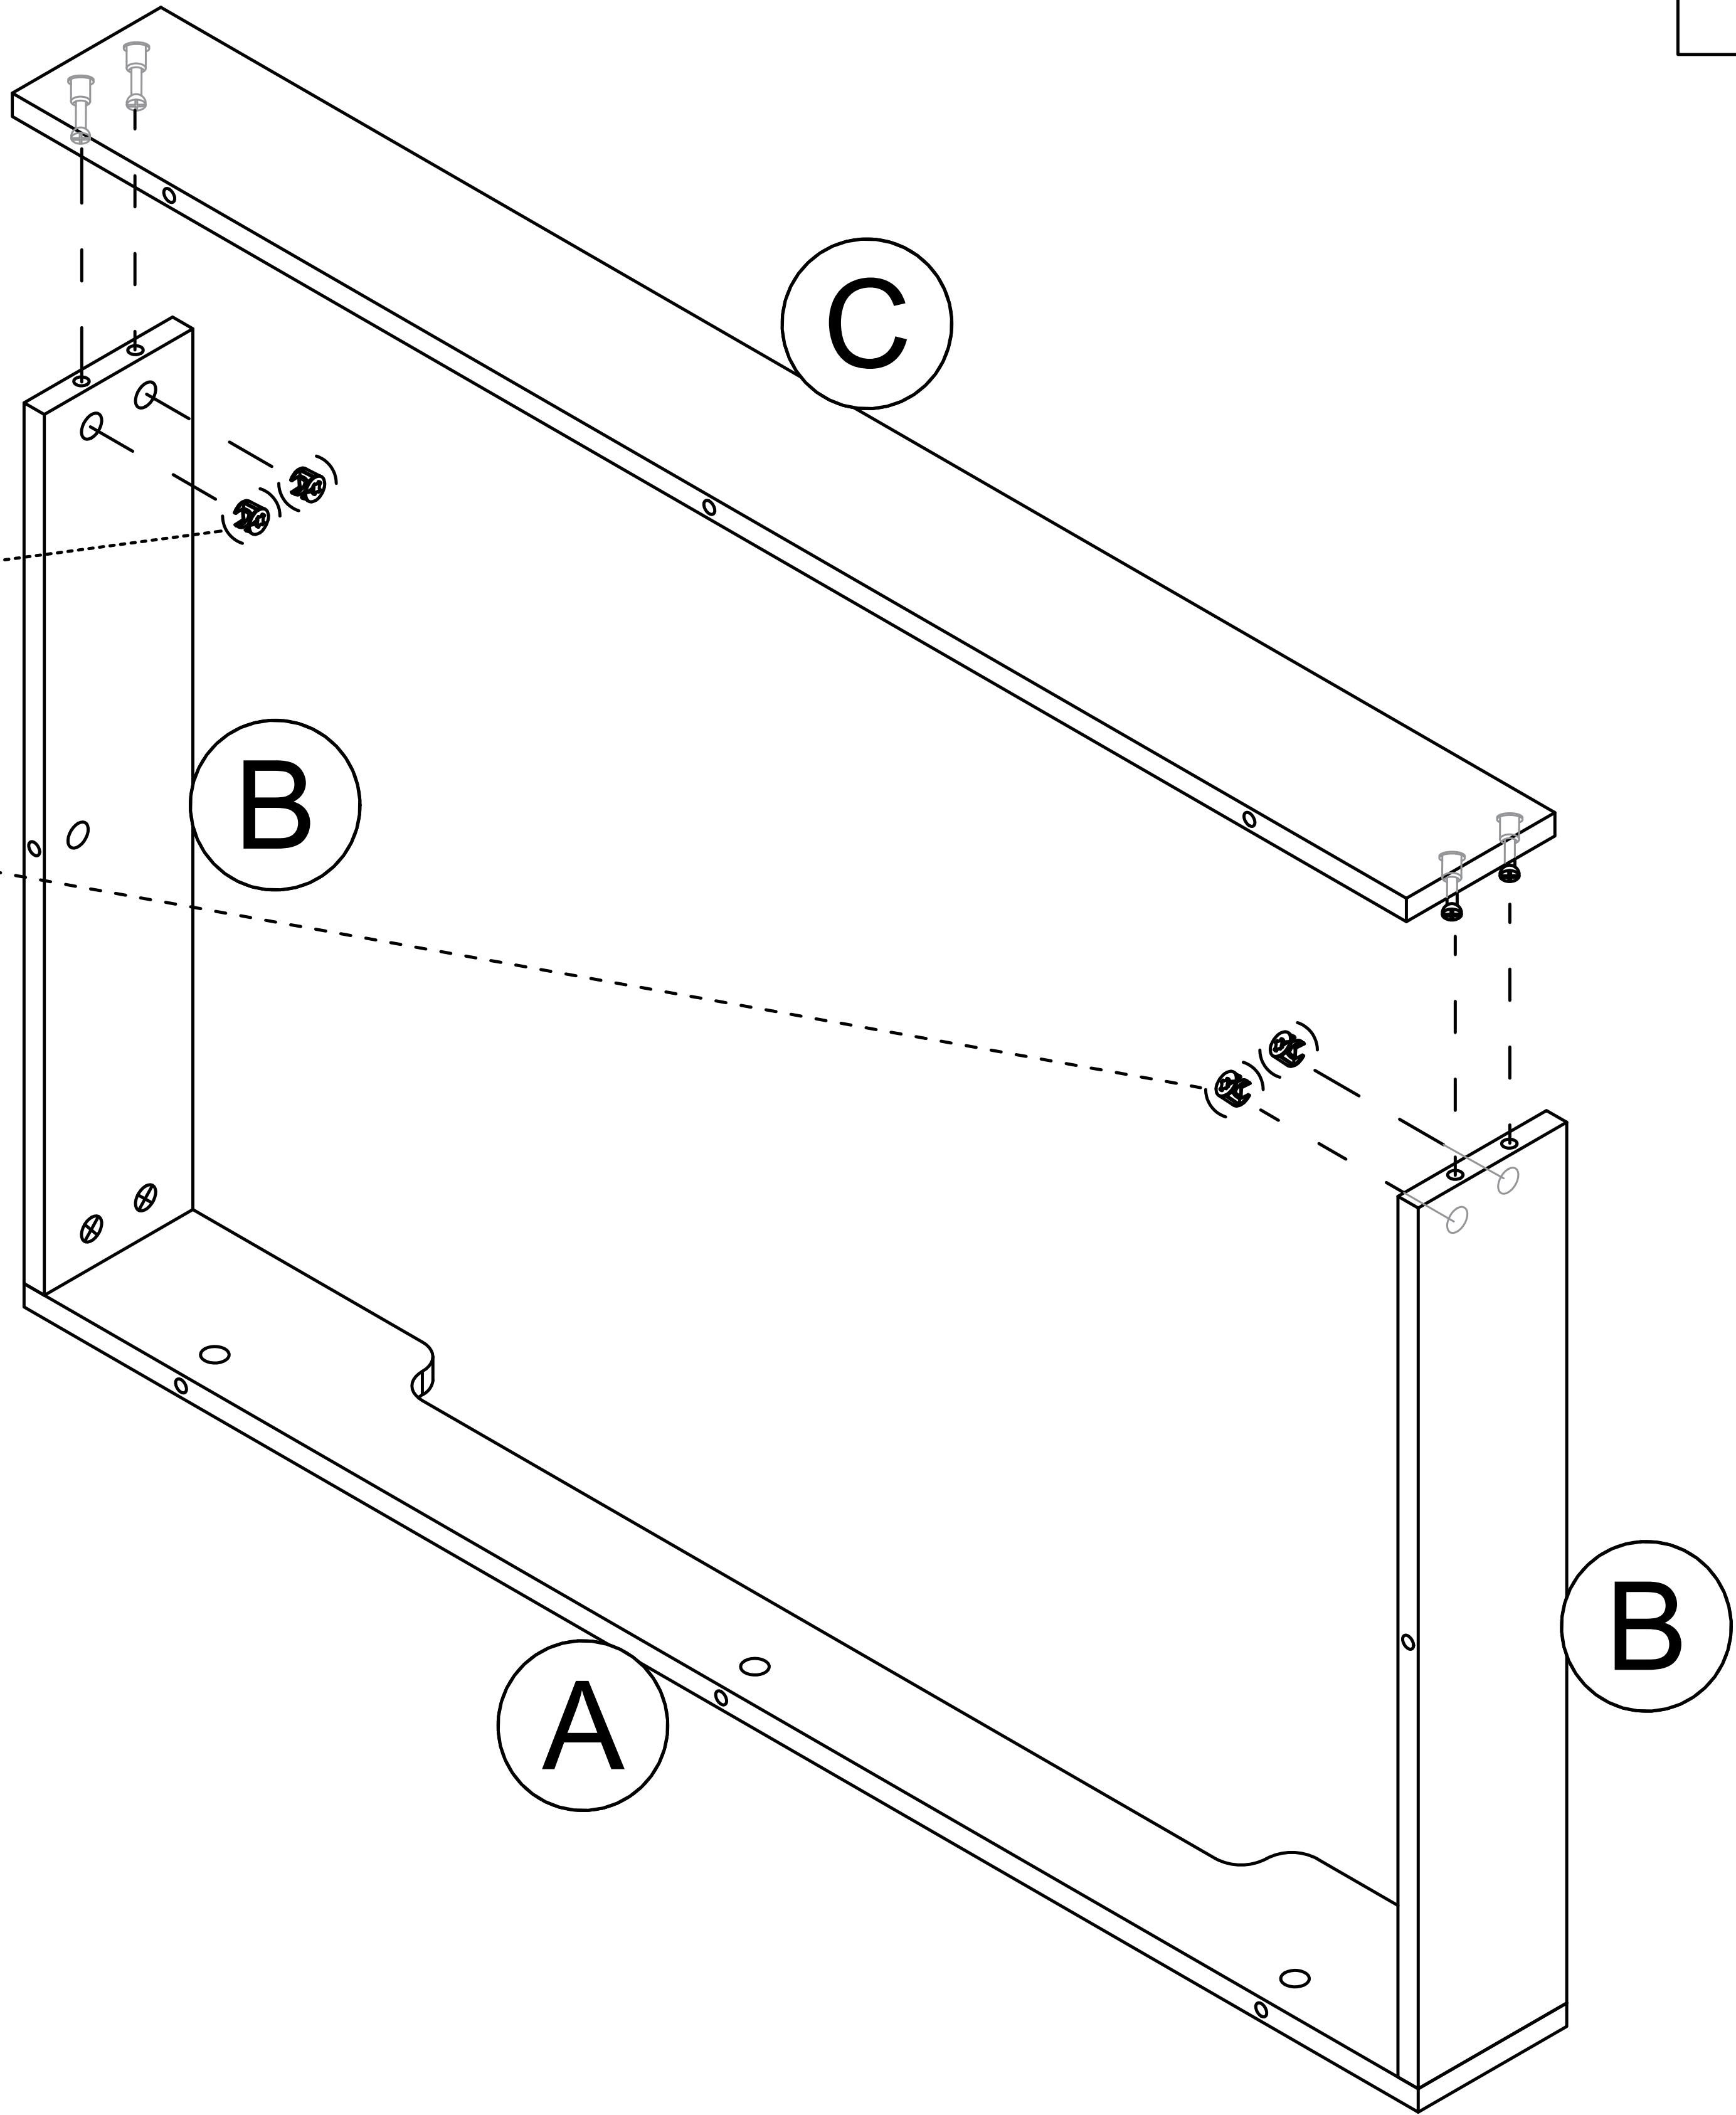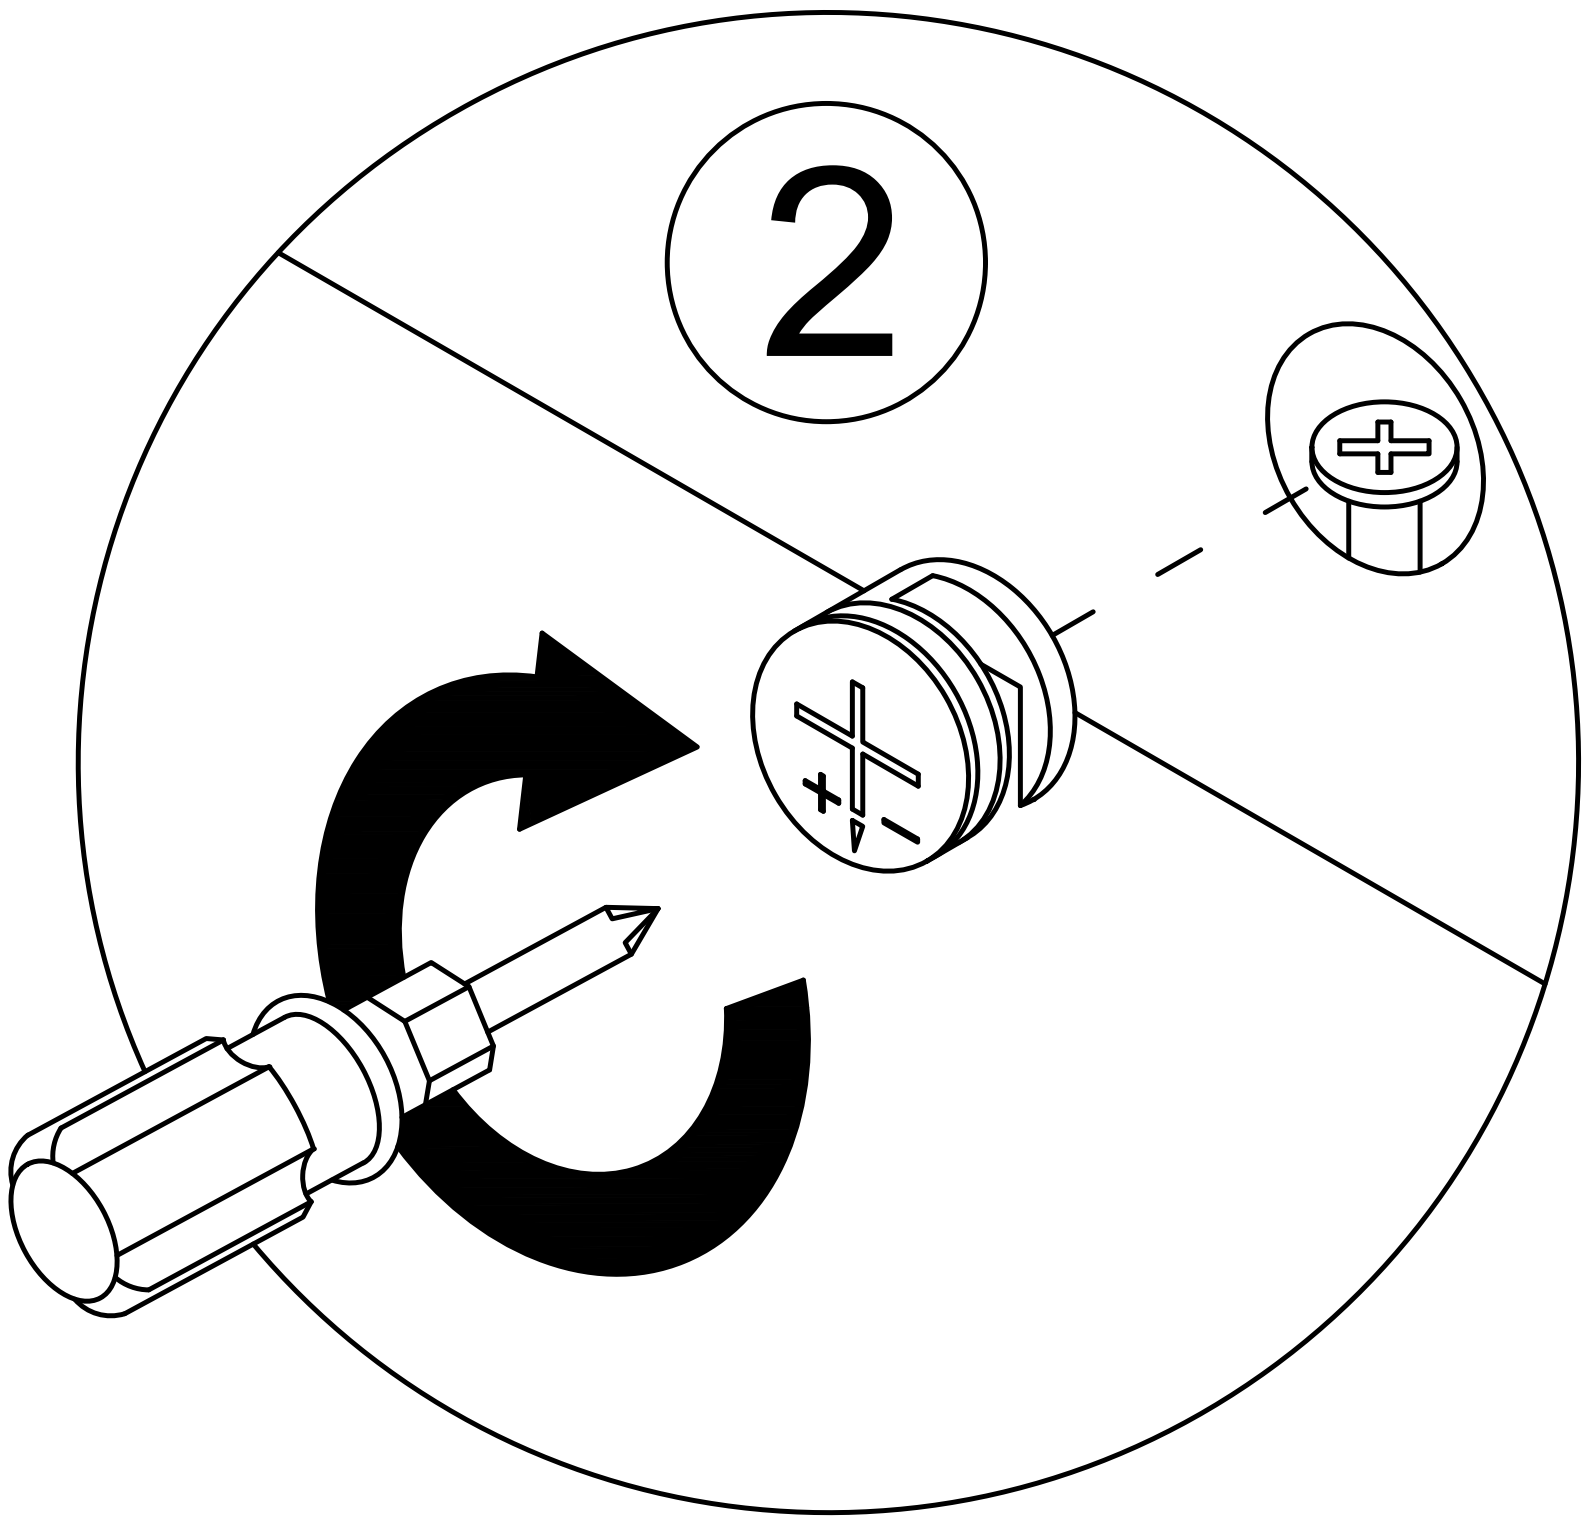

Step 4

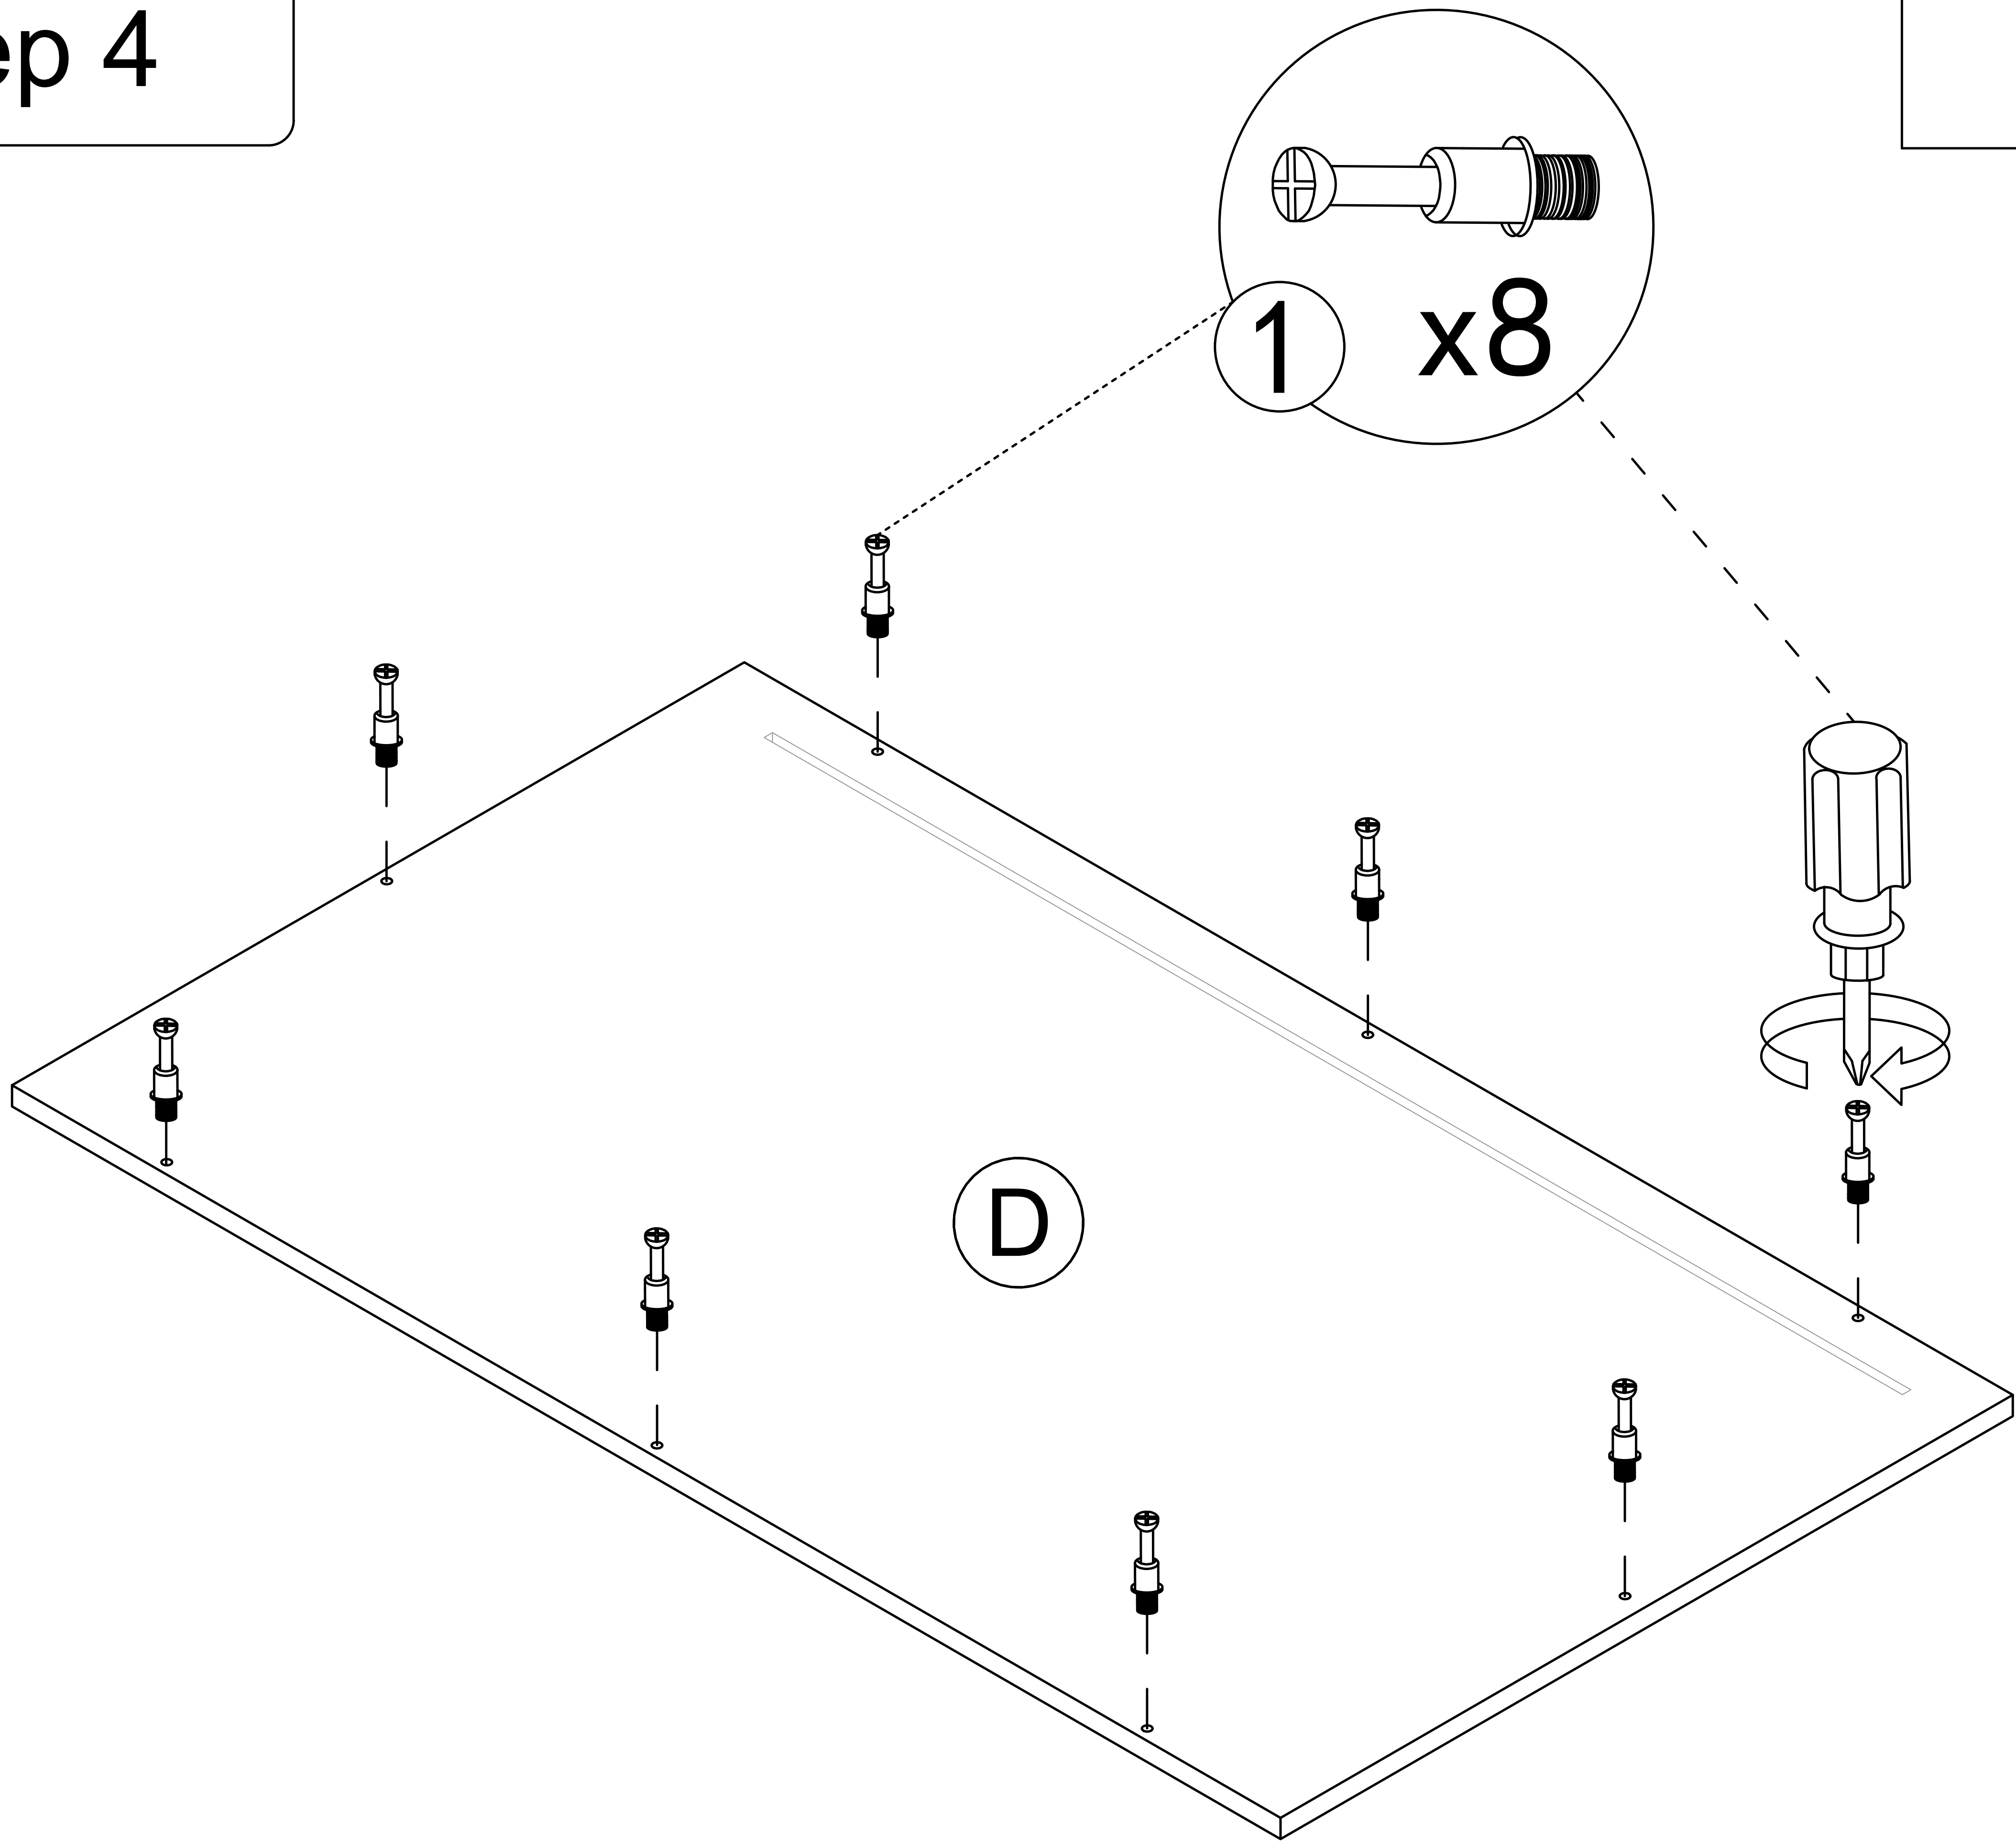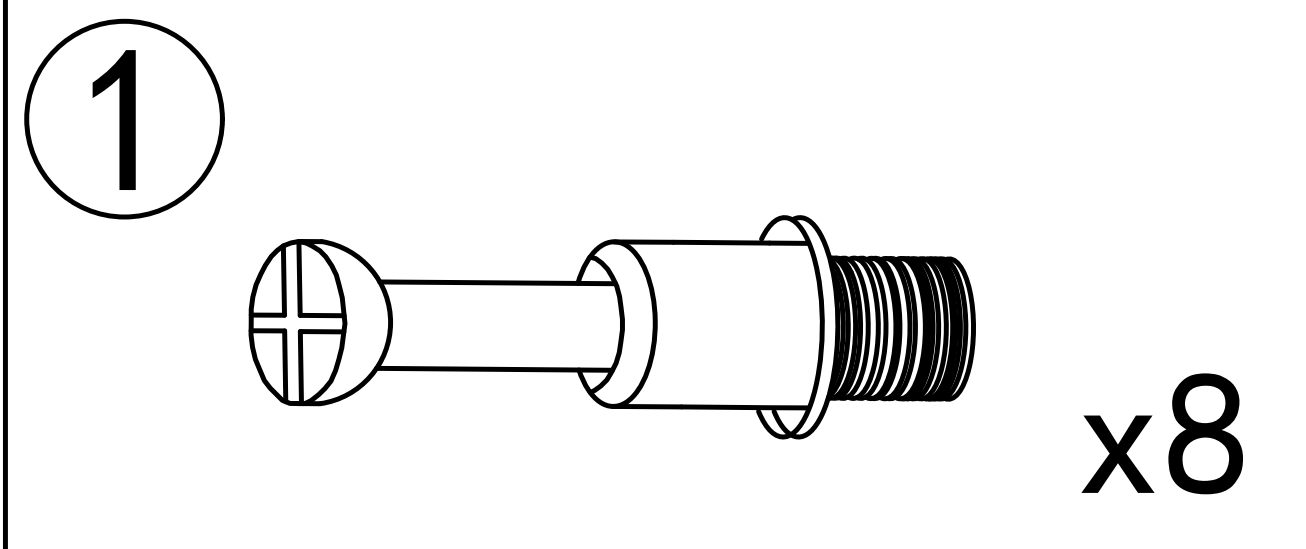

Step 5

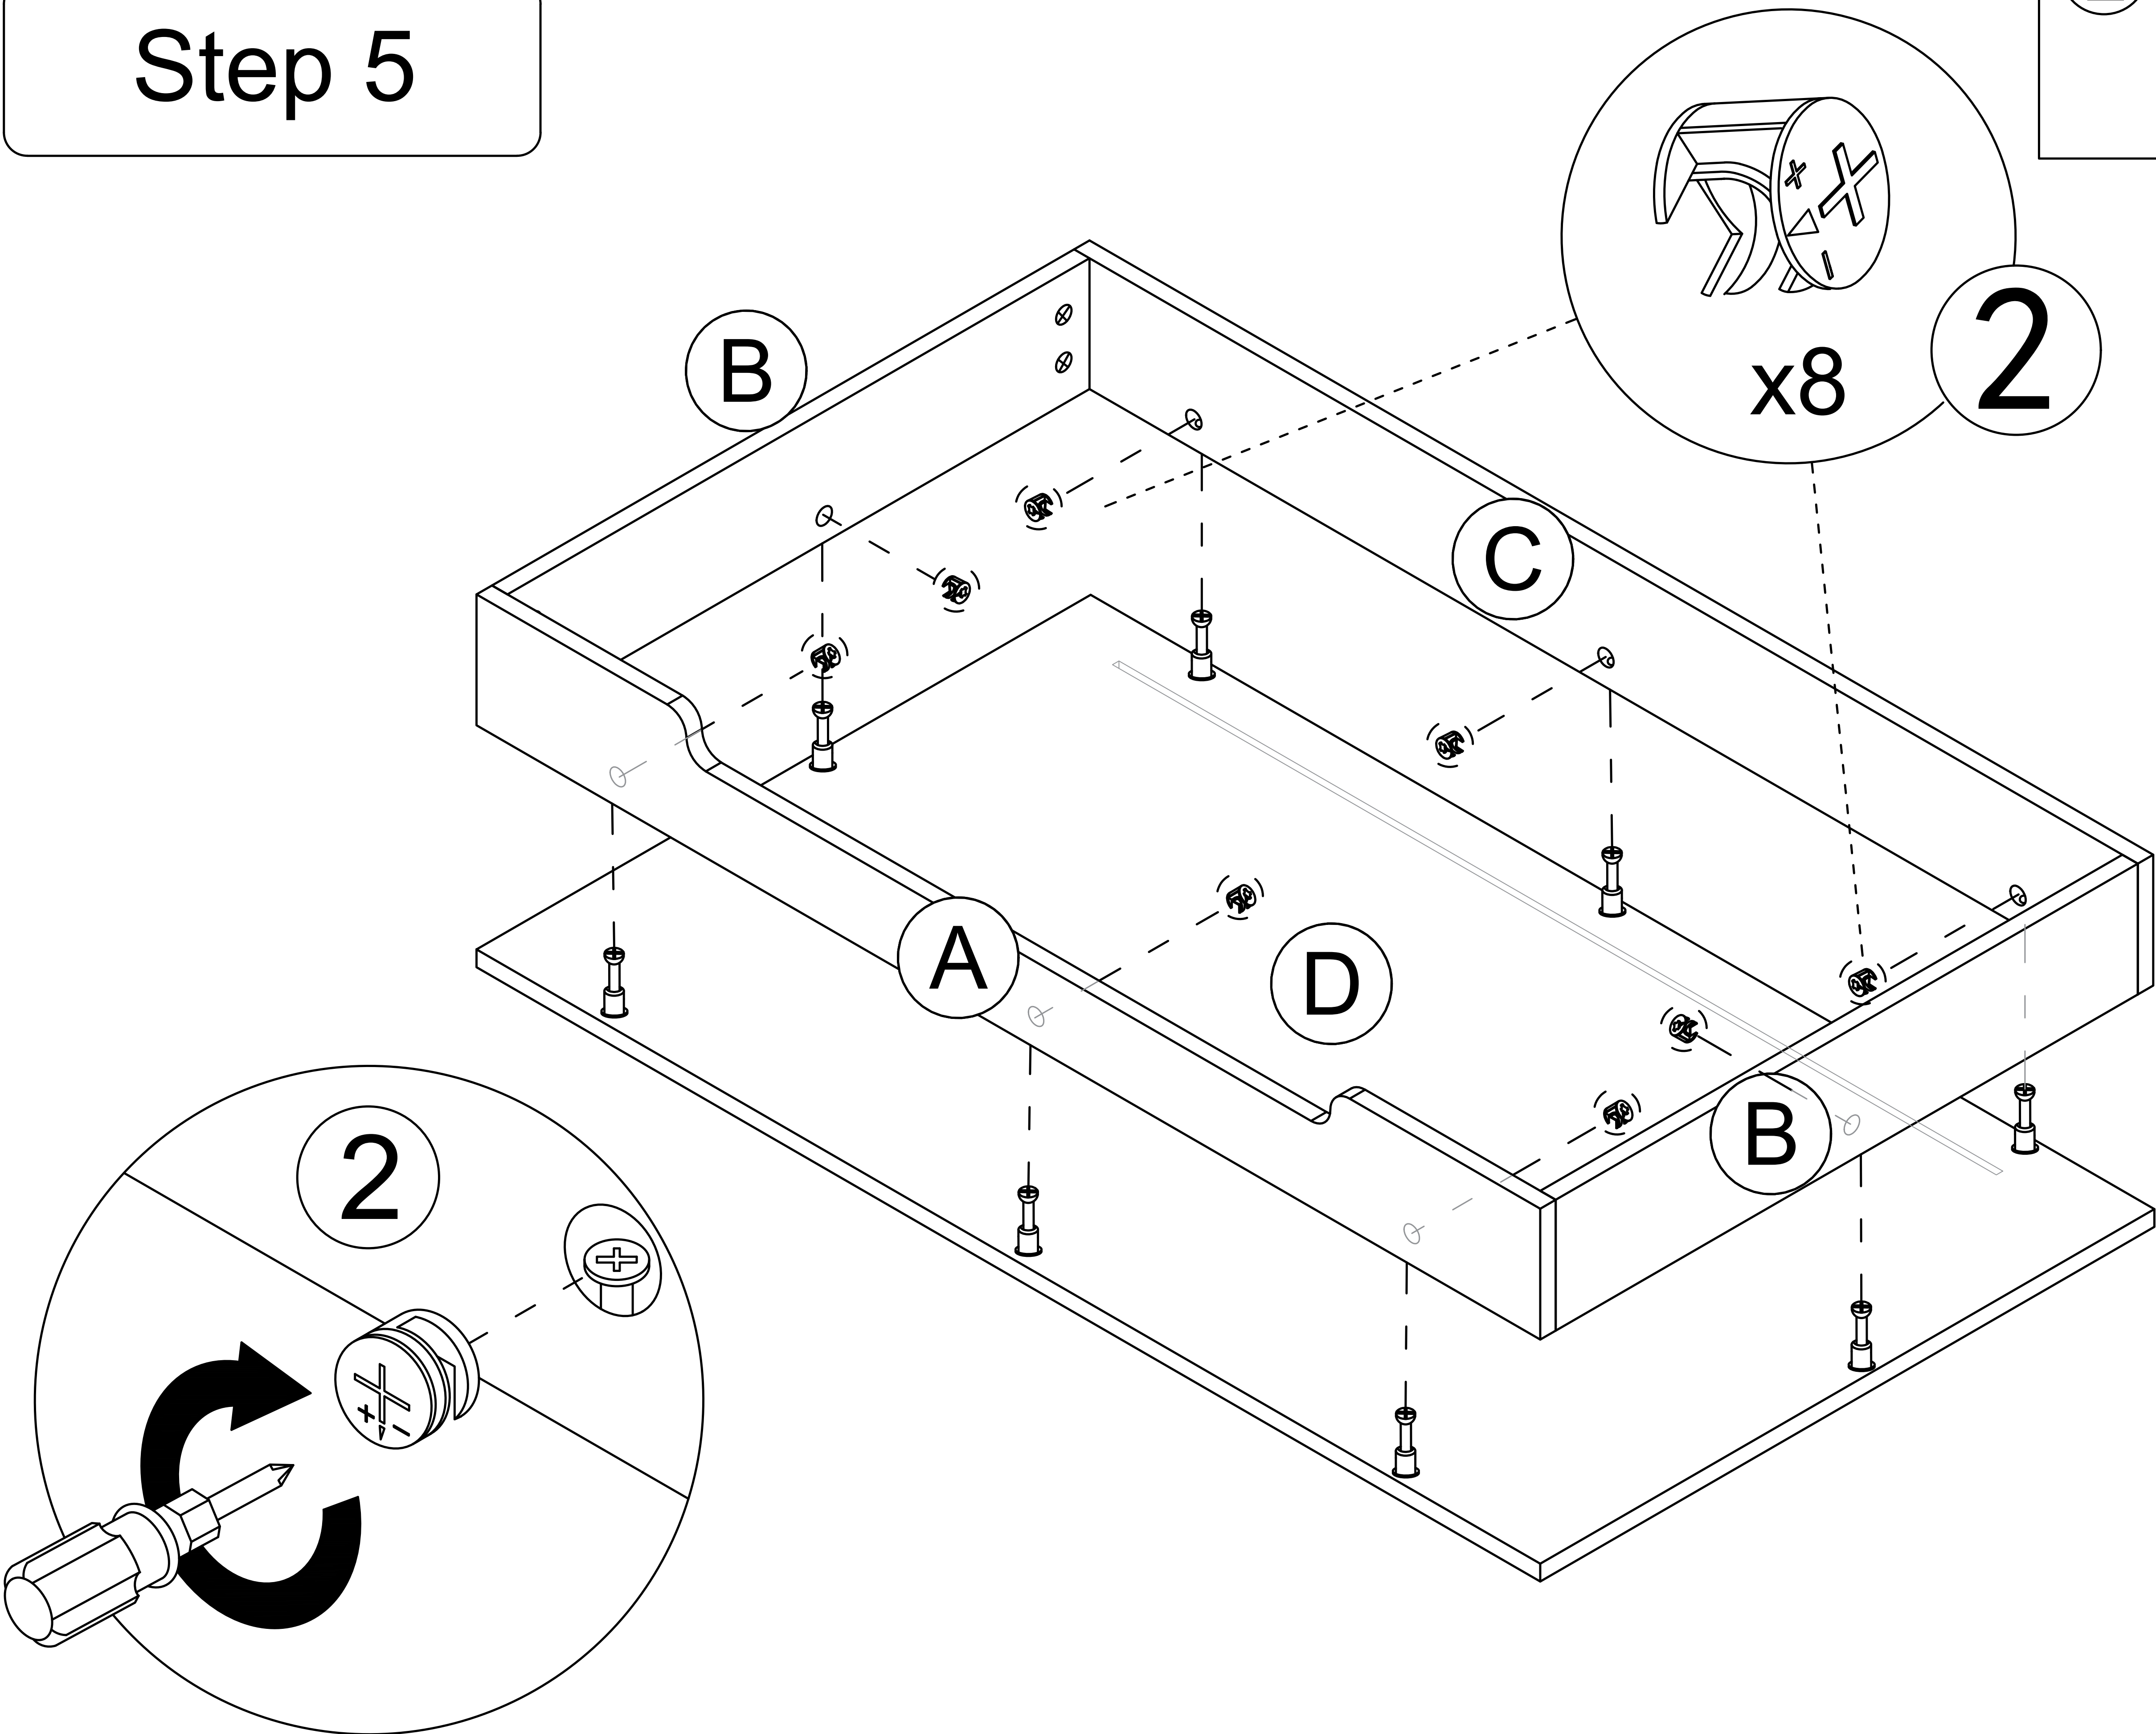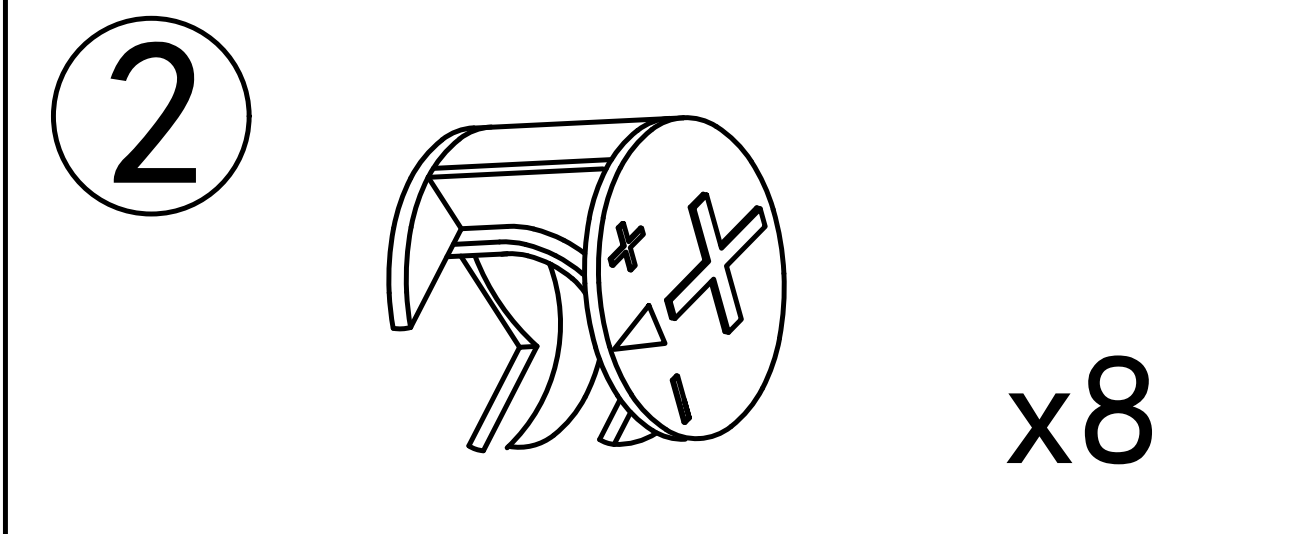


Step 6

4




x8

Tear off release paper and stick the black foot pad on the board

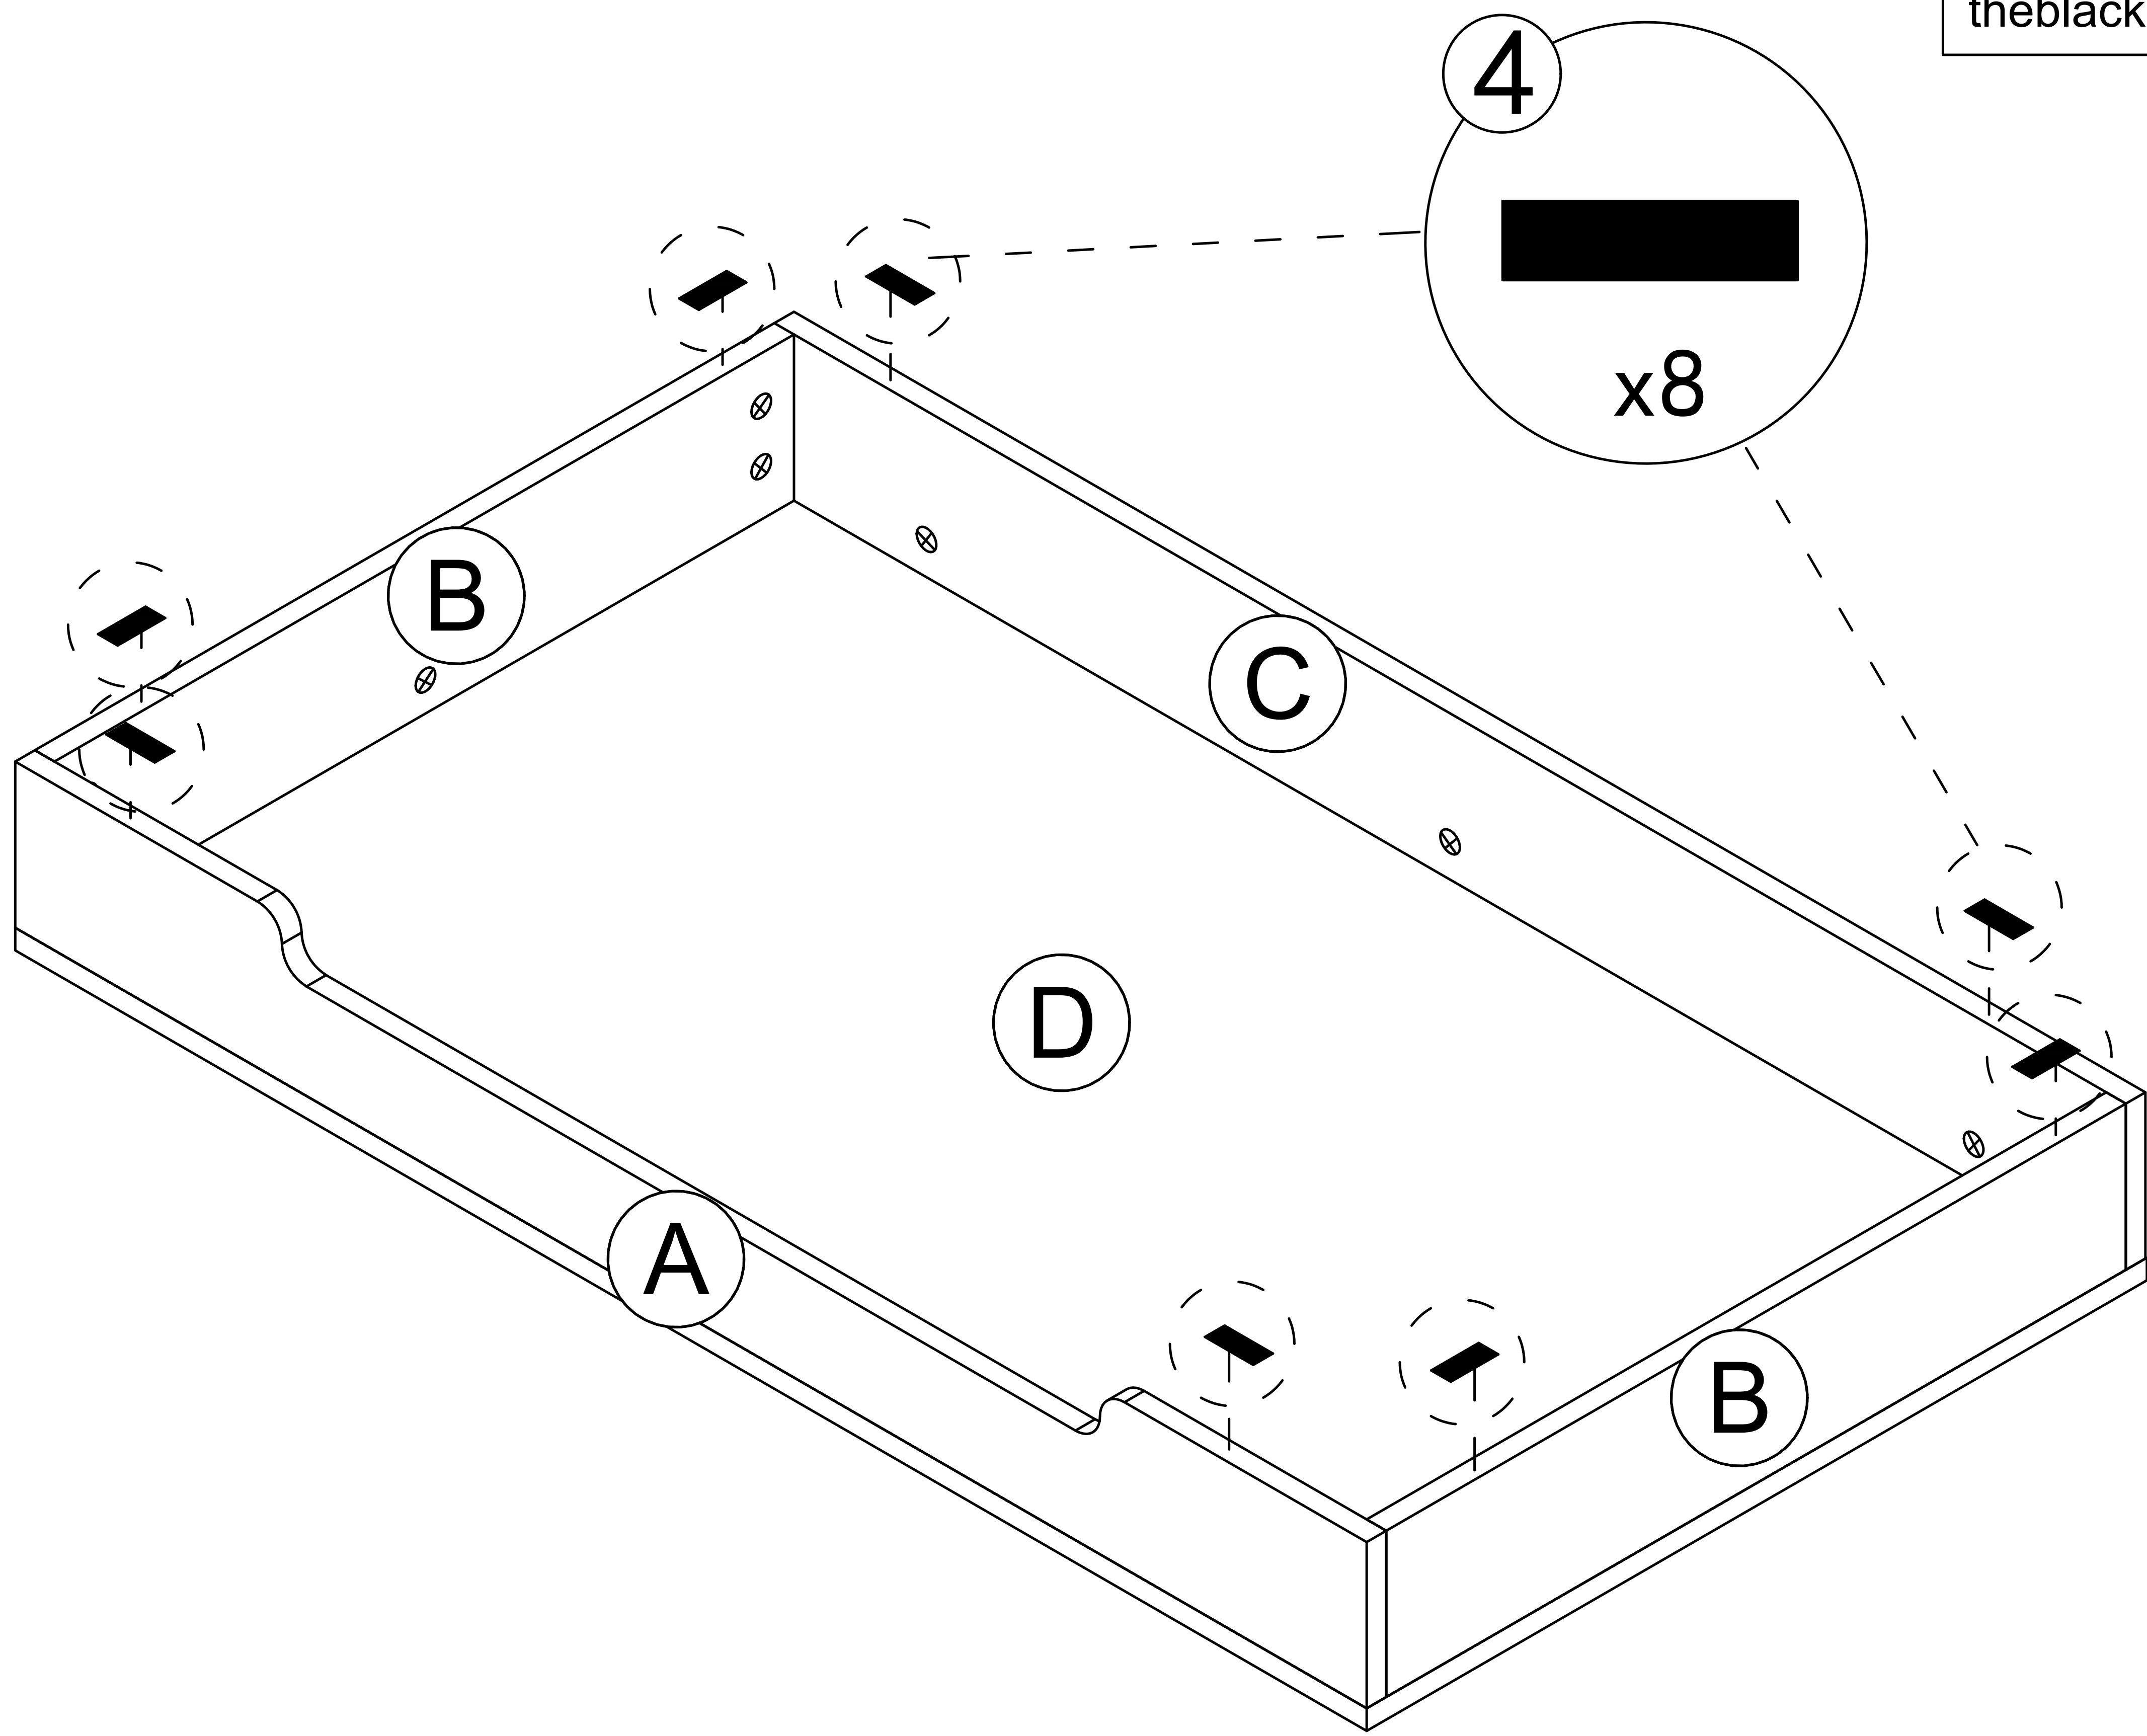


Step 7

1

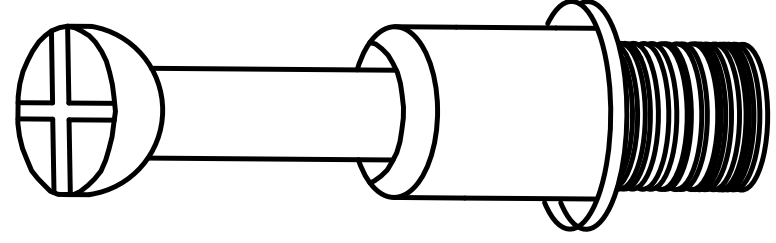


x4

3

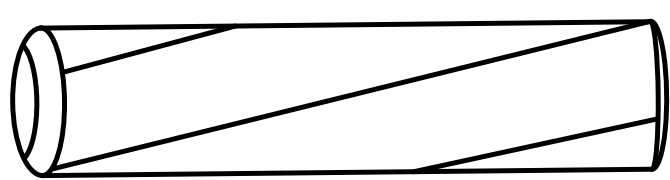


x4

1

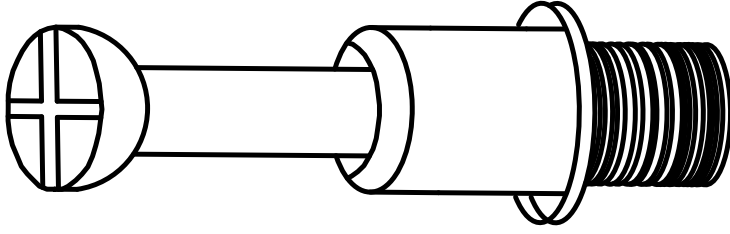


x4

3

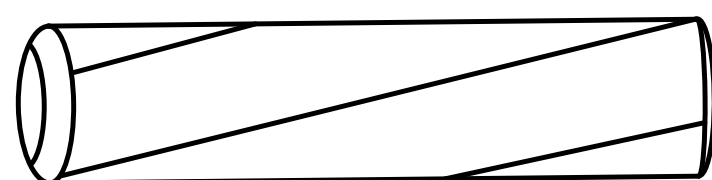


x4

5

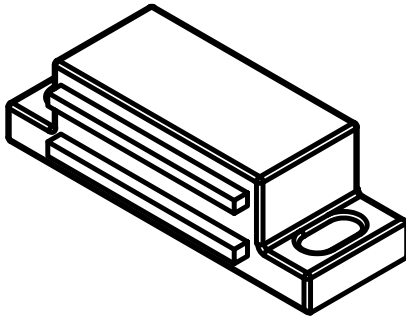



x1



x2

5

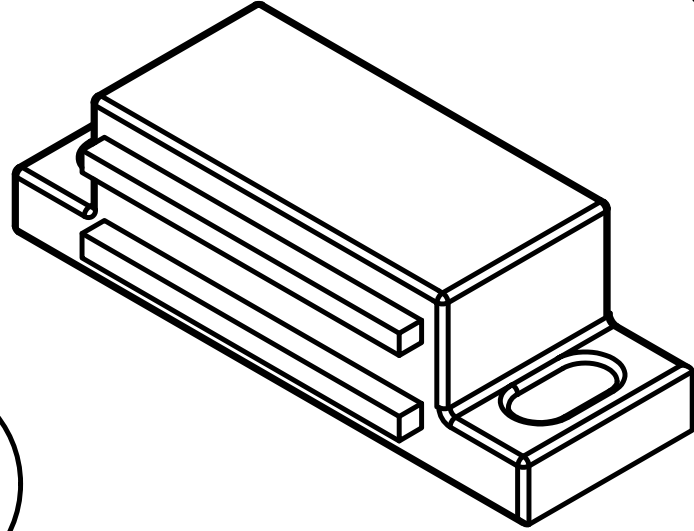


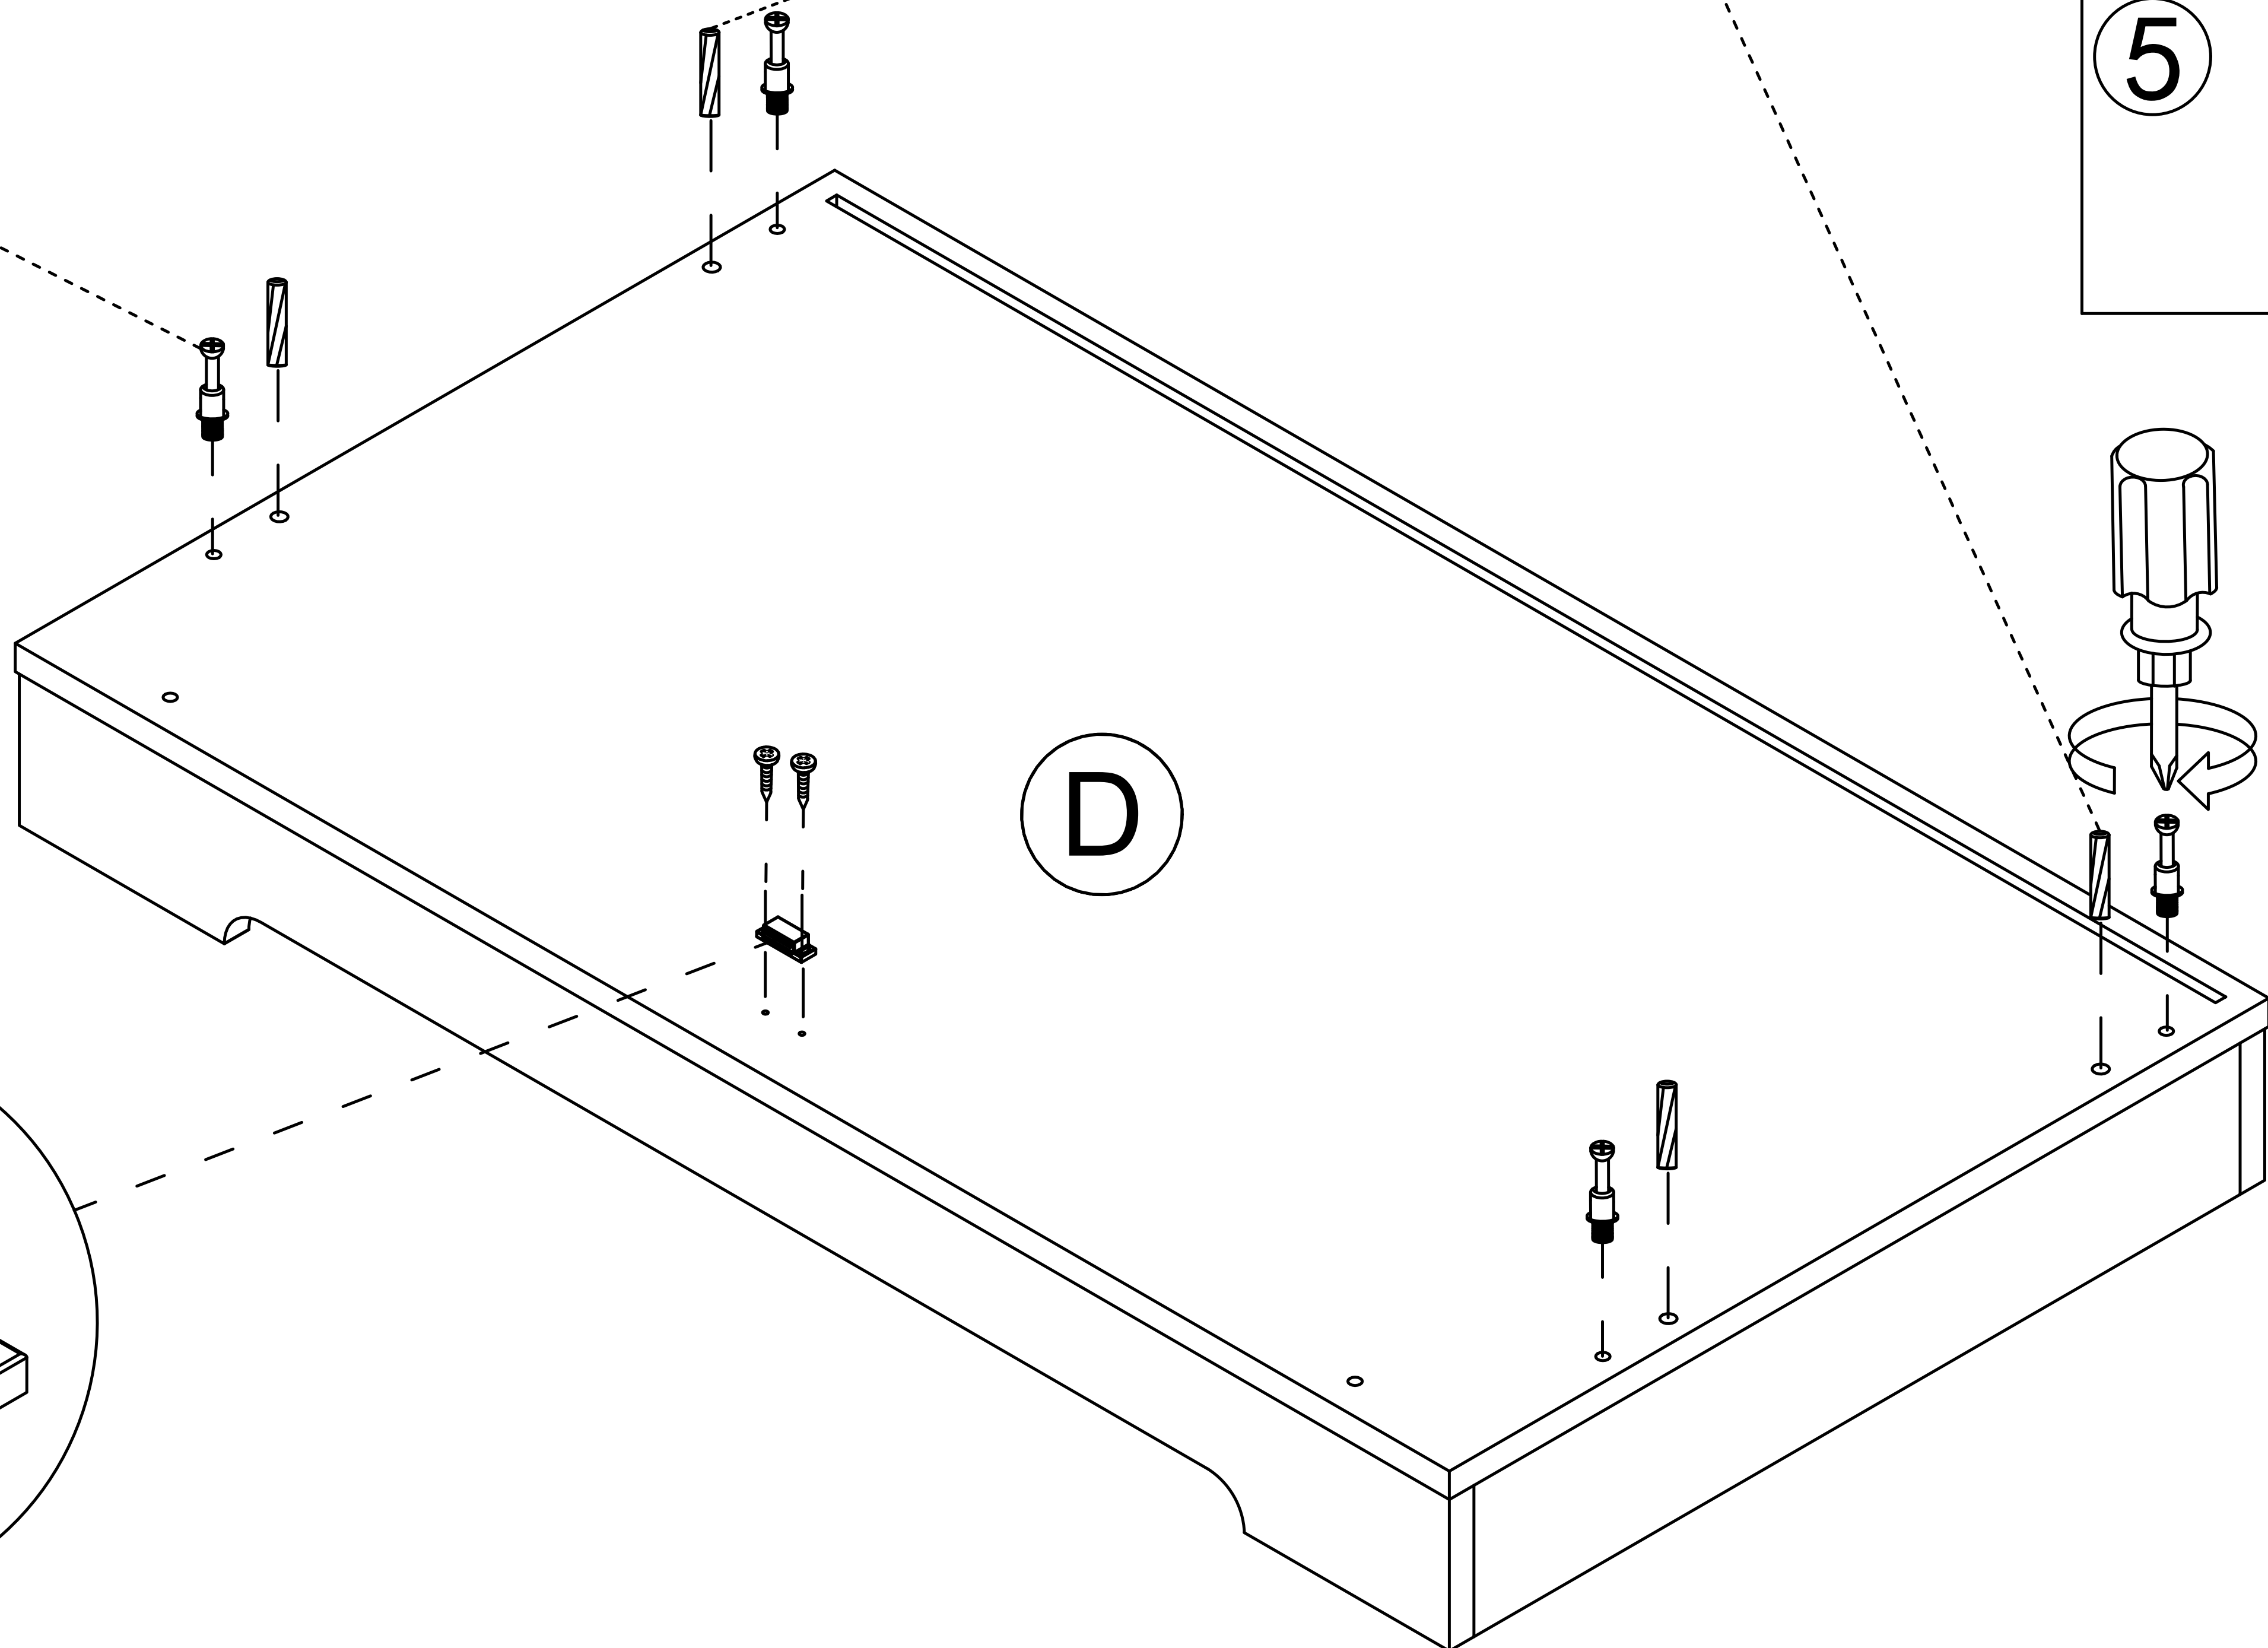


Pay attention to magnets' orientation

Step 8

1

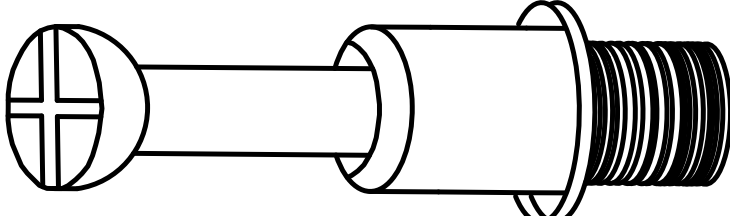


x6

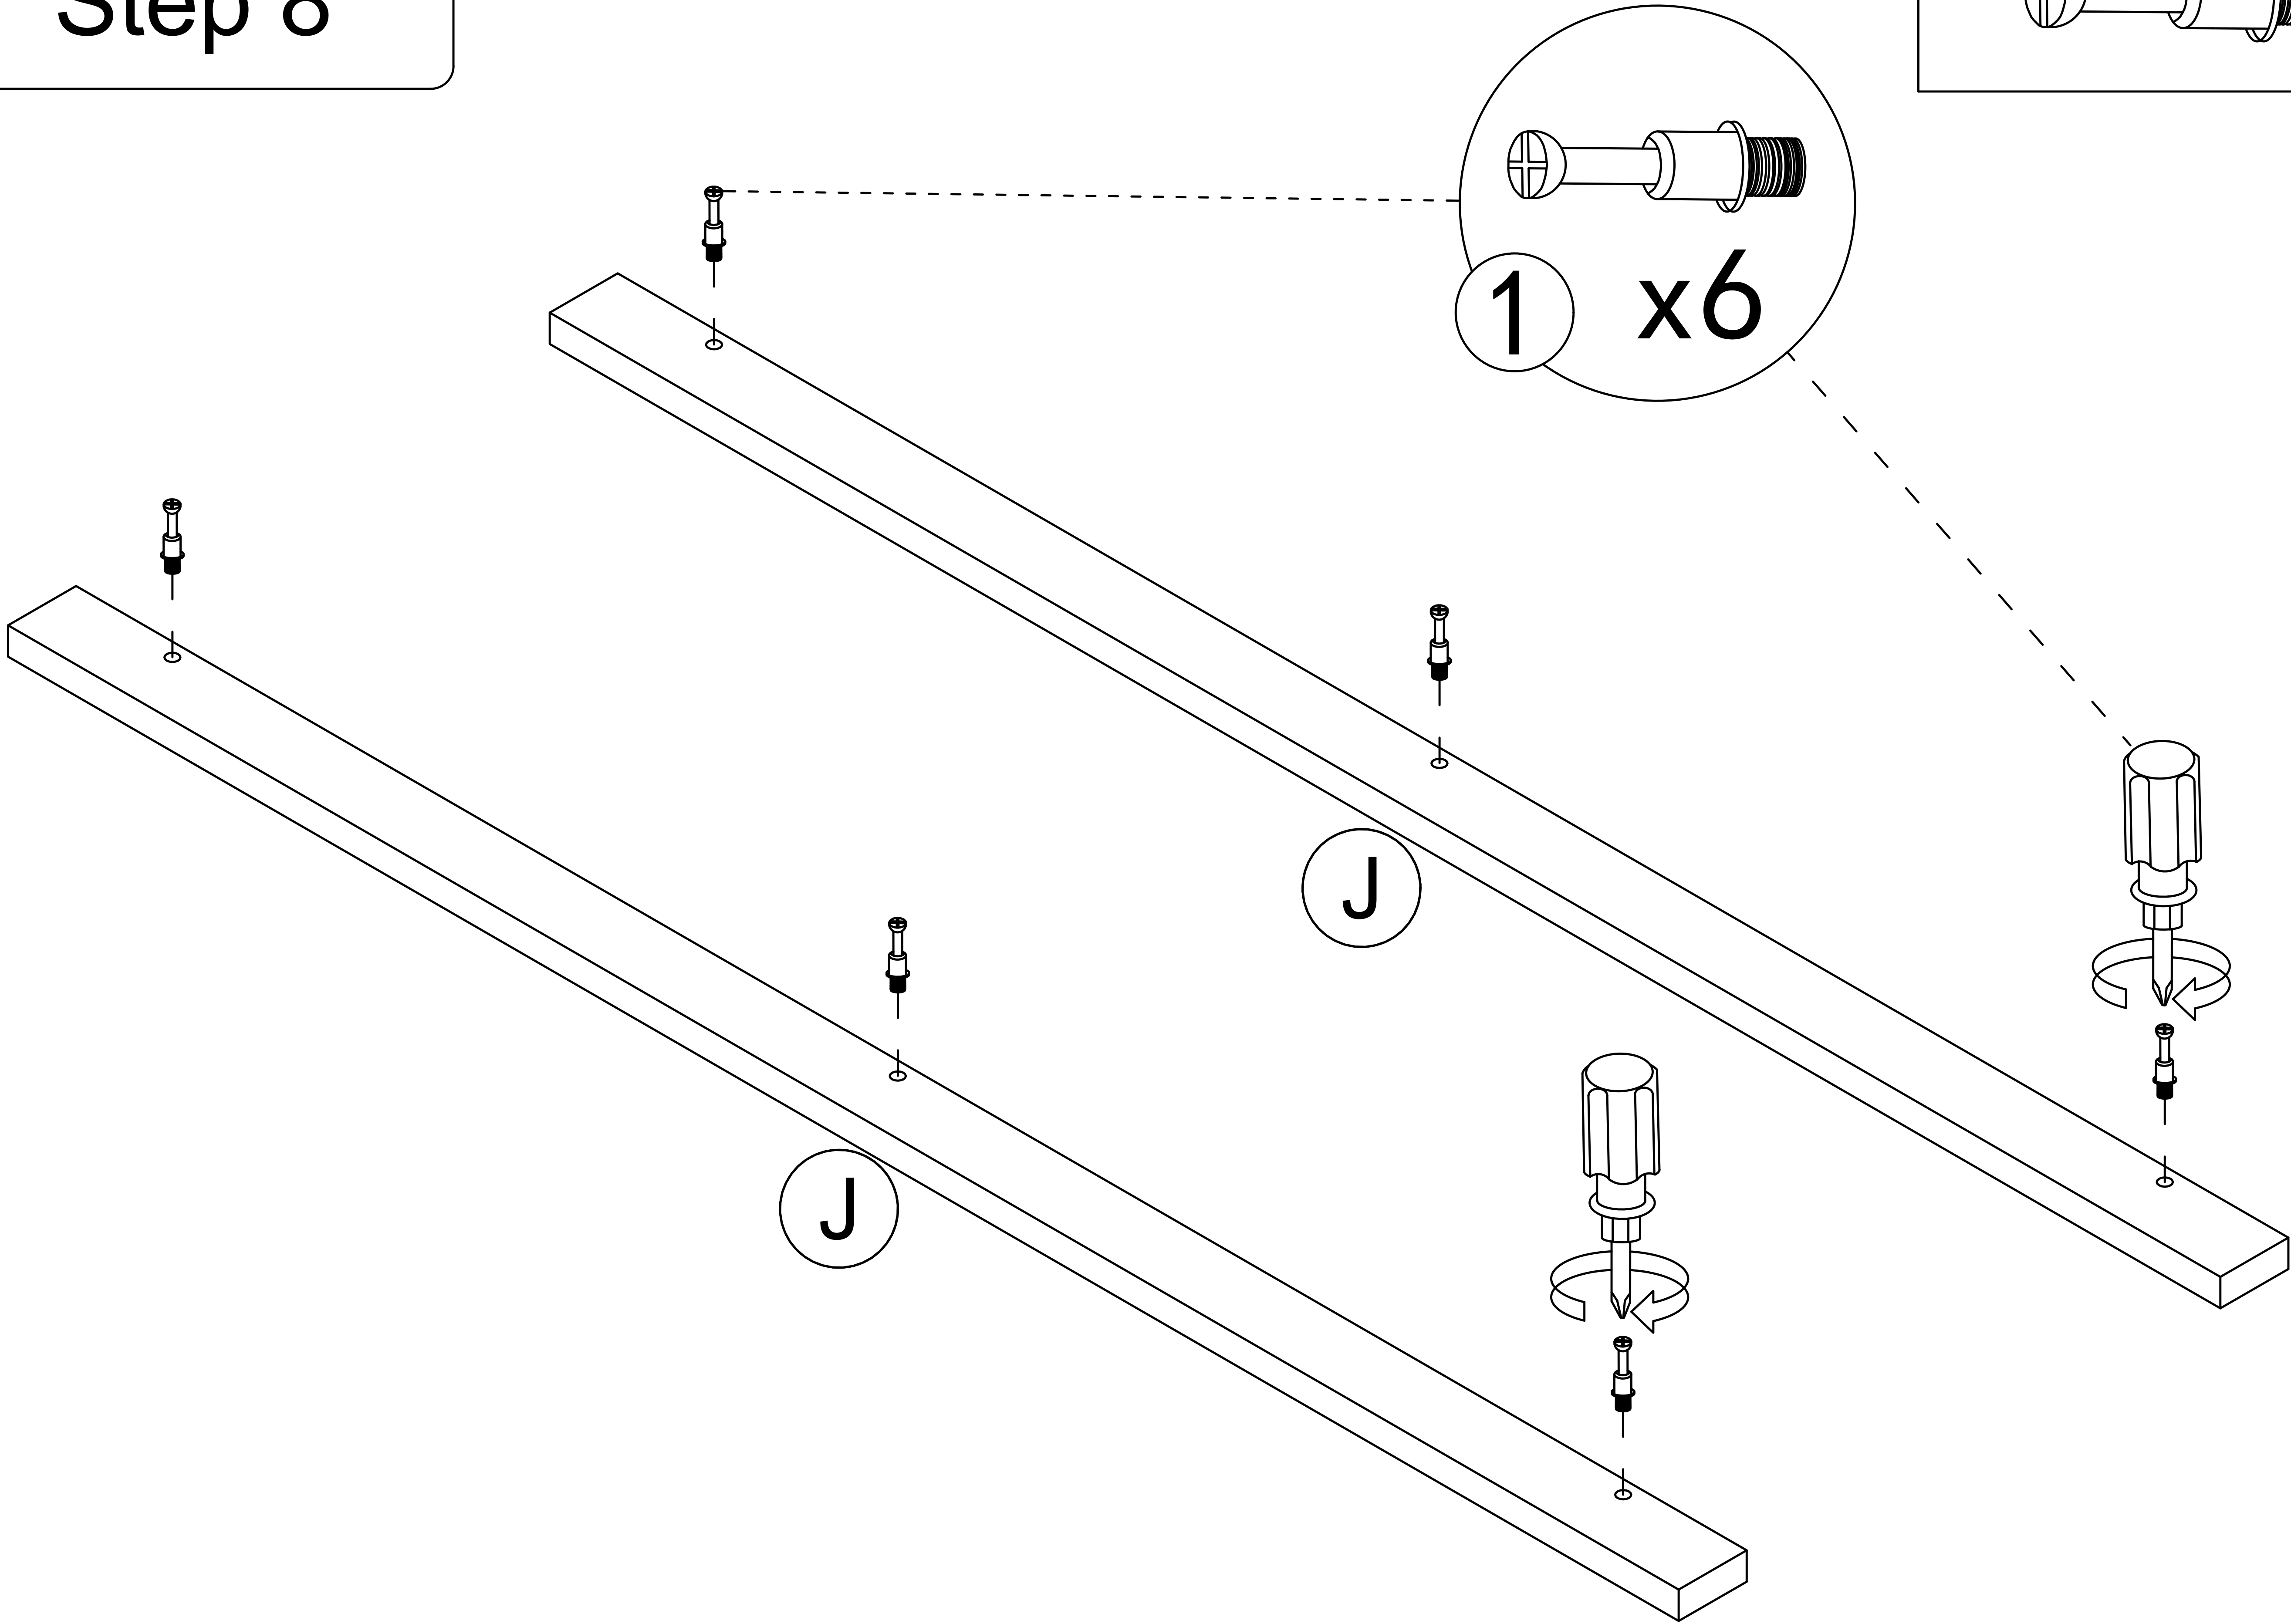


Step 9


2

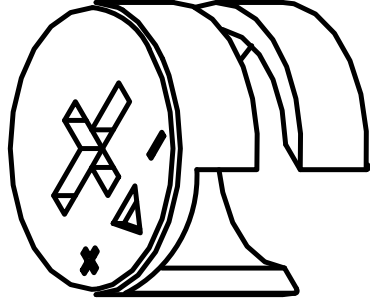


x6

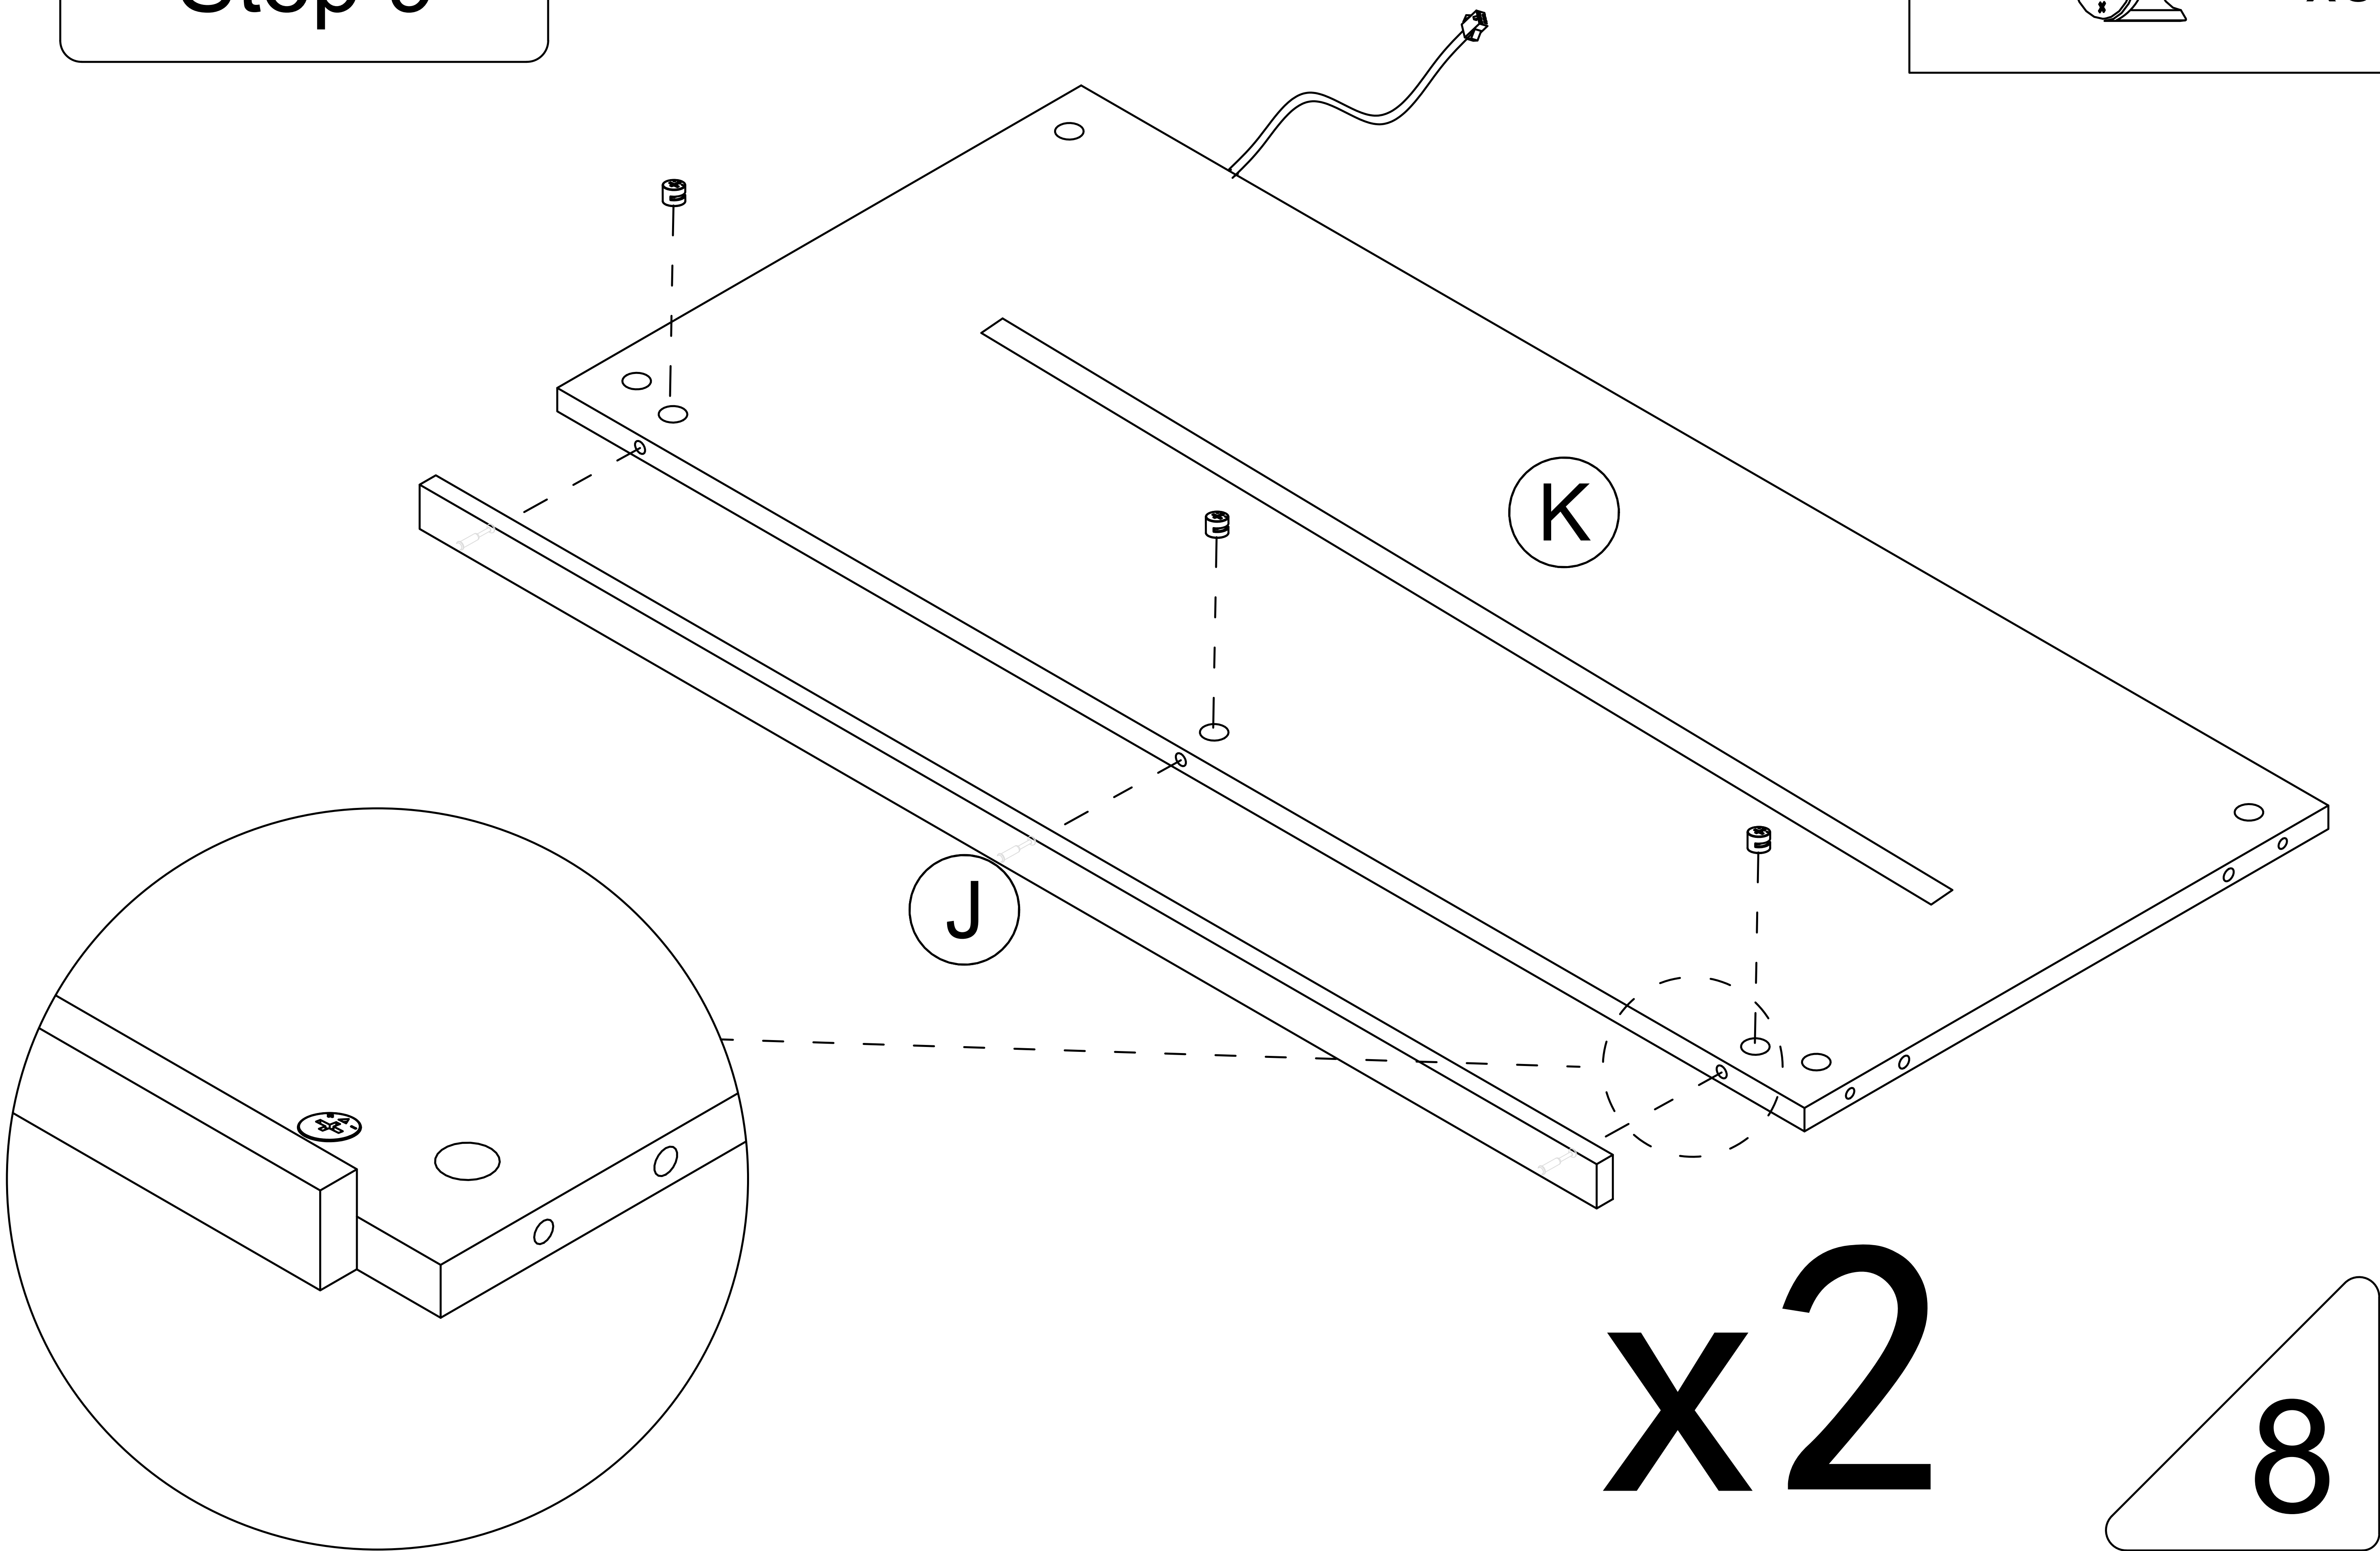


Step 10

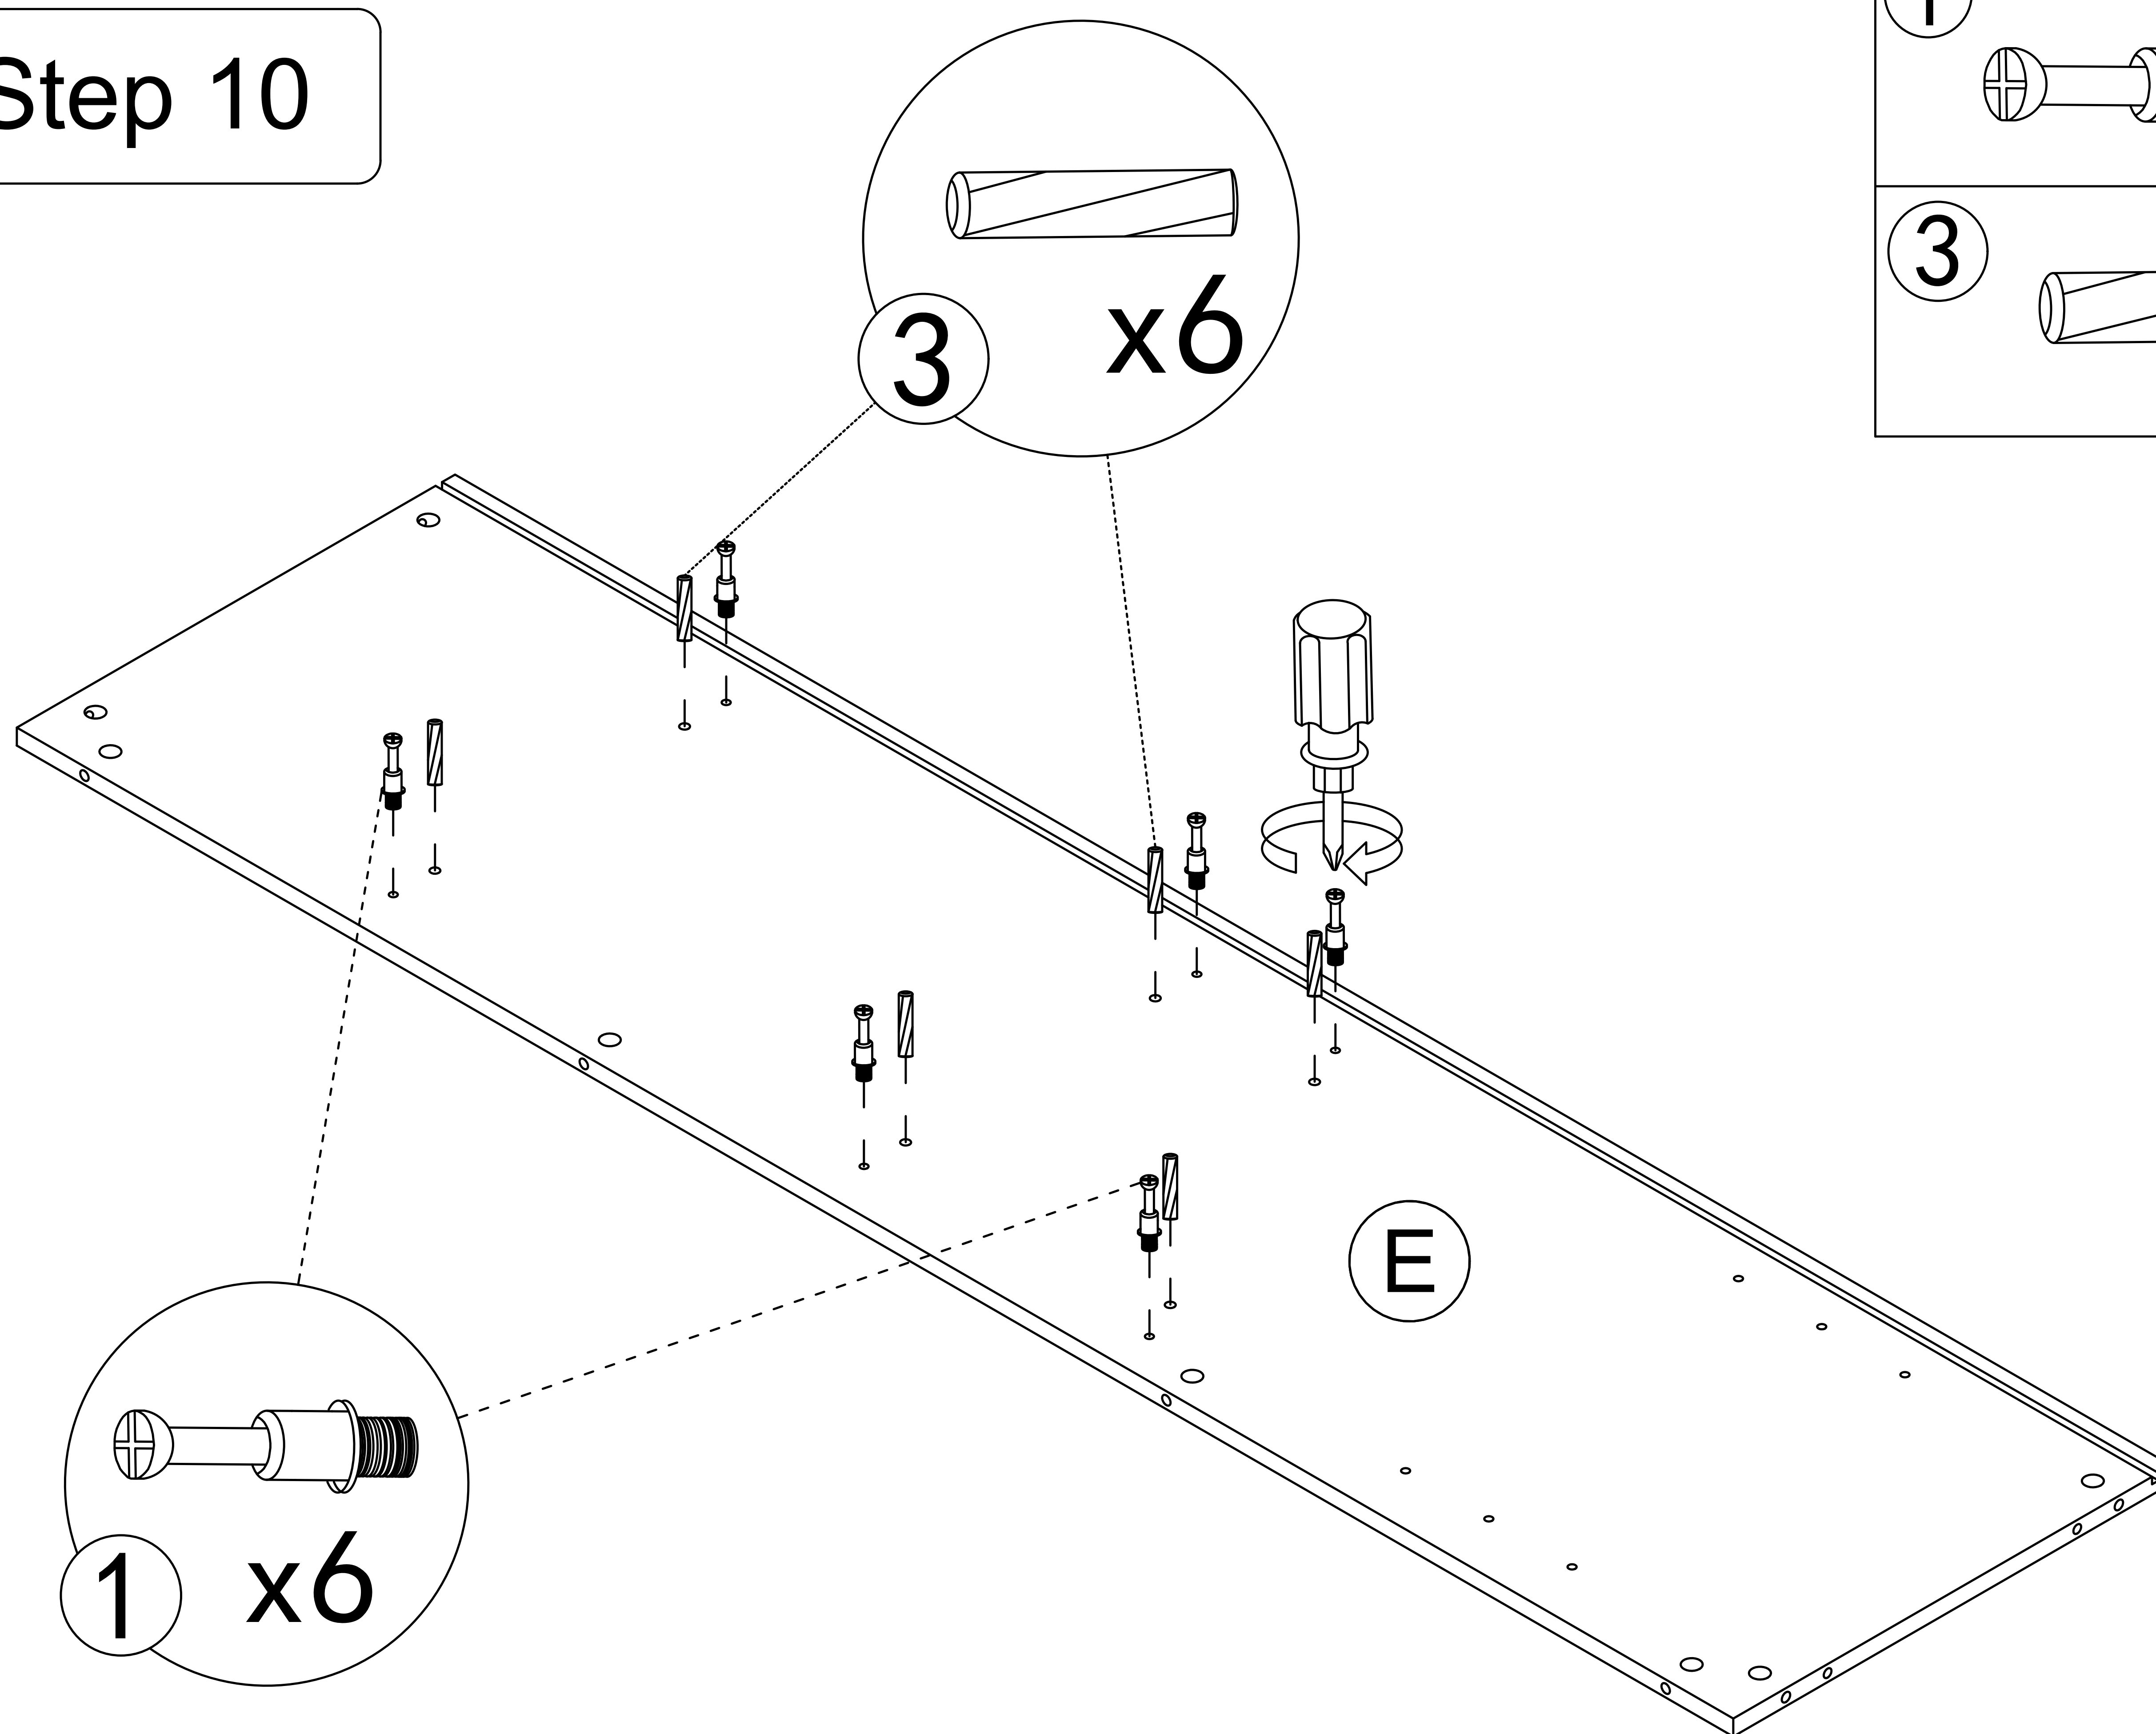


1

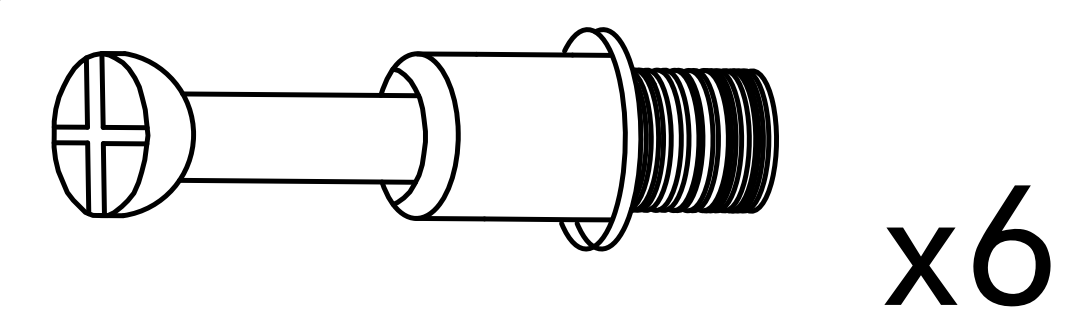



3

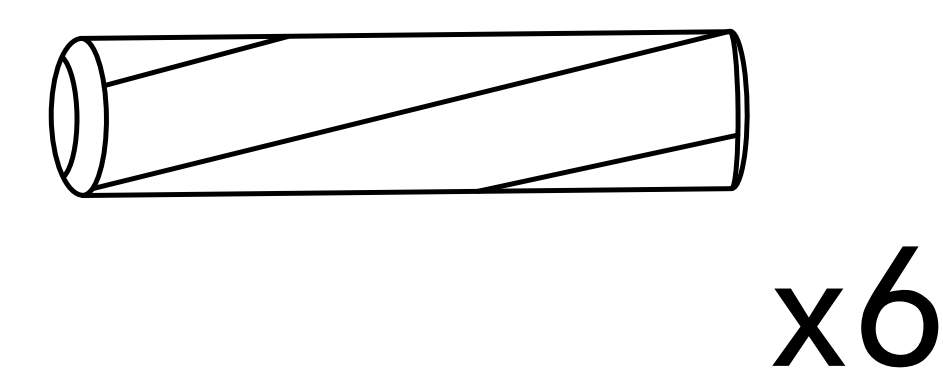

Step 11

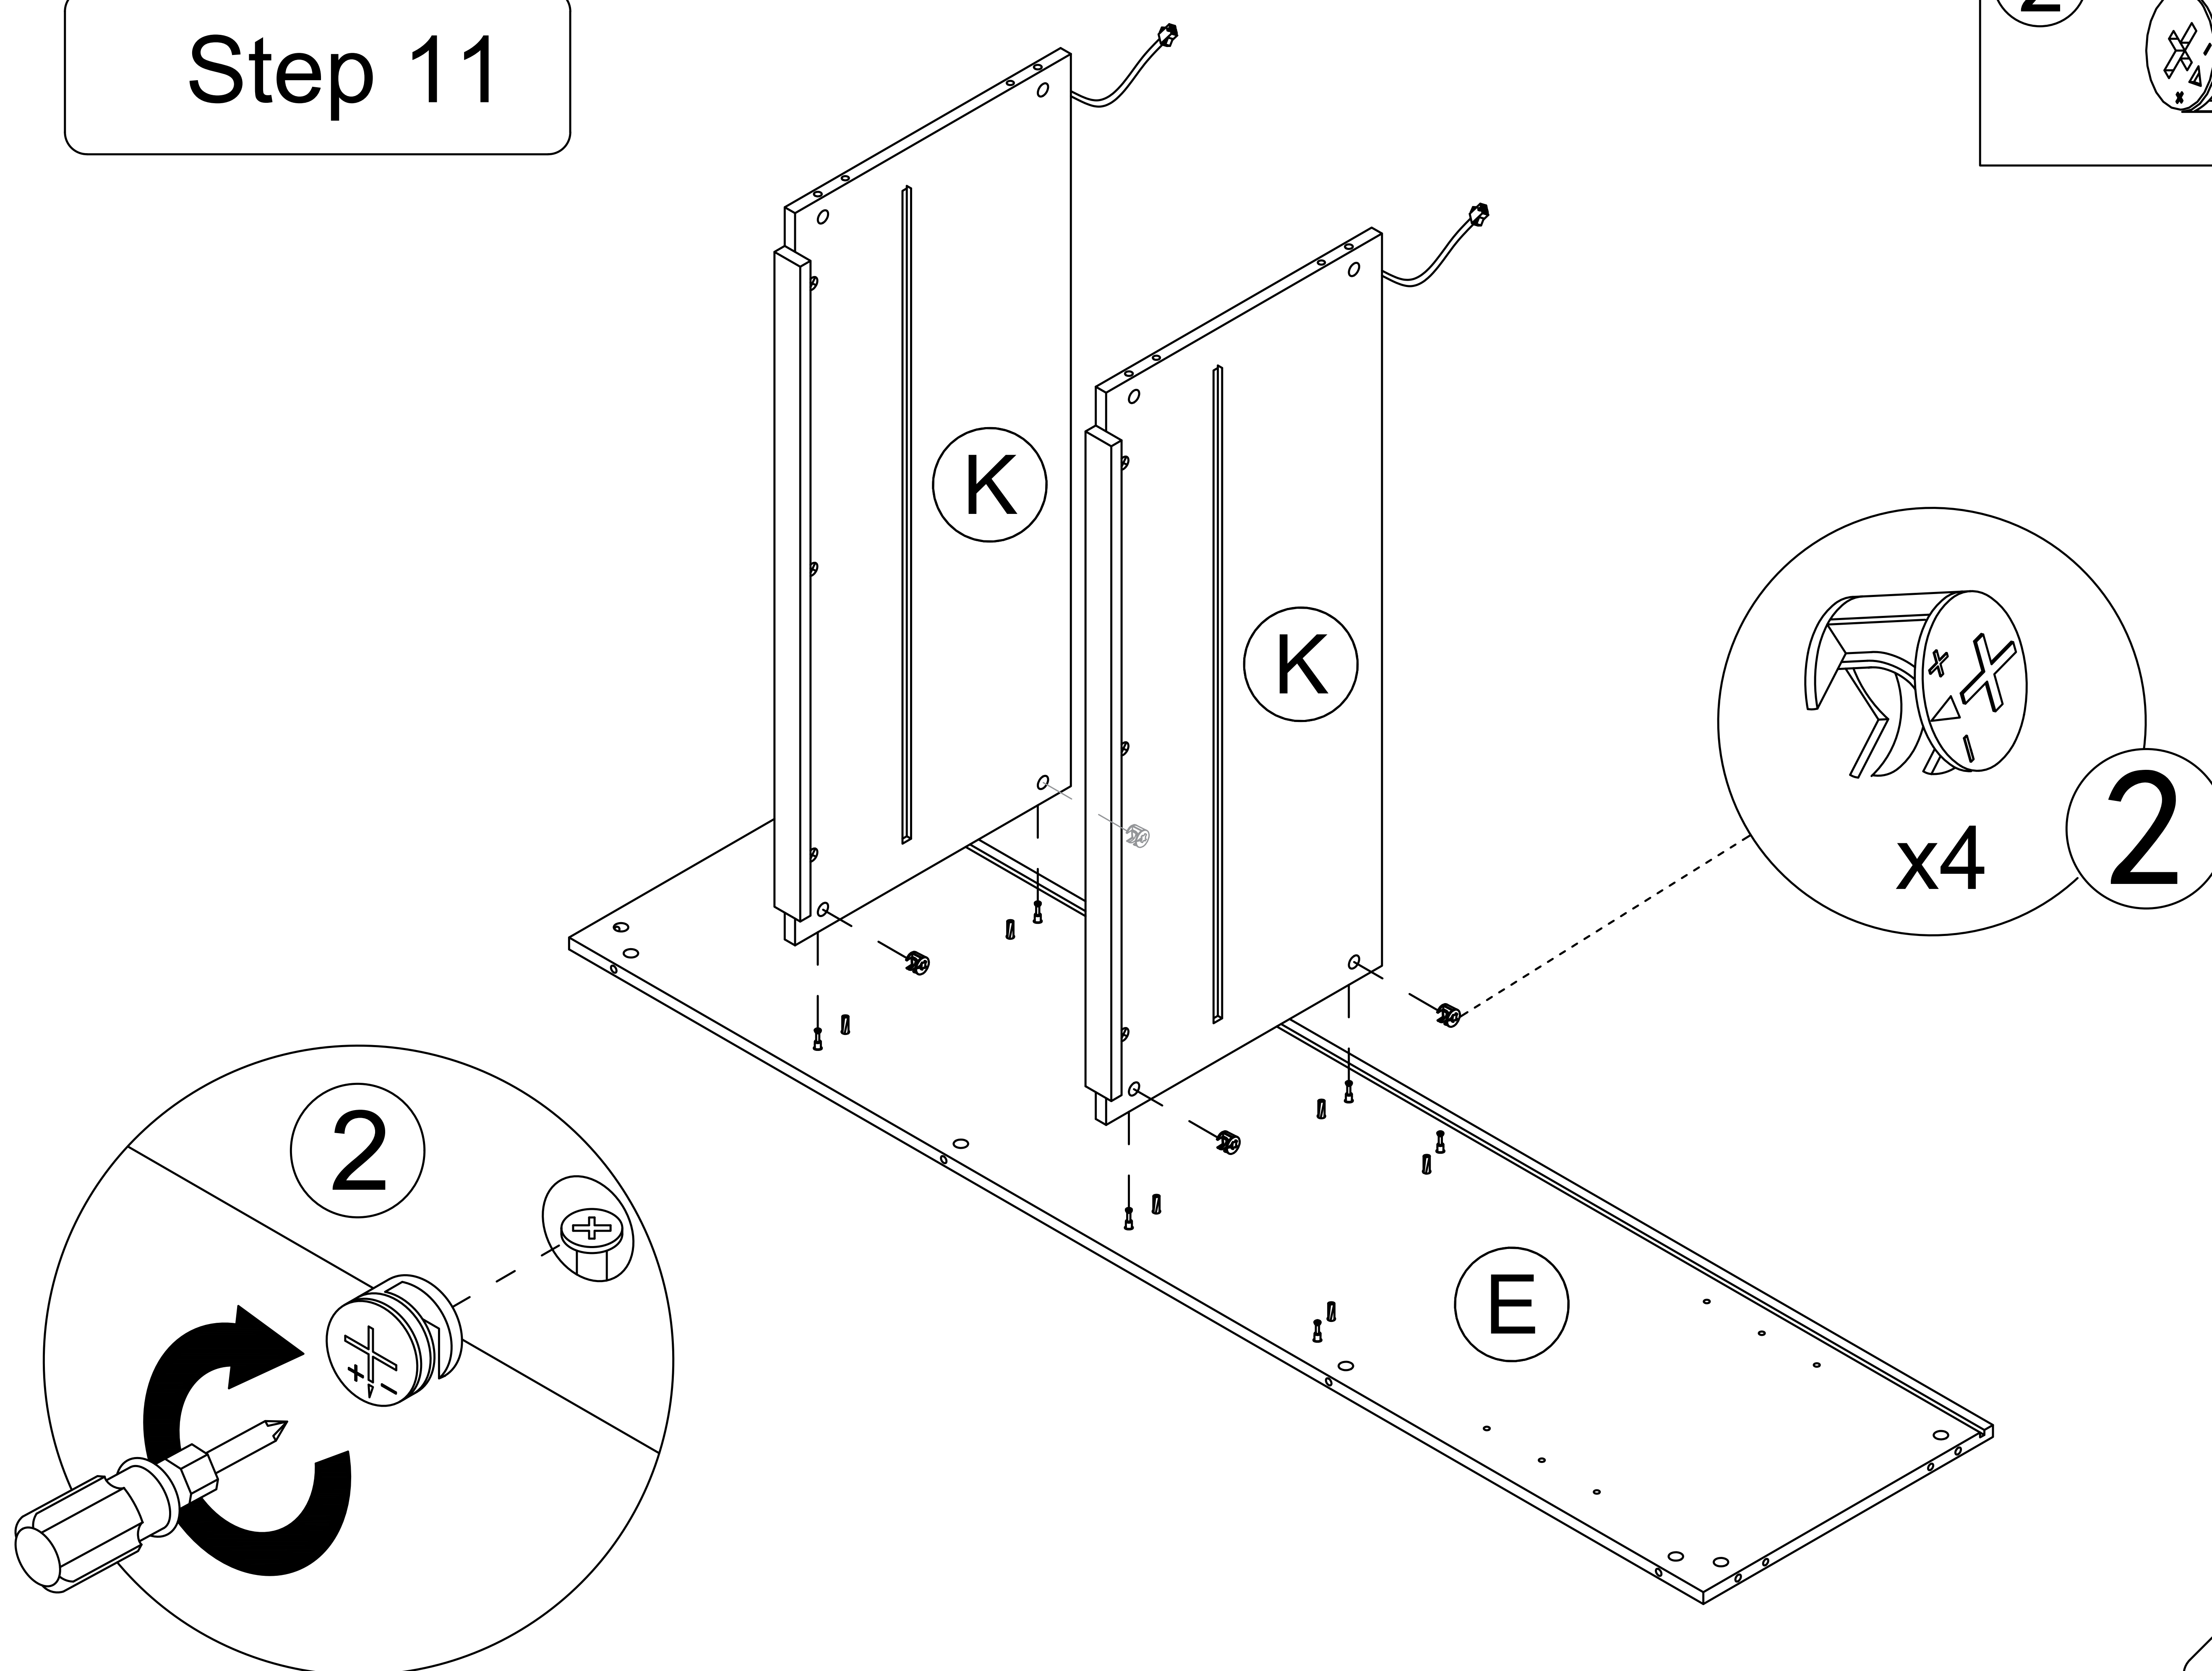


2

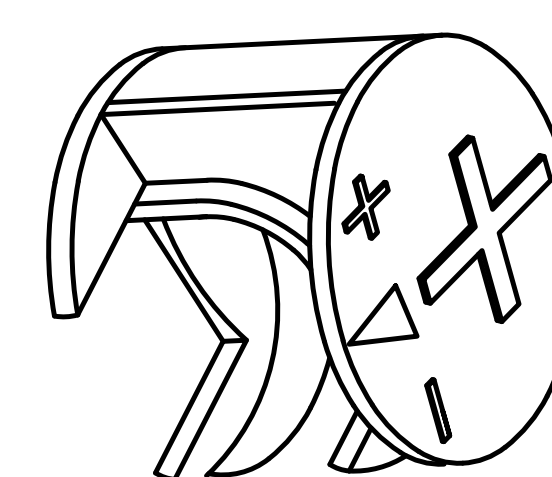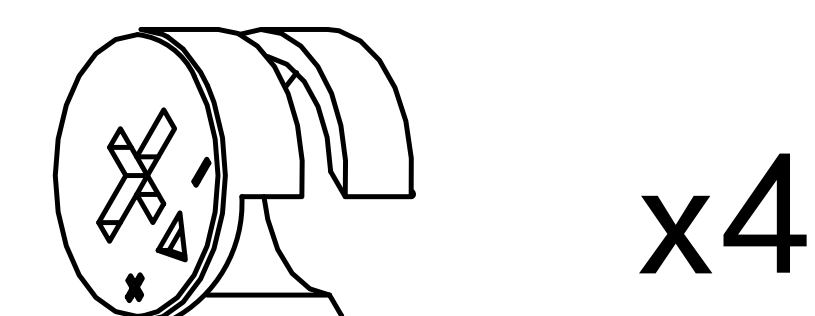

x4

2


2

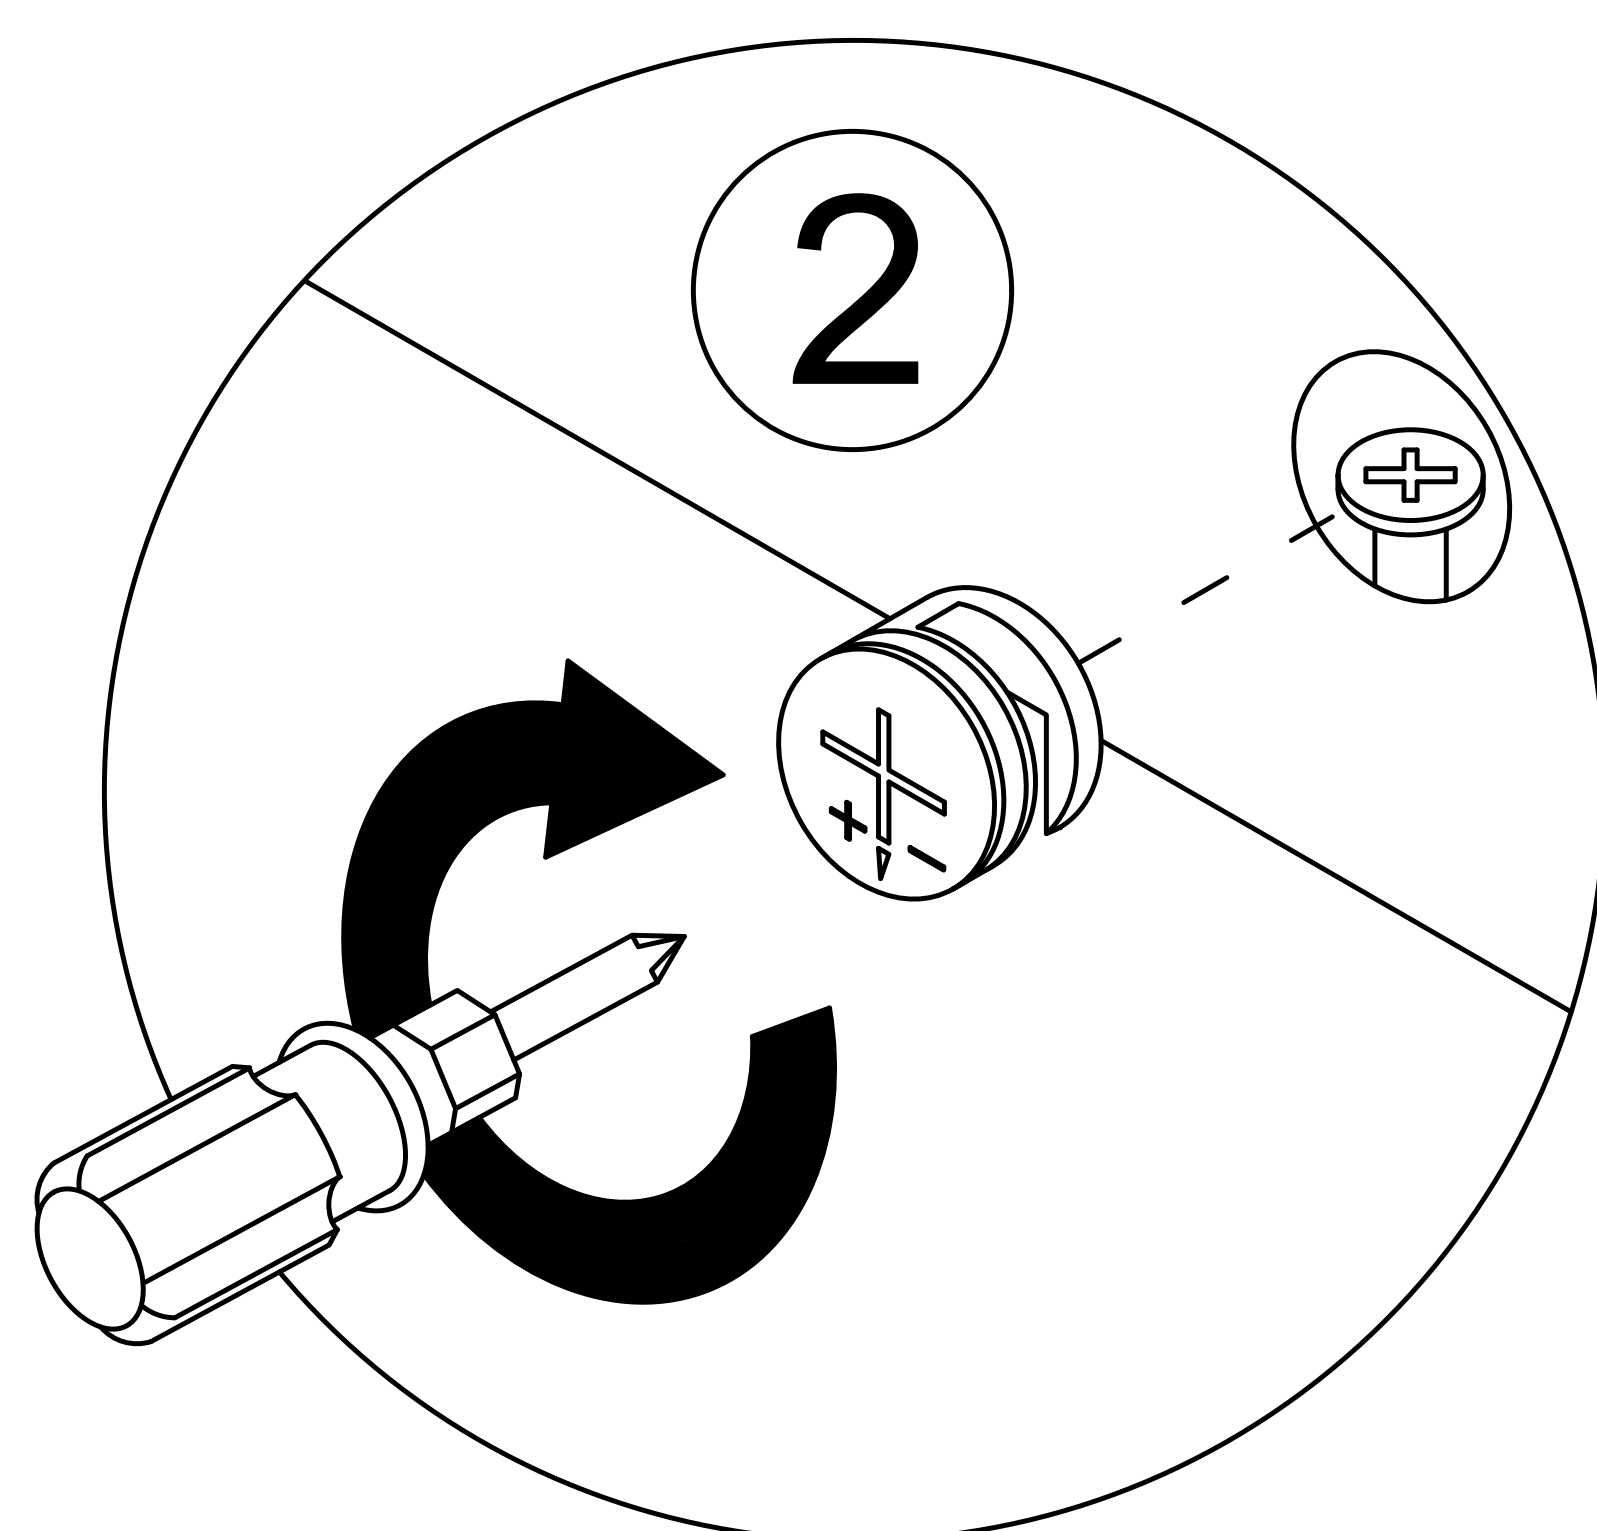


9

Step 12

2

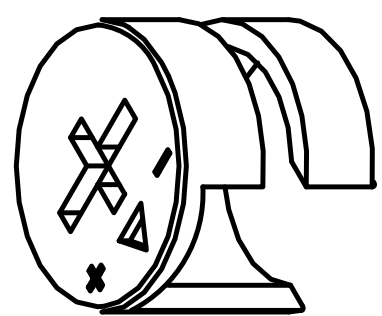


x2

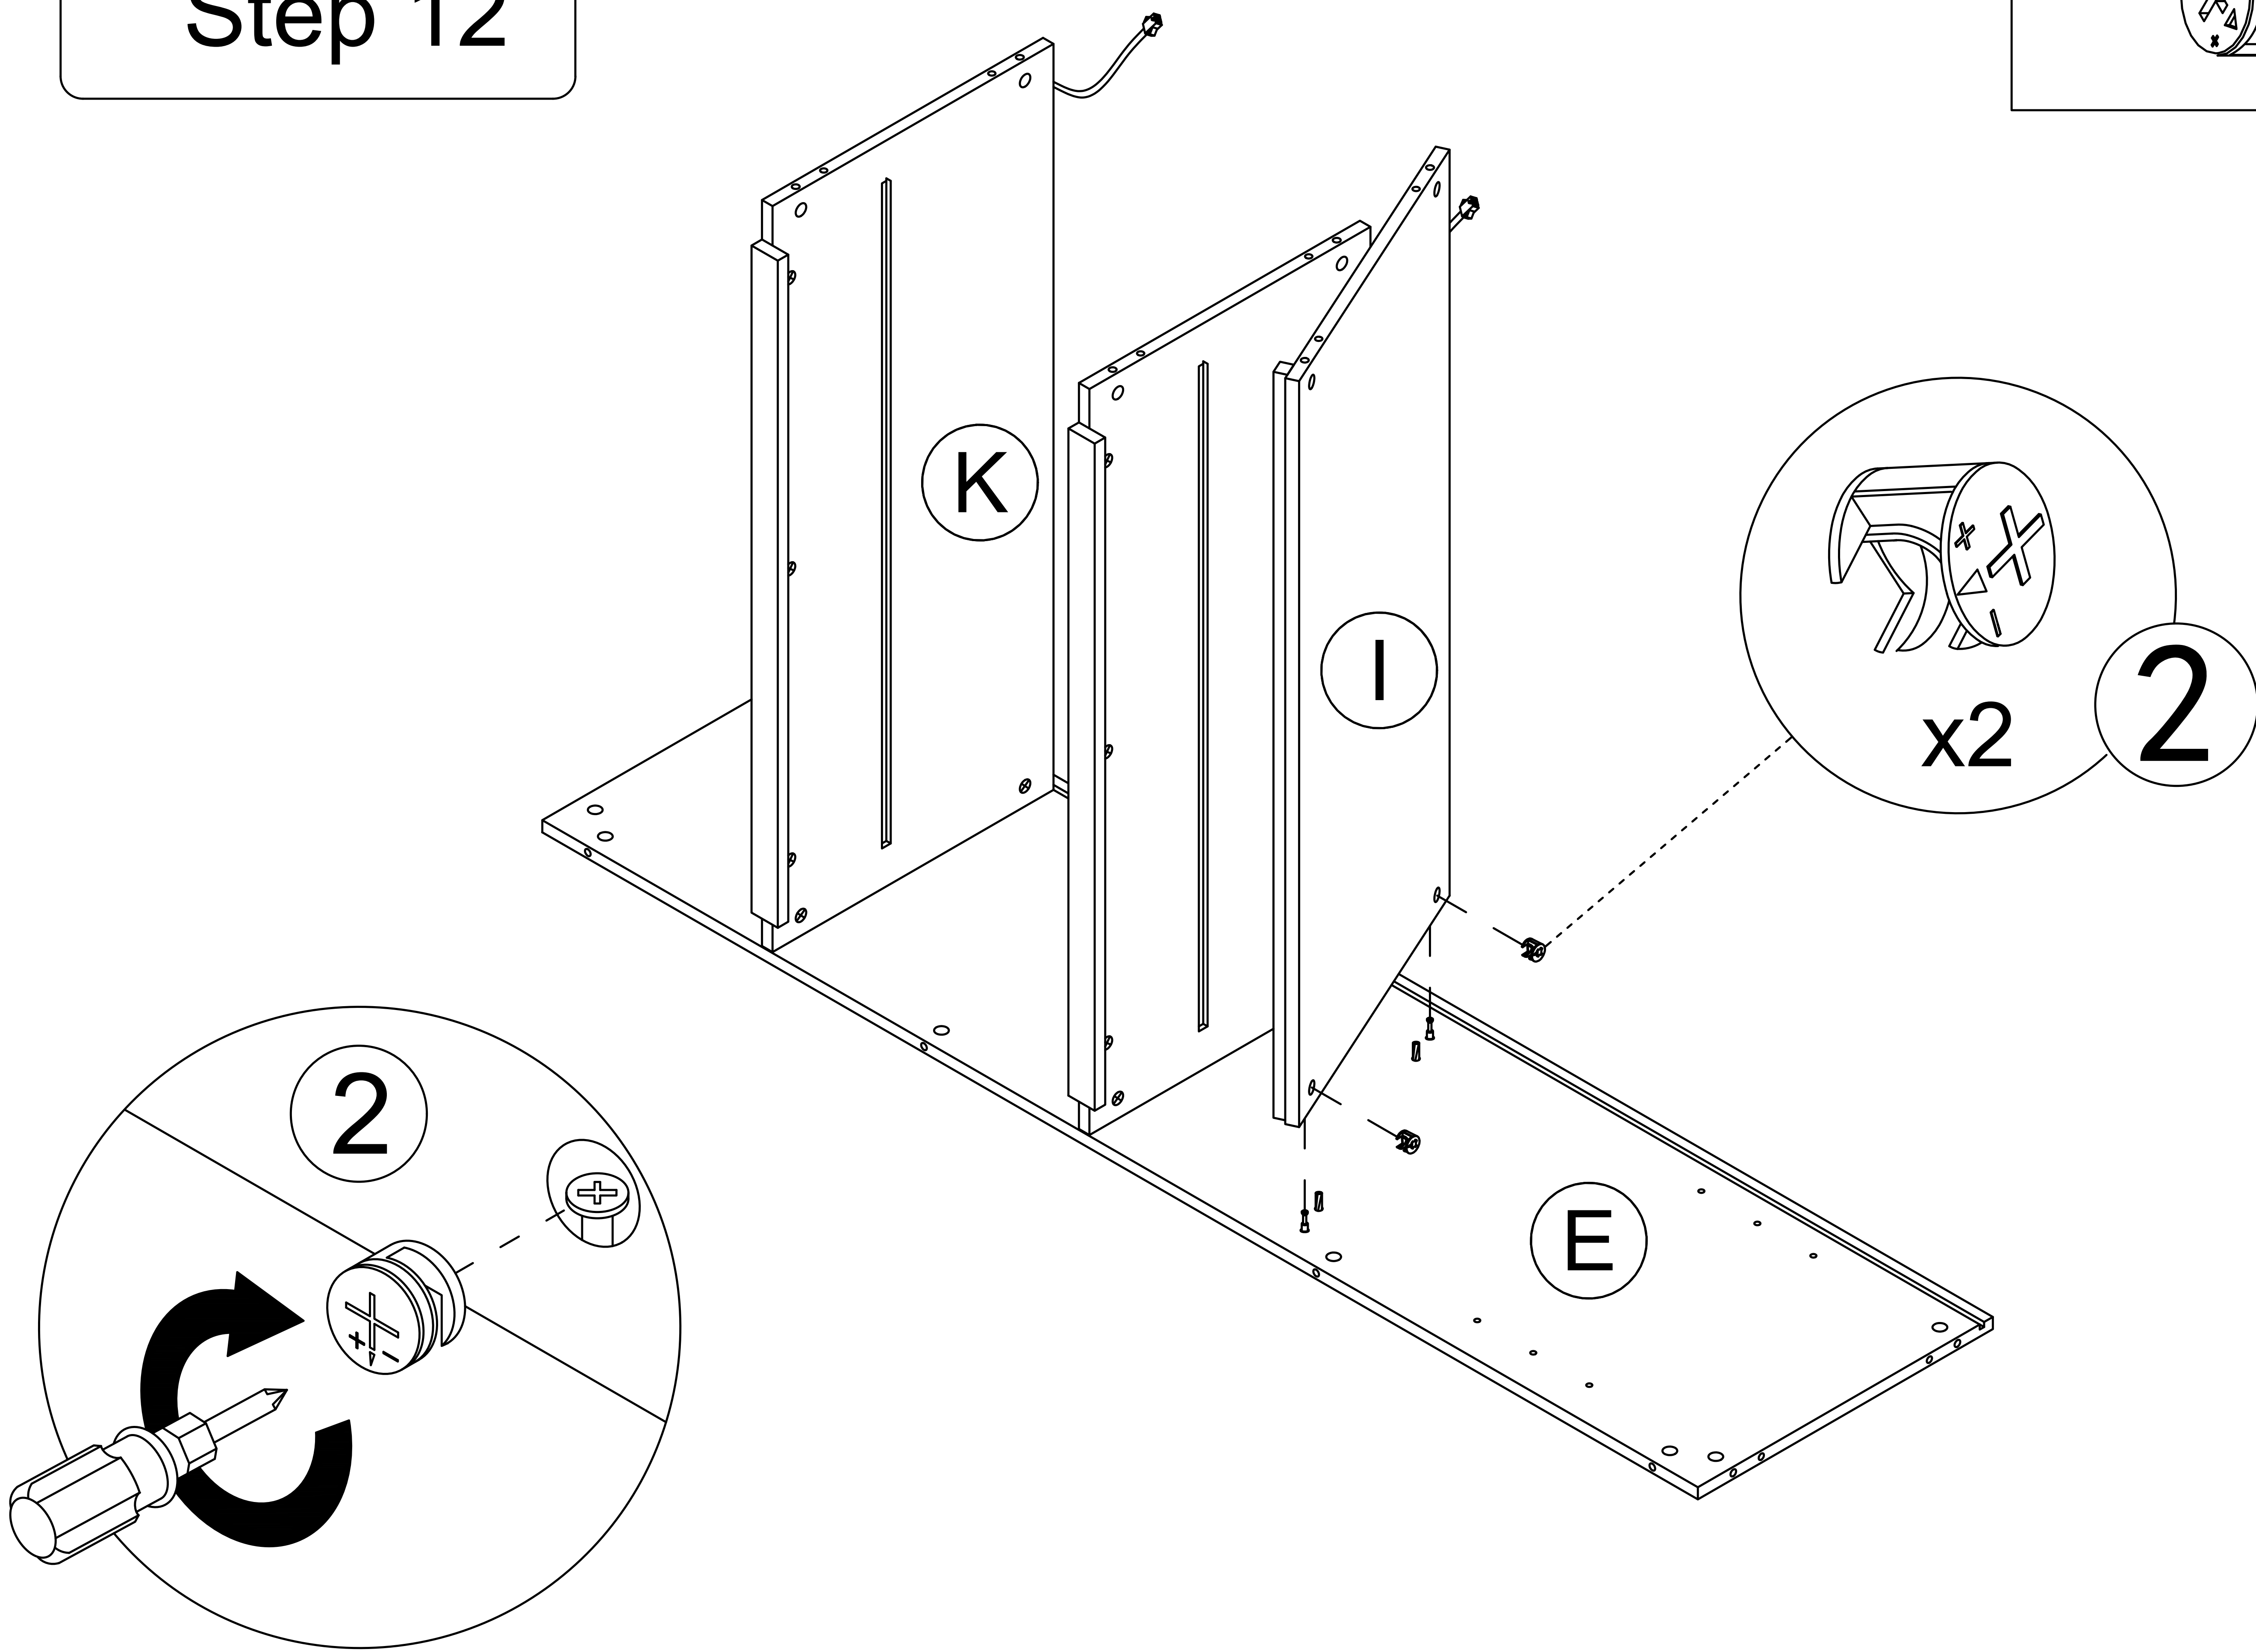


Step 13

3

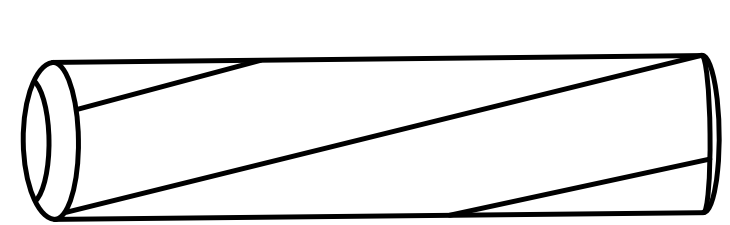


x6

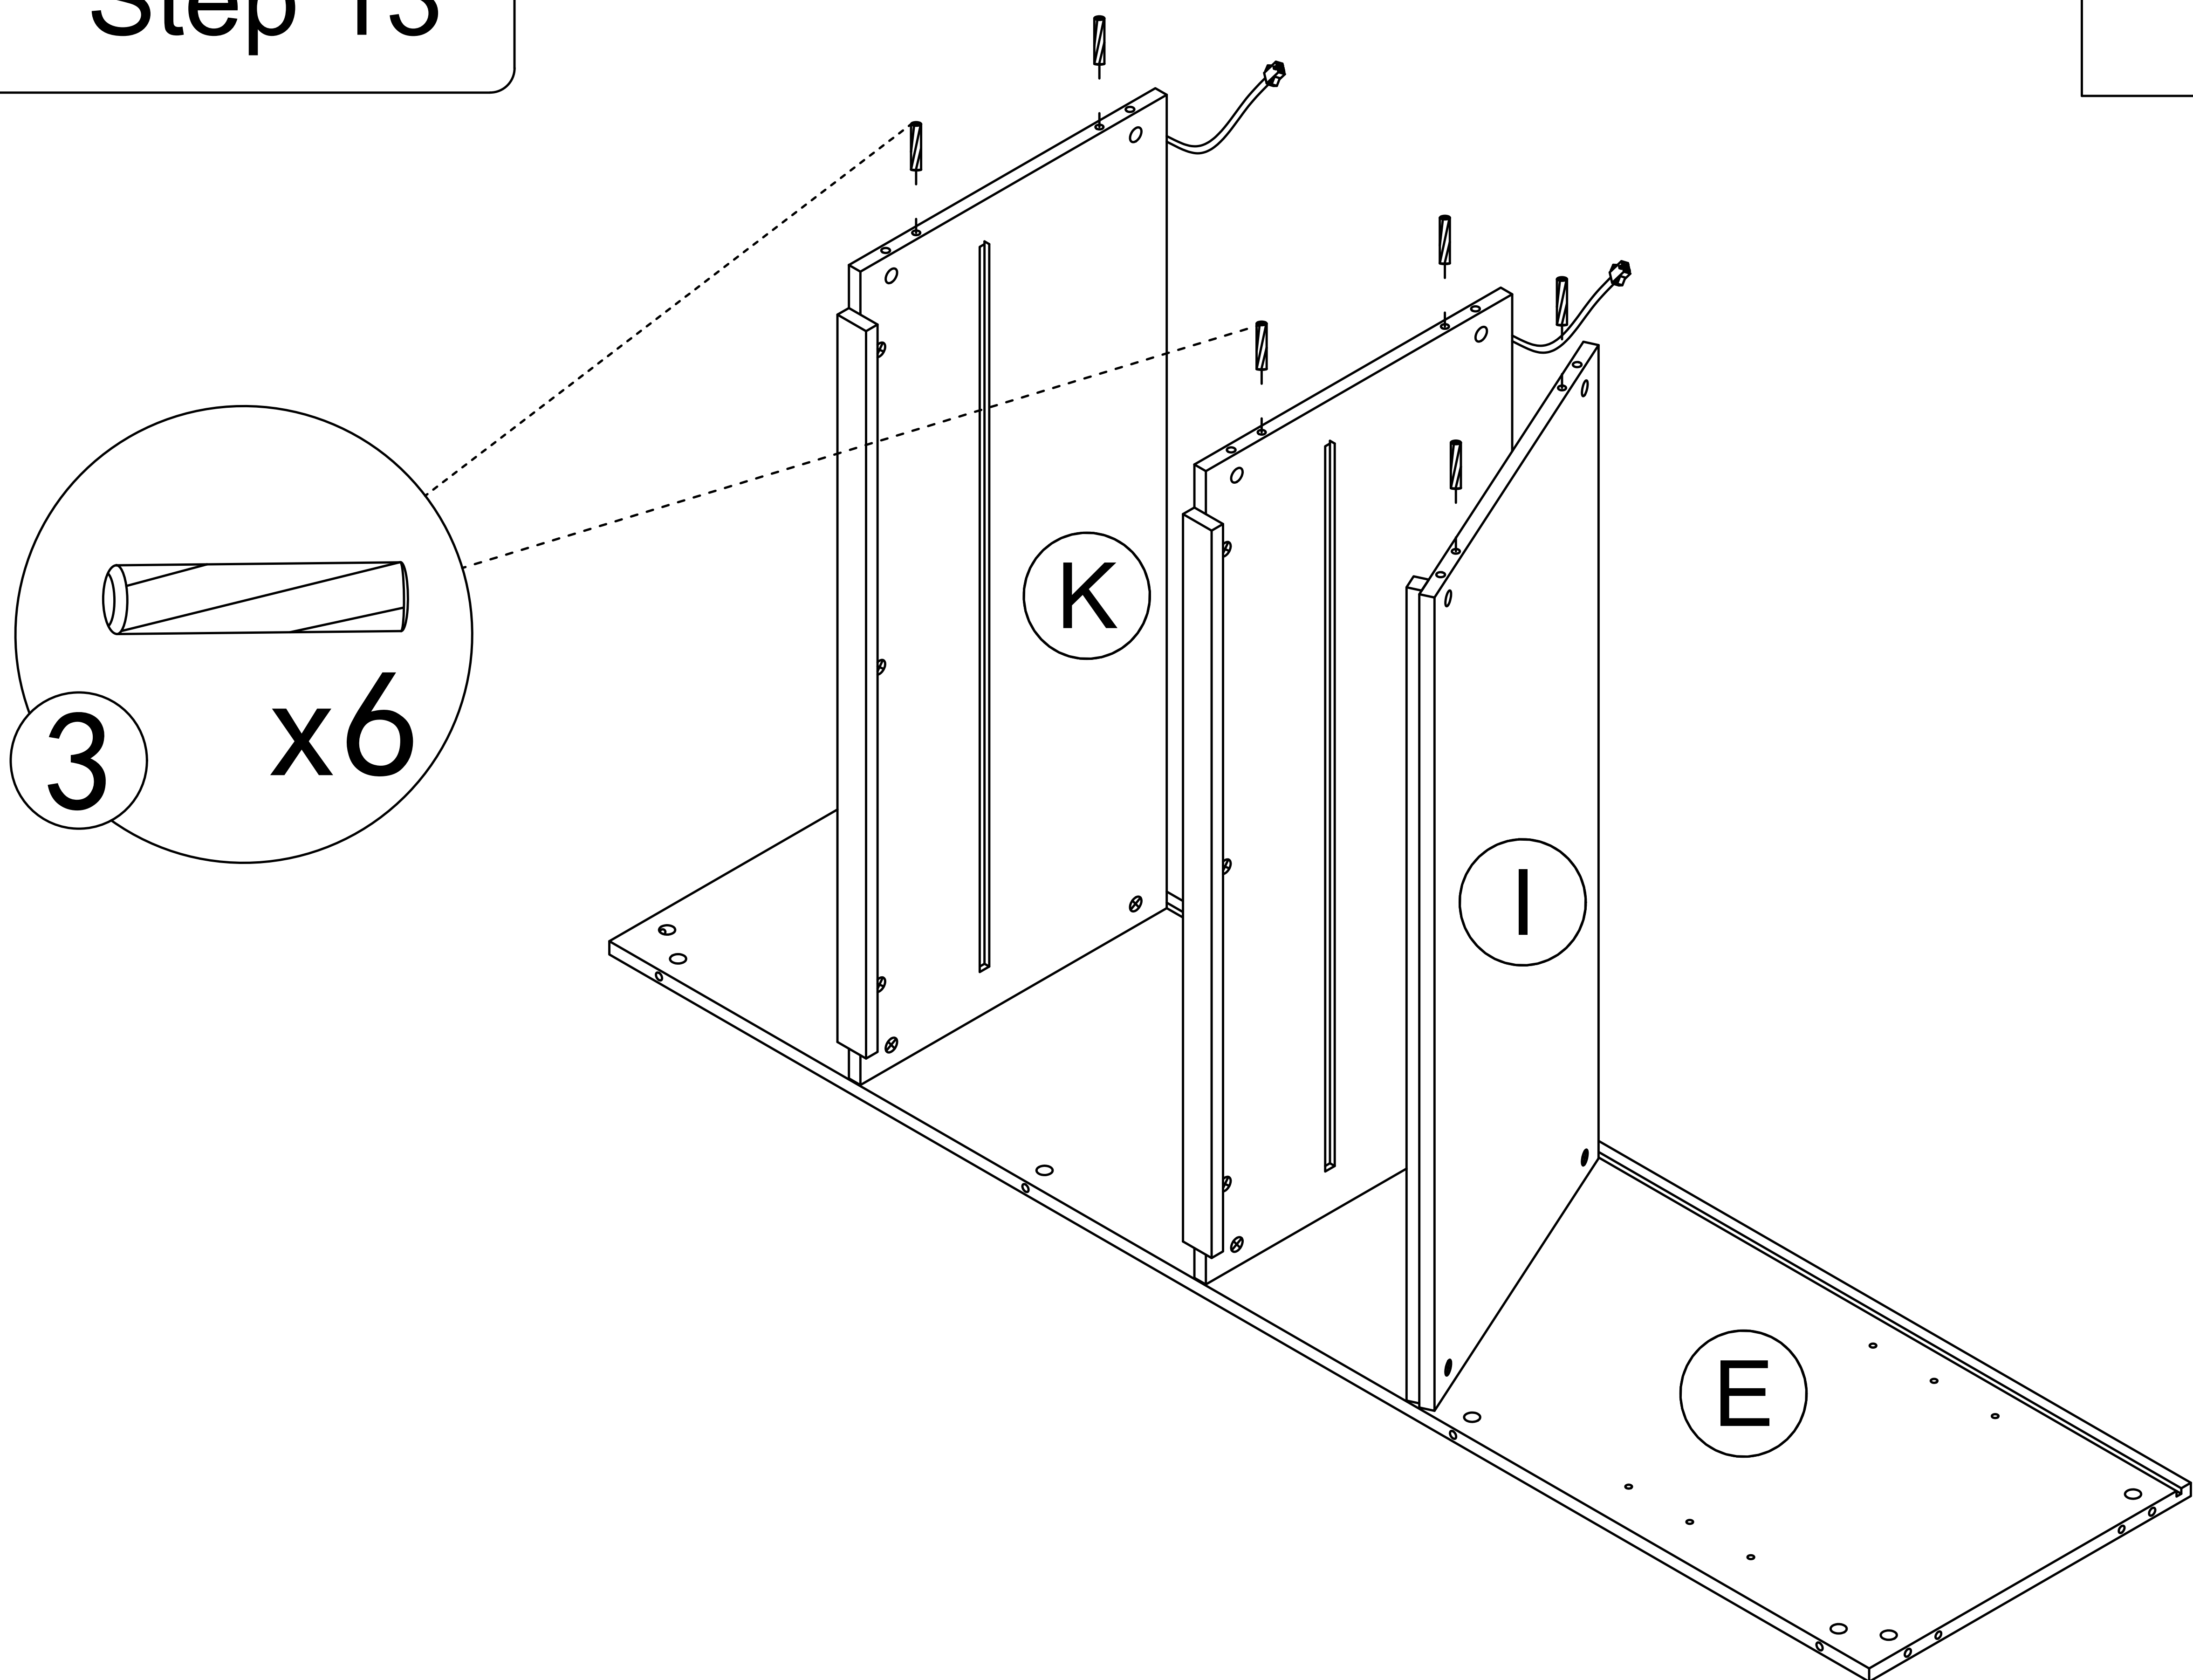


Step 14

1

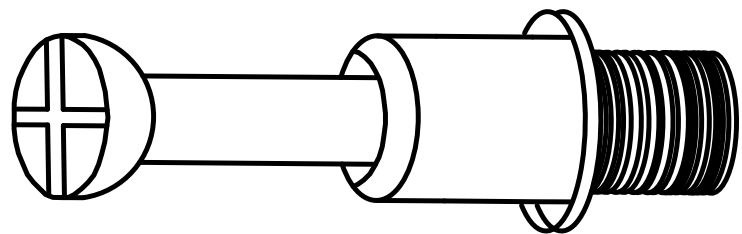


x6

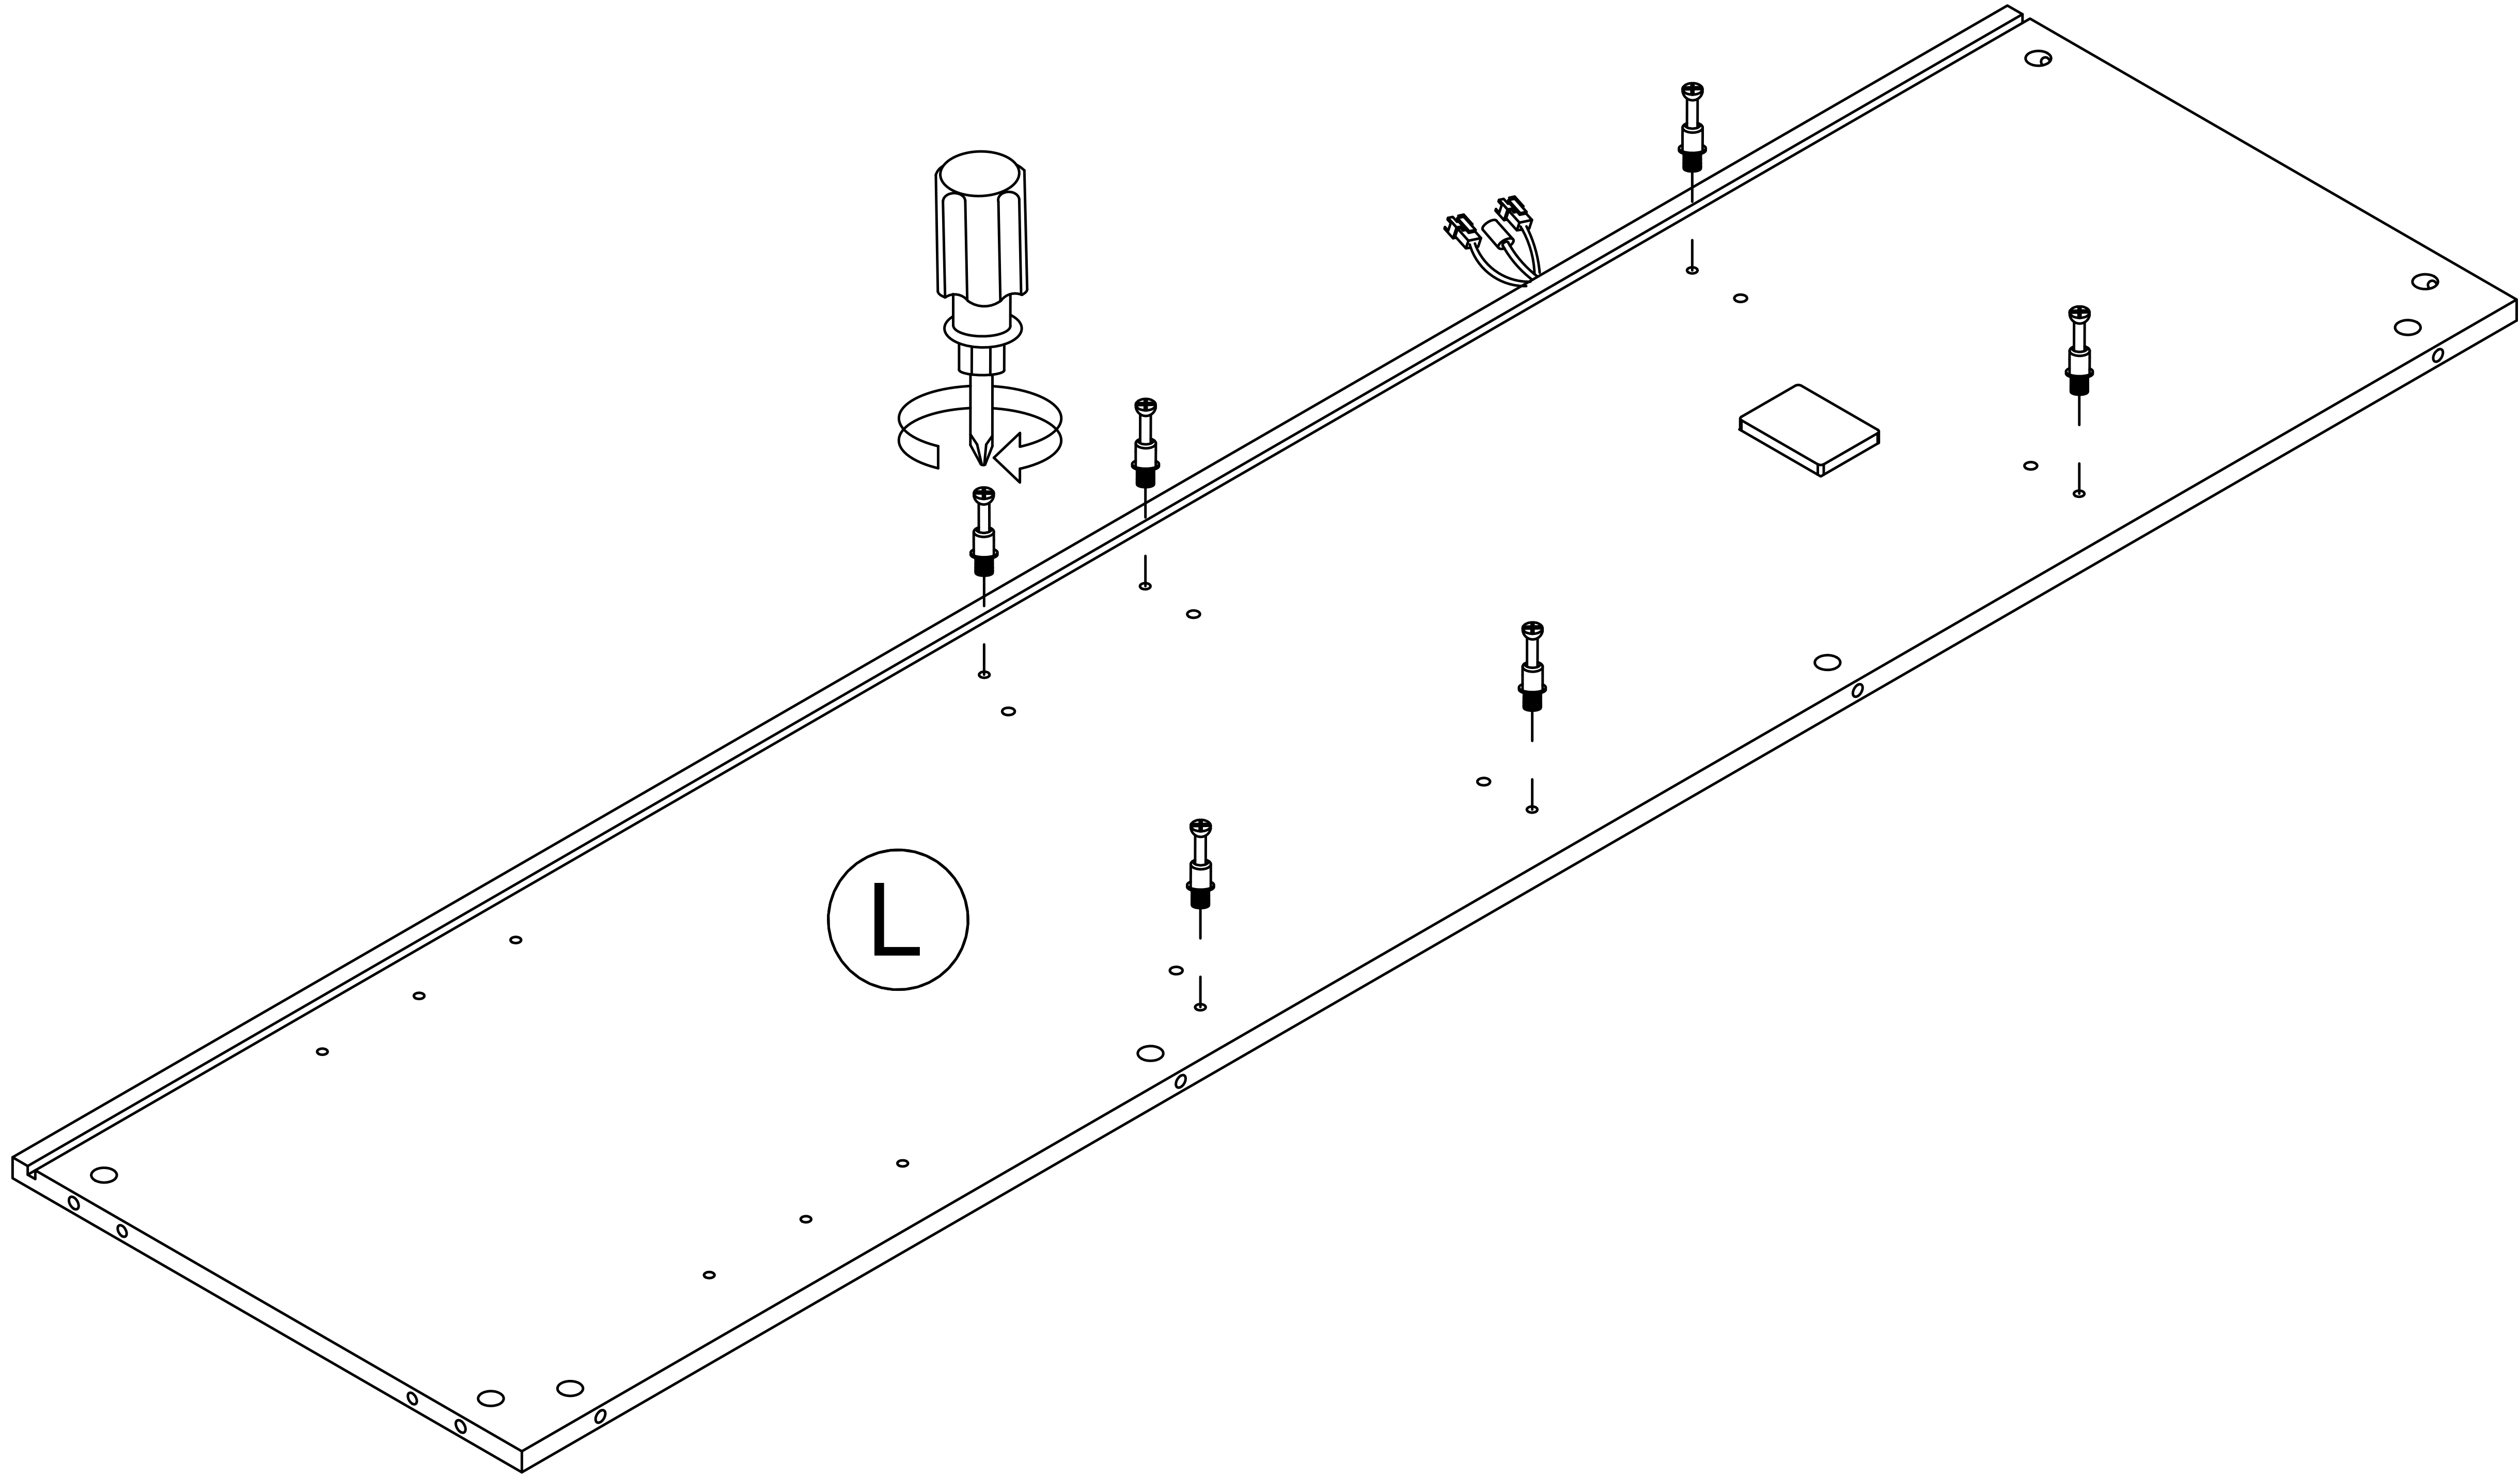


Step 15

2

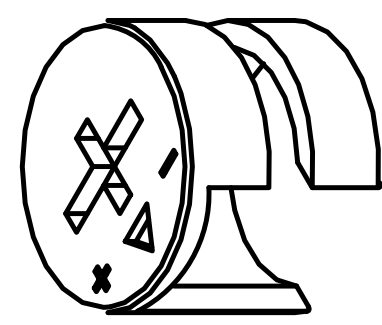


x6

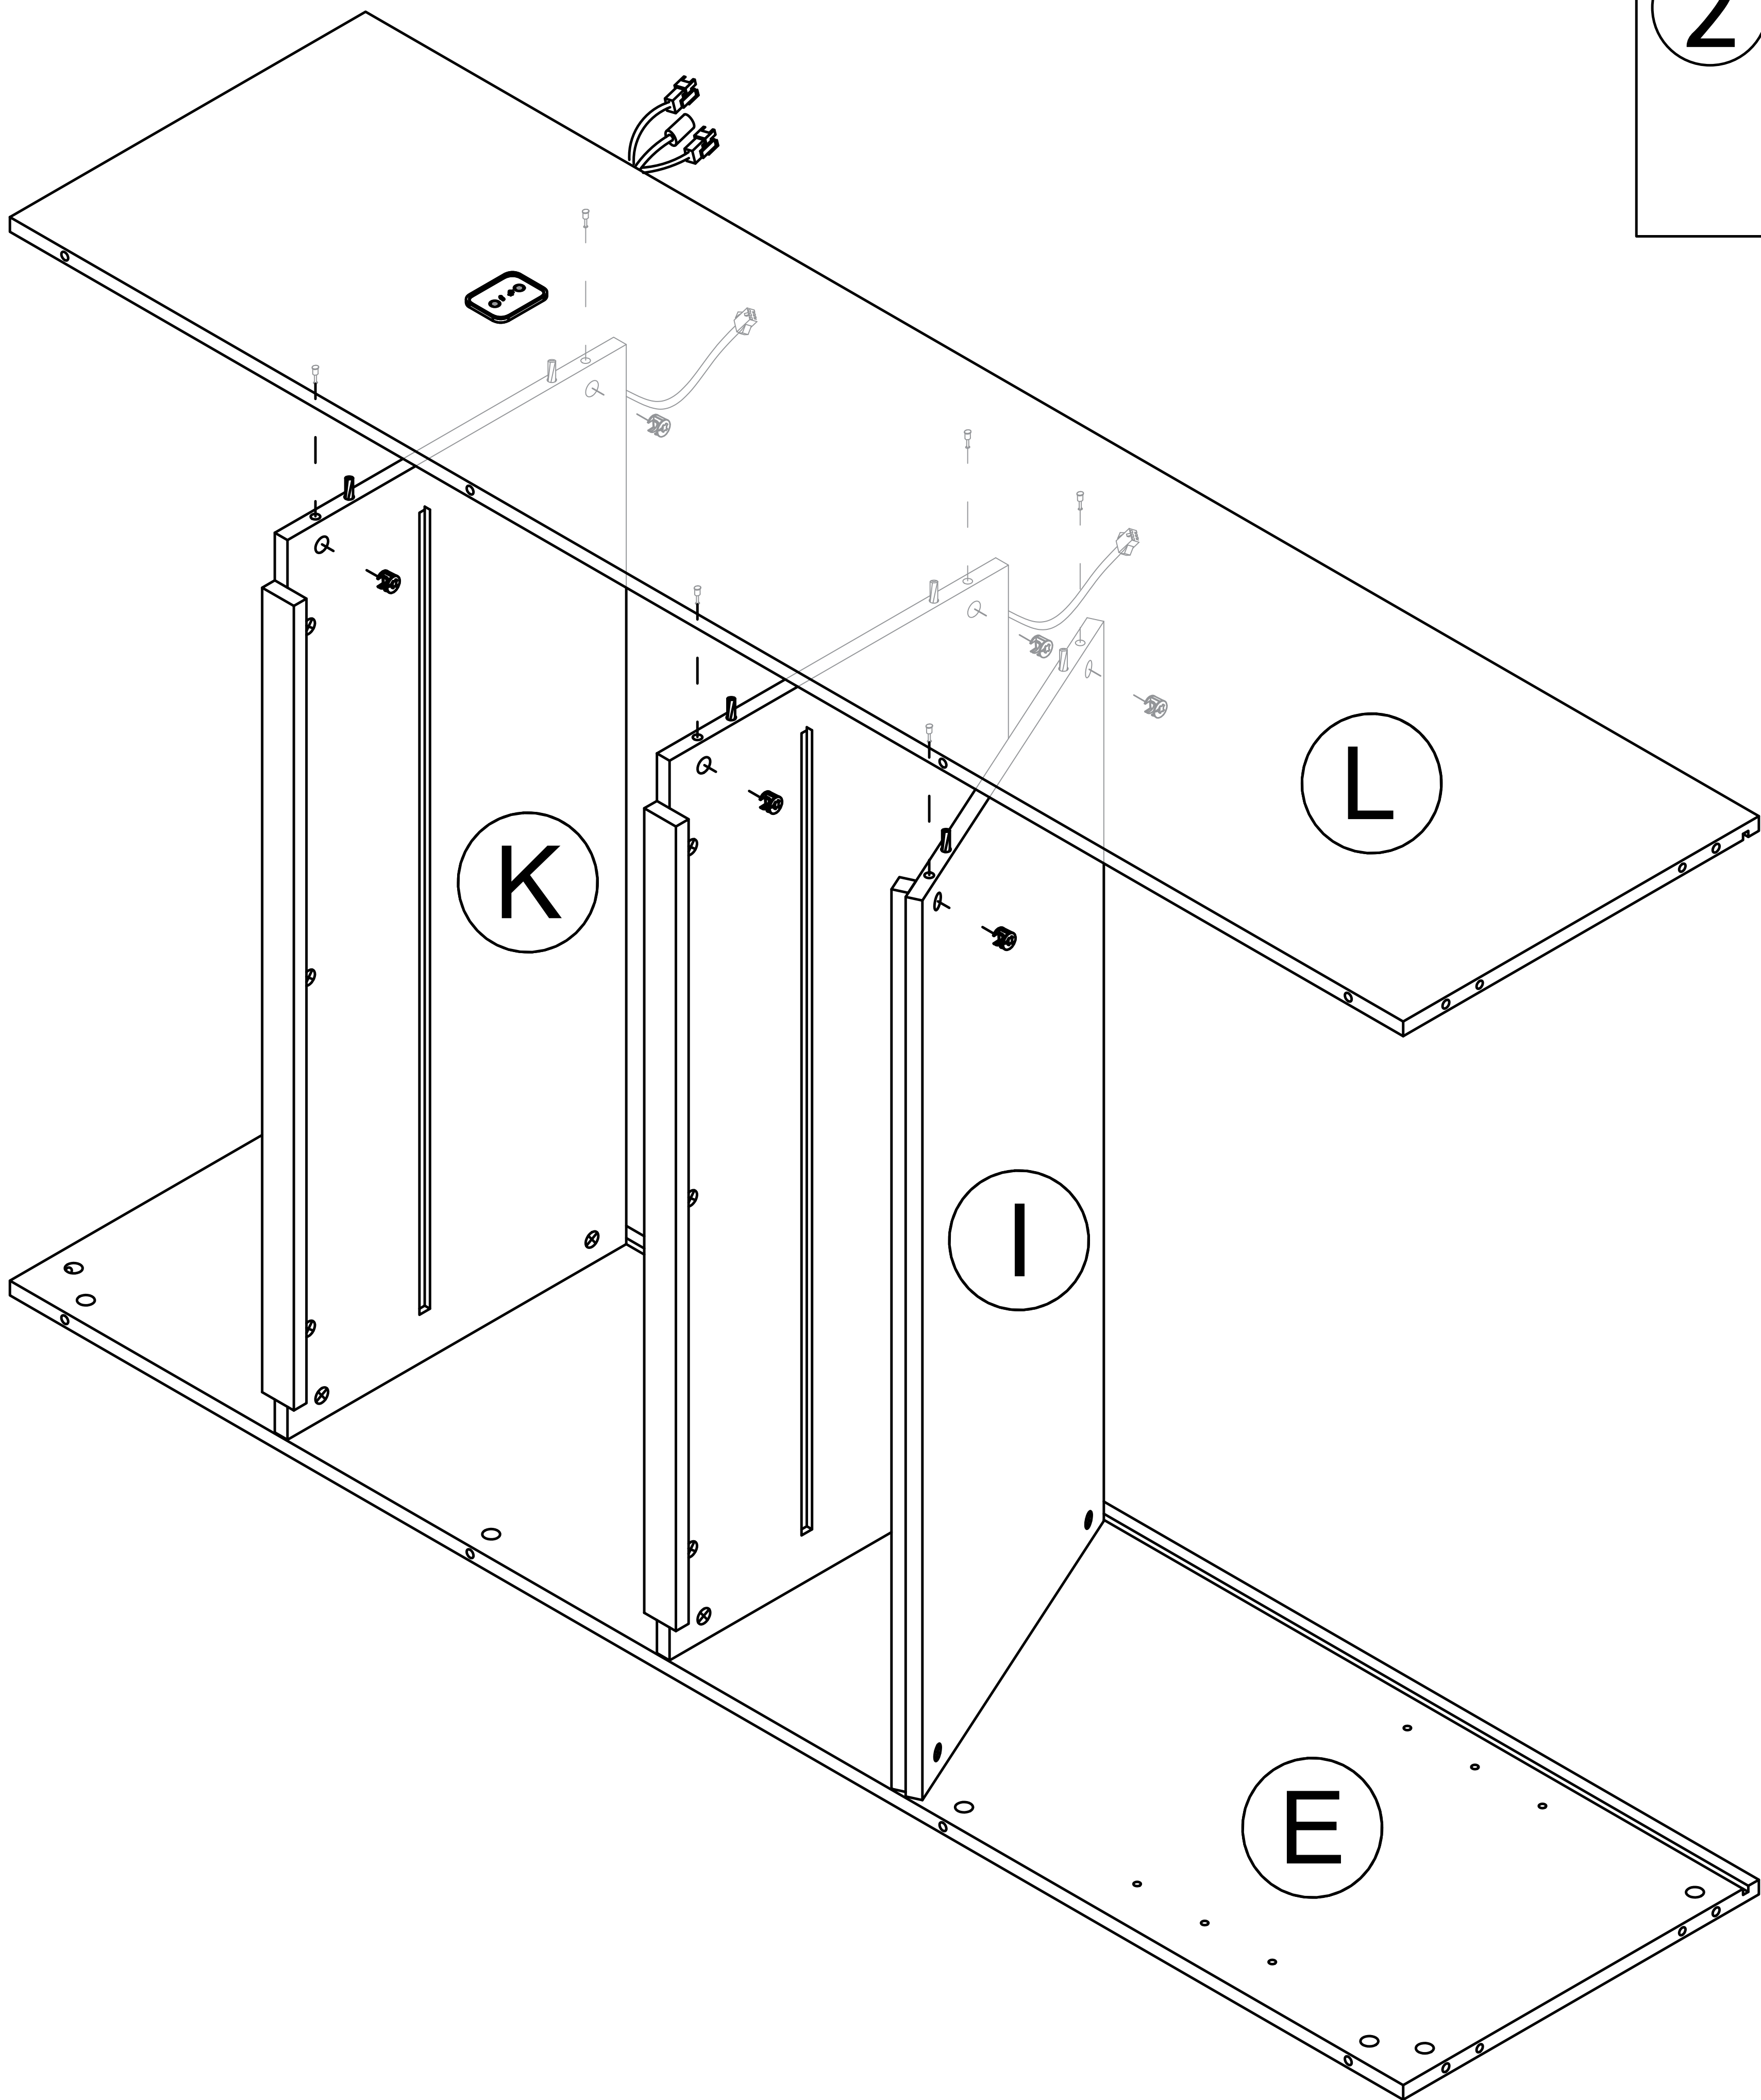

Step 16

1


x12

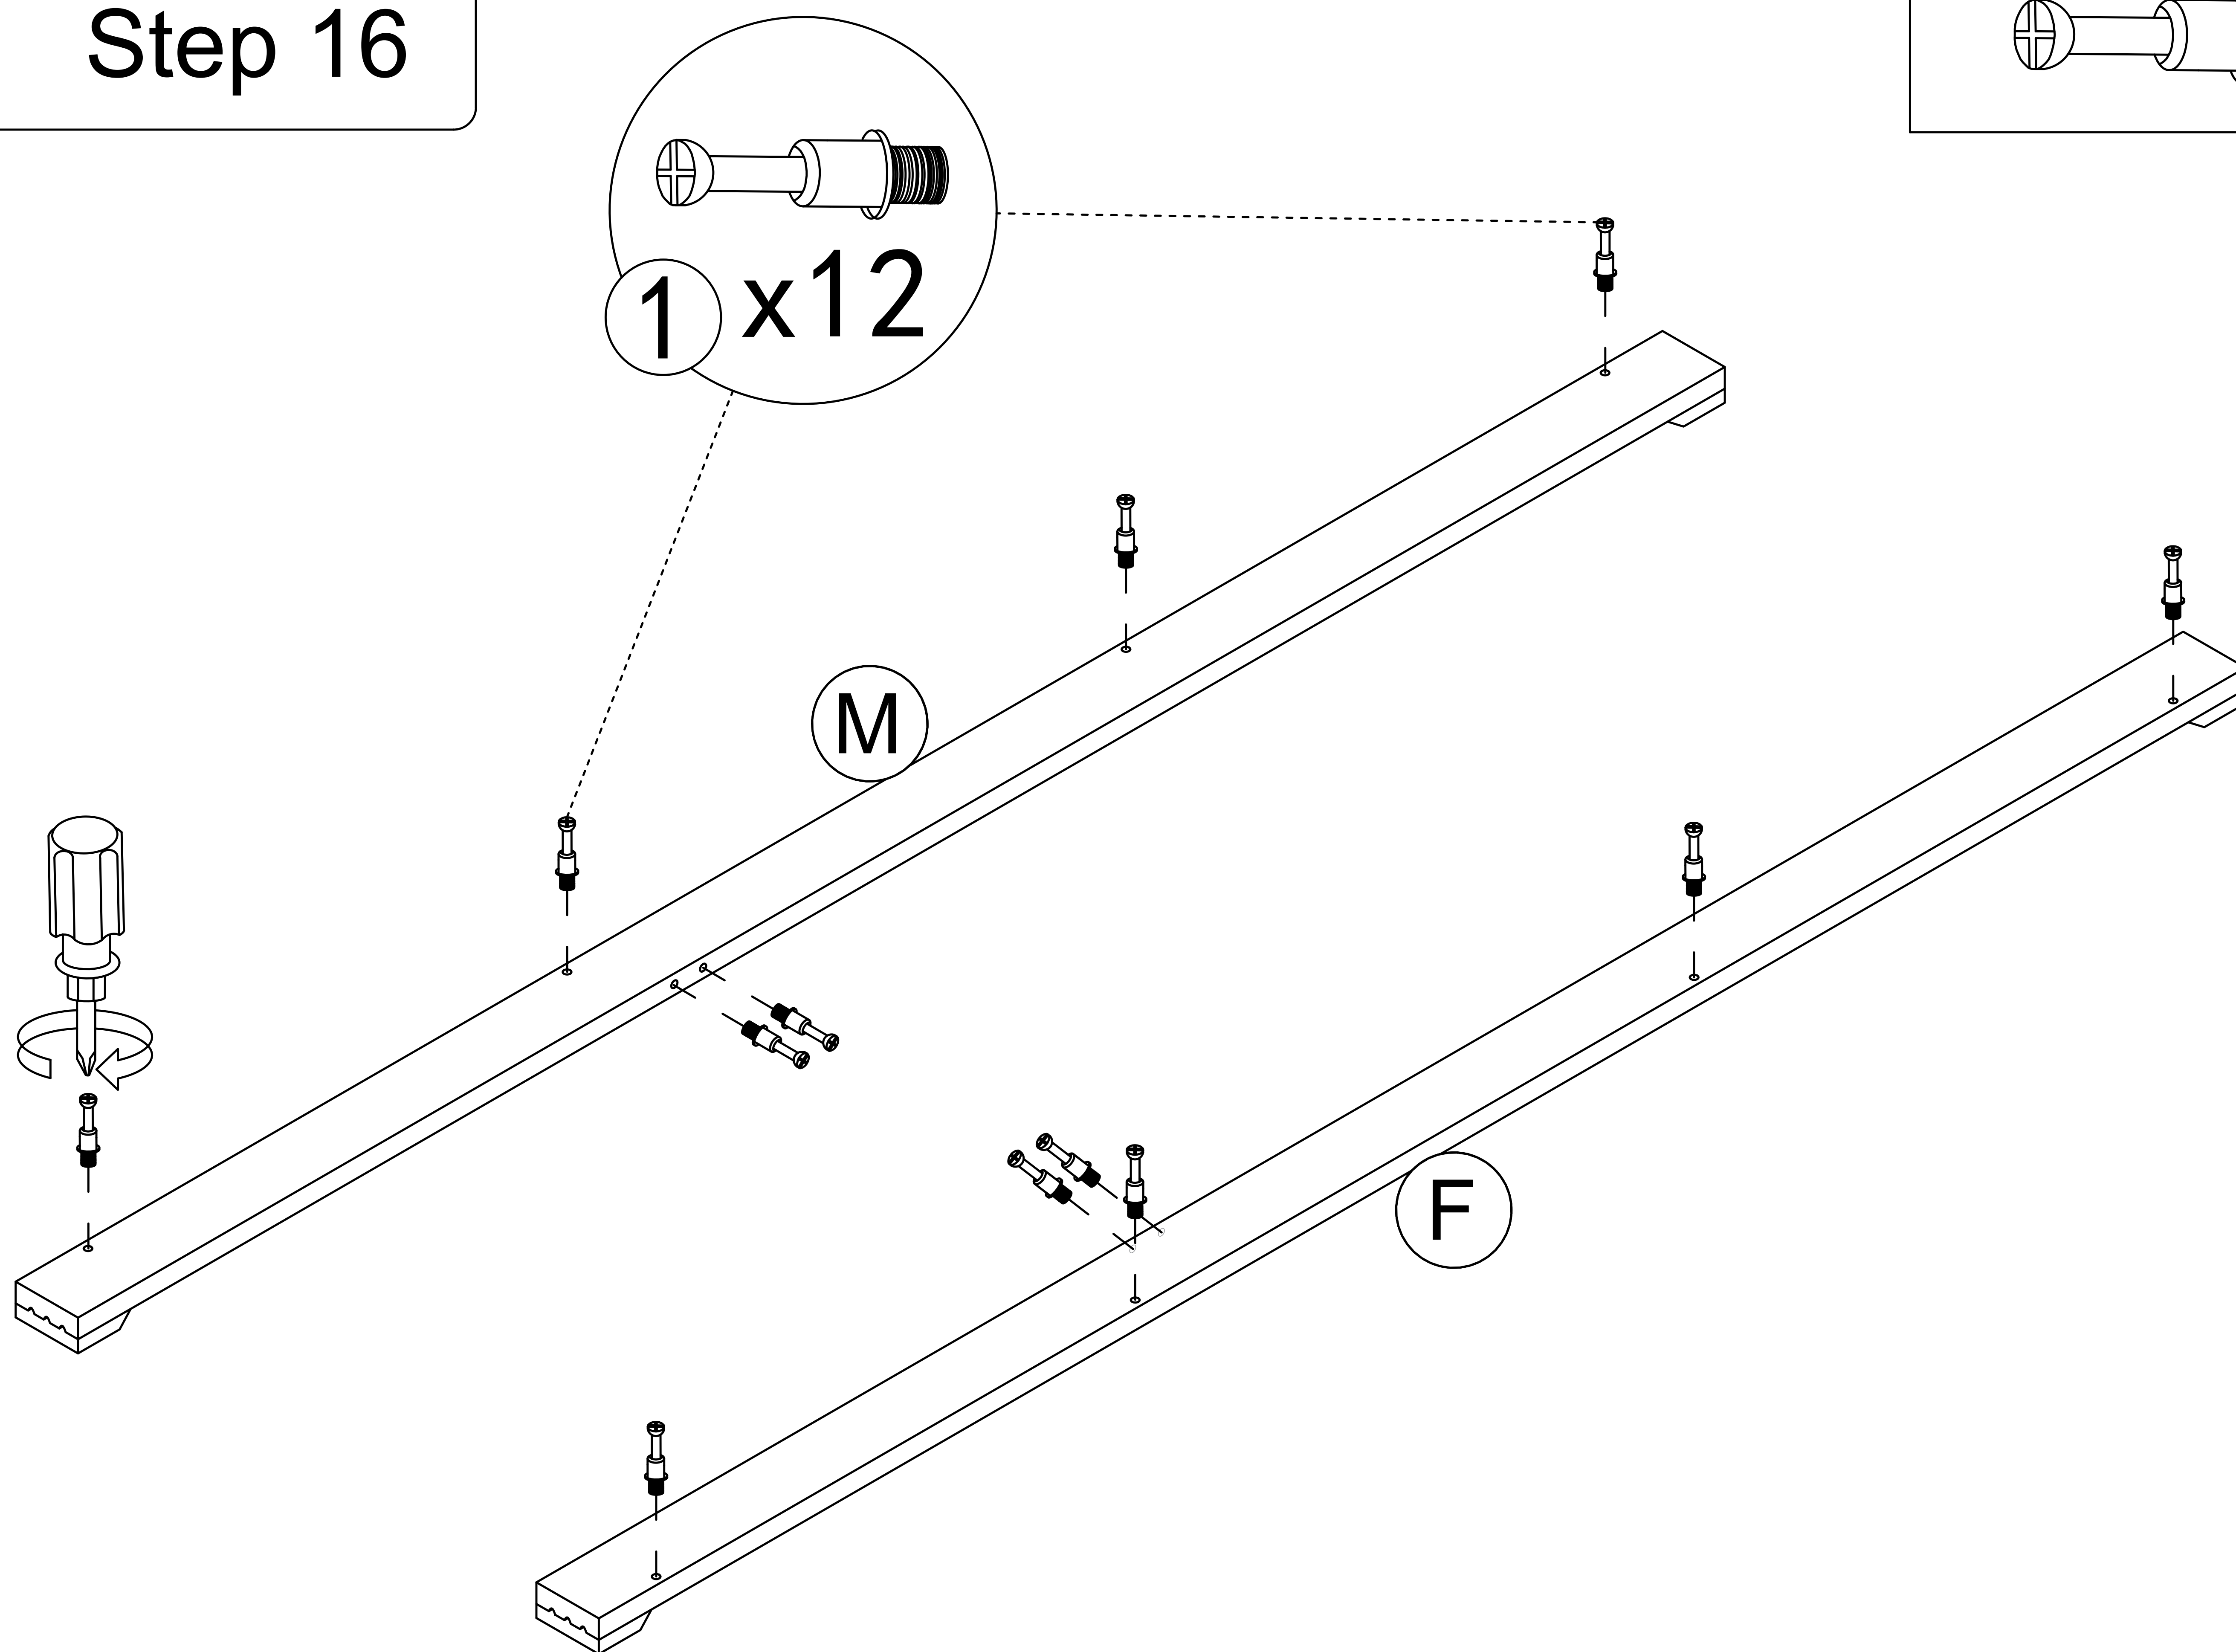

Step 17


2



x4

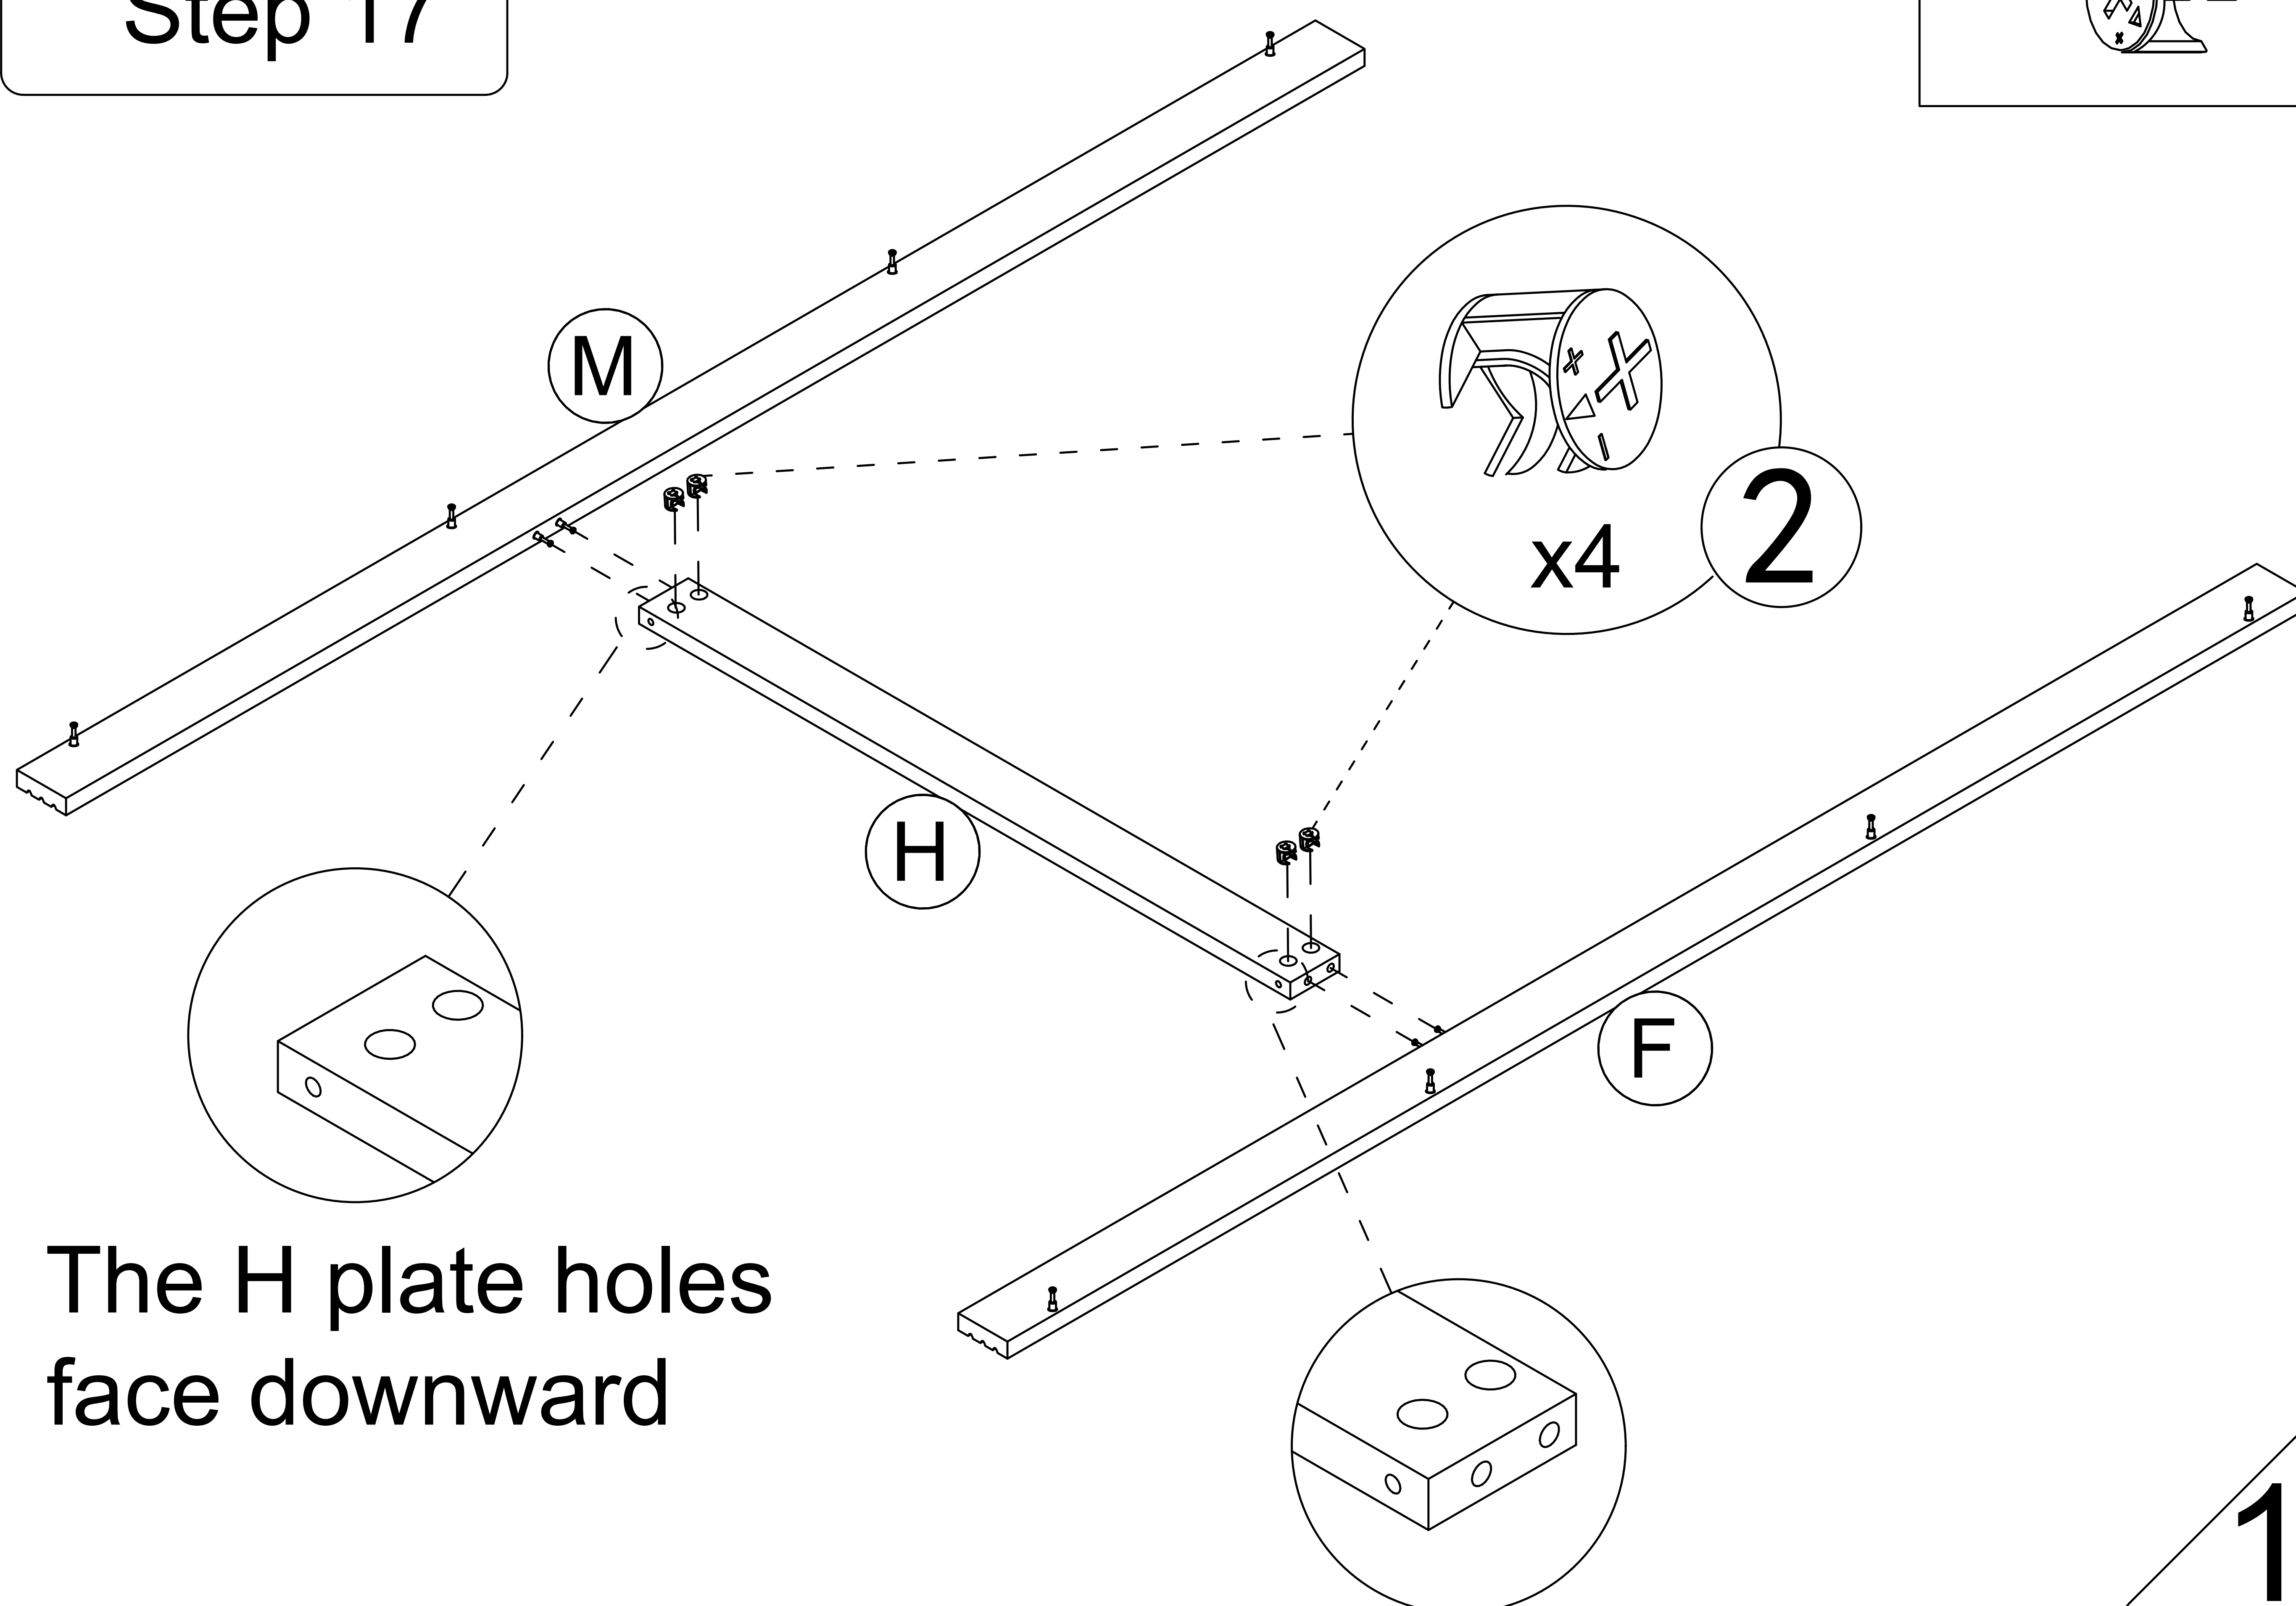

Step 18


2

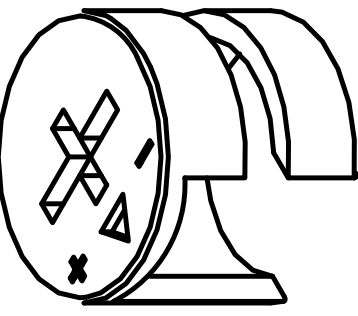
 x8

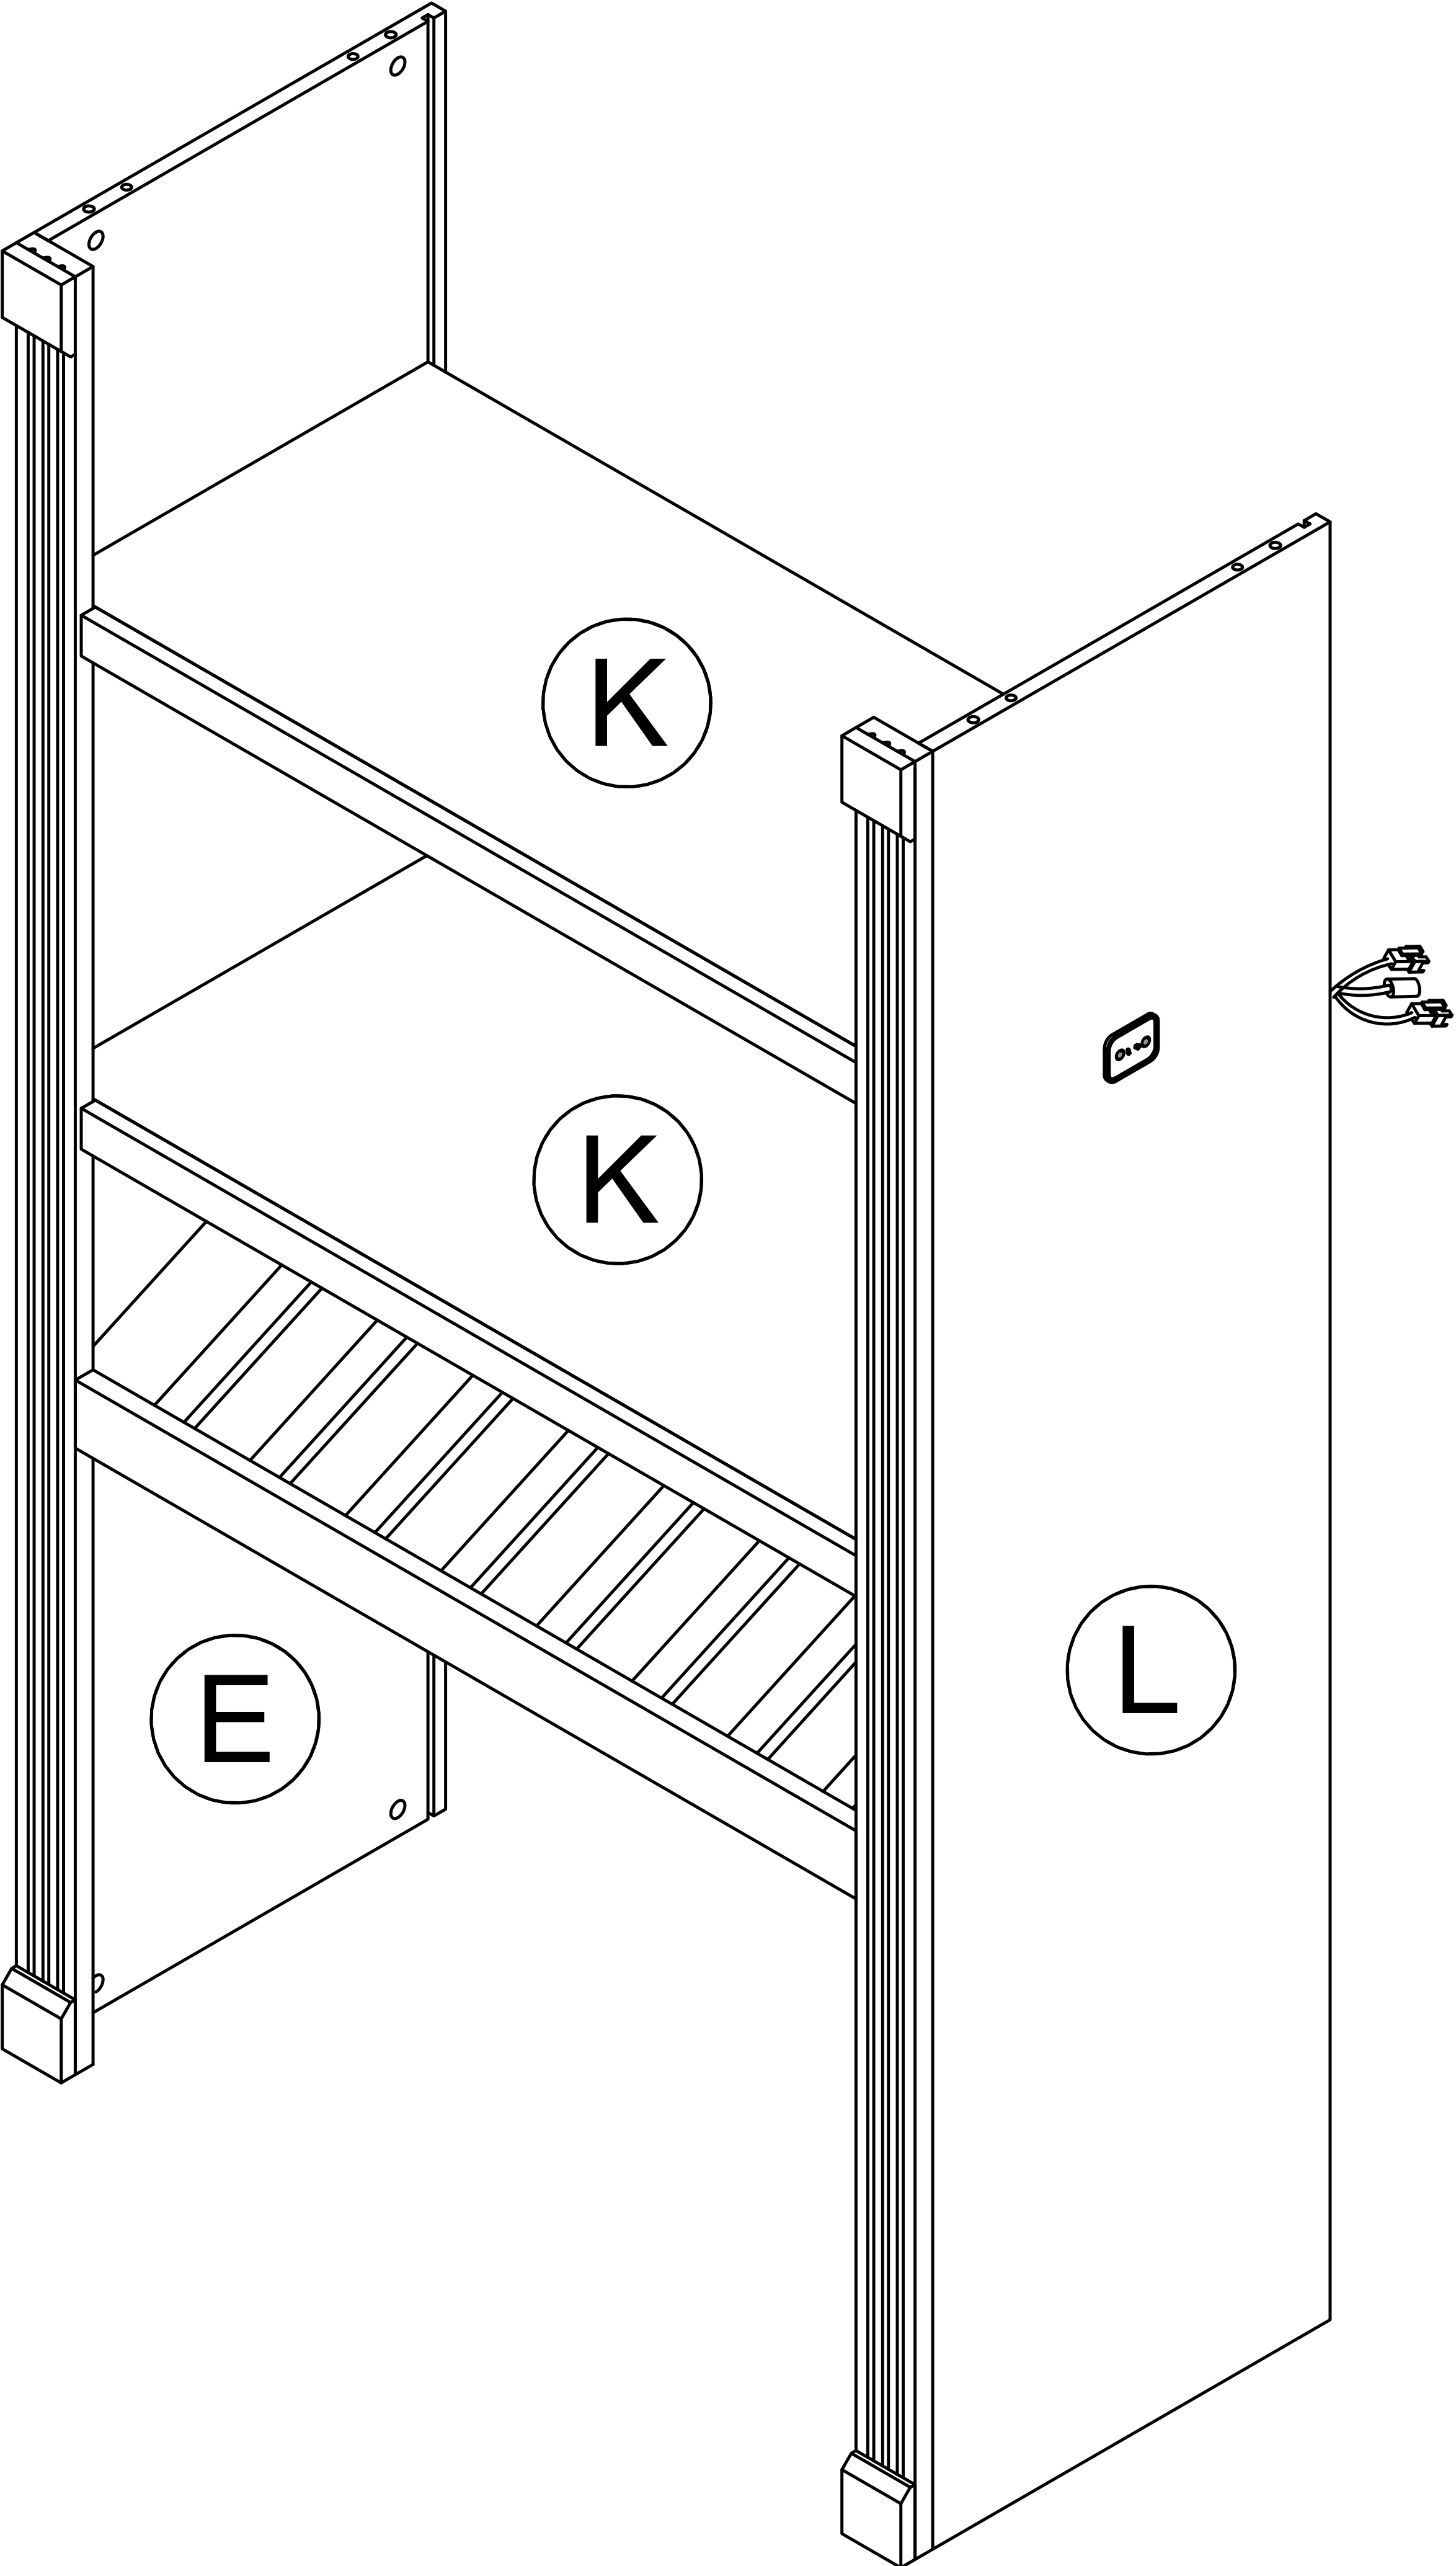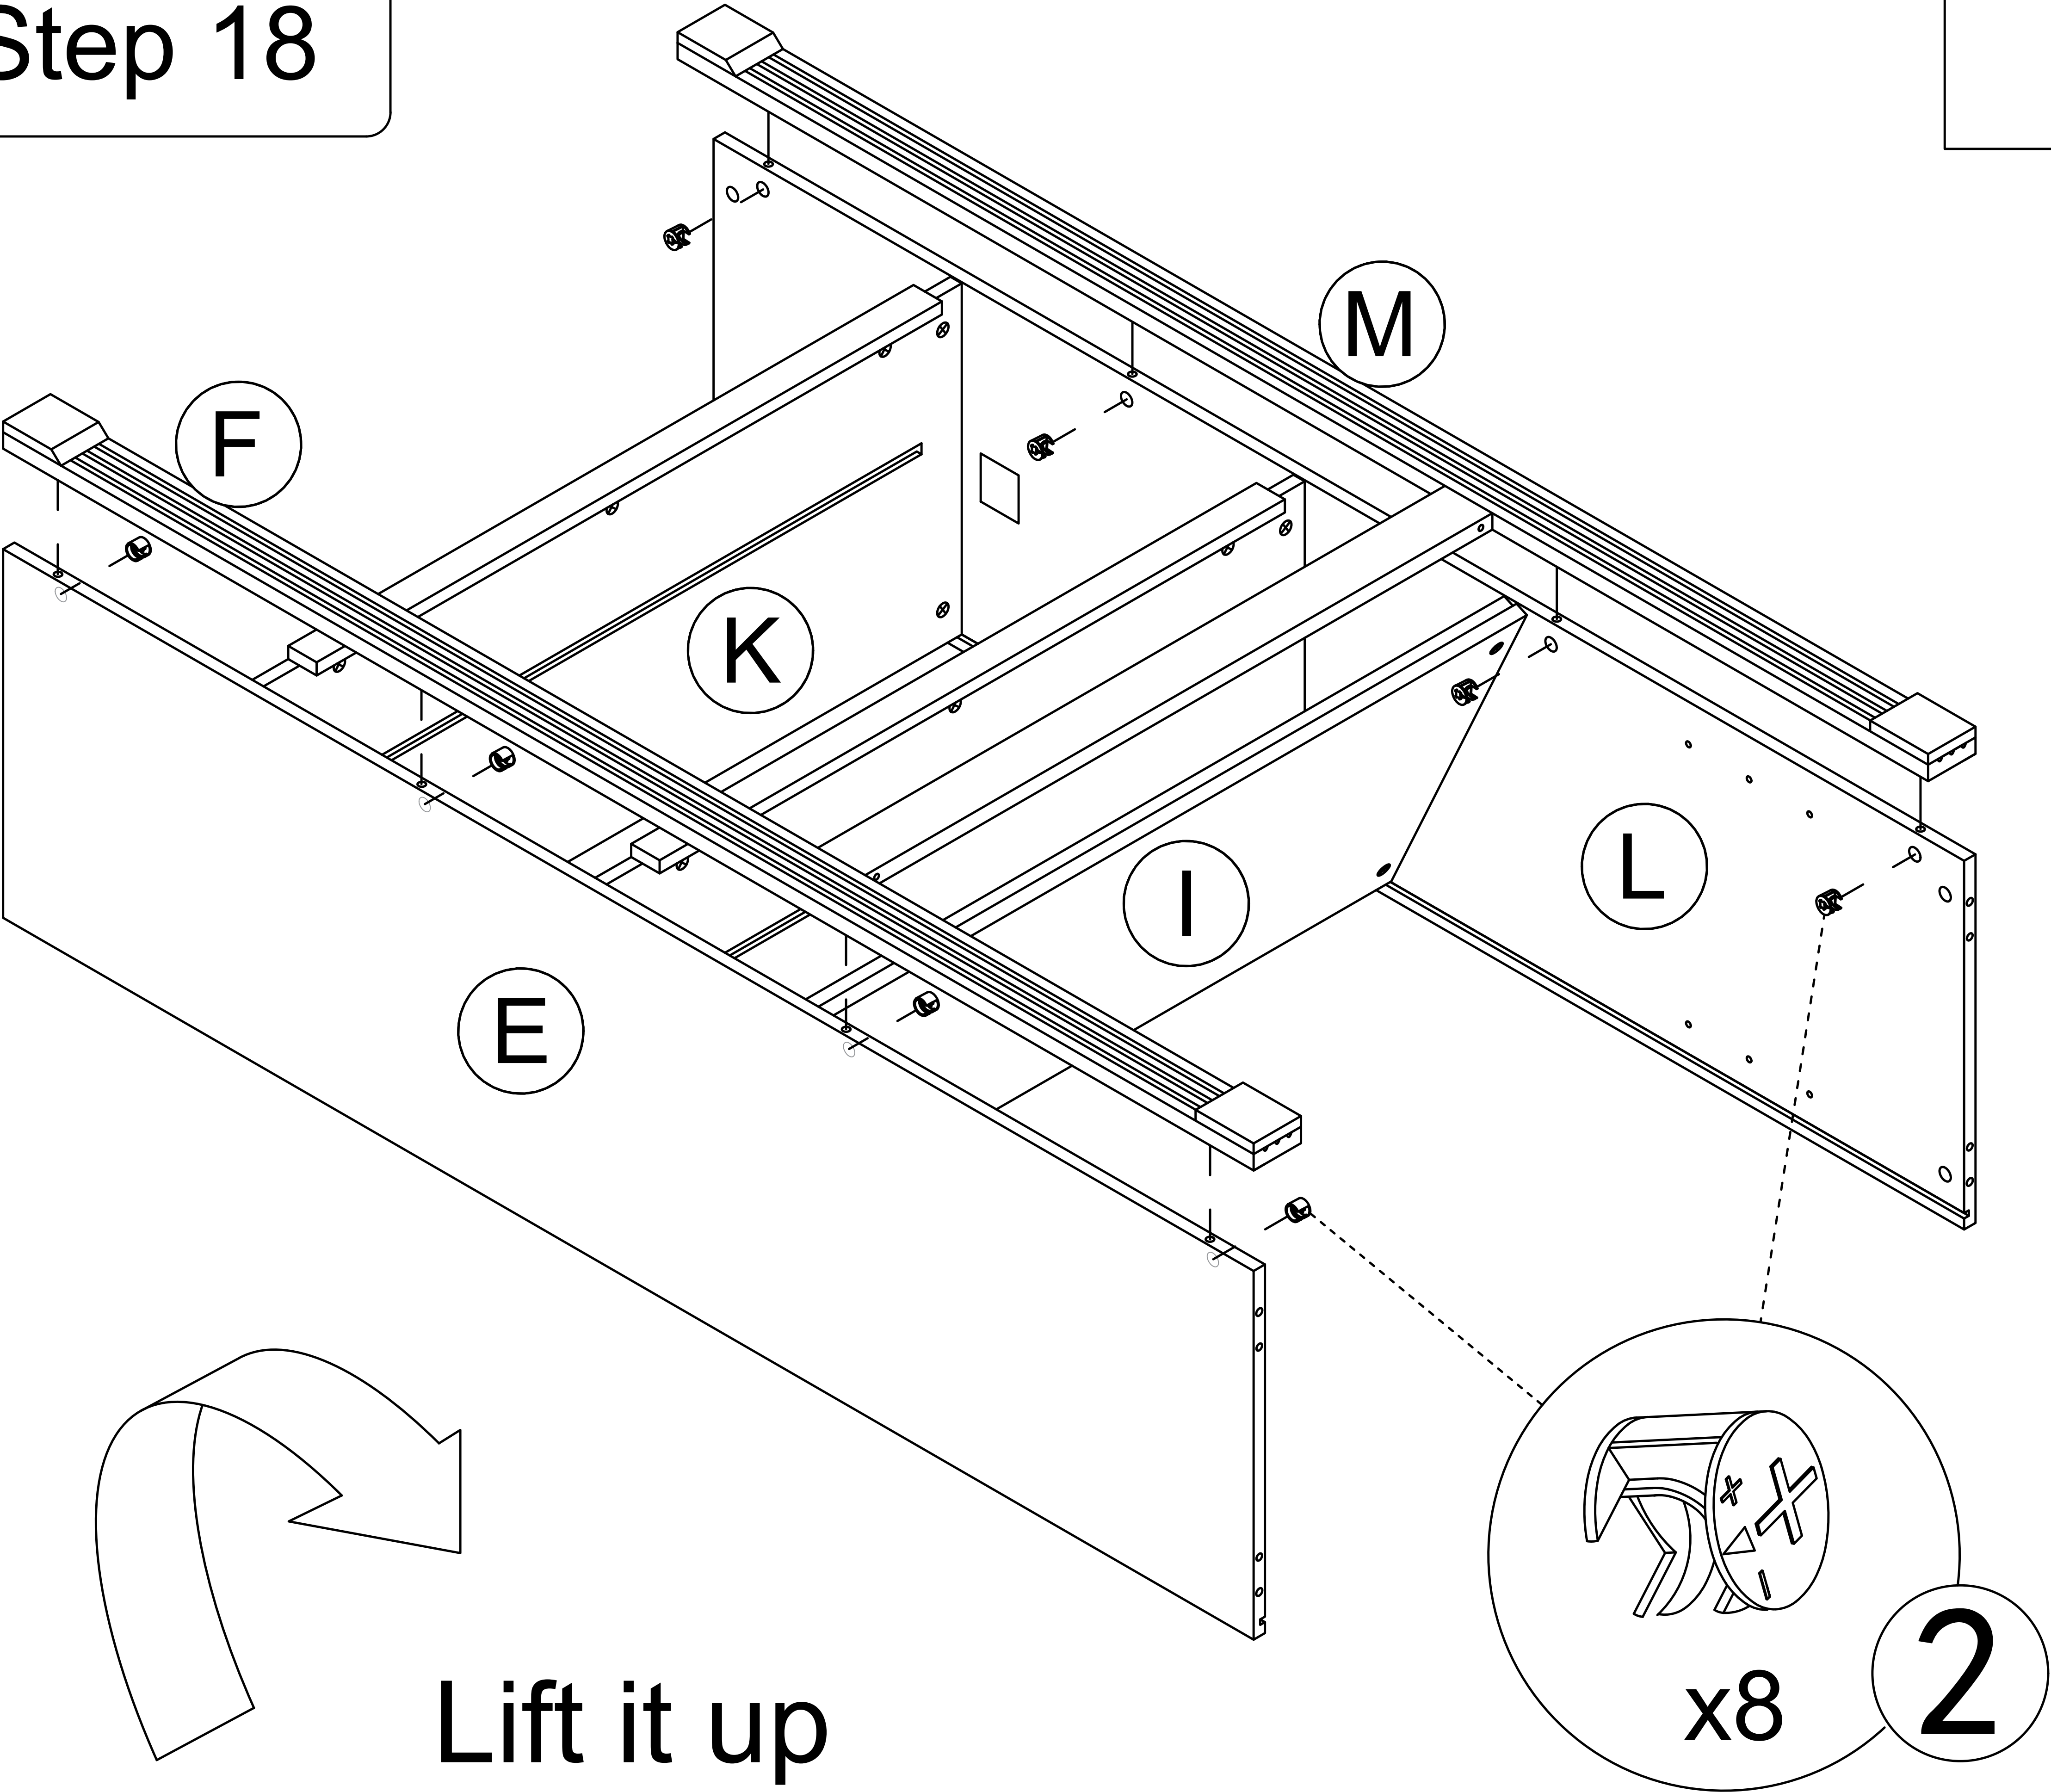

Step 19


2

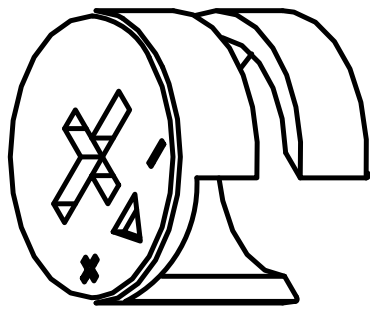 x4

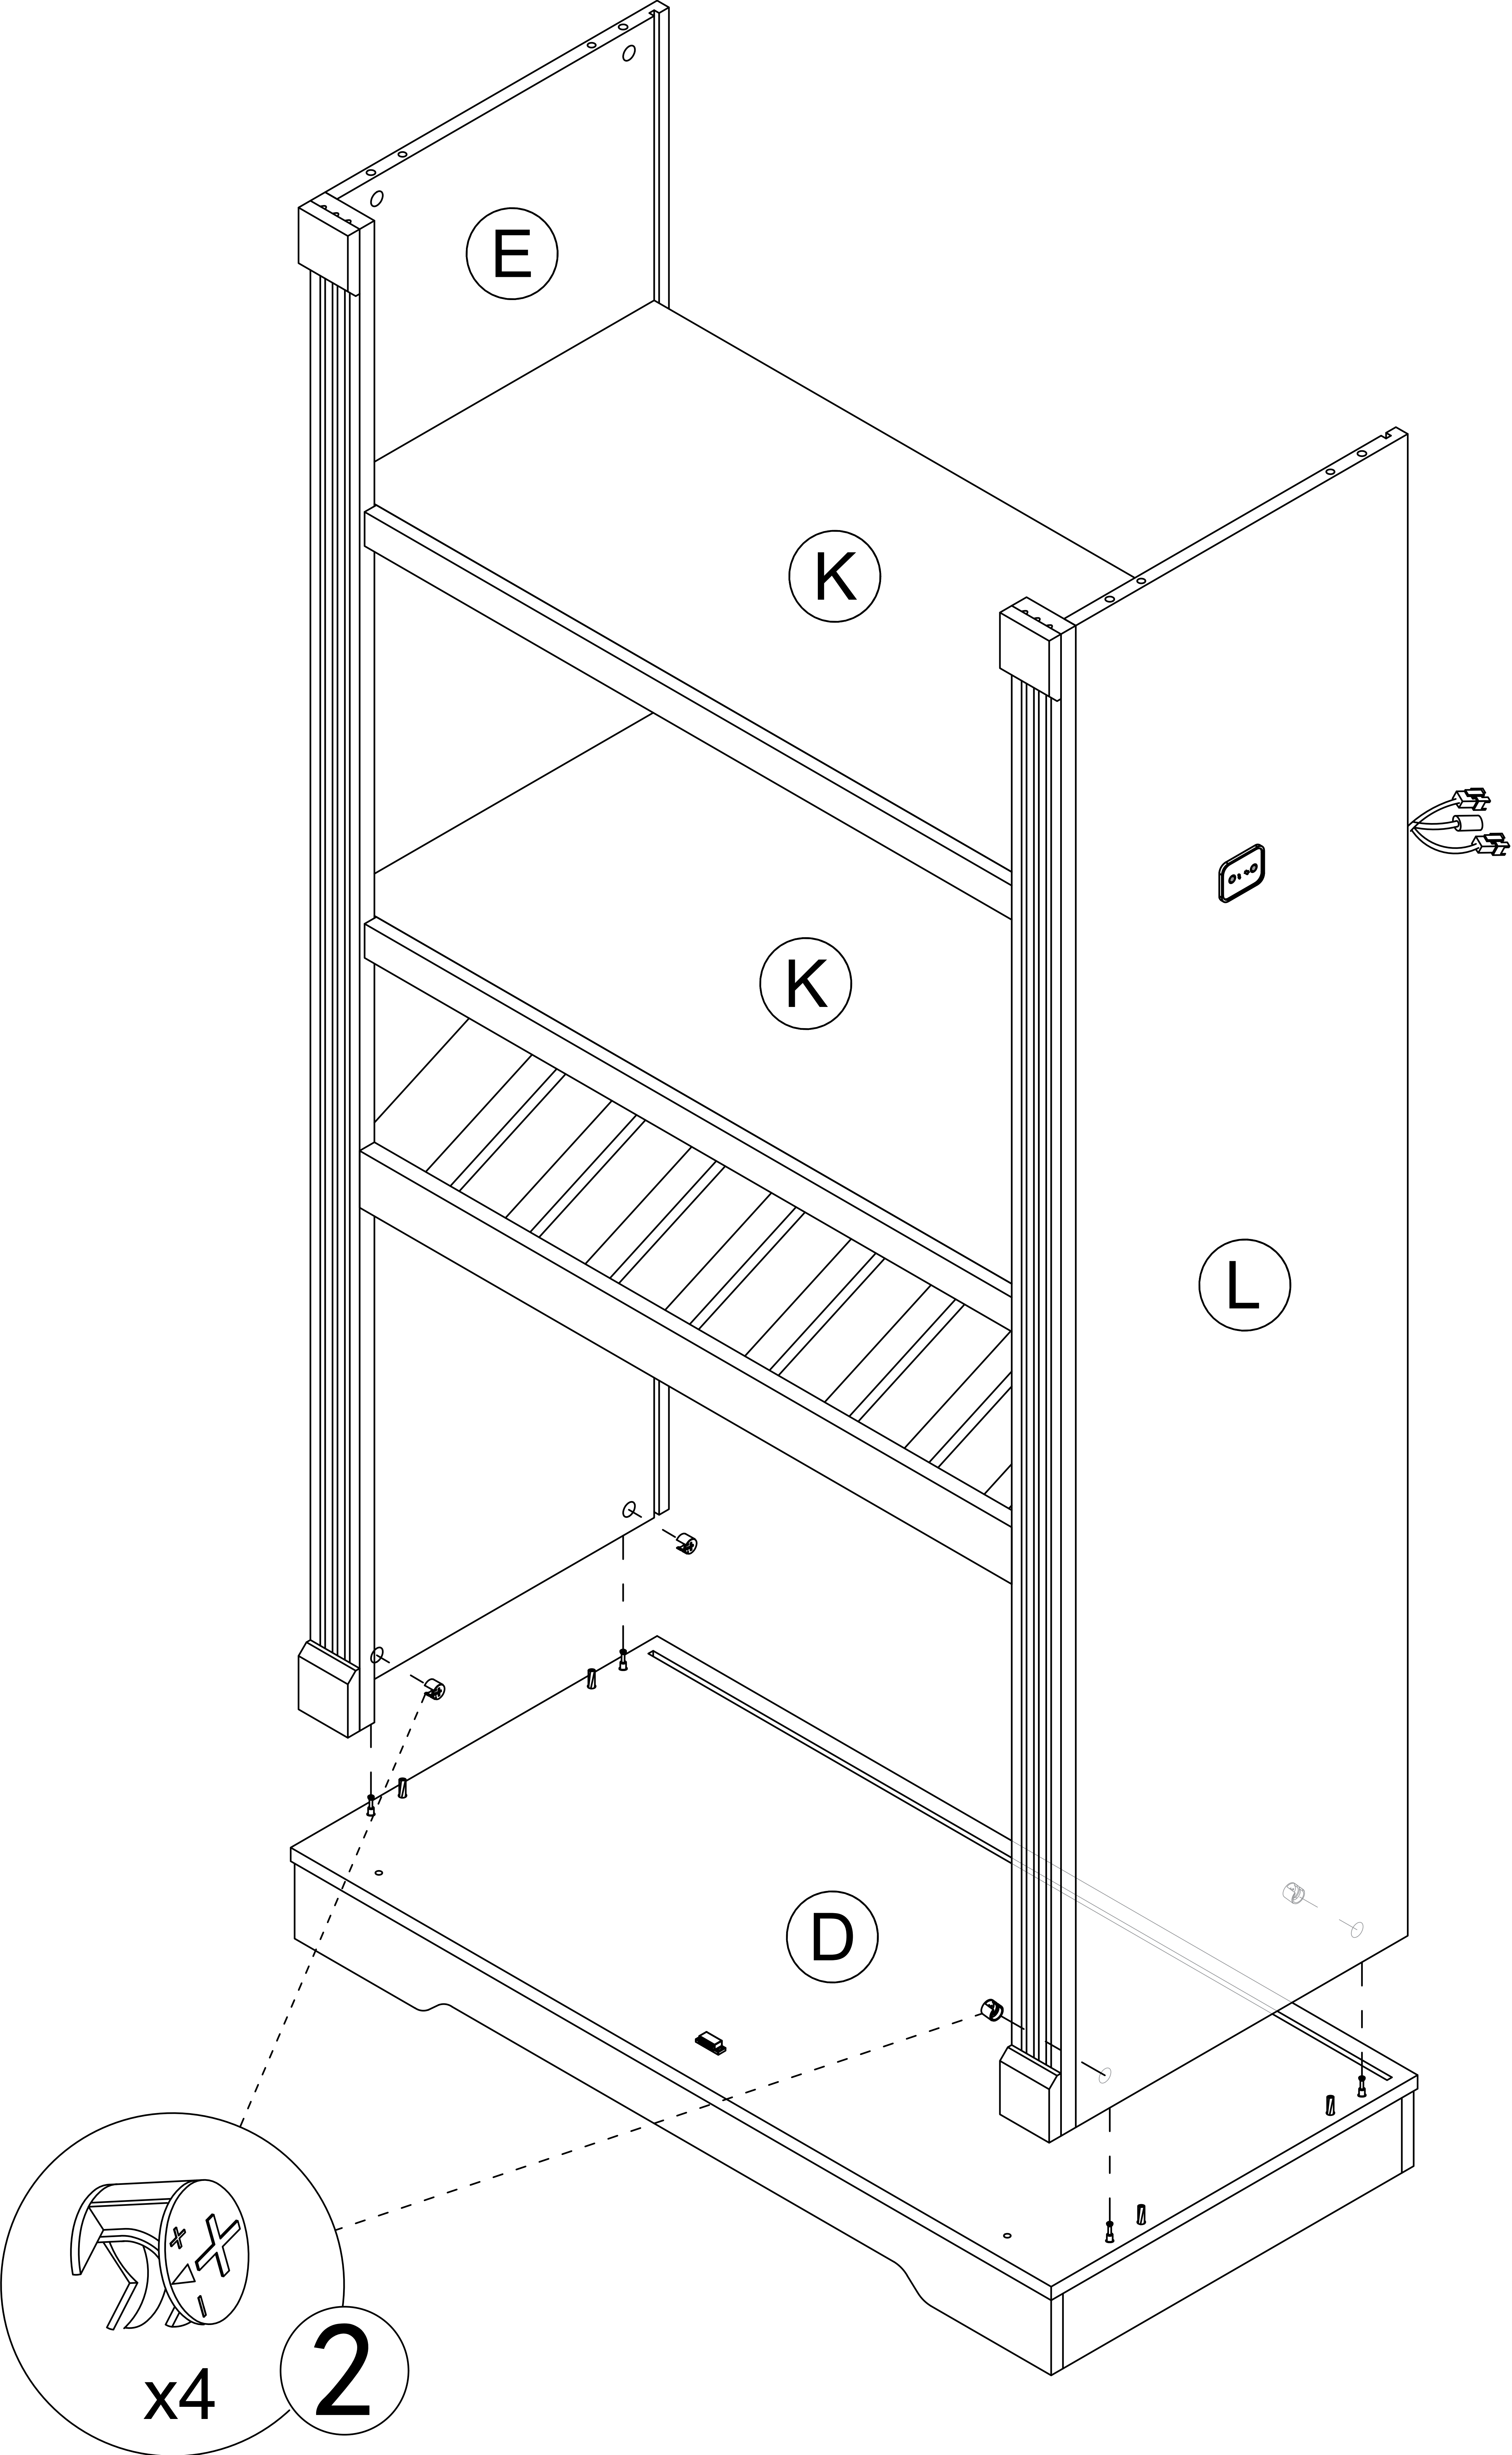


Step 20

6 x2

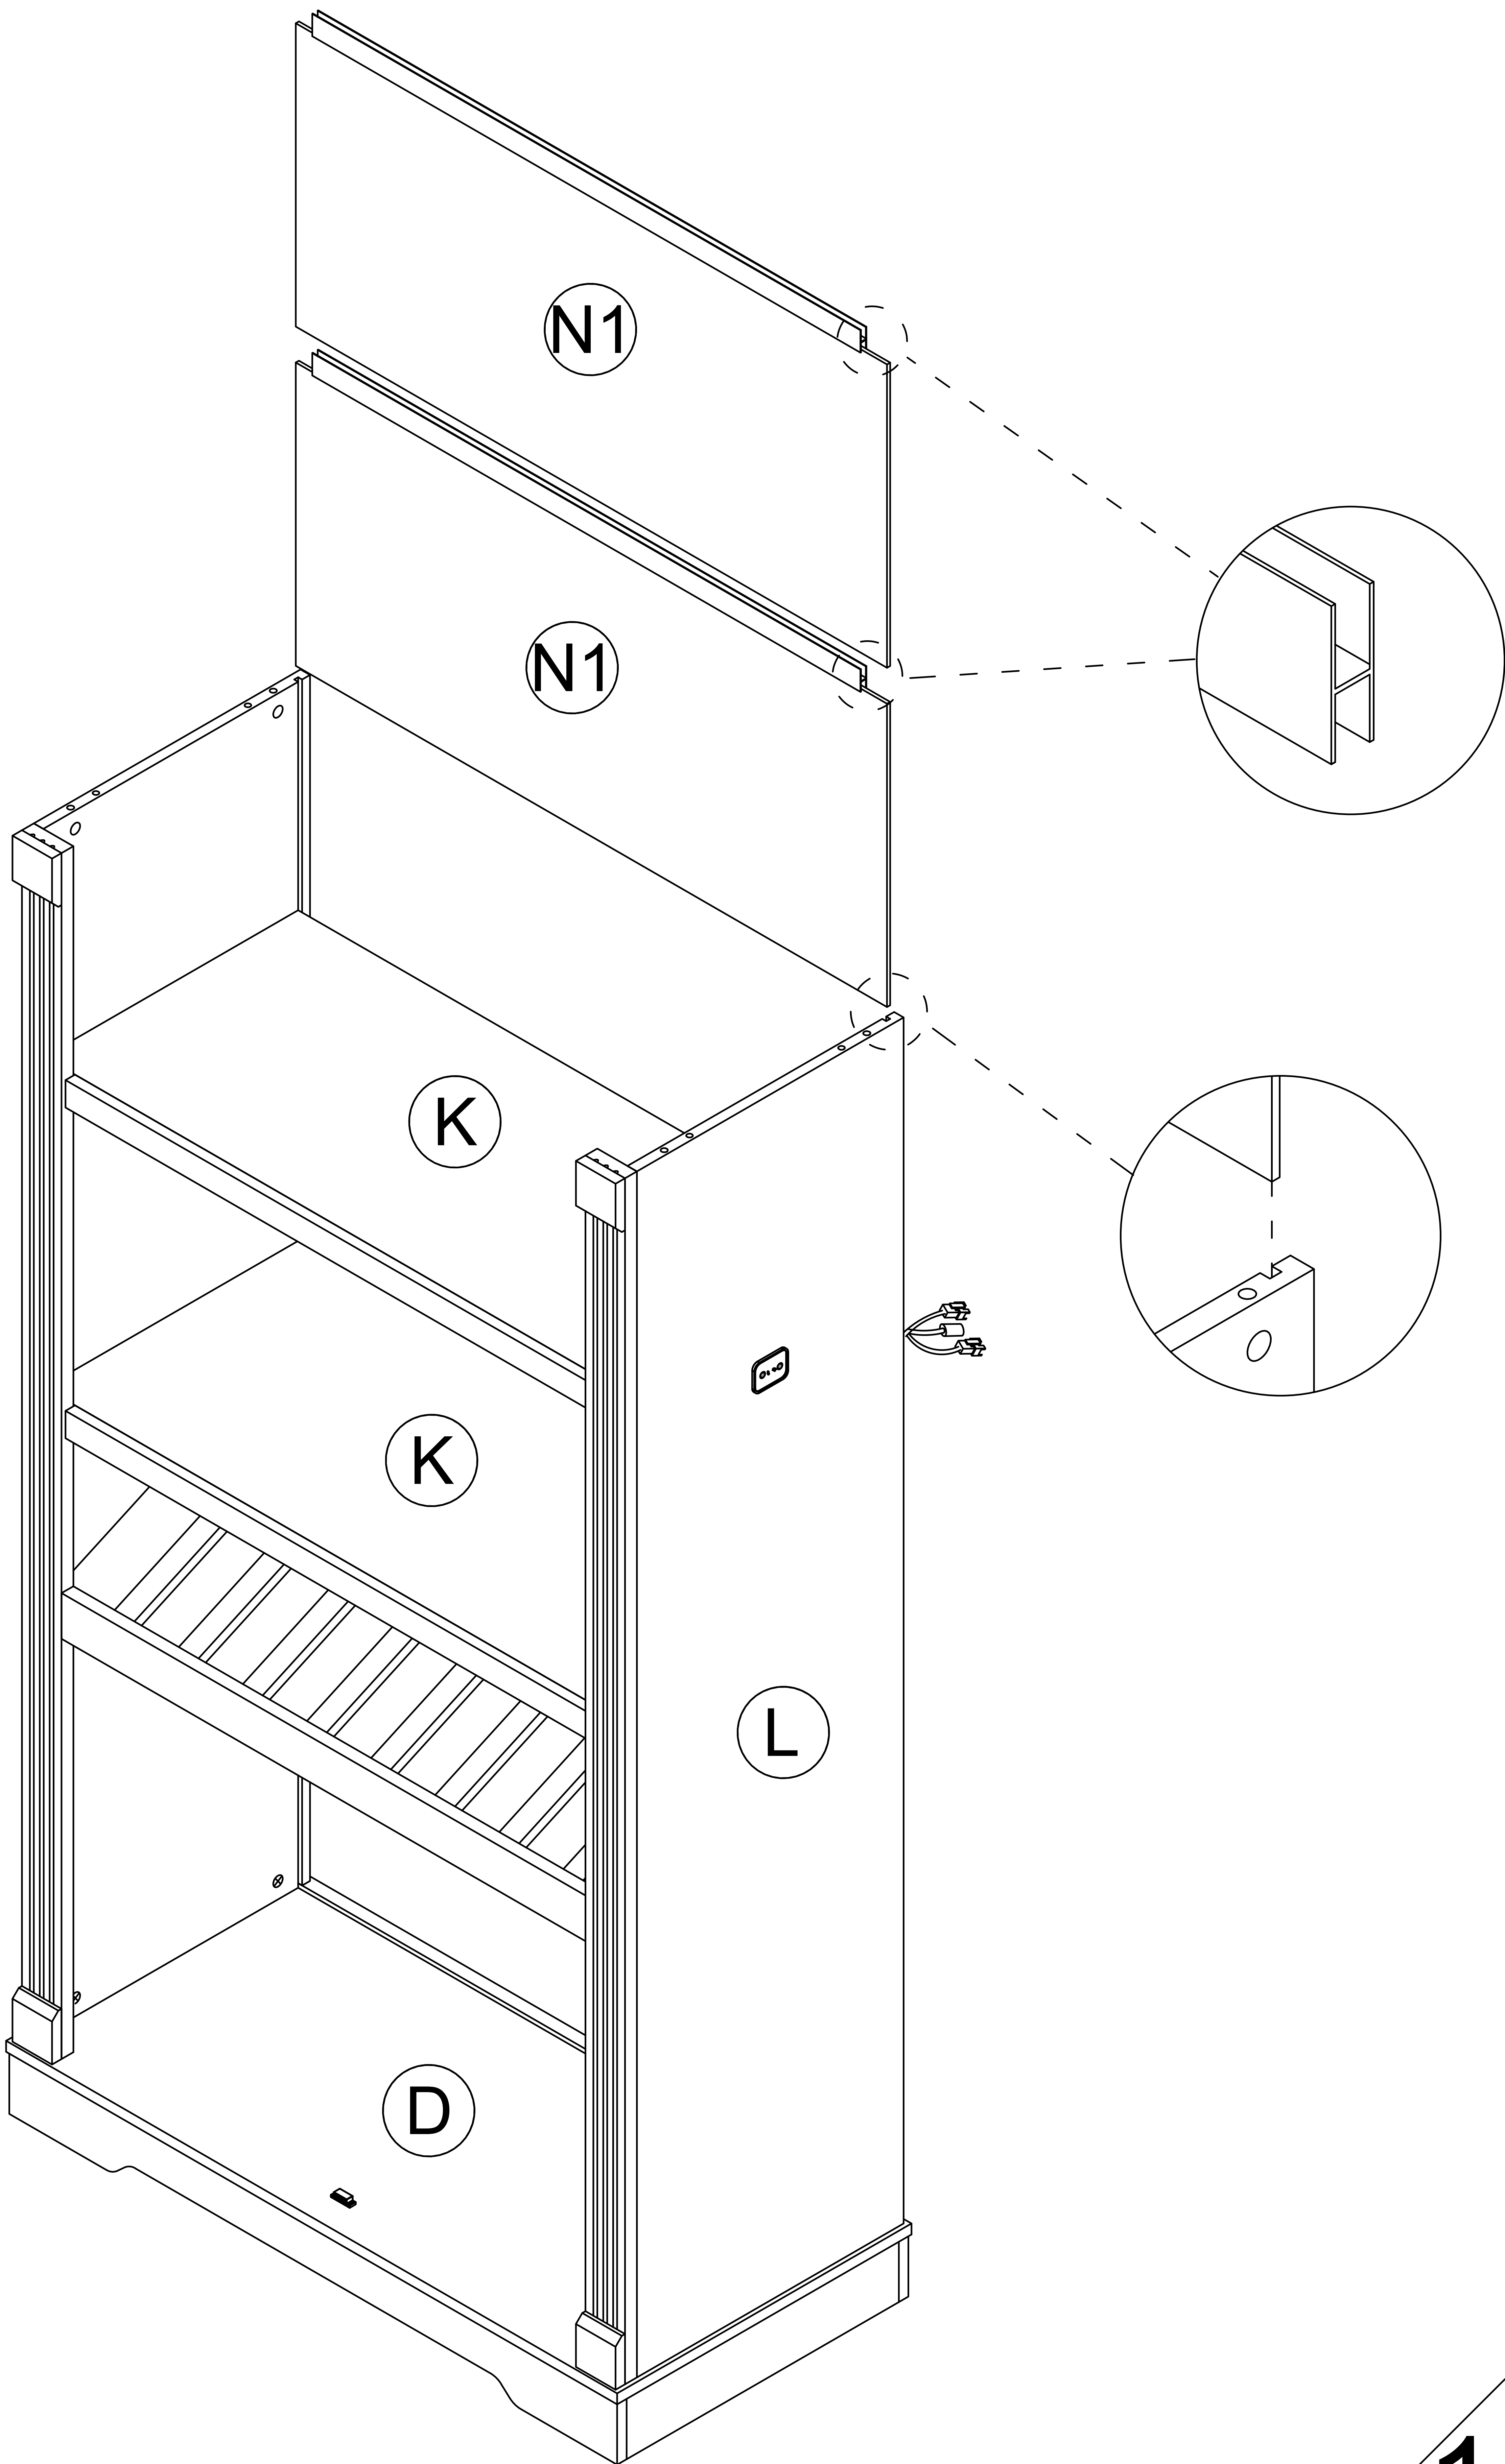



Step 21

6 x1

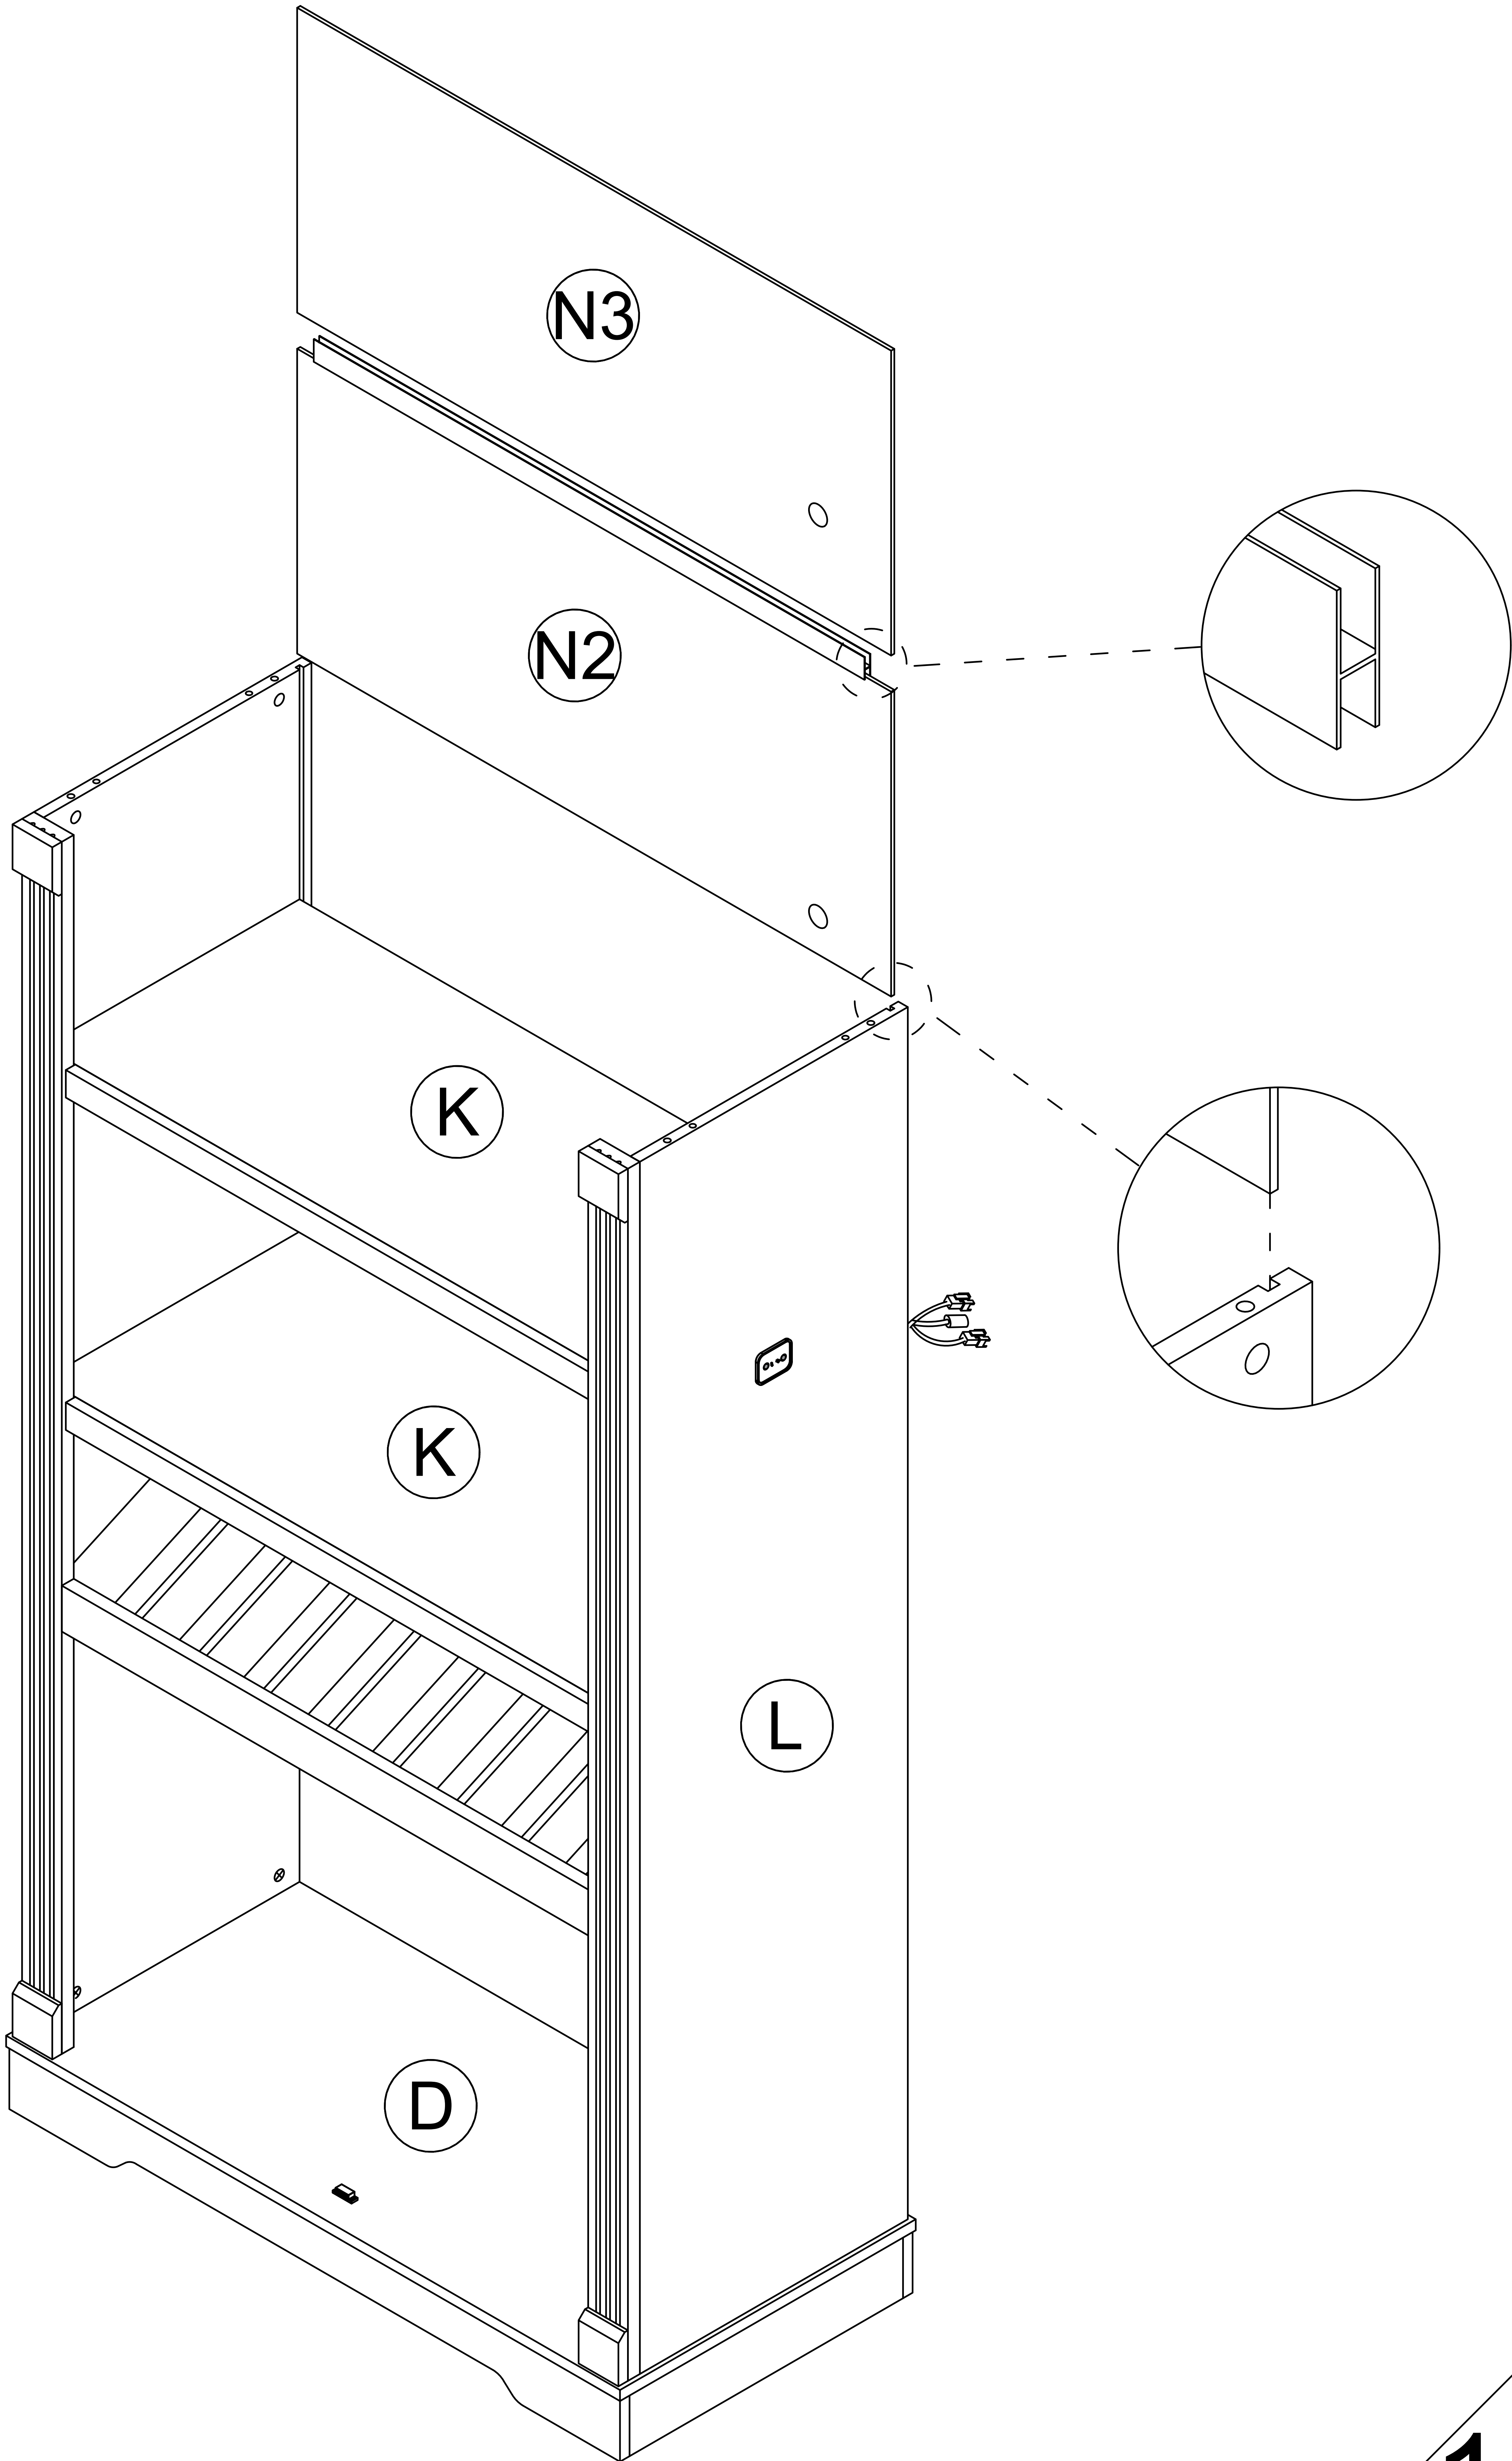


Step 22

3 x4

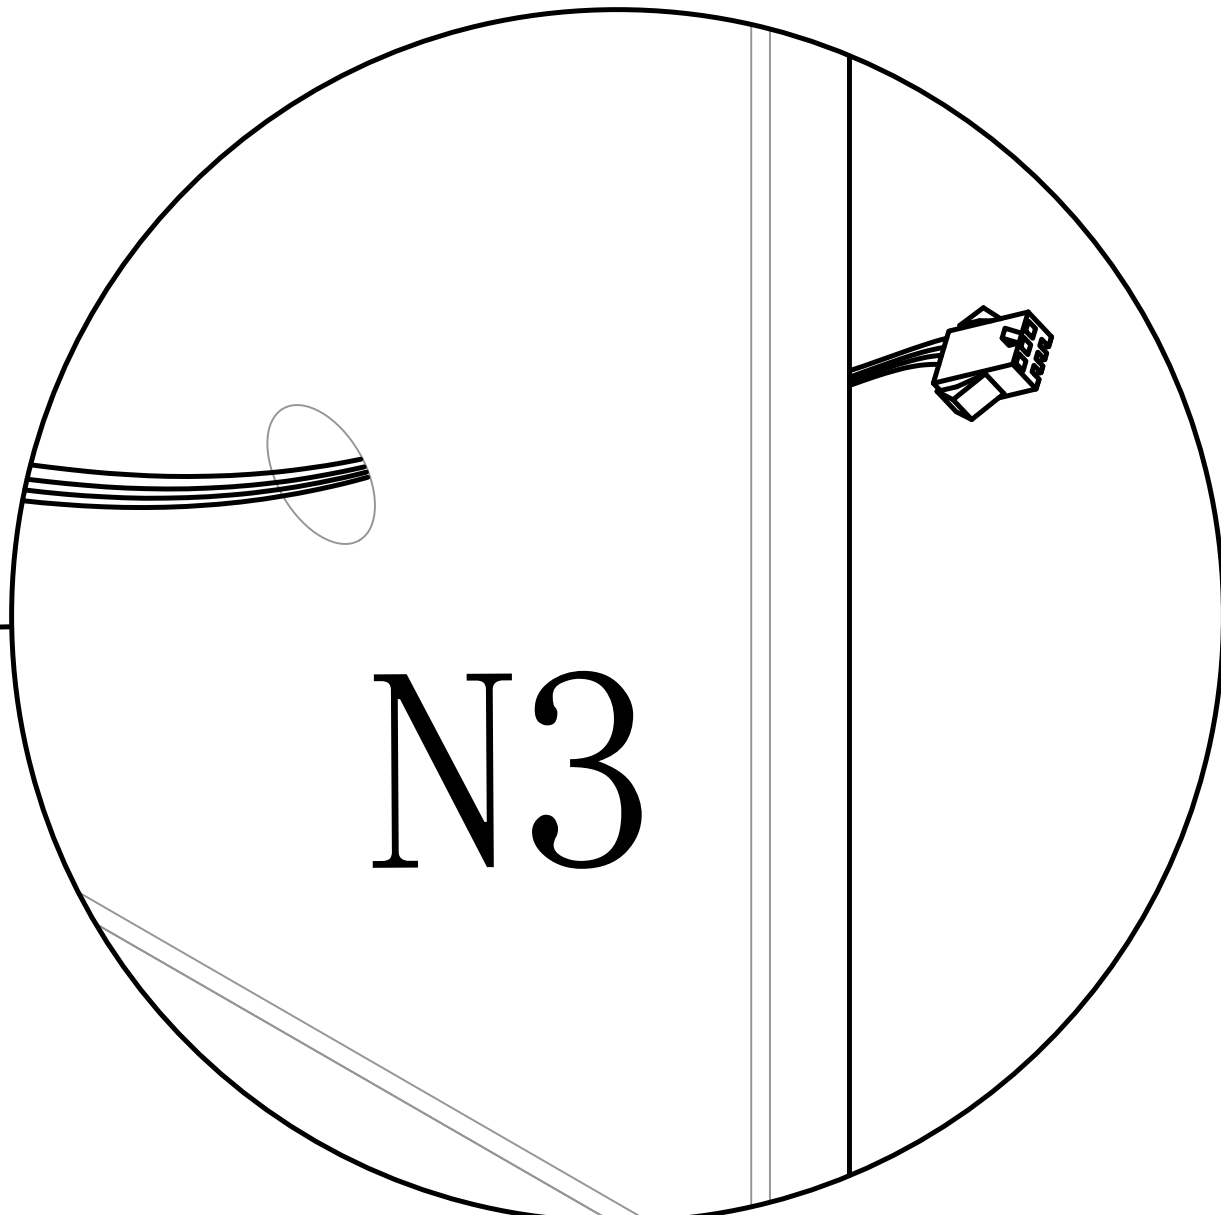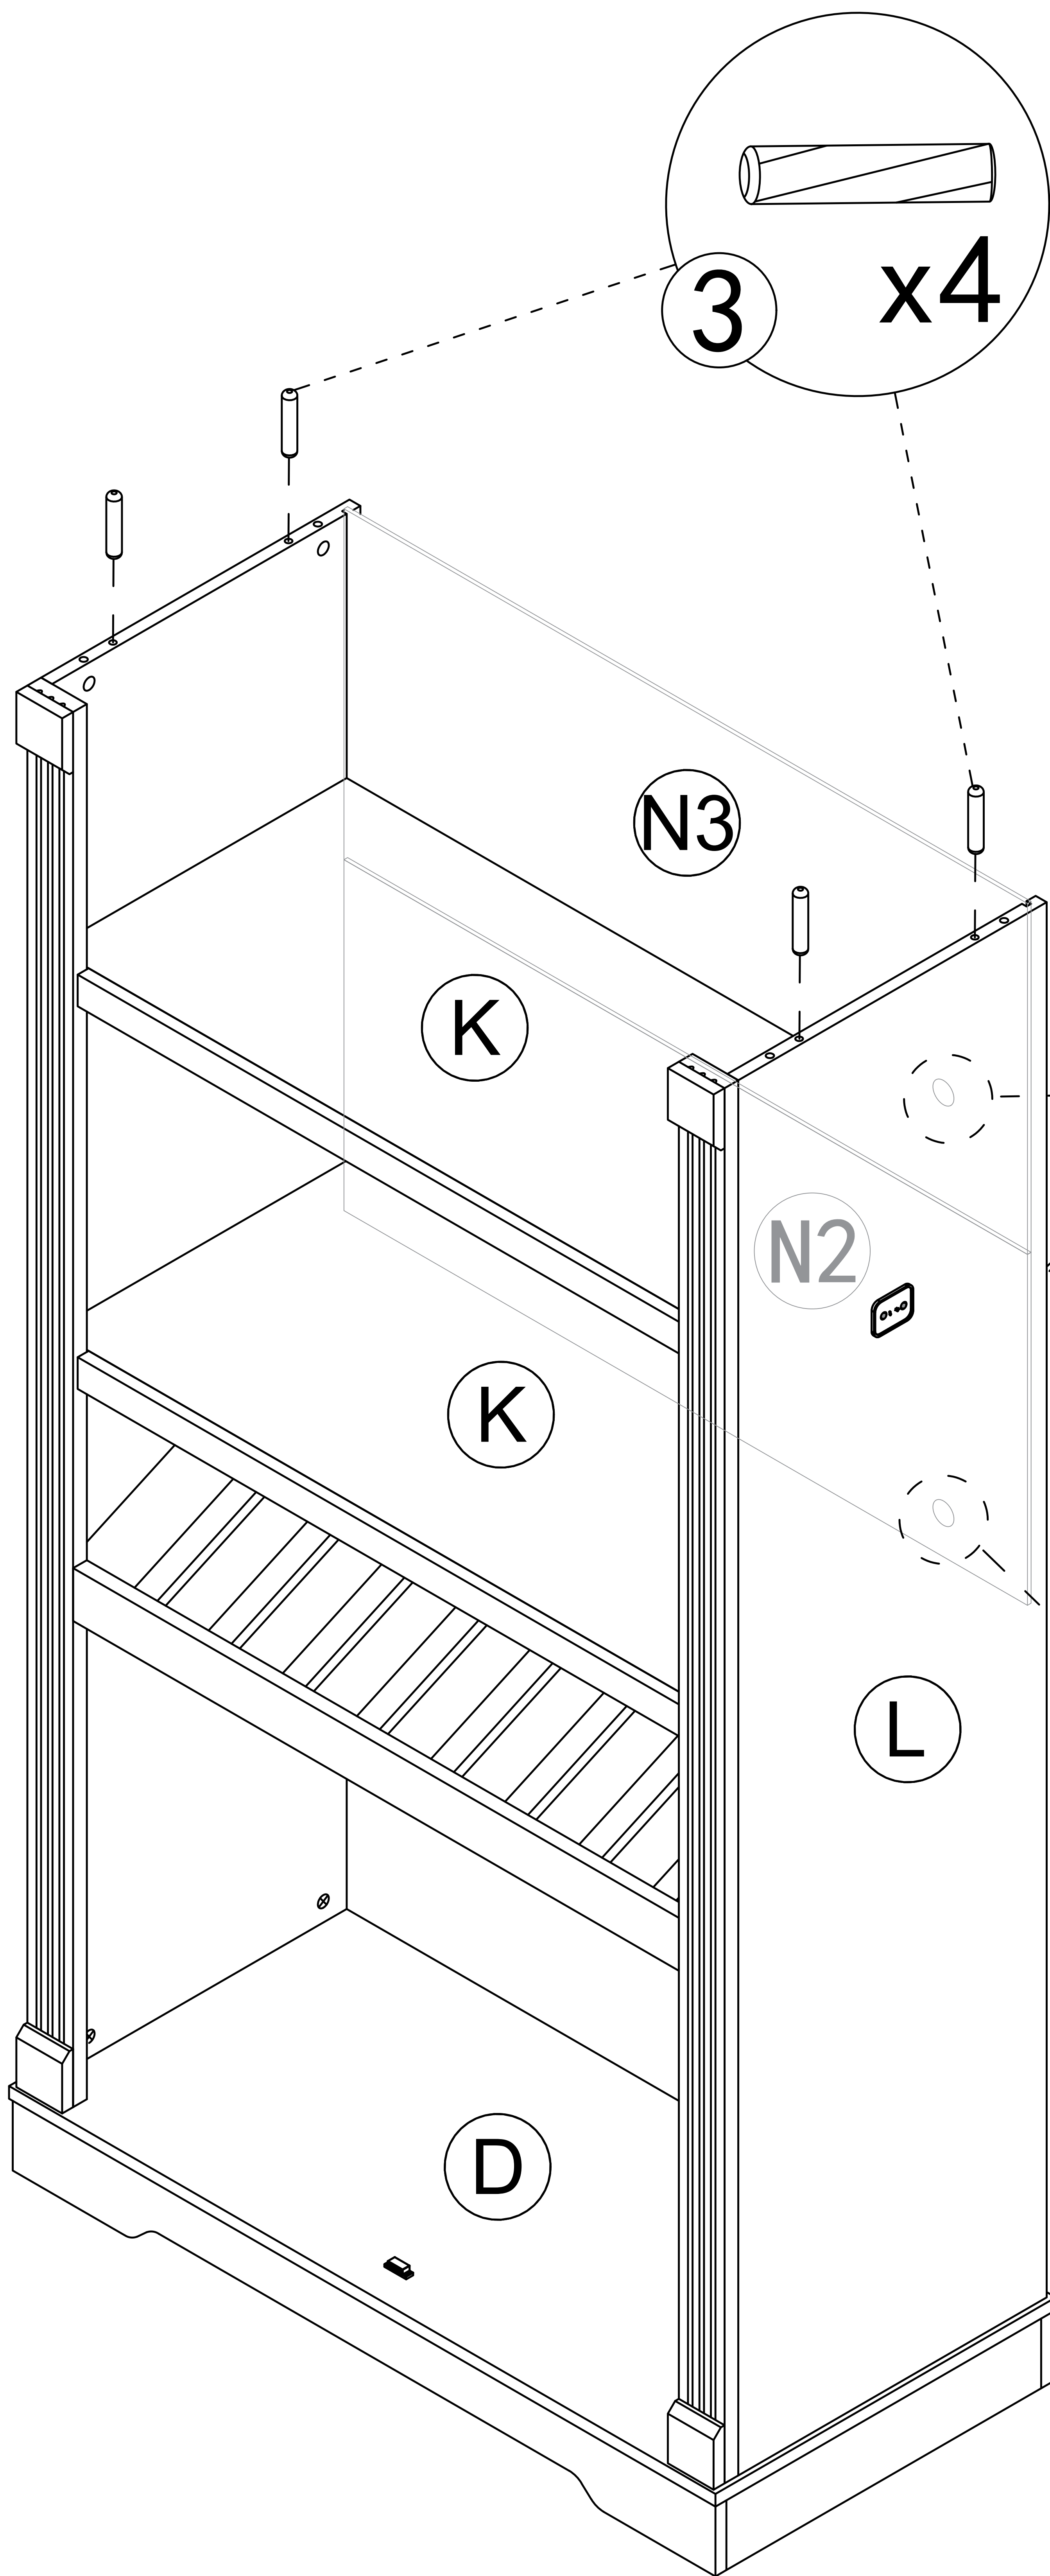

Passing through the hole of plate N3

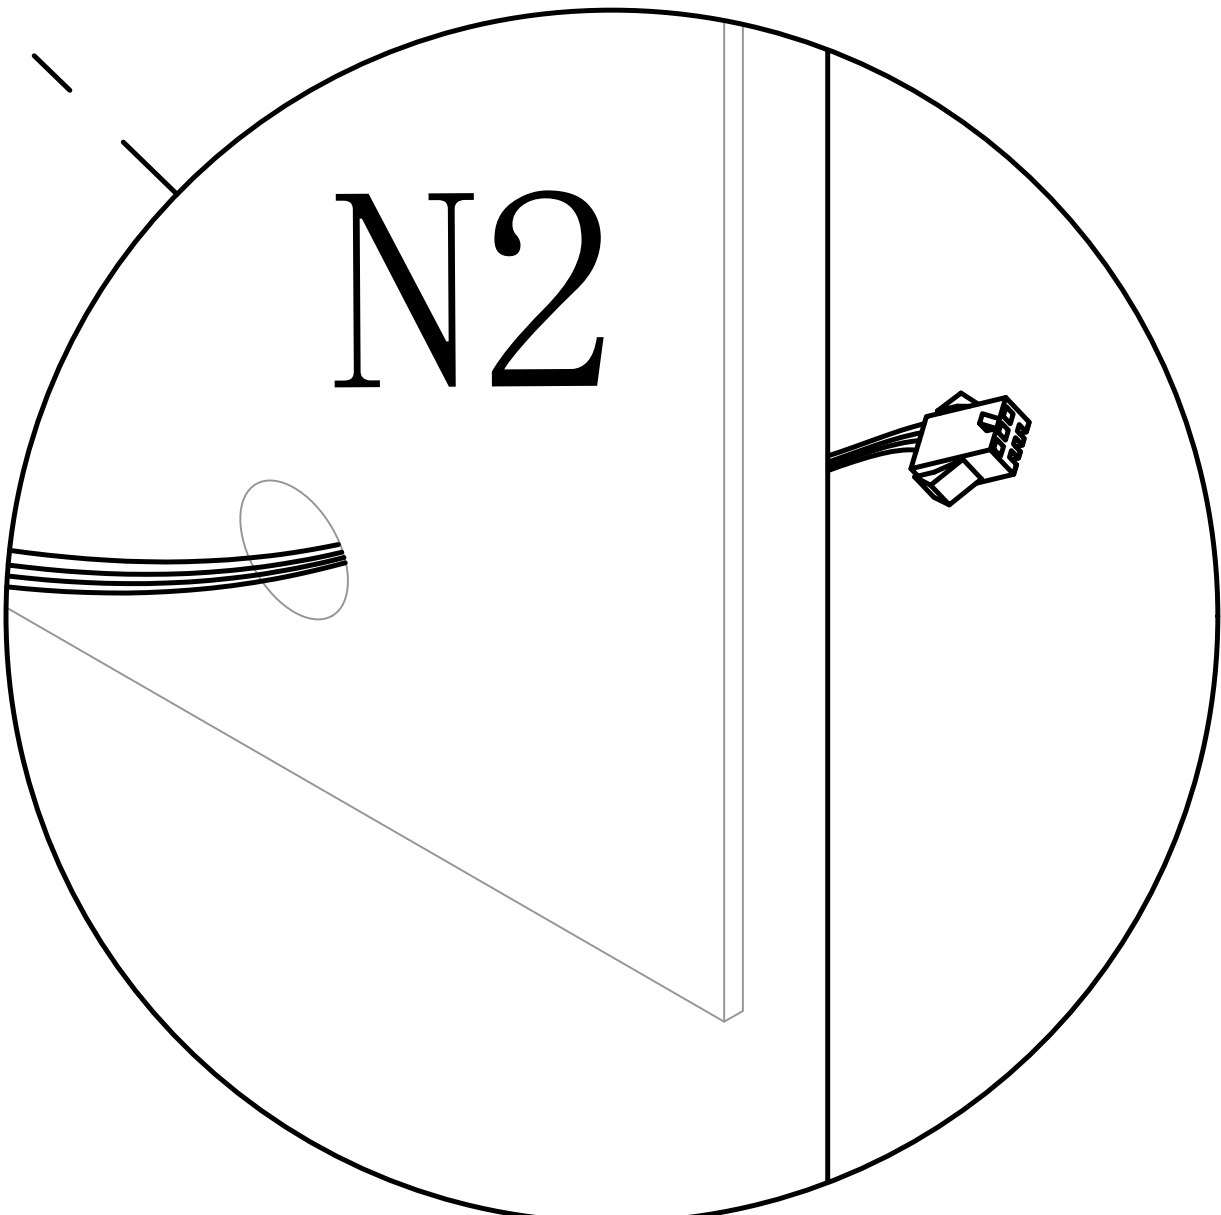


Passing through the hole of plate N2

Step 23

Connect the light cable socket


- 1

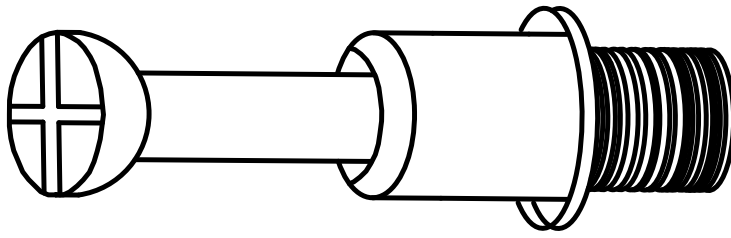

x8
- 7




x1

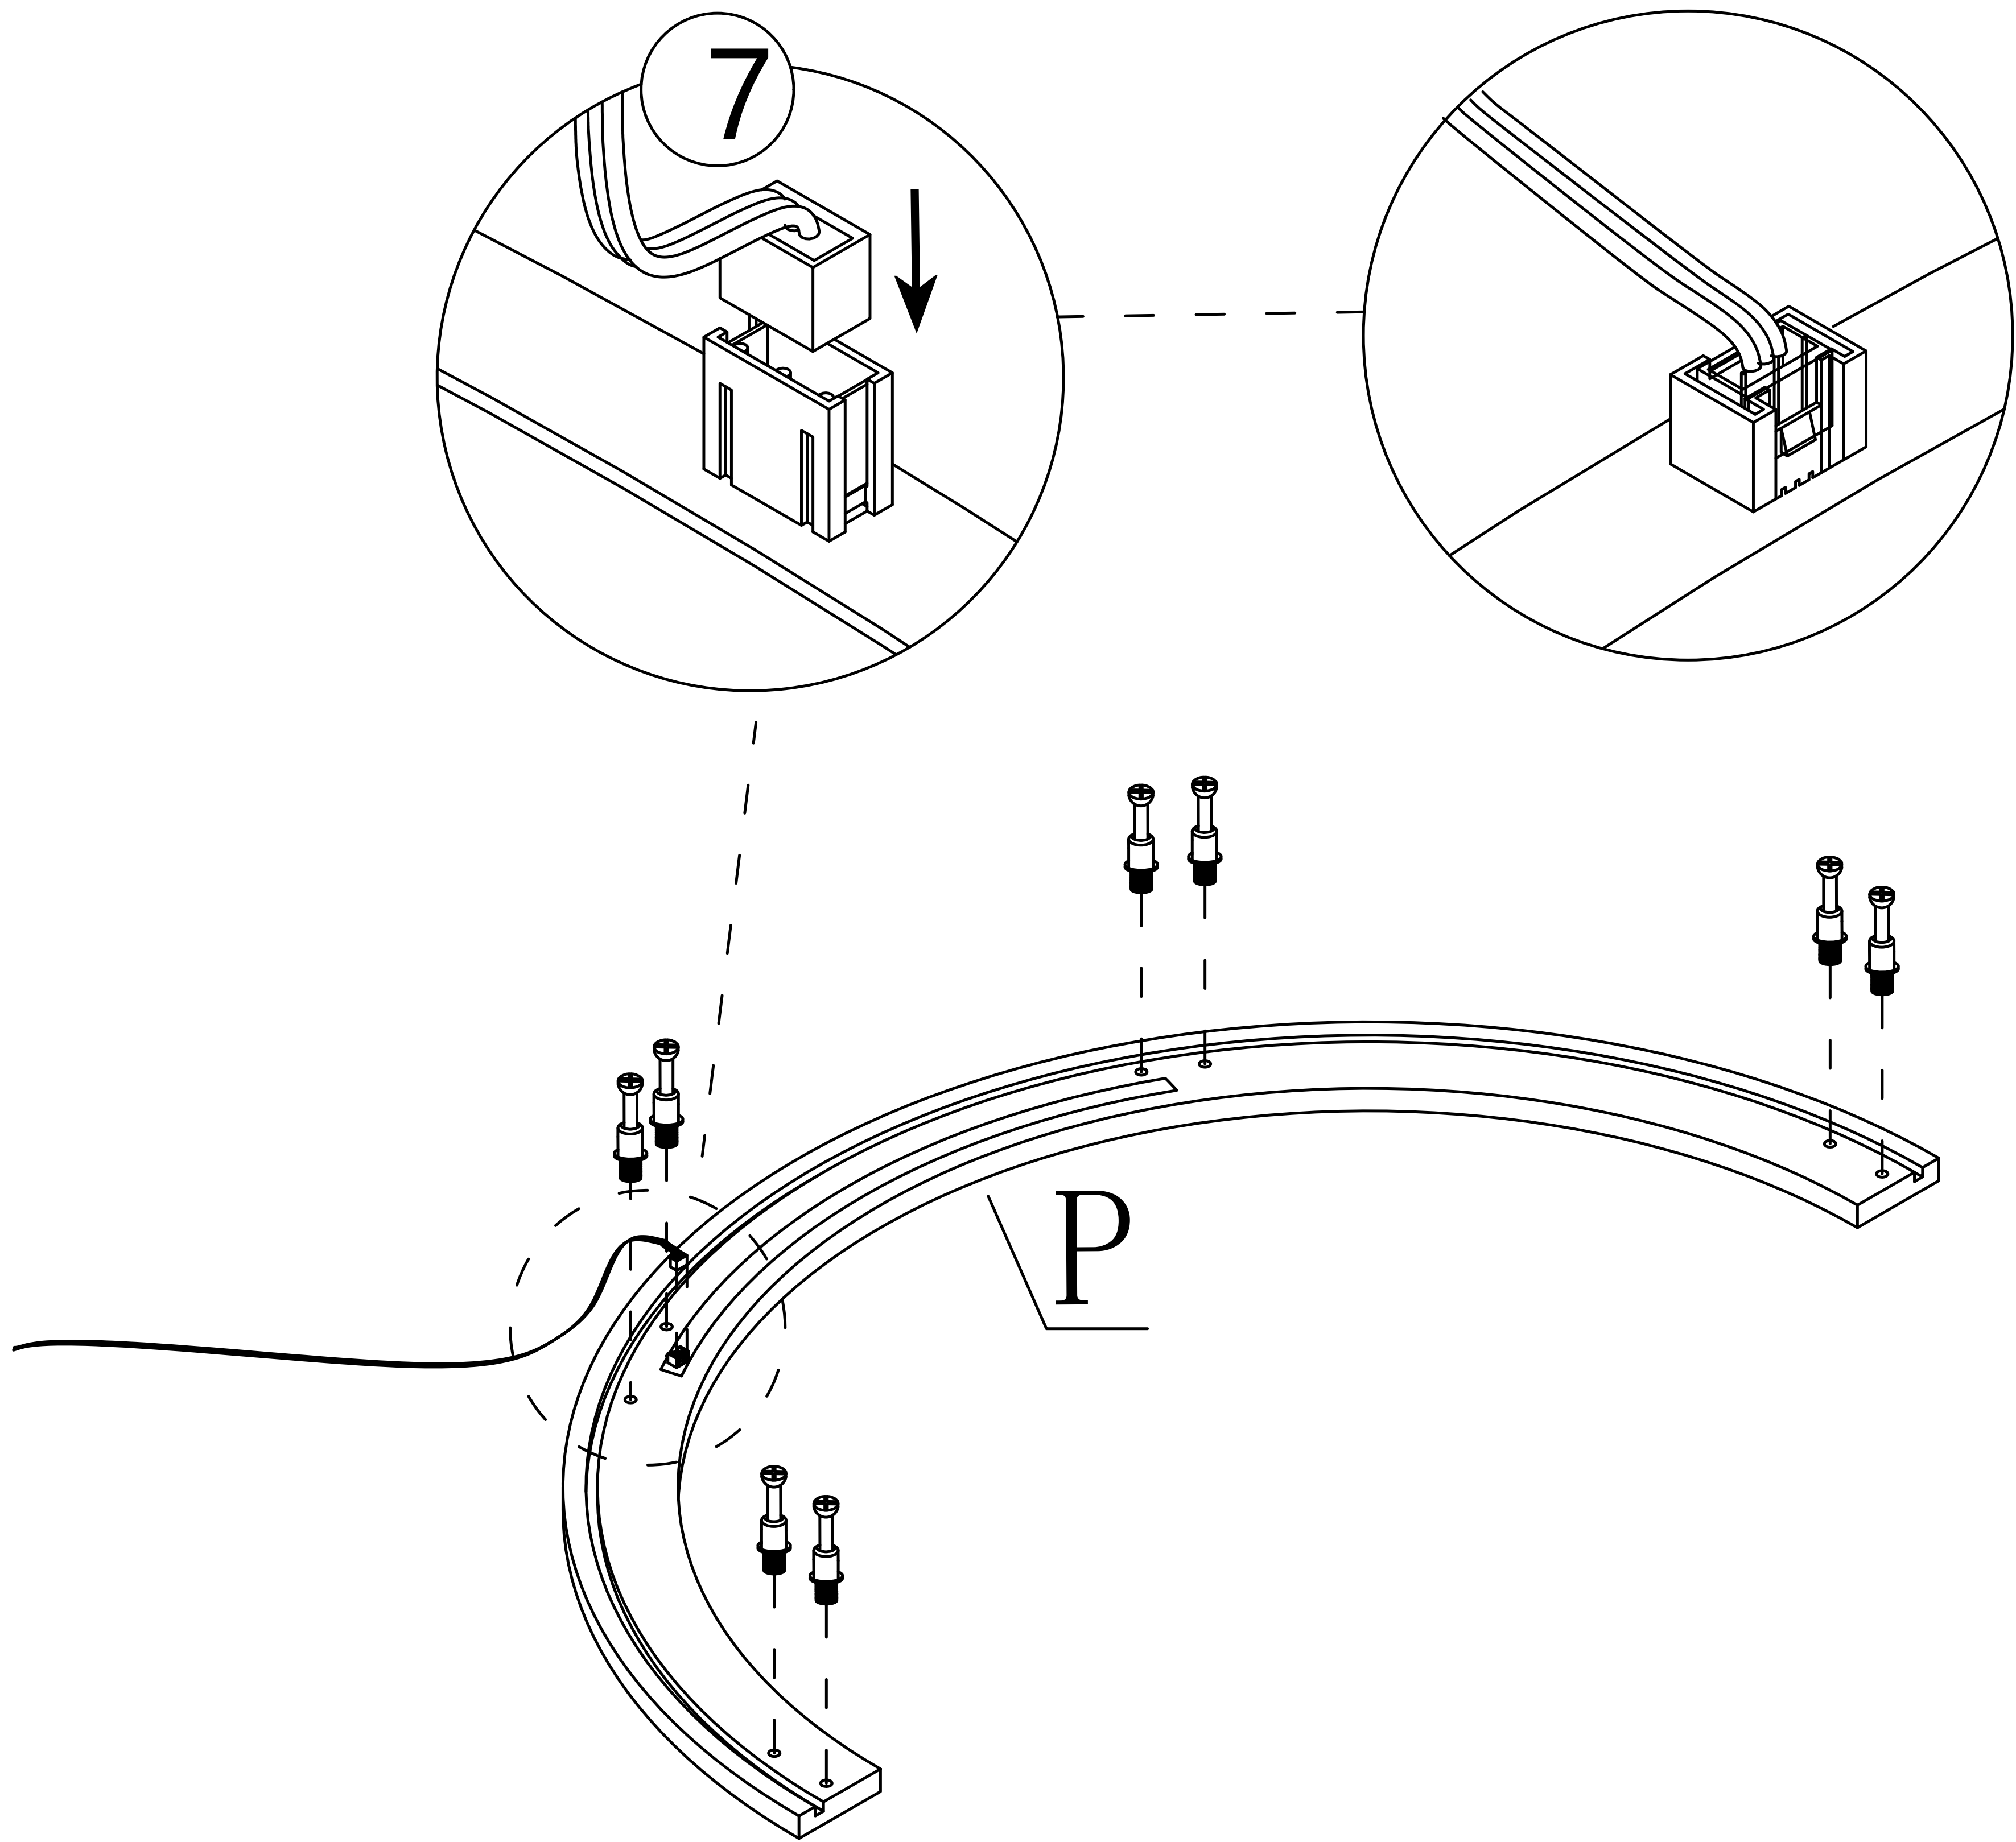


Step 24


- 1

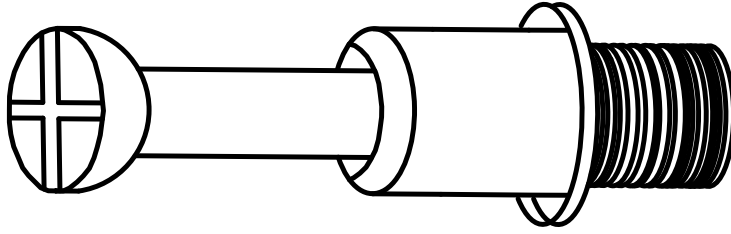


x8

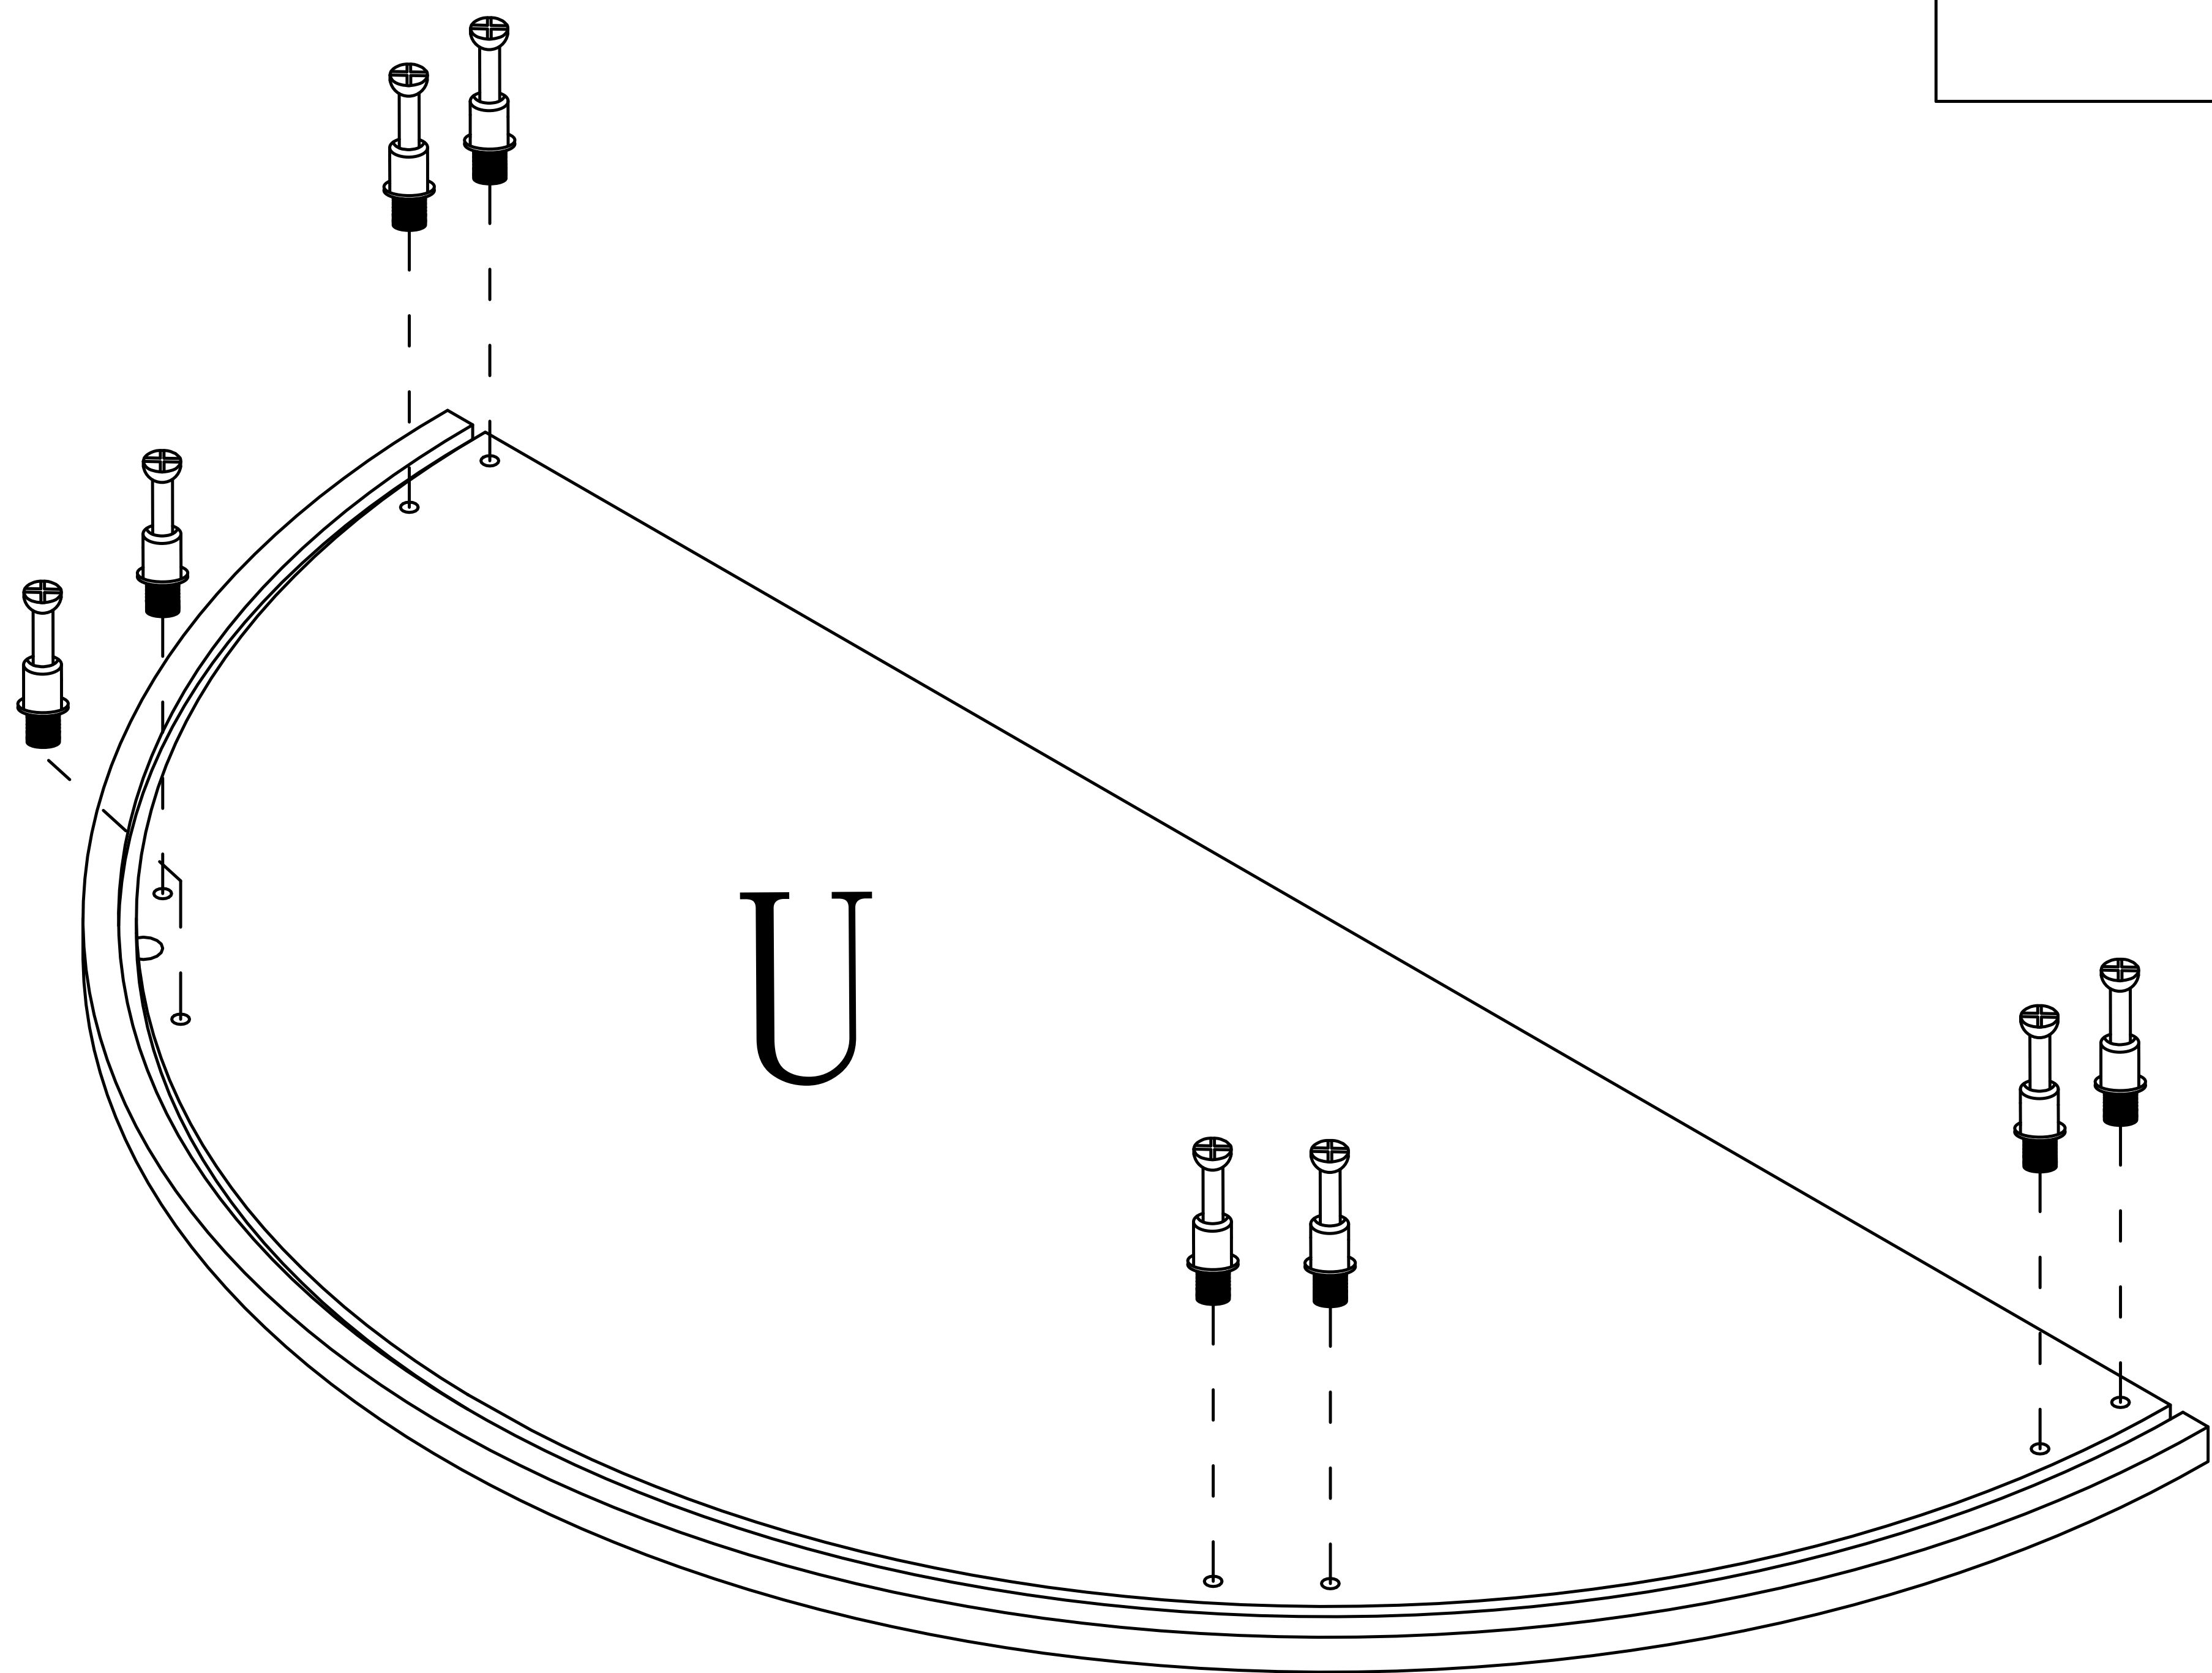


Step 25

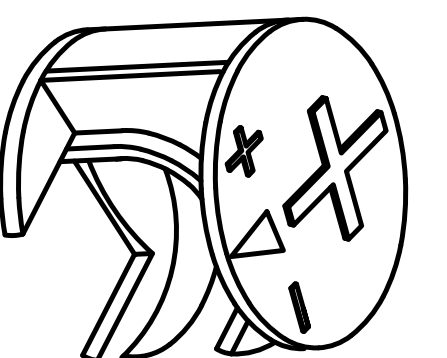
2  x8

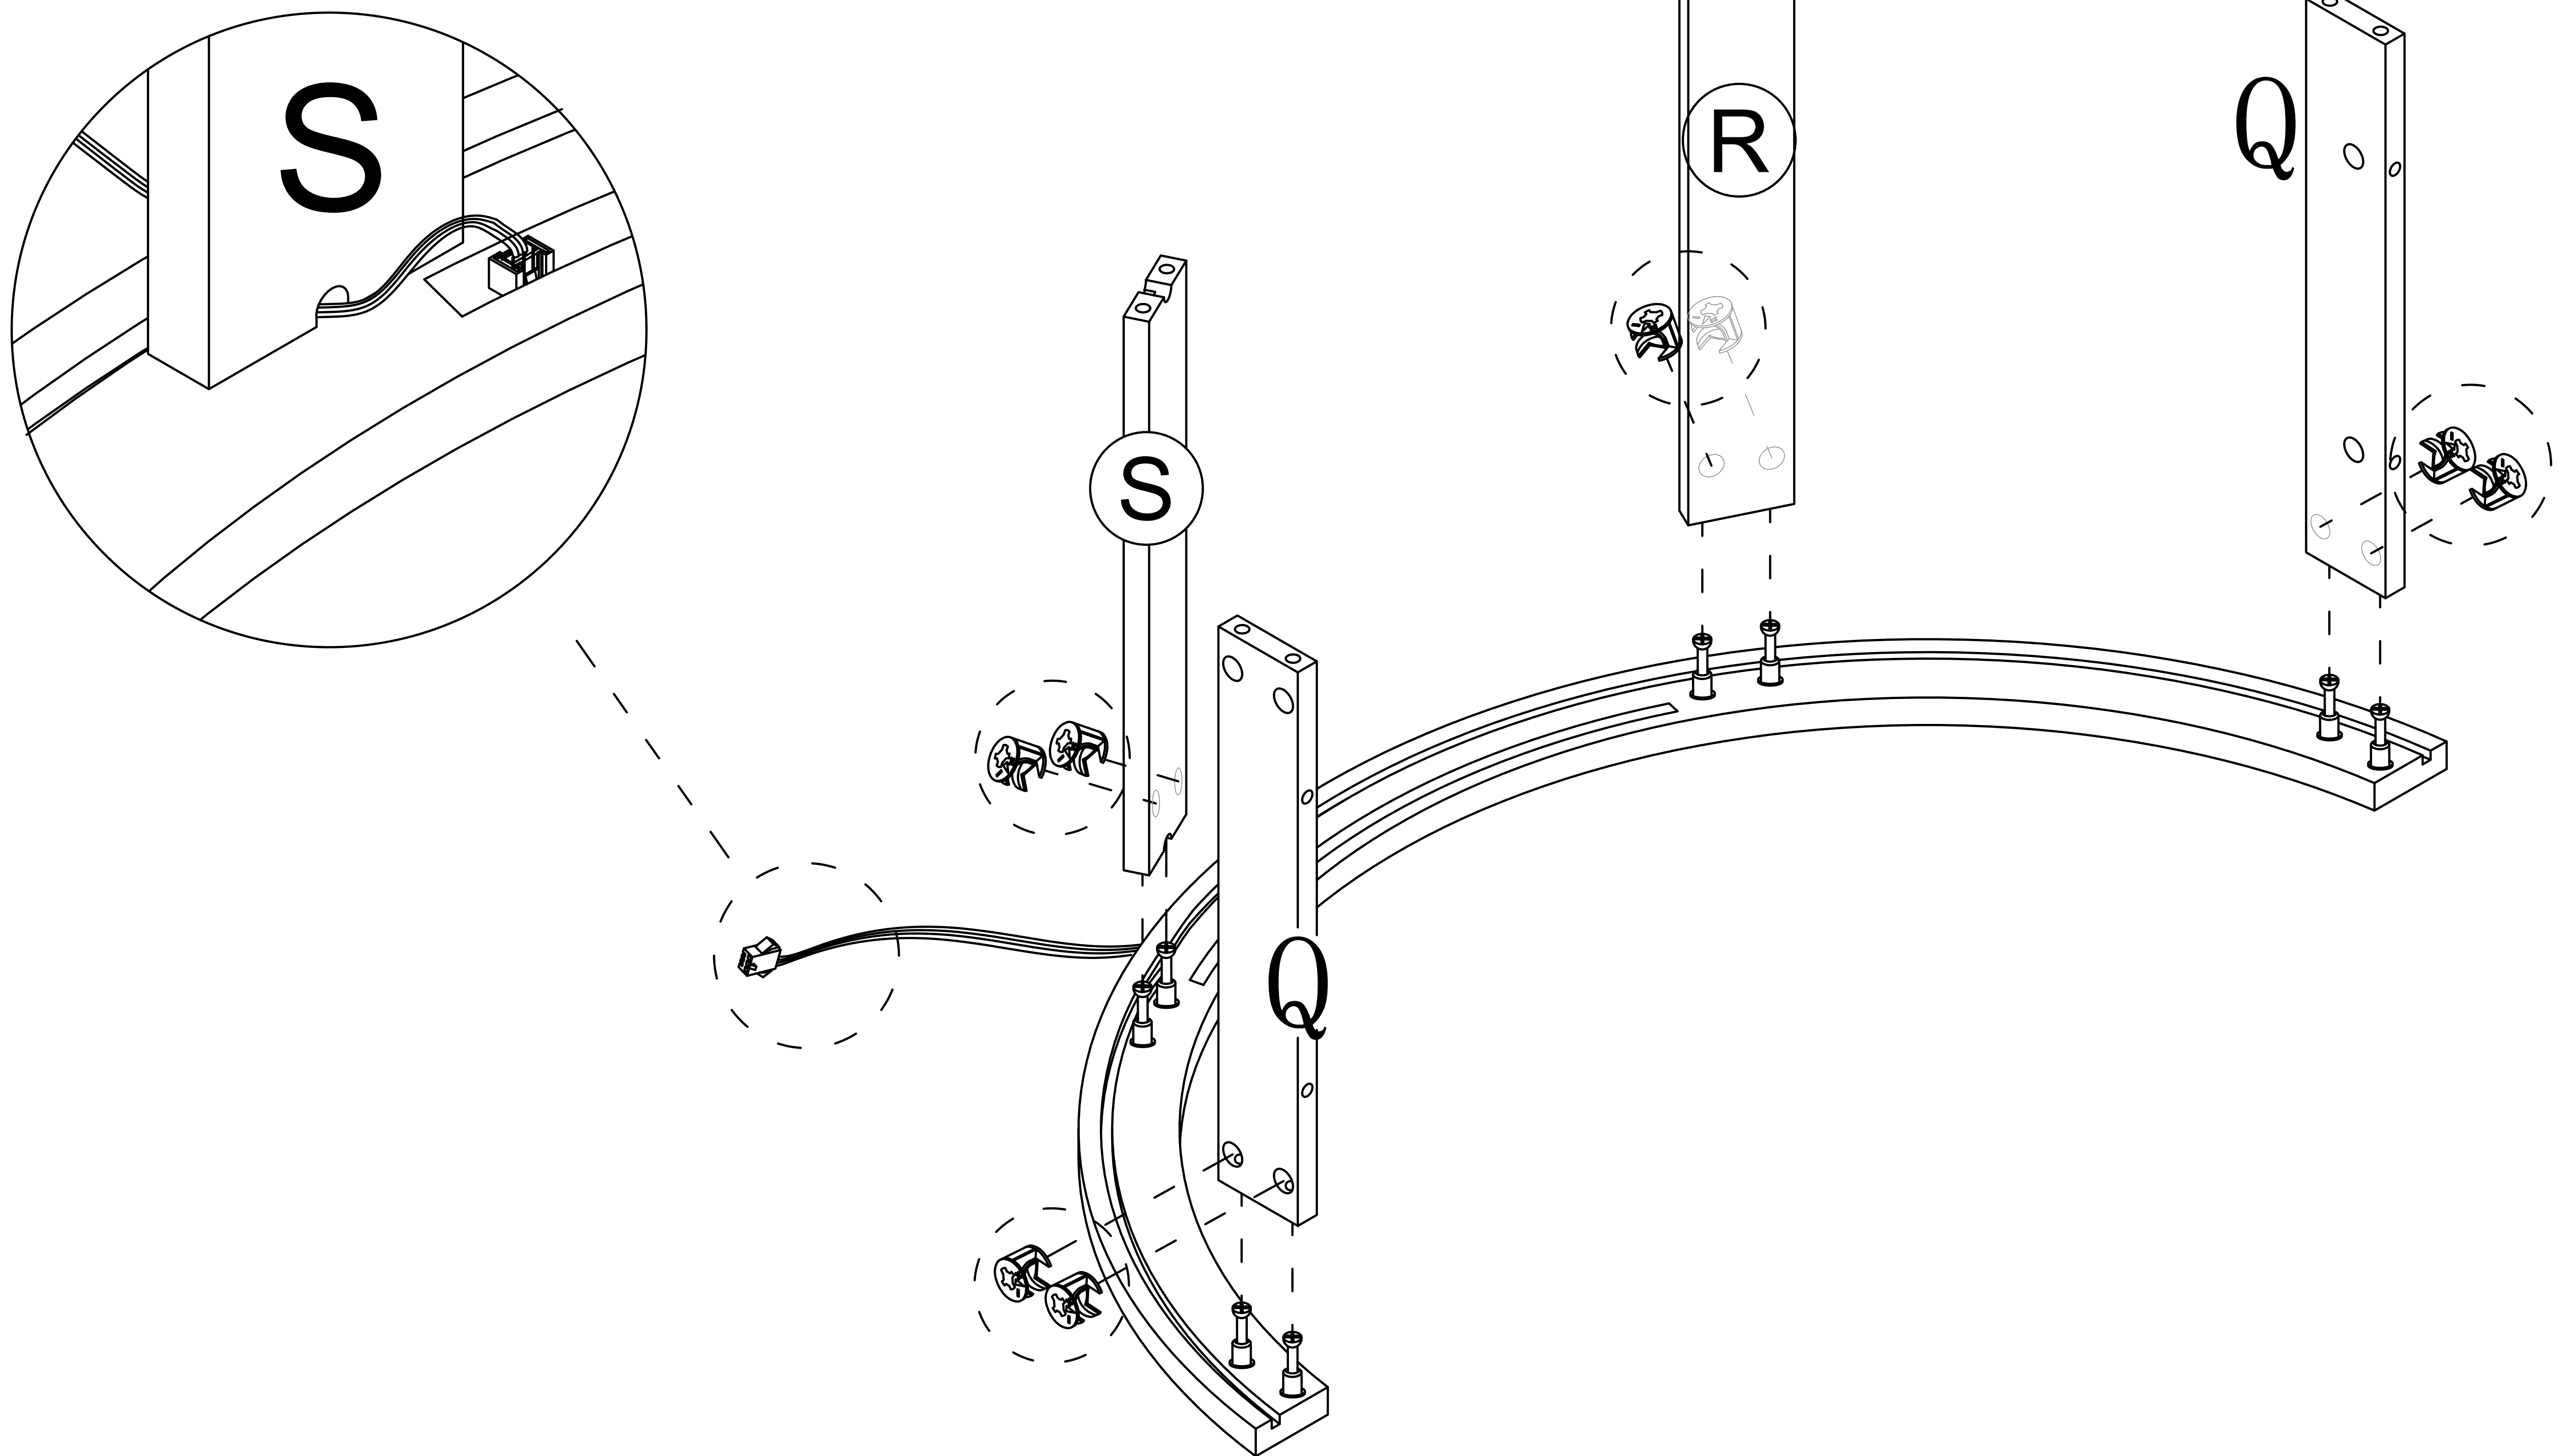

Thread the light wire through board S and tighten the nut

Step 26

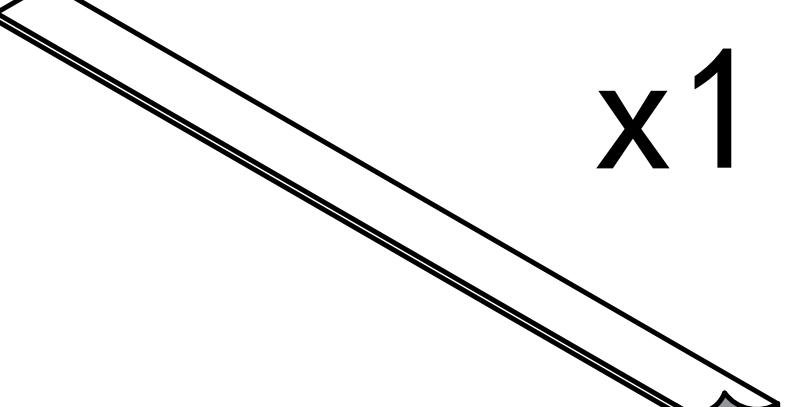
8  x1

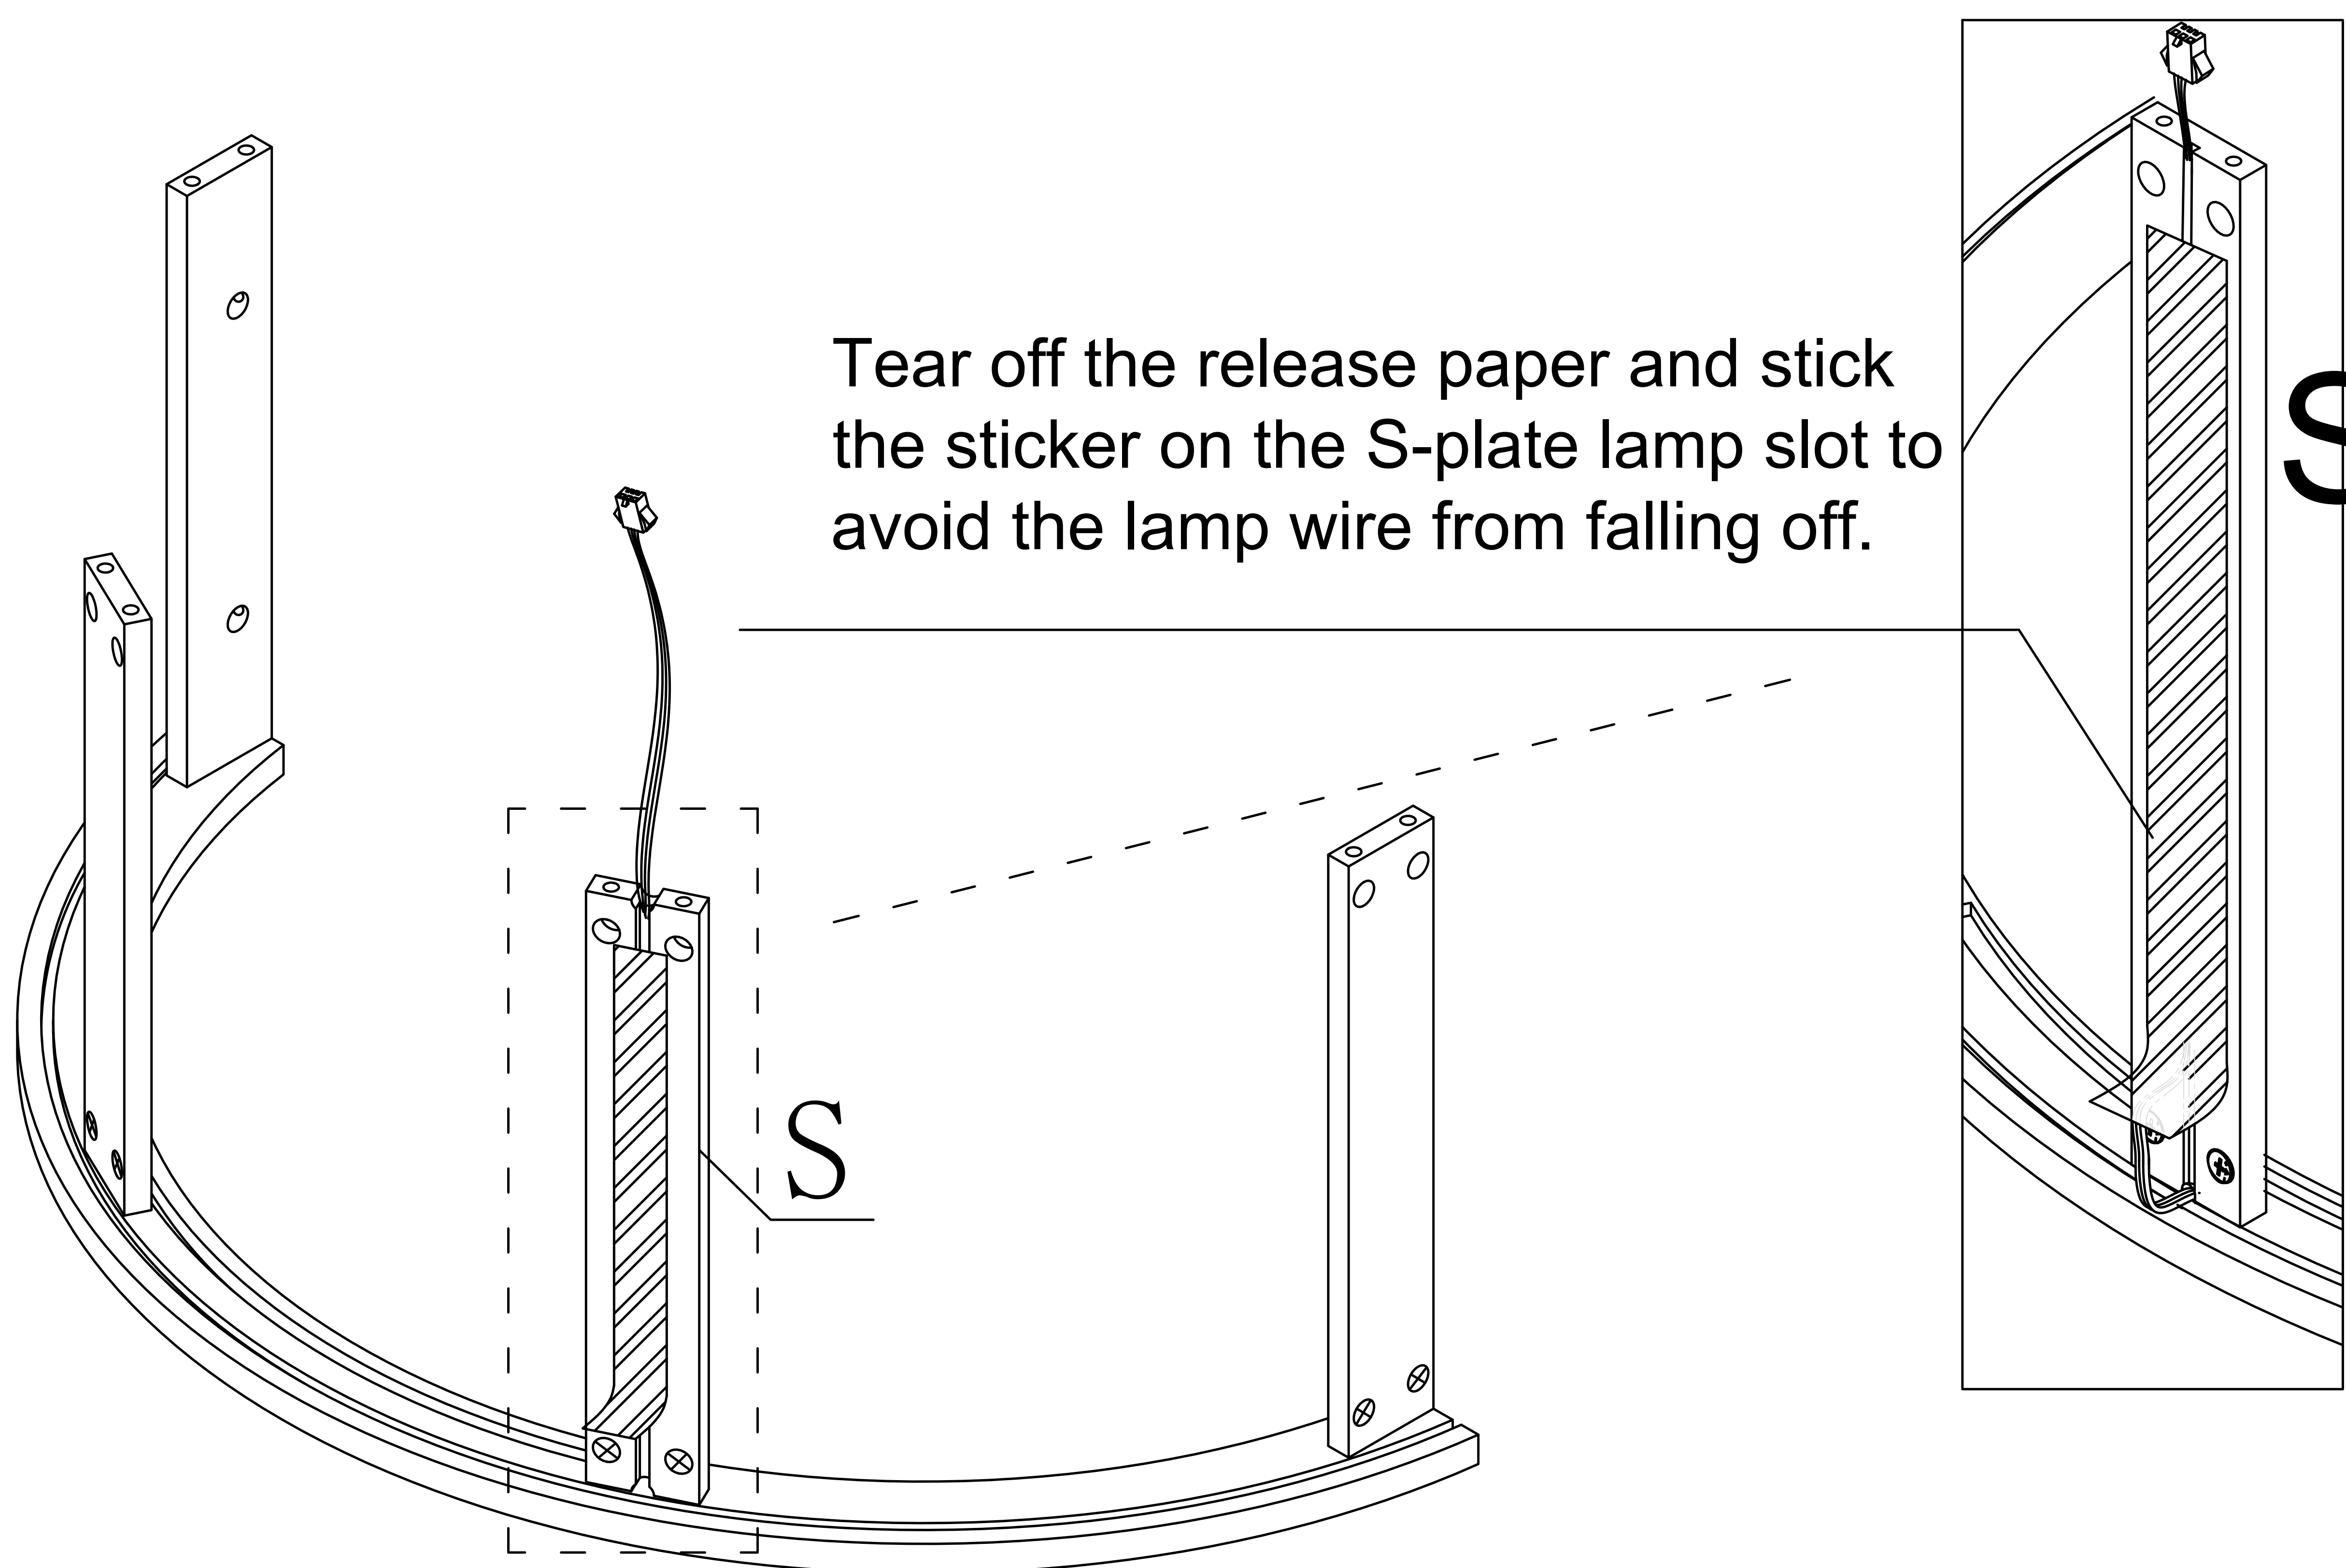


Tear off the release paper and stick the sticker on the S-plate lamp slot to avoid the lamp wire from falling off.

Step 27


2

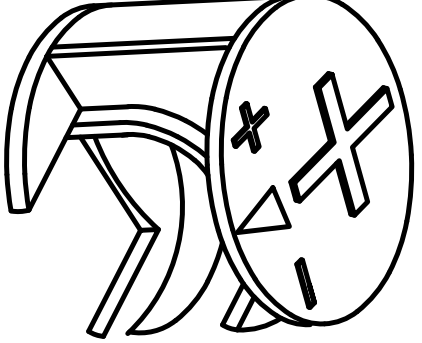
 x8

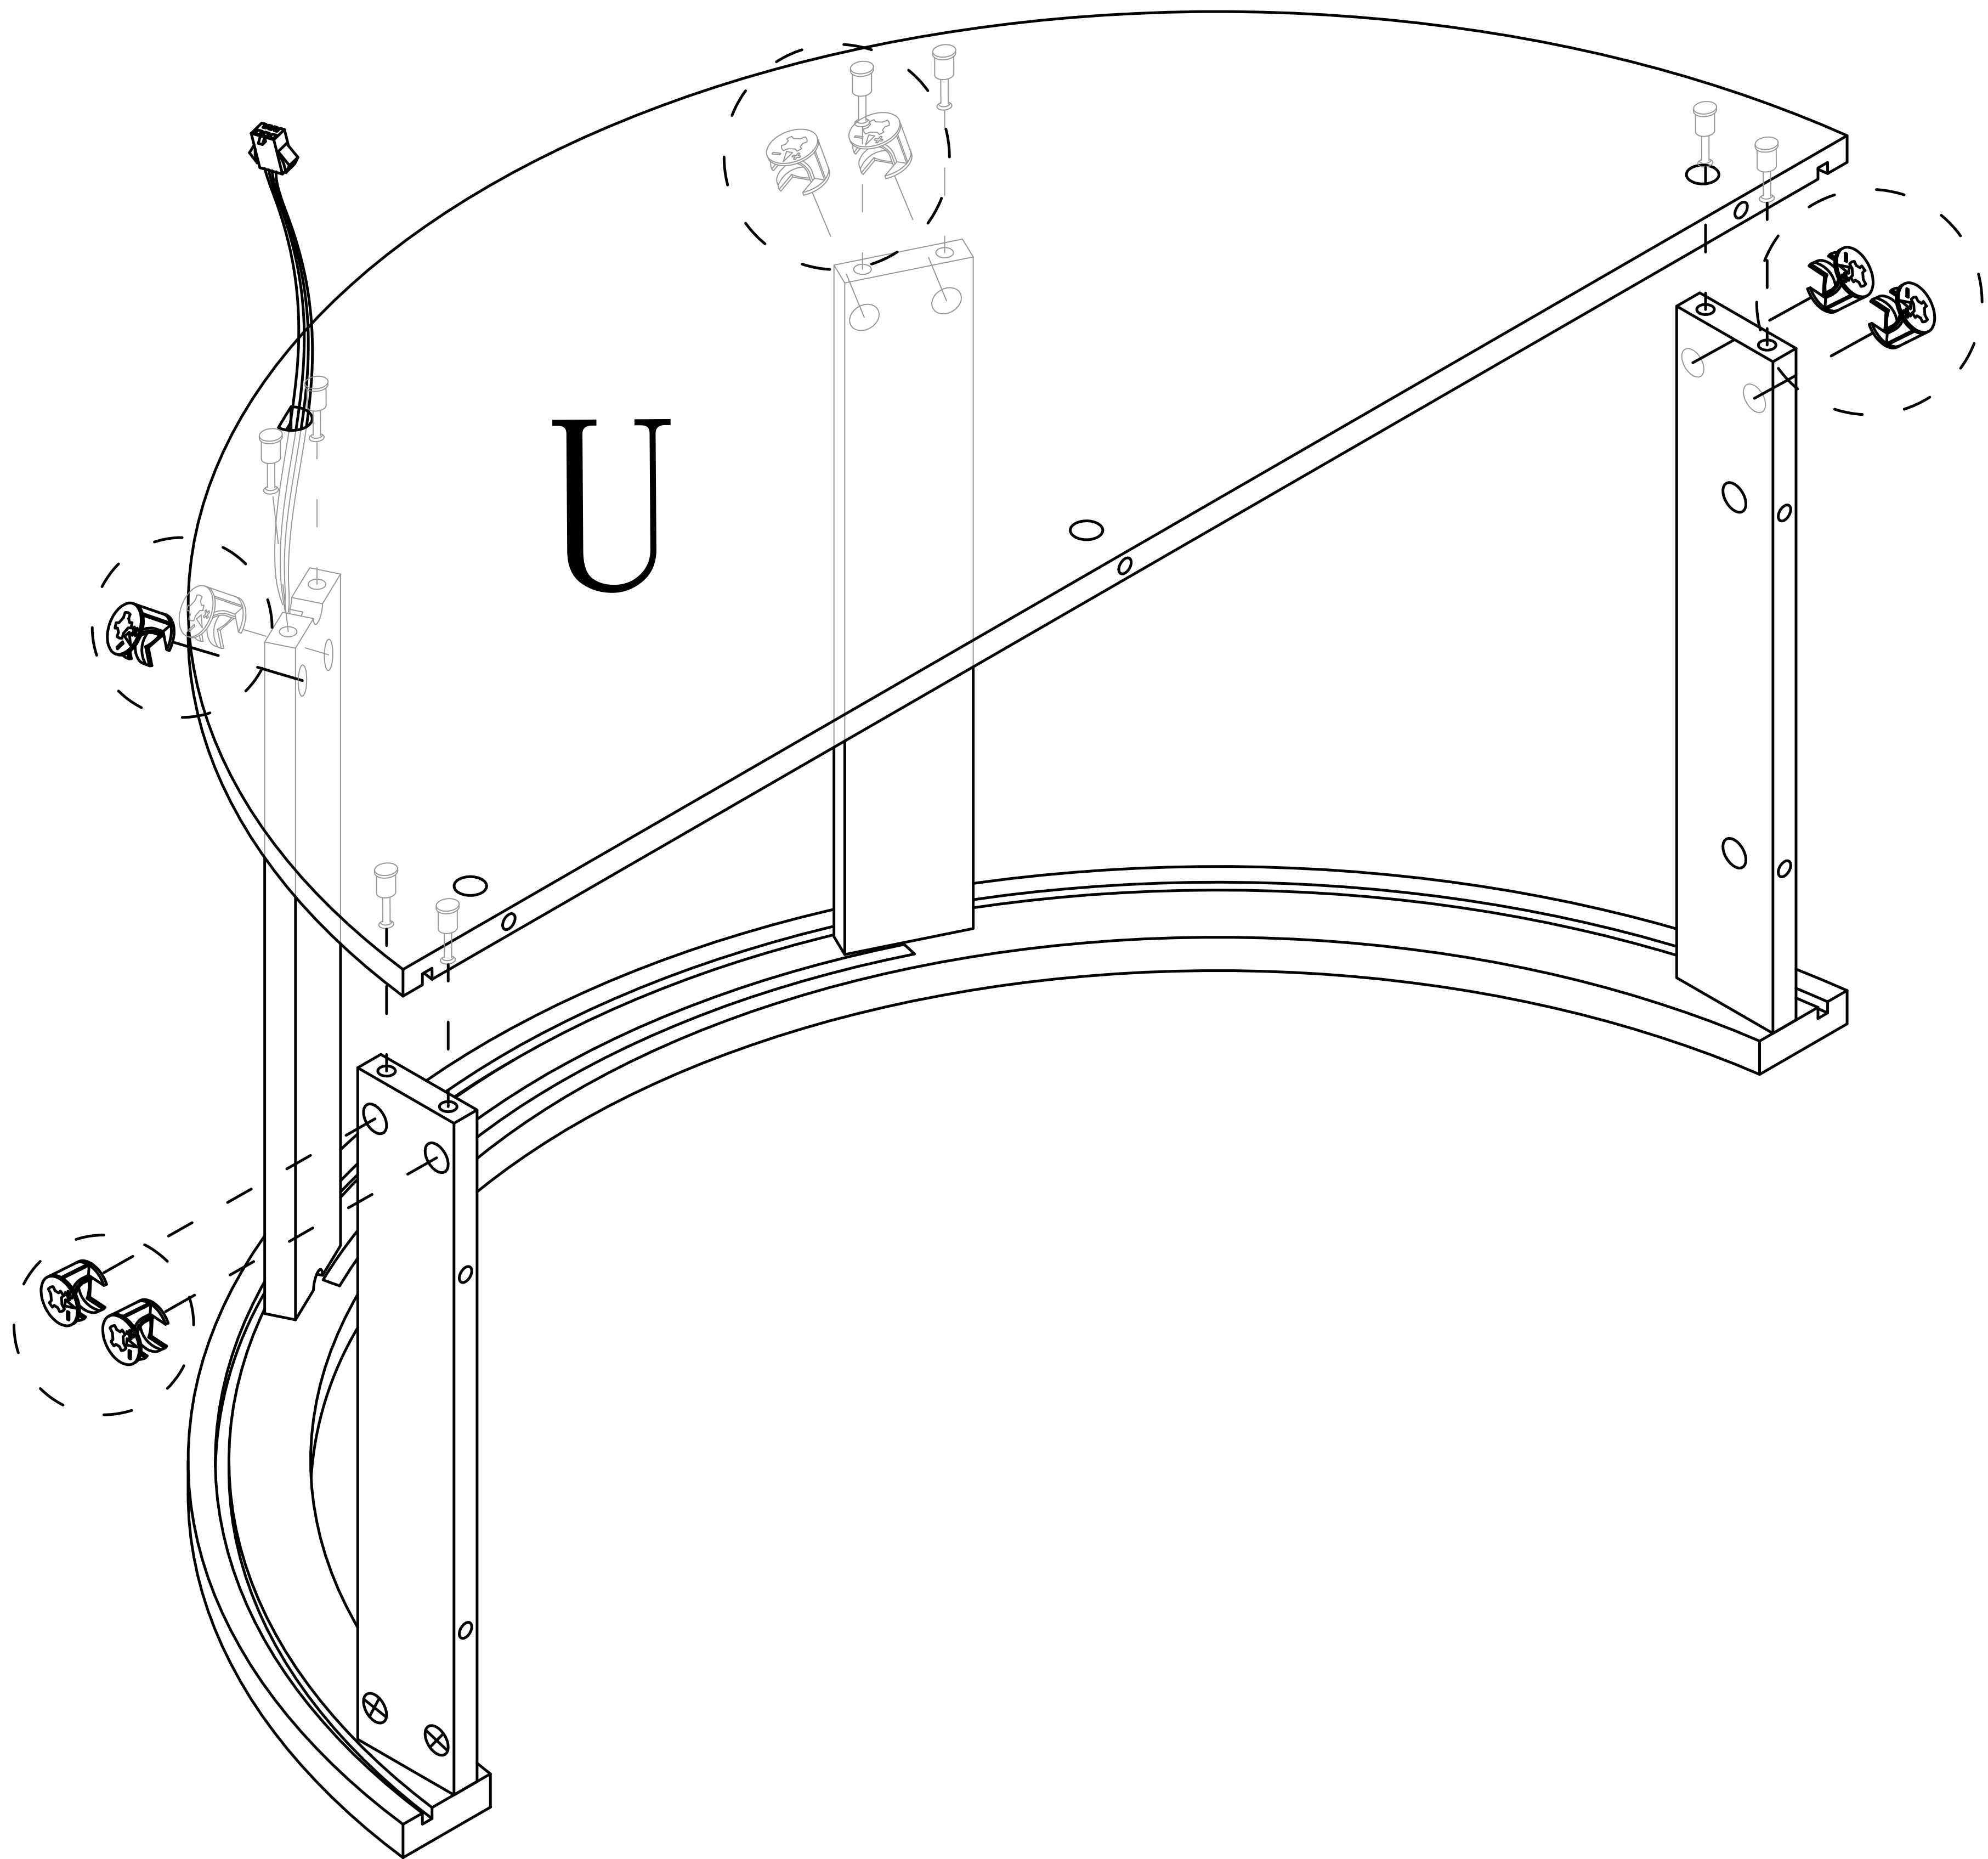


Step 28

1

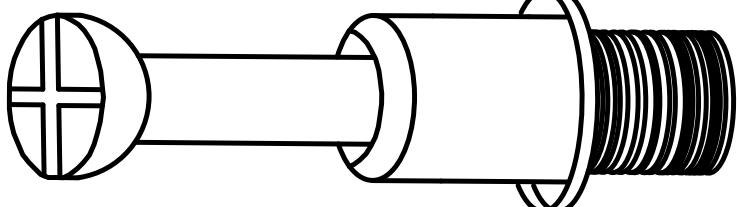
 x7

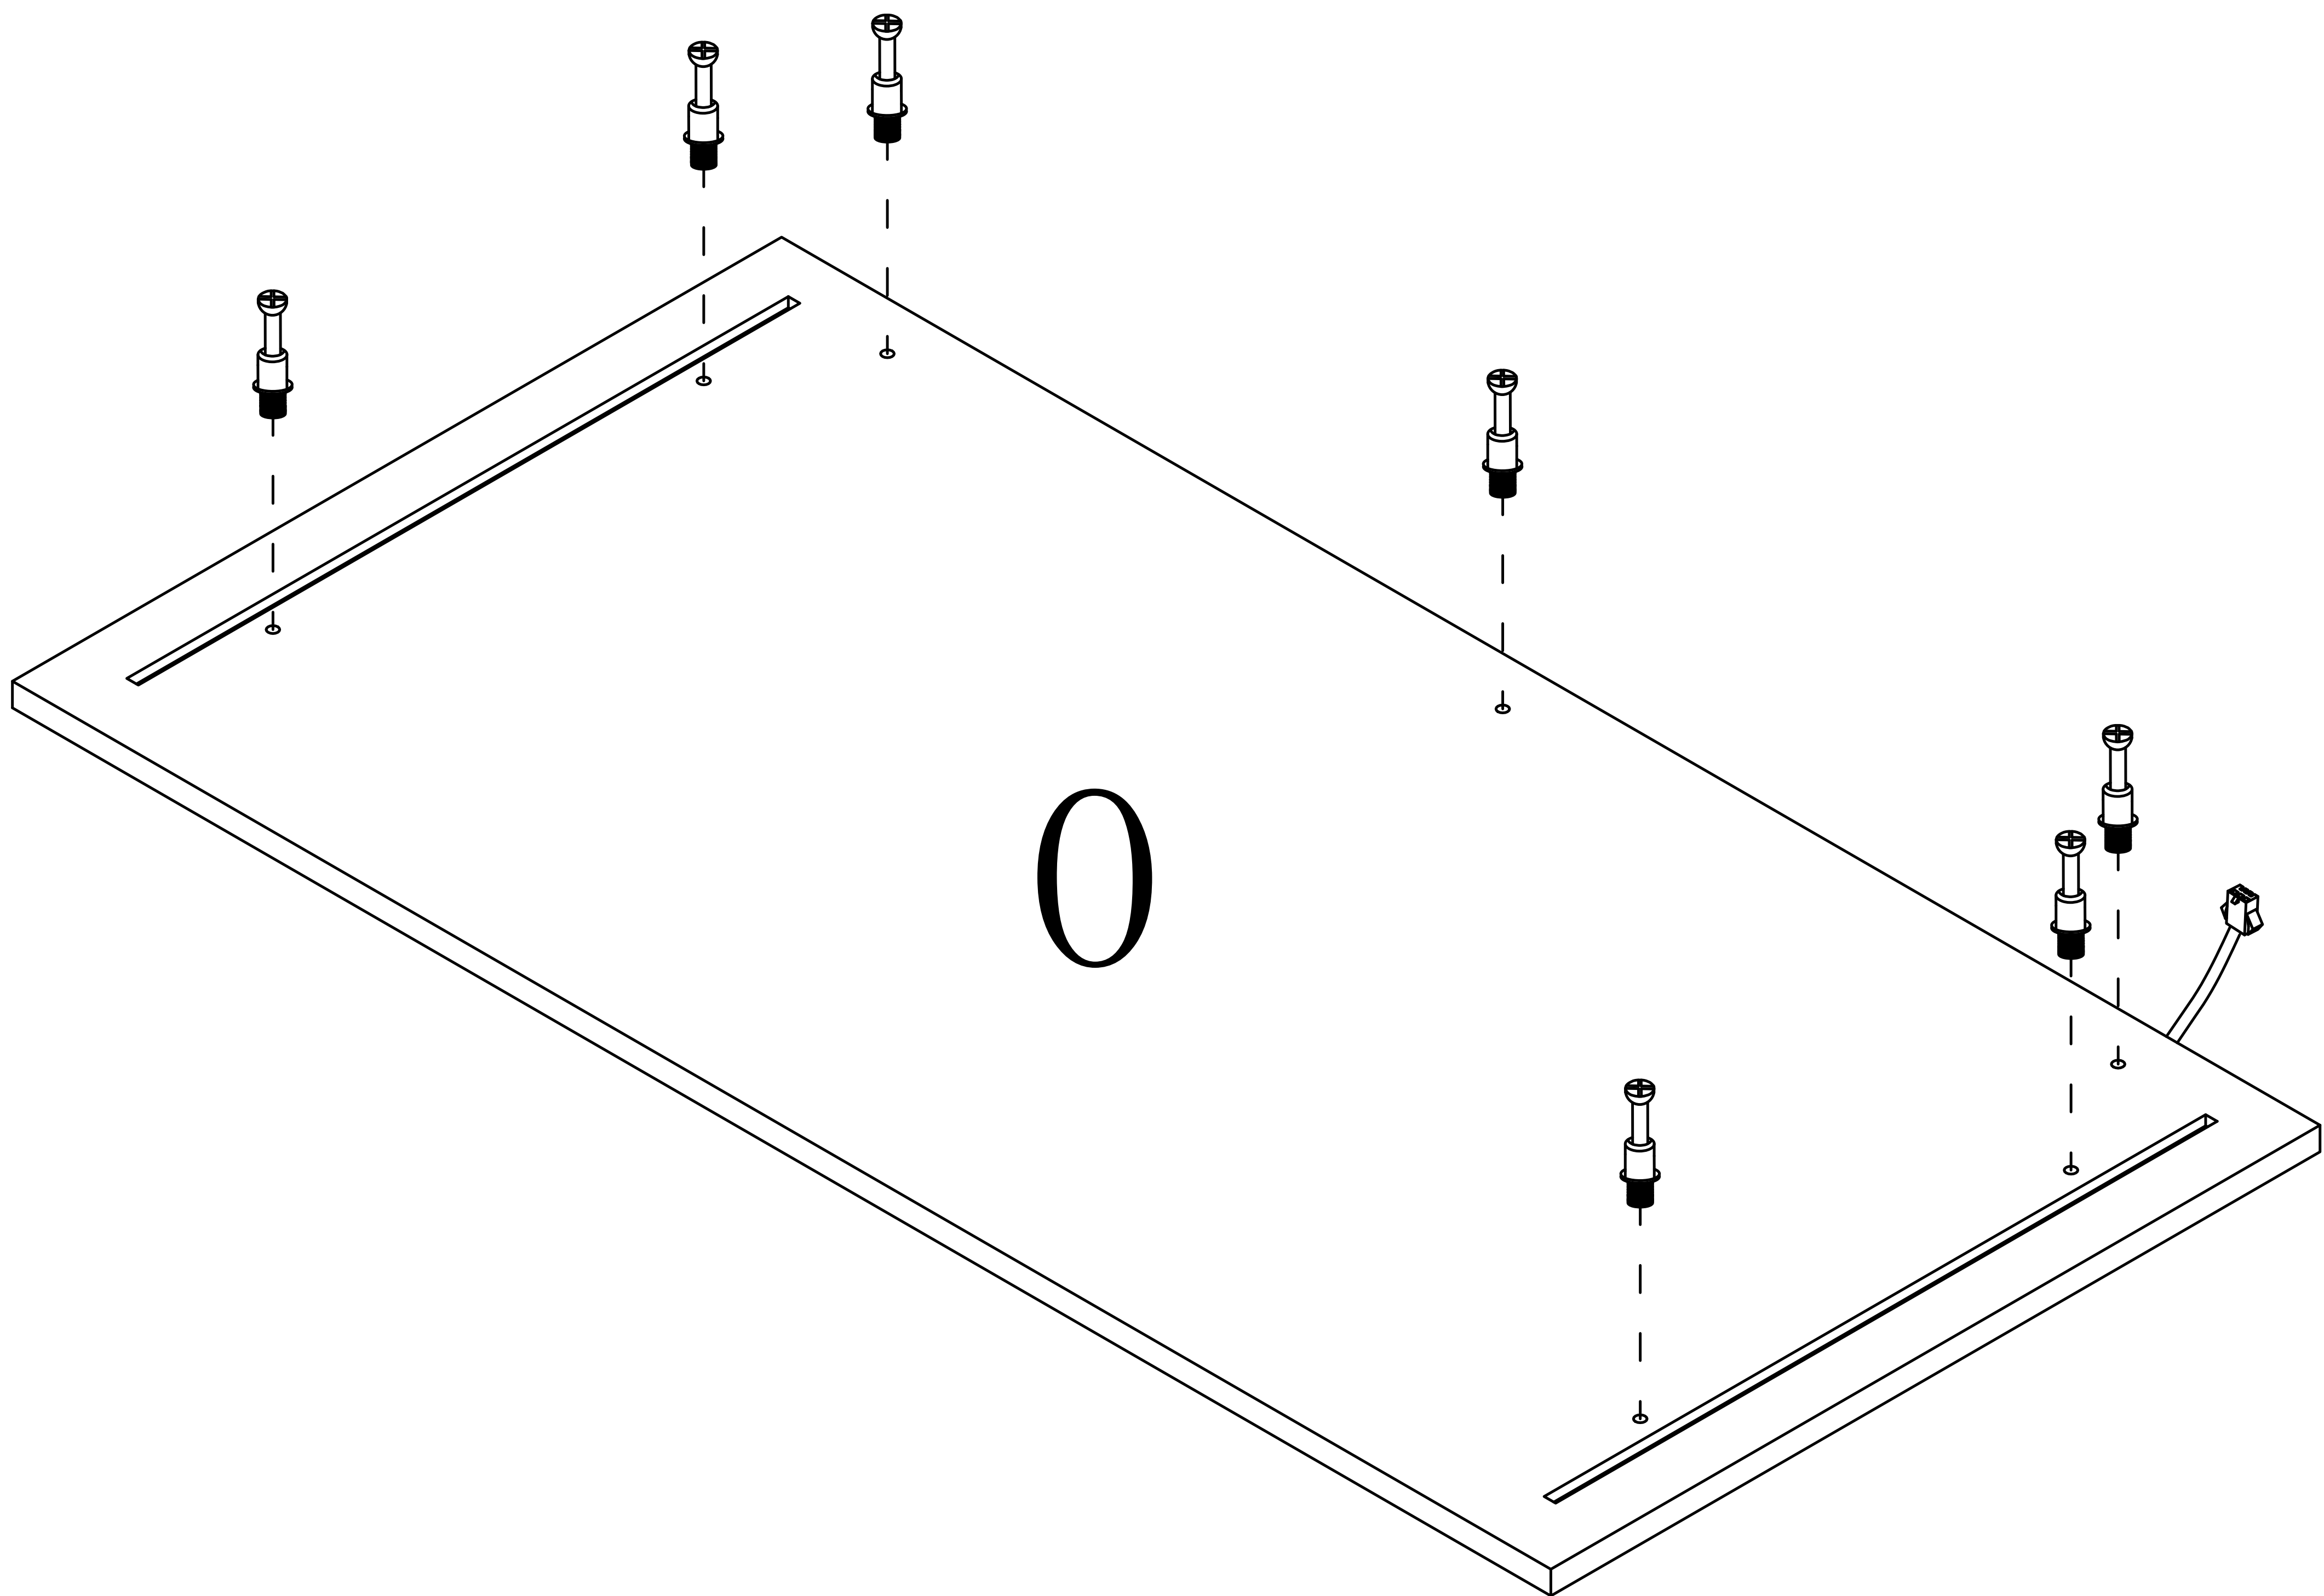



Note: When installing the T plate, push the middle of the T plate by hand to push the T plate into the groove.

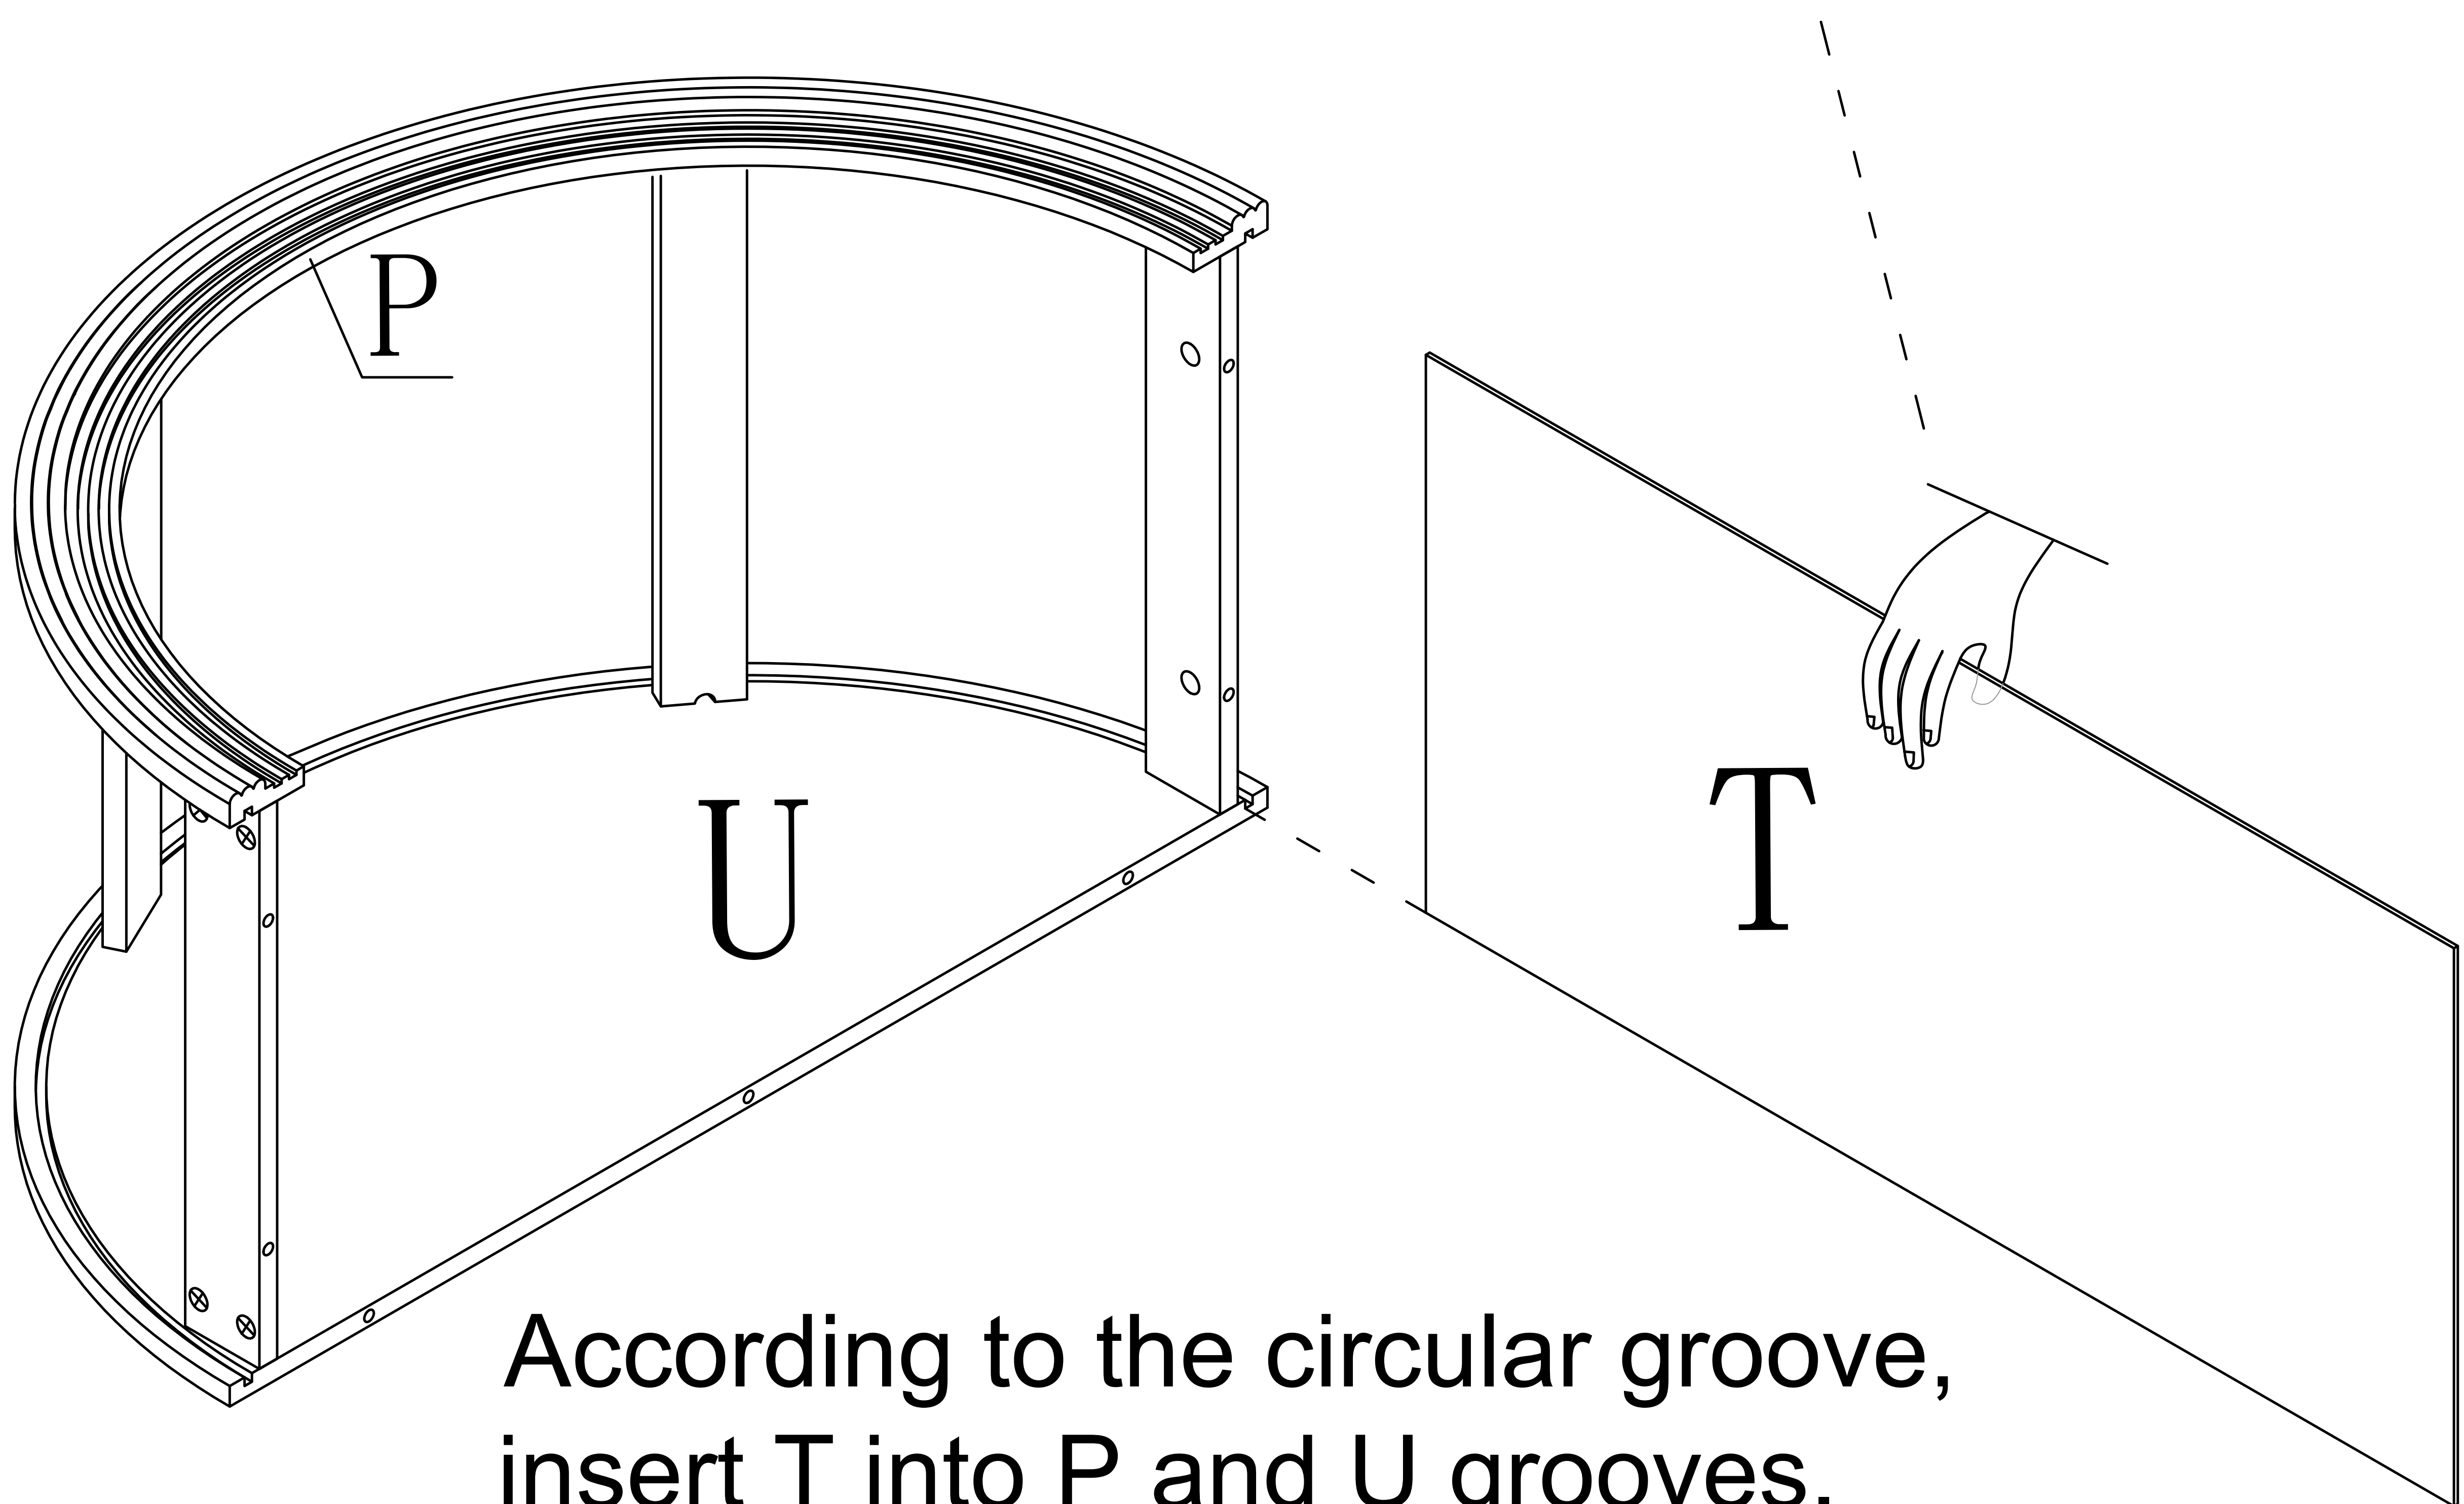


According to the circular groove, insert T into P and U grooves.

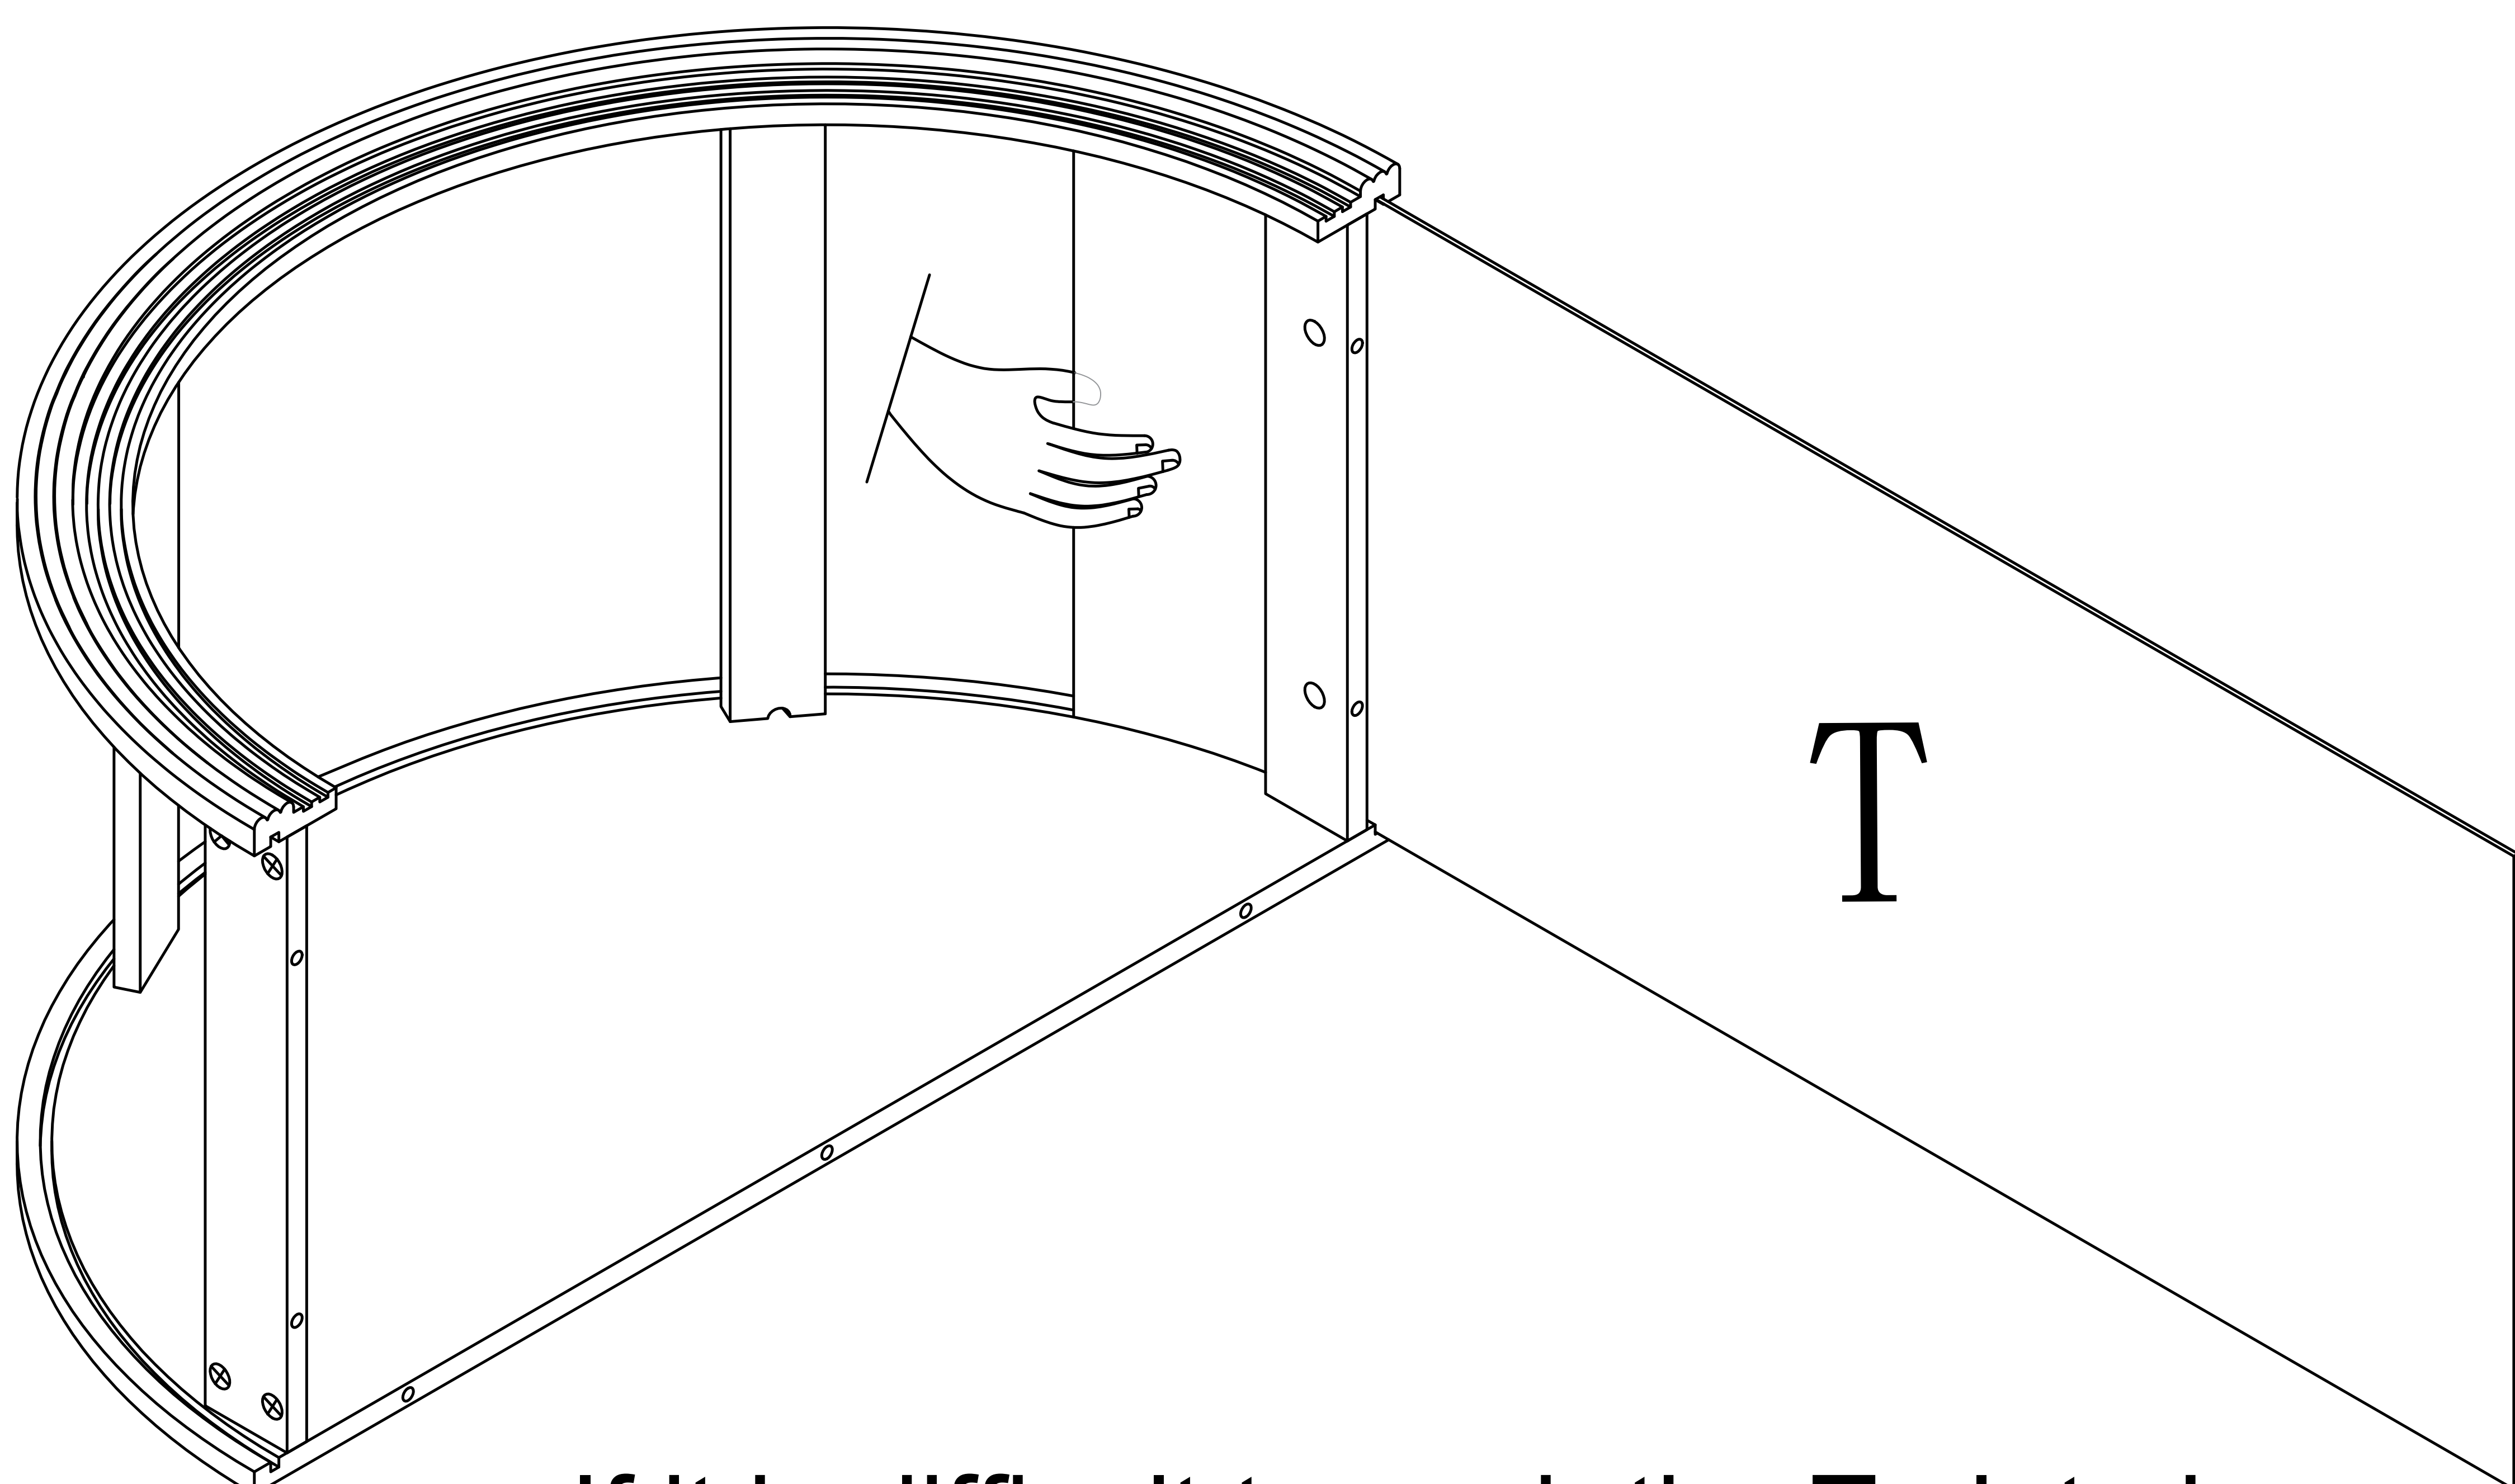

If it is difficult to push the T plate in, you can use the pull method.

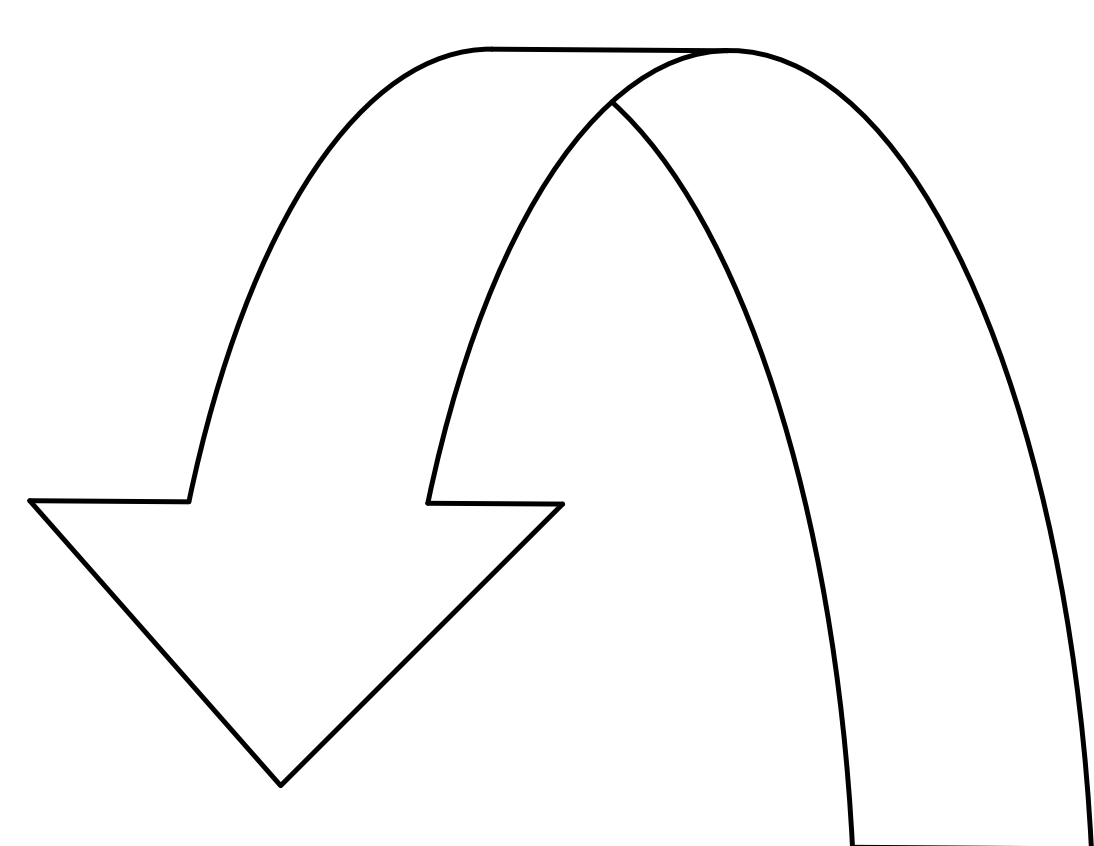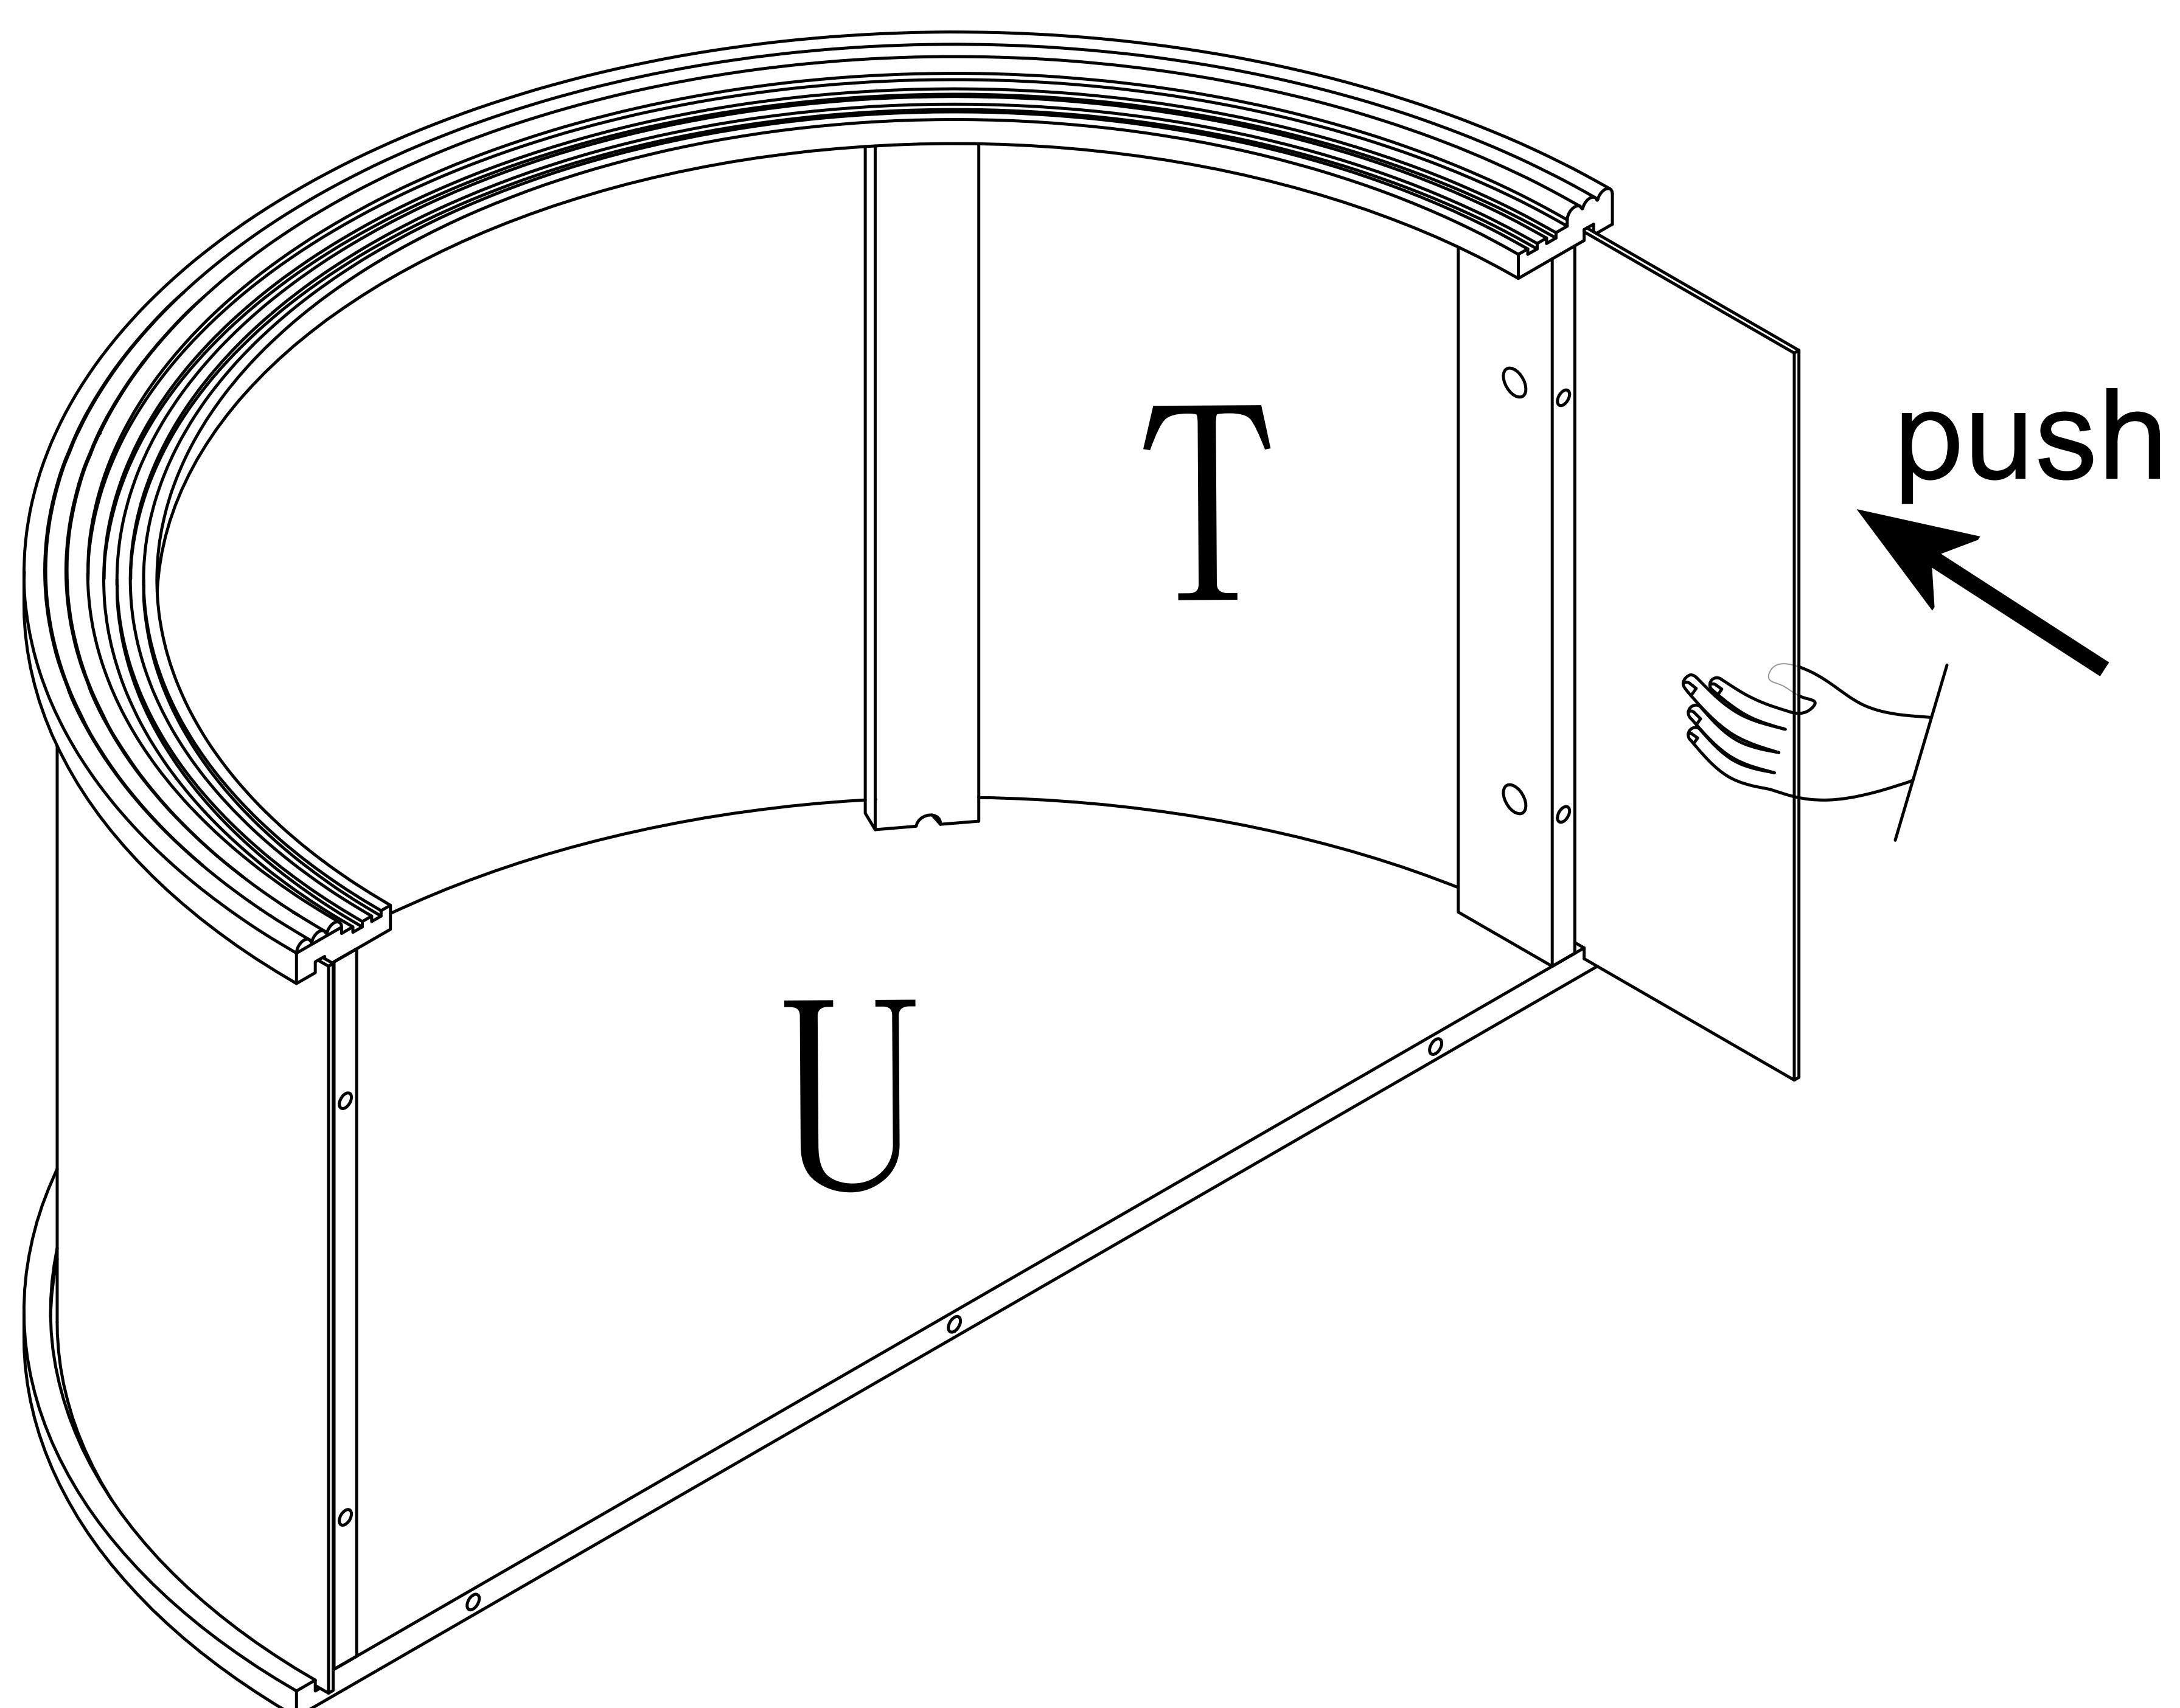


Need to flip over

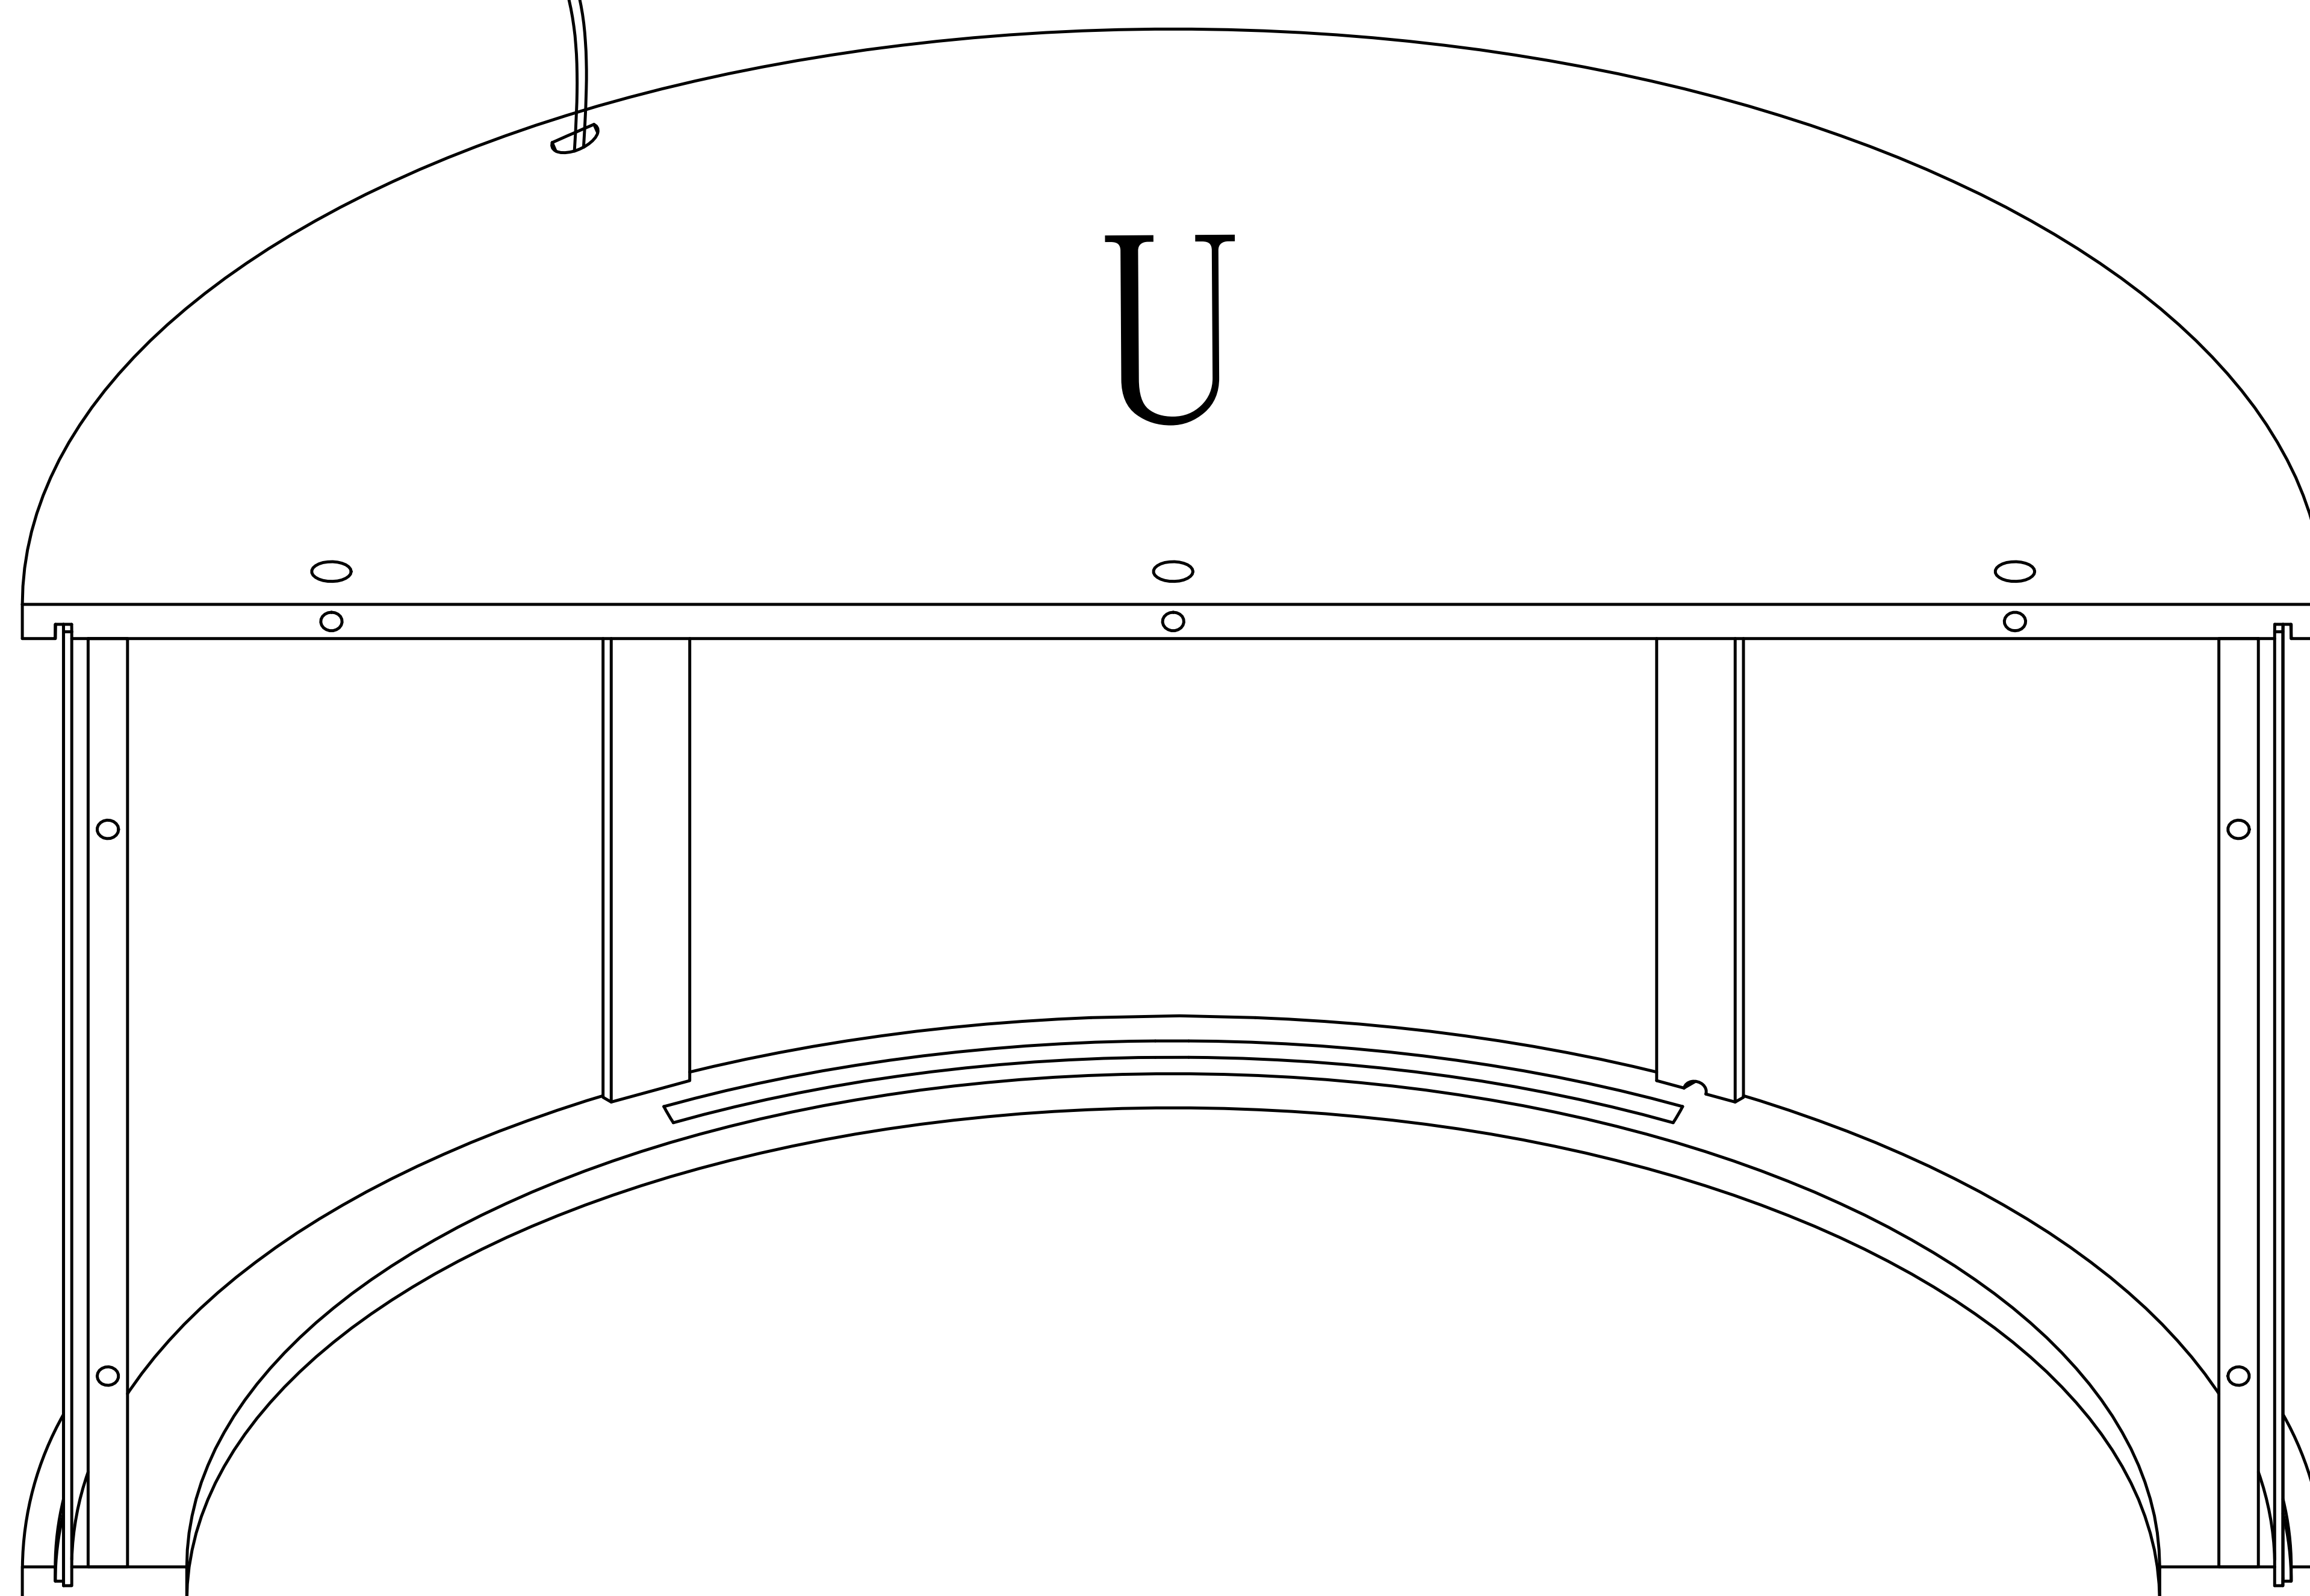


Step 29


2

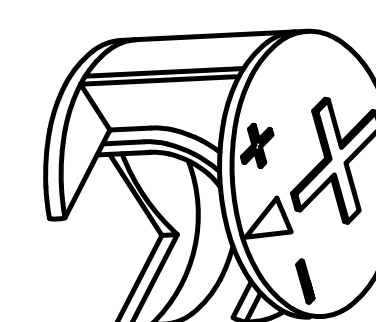

x3

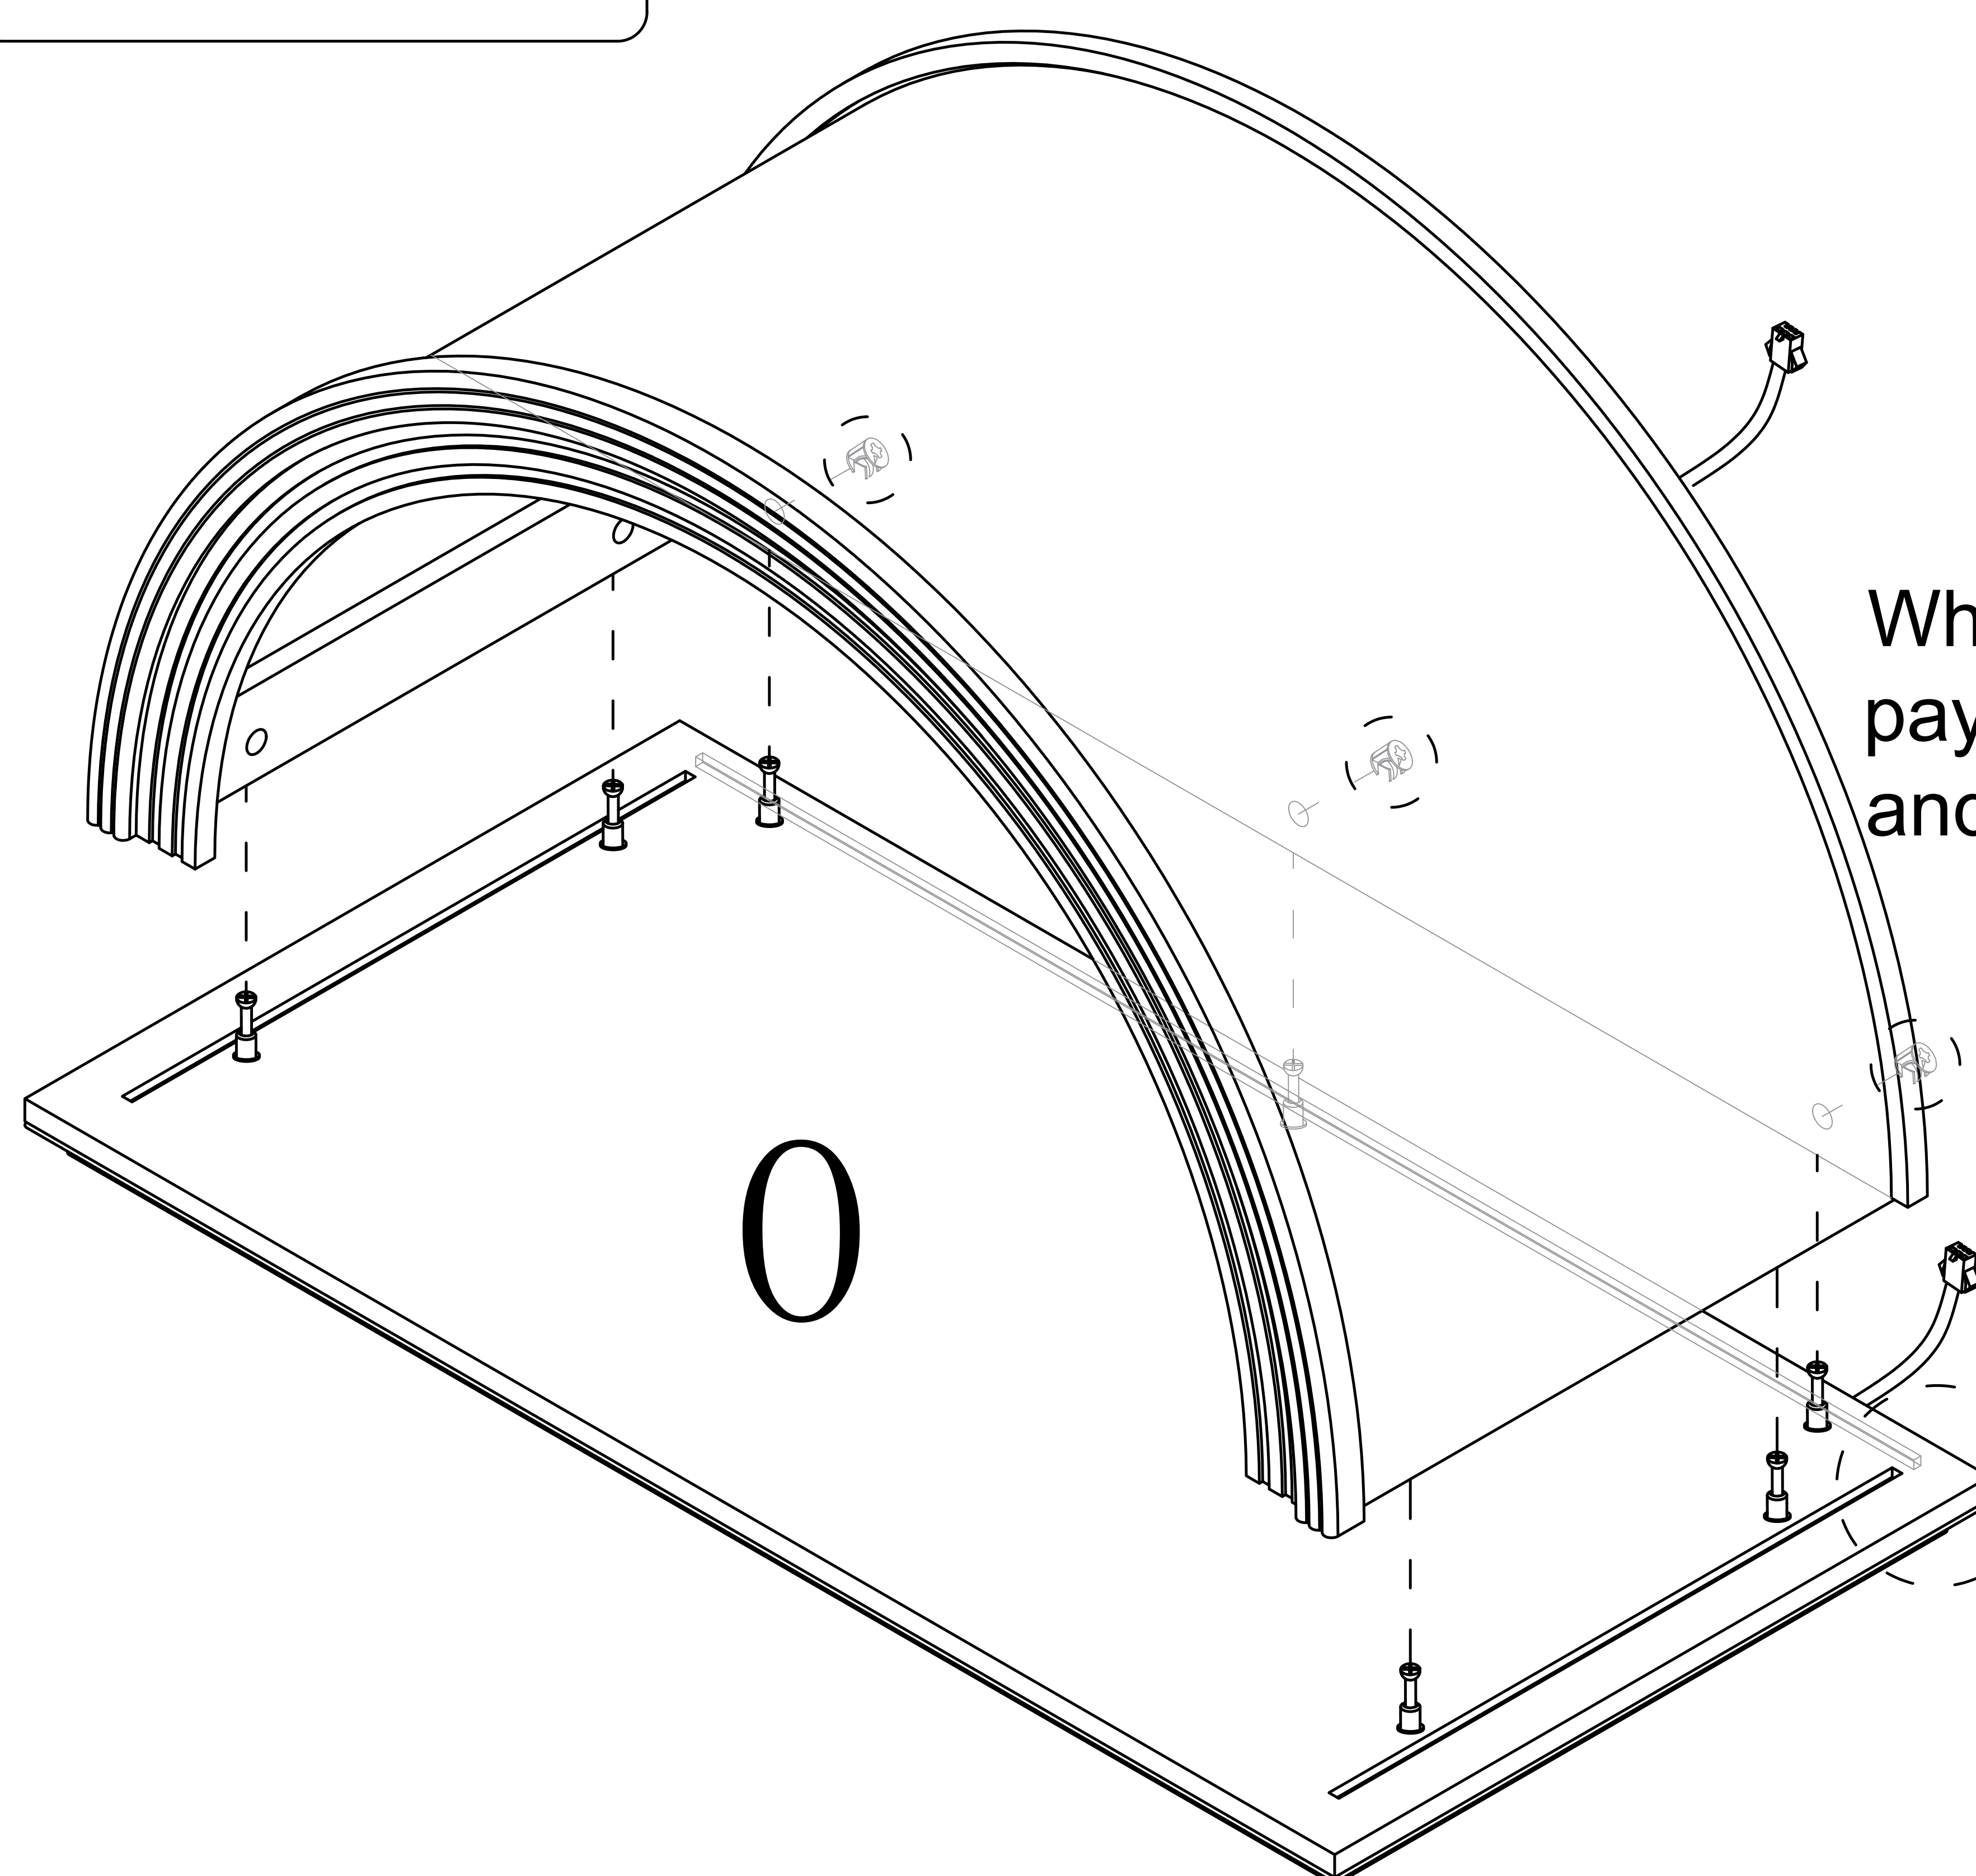


When installing the U plate, pay attention to the front and back, and there is a groove under the O plate.

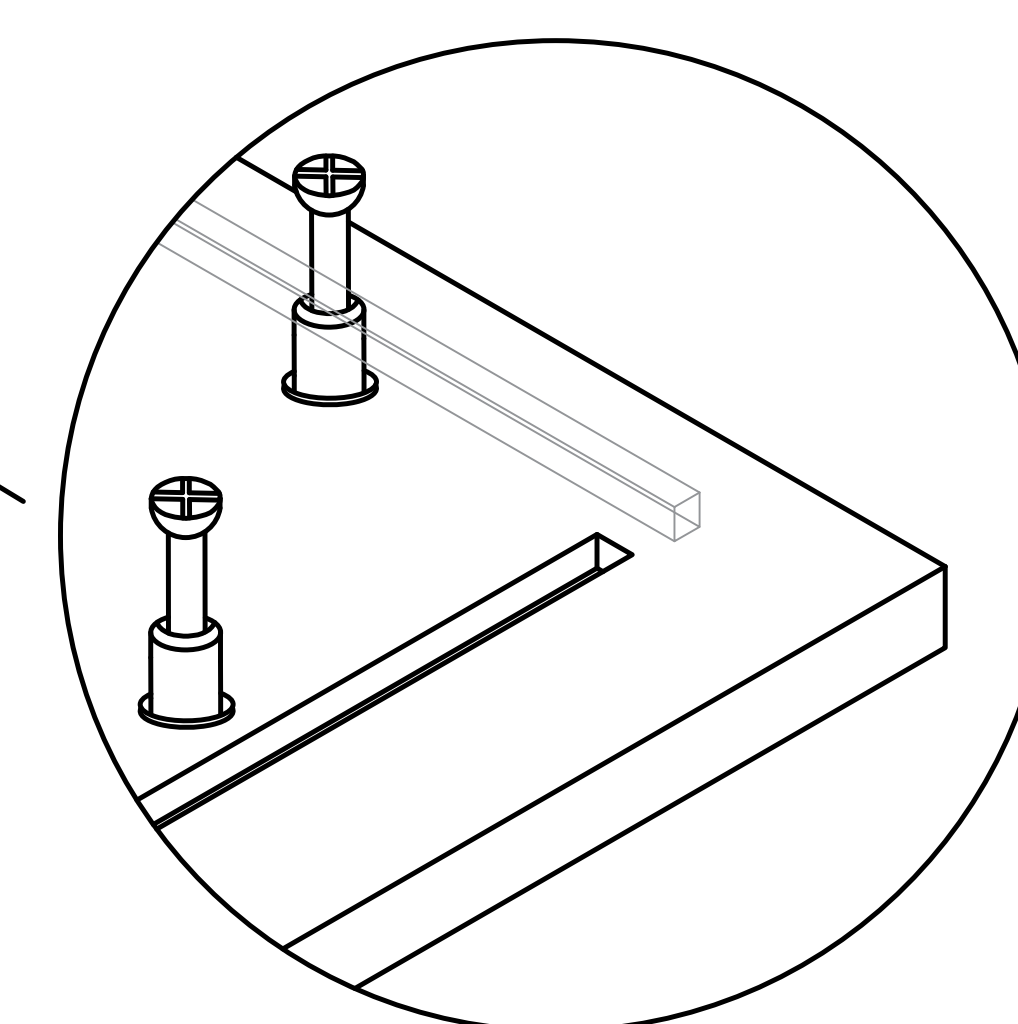


Step 30

2

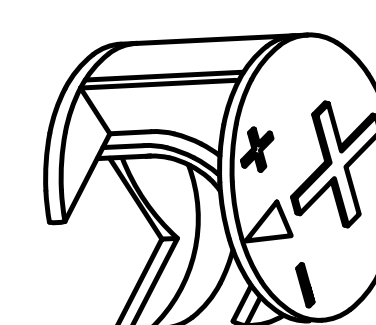

x4

Note: After installing the O board, you need to pat the backboards on both sides into the grooves of the O board by hand. Then install the tightening nuts.

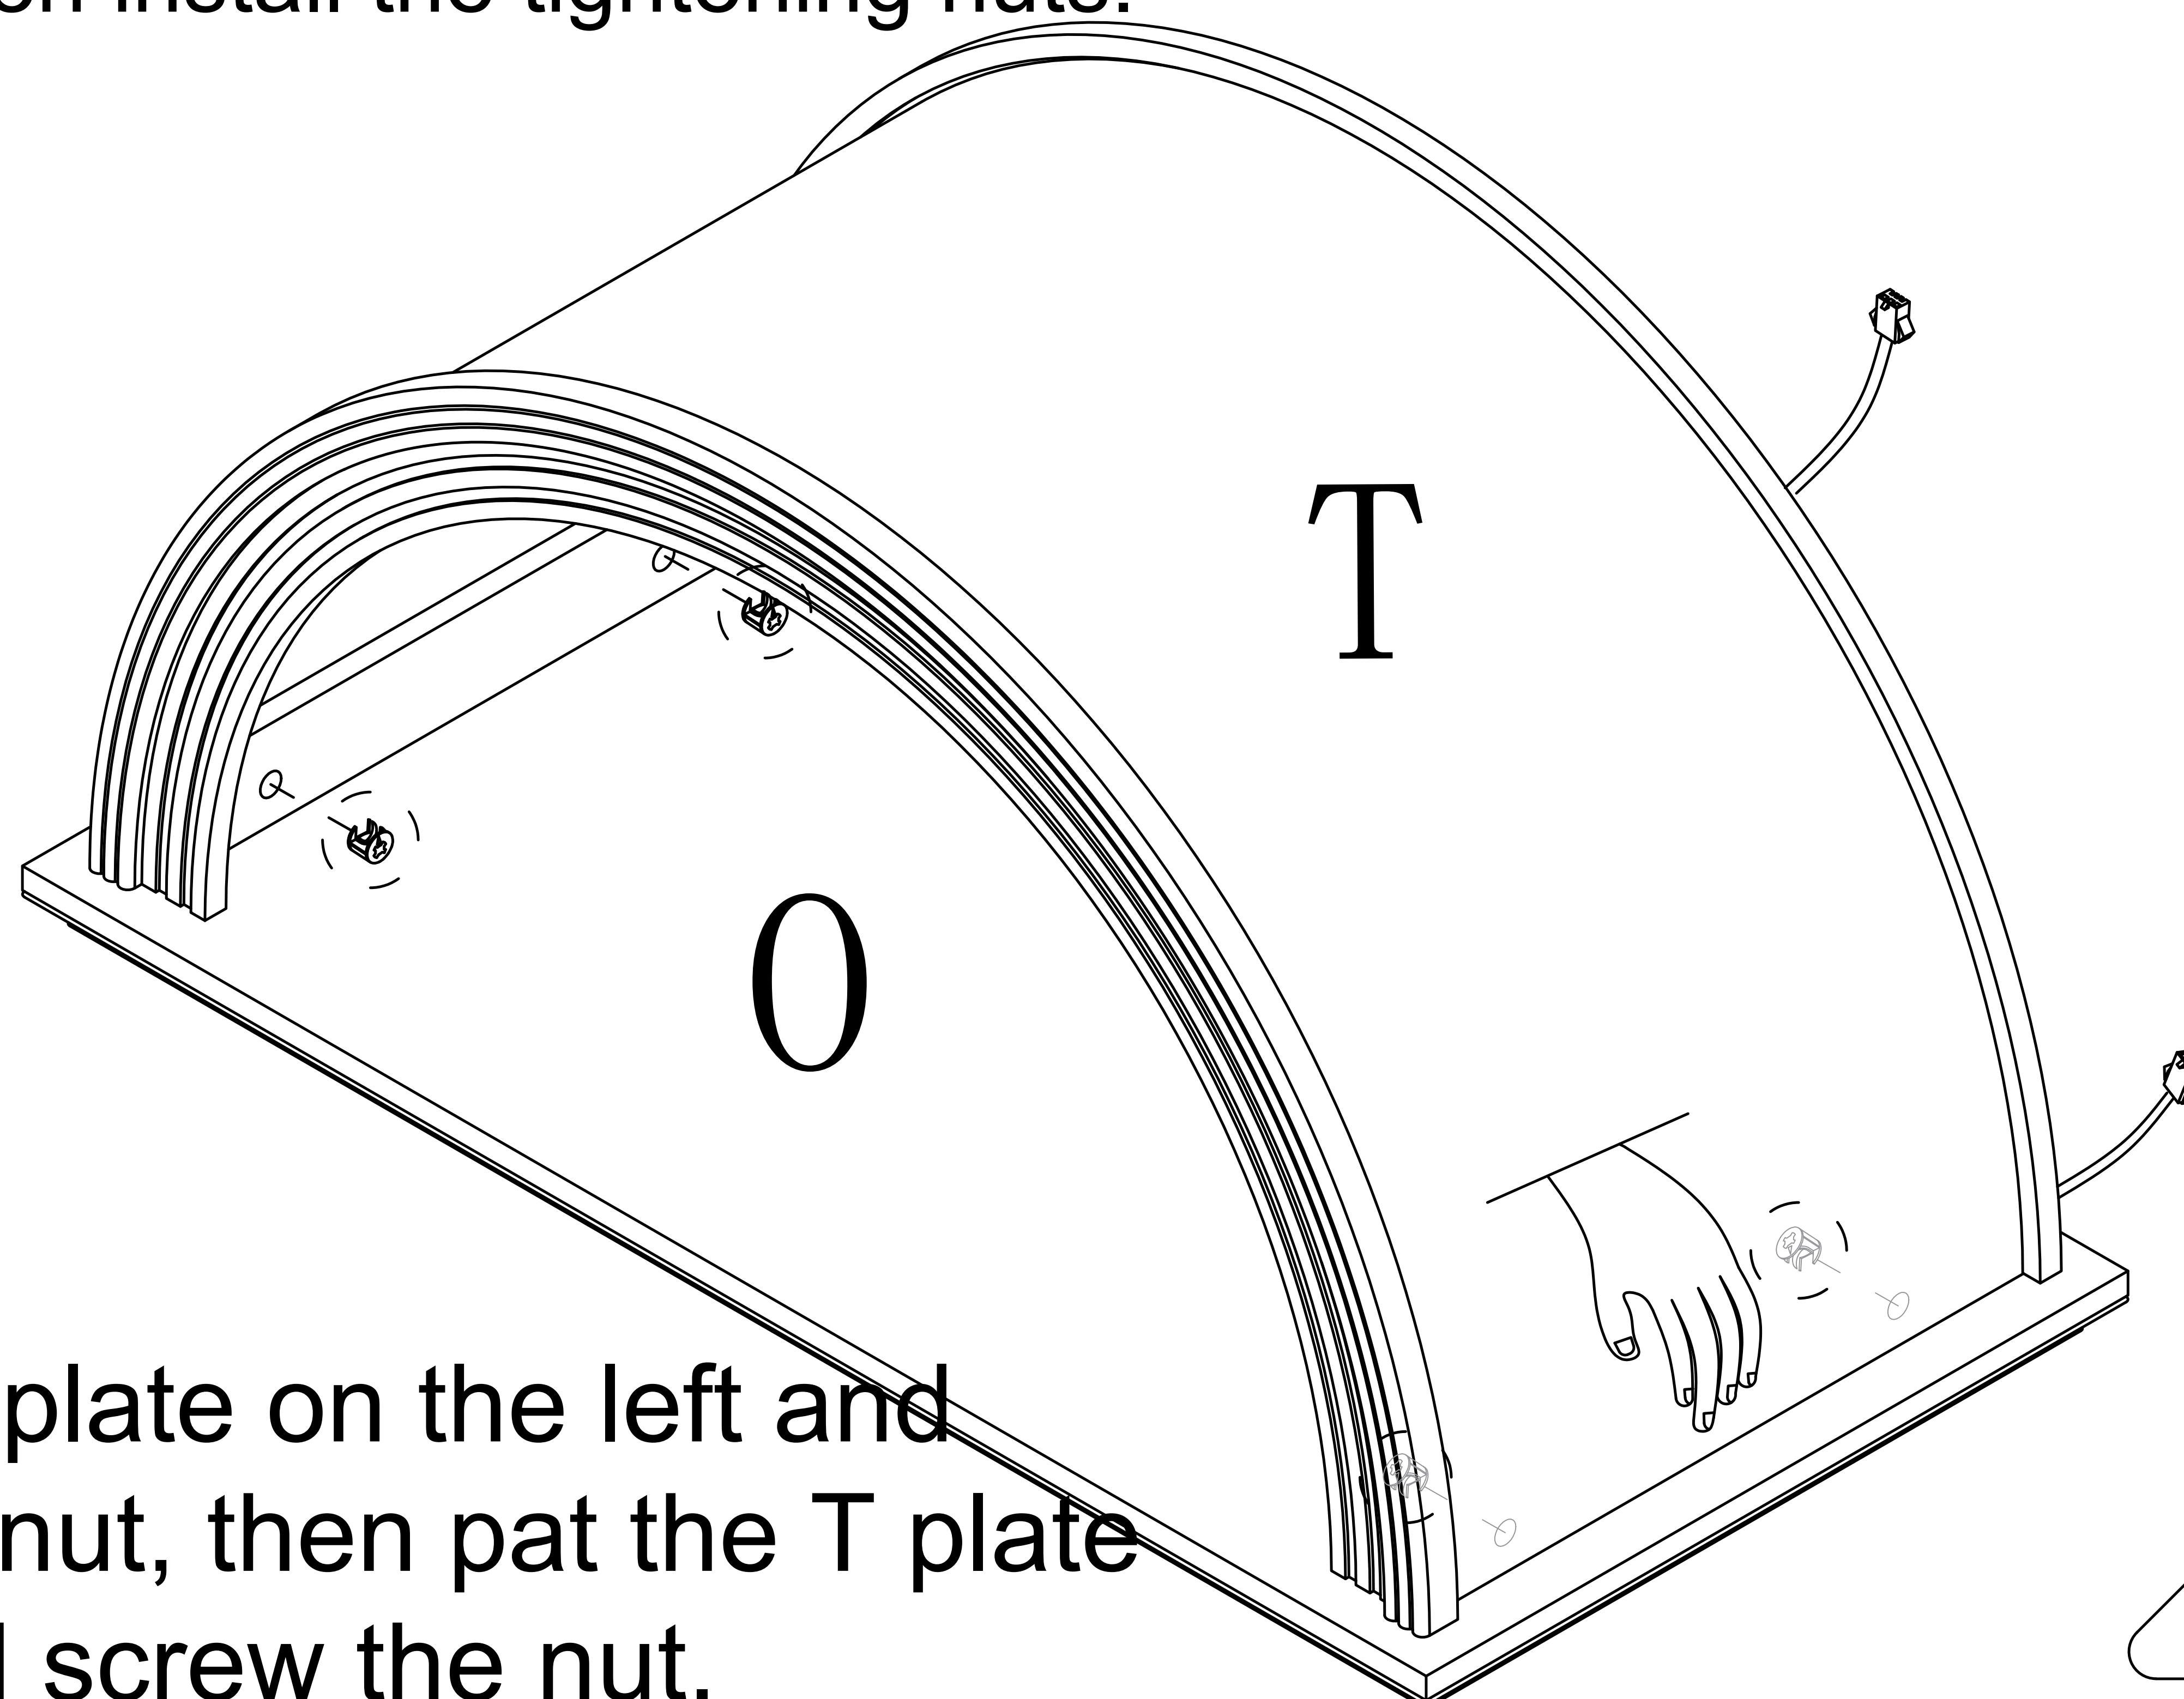


Note: pat the T plate on the left and then screw the nut, then pat the T plate on the right and screw the nut.


23

Step 31

8

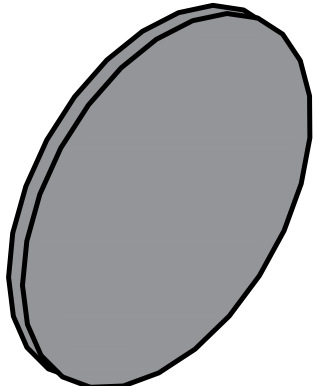


x4

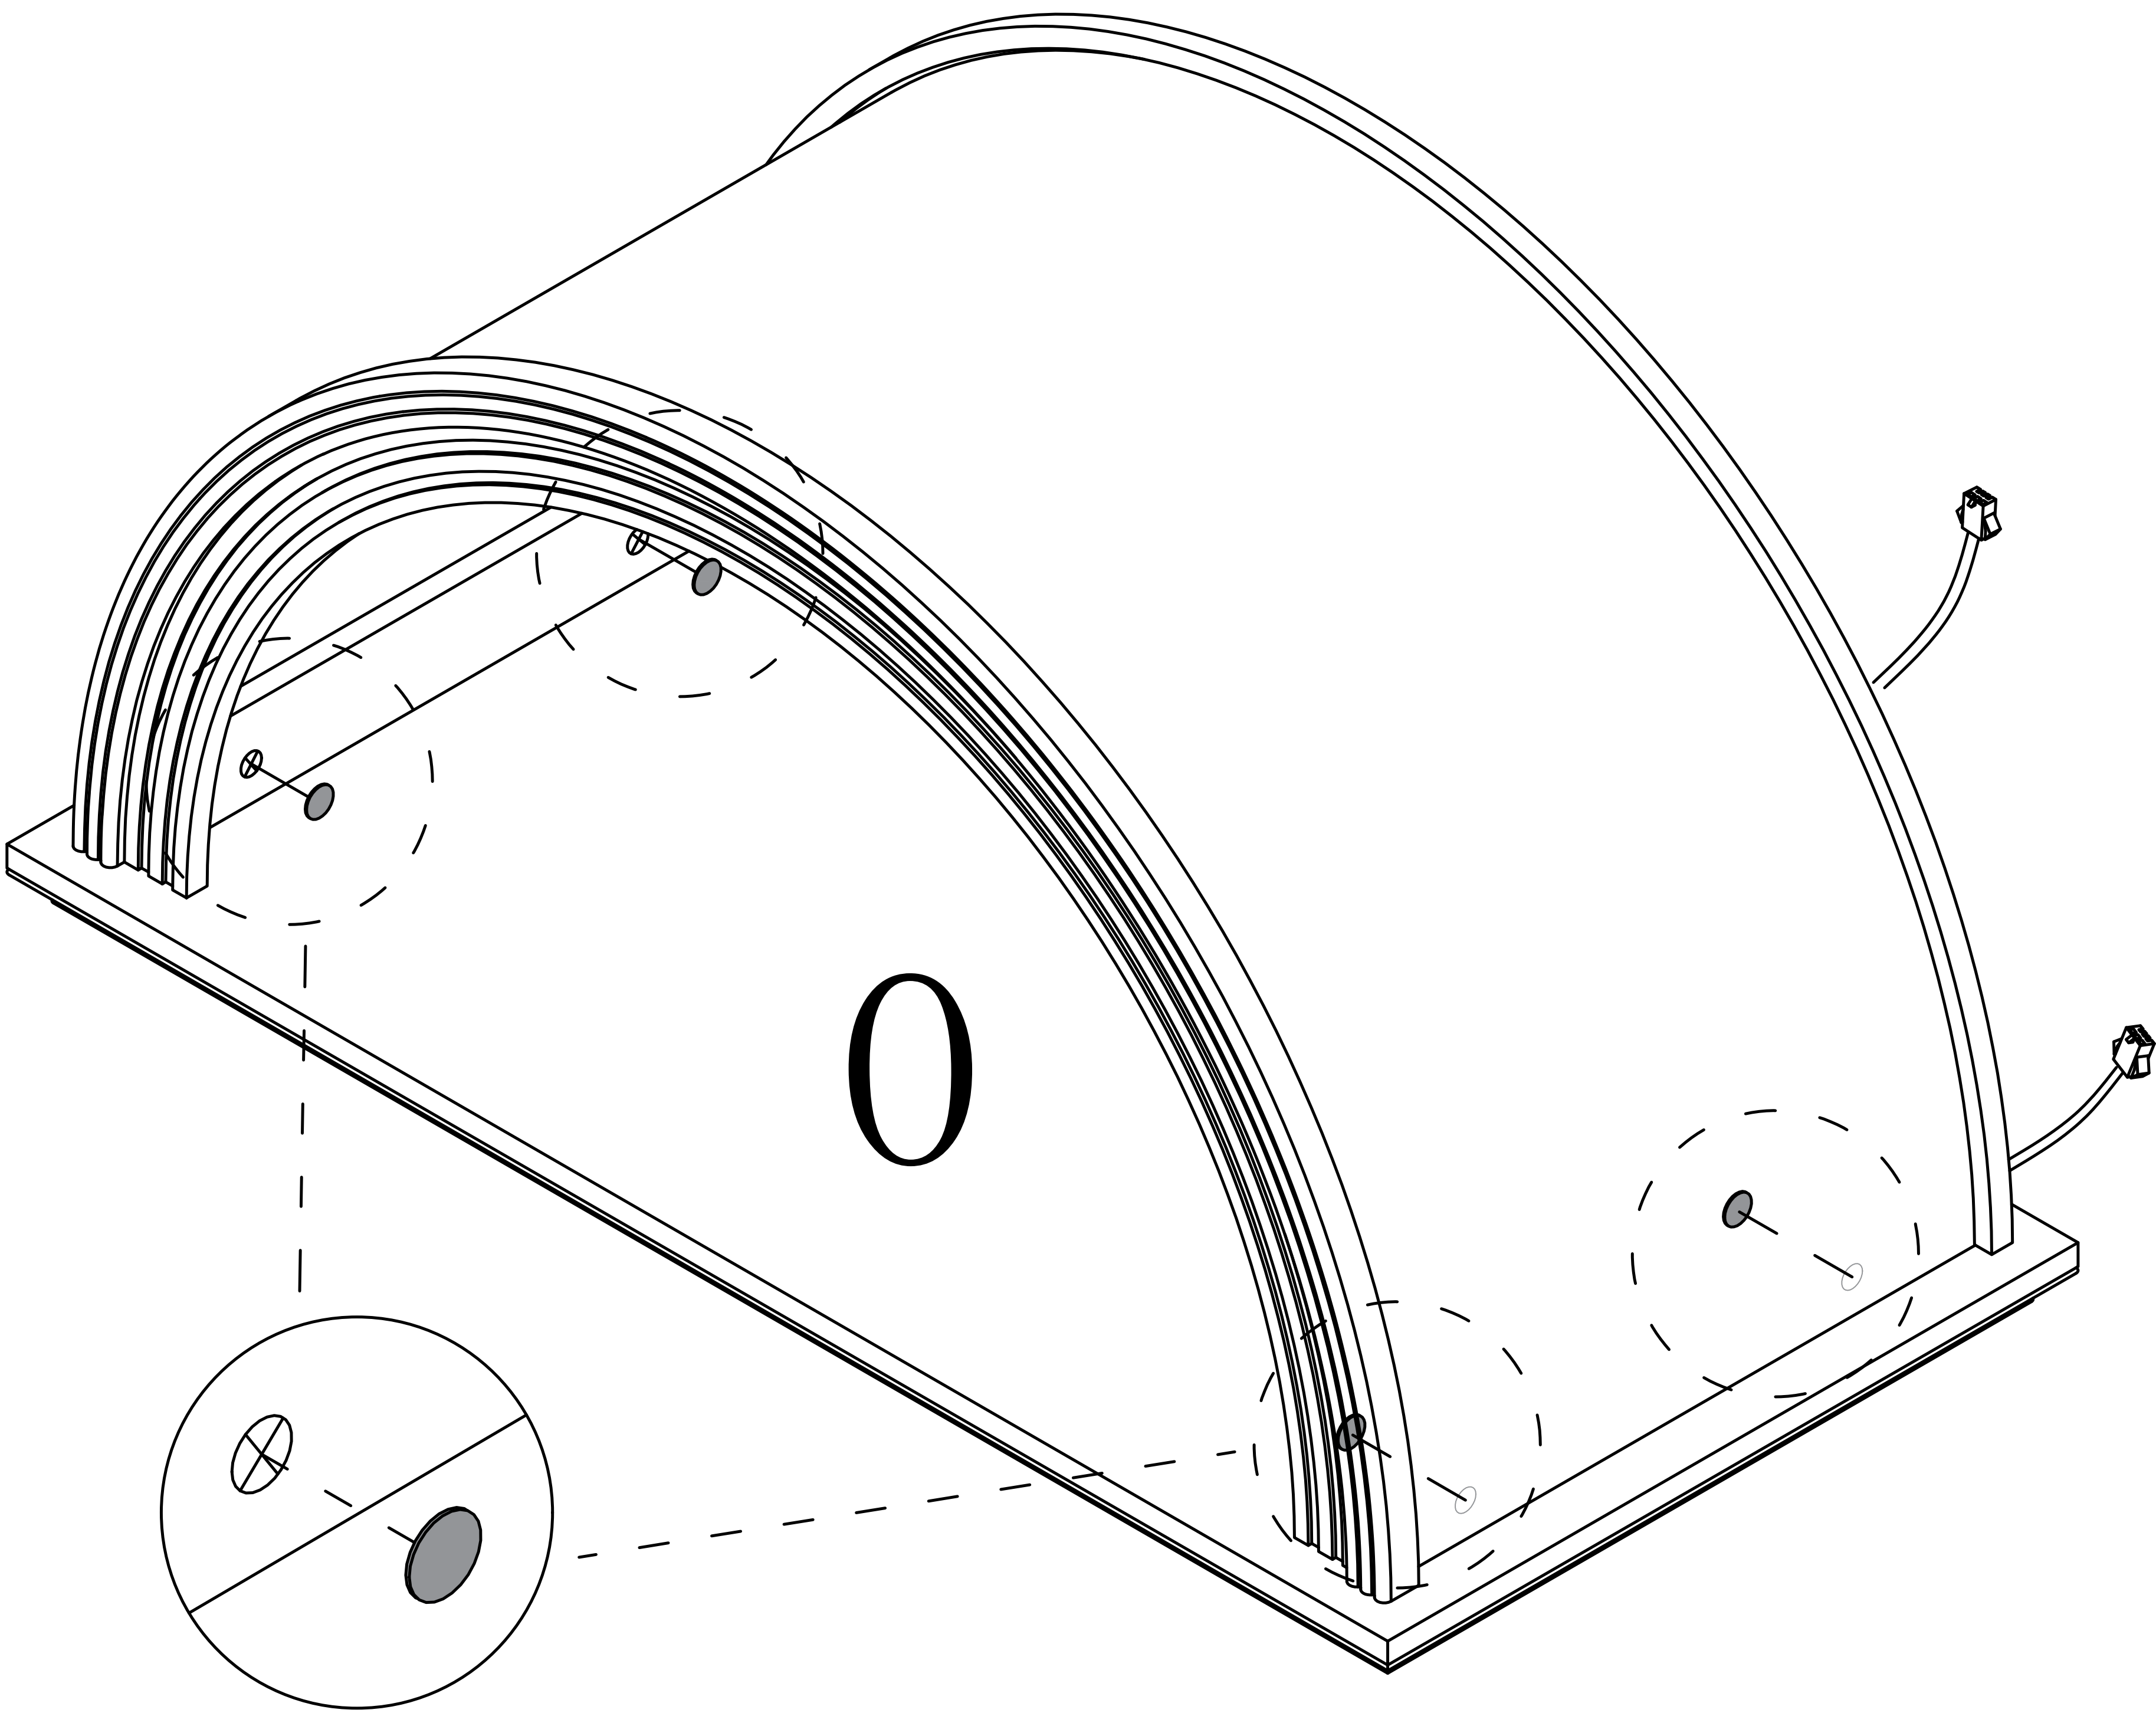


Step 32

1

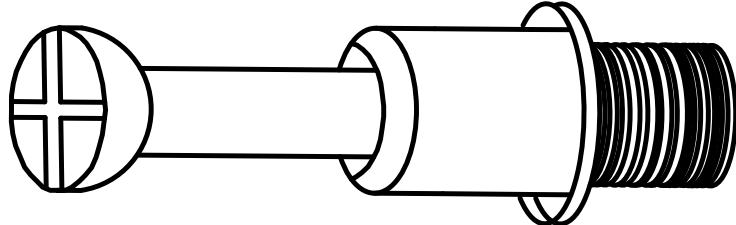


x4


16

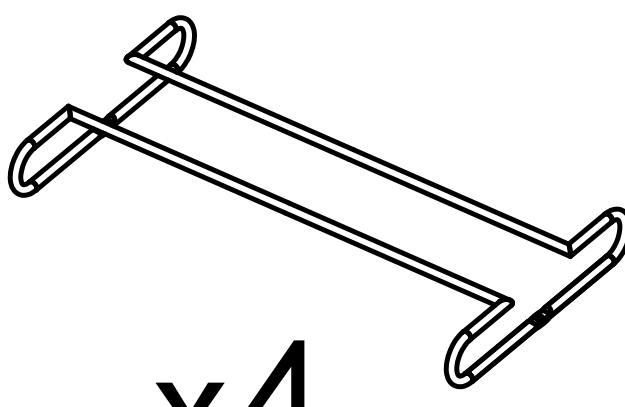



x4

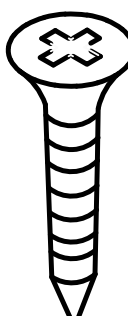


x8

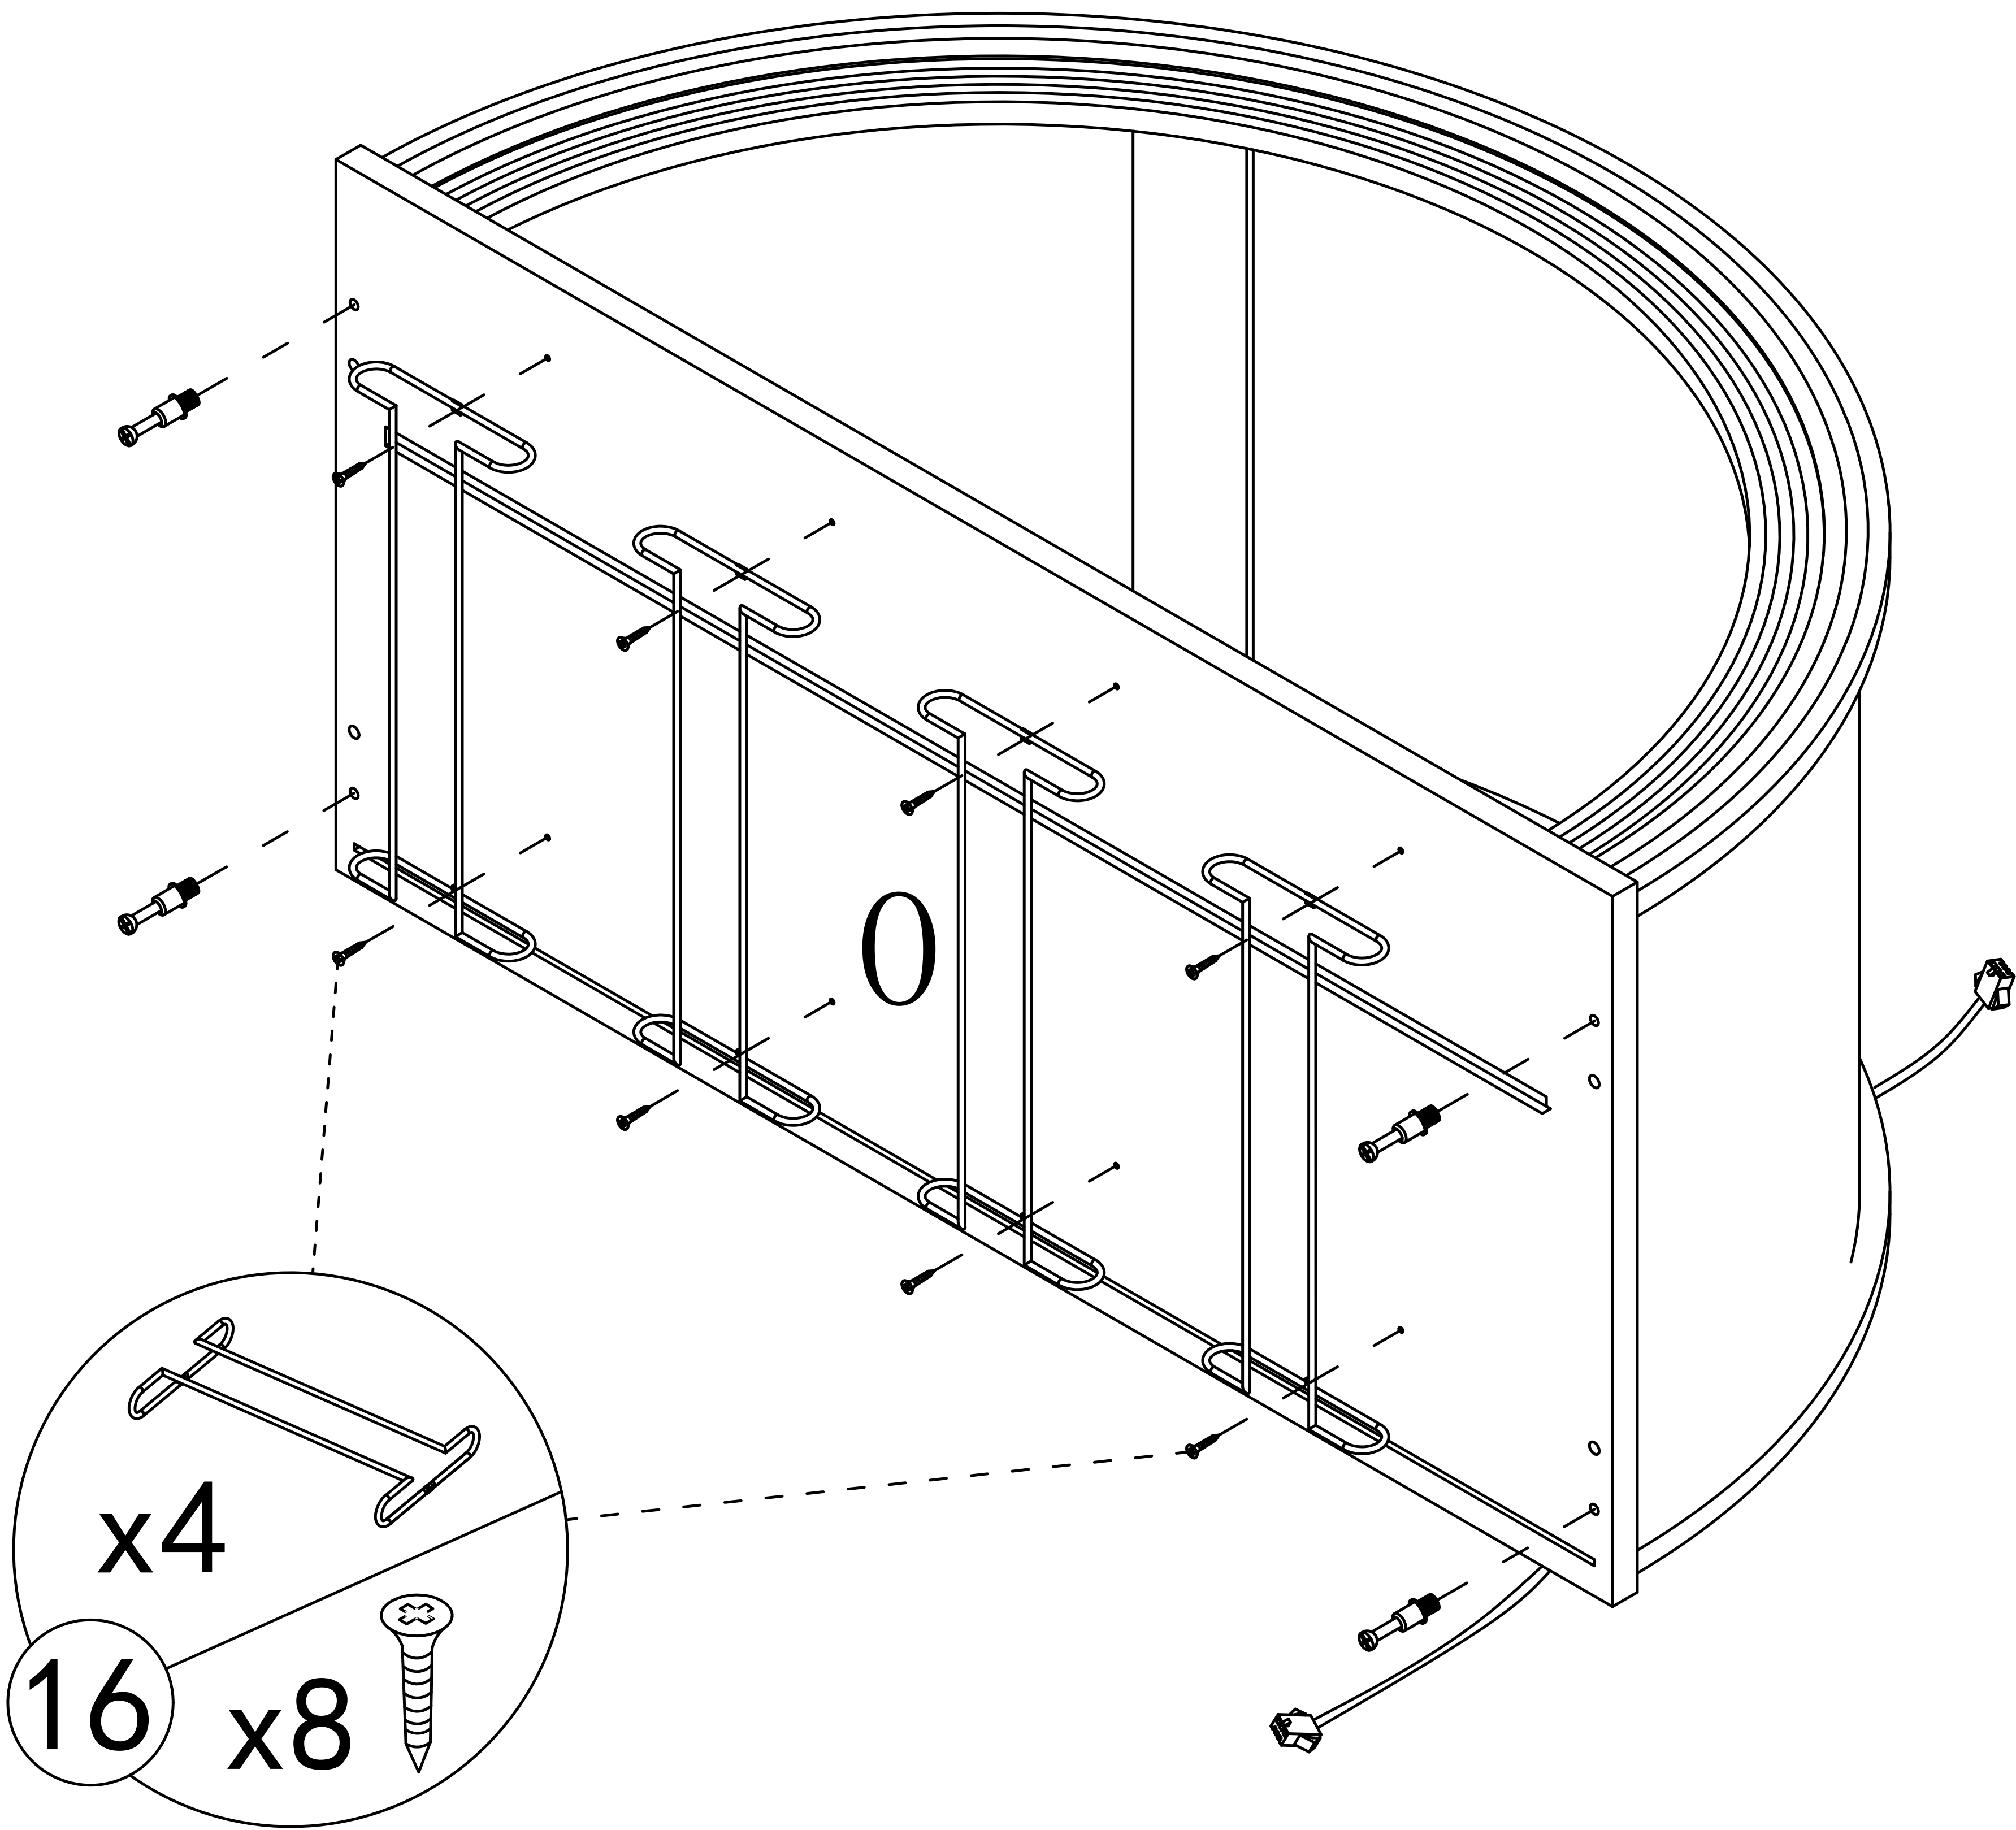


Step 33

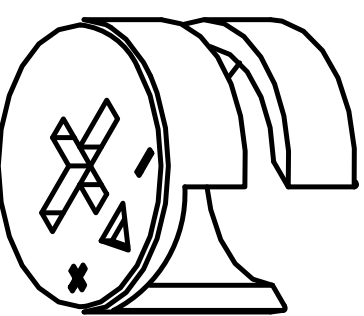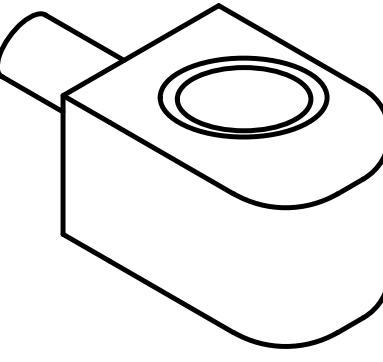
- | | | |
|---|---|----|
| 2 |  | x4 |
| 9 |  | x4 |

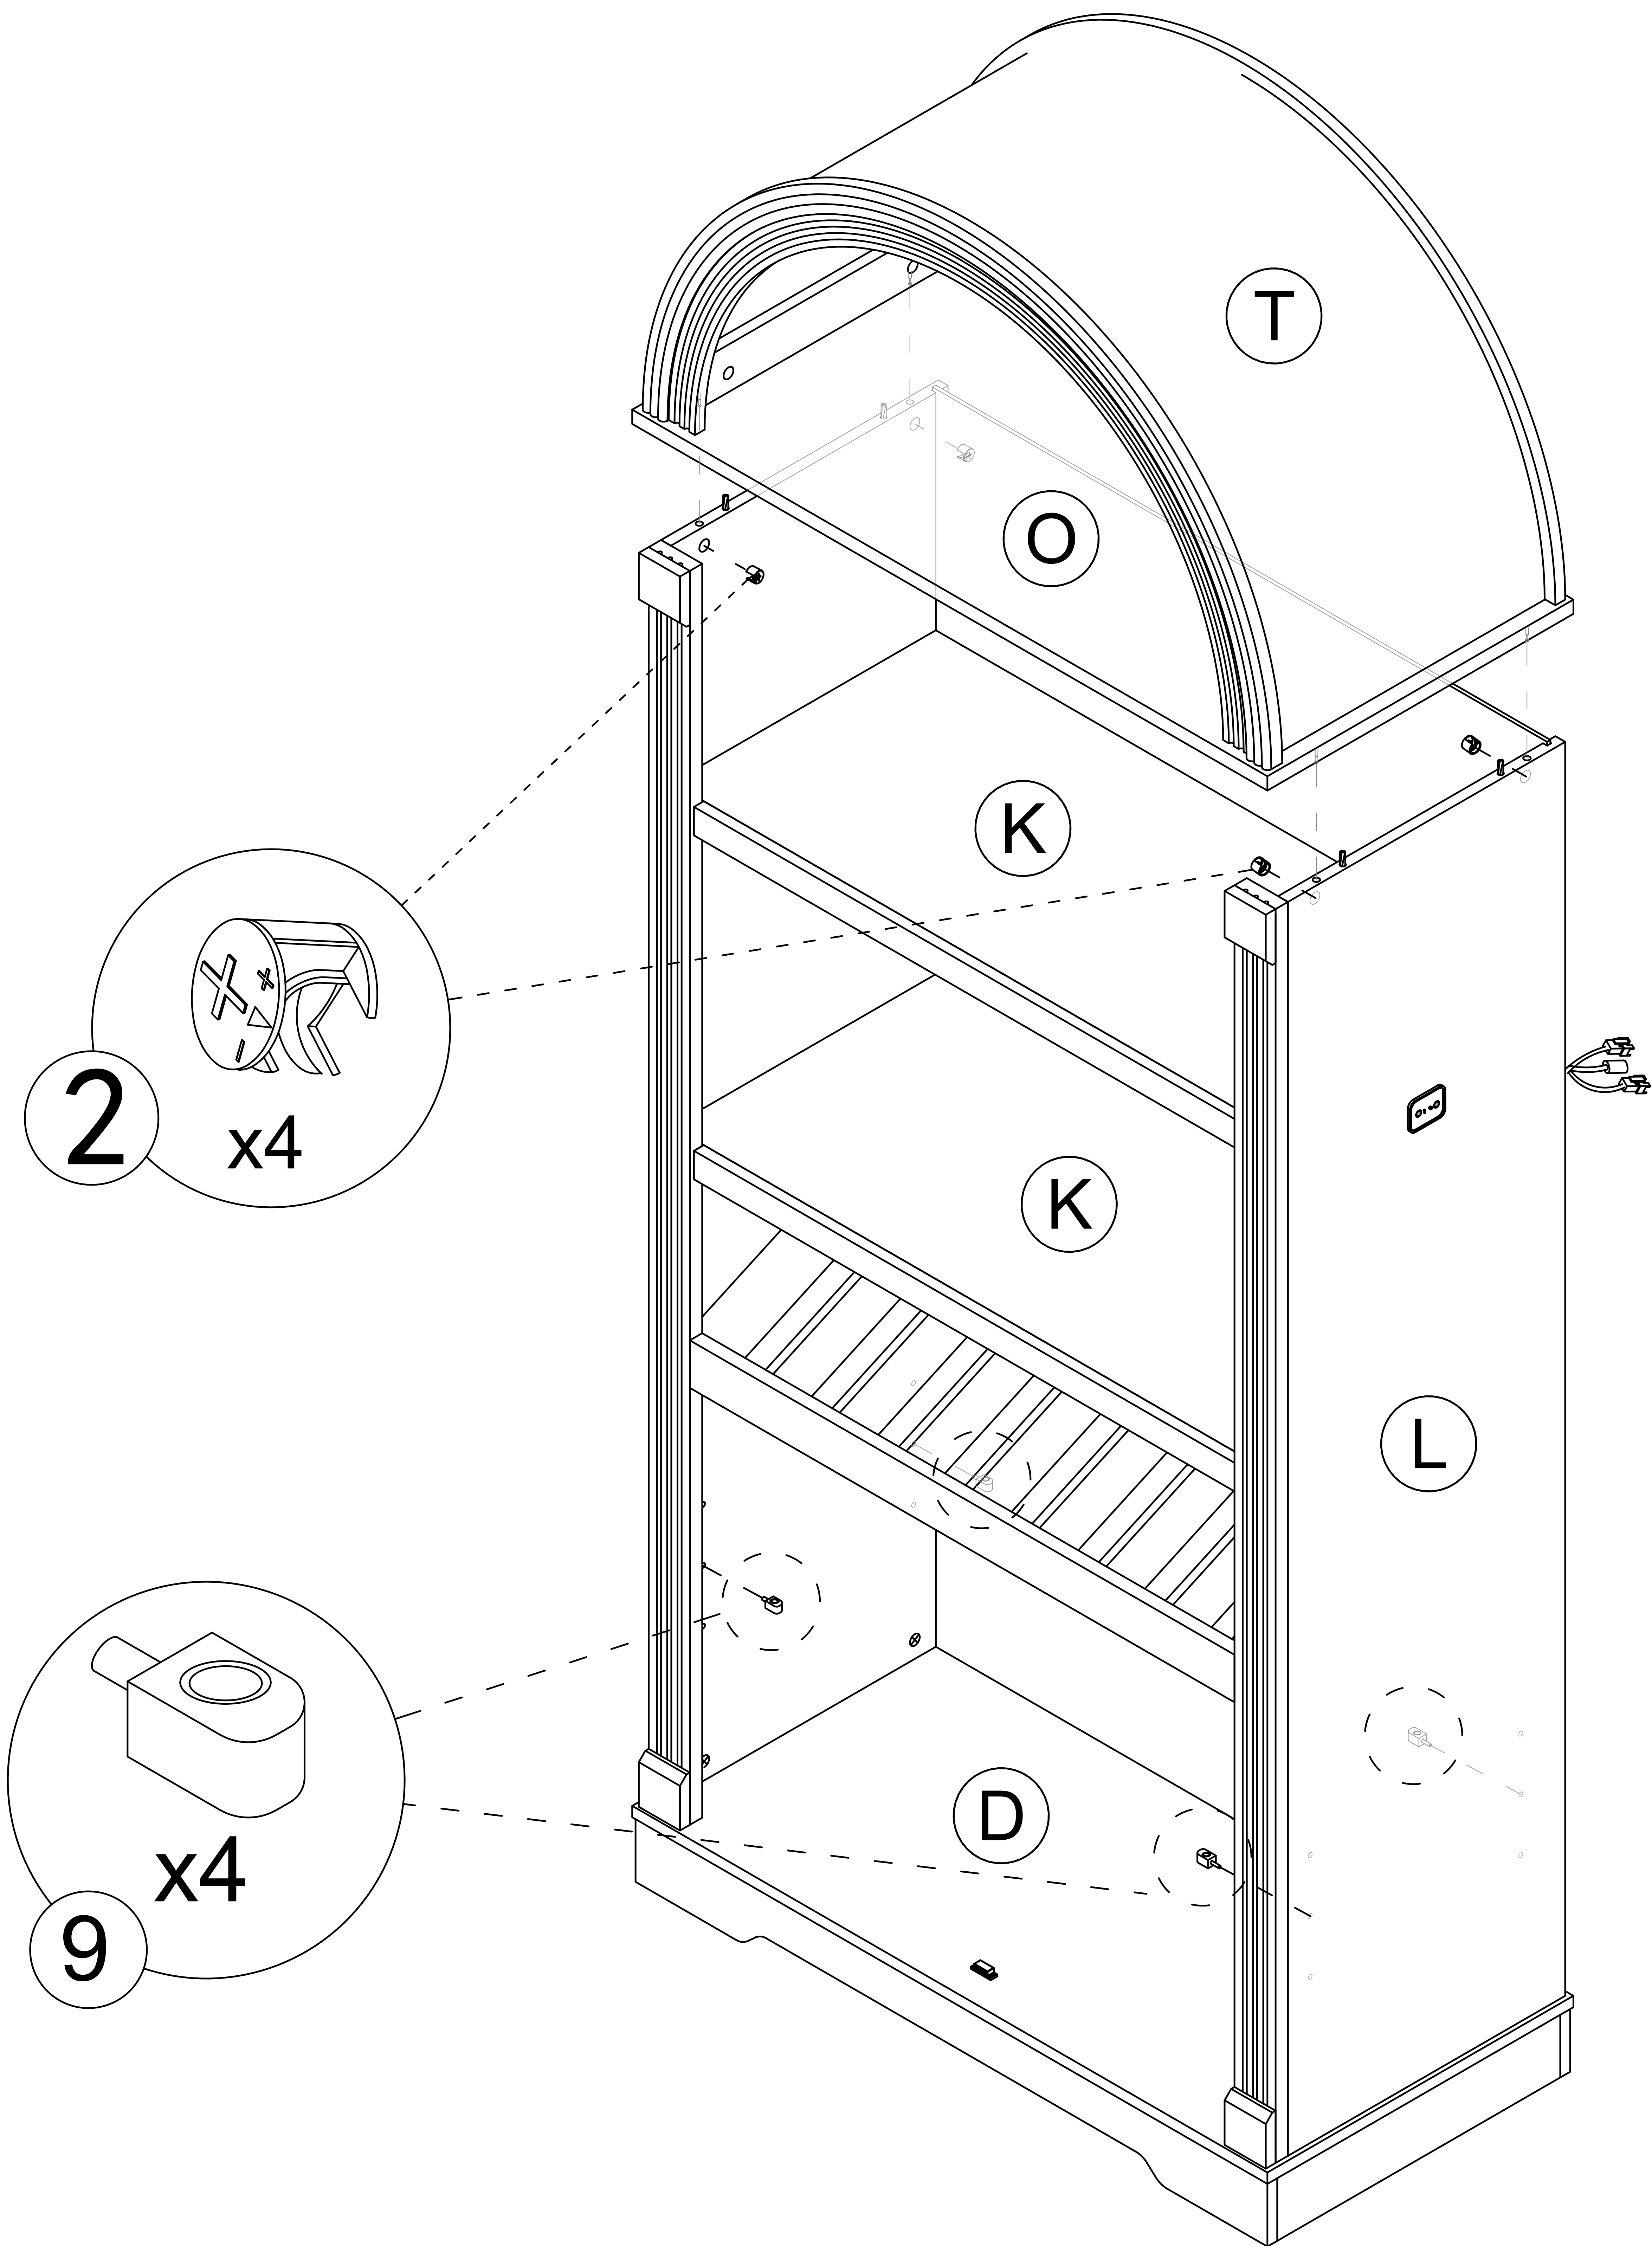


Step 34

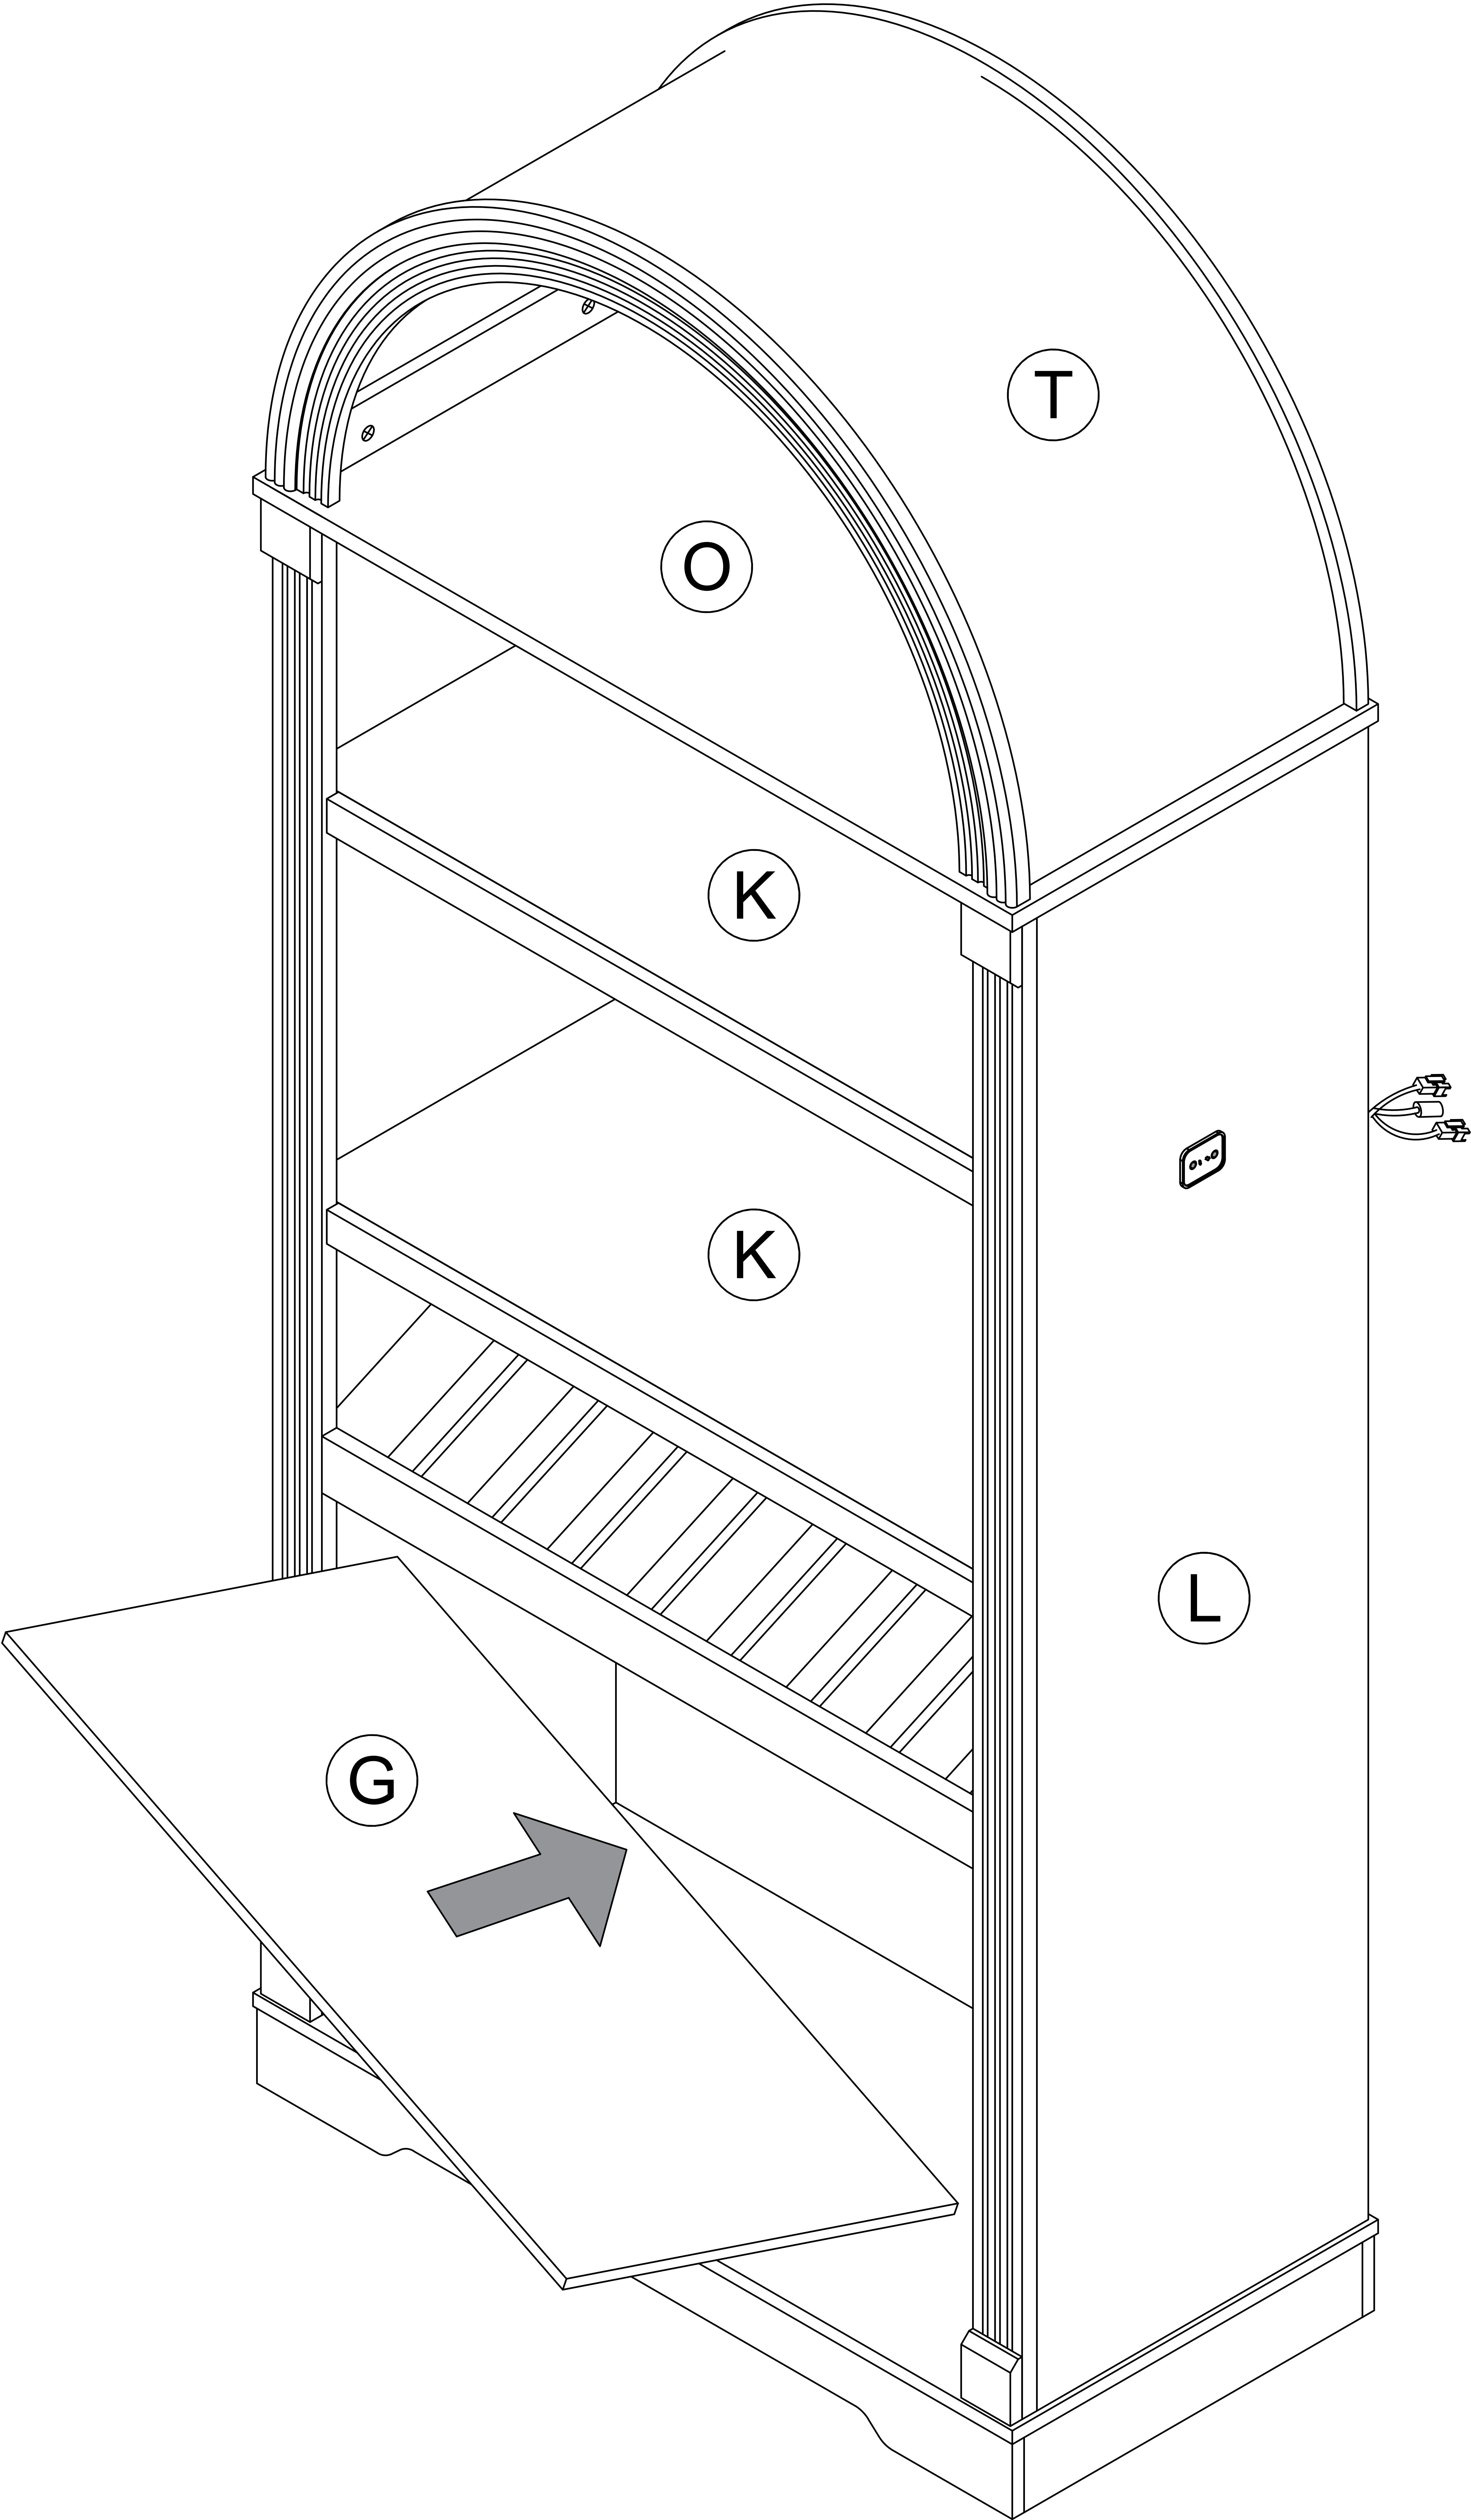


Step 35

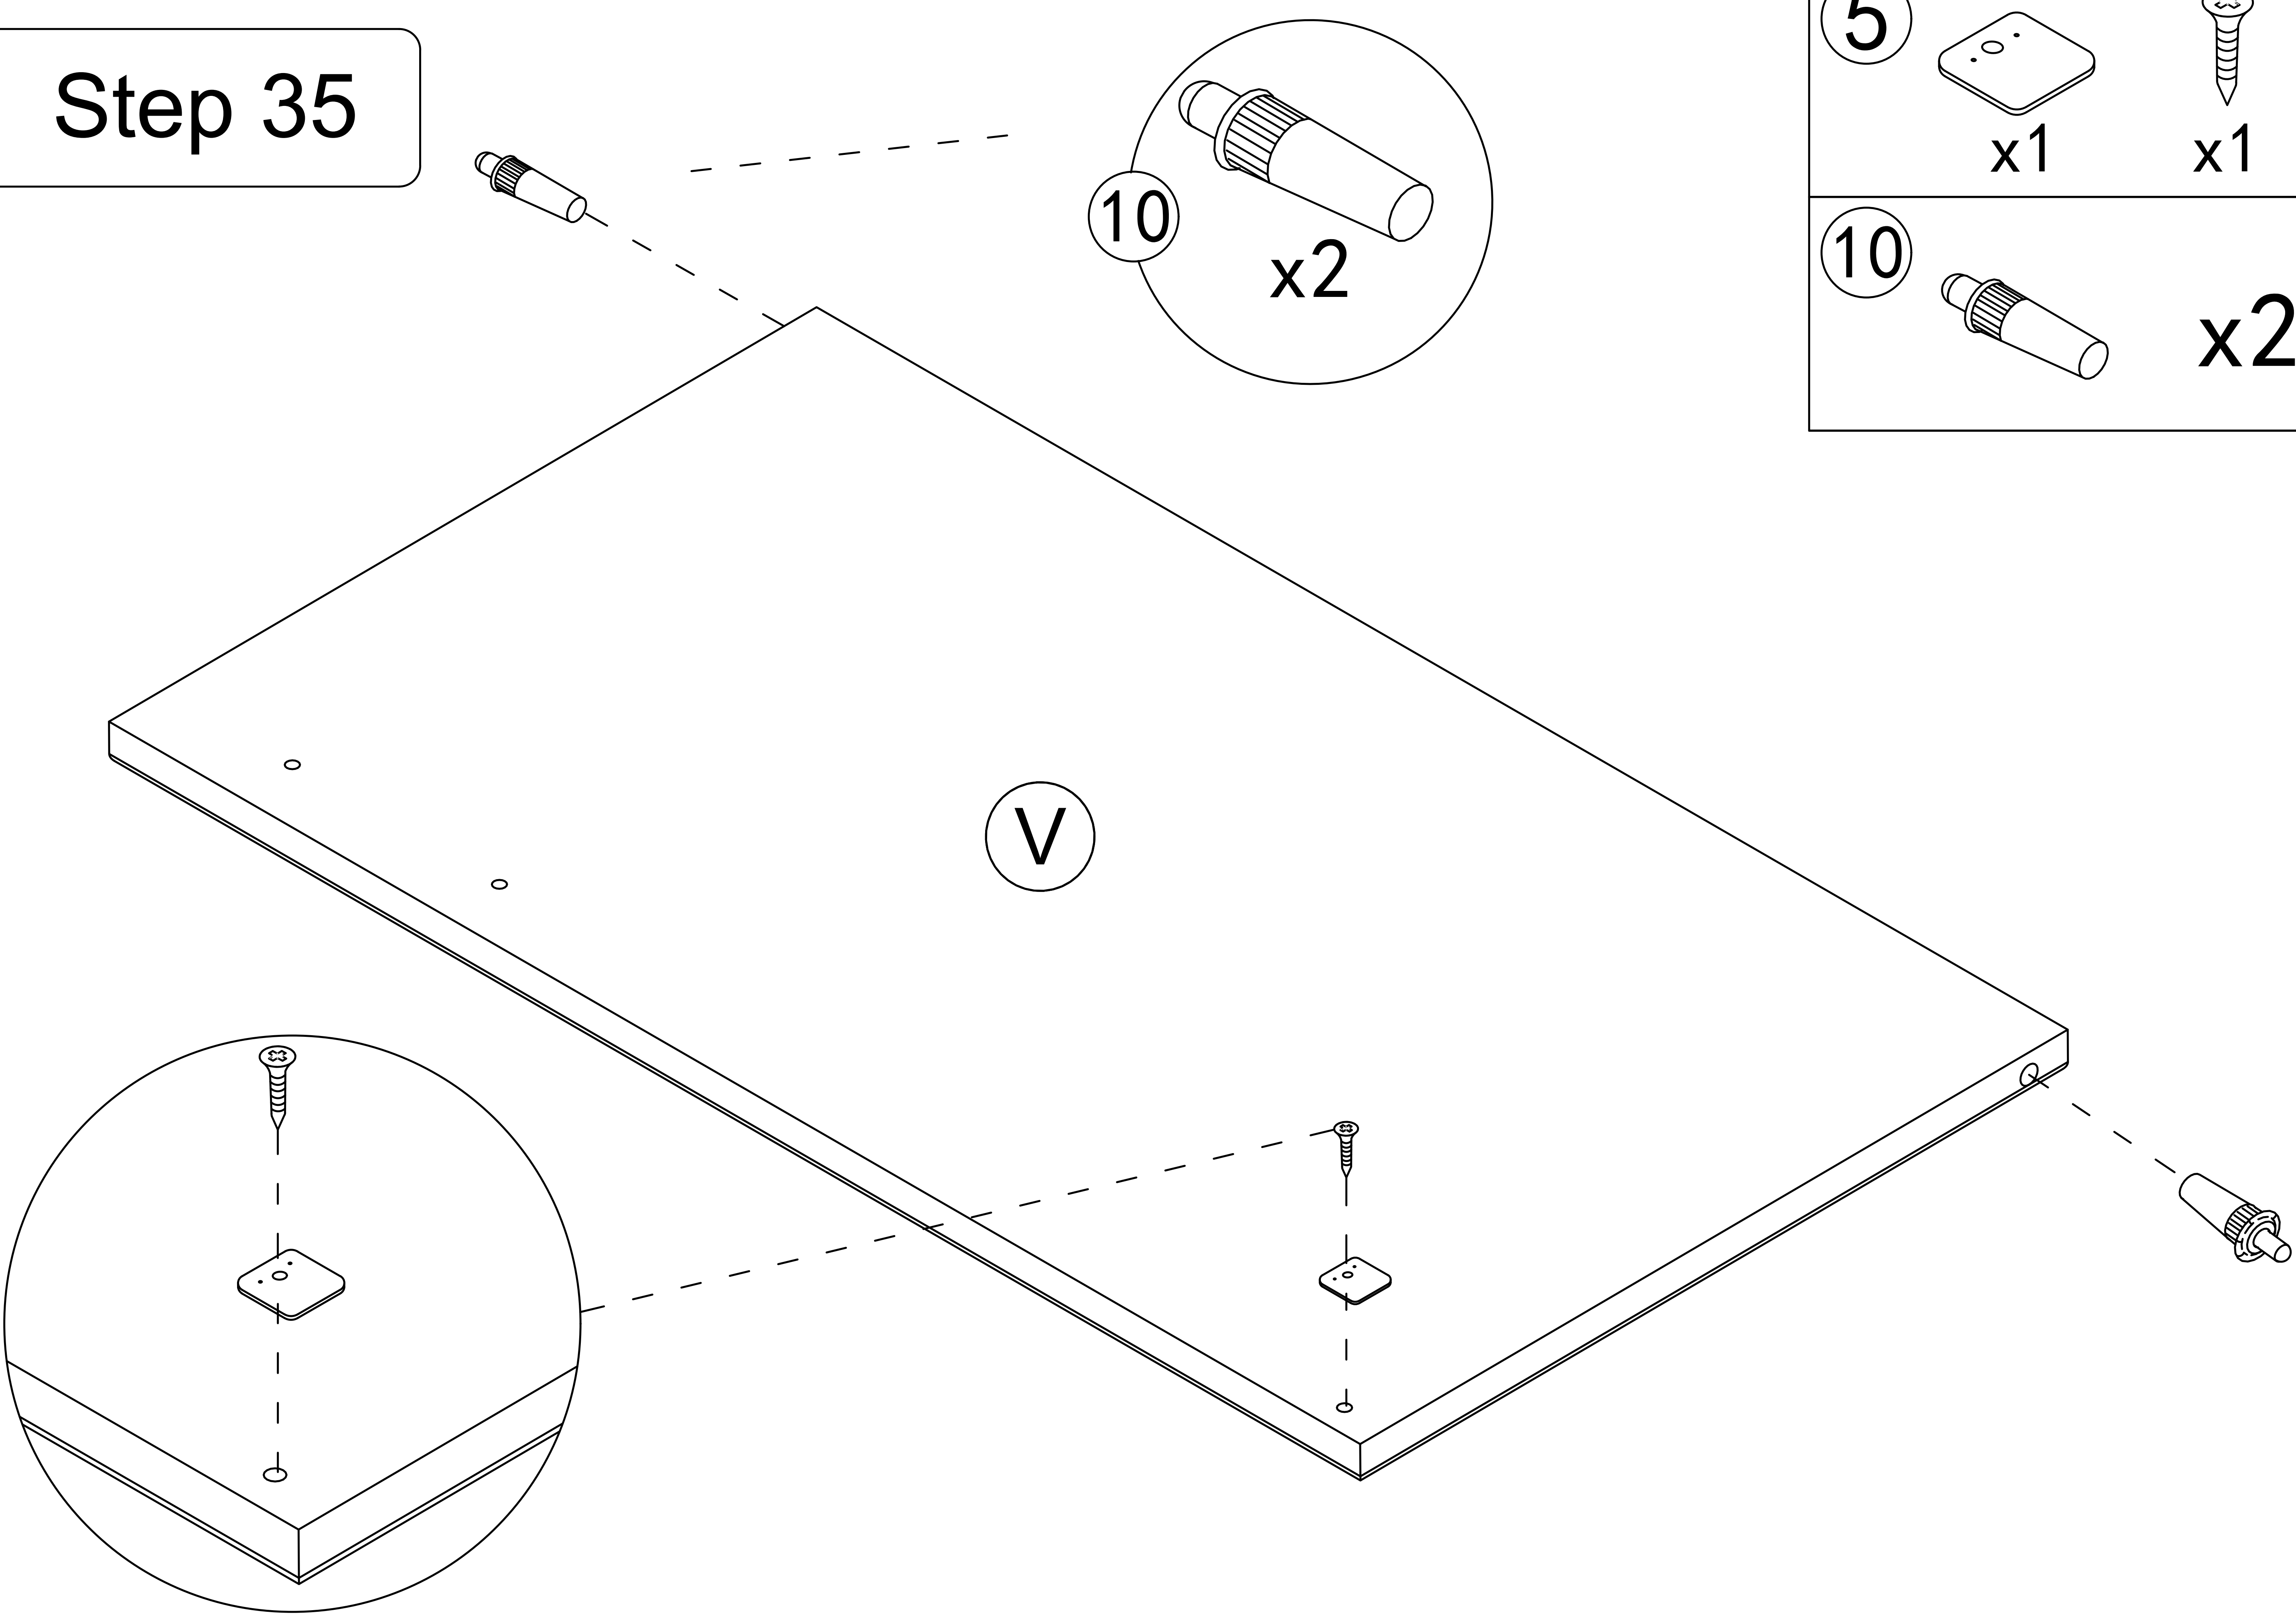


Step 36

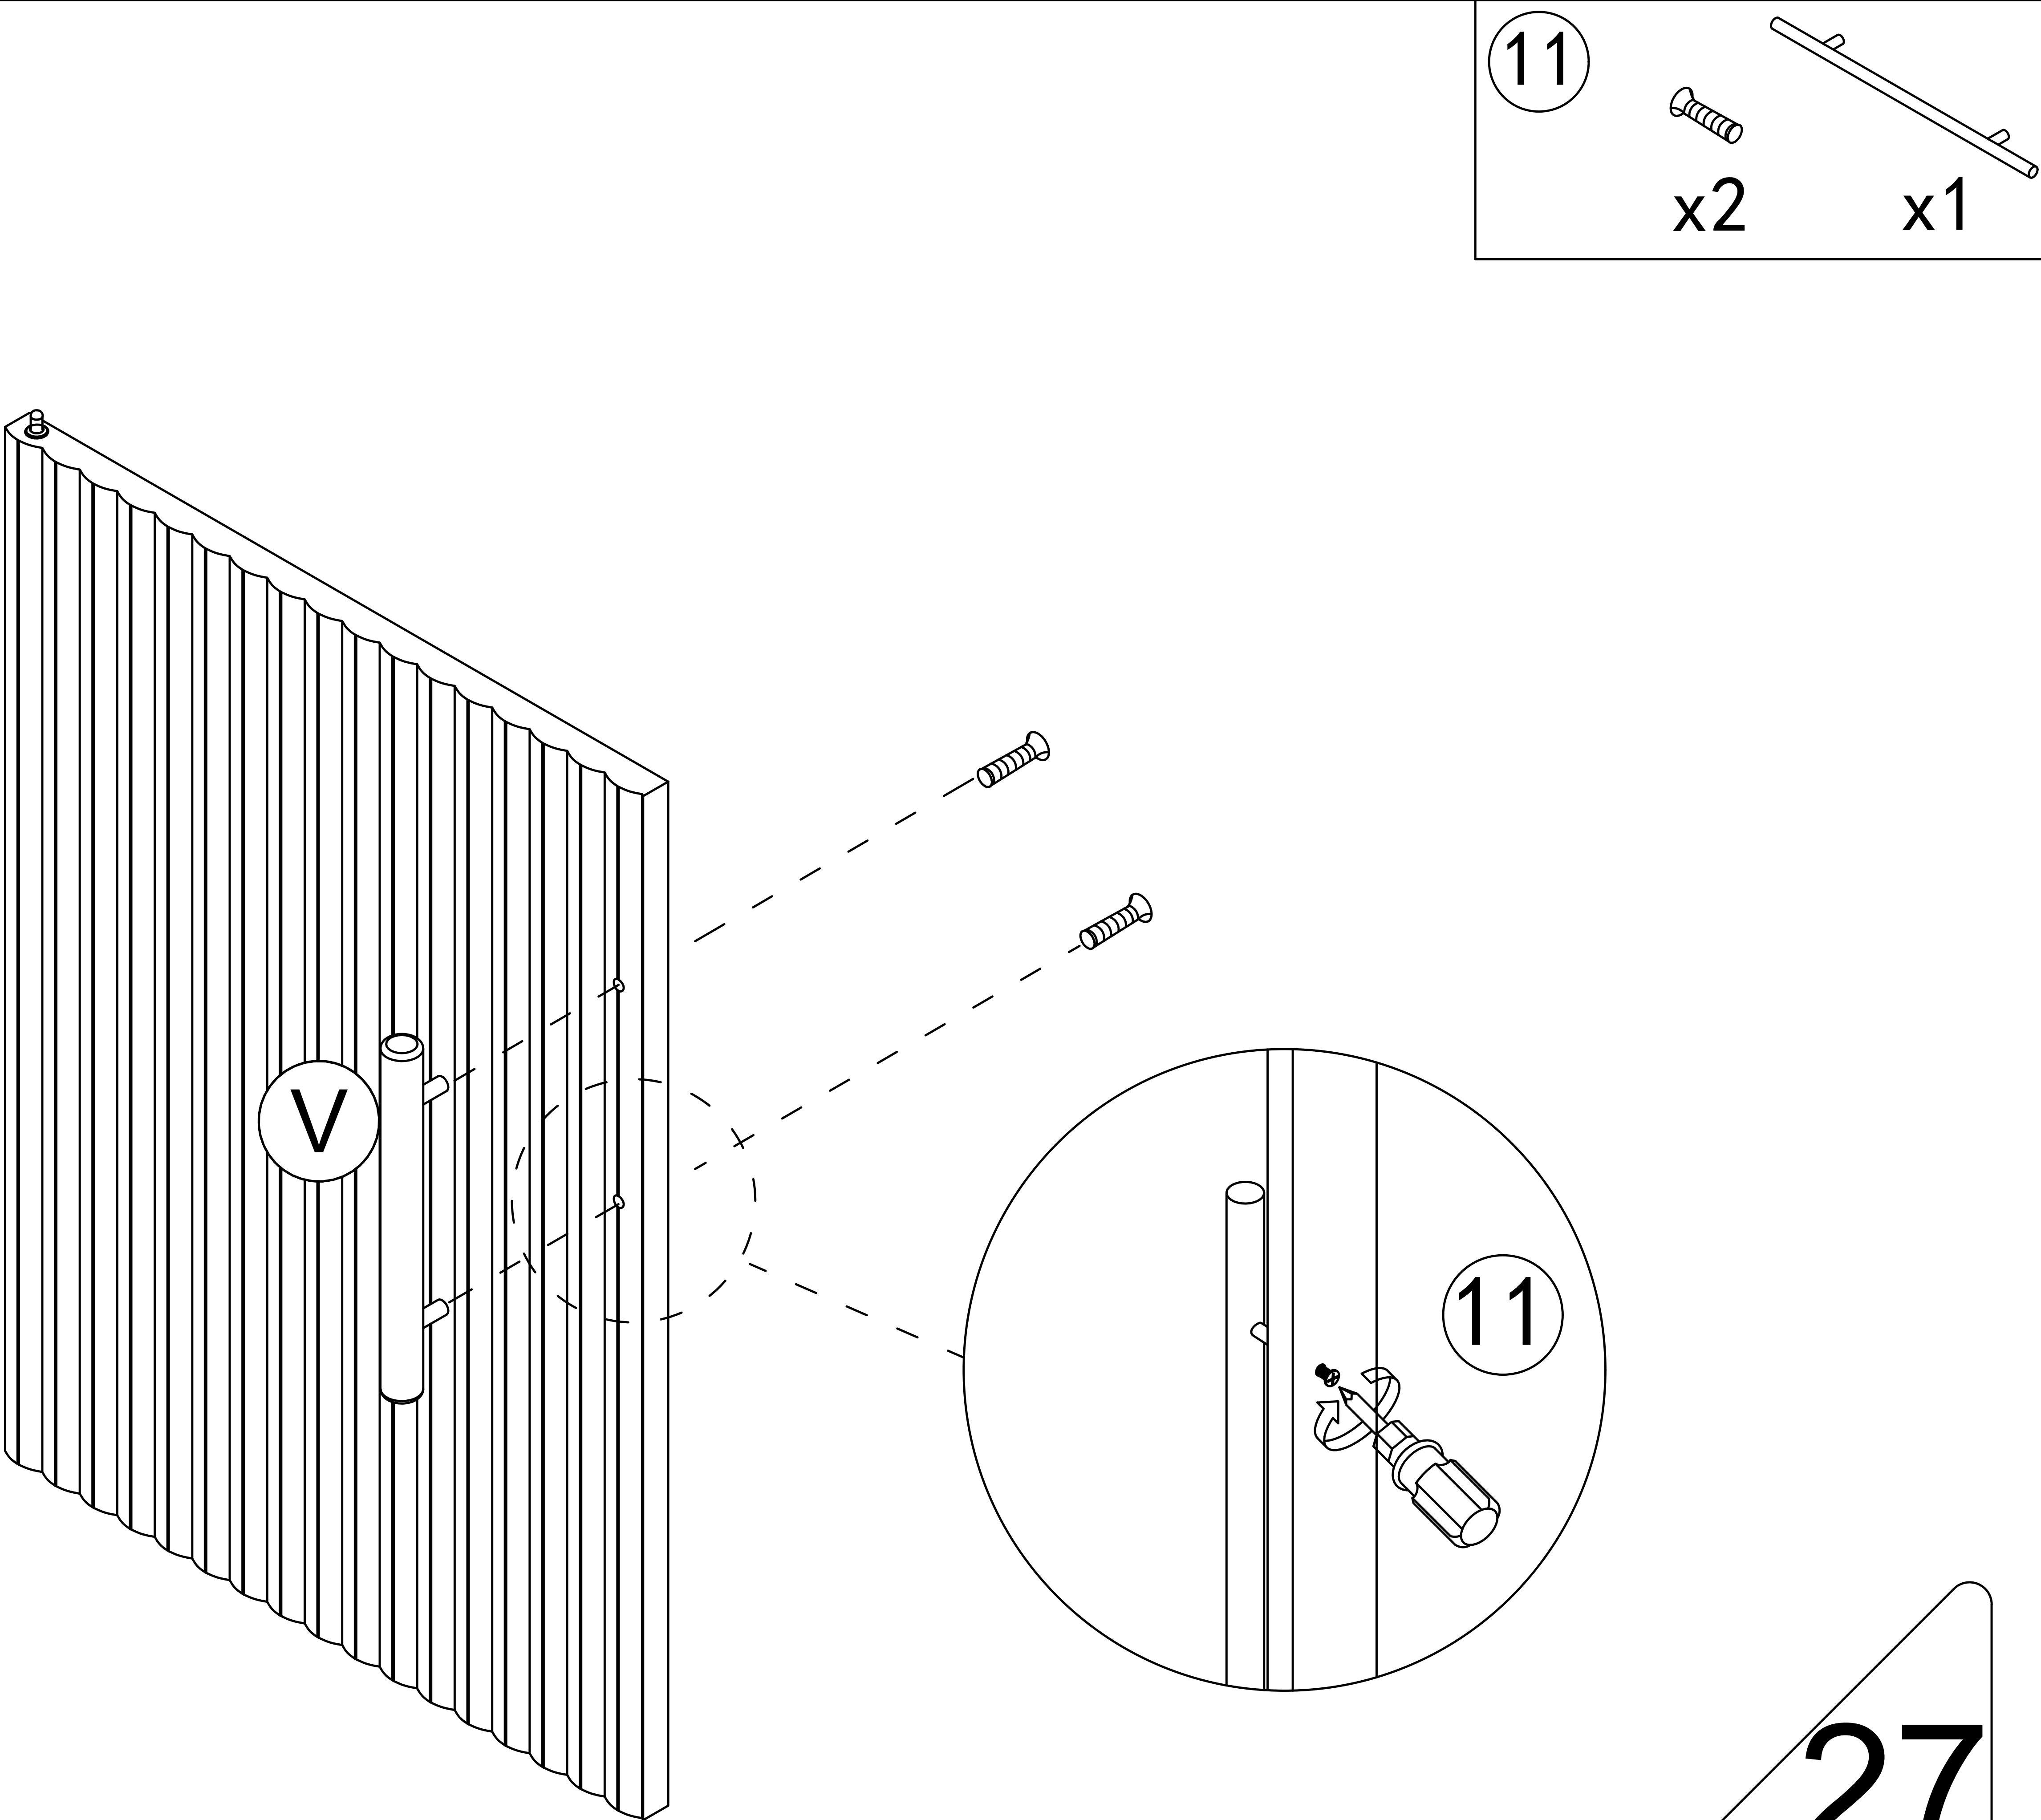


Step 37

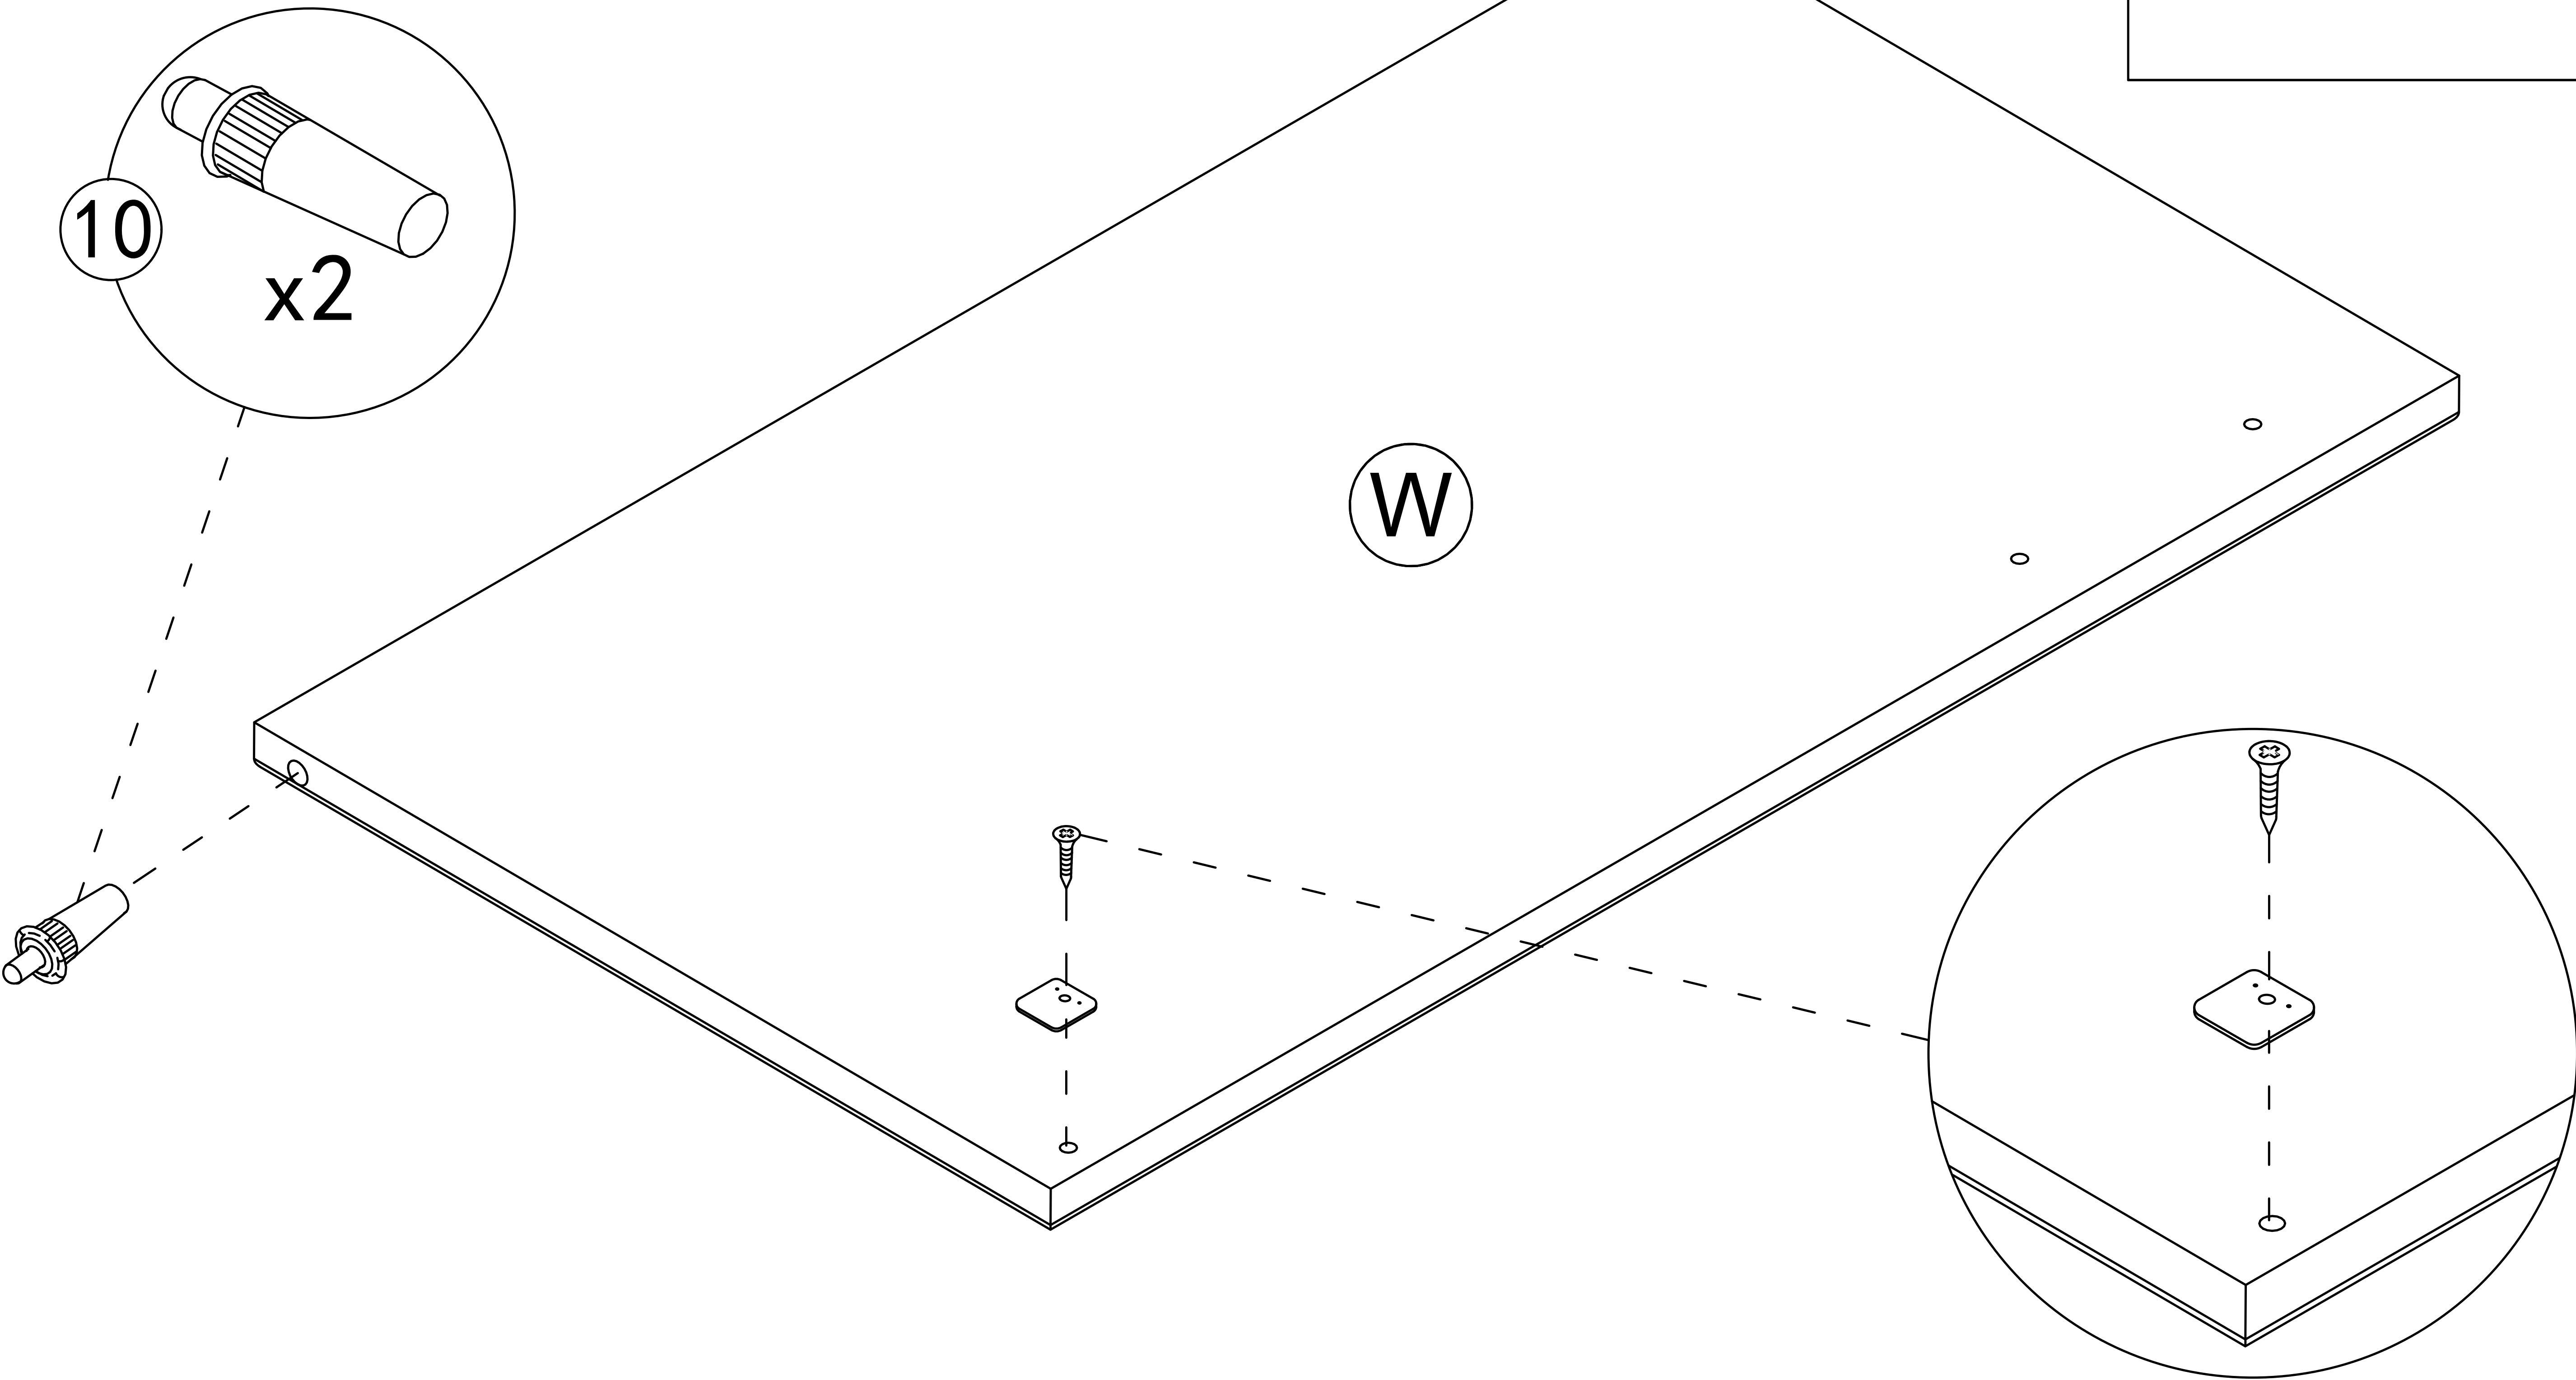





Step 38

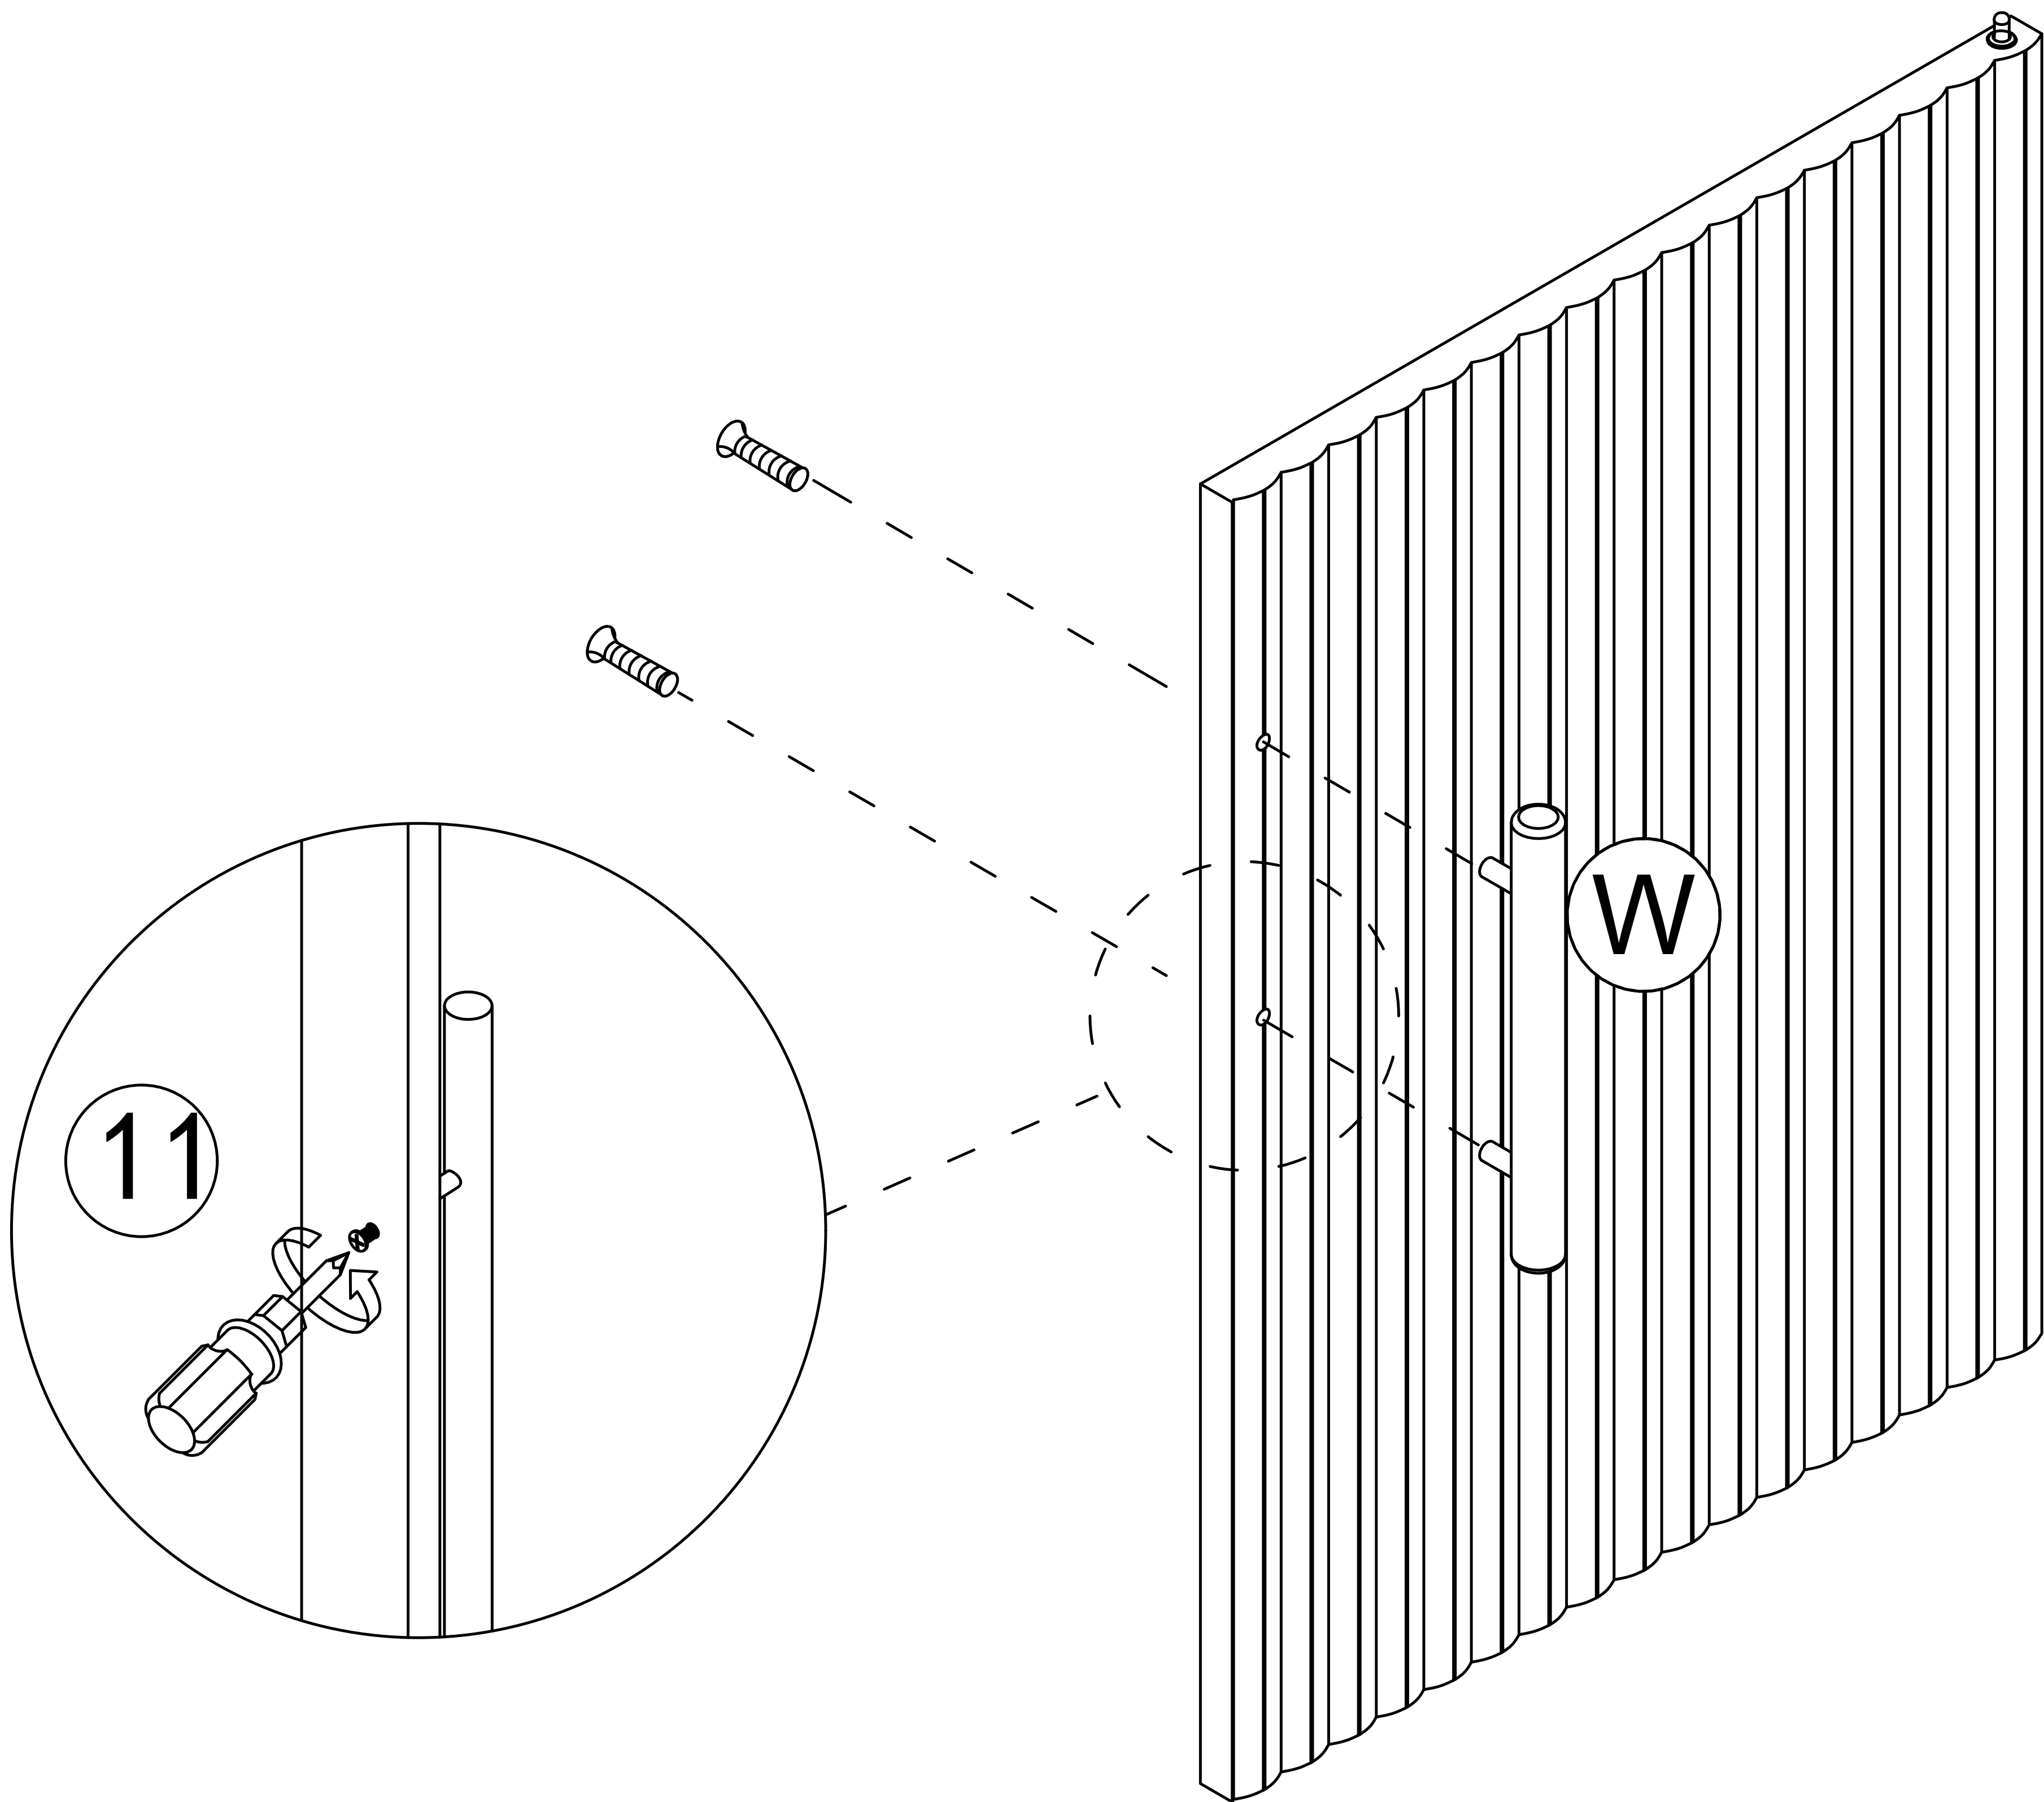

Step 39

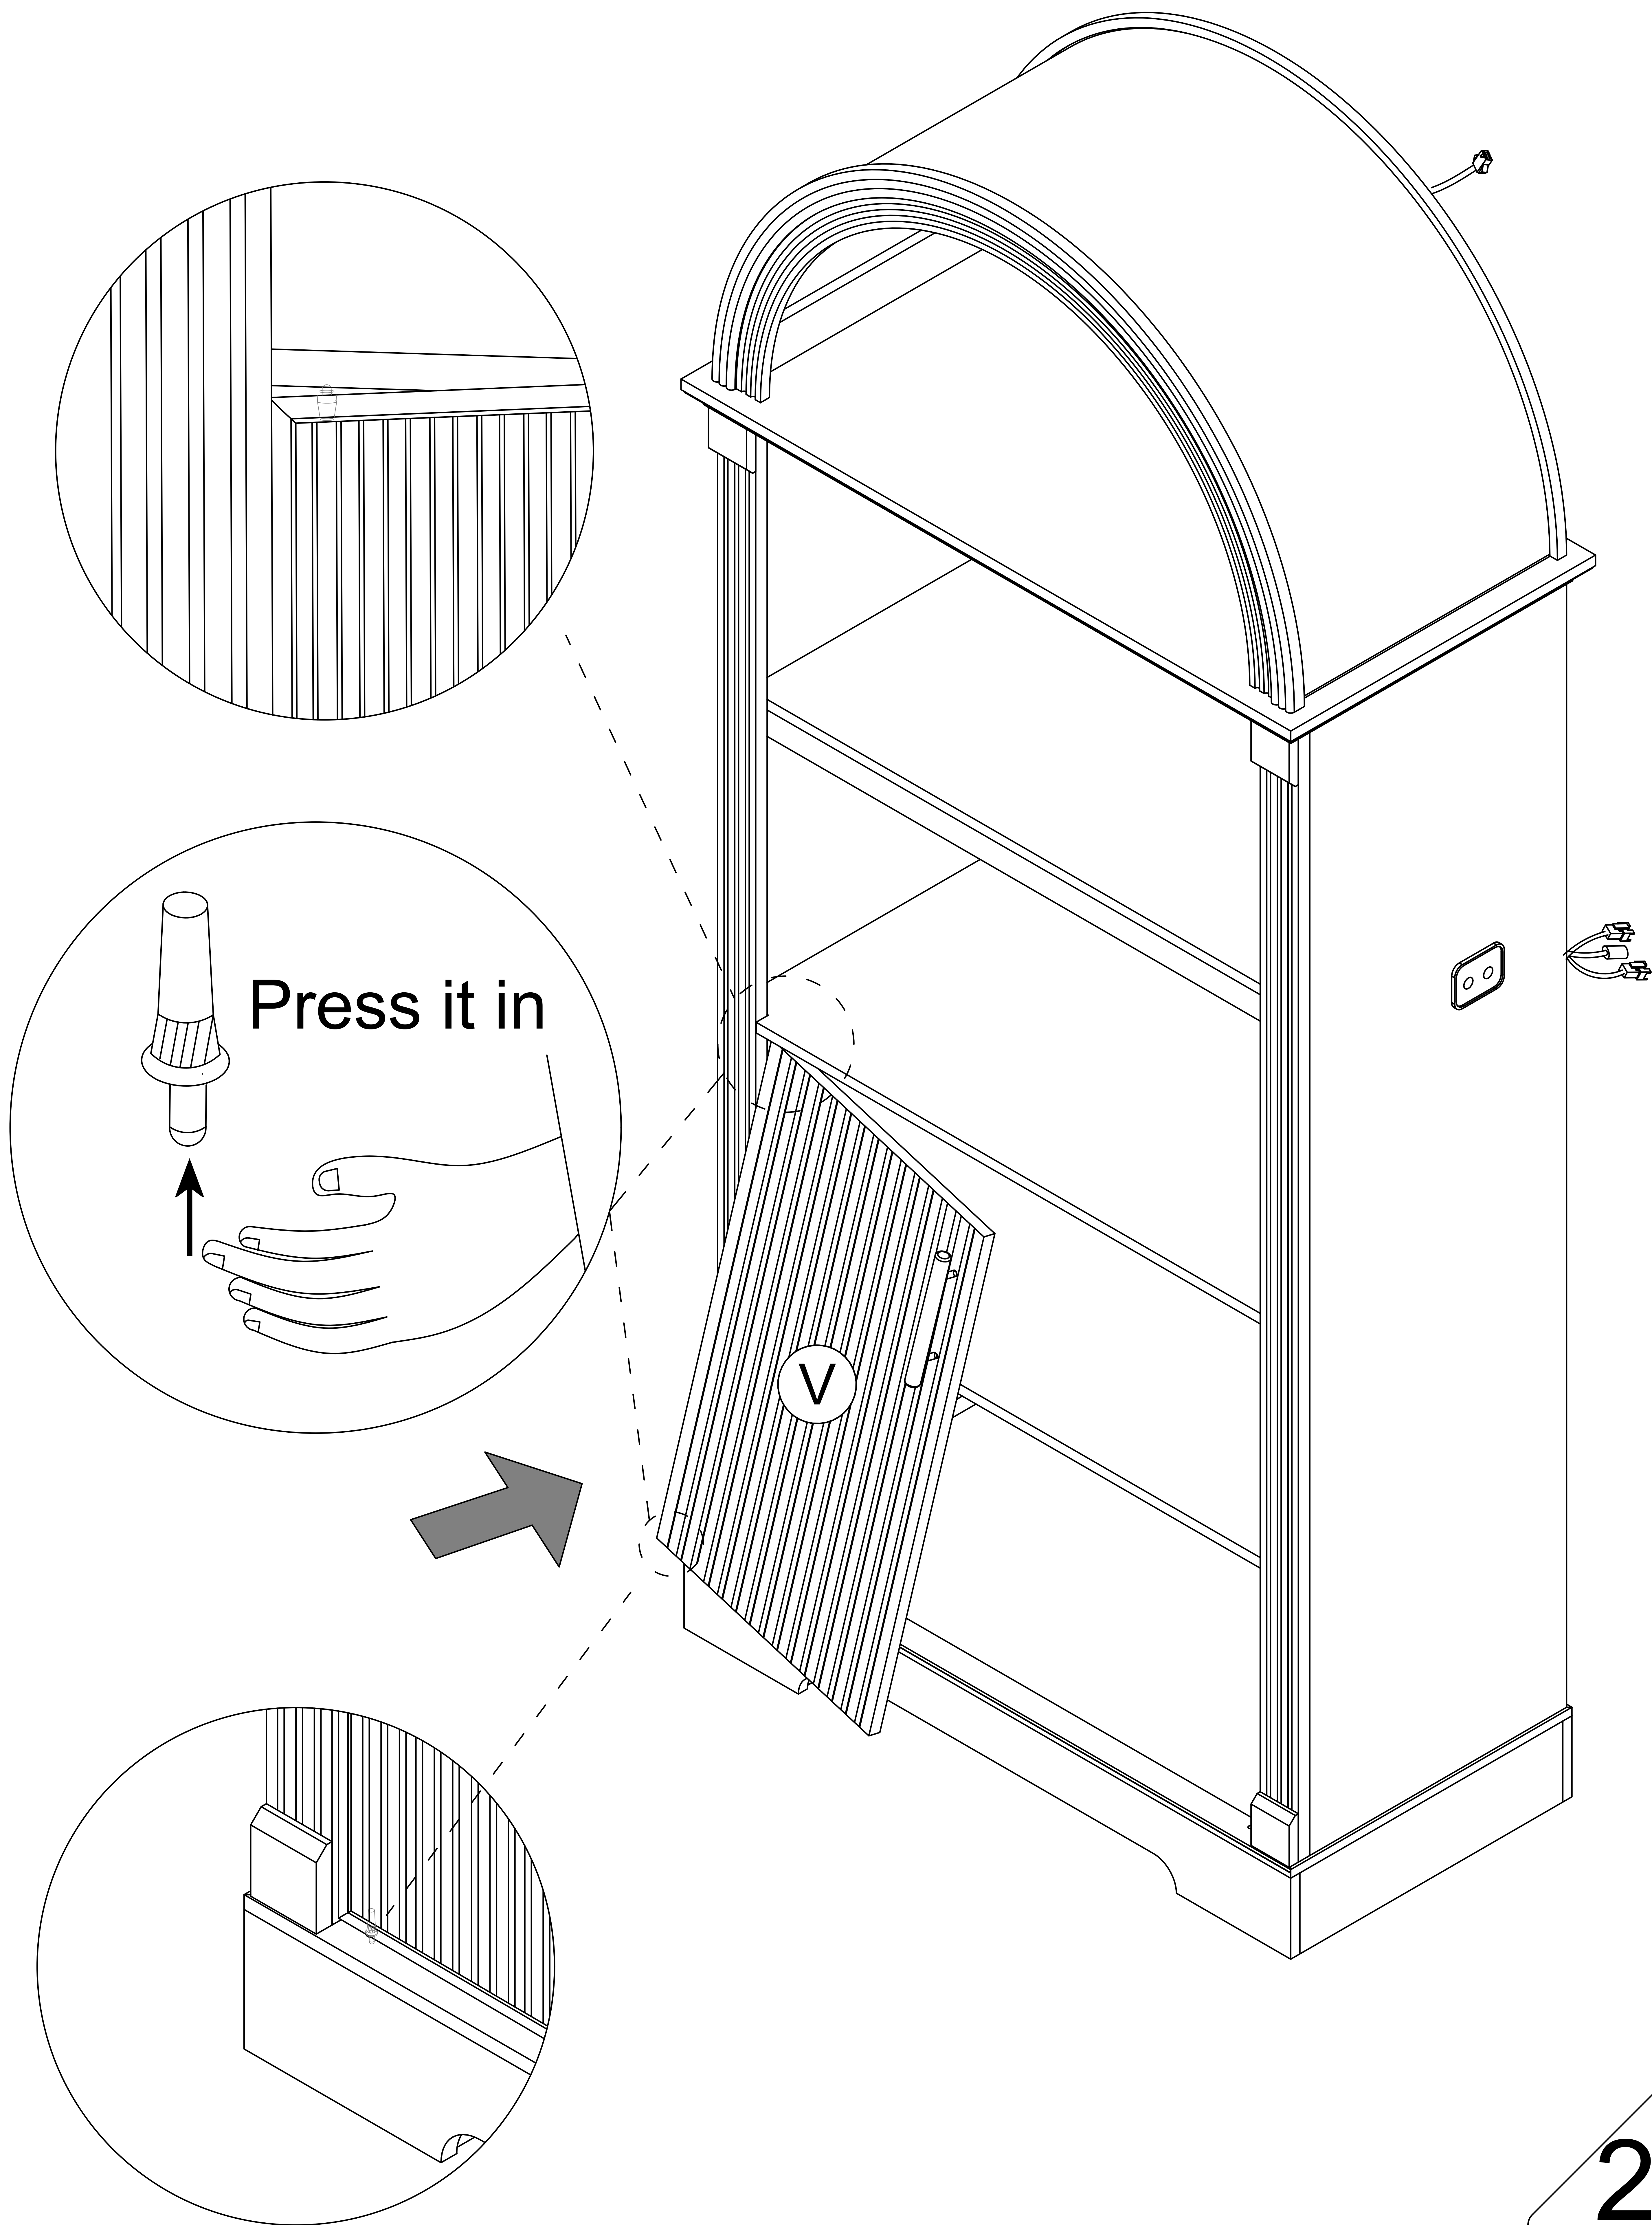


Step 40

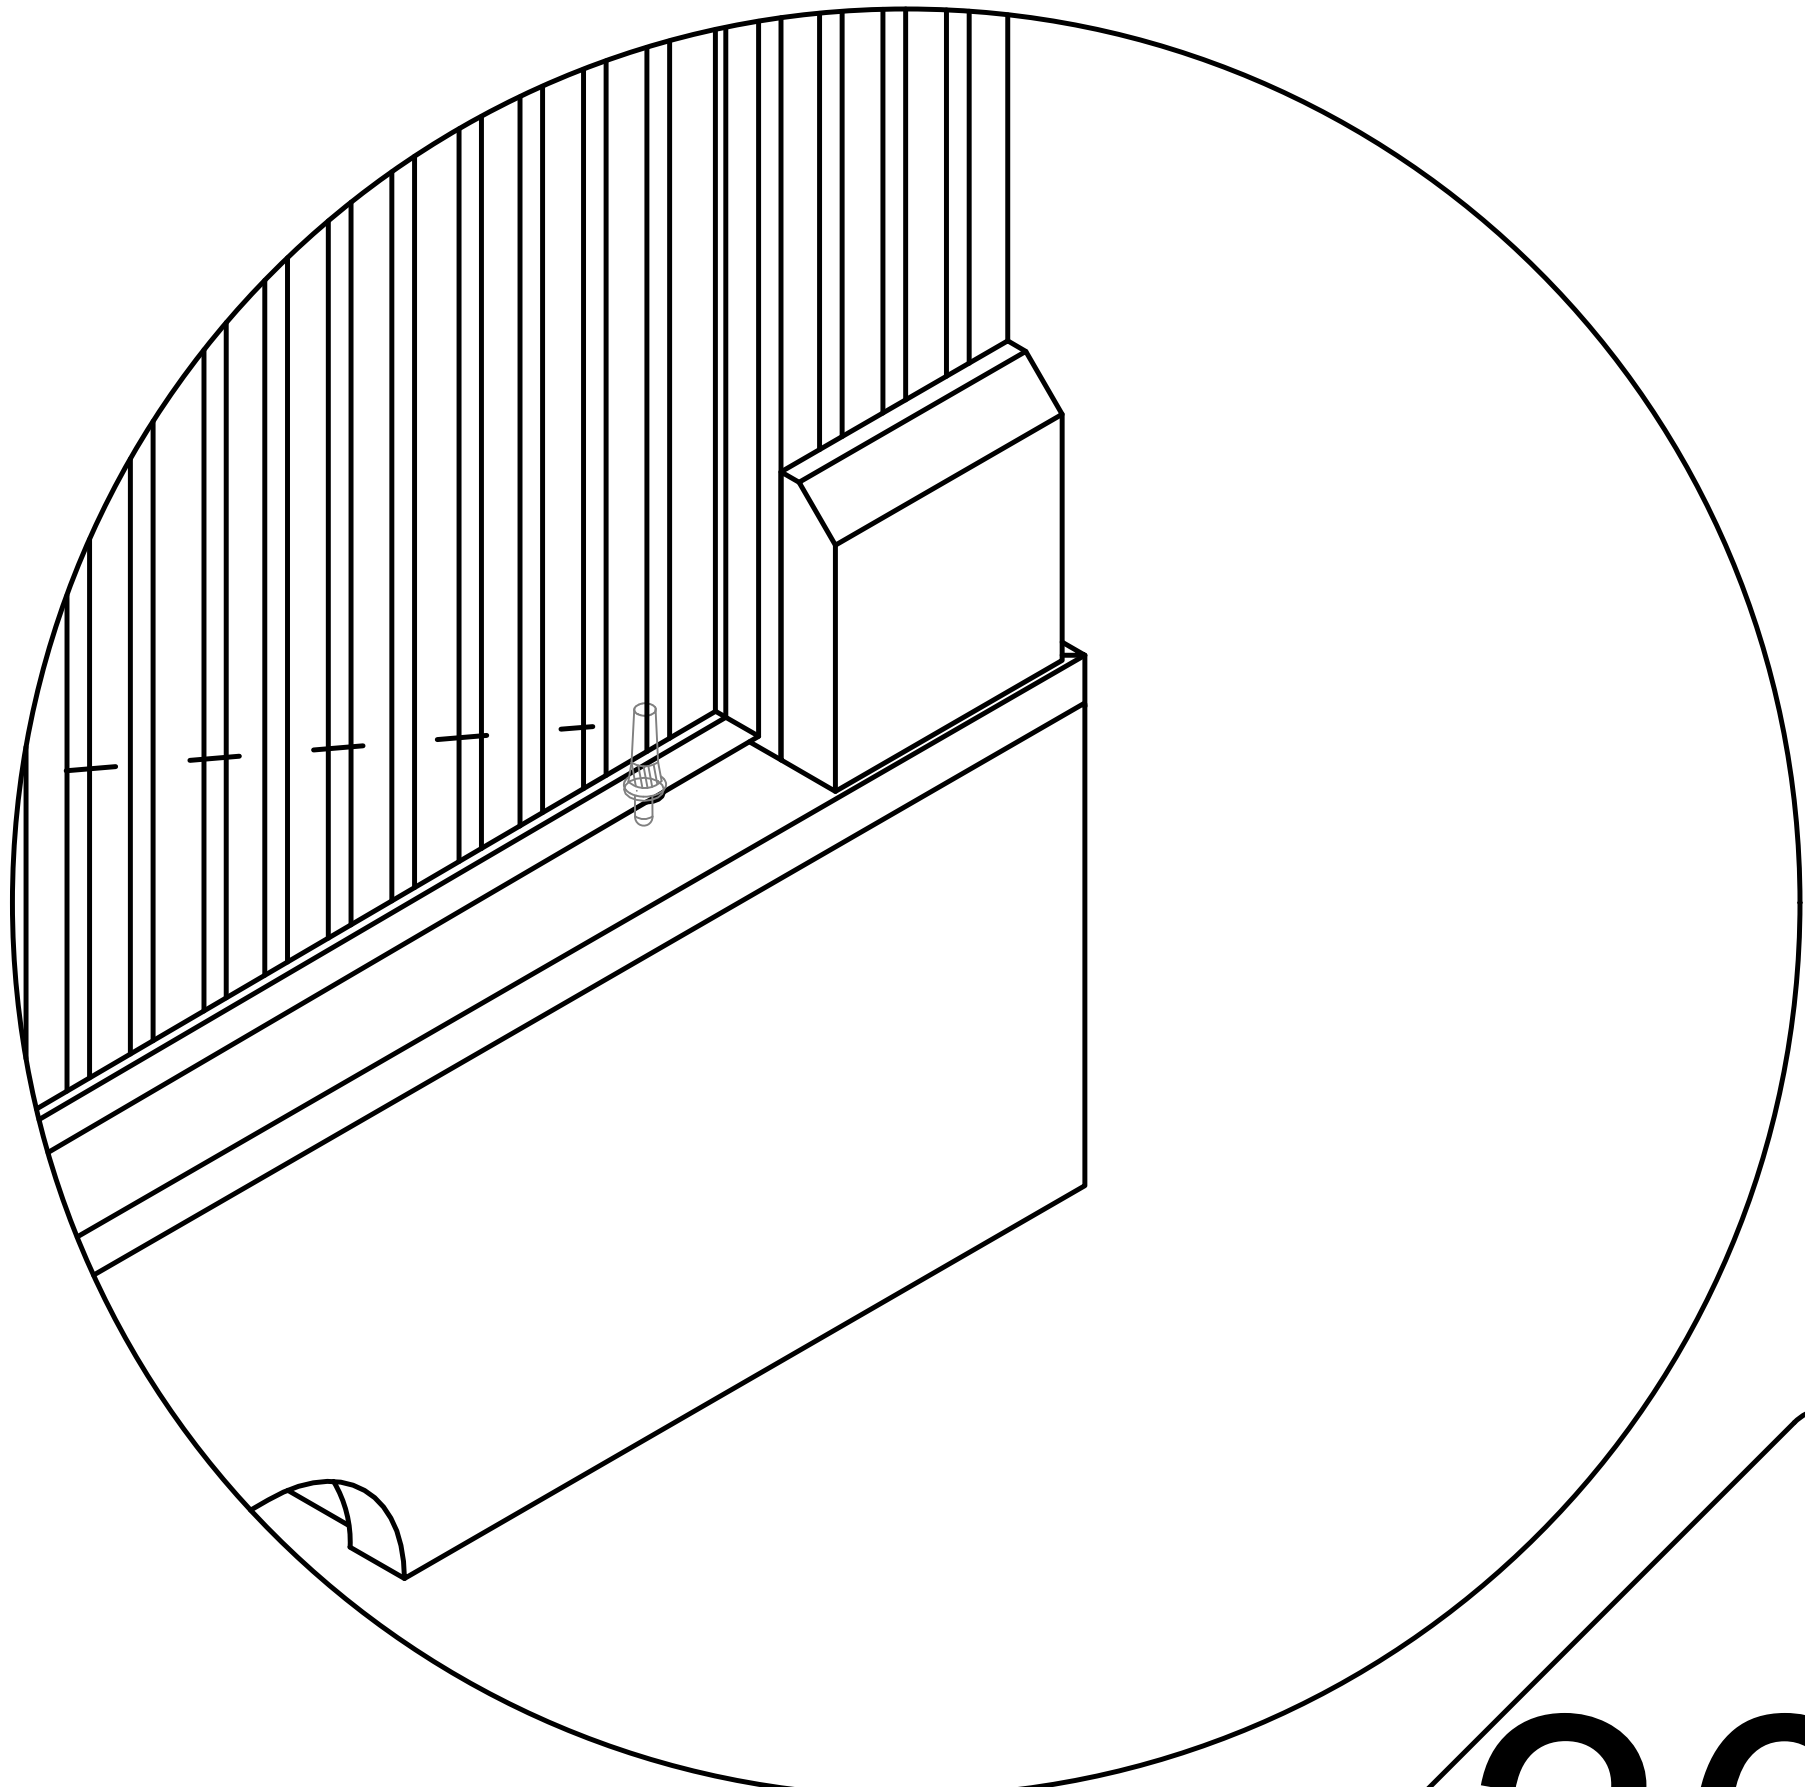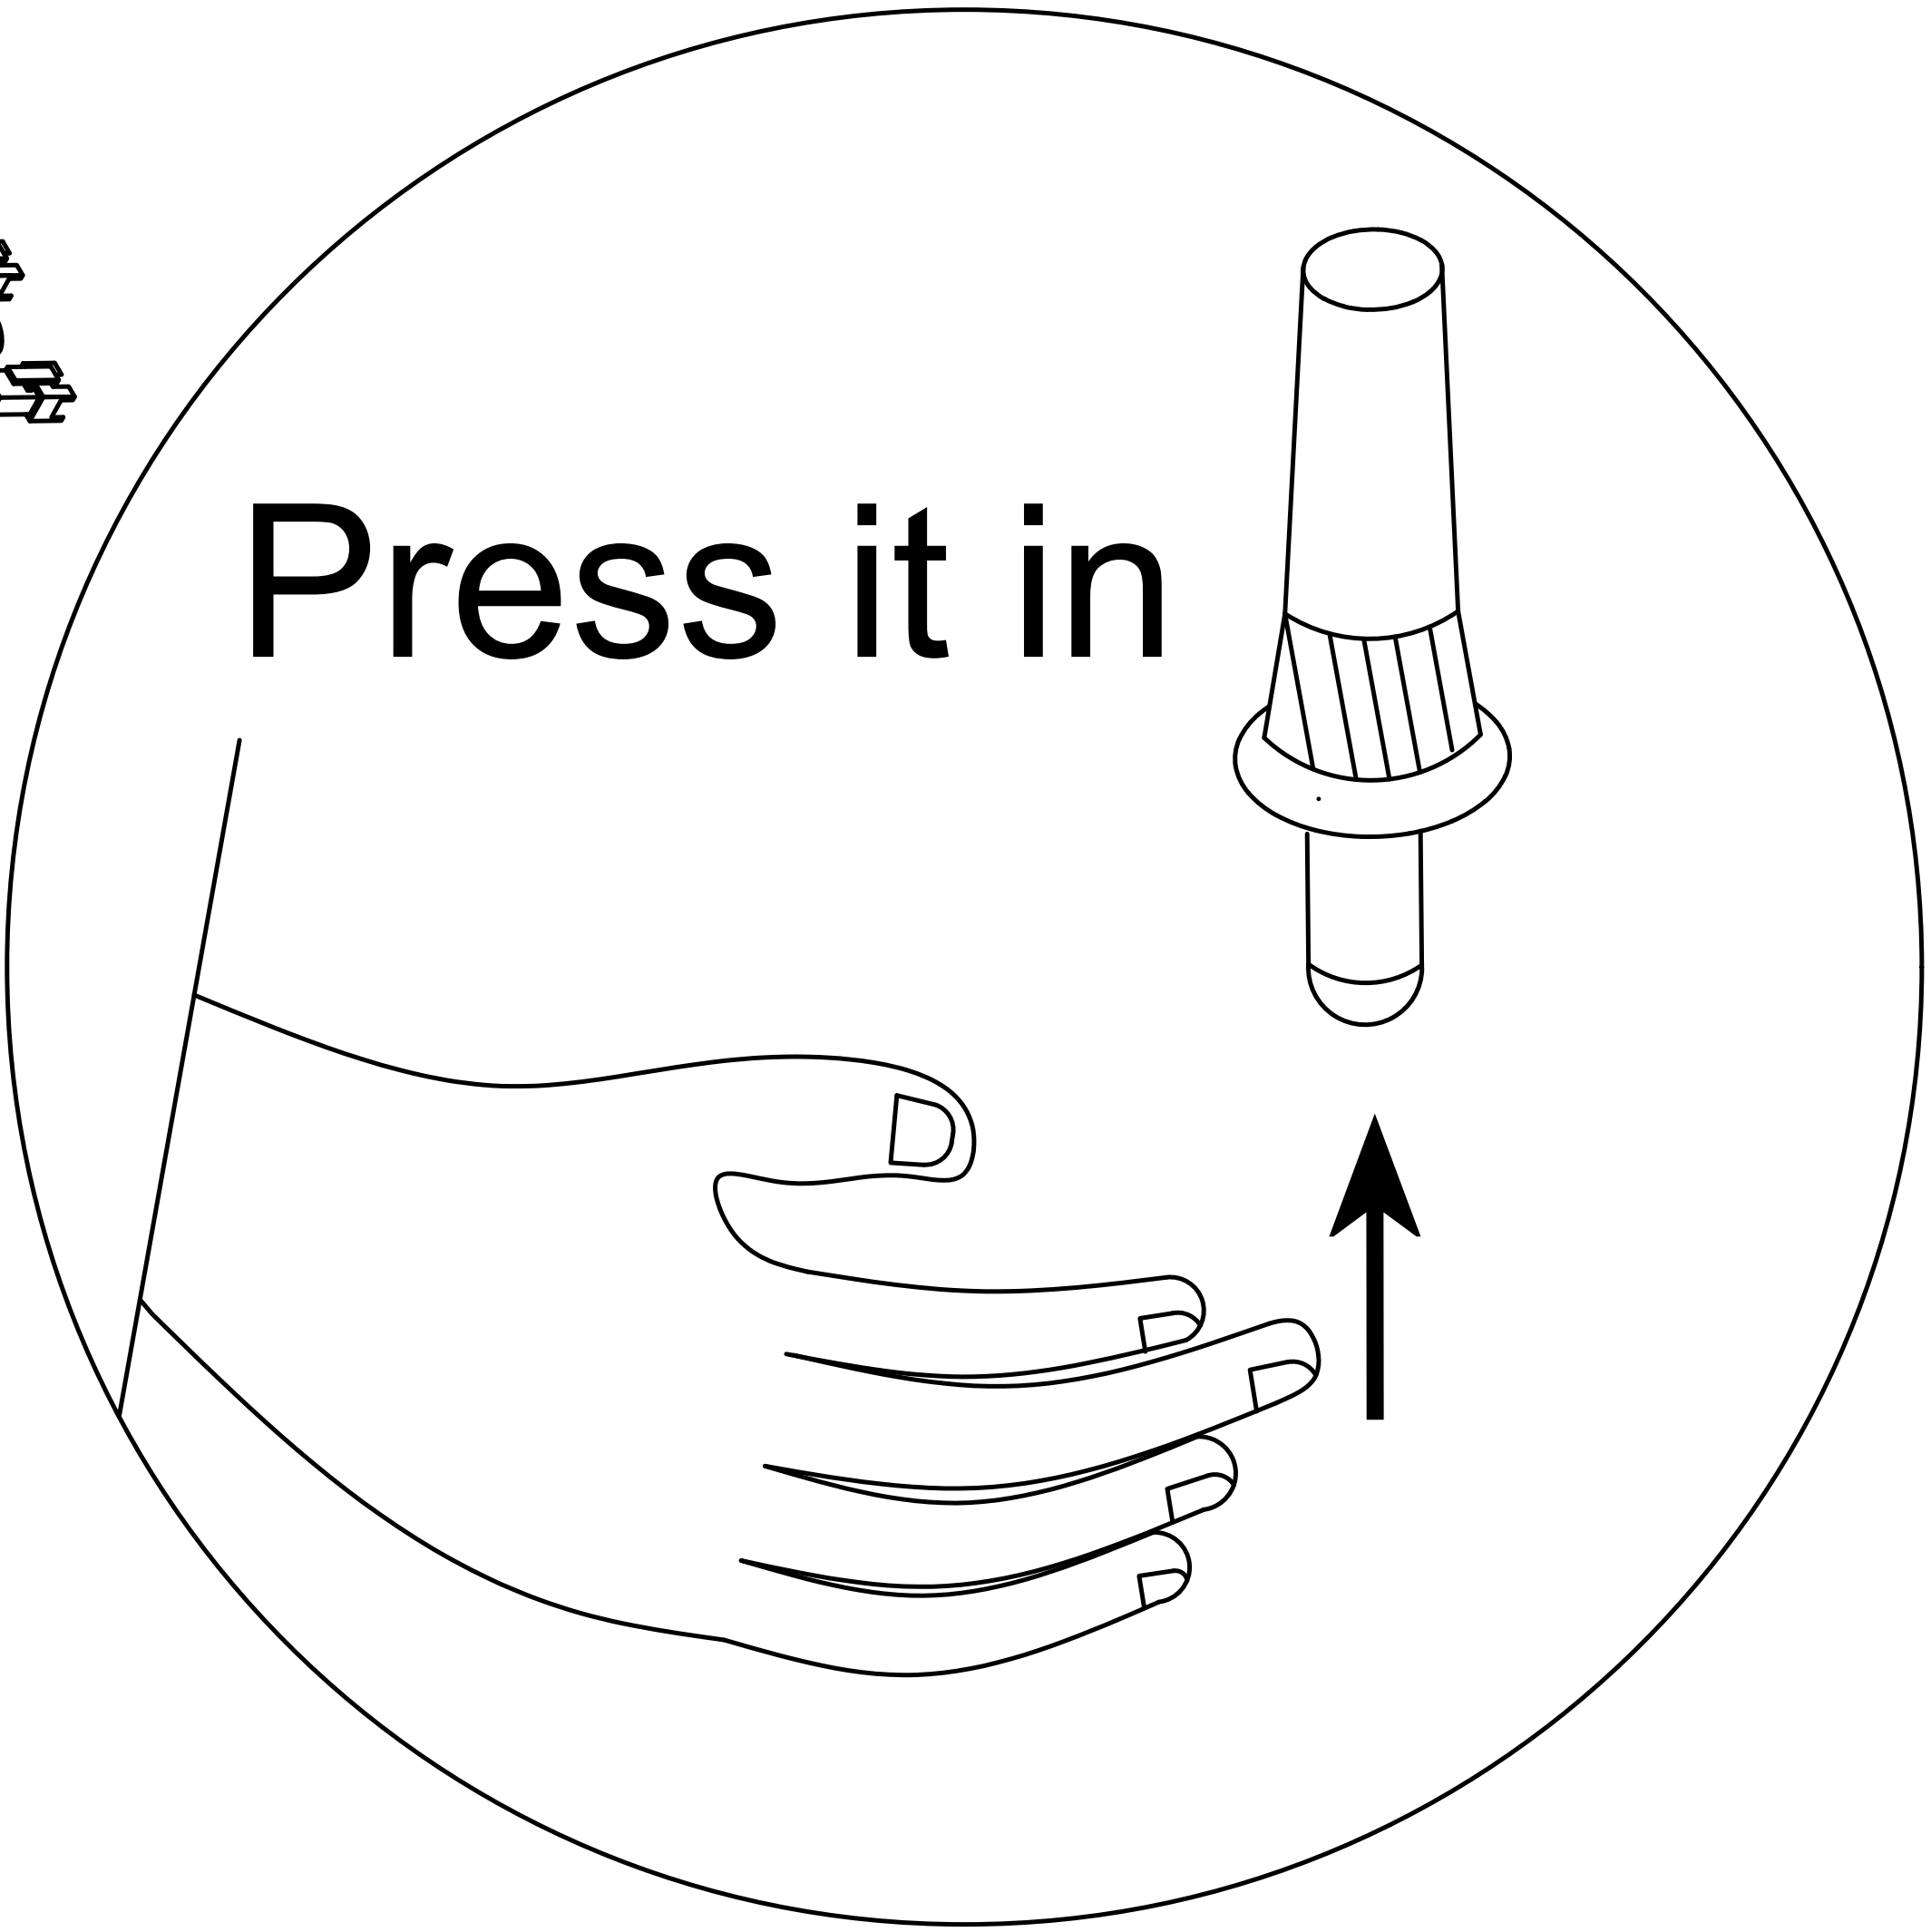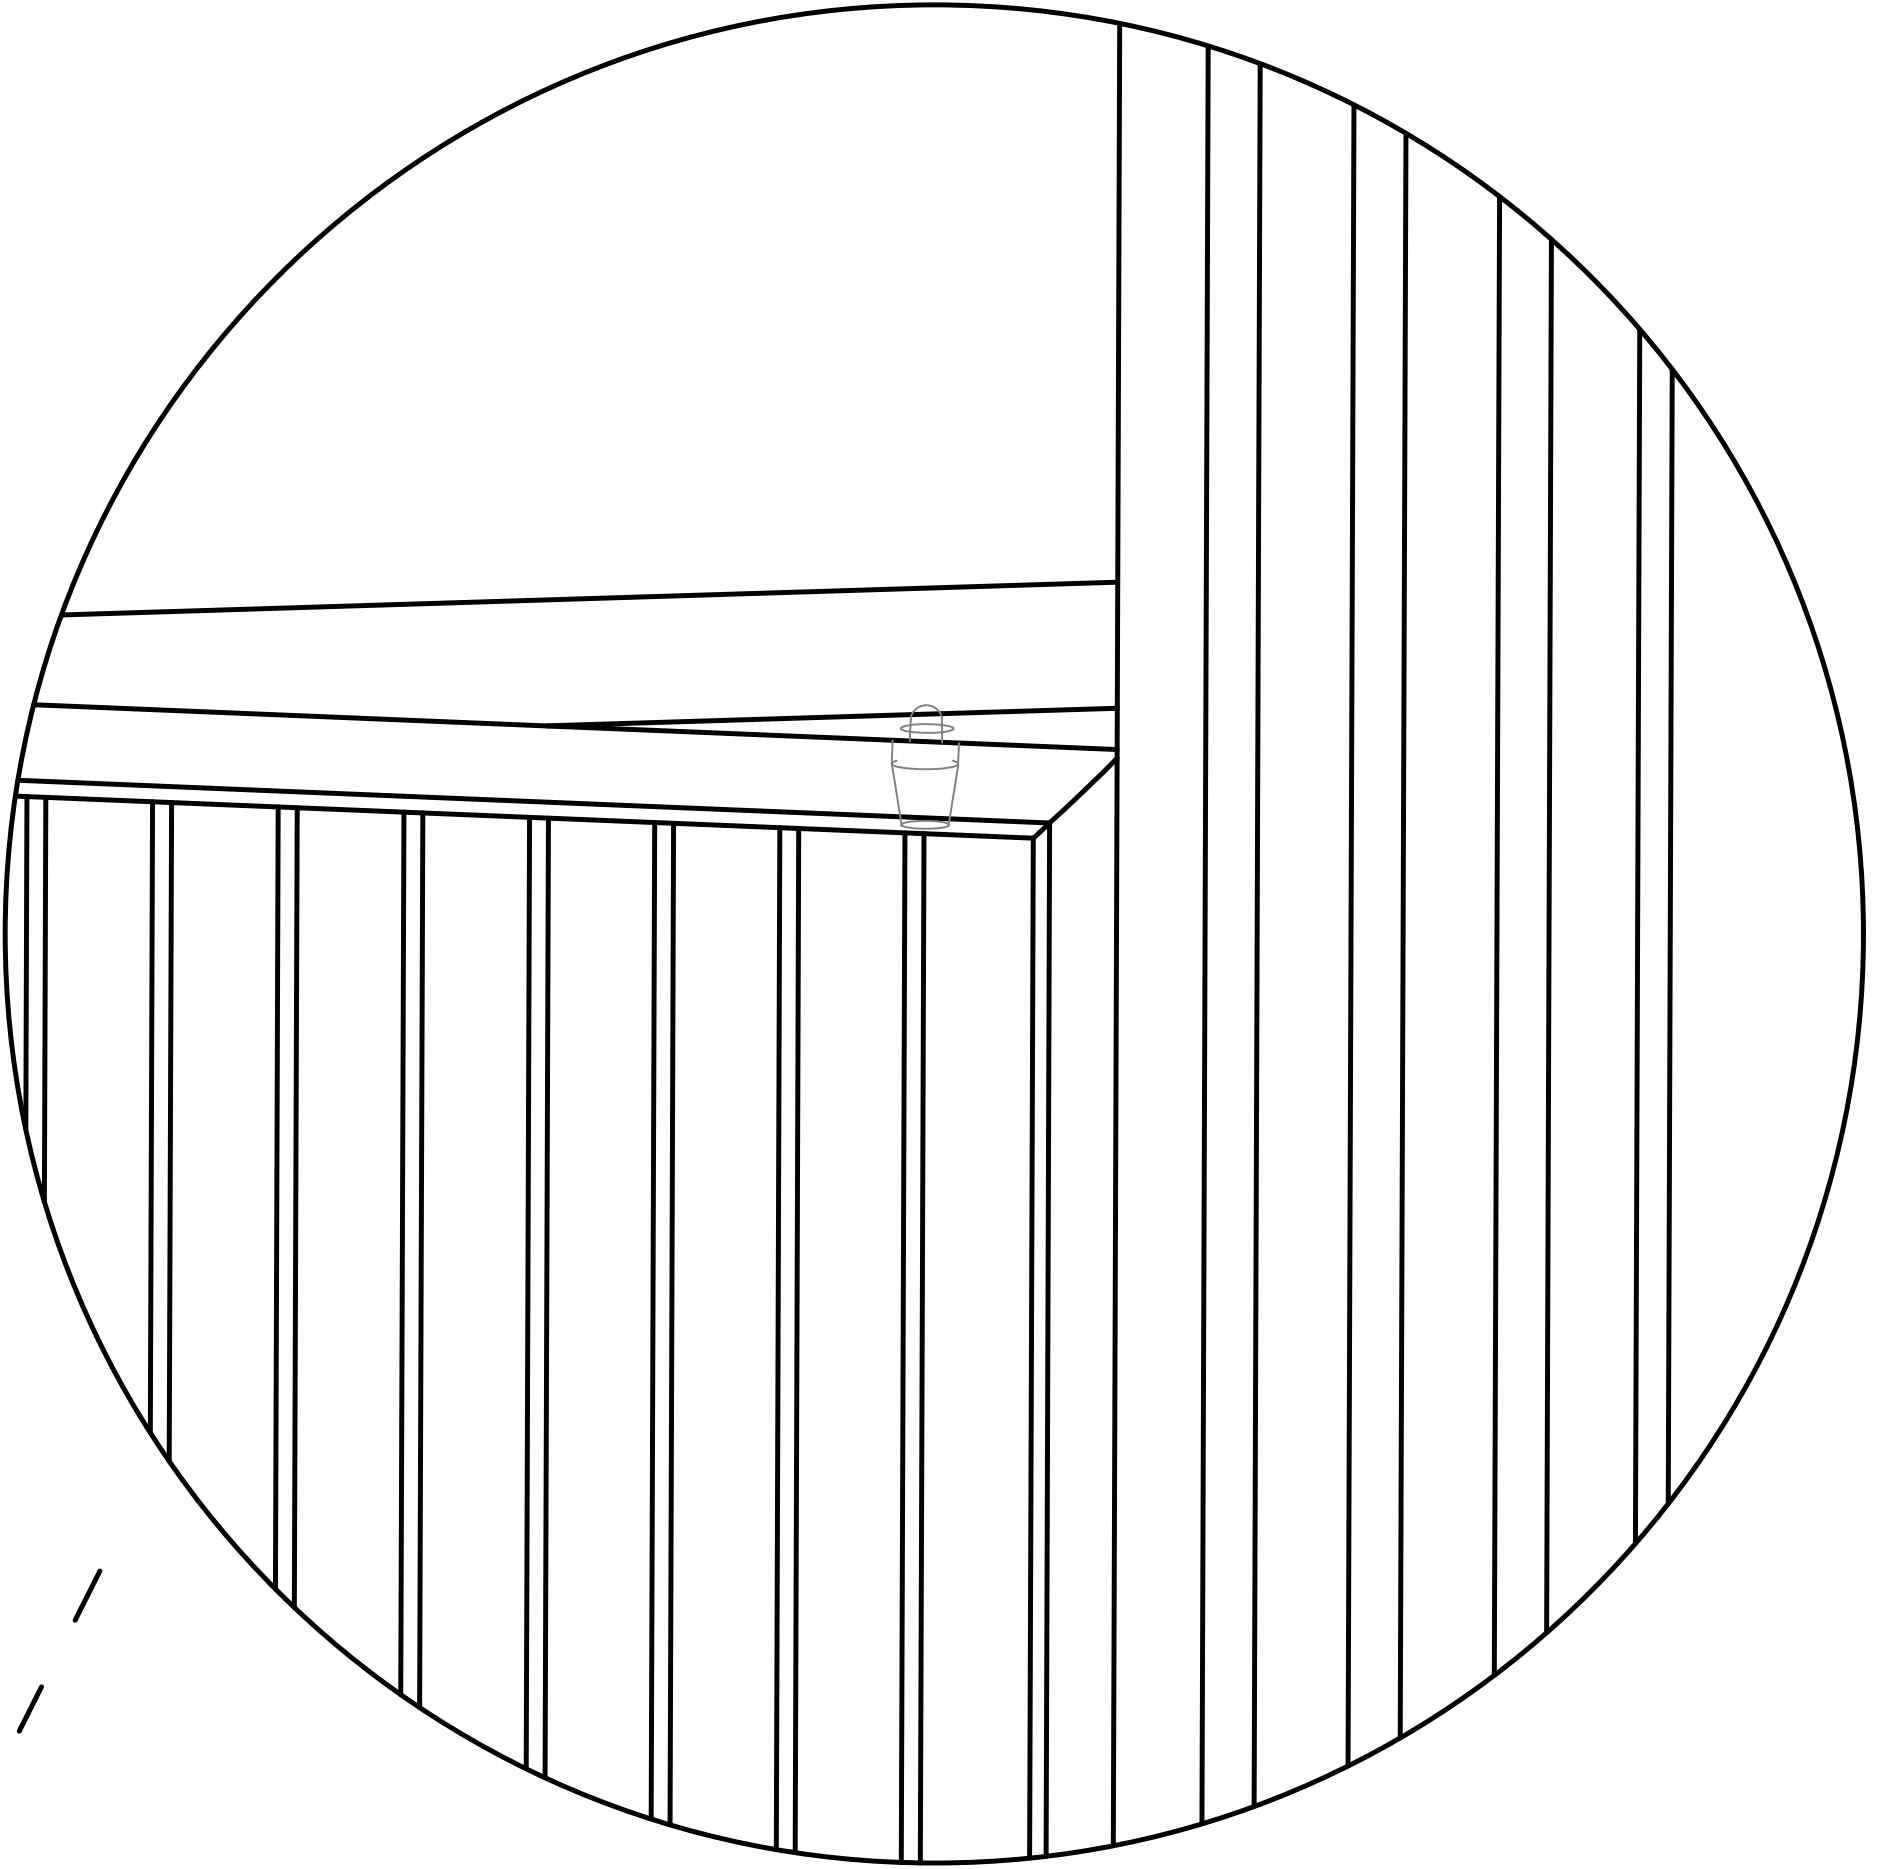
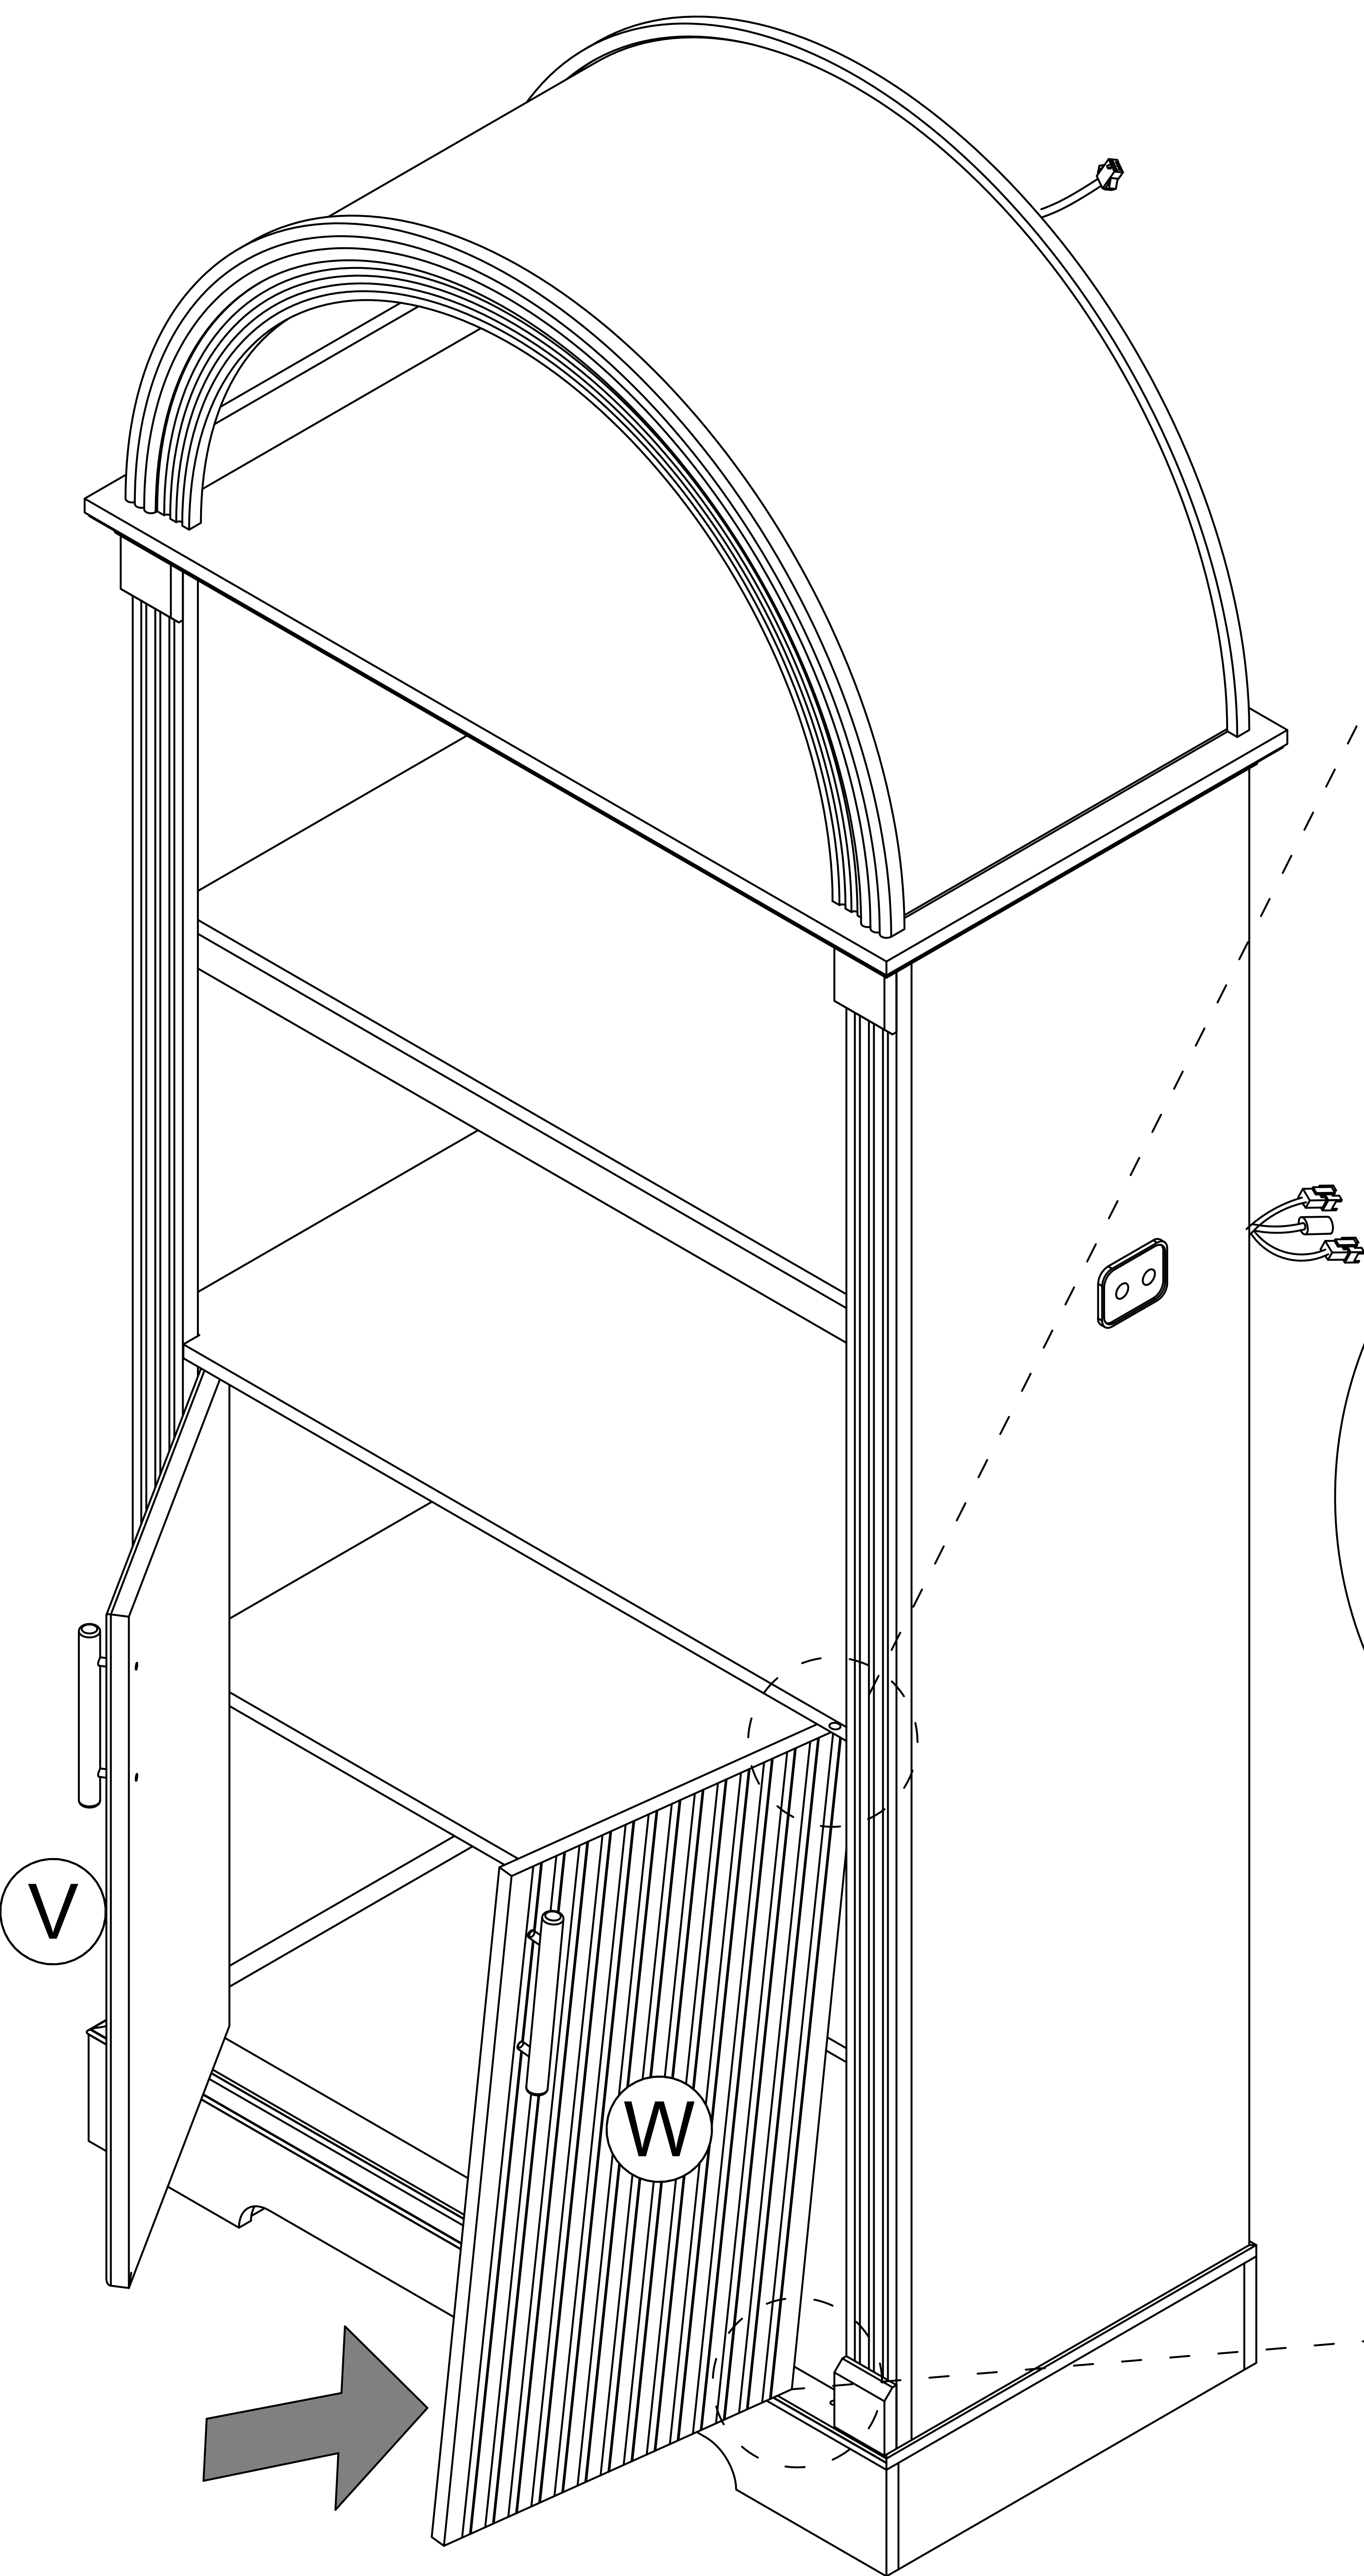


Step 41

12

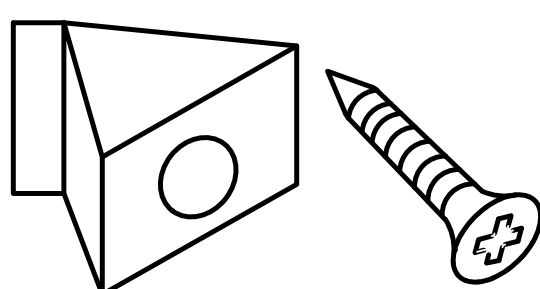


x12

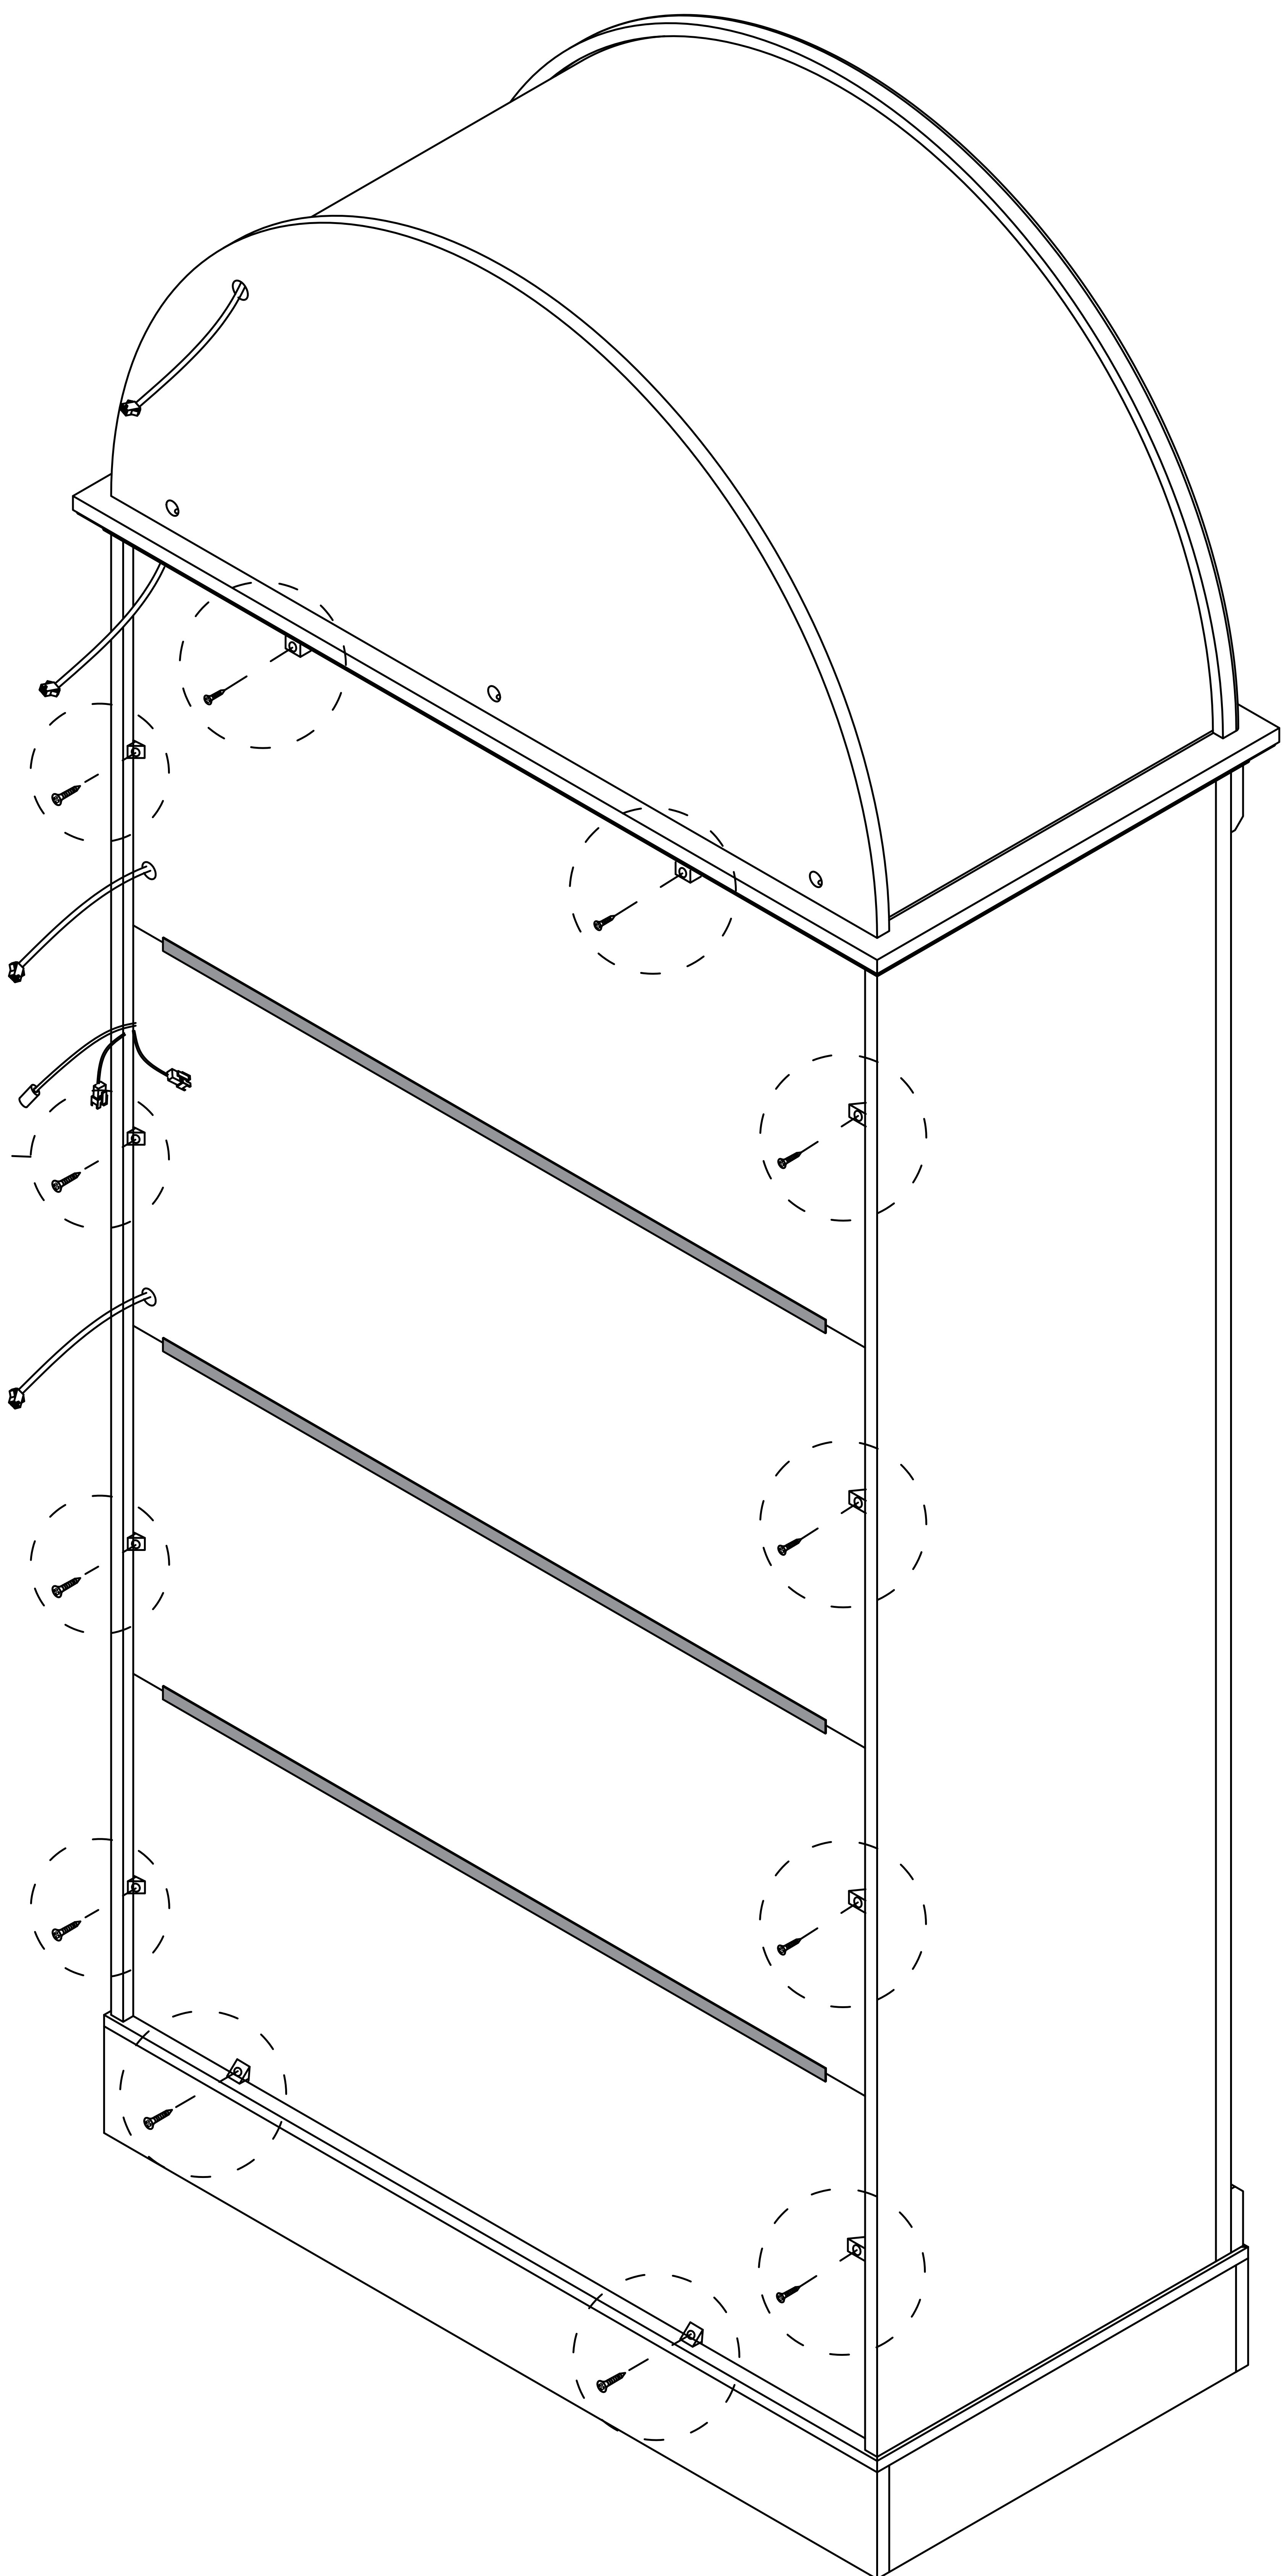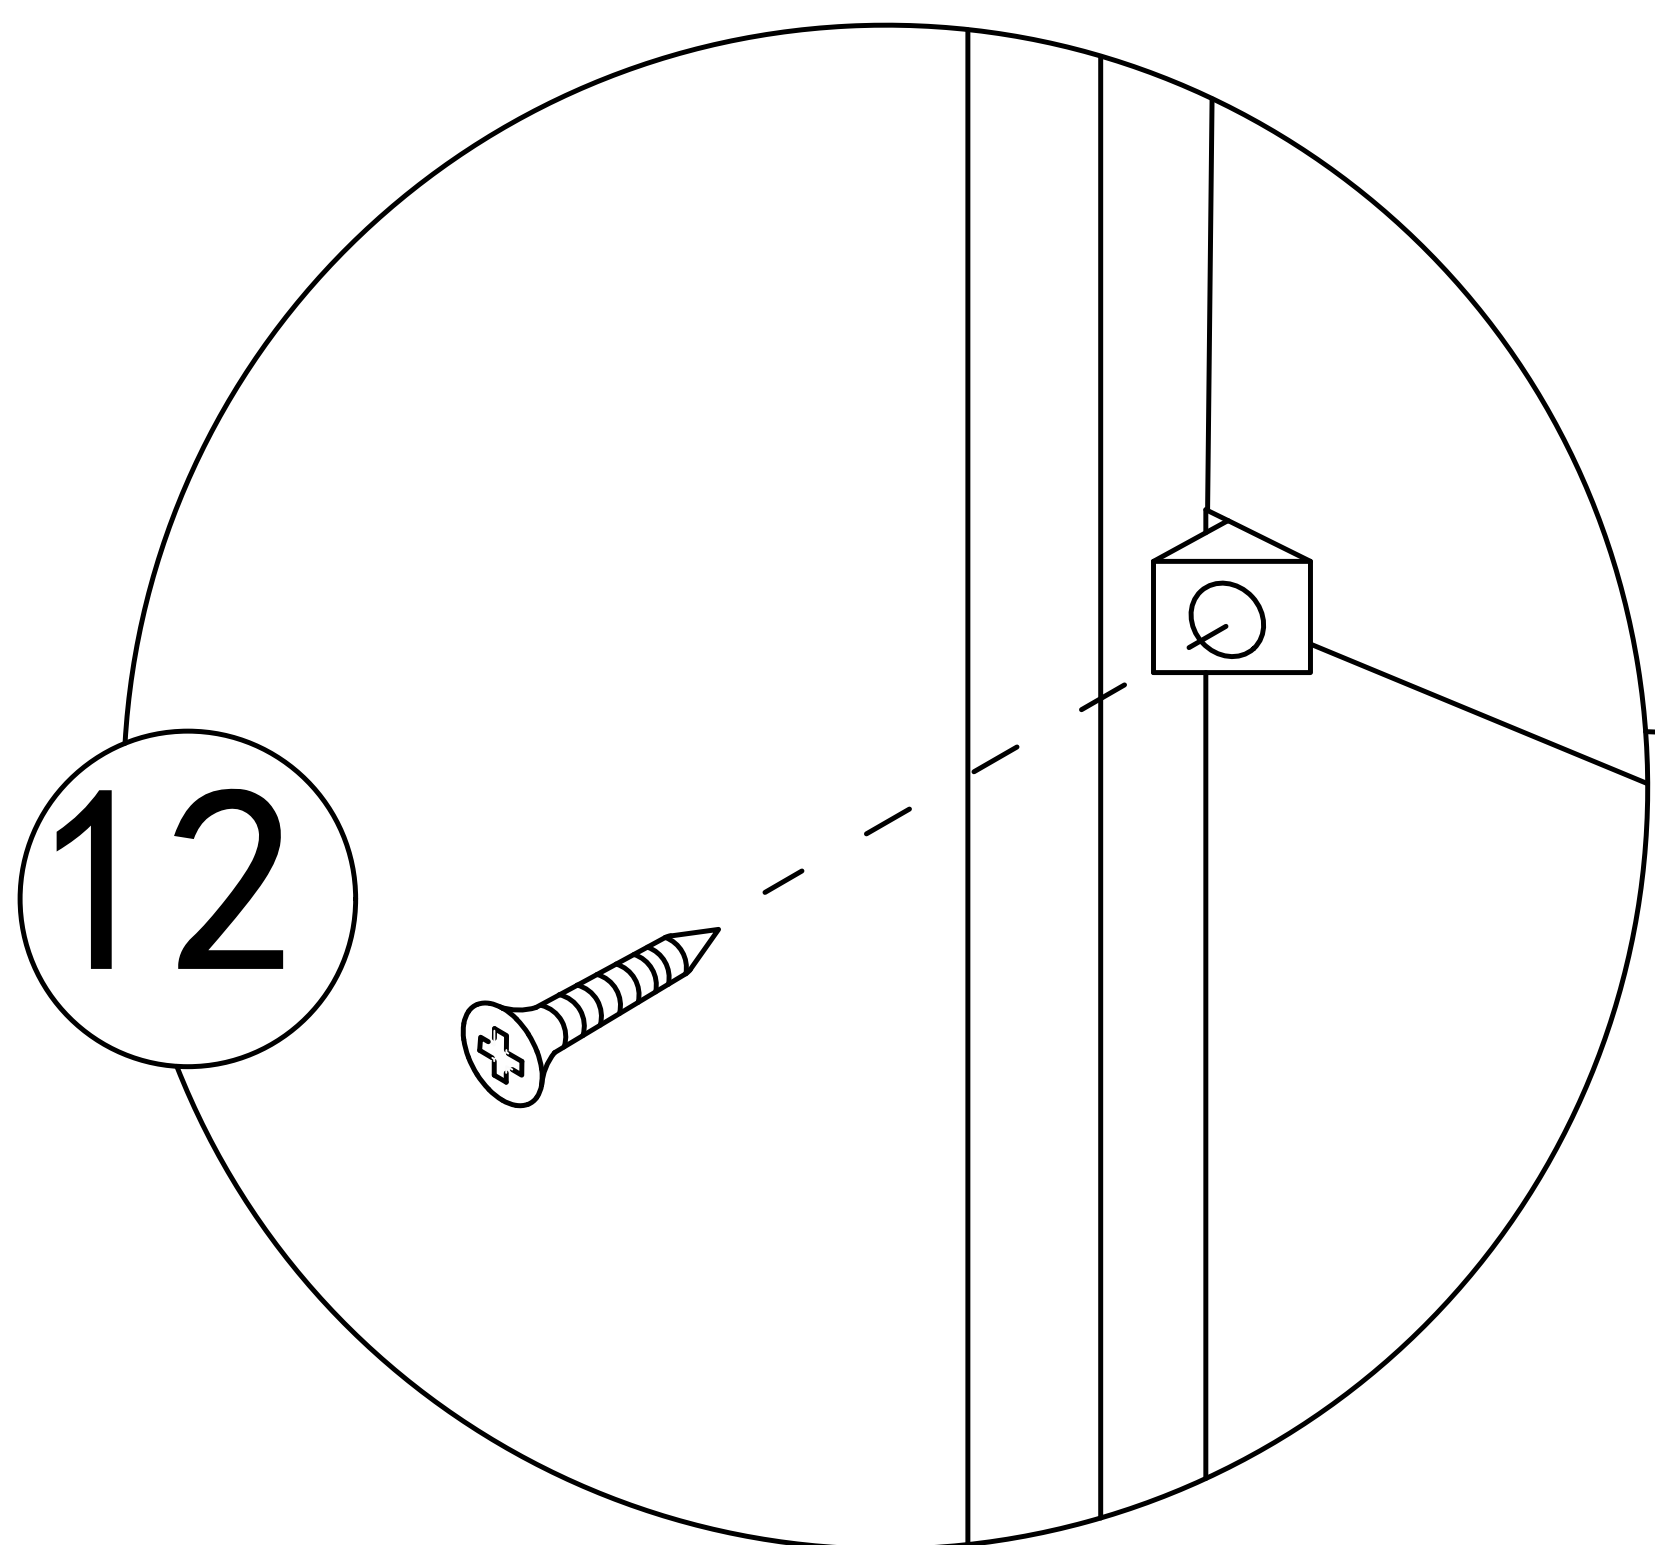


Step 42

13

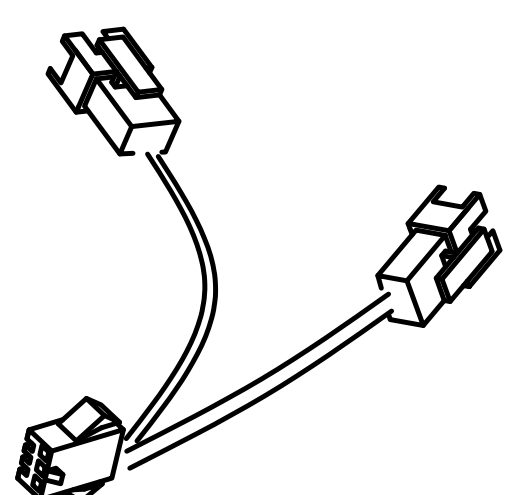

x2

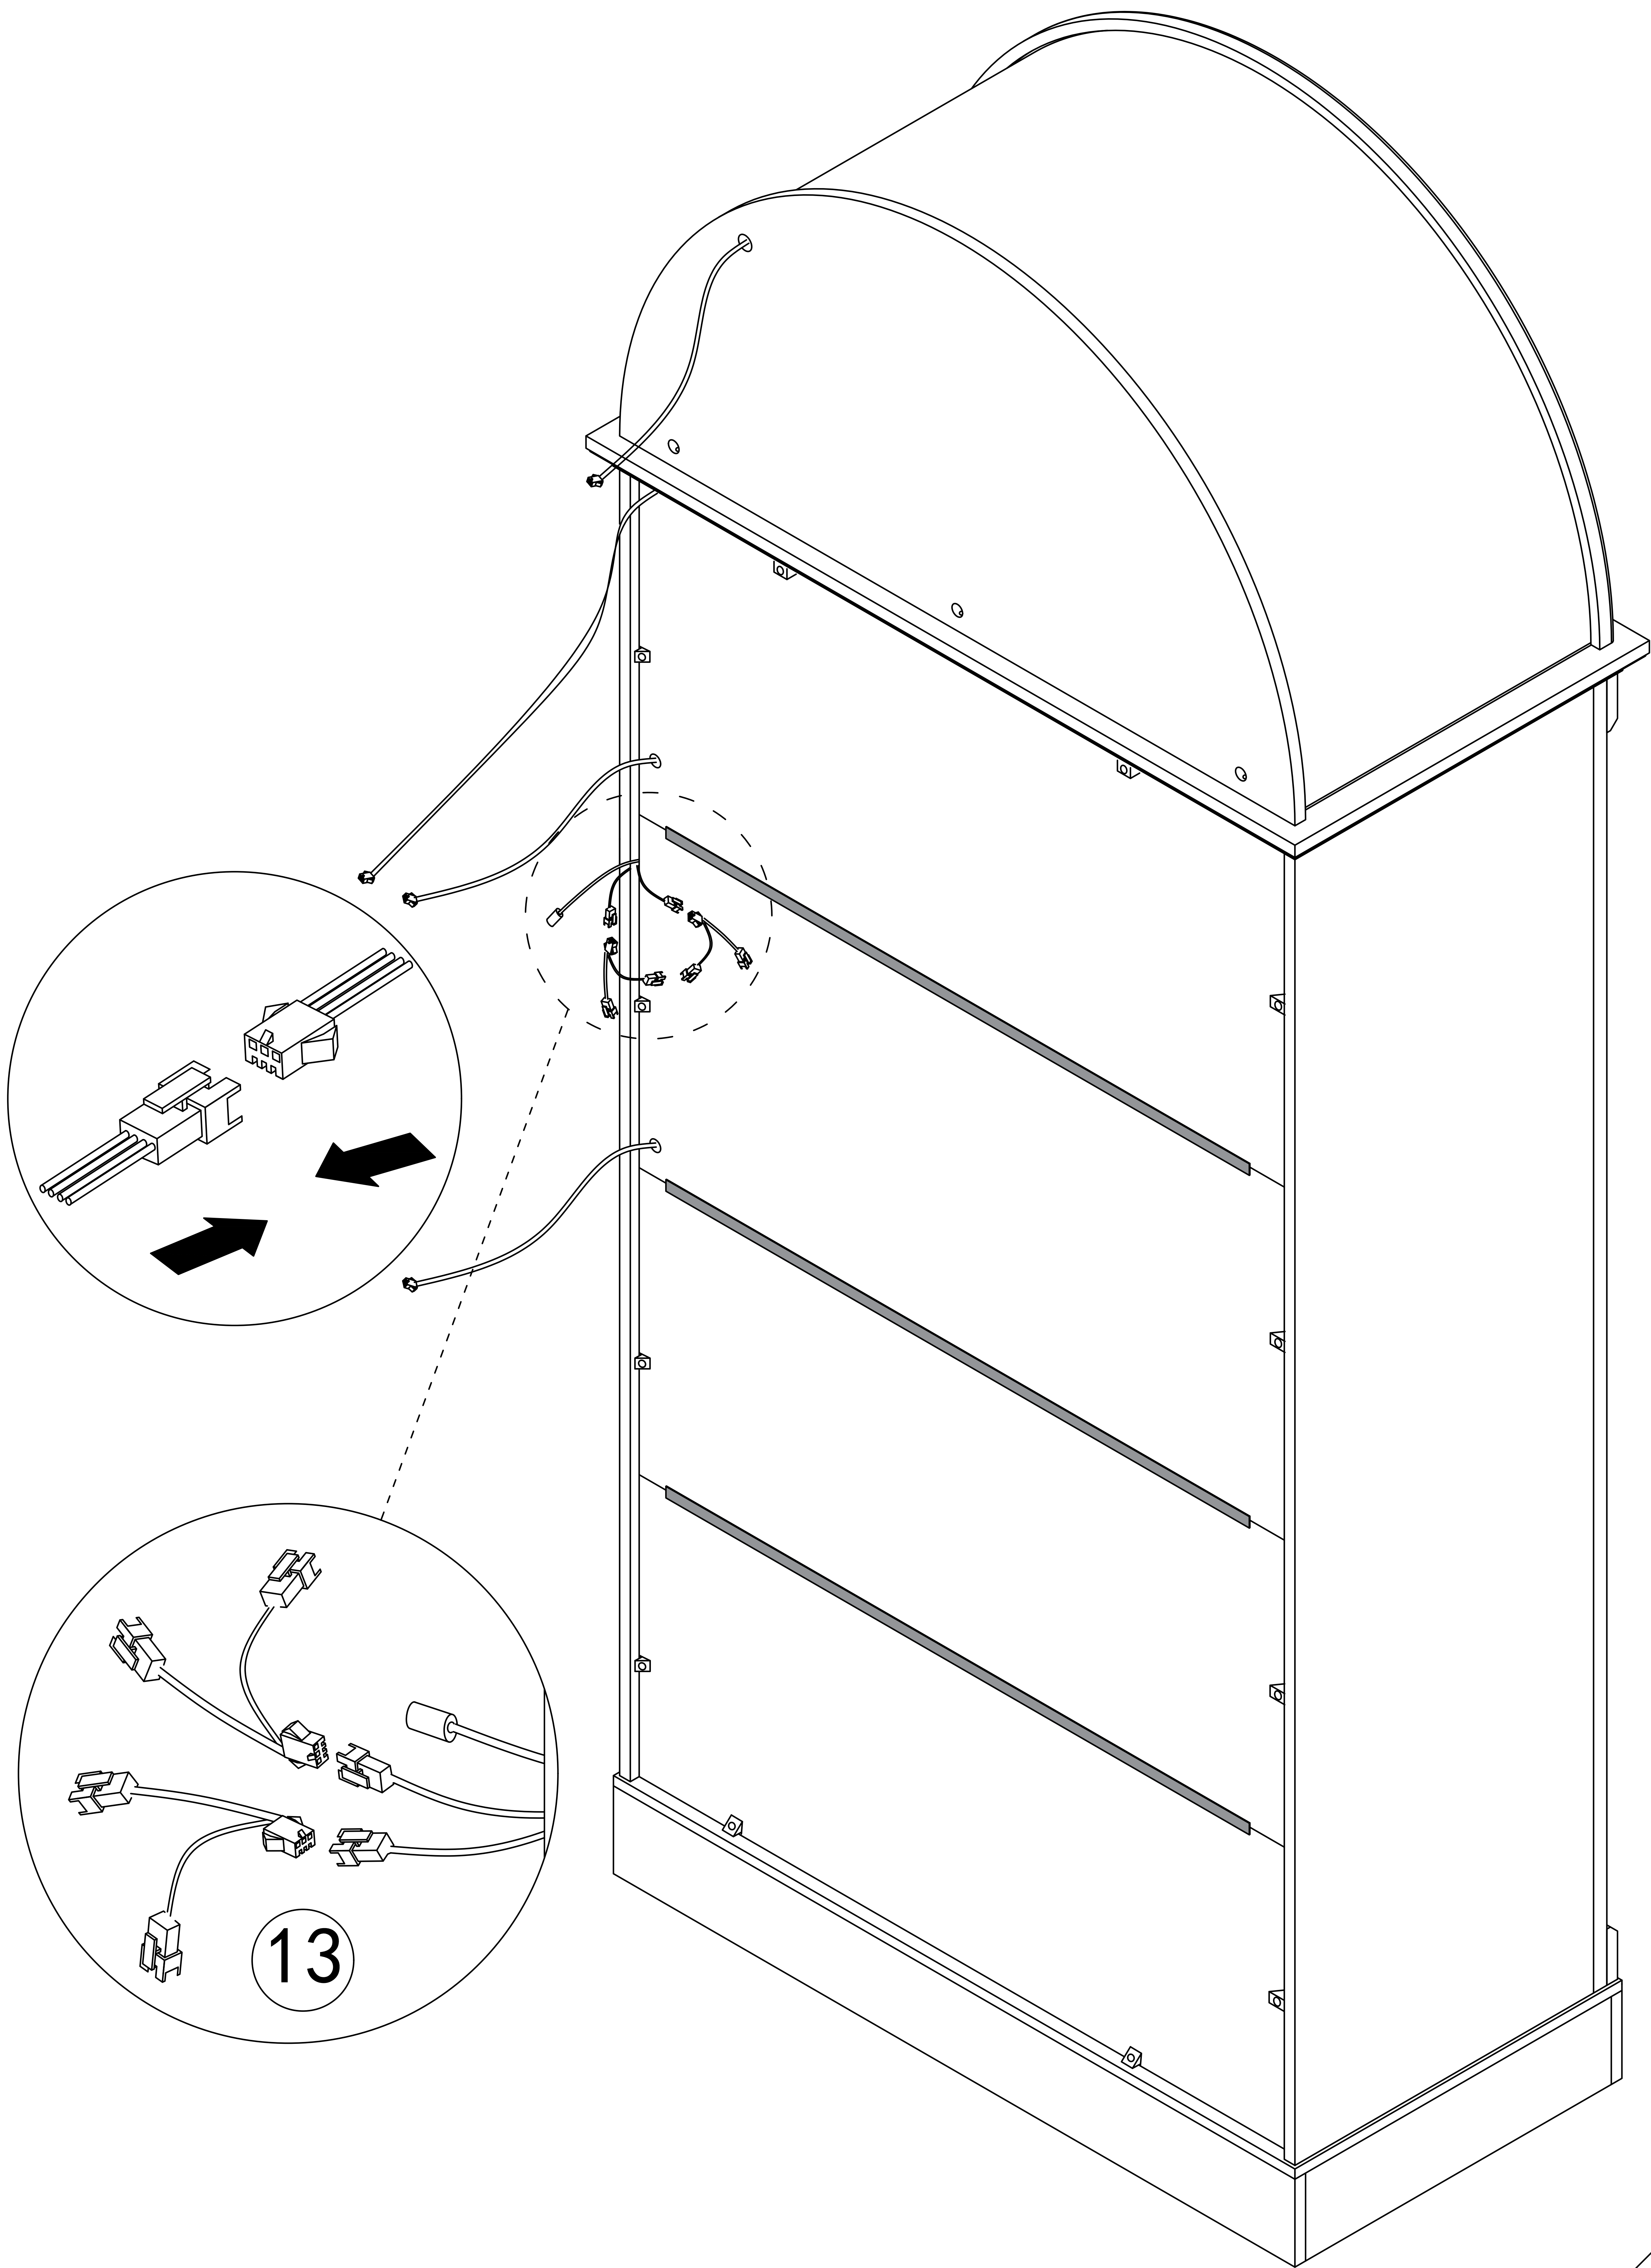


Step 43




Step 44

14

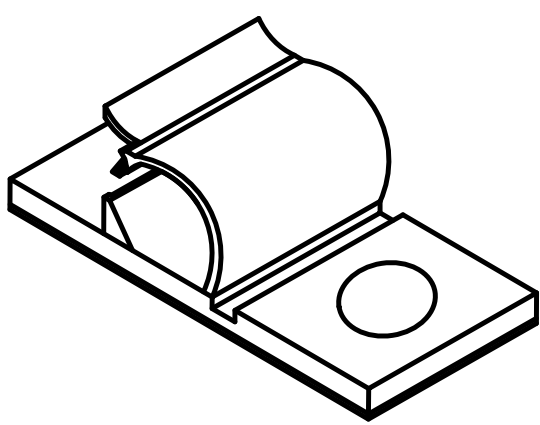


x3


15

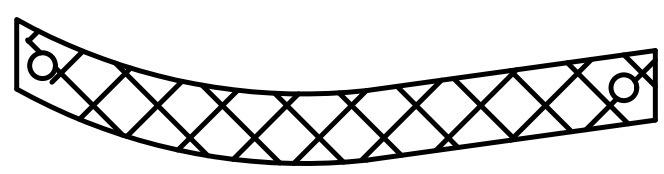

1pcs


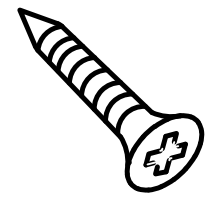


1pcs


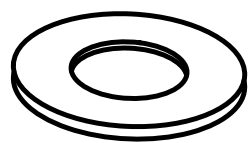


1pcs

15

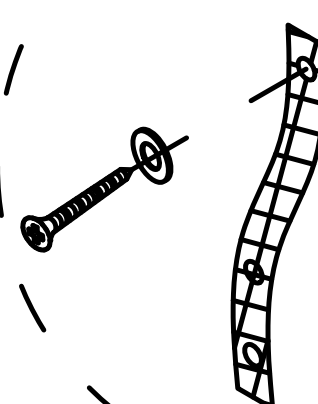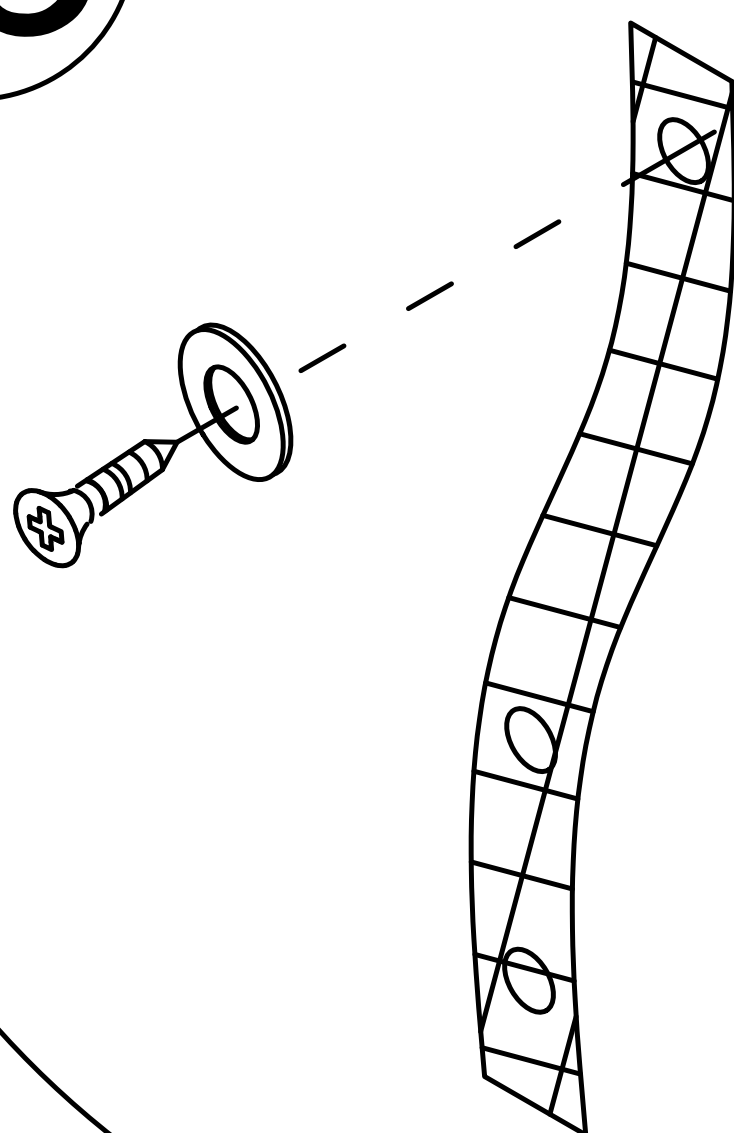


14

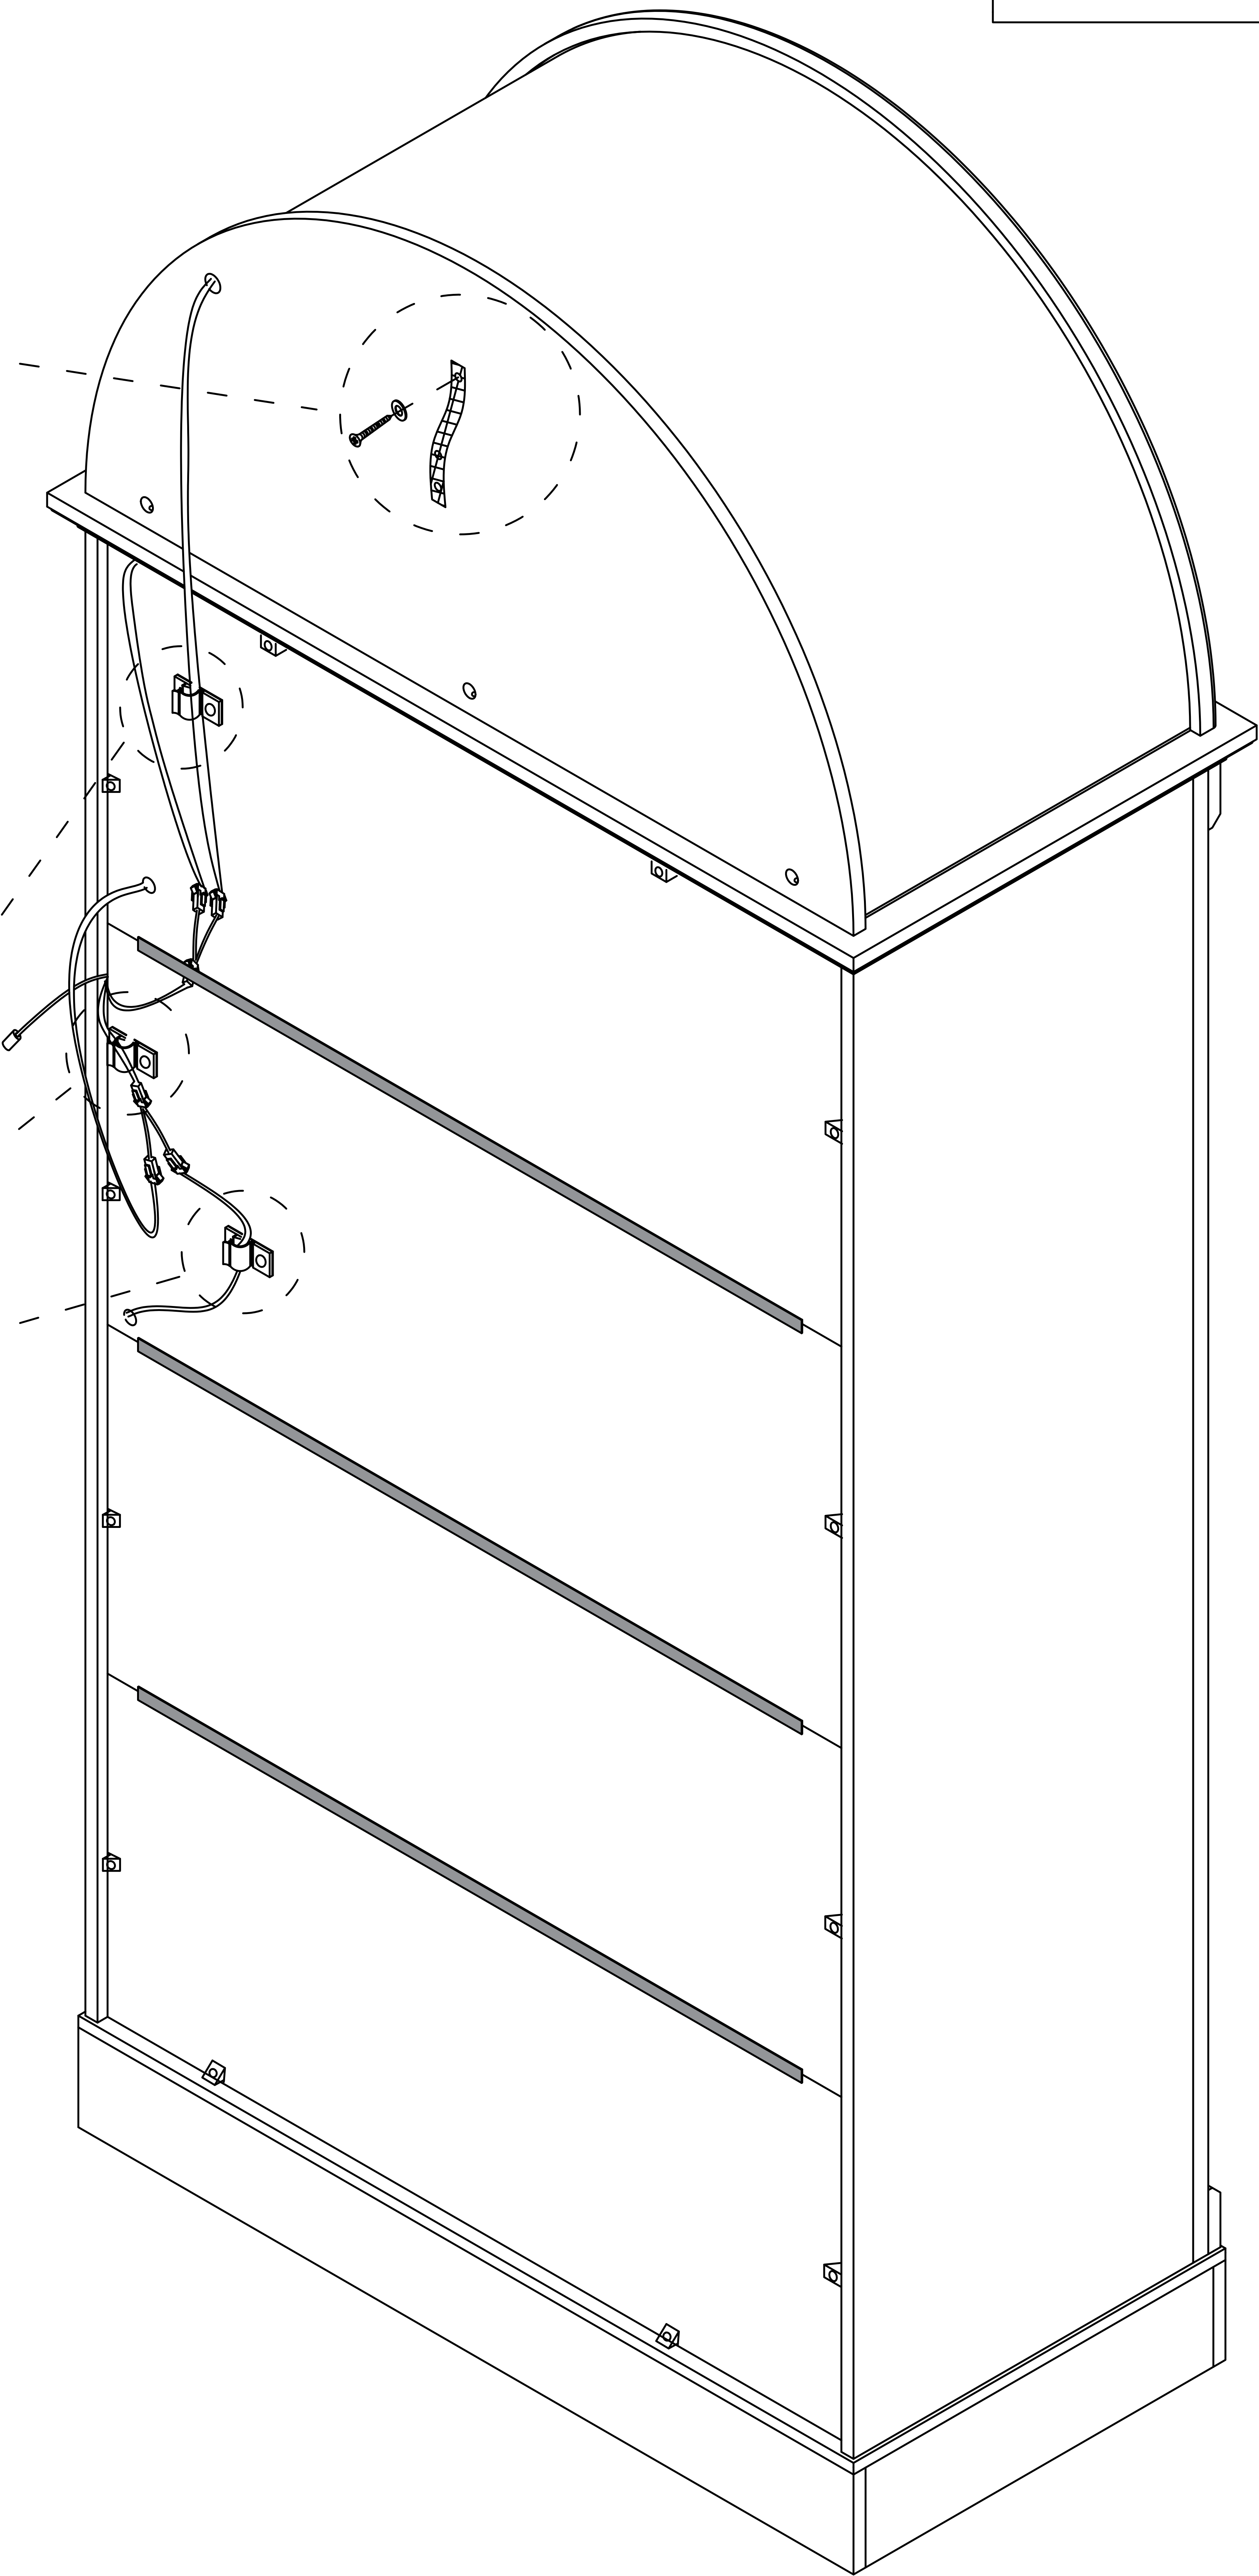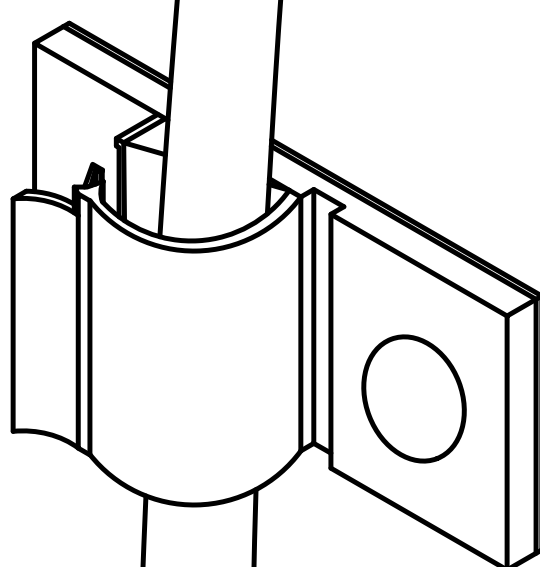


Step 45

use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.


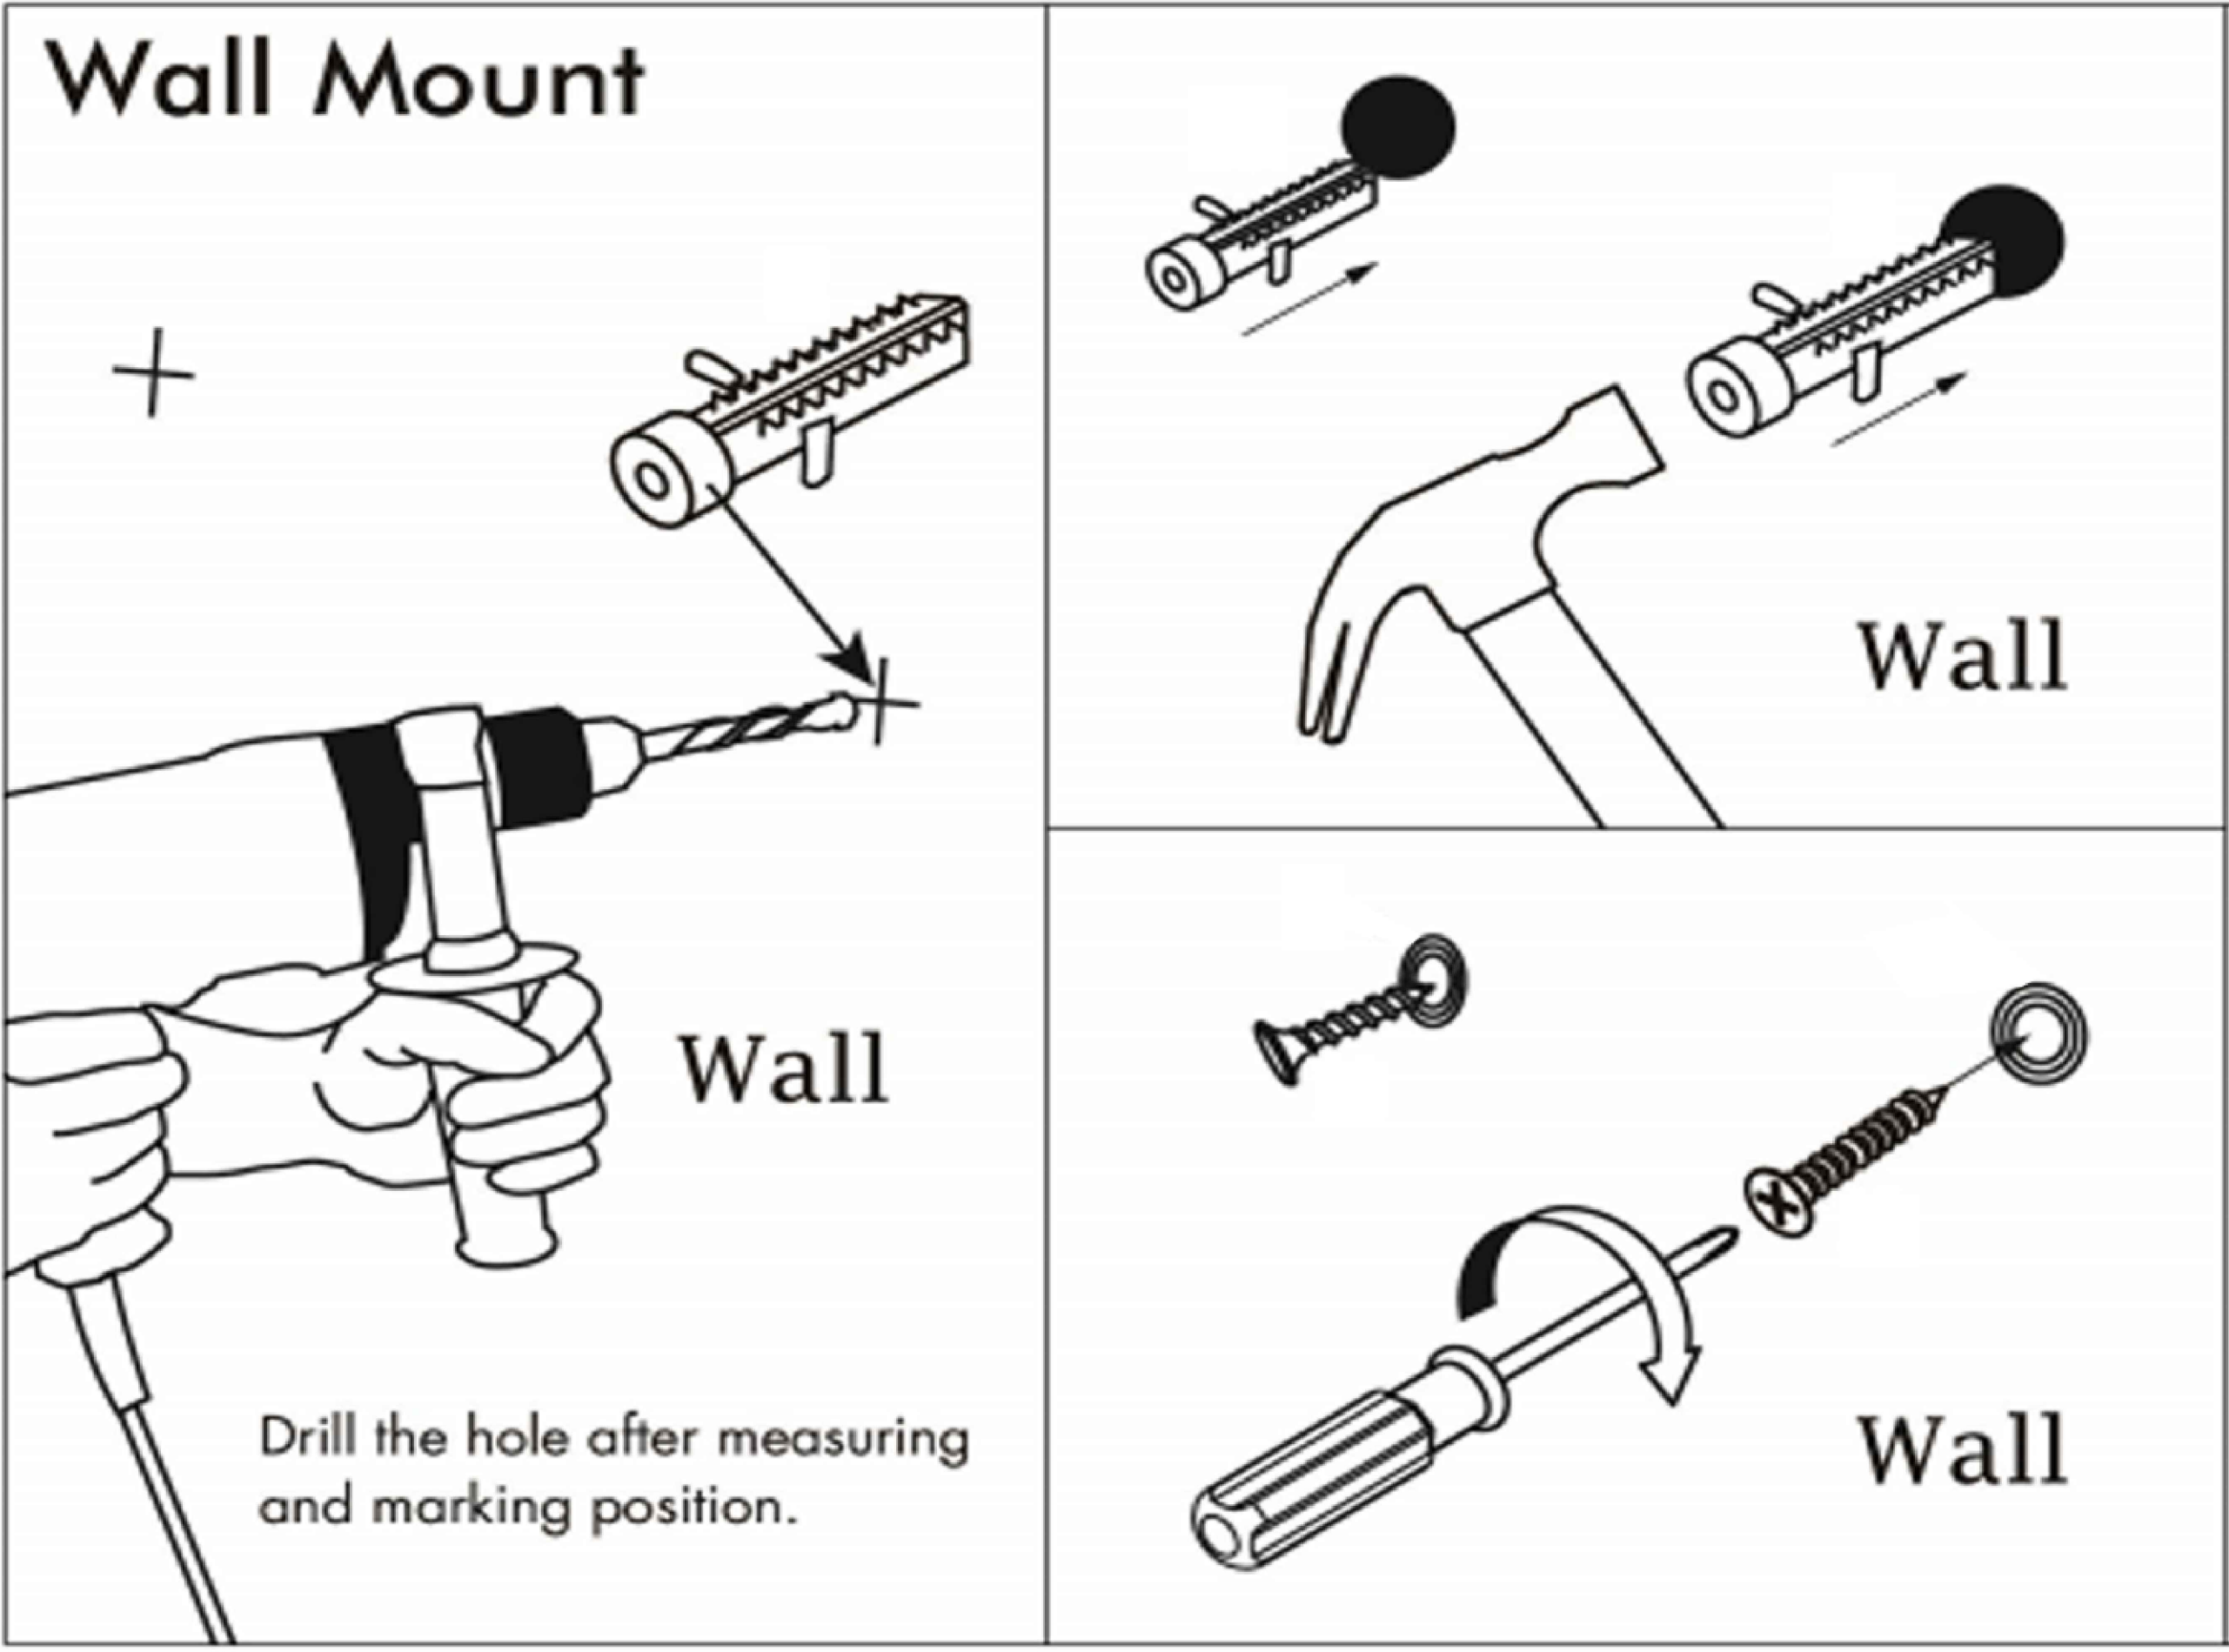


Use a tape drill to make holes in the wall that are suitable for the product screws.

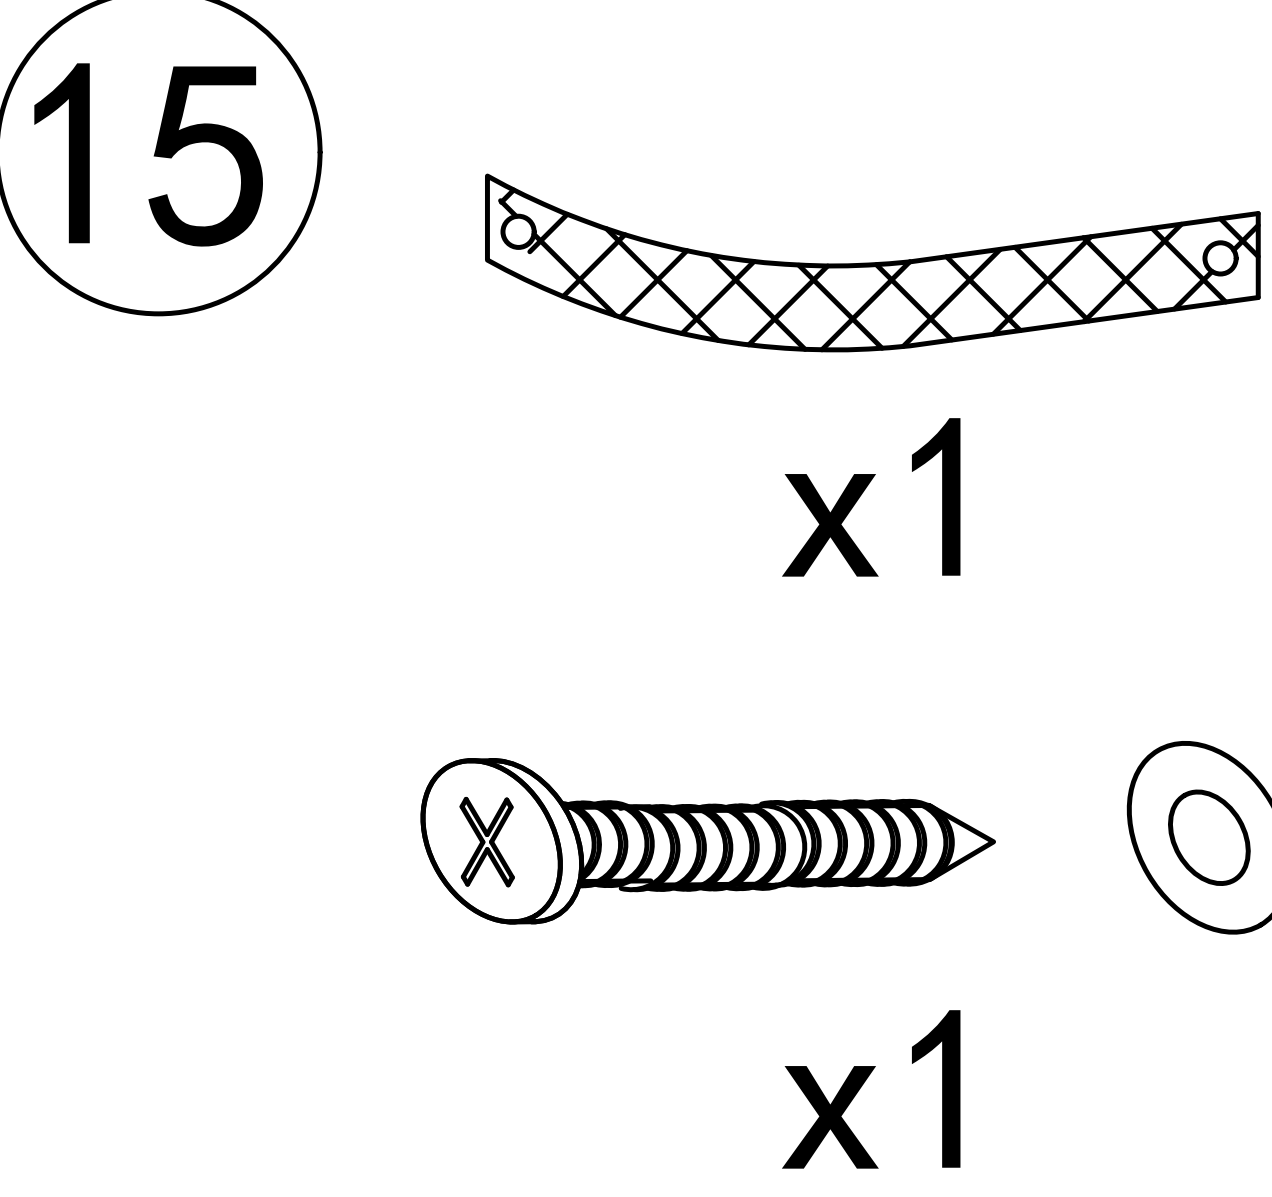


Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

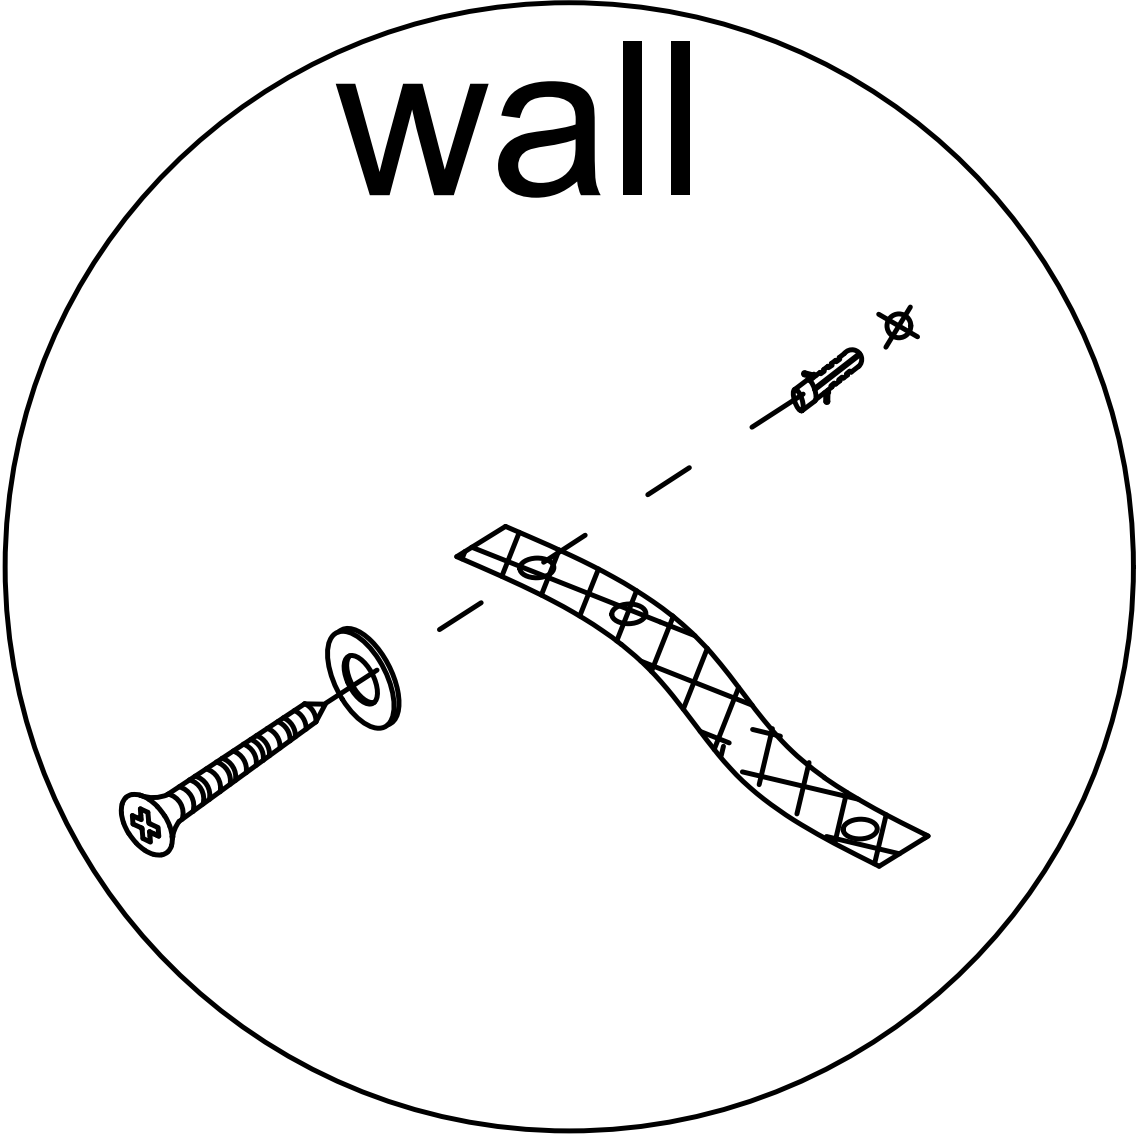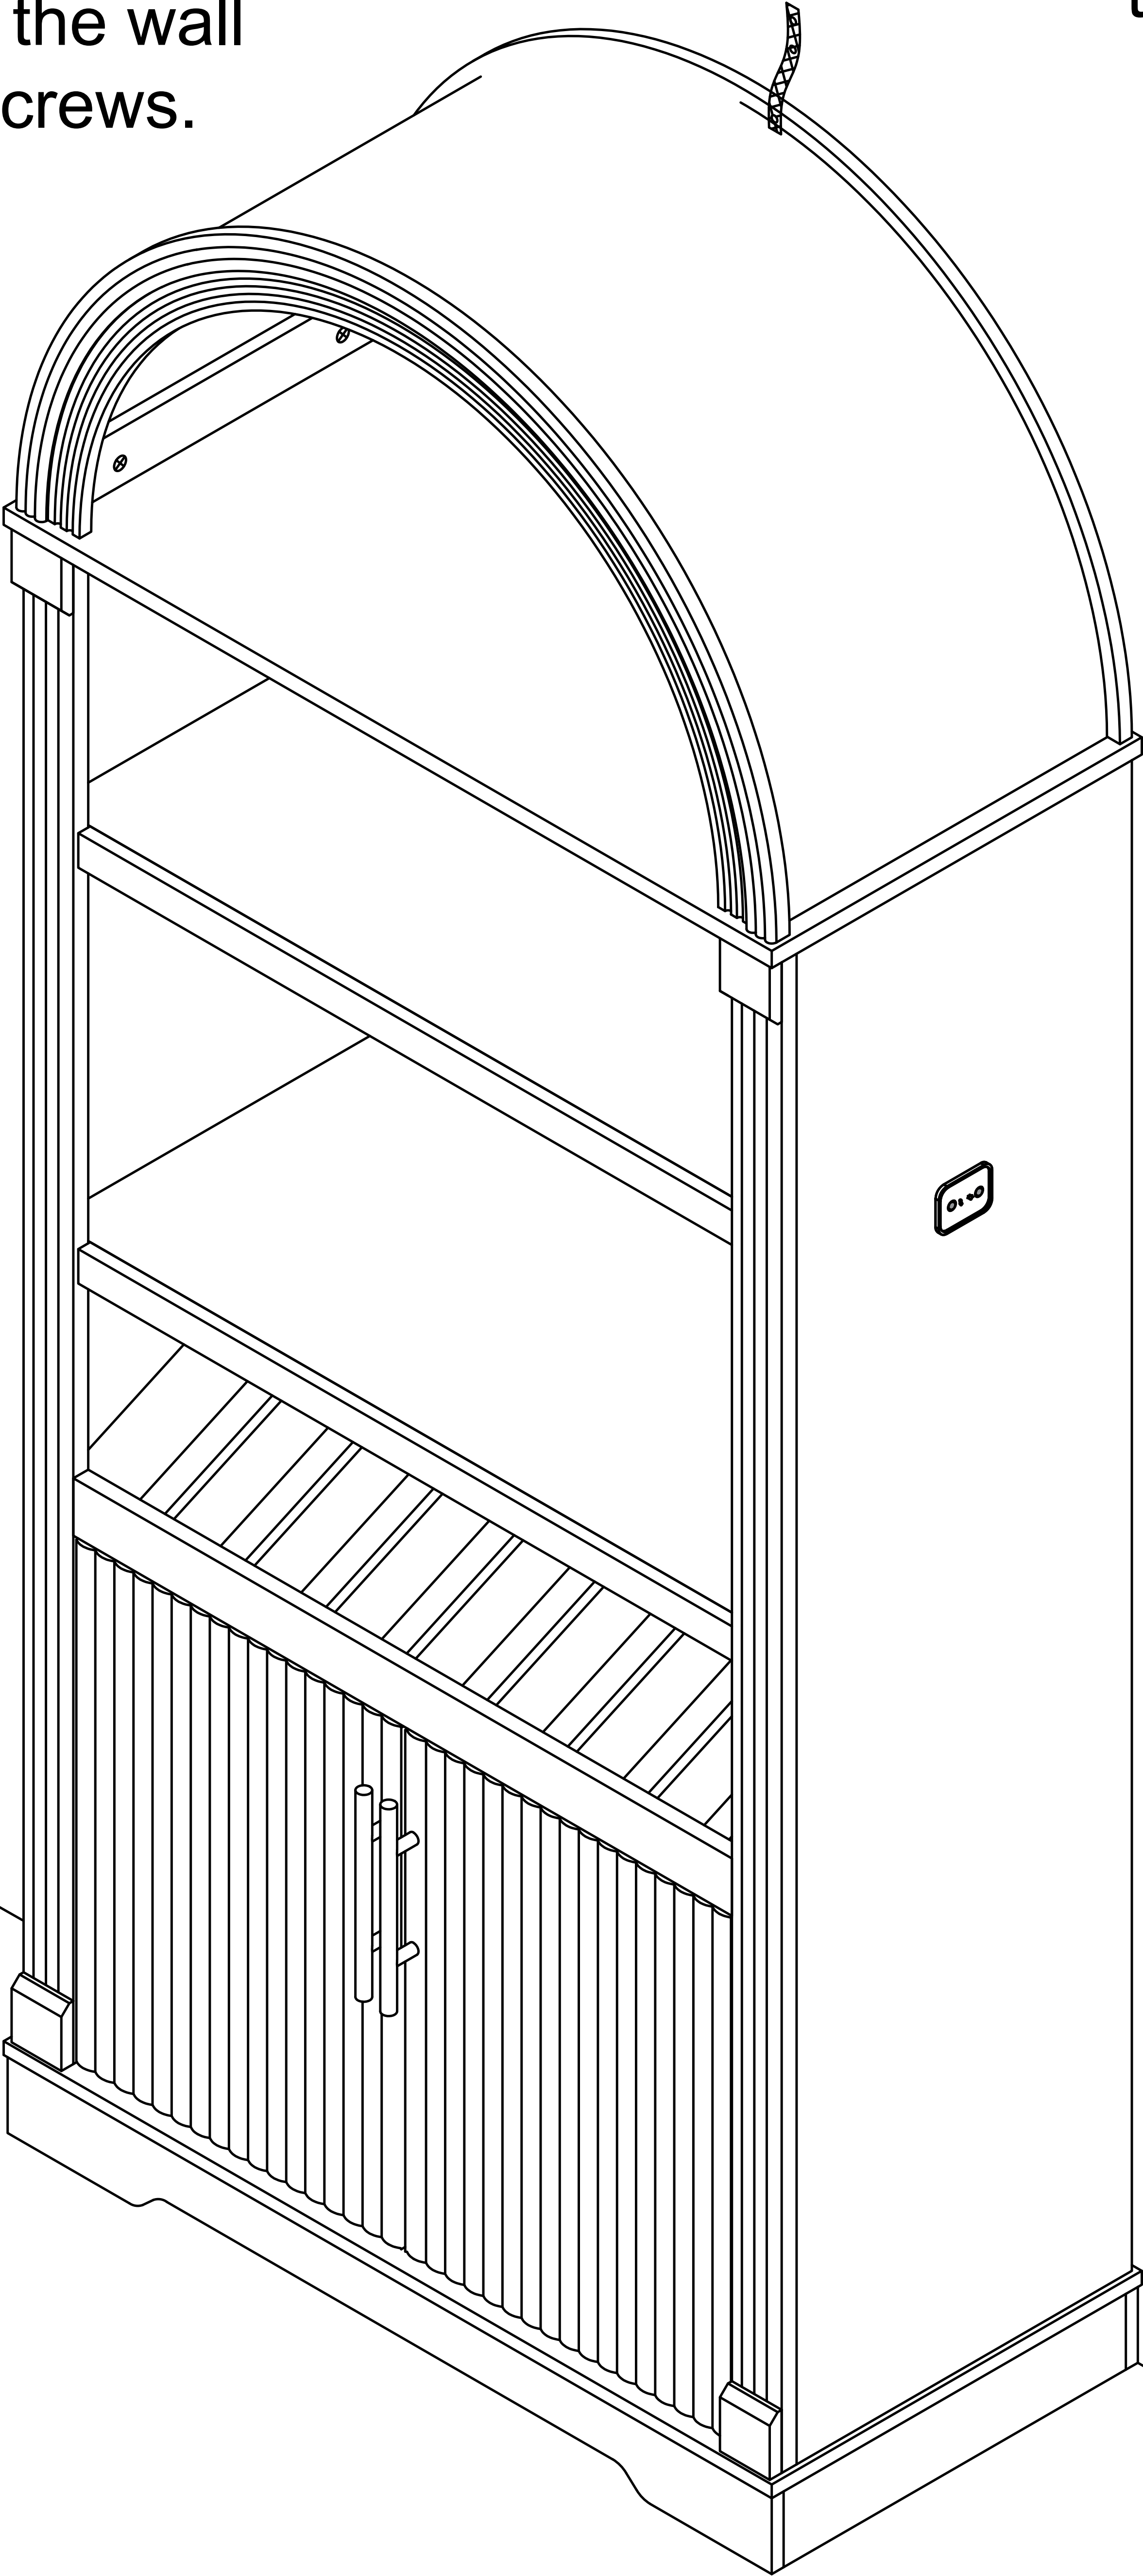

Step 46

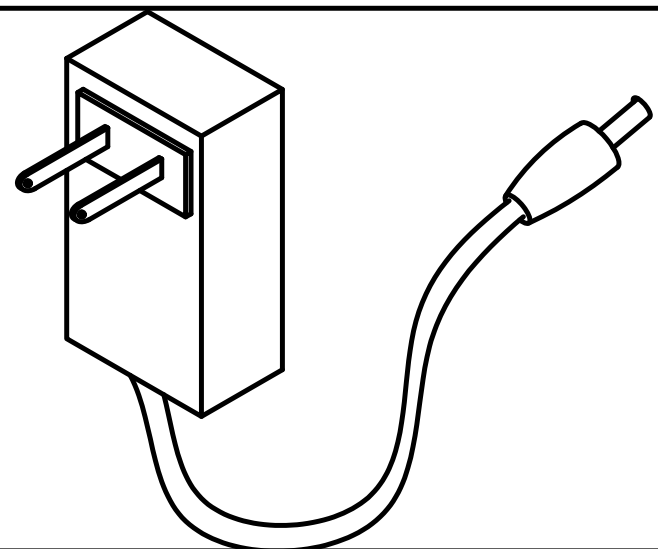

x1

