
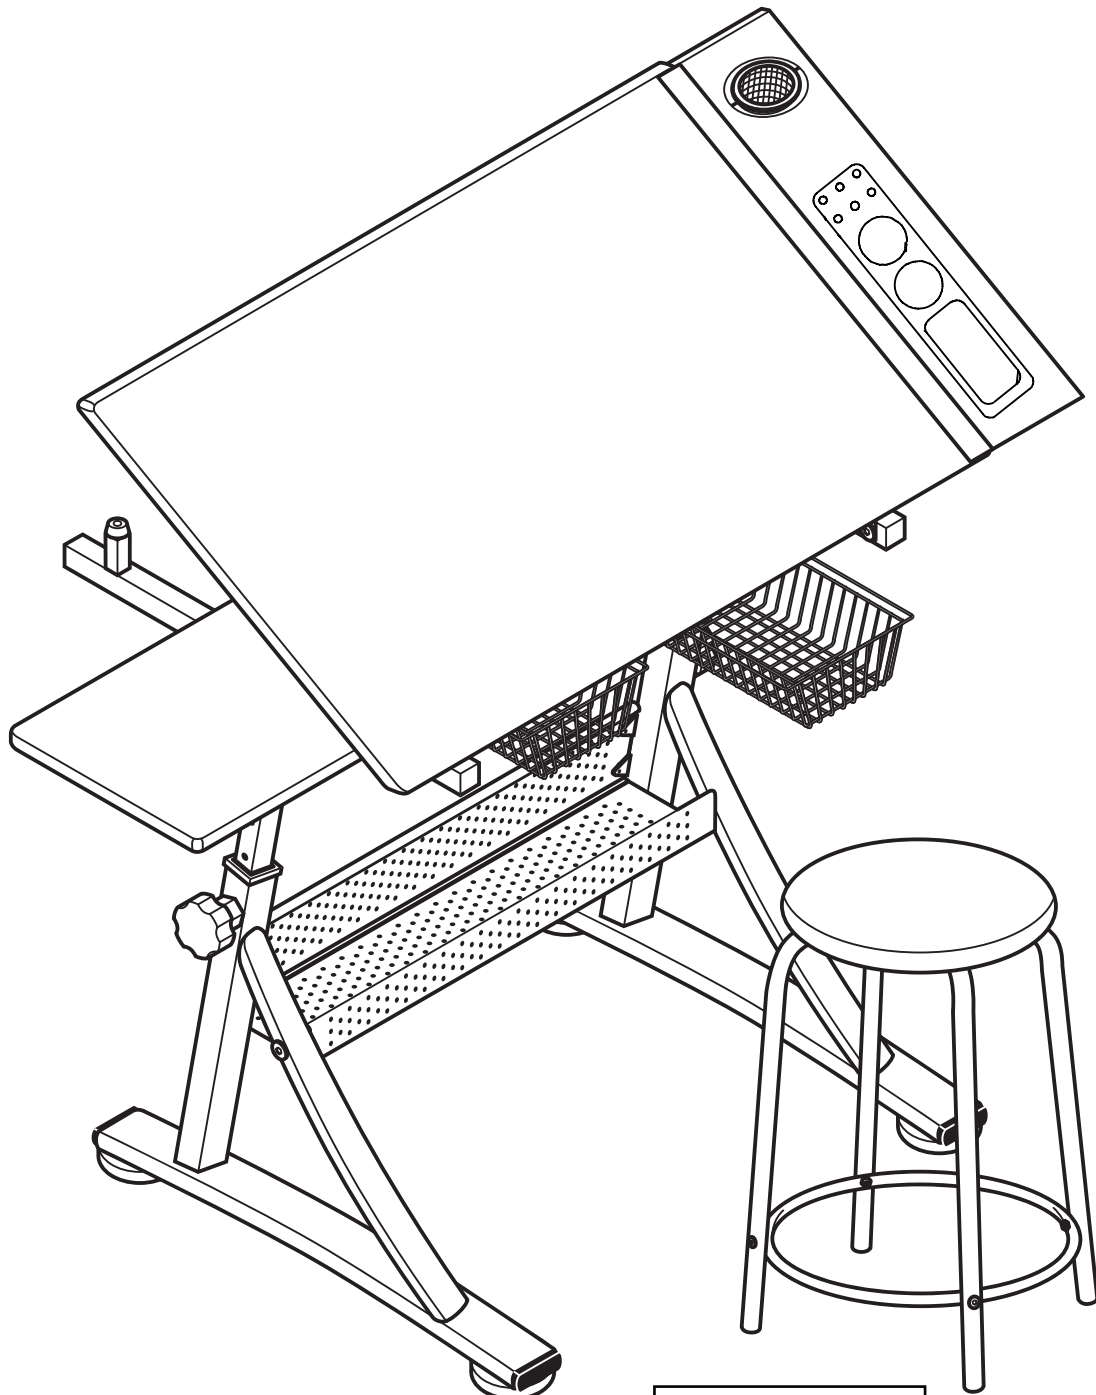
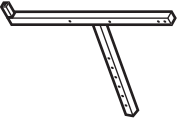
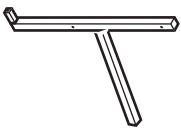
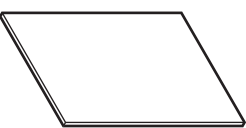



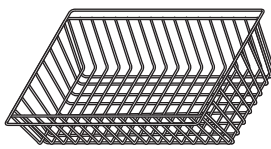






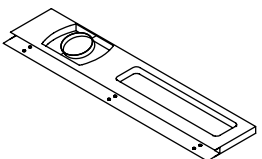

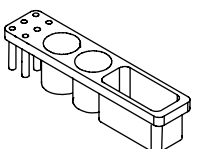







MoNiBloom


Installation instruction



				
1x1	2x1	3x1	4x1	5x1
				
7x1	8x1	9x1	10x1	
				
11x1	12x1	13x4	14x2	15x1
				
16x1	17x2	18x2	19x4	20x4
				
21x4	22x7 M6x40	23x2 M6x15	24x14 M6x12	26x8 M4x12
				
28x4	29x4 M4x14	30x3		
				
31x1	32x1	33x1	34x1	35x1
				
36x1	37x1	38x4 M6x35	39x4 M6x30	40x4


STEP 1

Do not fully tighten any bolt until step 4.

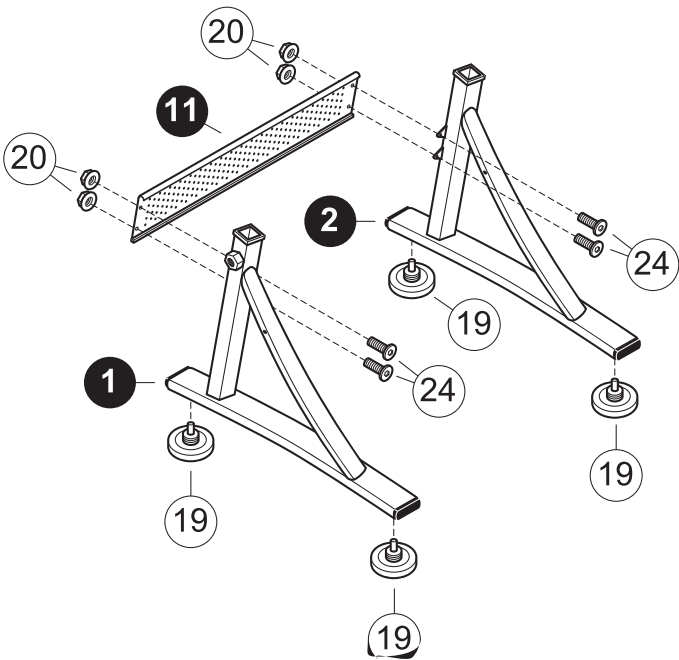


STEP 2

Screw Knobs(18) into first hole in Left and Right Arms(3 and 4).

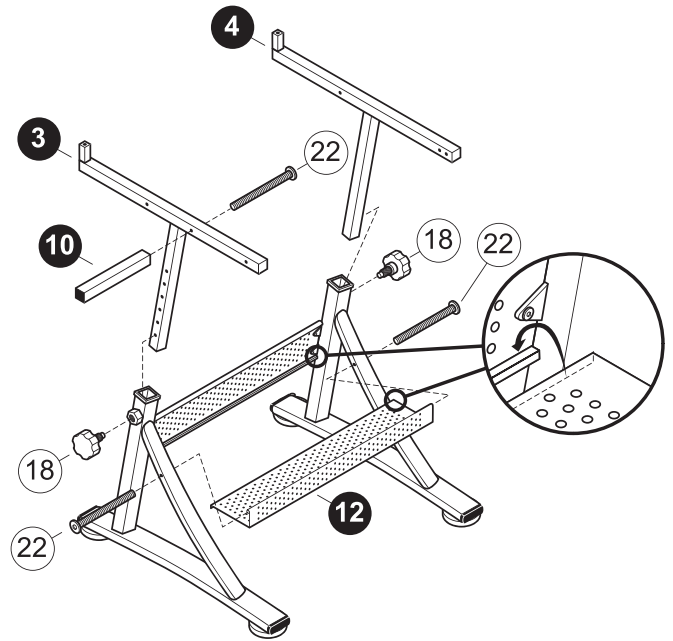


STEP 3

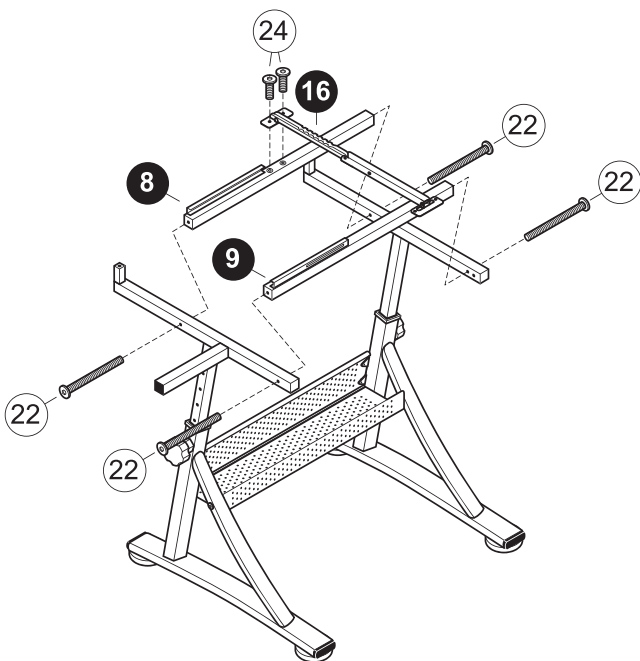


STEP 4

Repeat step to assemble two more Rails(13) on left side.

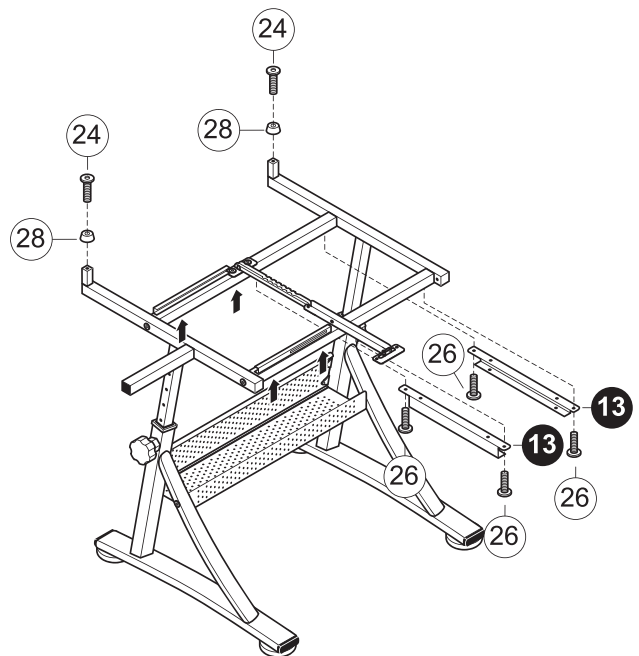


STEP 5

Insert Baskets(14) and Insert one Pin(21) into front holes in Rails to prevent Basket from falling out.

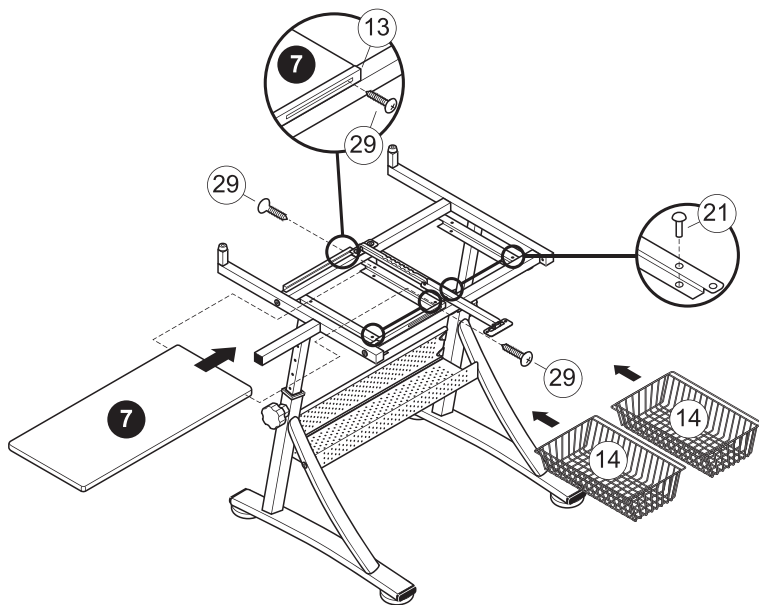


STEP 6

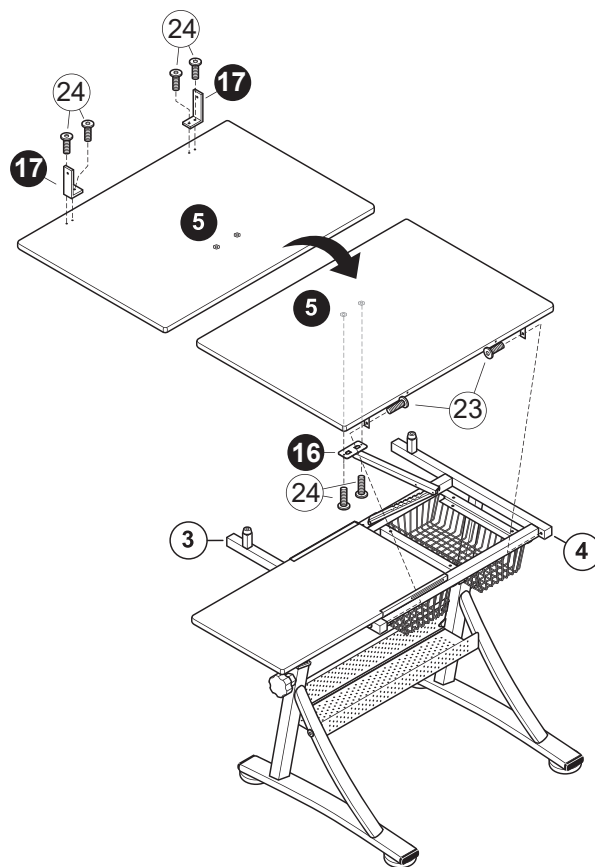


STEP 7

Slide Metal Tray(31) over edge of table, and secure using Allen Screws(30) (do not overtighten).

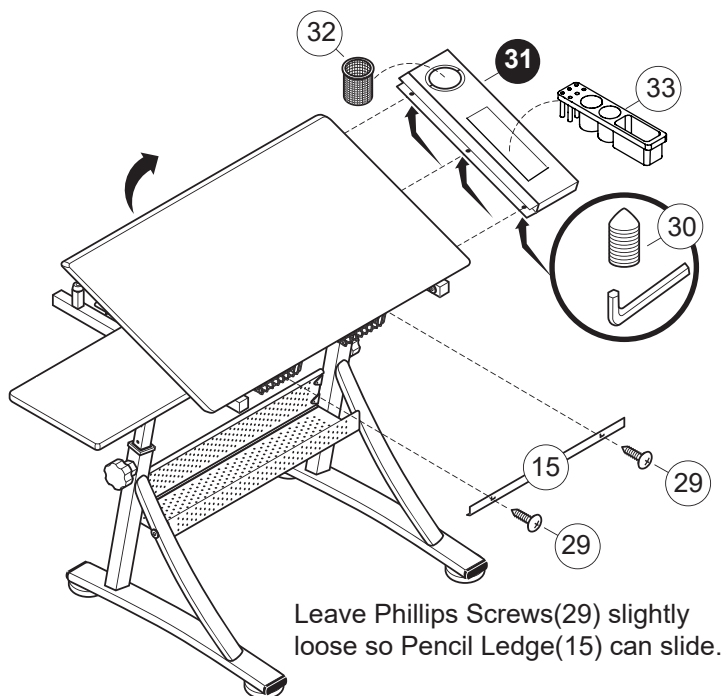

STEP 8

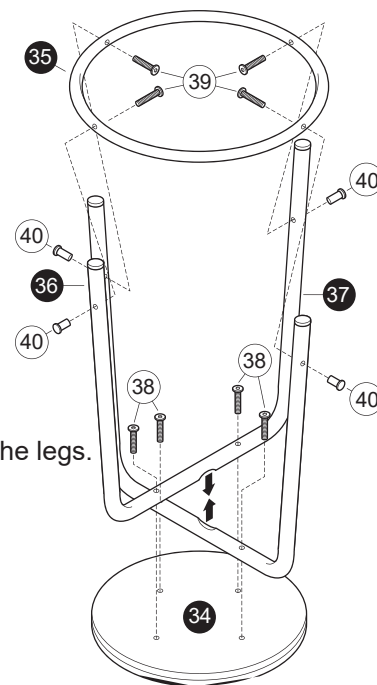

Note the curve on the legs.