

# ASSEMBLY INSTRUCTION

## BLACK/WALNUT - BS

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.

CAUTION : 1) DO NOT FULLY TIGHTEN THE NUTS OR SCREWS INITIALLY UNTILL ALL THE NUTS AND

2) SCREWS ARE ASSEMBLED. TO AVOID CAUSING DAMAGE TO THE TREAD, DO NOT OVER-TIGHTEN

THE NUTS OR SCREWS.


KEEP ALL HARDWARE PARTS OUT OF RECH OF CHILDREN.

### PARTS LIST


| NO | DESCRIPTION            | QTY |
|----|------------------------|-----|
| A  | BACK REST              | 1   |
| B  | FRAME LEG (L&R)        | 2   |
| C  | CORNER BLOCK           | 4   |
| D  | CUSHION                | 1   |
| E  | FRONT STRETCHER (LONG) | 1   |
| F  | BACK STRETCHER (SHORT) | 1   |
| G  | CENTER STRETCHER       | 1   |

### HARDWARE LIST

| NO | DESCRIPTION            | QTY |
|----|------------------------|-----|
| 1  | JCBC BOLT M6 x 30mm    | 4   |
| 2  | JCBC BOLT M6 x 50mm    | 6   |
| 3  | SPRING WASHER M6       | 10  |
| 4  | FLAT WASHER M6 x 13mm  | 10  |
| 5  | WOOD DOWEL Ø8 x 25mm   | 2   |
| 6  | ALLEN KEY M4 x 100mm   | 1   |
| 7  | CSK-CB SCREW M4 x 25mm | 8   |
| 8  | CSK-CB SCREW M4 x 32mm | 4   |
| 9  | CSK-CB SCREW M4 x 45mm | 4   |

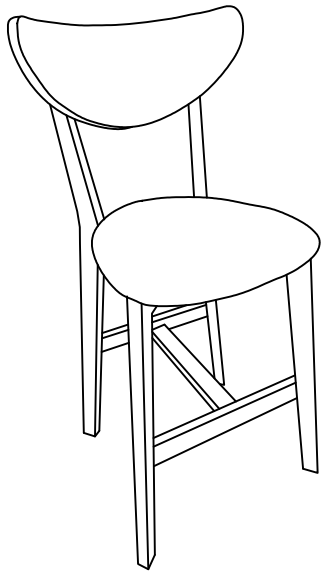


### STEP 1

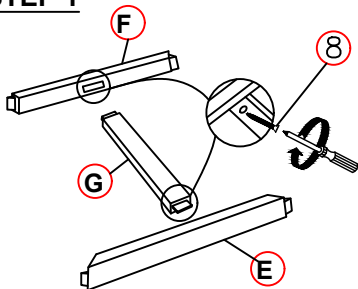


### STEP 2

LEFT LEG

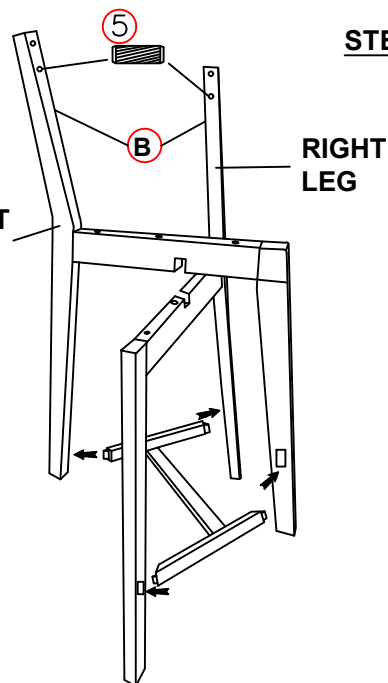

### STEP 3

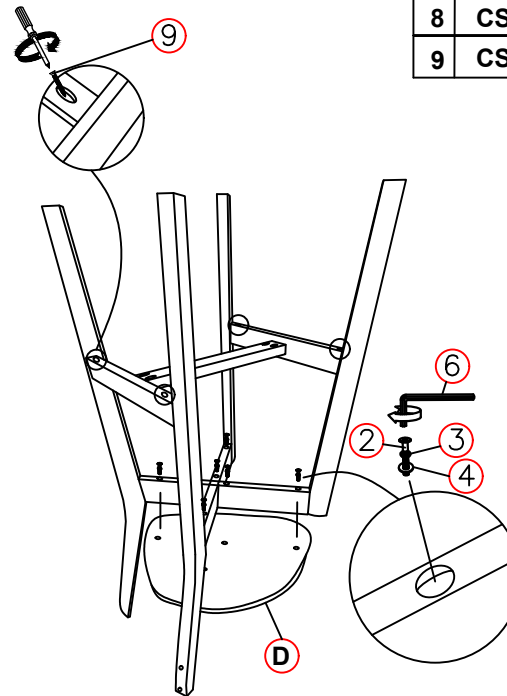

### STEP 4

