

## BILLIARD FIXTURE INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them a later date.

### CAUTION


Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

### ASSEMBLY AND INSTALLATION VERSION 1

- 1, Attach two Screws-1 outward through the CROSS BAR, spin the Hex nut to the Screw-1, then attach the CROSS BAR(6) to the OUTLET BOX by the two MOUNTING SCREWS.
  - 2, Make wire connections:
    - Smooth wire (w/markings) from the light to black wire from power source.
    - Ribbed wire (w/o marking) from the light to white wire from power source
    - Attach the ground wire to the cross bar with a green ground screw. Carefully tuck wire back into the OUTLET BOX
  - 3, Place the Canopy against the Outlet box, secure with the Ball nut.
  - 4, Screw the hook ring onto the Nipple.
  - 5, Attach the Shade ( SHADE SOLD separately) to the Socket and screw with the Socket Ring.
  - 6, Install bulbs. (Please do not exceed the maximum capacity which is recommended on the sockets).
- INSTALLATION IS NOW COMPLETED.

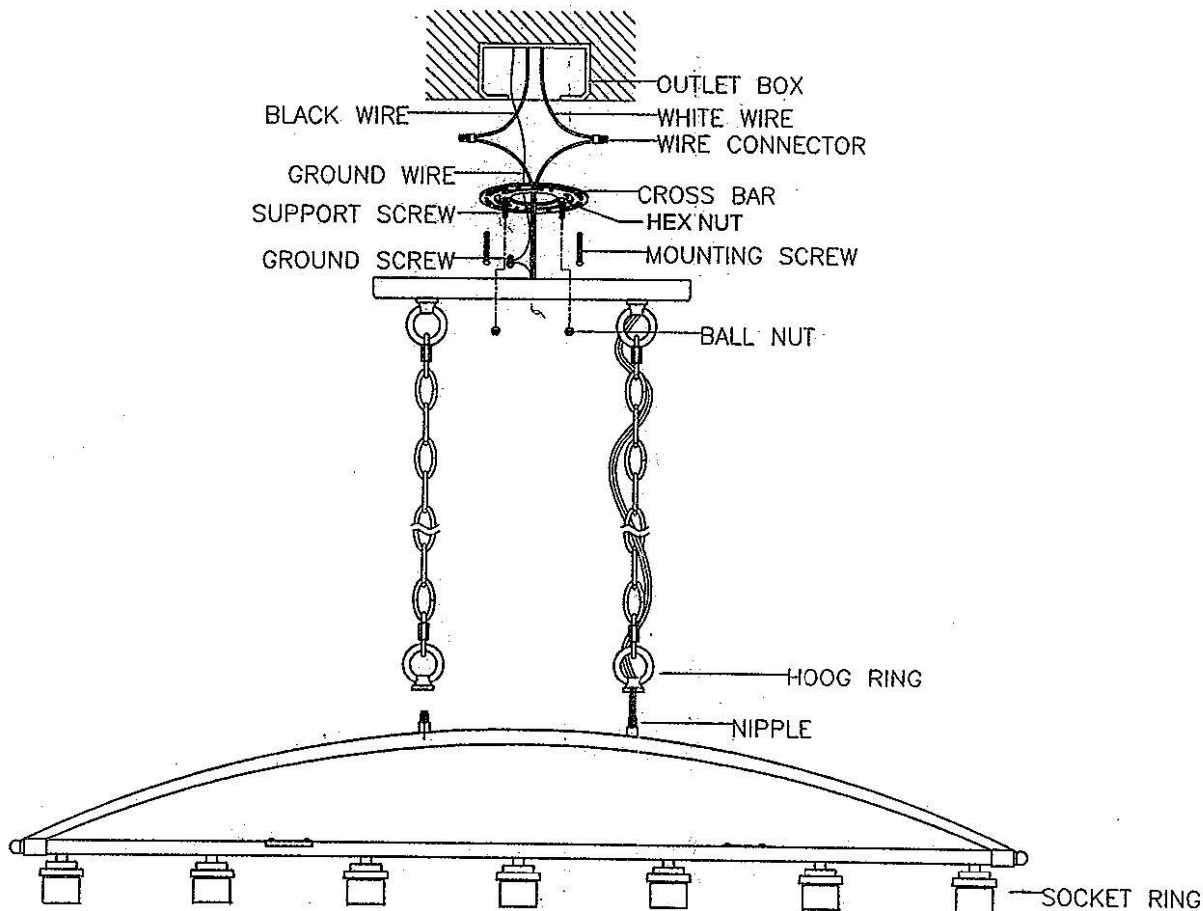

VERSION 1

ASSEMBLY AND INSTALLATION VERSION 2

- 1, Connect the Pipe (1),(2),(3),(4),(5) together with the fixture. Then screw with the Swivel.
- 2, OUTLET BOX by the two MOUNTING SCREWS.
- 3, Screw the butterfly nut, key washer and metal washer from the threaded tube.
- 4, Make wire connections:
  - Twist together the white wire from the fixture with the white wire from outlet box. Cover with wire connector
  - Twist together the black wire from the fixture with the black wire from outlet box. Cover with wire connector
  - Loop the GROUND WIRE to CROSS BAR with a GREEN SCREW.
- 5, Place the CANOPY against the OUTLET BOX by screwing the Ball Nut
- 6, Attach the SHADE( not included) onto the SOCKET , screw SOCKET RING tightly .
- 7, Install bulbs.(Please do not exceed the maximum capacity which is recommended on the sockets).

INSTALLATION IS NOW COMPLETED.

