
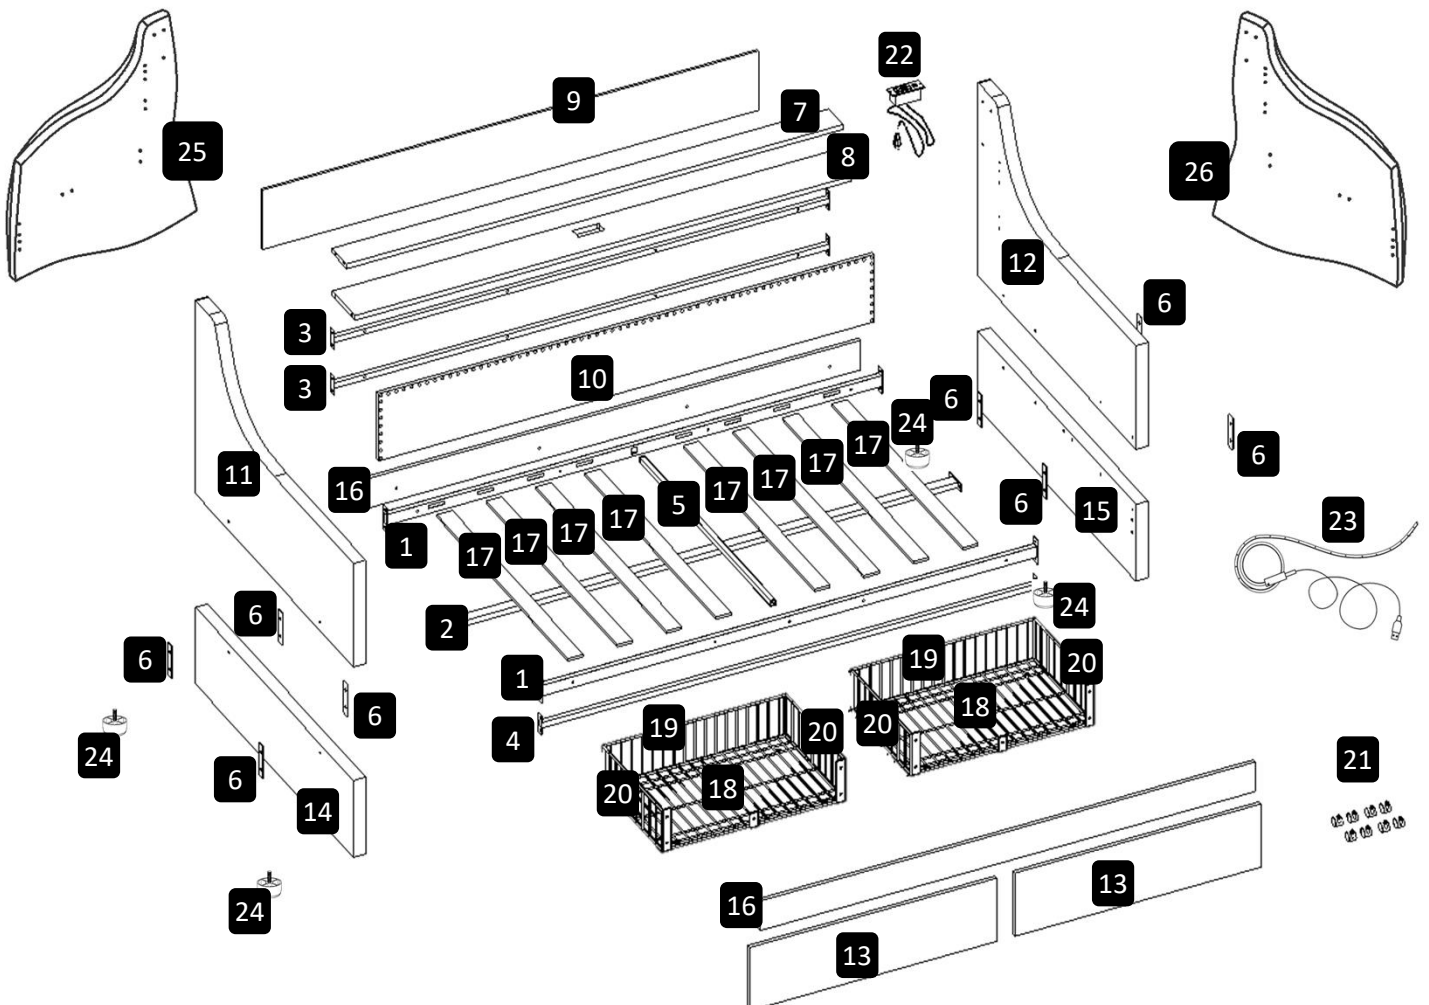
















ASSEMBLY INSTRUCTION

TIPS








1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

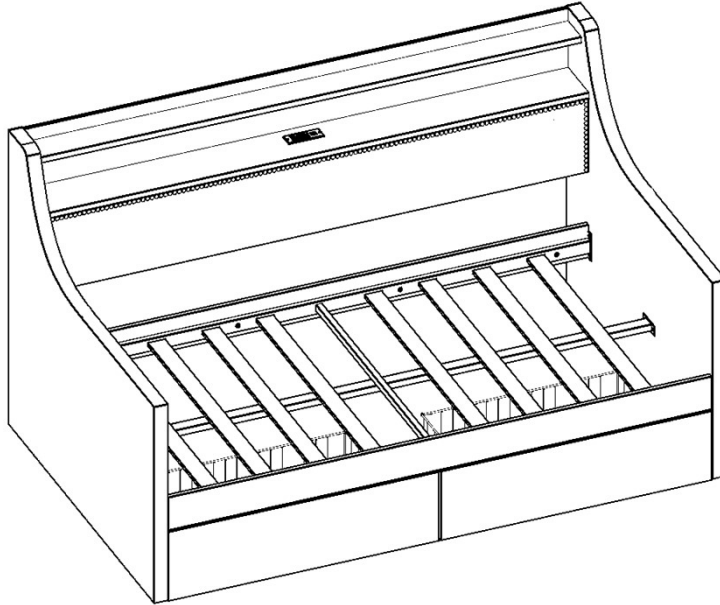



Part List

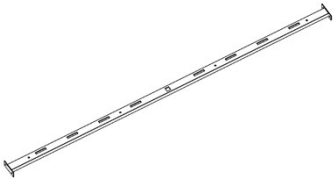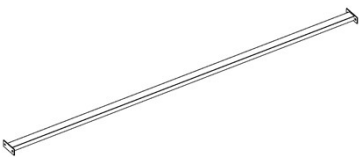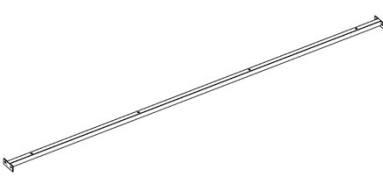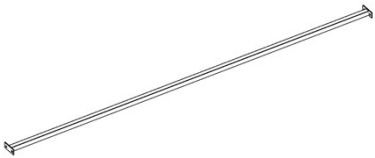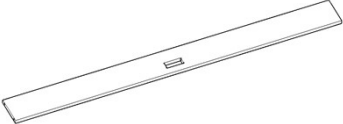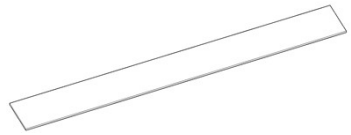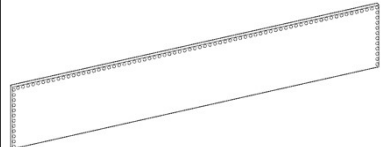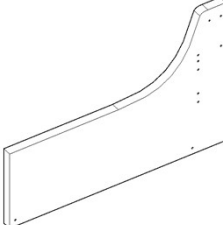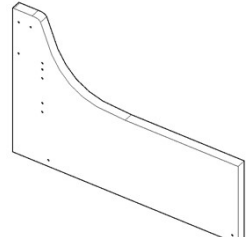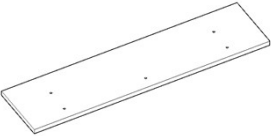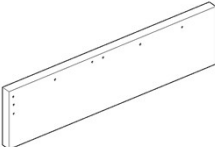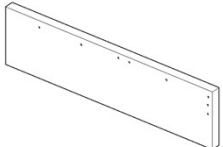1  Metal Slat Frame x2	2  Support Frame x1	3  Rail x2
4  Rail x1	5  Rail x1	6  Iron Sheet x8
7  Panel x1	8  Panel x1	9  Backboard x1
10  Headboard x1	11  Upper Handrail x1	12  Upper Handrail x1
13  Panels x2	14  Lower Handrail x1	15  Lower Handrail x1
16  Panels x2	17  Slats x8	18  Drawers Bottom Net x2

Part List

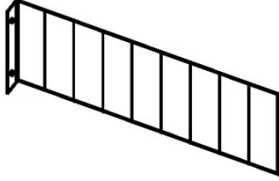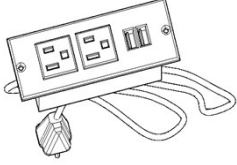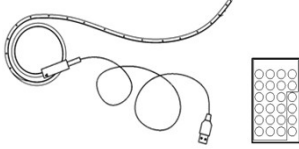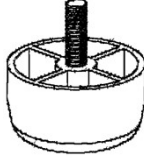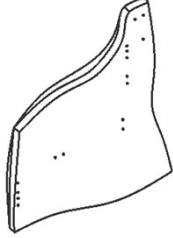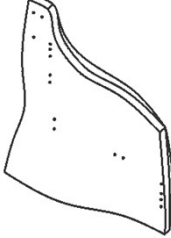19		20		21	
Side Net x2		Drawers Side Net x4		Drawers Side Net x8	
22		23		24	
Socket X1		Lamp Strip Kit x1		Plastic Feet x4	
25		26		27	
Left Coat X1		Right Coat X1		Plastic Lamp Shade X1	


Hardware List

A		B		C	
Bolts(M6X10mm) X10		Bolts(M6X12mm) X10		Bolts(M6X16mm) X32	
D		E		F	
Bolts(M6X30mm) X16		Allen Key X1		Clasp X22	
G		H		I	
Screws (M3X12mm) X2		Screws (M4X25mm) X14		Eccenter X8	
J					
Connecting screw rod X8					

Step1

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Tear the tape from the back of the LED light

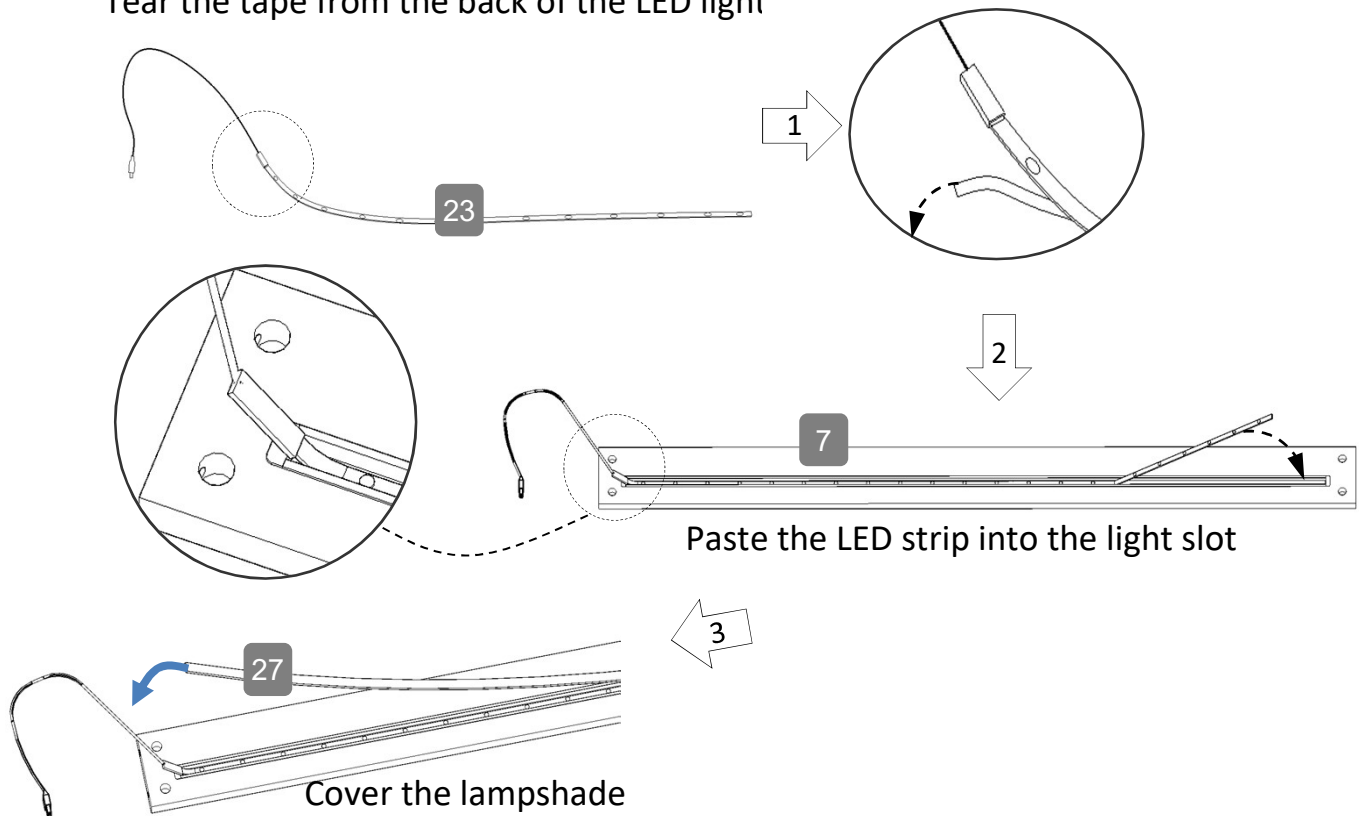


Step2

I





Eccenter X4


RIGHT

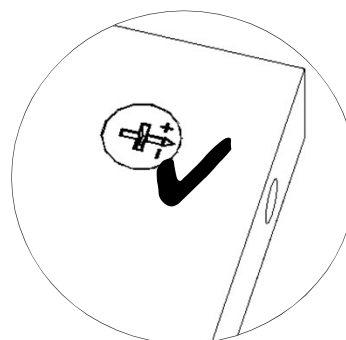

WRONG

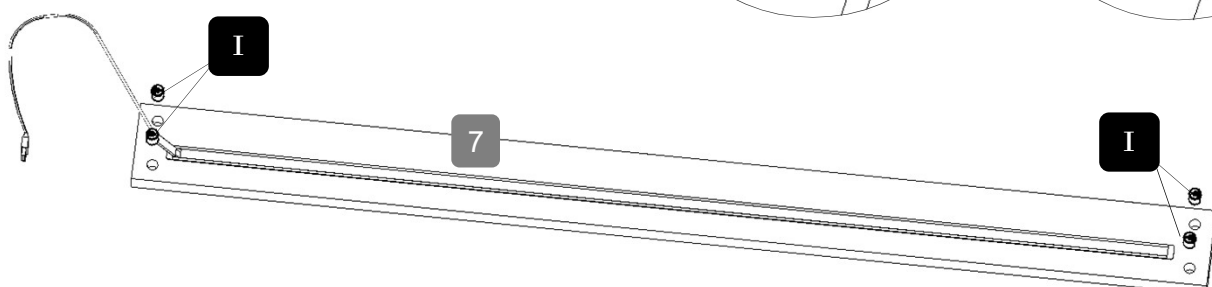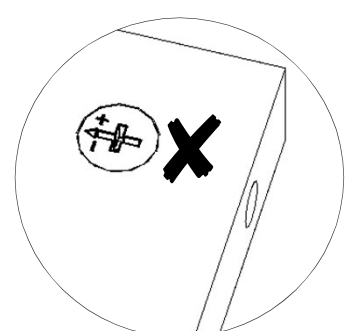

Step3

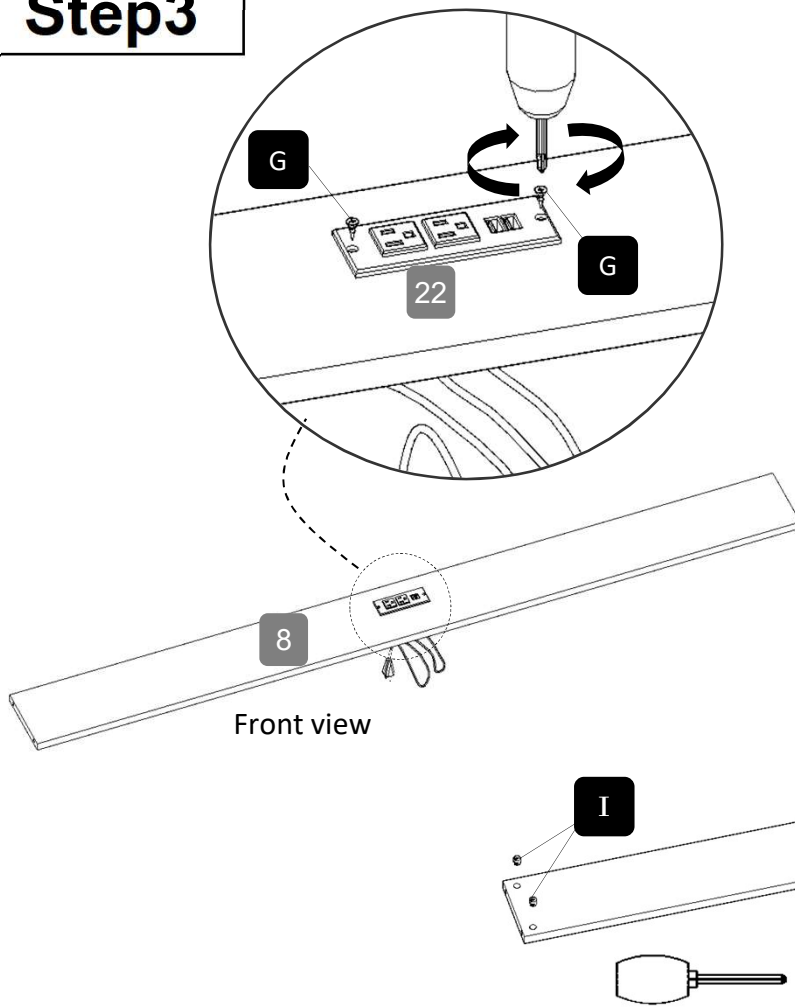

I




Eccenter X4

G




Screws (M3X12mm) X2

RIGHT

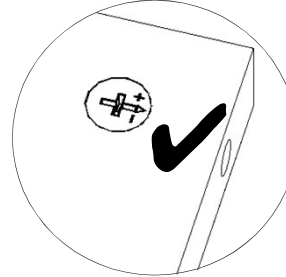


WRONG

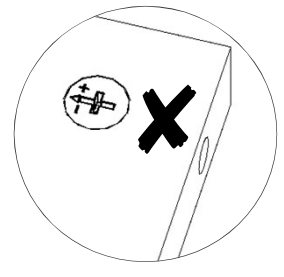

I

Step4

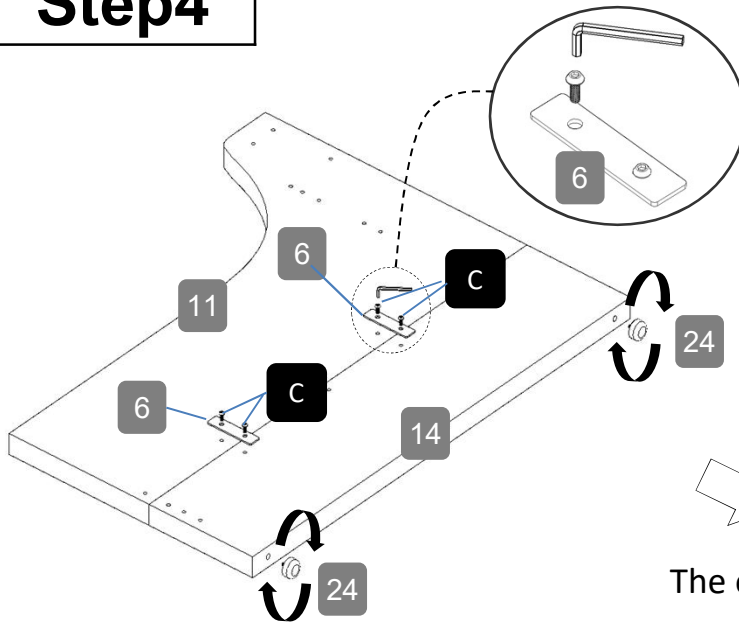

B




Bolts(M6X12mm) X4

C




Bolts(M6X16mm) X4


The other side

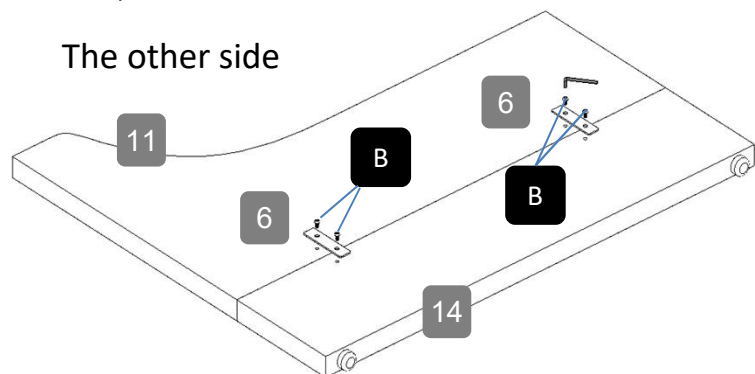


Step5

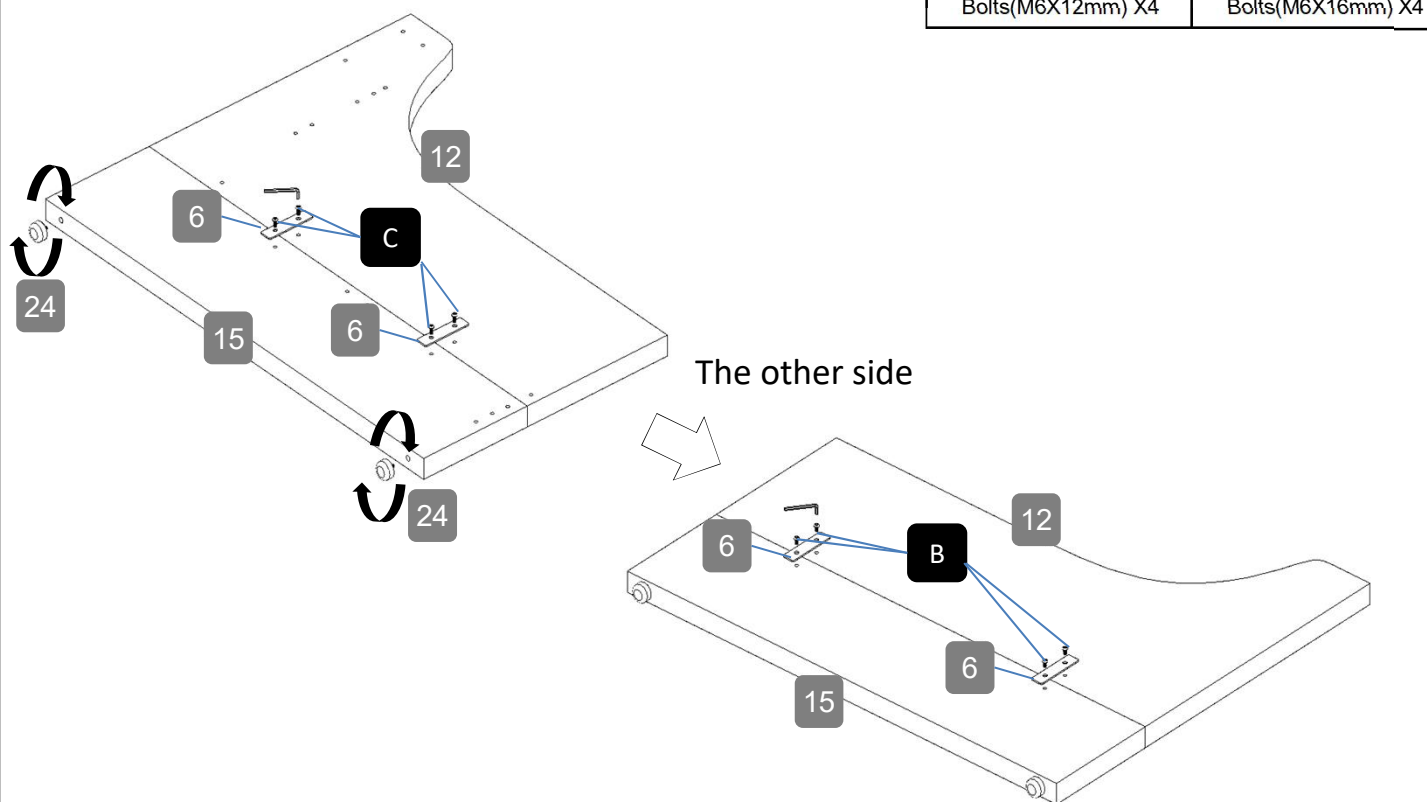

Step6

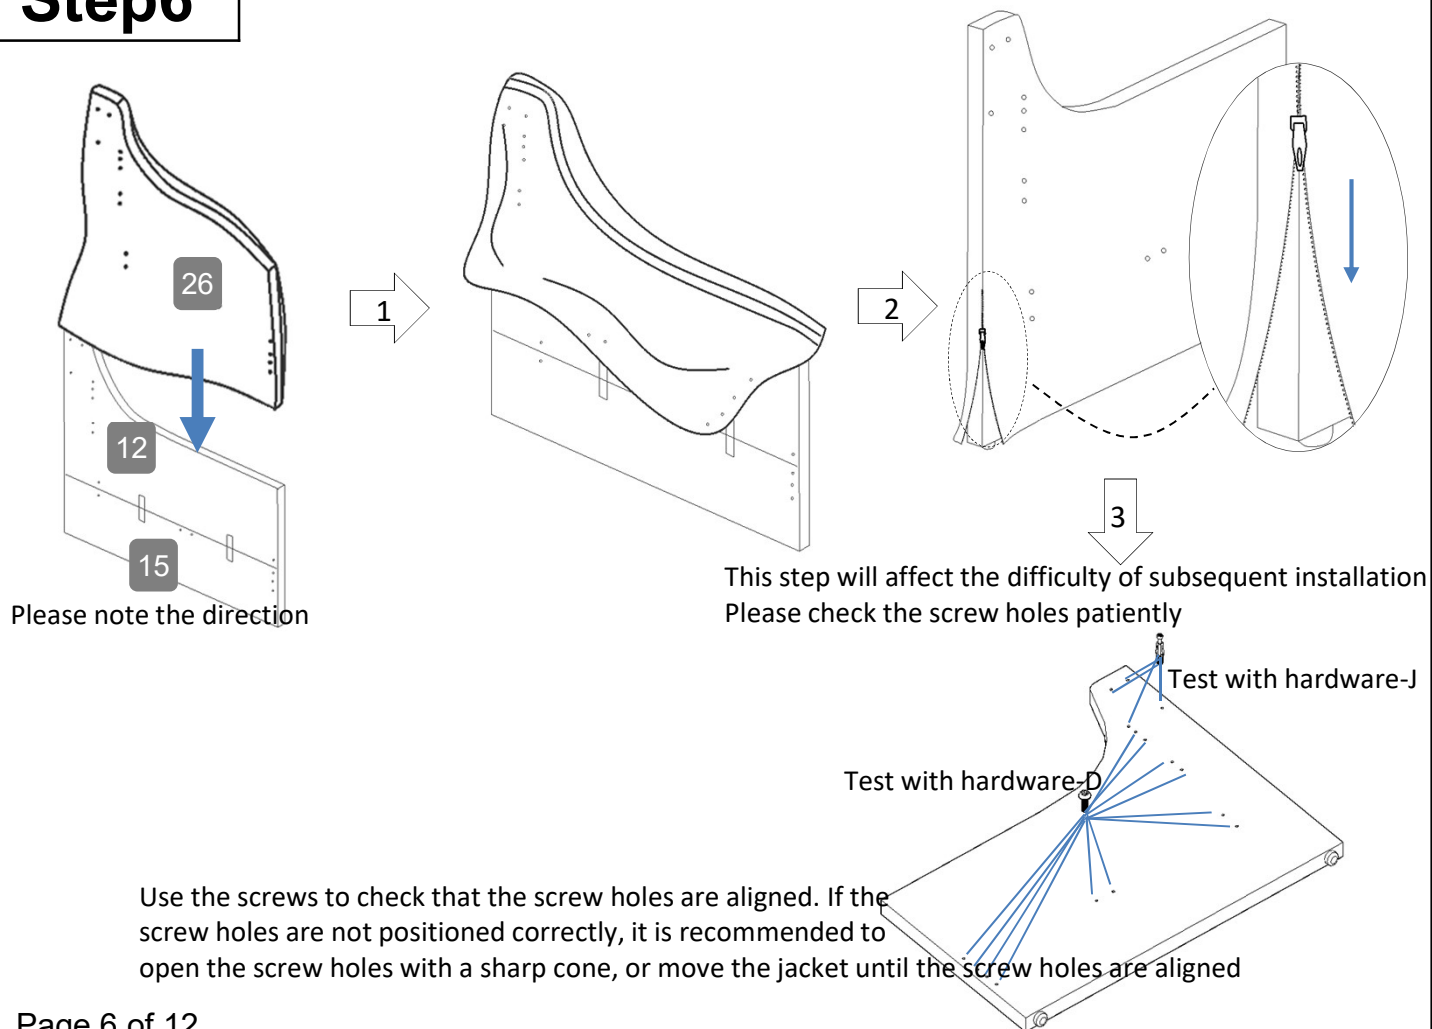

Step7

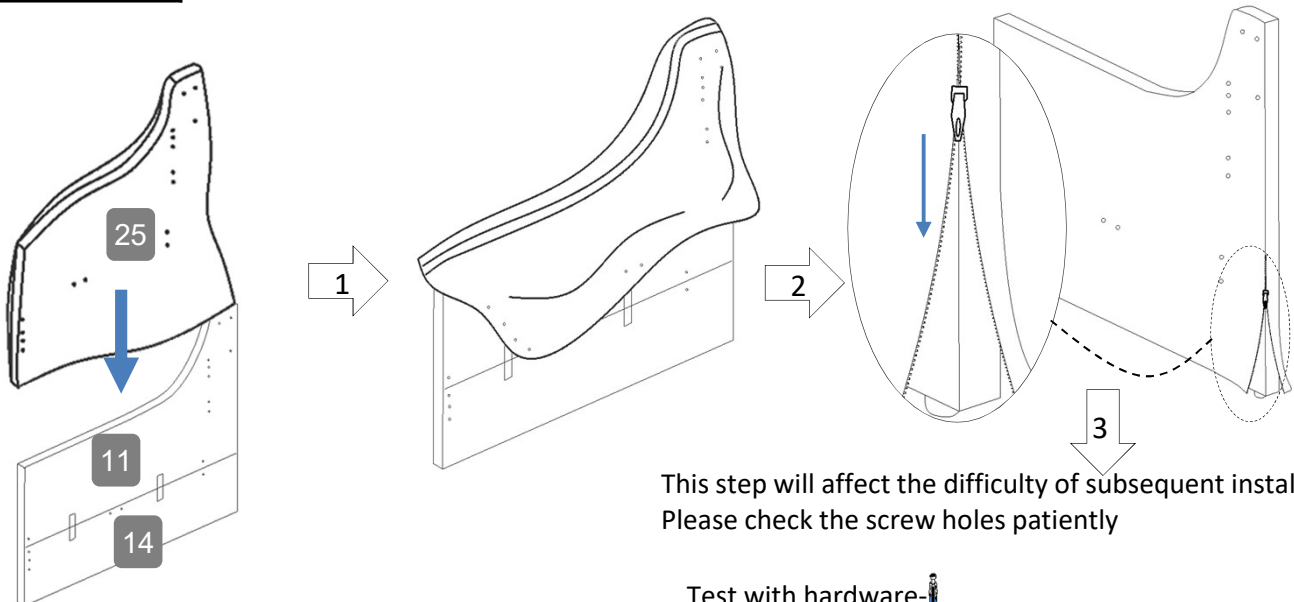

Please note the direction

Test with hardware-

Test with hardware-D



Use the screws to check that the screw holes are aligned. If the screw holes are not positioned correctly, it is recommended to open the screw holes with a sharp cone, or move the jacket until the screw holes are aligned.

Step8

J




Connecting screw rod X8

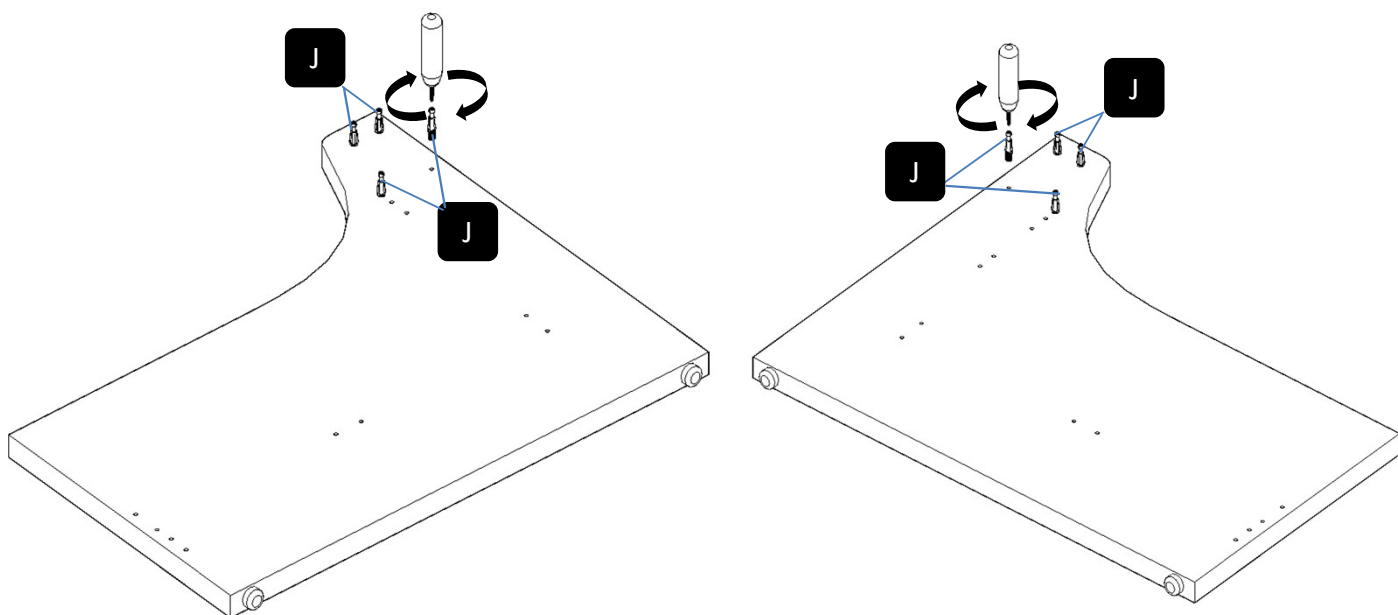

Assembly Tools Required(Not Included)

Page 7 of 12

Step9

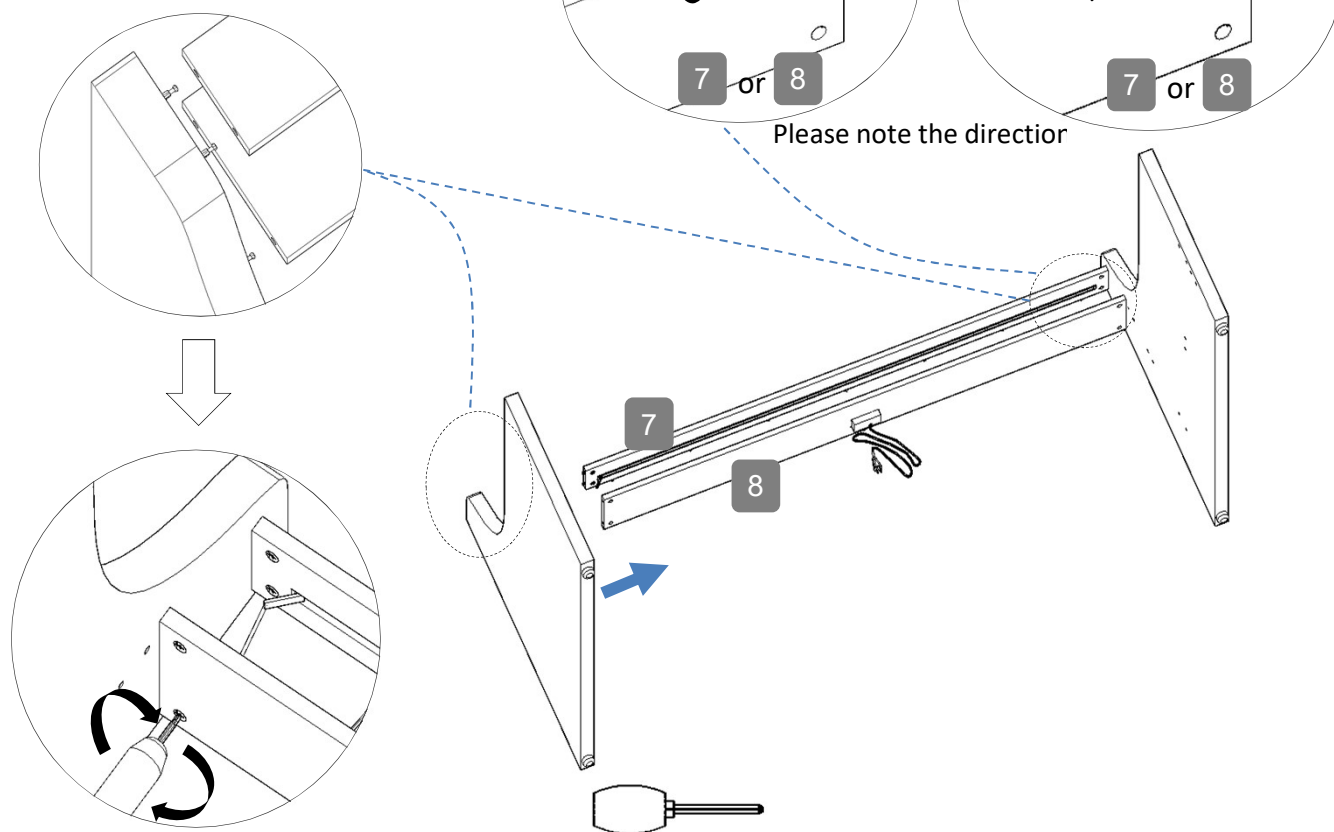

Assembly Tools Required(Not Included)


Step10

Use your bare hands or a tool to turn the screw to 80%

C



Bolts(M6X16mm) X20

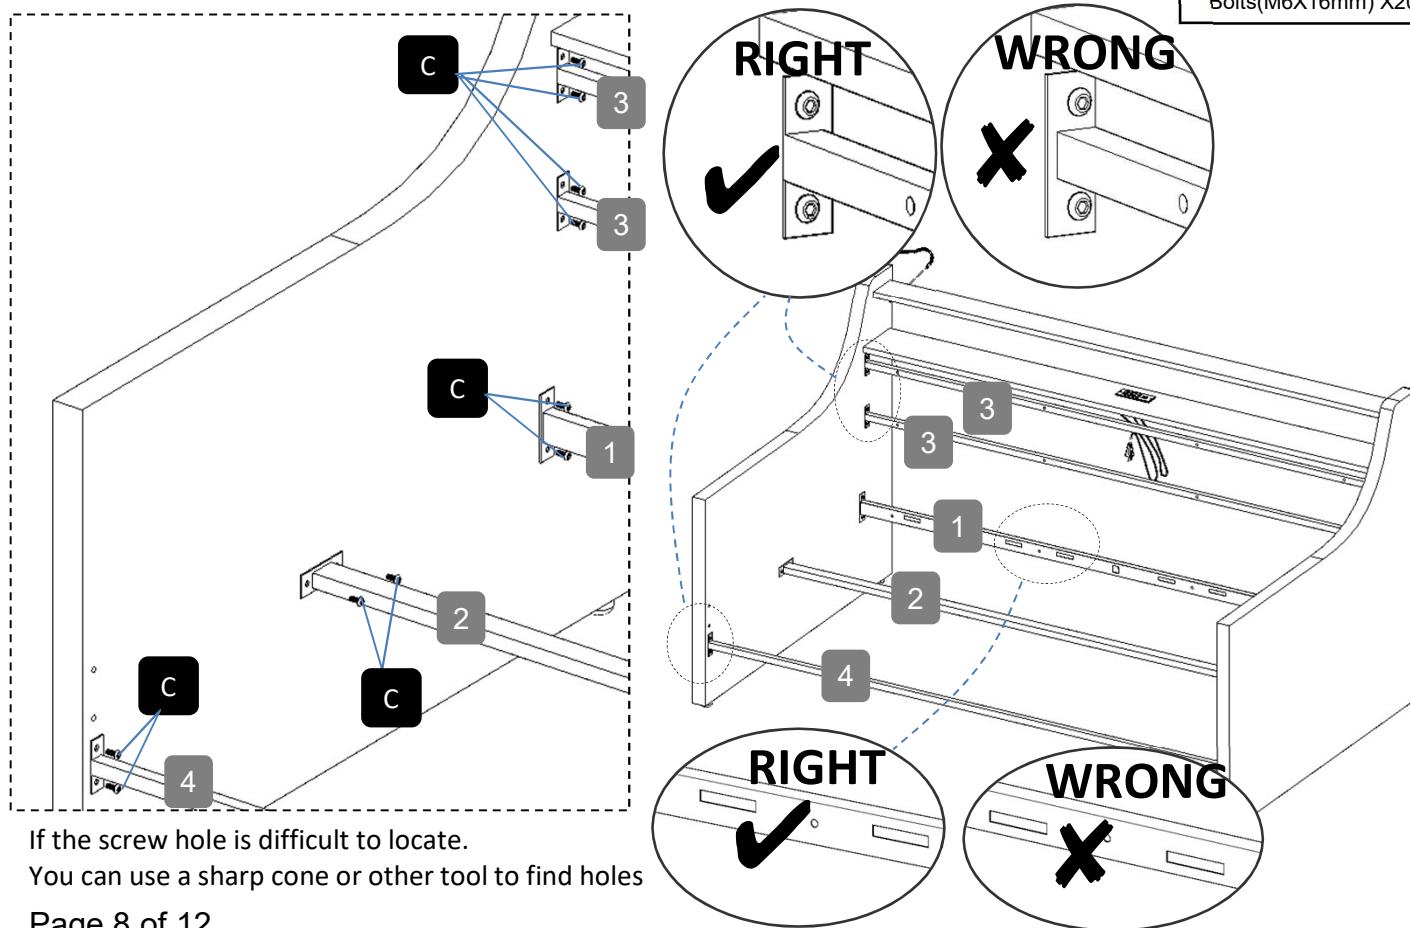


Step11



D



Bolt(M6X30mm) X8

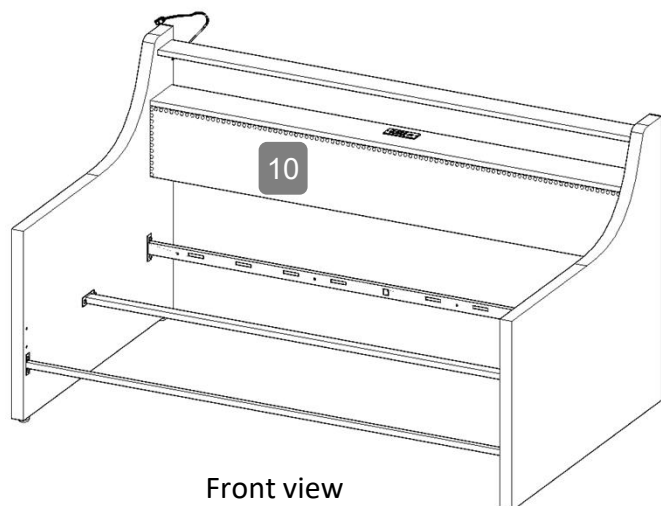

Front view

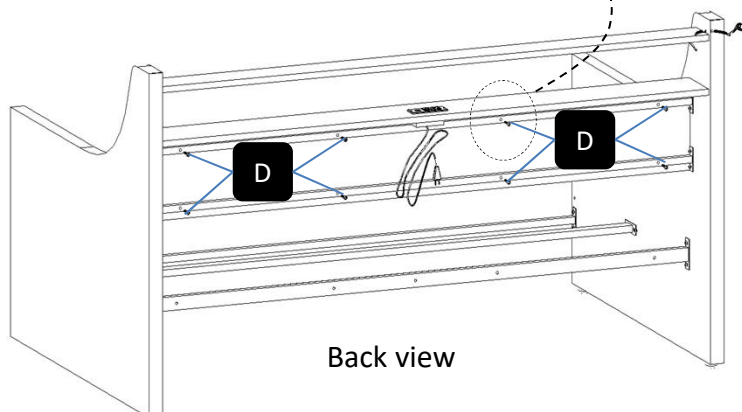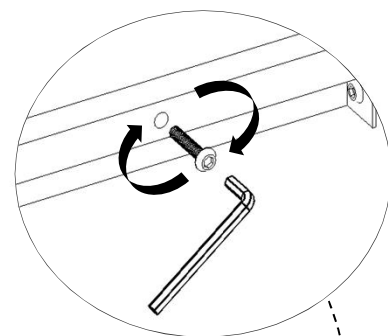


Back view

Step12




H



Screws (M4X25mm) X14

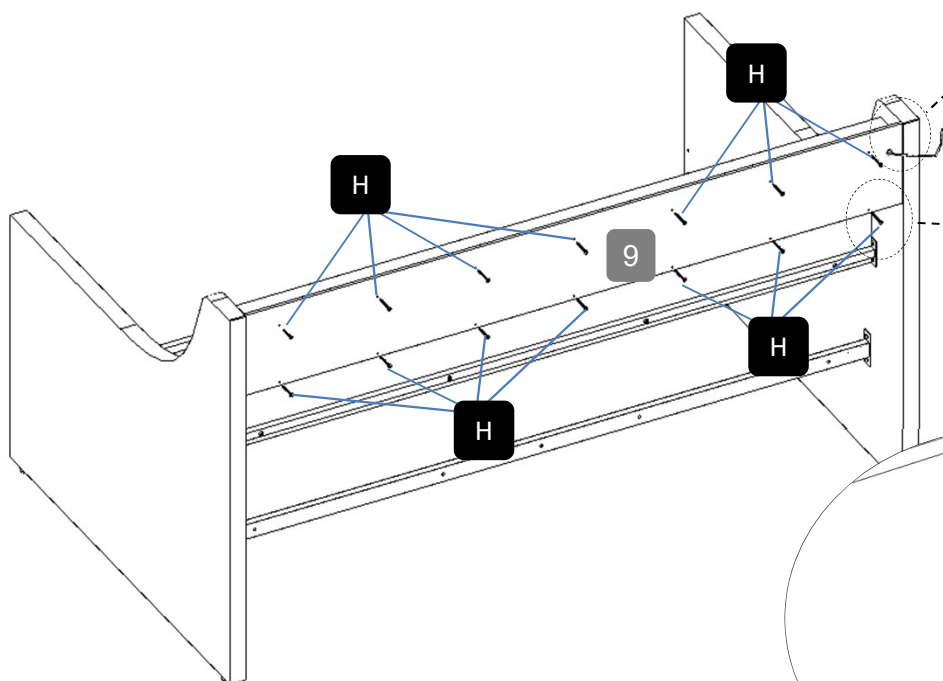

The power cord runs through the hole

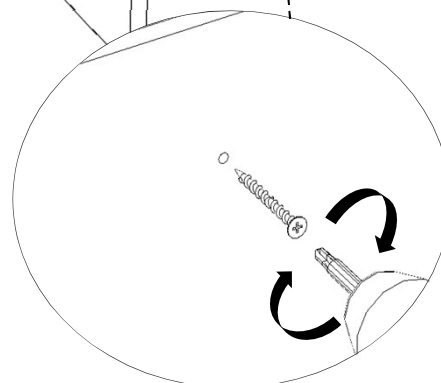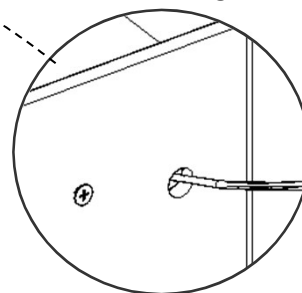

Assembly Tools Required(Not Included)


Page 9 of 12

Step13

B



Bolts(M6X12mm) X1

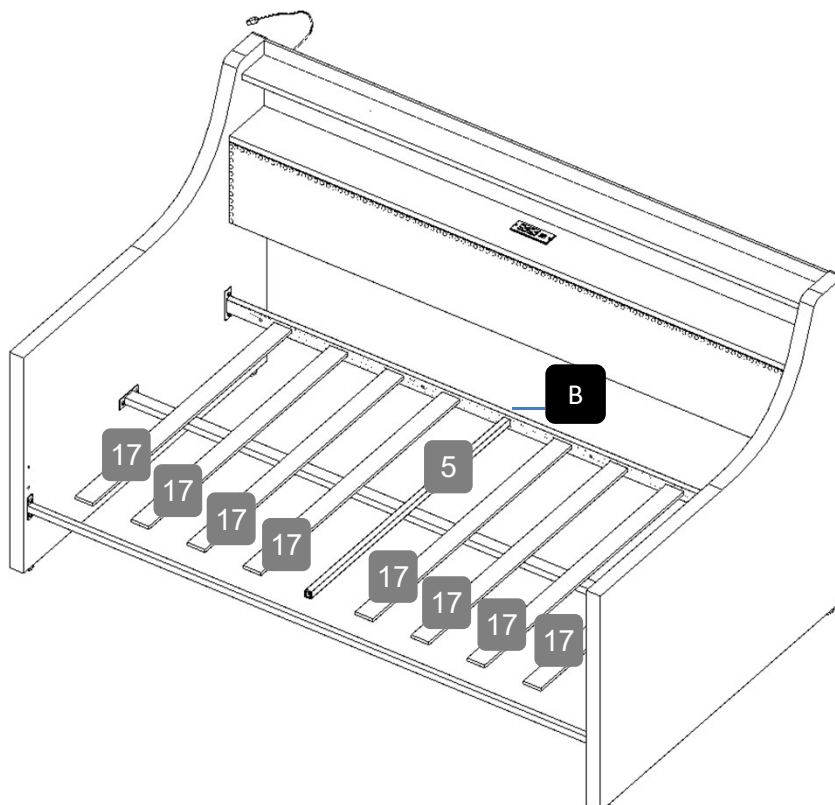

Step14

Use your bare hands or a tool to turn the screw to 80%

B






Bolts(M6X12mm) X1

C



Bolts(M6X16mm) X4

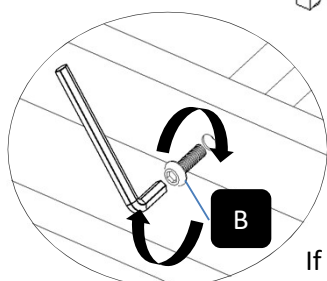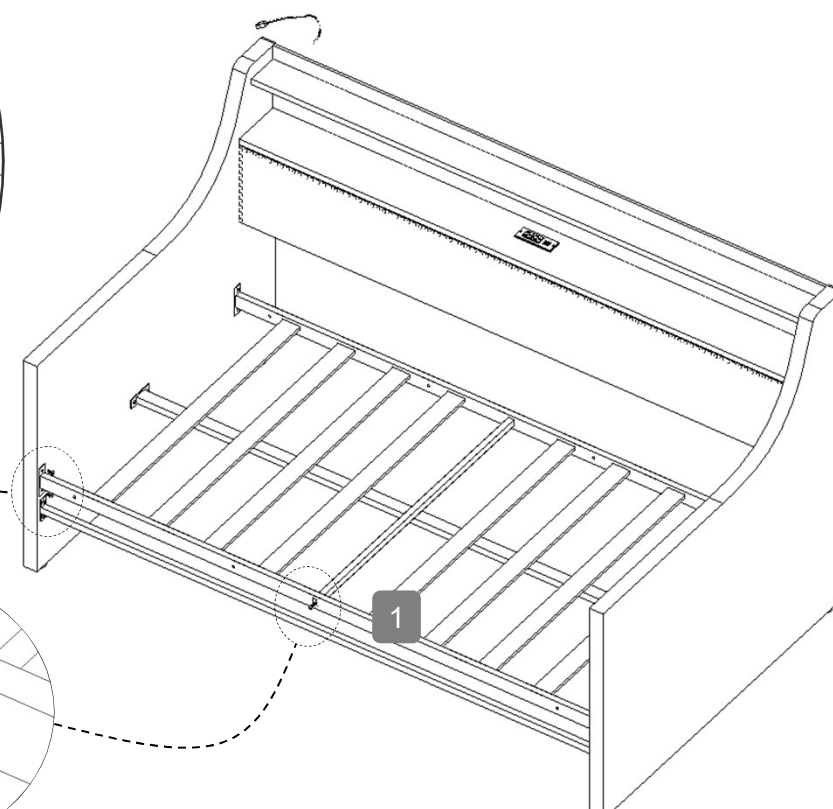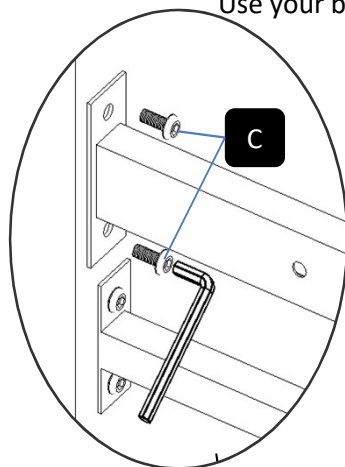

If the screw hole is difficult to locate. You can use a sharp cone or other tool to find hole


Step15

Note the installation direction of panel NO.16

D




Bolt(M6X30mm) X8

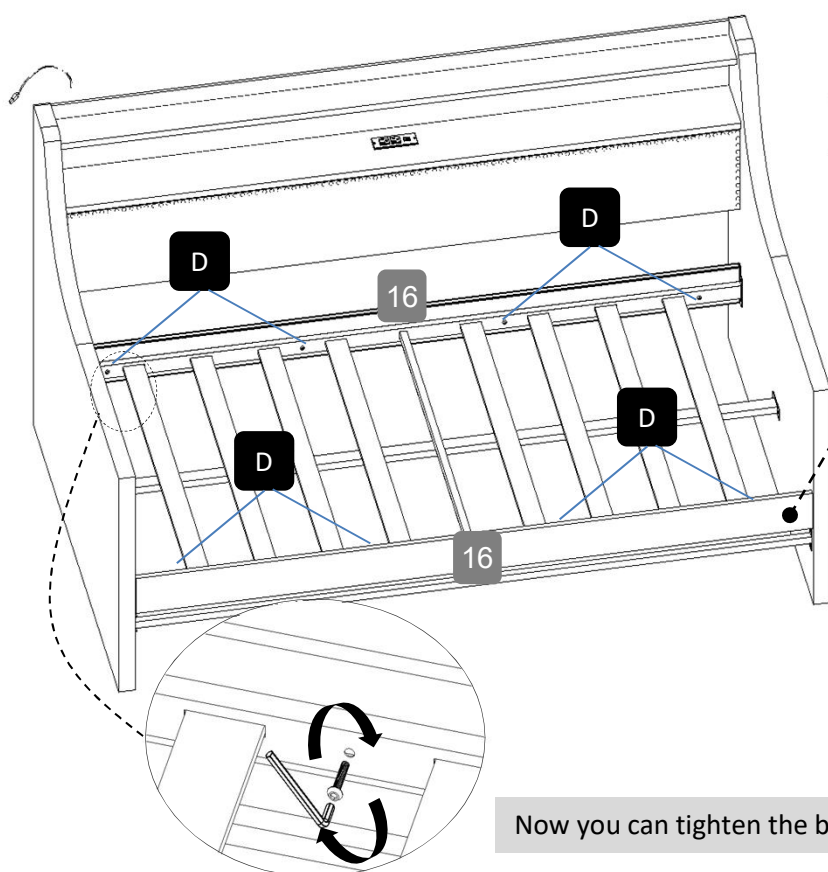


UP

16

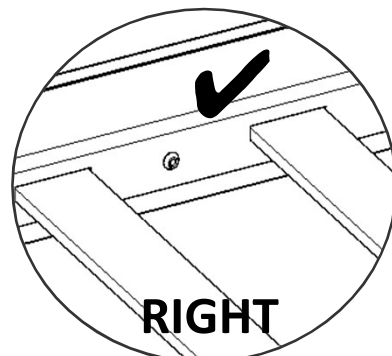

RIGHT

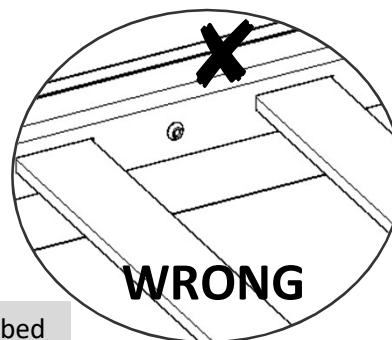

WRONG

Now you can tighten the bolts all over the bed

Step16

A




Bolts(M6X10mm) X5


H




Clasp X11

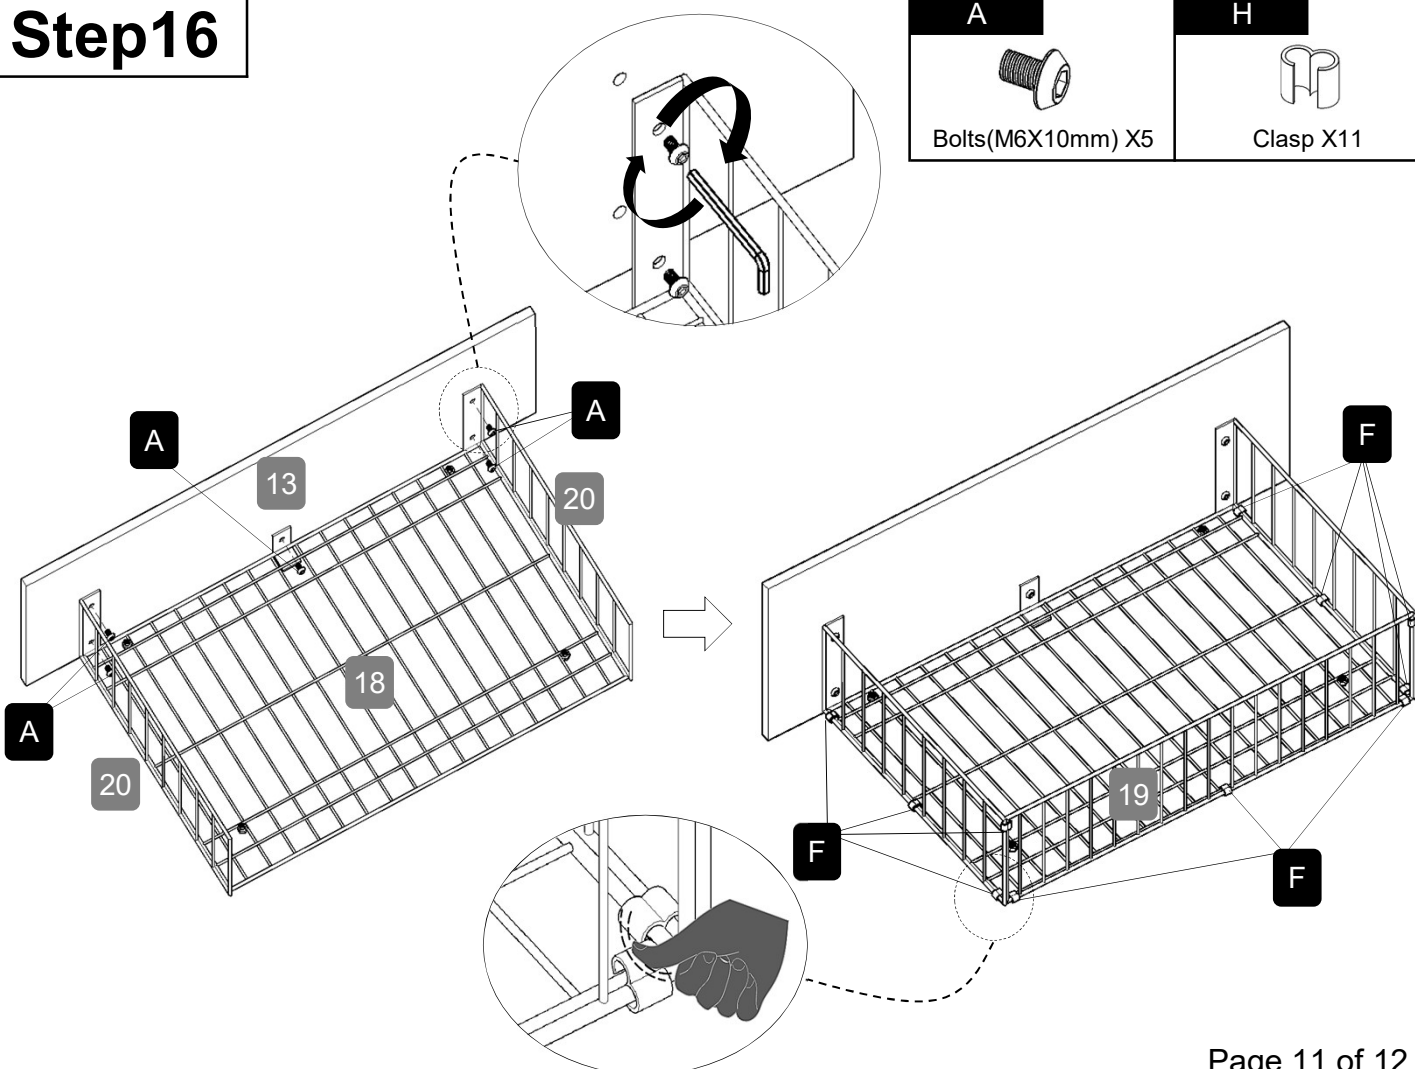

Step17

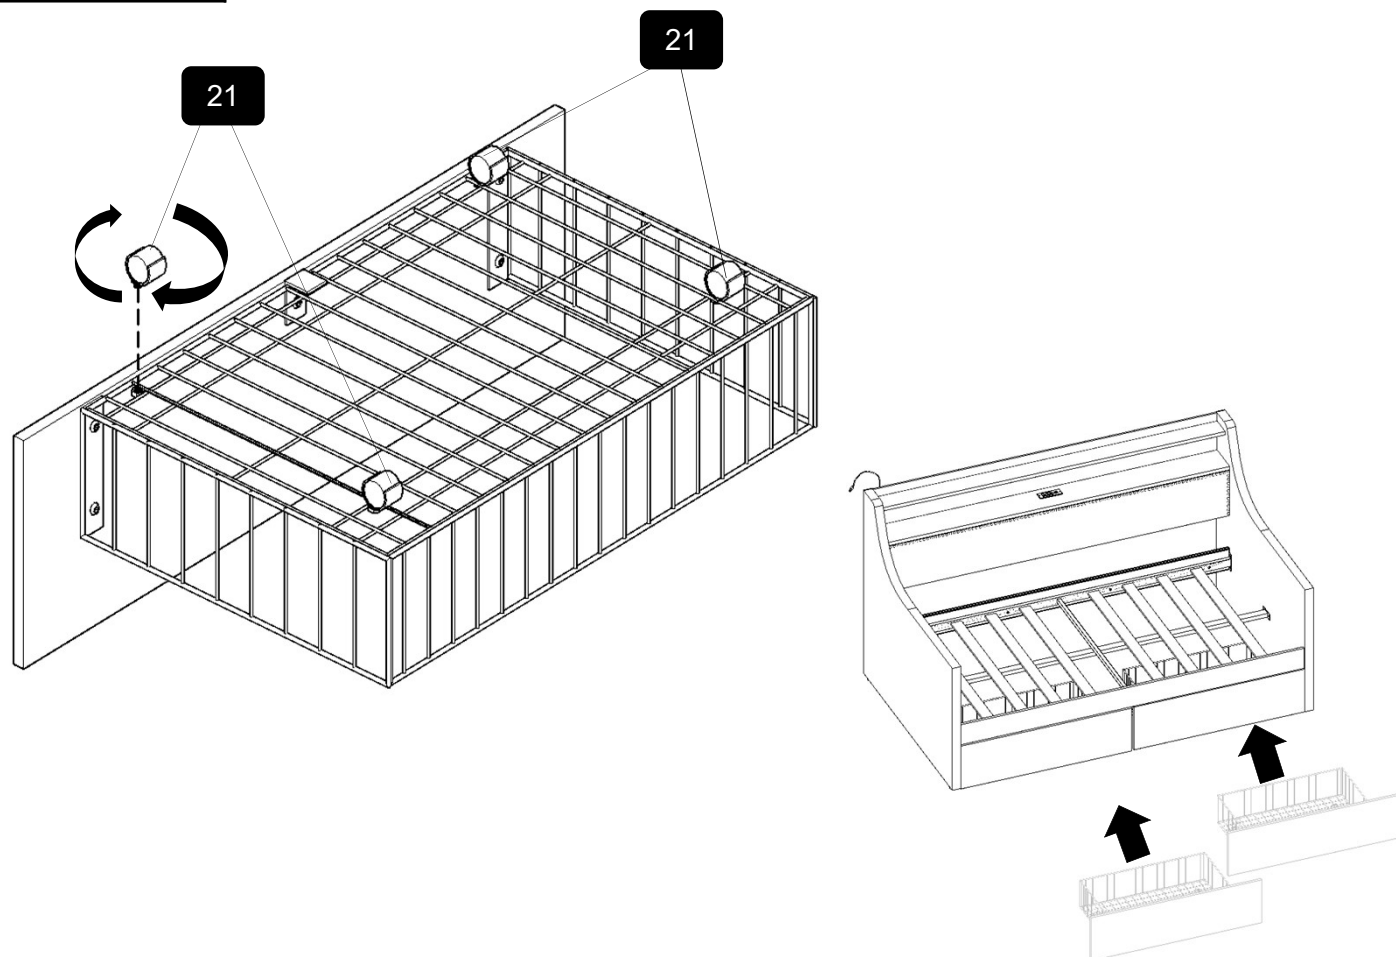

Step18

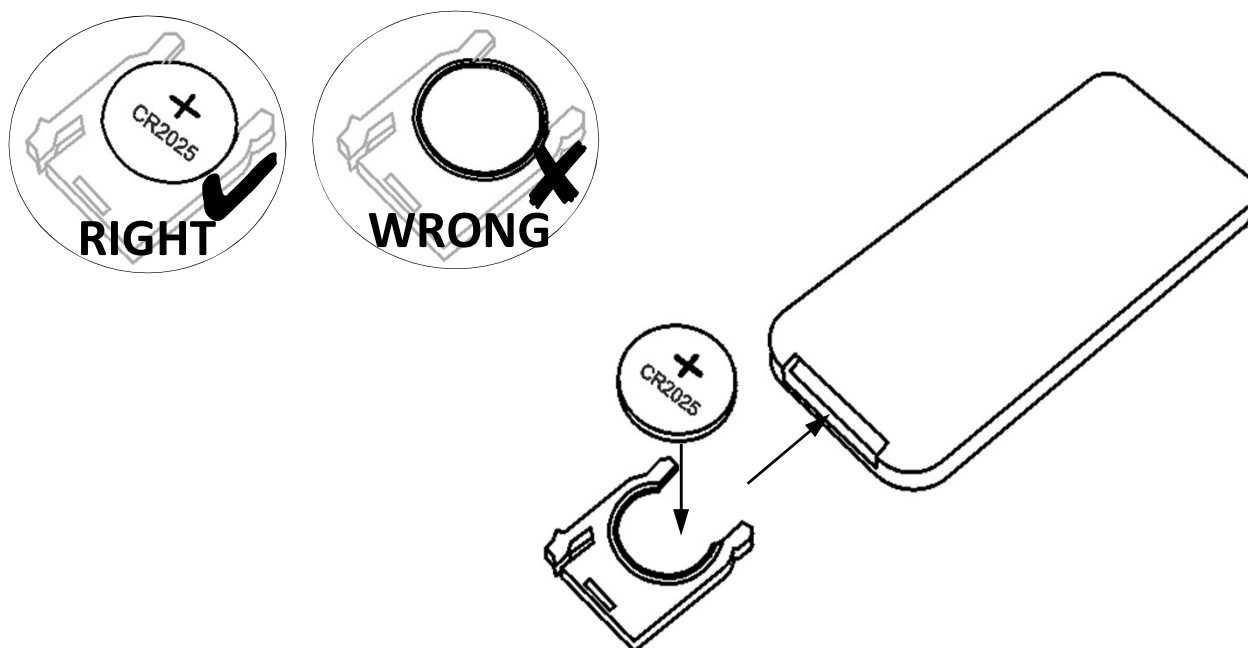

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control