


ASSEMBLY INSTRUCTION

SKU CODE: (RH0072)

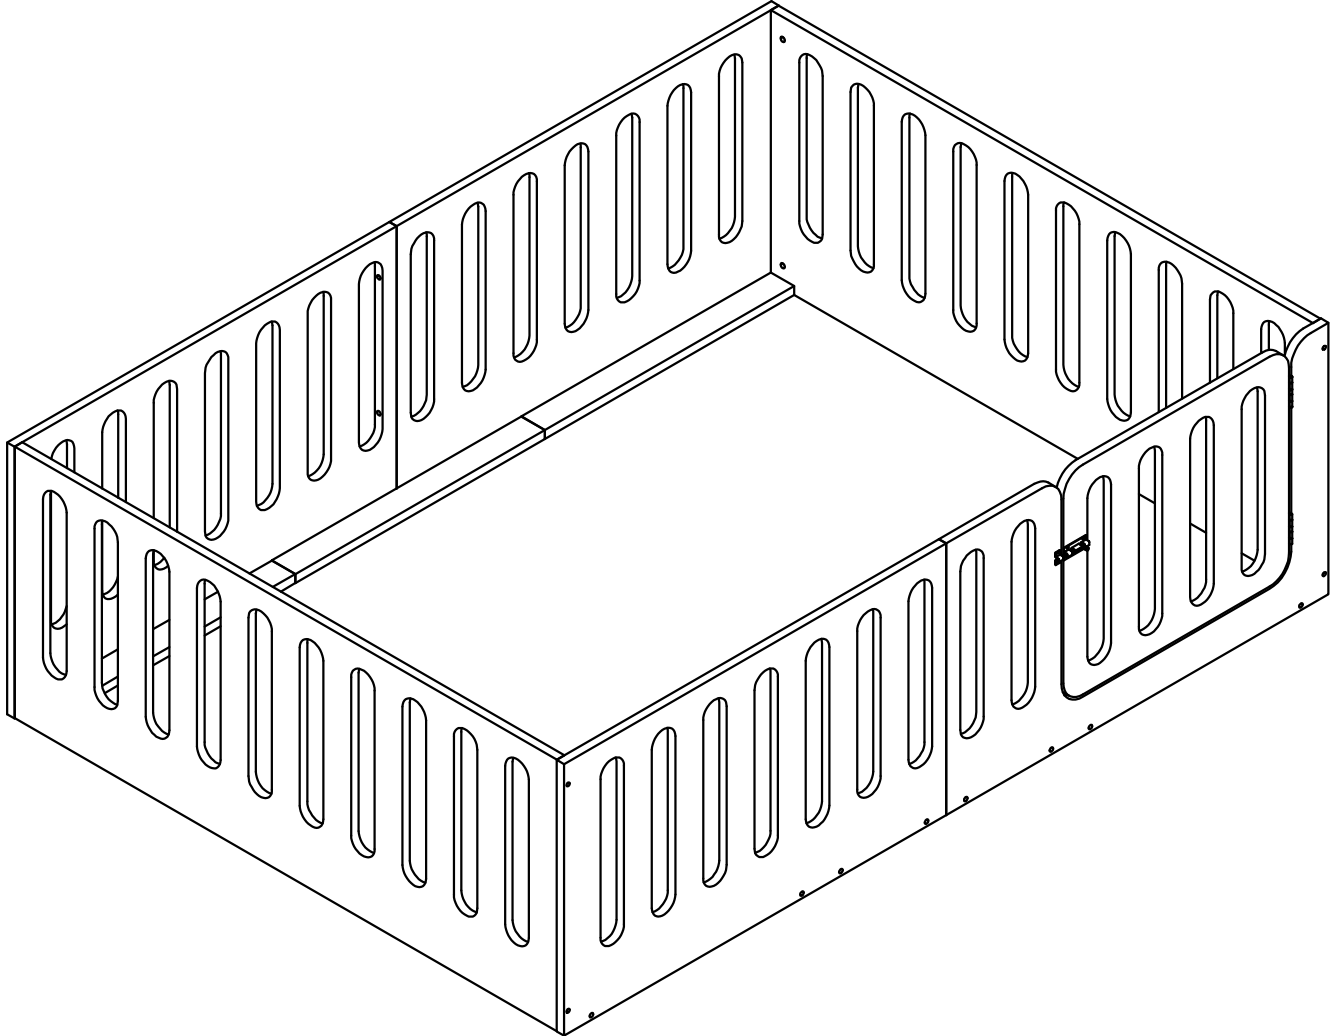

Bed type

Length

Width

Thickness

Full Standard


74"- 75"

53 ¹/₂"

6" max


This set is included 1 boxes if don't receive full 1 boxes please contact our customer service team.

ASSEMBLY INSTRUCTION INSTRUCTIONS DEMONTAGE

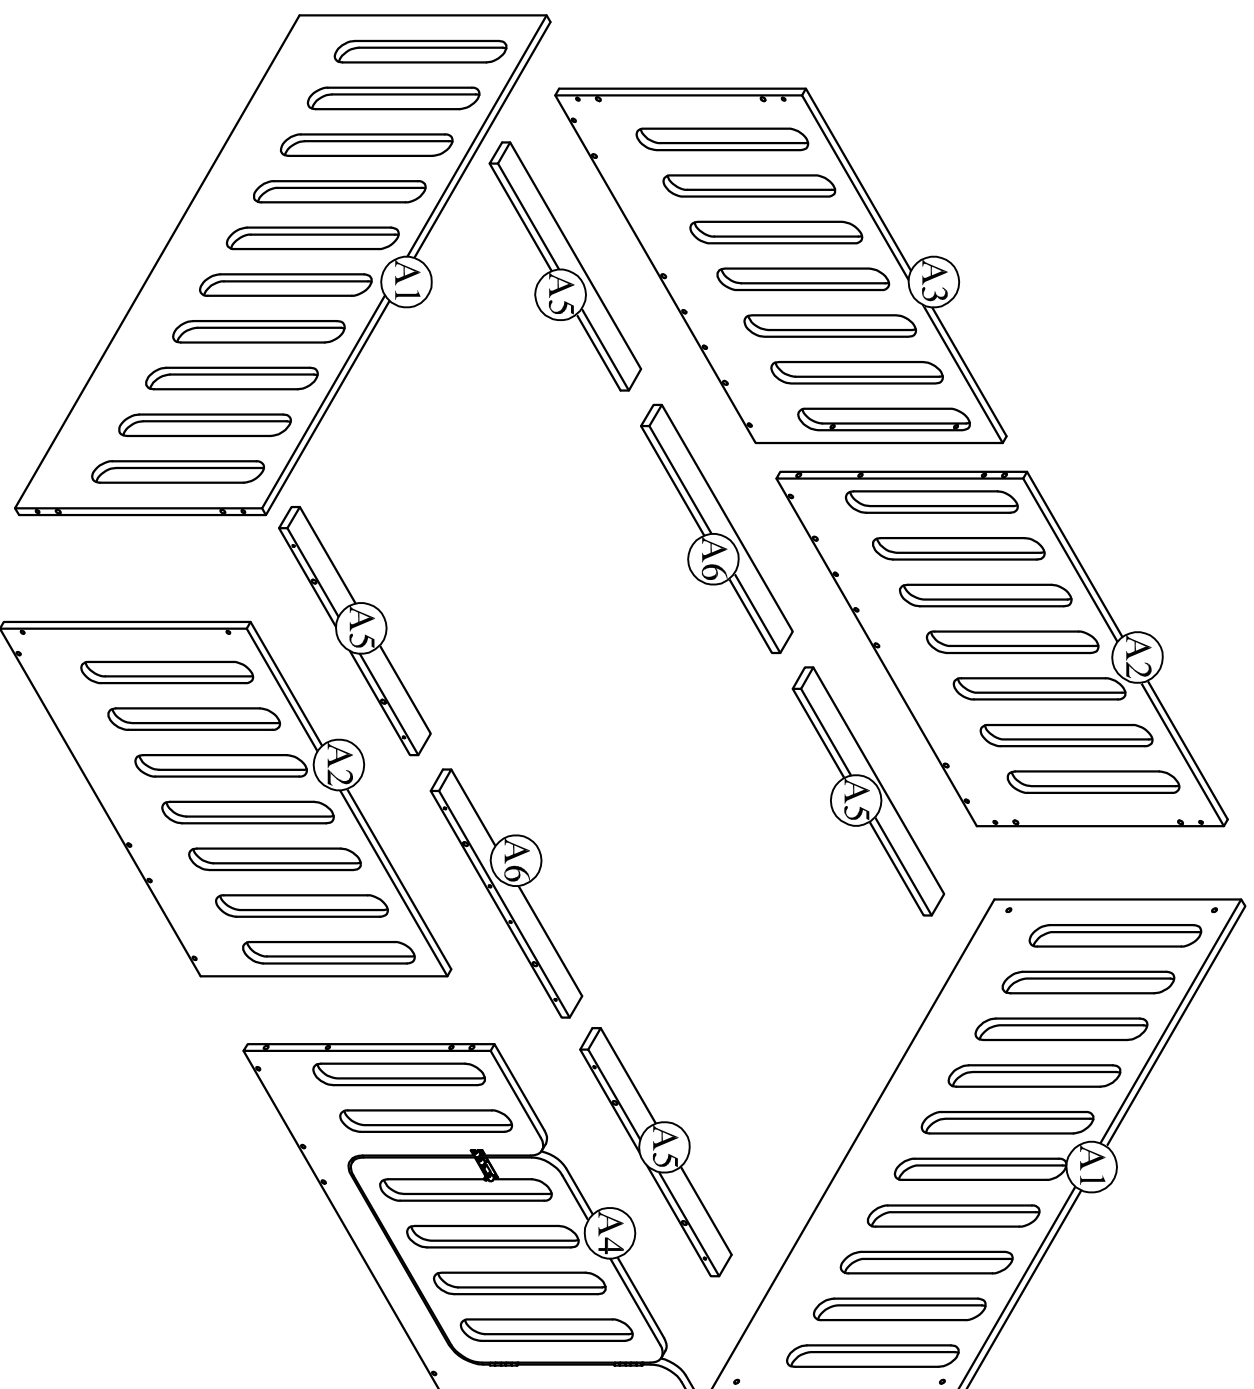


Part List (RH00072)

A1

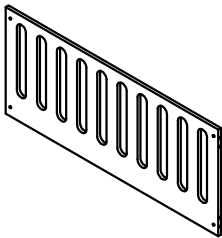


Panel-2pcs

A2

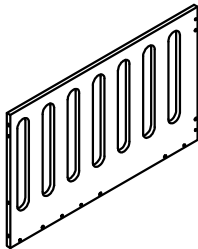


Panel-2pcs

A3

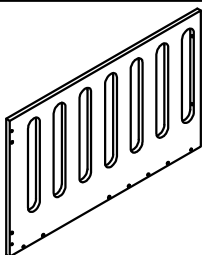


Panel-1pc

A4

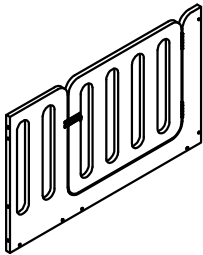


Panel-1pc

A5

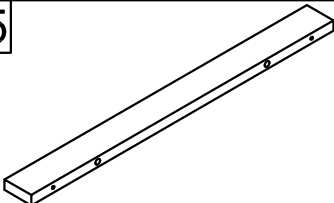





WoodBar-4pcs

A6

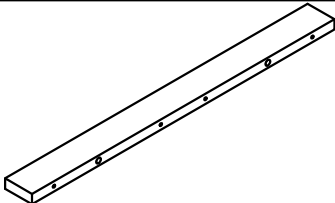


WoodBar-2pcs


Hardware List (RH00072)

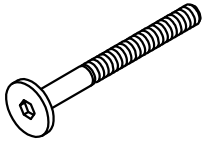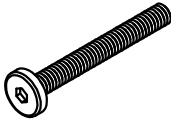1  Bolts Ø1/4" x 60 mm - 8pcs	2  Wood dowel Ø10 x 40 mm - 24pcs	3  Screws 1/4" x 50mm - 16pcs
4  Bolts Ø1/4" x 50 mm - 4pcs	5  Ø1/4" x 13 mm Horizontal-Hole bolts -8 pcs	6  Allen Key - 1pc


Step 1:

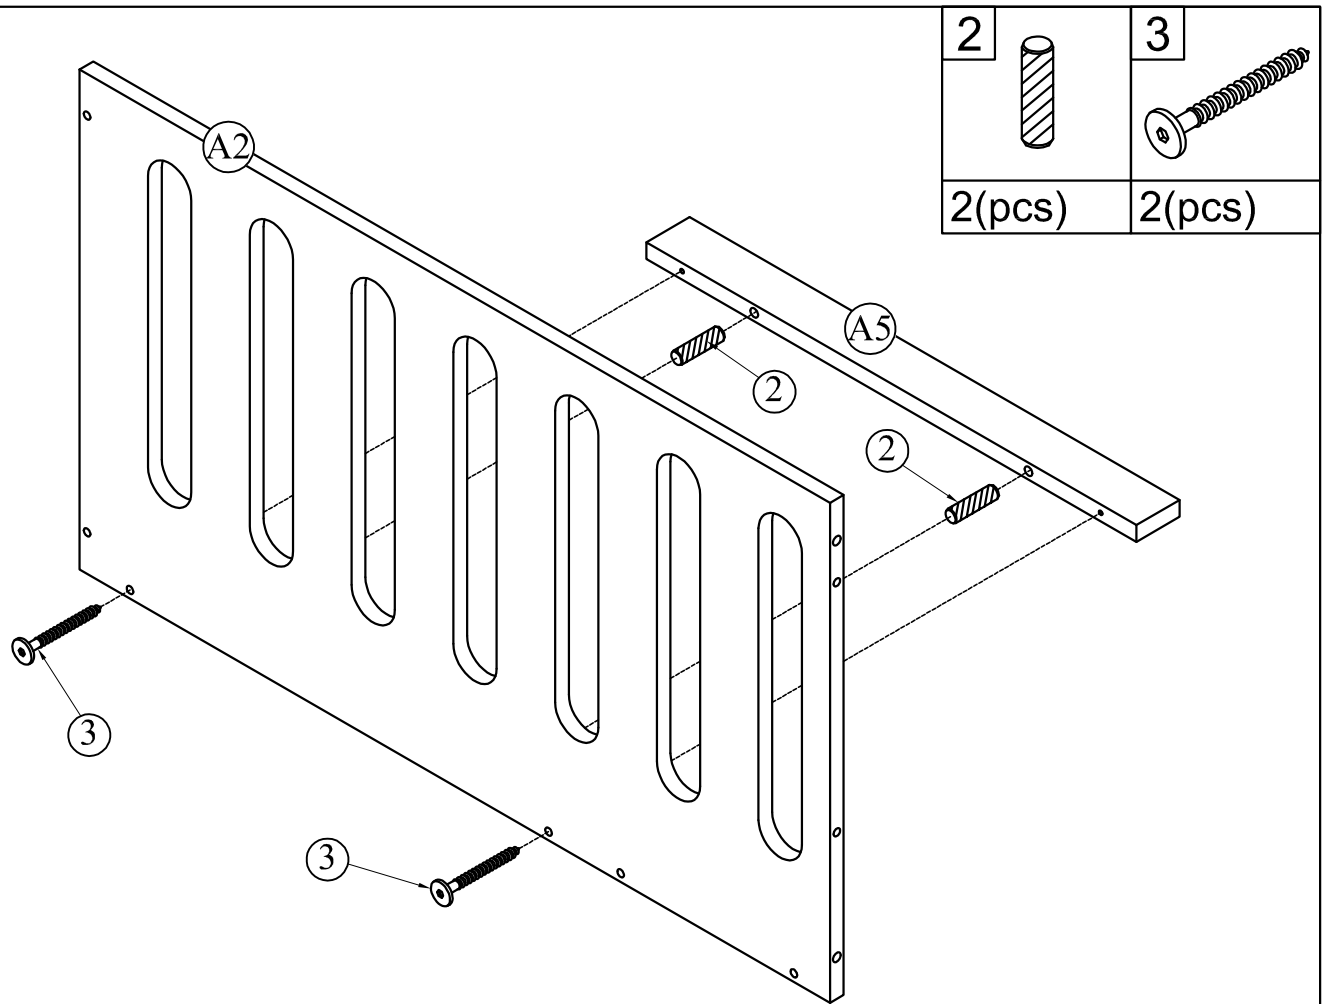


Step 2:

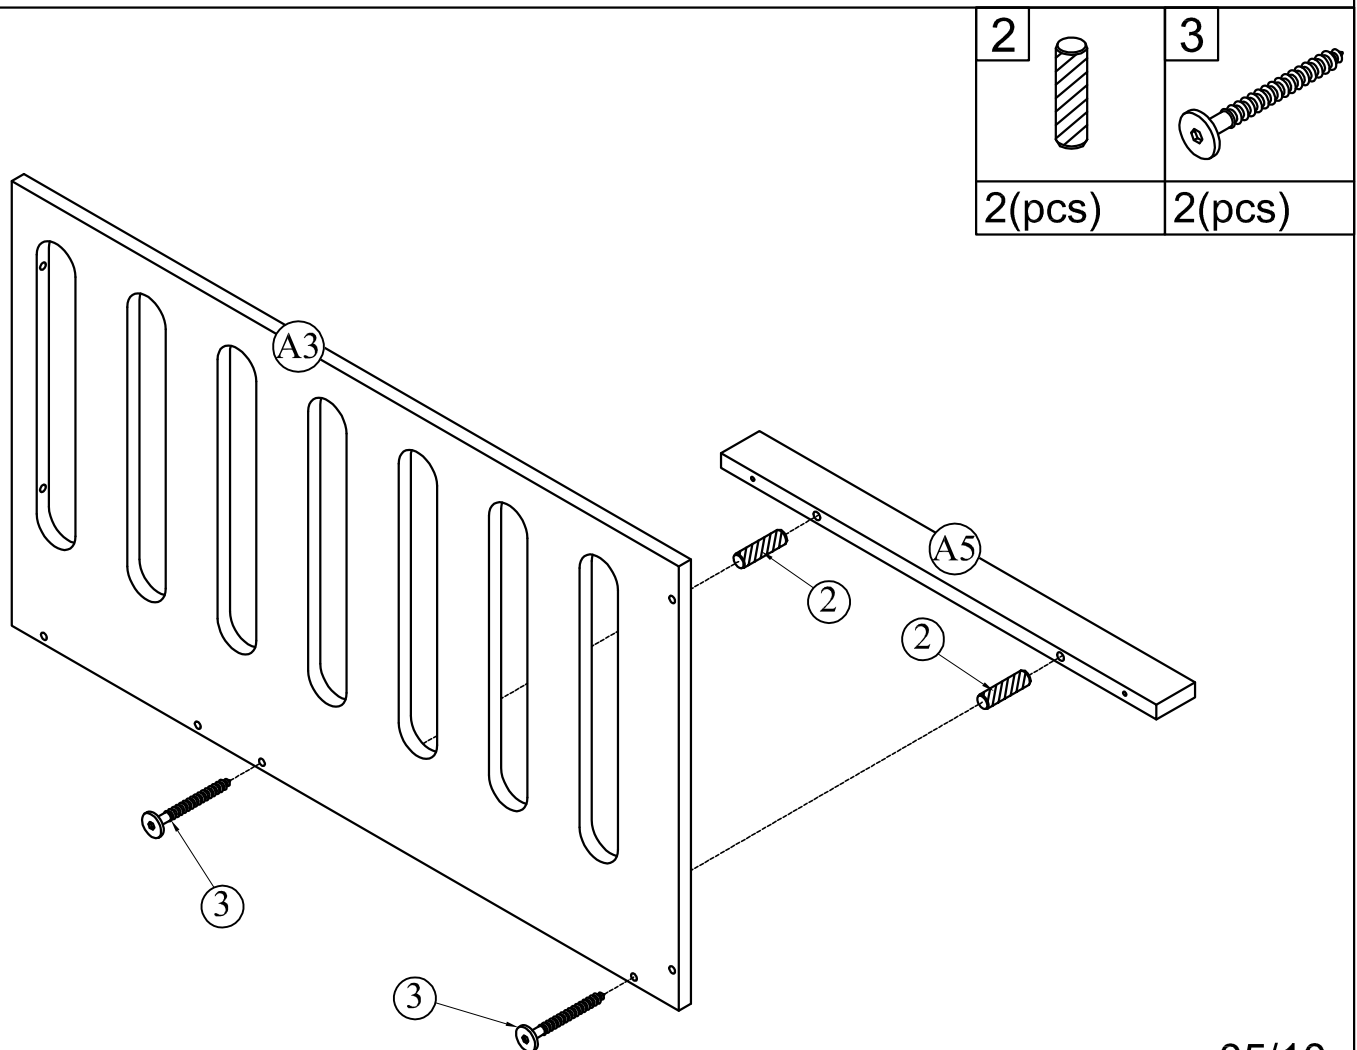


Step 3:

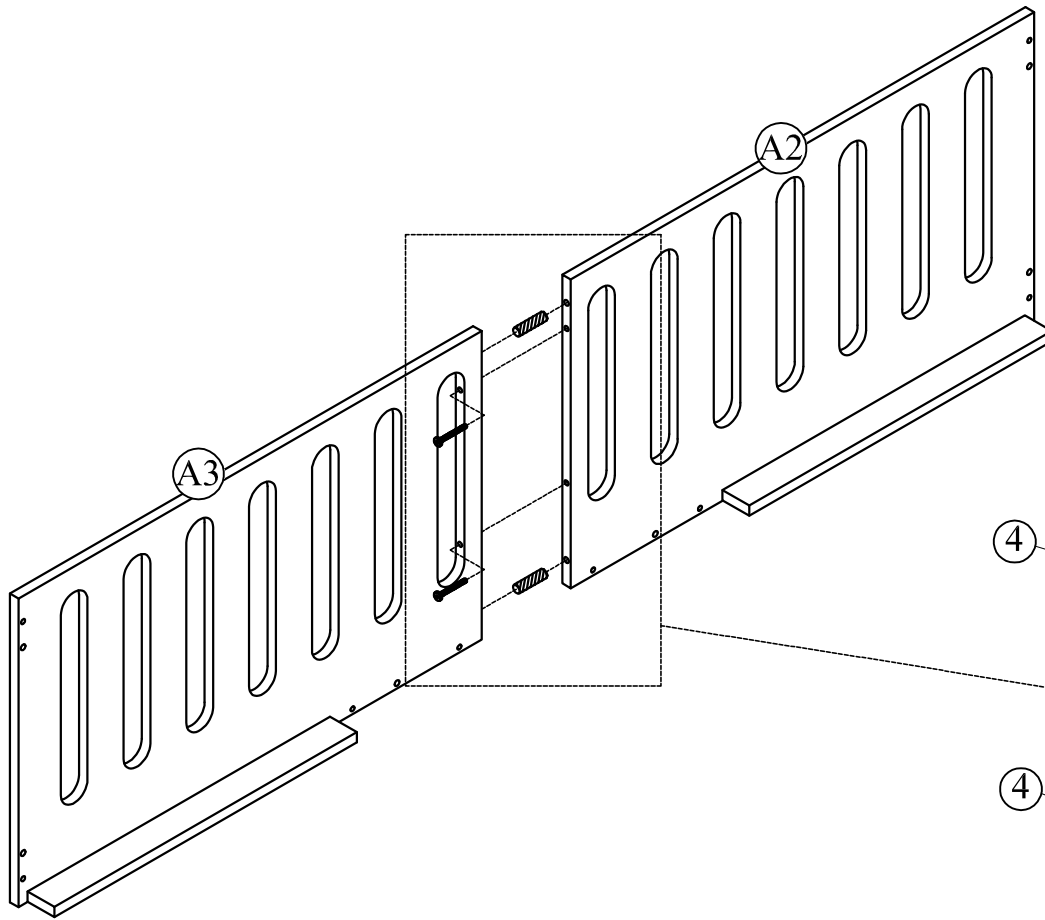


2		4	
	2(pcs)		2(pcs)

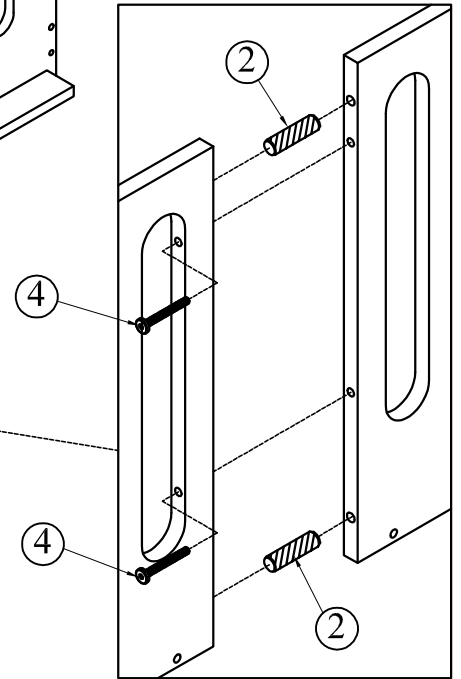


Step 4:

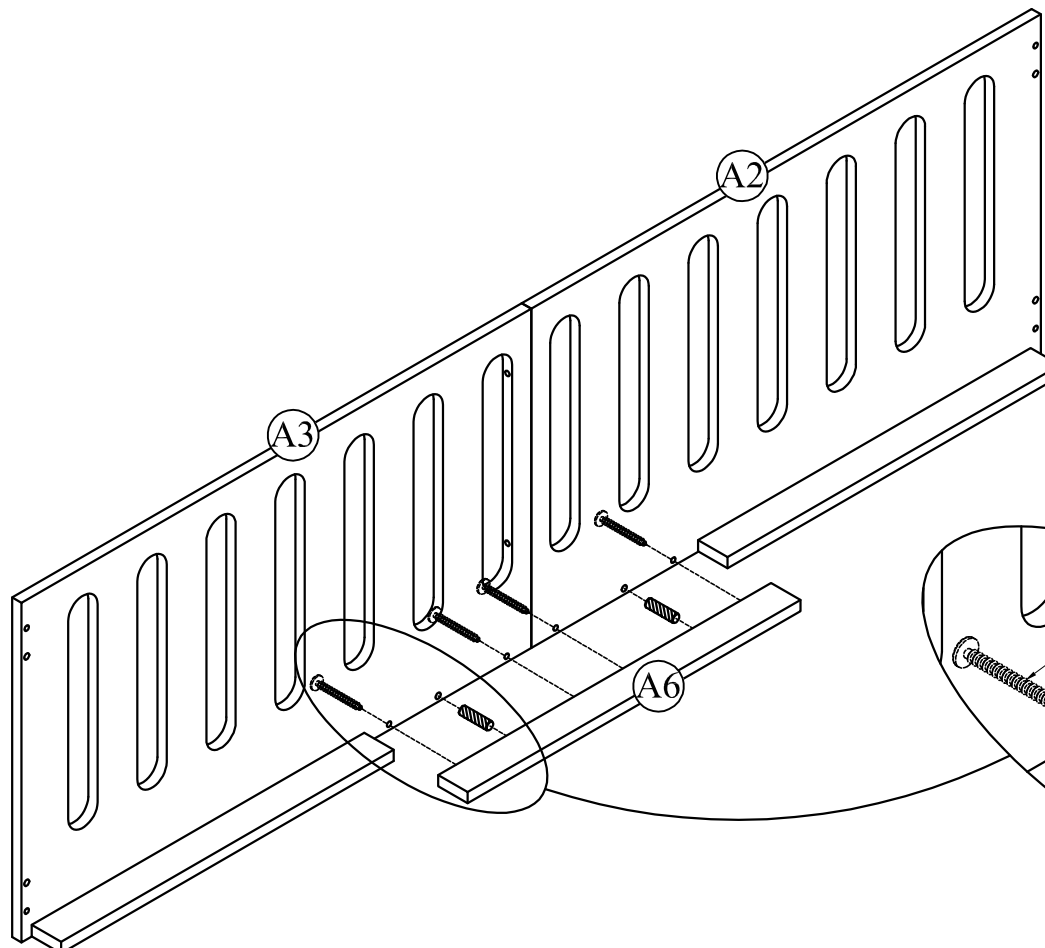


2		3	
	2(pcs)		4(pcs)

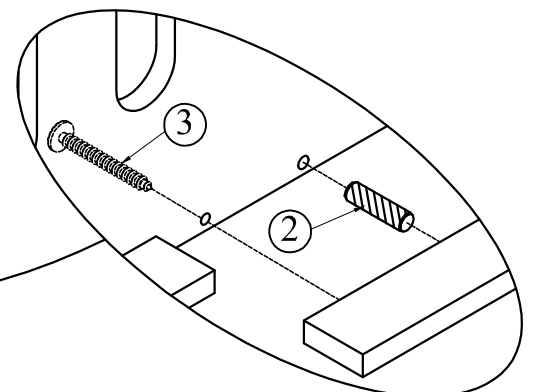



Step 5:

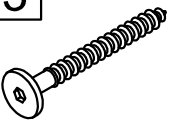2		3	
2(pcs)		2(pcs)	

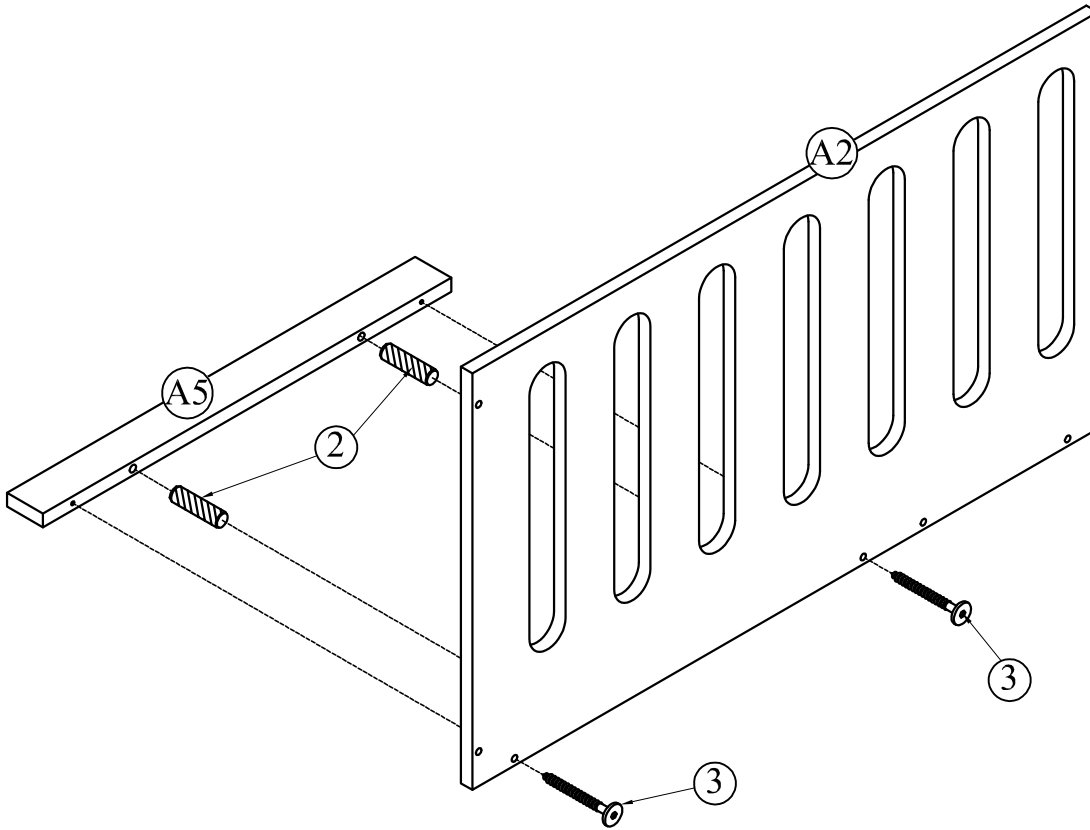



Step 6:

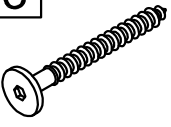2		3	
2(pcs)		2(pcs)	

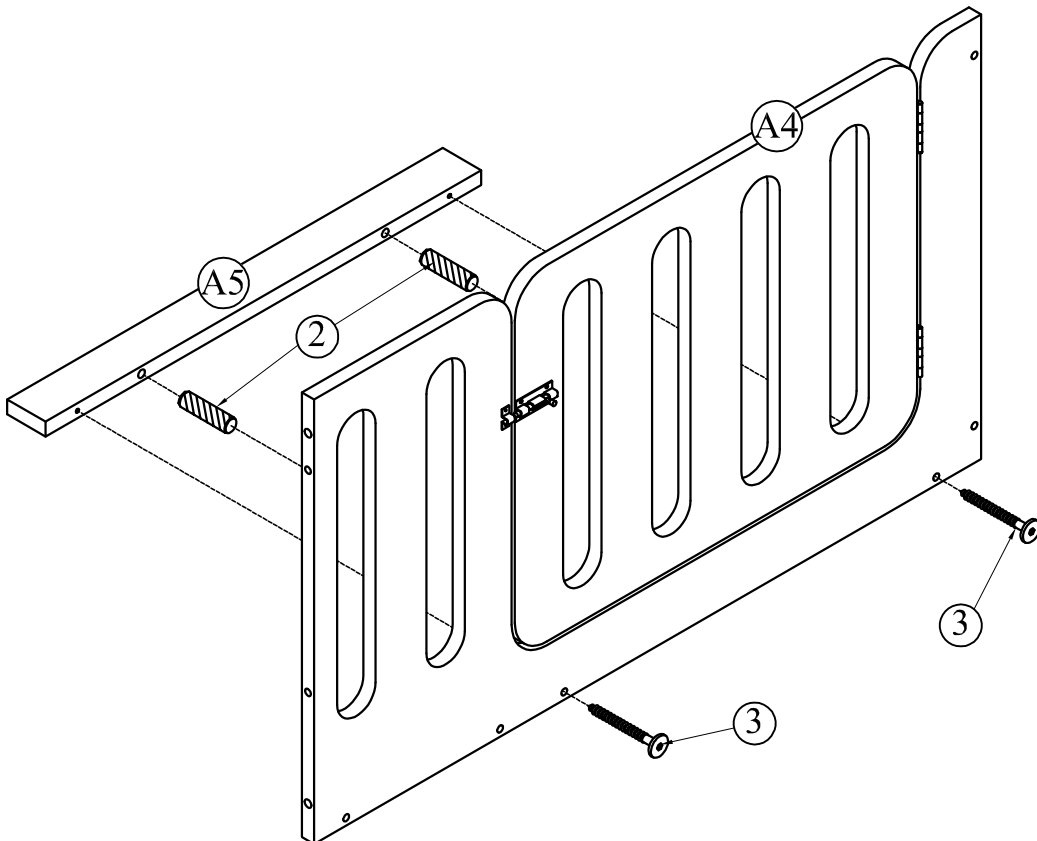



Step 7:

2		4	
2(pcs)		2(pcs)	

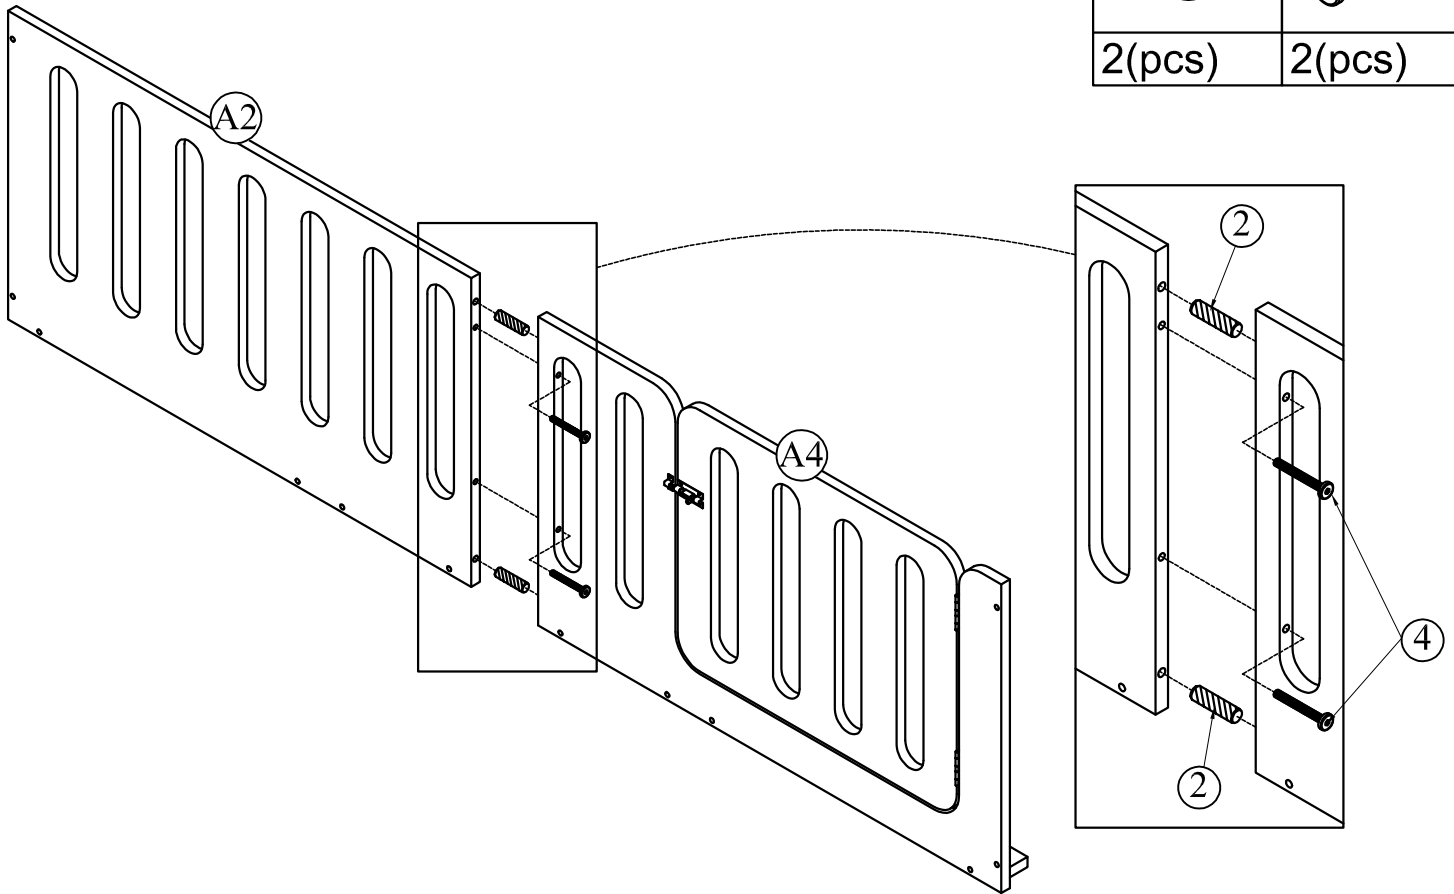


Step 8:

2		3	
2(pcs)		4(pcs)	

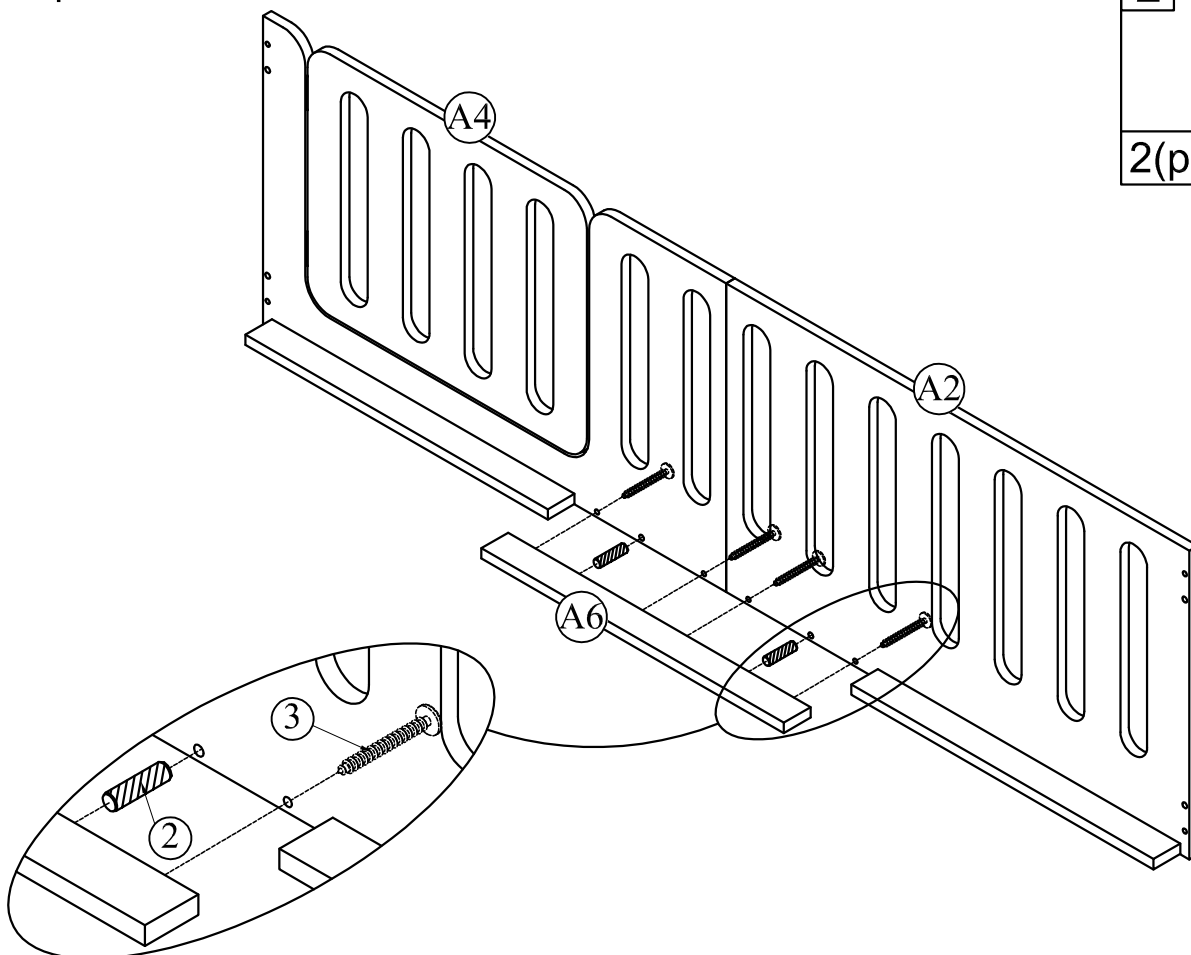


Step 9:

5	2	1
		
4(pcs)	4(pcs)	4(pcs)

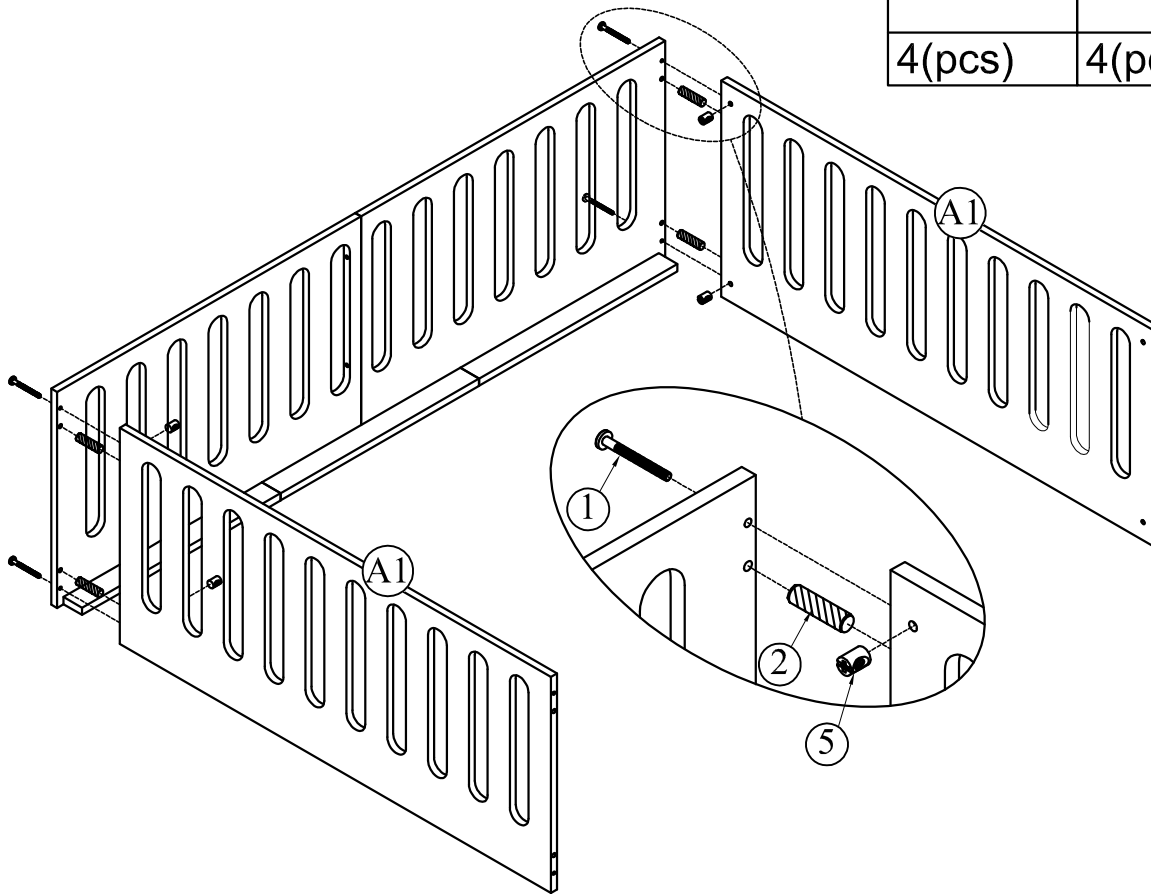

Step 10:

5	2	1
		
4(pcs)	4(pcs)	4(pcs)

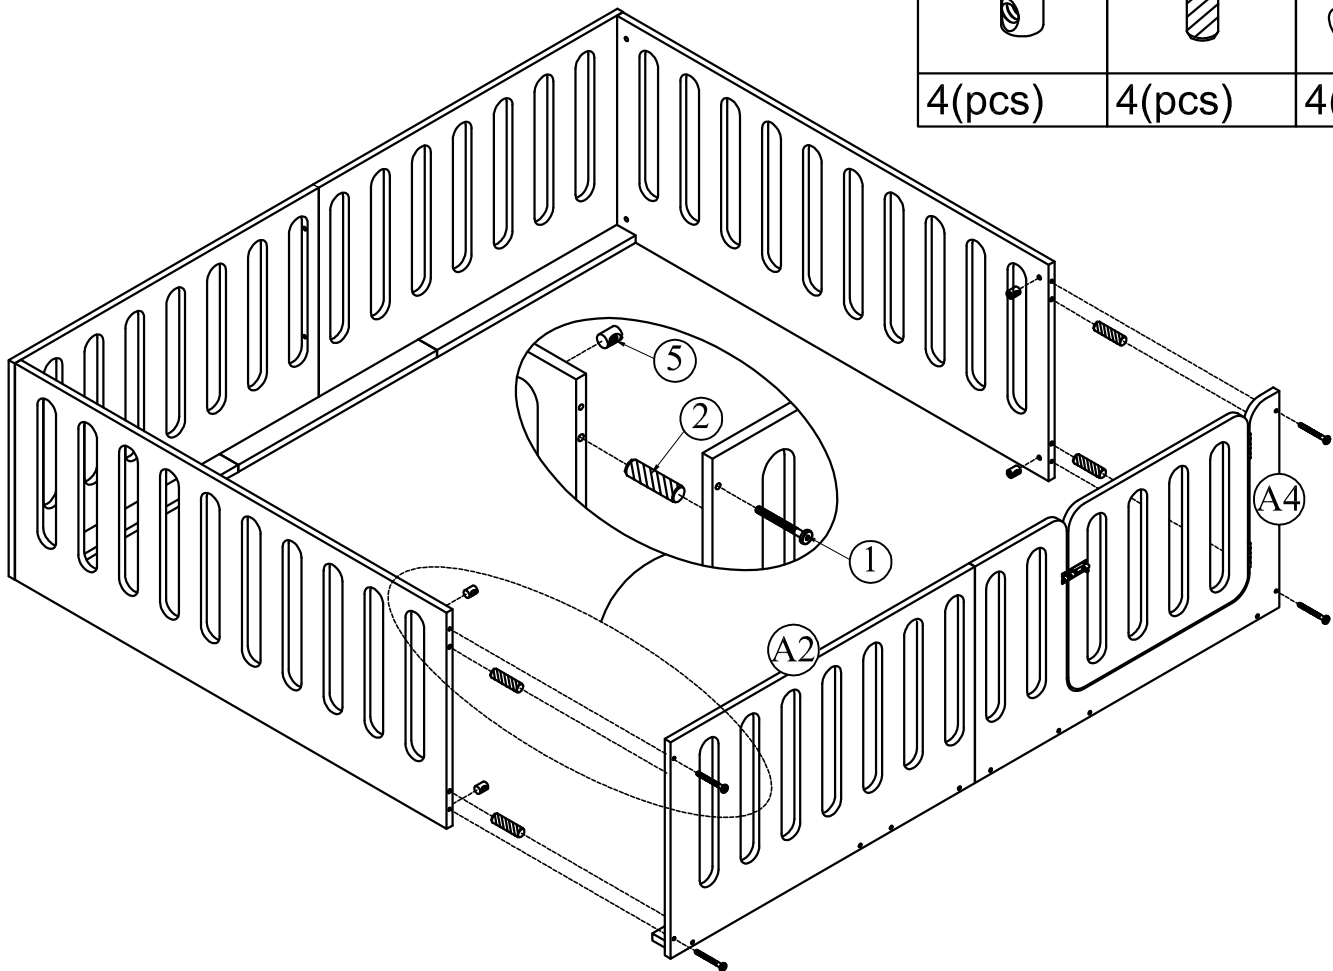

Finish:

