




Assembly Instructions

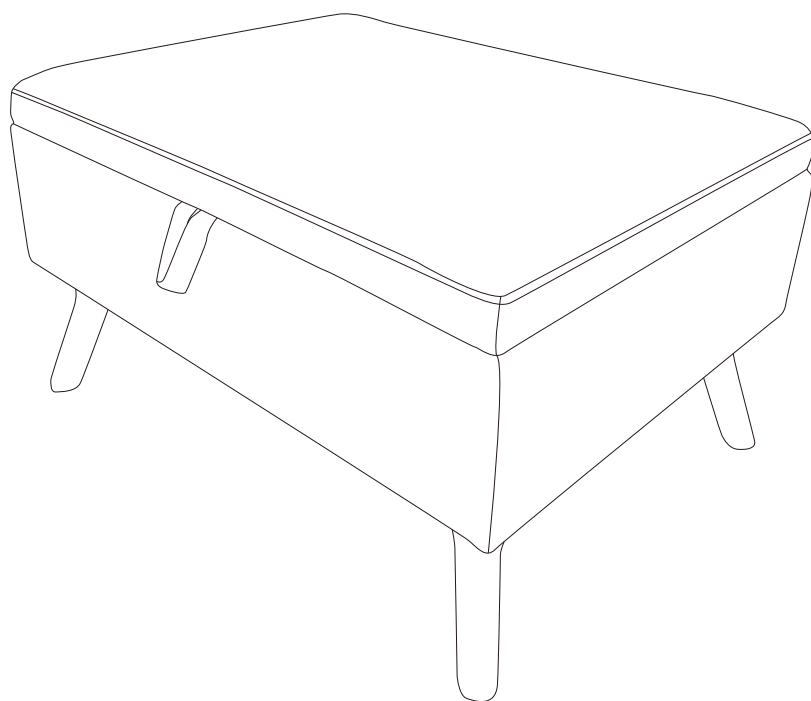


PARTS CHECKLIST

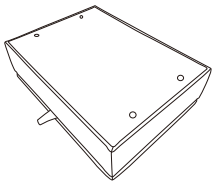


Ax1PC

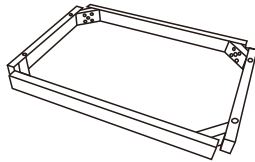


Bx1PC

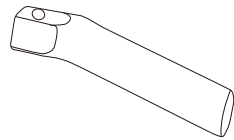

Cx4PCS

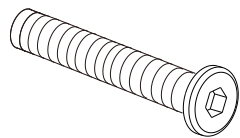

M8*70
Dx4PCS



M6*35
Ex4PCS



M6
Fx4PCS



8*22*1.5
Gx4PCS




6*13*1.5
Hx4PCS




Ix1PC




Jx4PCS

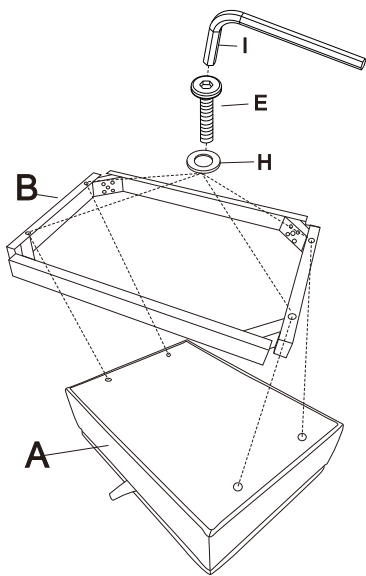


Step 1 : Connect woodframe [B] to seat [A] with Screw [E] and washer [H]. And tighten them by 100%.

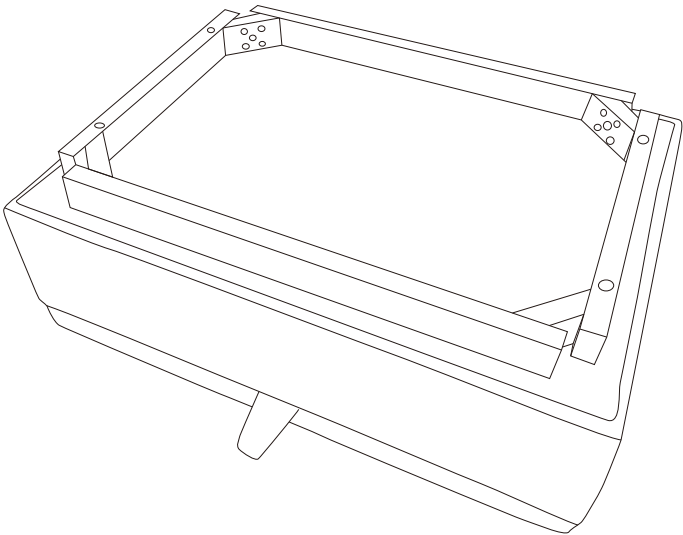


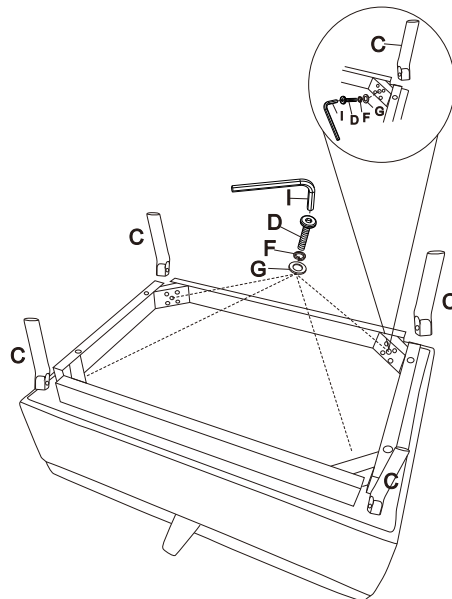

Step 2 : Connect legs [C] to woodframe [B] with Screw [D] and washer [F,G]. And tighten them by 60%.

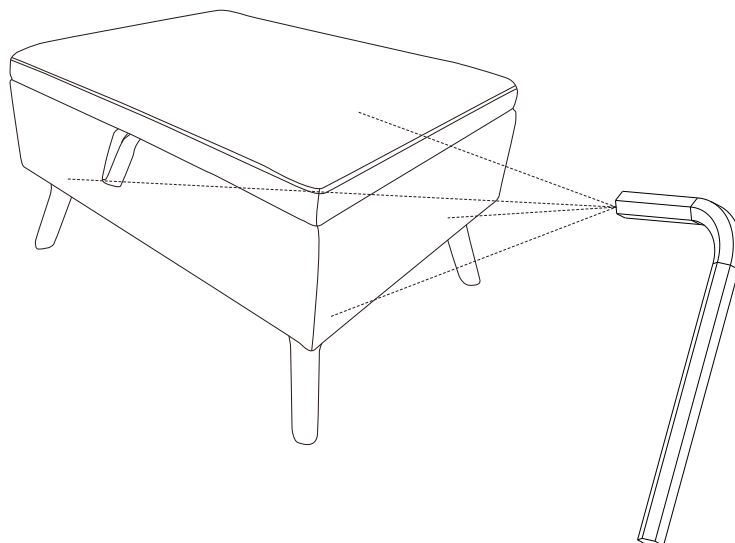

Step 3 : Make sure the ottoman is leveled on the ground. Then tighten all the screws by 100%

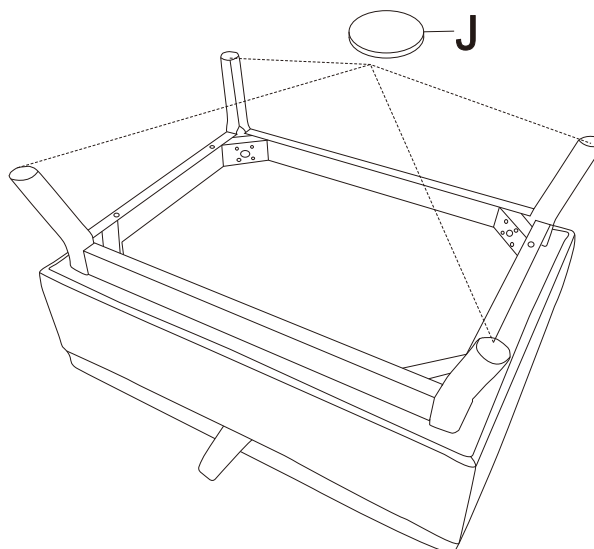

Step 4 : Put the hole caps [J] into the bottom of legs

