
PHOENIX 6 DRAWER WIDE CHEST

Assembly instruction- Please keep for future reference

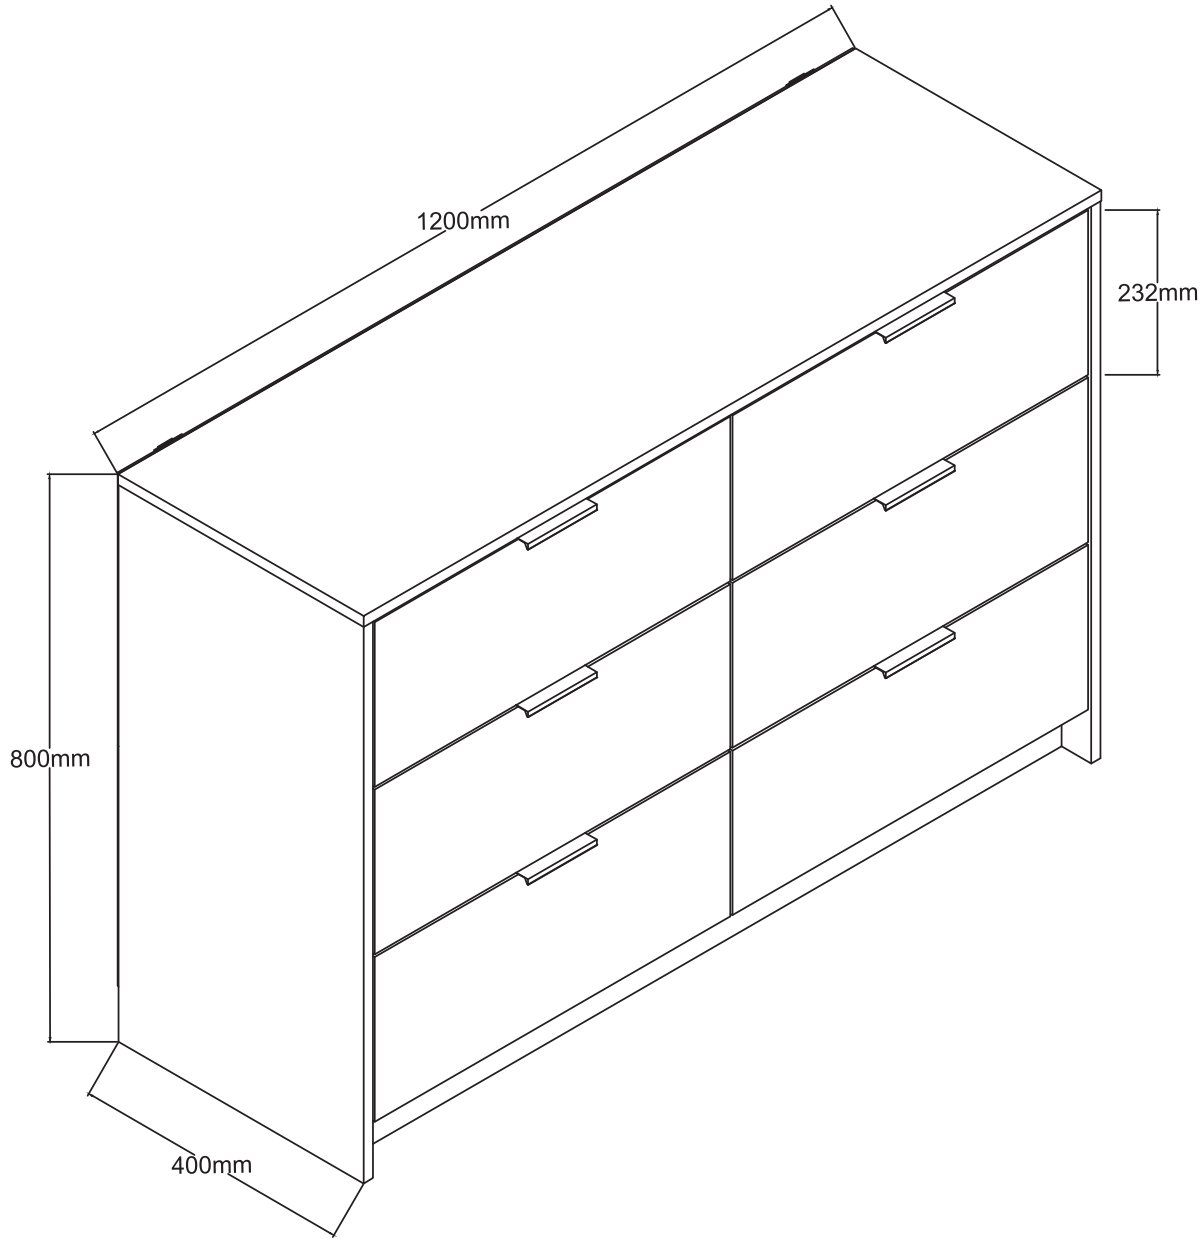

Dimensions	No.People	Assembly Time	OW#
Width: 120 cm Depth: 40 cm Height: 80 cm		90 mins (approx)	CHTPHO6BK CHTPHO6OK CHTPHO6WT CHTPHO6GY

thank you

Important-Please read these instructions fully before starting assembly

⚠ Safety and Care Advice

Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2,3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screw, as this could damage the unit. only use hand screwdrivers.




- Dispose of all packaging carefully and responsibly.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.Take to your local authority waste disposal centre.

If you are unhappy with the product and wish to return it, please following the retailer's returns procedure.

Components - Panels

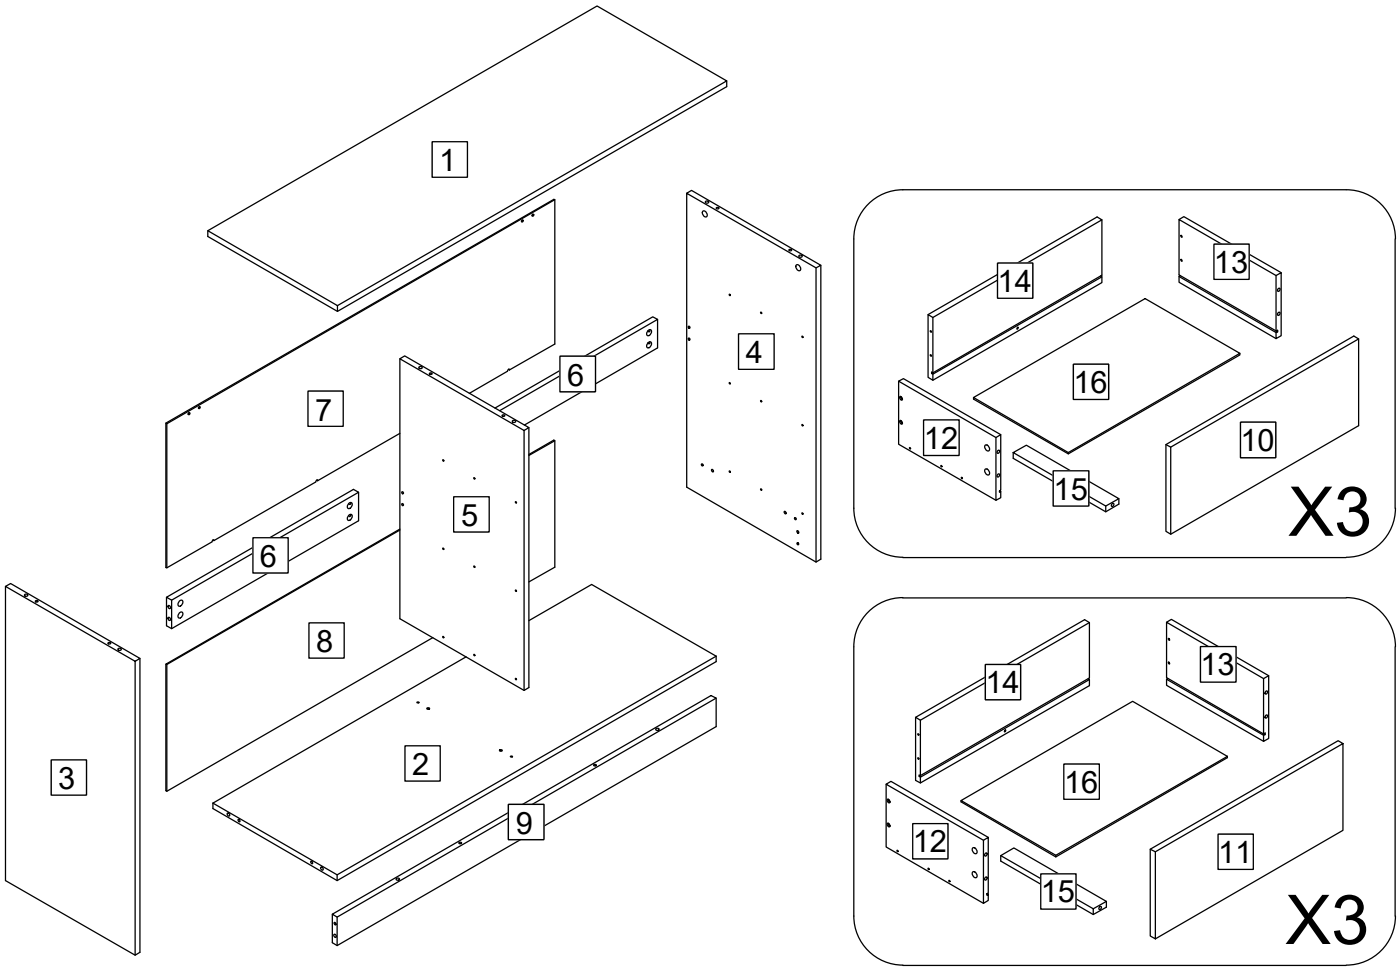

Components - Panels

Please check that you have all the components listed below before constructing your item.

Part No	Description	Qty	Thickness (mm)
1	Top Panel	1	15 mm
2	Bottom Panel	1	15 mm
3	Left Side Panel	1	15 mm
4	Right Side Panel	1	15 mm
5	Centre Panel	1	15 mm
6	Back Pull Bar	2	15 mm
7	Back Panel	1	3 mm
8	Back Panel	1	3 mm
9	Lower Front Panel	1	15 mm
10	Drawer Front Panel	3	15 mm
11	Drawer Front Panel	3	15 mm
12	Drawer Side Panel	6	15 mm
13	Drawer Side Panel	6	15 mm
14	Drawer Back Panel	6	15 mm
15	Drawer Bottom Pull Rod	6	15 mm
16	Drawer Base Panel	6	3 mm




Important-Please read these instructions fully before starting assembly

Components - Fixings




Please check that you have all the components listed below before constructing your item.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


HARDWARE

(A)  Cam Bolt M6x35mm X 52	(B)  Cam Lock M15x10mm X 52	(C)  Dowel M6x30mm X 16	(D)  M4x35mm X 36	(E)  M3x12mm X 84
(F)  Leg Pin X 5	(G)  Nail X 26	(H)  Backboard screws M2.5x14mm X 4	(I)  Handle X 6	
(CL)  Drawer Slide X 6	(CR)  Drawer Slide X 6	(DL)  Drawer Slide X 6	(DR)  Drawer Slide X 6	


ANTI - TIPPING KITS

(J)  Strap X 2	(K)  M3.5x14mm X 4	(L)  Wall Plug X 4	(M)  Bracket X 4

Tools Required (Not Provided)



Ruler - Use this to measure your screws (mm)




Important-Please read these instructions fully before starting assembly

Assembly Instructions

Step 1


Attach drawer slide rail (CL) & (CR) to Panel boards [3] , [4] & [5] with screw (E) onto the specific pre-drilled pilot holes as shown below.

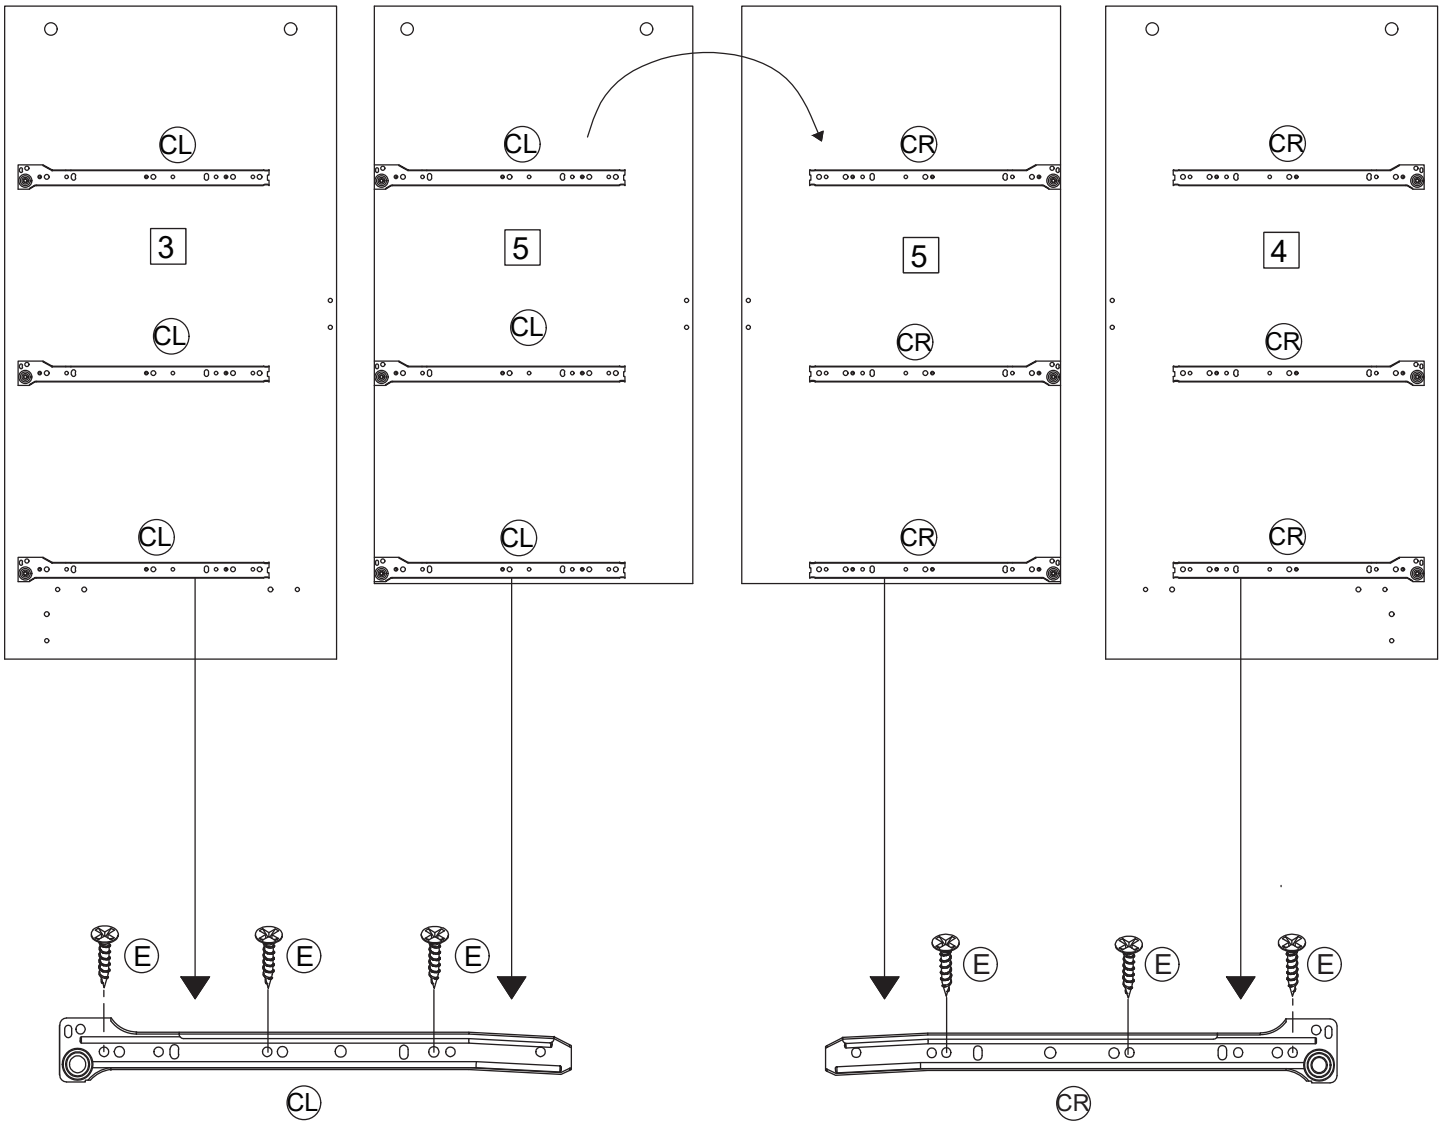

(E)	(CL)	(CR)
 M3x12mm X 36	 Drawer Slide X 6	 Drawer Slide X 6

Step 2

Insert cam bolt Ⓐ into corresponding holes in part 1 , 2 , 3 , 4 & 5 as shown.

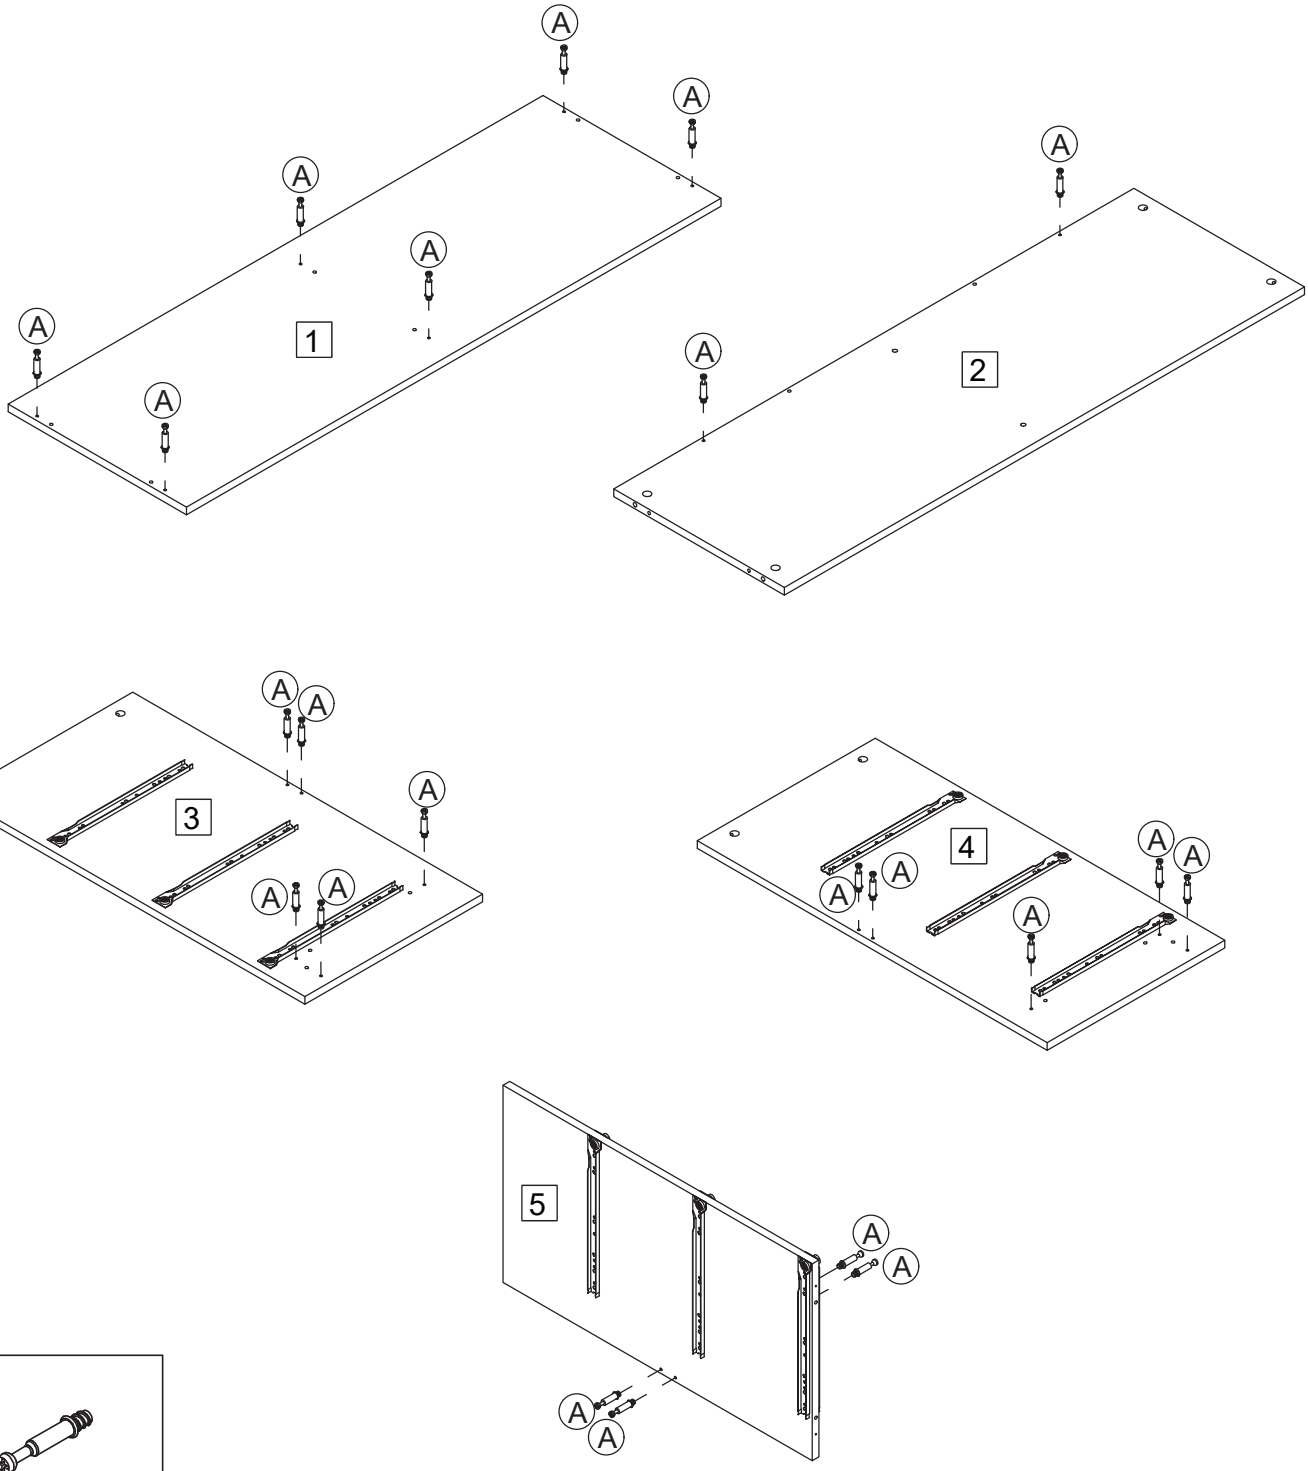


(A)

Cam Bolt M6x35mm X 22

Step 3


Insert cam locks Ⓑ to parts 6 .Attach part 5 as shown.
Turn cam locks clockwise to tighten.

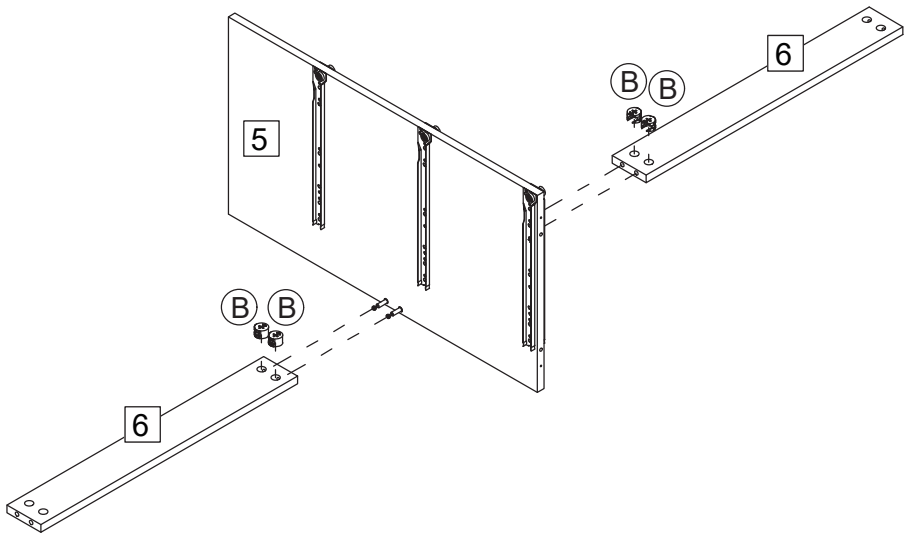

(B)




Cam Lock M15x10mm X 4

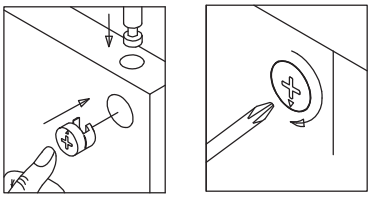


Step 4

Insert wooden dowels Ⓒ into part 2 as shown.
Add cam locks Ⓑ into part 9 as shown
and attach part 9 to 2.
Turn cam locks clockwise to tighten.

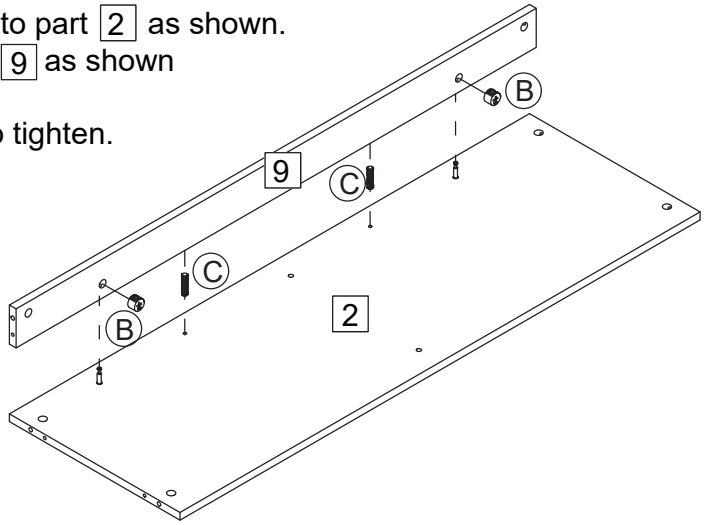


(B)	(C)
 Cam Lock M15x10mm X 2	 Dowel M6x30mm X 2

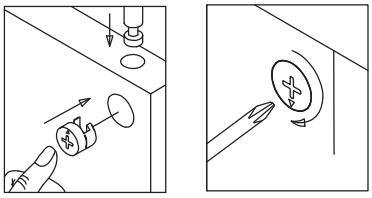

Step 5


Insert wooden dowels Ⓒ into part 5 as shown.
Attach part 2 to part 5 using screws Ⓓ as shown

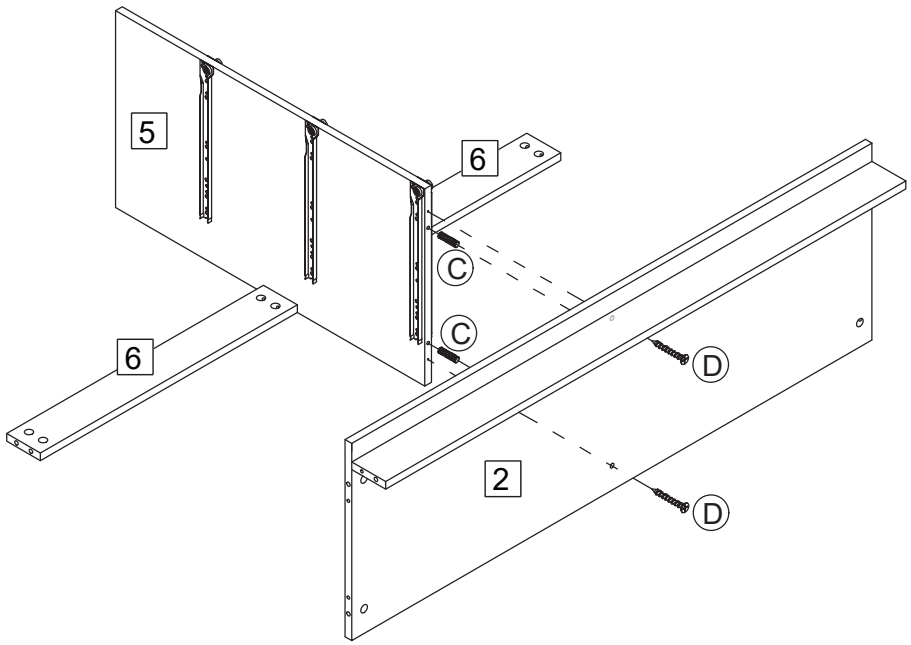

(D)	(C)
 M4x35mm X 2	 Dowel M6x30mm X 2

Step 6


Insert wooden dowels Ⓒ into part 2 and 9 as shown.
Add cam locks Ⓑ into part 2, 6 and 9 as shown and attach part 3 to assembled unit.Turn cam locks clockwise to tighten.

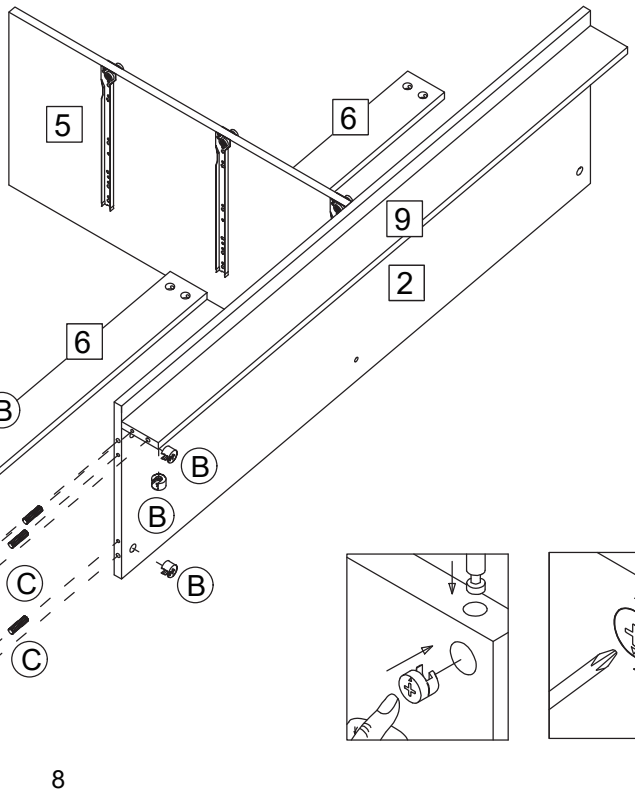

(B)	(C)
 Cam Lock M15x10mm X 5	 Dowel M6x30mm X 3

Step 7

Insert wooden dowels Ⓒ into part 2 and 9 as shown.
Add cam locks Ⓑ into part 2, 6 and 9 as shown and attach part 4 to assembled unit.Turn cam locks clockwise to tighten.

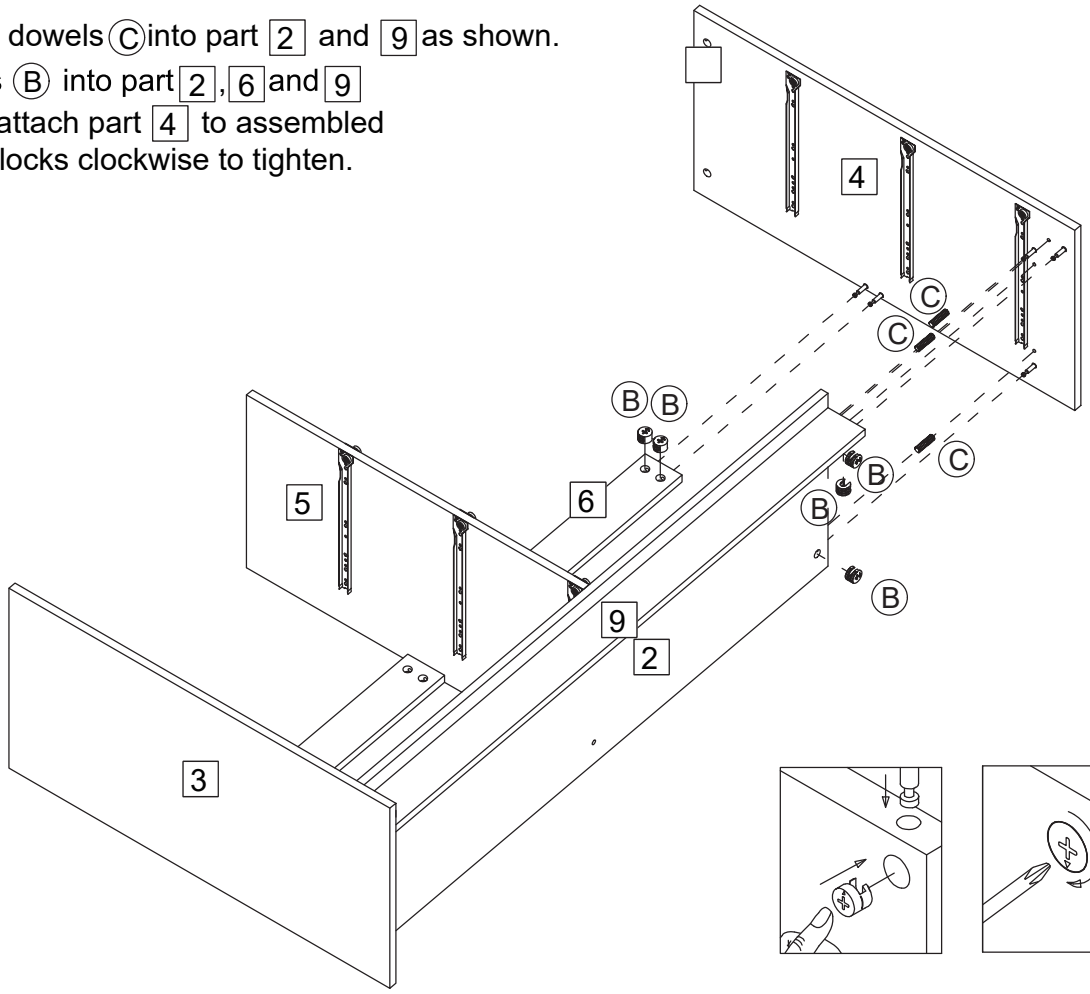

(B)



Cam Lock M15x10mm X 5


(C)



Dowel M6x30mm X 3

Step 8

Attach Leg pin Ⓕ as shown, using a small hammer

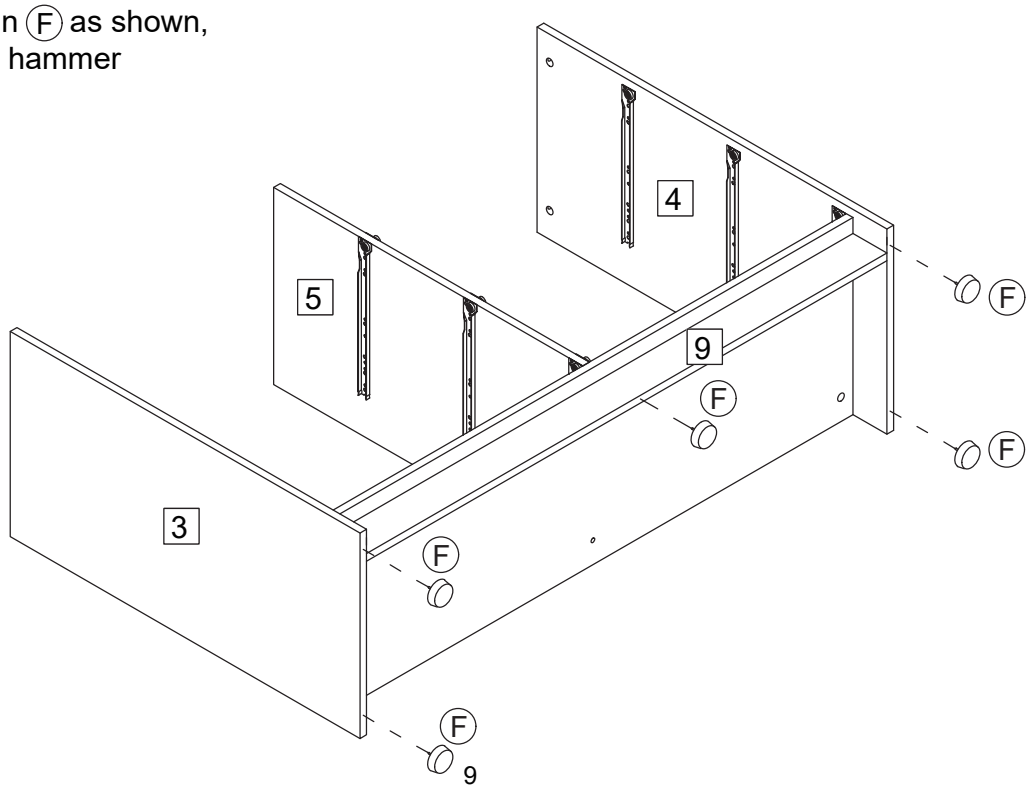

(F)




Leg Pin X 5


Step 9


Insert wooden dowels (C) and cam locks (B) into part 3, 4 and 5 as shown.

Attach part 1 to assembled unit. Turn cam locks clockwise to tighten.

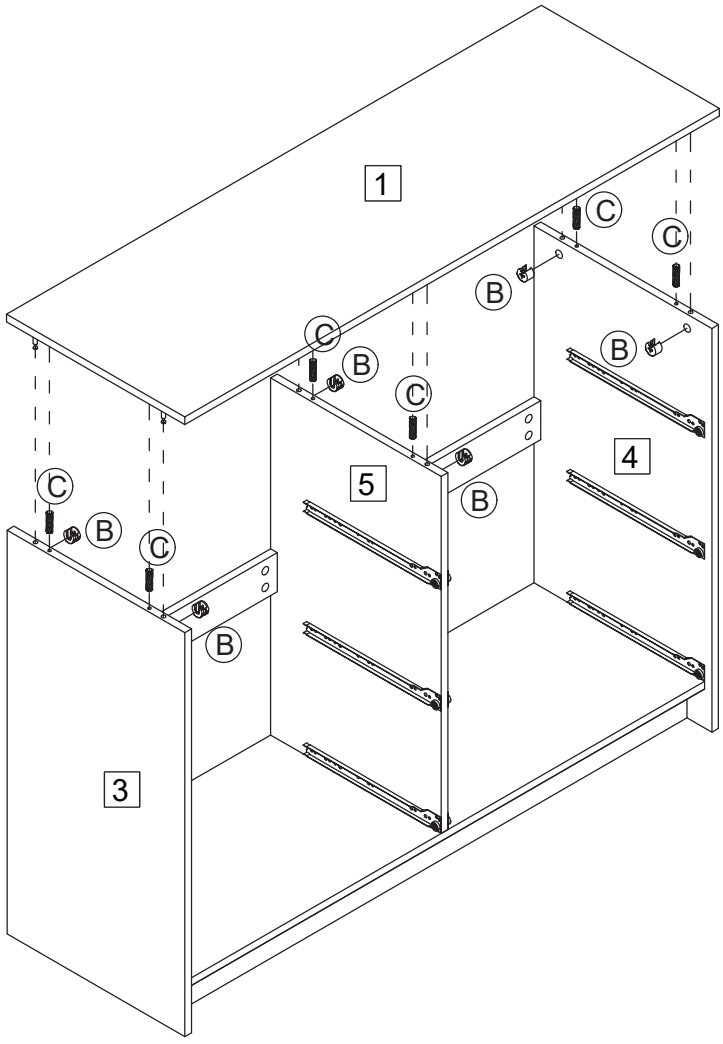


(B)	(C)
 Cam Lock M15x10mm X 6	 Dowel M6x30mm X 6

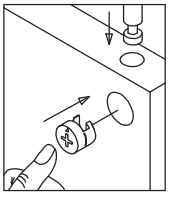

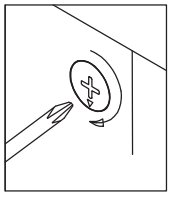



Step10

Attach back board 7 and 8 to the back of chest,with nail Ⓖ using a small hammer.
Fix the middle with screws Ⓗ.

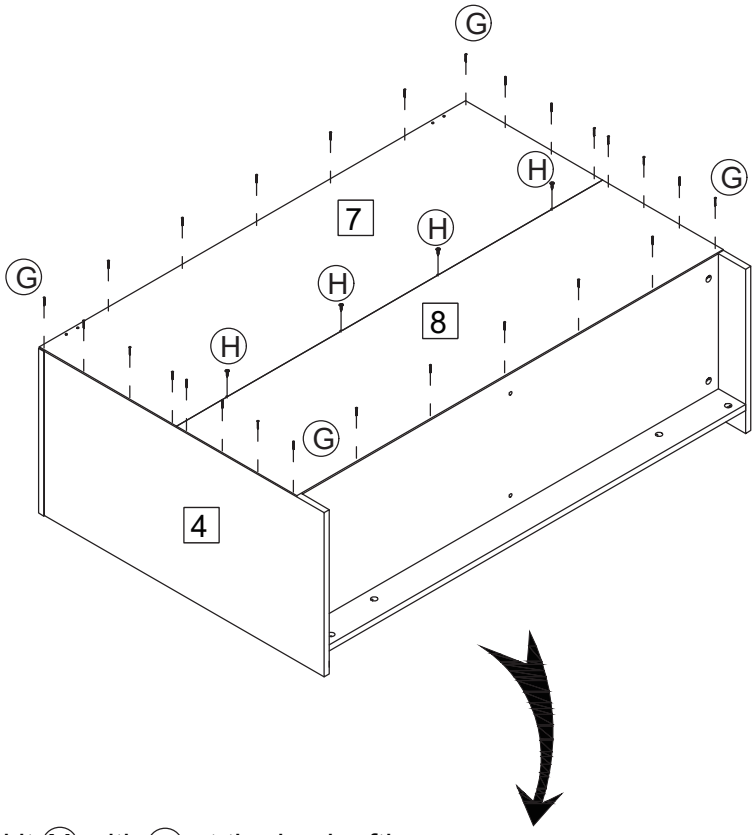


Attach Anti tipping kit Ⓜ with Ⓚ at the back ofthe chest as shown.

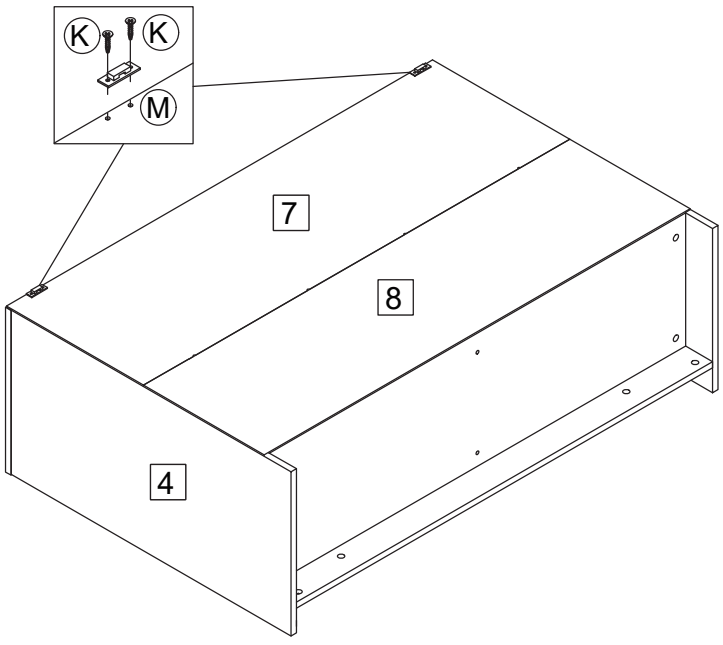

(G)  Nail X 26	(H)  Backboard screws X 4
(K)  M3.5x14mm X 4	(M)  Bracket X 2

Step 11

Attach parts 12 and 13 and 15 to part 14 by using screws (D) as shown.

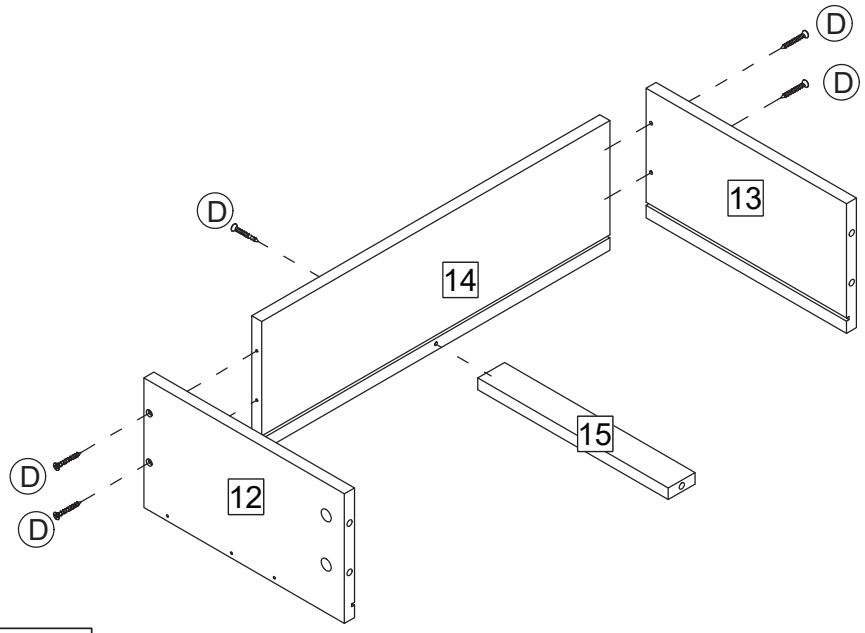

X6


(D)



M4x35mm X 30

Step 12


Slide part 16 into available slots of parts 12 and 13 as shown.

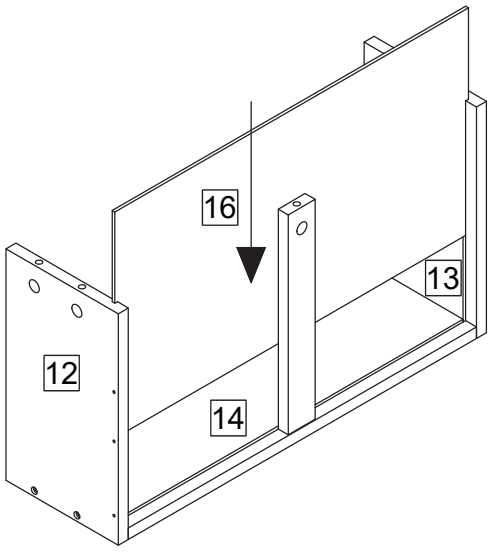


X6

Step 13

Insert cam bolt (A) into corresponding holes in parts 10 and 11 as shown.
Fix handle (I) to part 10 and 11 using screw (E), as shown.Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

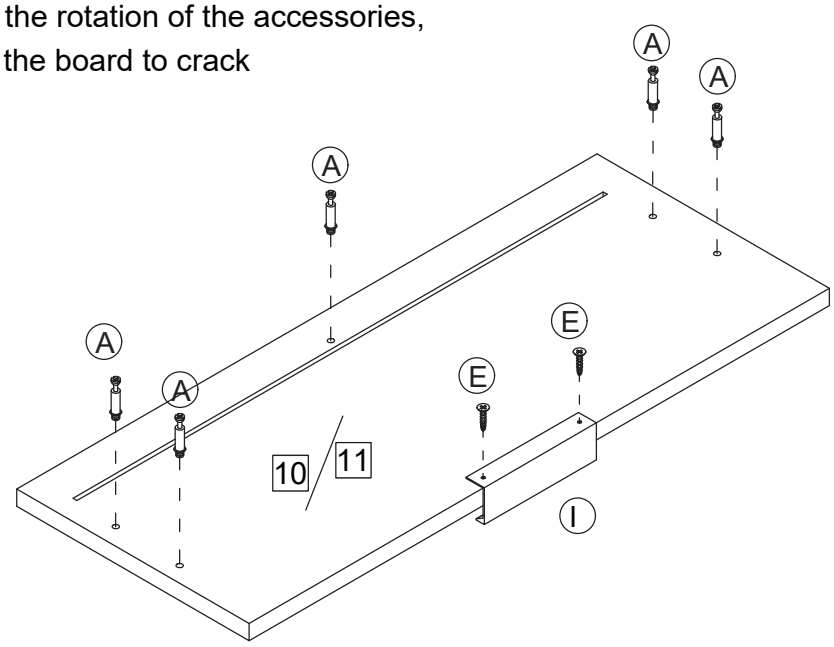


X6

(A)	(E)	(H)
 Cam Bolt M6x35mm X 30	 M3x12mm X 12	 Handle X 6


Step 14


Insert cam locks (B) to parts 12 and 13 and attach part 10 and 11 as shown.
Turn cam locks clockwise to tighten.

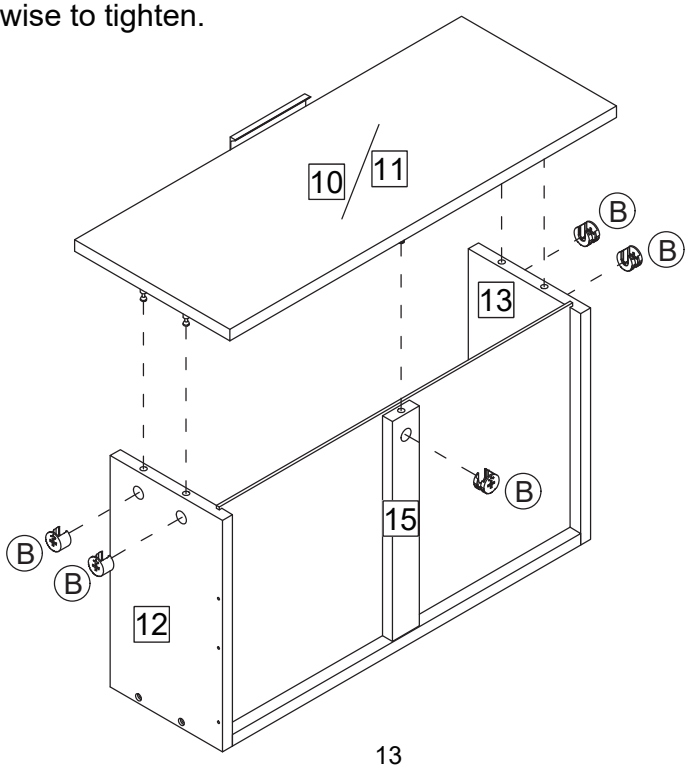

X6


(B)
 Cam Lock M15x10mm X 30

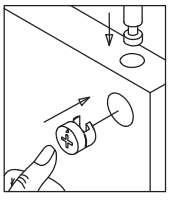

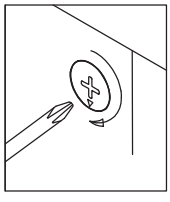

Step 15

Fix left inner drawer runner (DL) to part 12 and fix right inner drawer runner (DR) to part 13 by using screws (E) as shown.

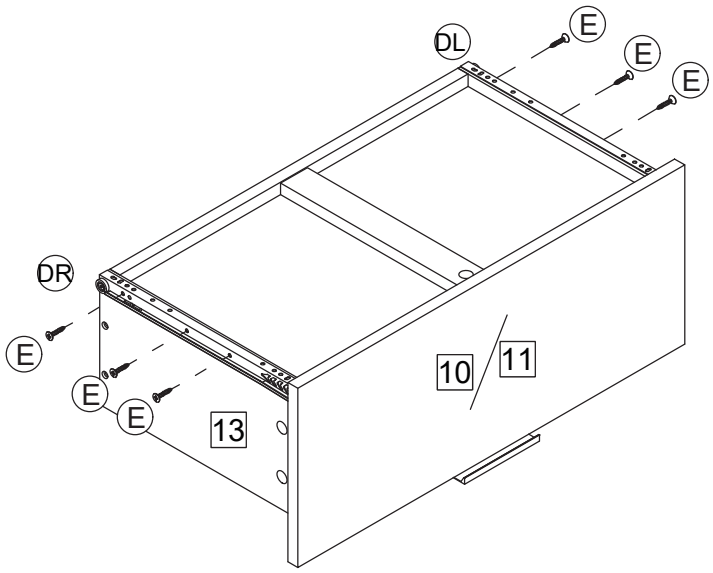



X6

(E)	(DL)	(DR)
M3x12mm X 36	Drawer Slide X 6	Drawer Slide X 6

Step 16


Slide in drawers into the chest carcase frame with the drawer front panel marked.10 on the left side of the chest and 11 on the right side of the chest.

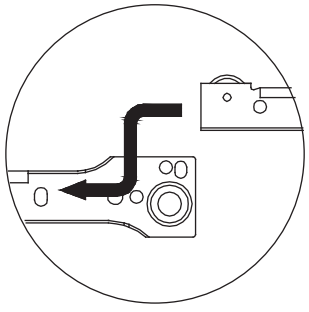


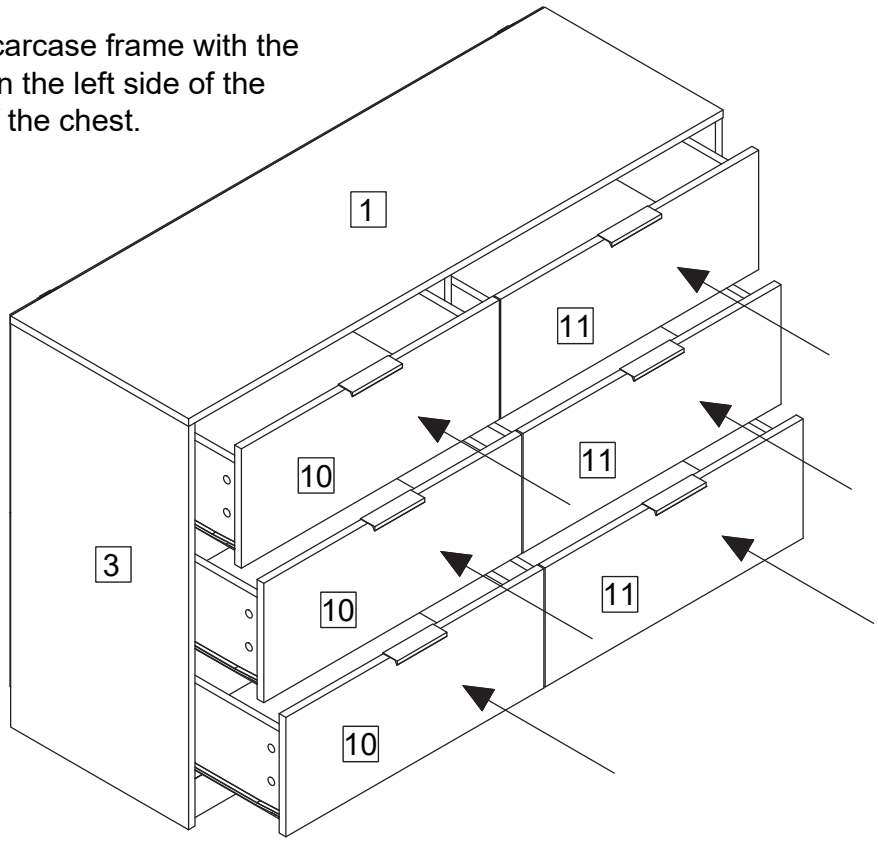

Step 17

Attach the Anti- Tipping kit to the wall, following the setps as shown.

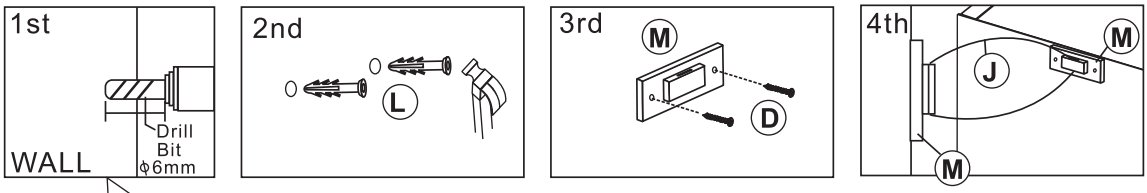

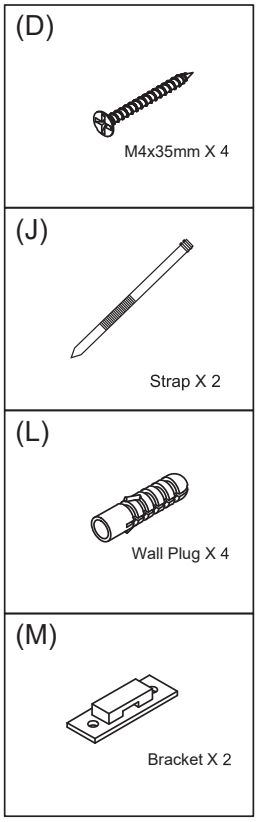

Assembly complete