
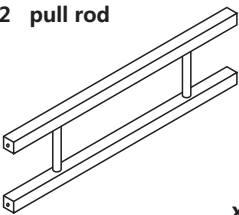
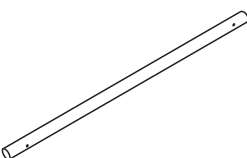
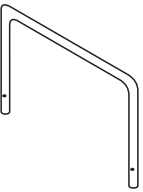
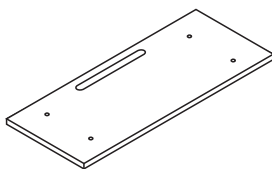
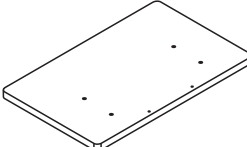
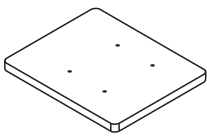

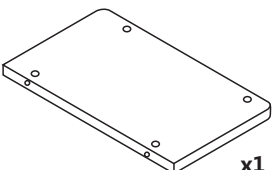
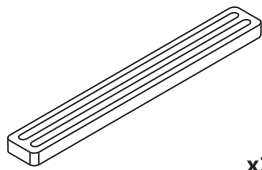
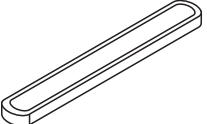



101#2 Installation Steps

Please read the installation instructions carefully before installation. The front and back of the board are different. Be sure to see it clearly before operation. Attention shall be paid to the sizes of screws.


Before installation, be sure to know well about each part and make an inventory.

Parts List:


A M5x50 pointed-end screw  x2	1 table leg  x2	2 pull rod  x1	3 L-shaped pipe for keypad board  x2
B M6x12 flat-end screw  x8			
C M6x20 flat-end screw  x2	4 L-shaped pipe for panel board  x2	5 circular pipe  x1	6 U-shaped pipe  x1
D M6x35 flat-end screw  x4			
E rotating handle  x4			
F Q-shaped clamp  x4	7 panel board  x1	8 keypad board  x1	9 mouse board  x1
G 1-inch wheel  x6			
H small wrench  x1	10 host holder  x1	11 slot  x1	12 barrier strip  x1
I dual-purpose screwdriver  x1			
J M5x60 pointed-end screw  x2			
K M6x45 flat-end screw  x8			
	13 square pipe  x1		

Installation steps:


Step 1: Screw the wheel [G] into the table leg [1] with the small wrench [H], and connect the table leg [1] and the pull rod [2] with the screws [K] (4 ones).

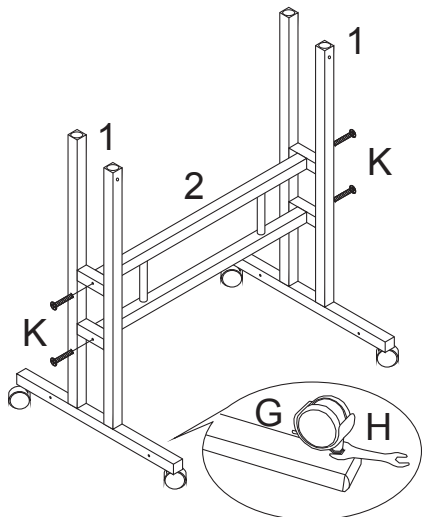


Step 2: Unscrew the rotating handles of the Q-shaped clamp [F], fit them into the circular pipe [5], and connect the circular pipe [5] and the L-shaped pipe for keypad board [3] with the screws [K] (2 ones).

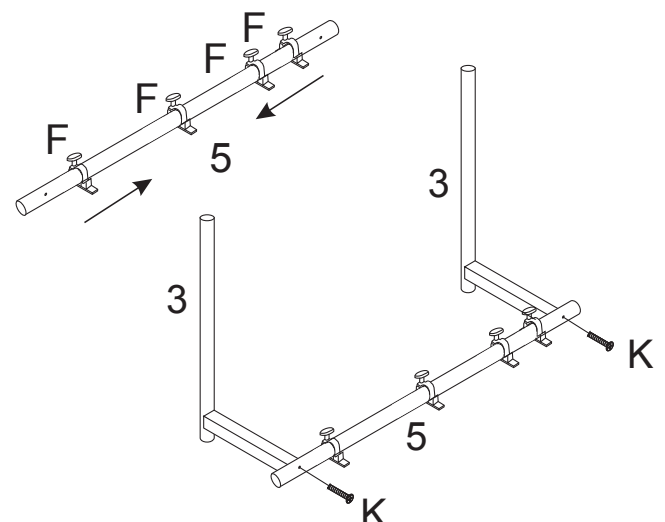


Step 3: Connect the Q-shaped clamp [F] with the keypad board [8] and the mouse board [9] with the screws [B] (8 ones).

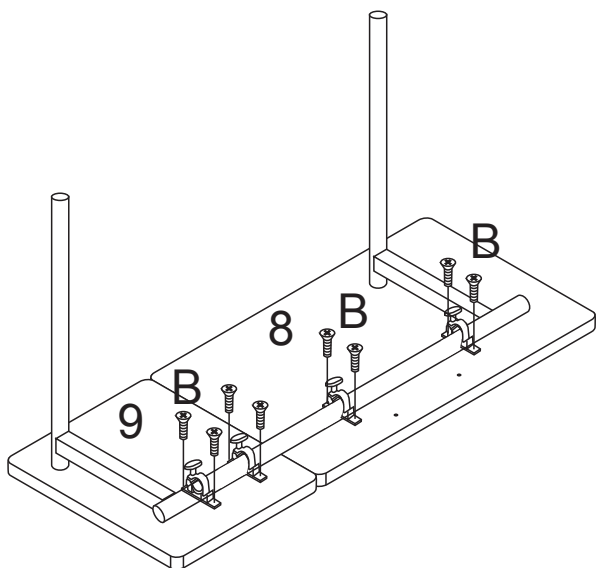


Step 4: Connect the L-shaped pipe for panel board [4] and the panel board [7] with the screws [D] (4 ones), and connect the L-shaped pipe for panel board [4] and the square pipe [13] with the screws [K] (2 ones).

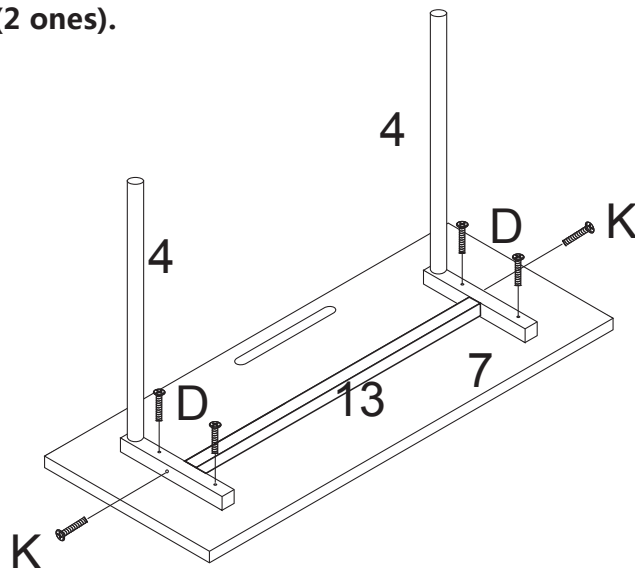

Step 5: Insert the parts finished in the above two steps into the table leg [1], and screw up the rotating handle [E] for fixation.

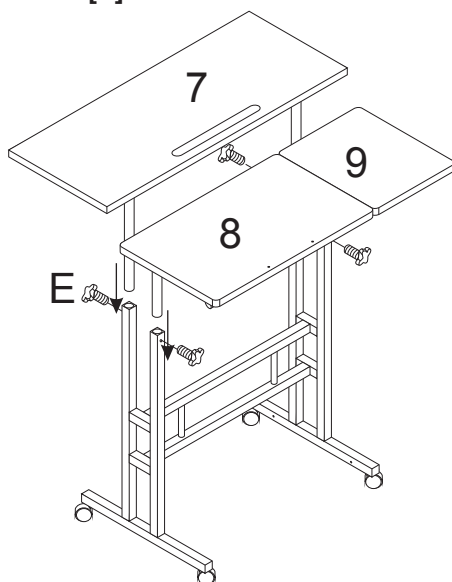


Step 6: Place the slot [11] into the panel board [7], and connect the barrier strip [12] and the keypad board [8] with the screws [C] (2 ones).

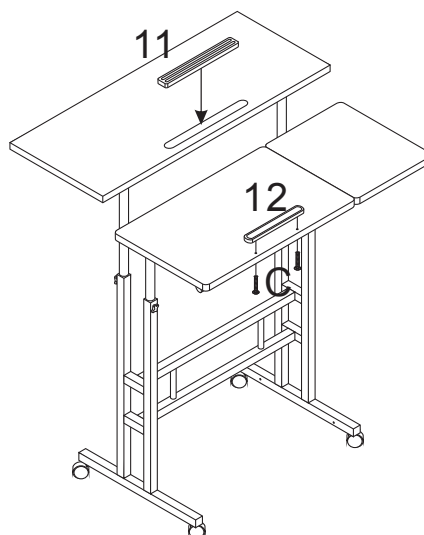

**If there is no host holder, the following steps shall be ignored.*

Step 7: Screw the wheel [G] into the U-shaped pipe [6] with the small wrench [H], and connect the U-shaped pipe [6] and the host holder [10] with the screws [A] (2 ones).

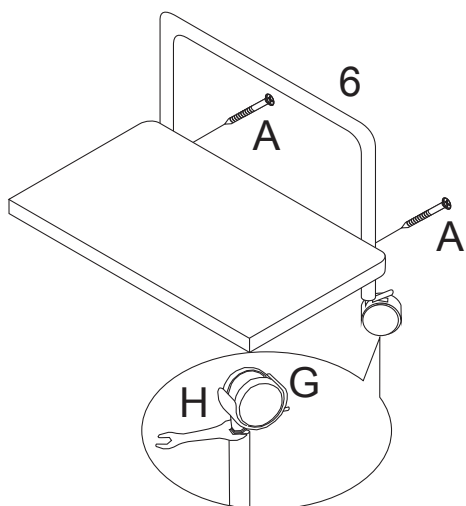

Step 8: Connect the table leg [1] and the host holder [10] with the screws [J] (2 ones). The installation is completed.

