


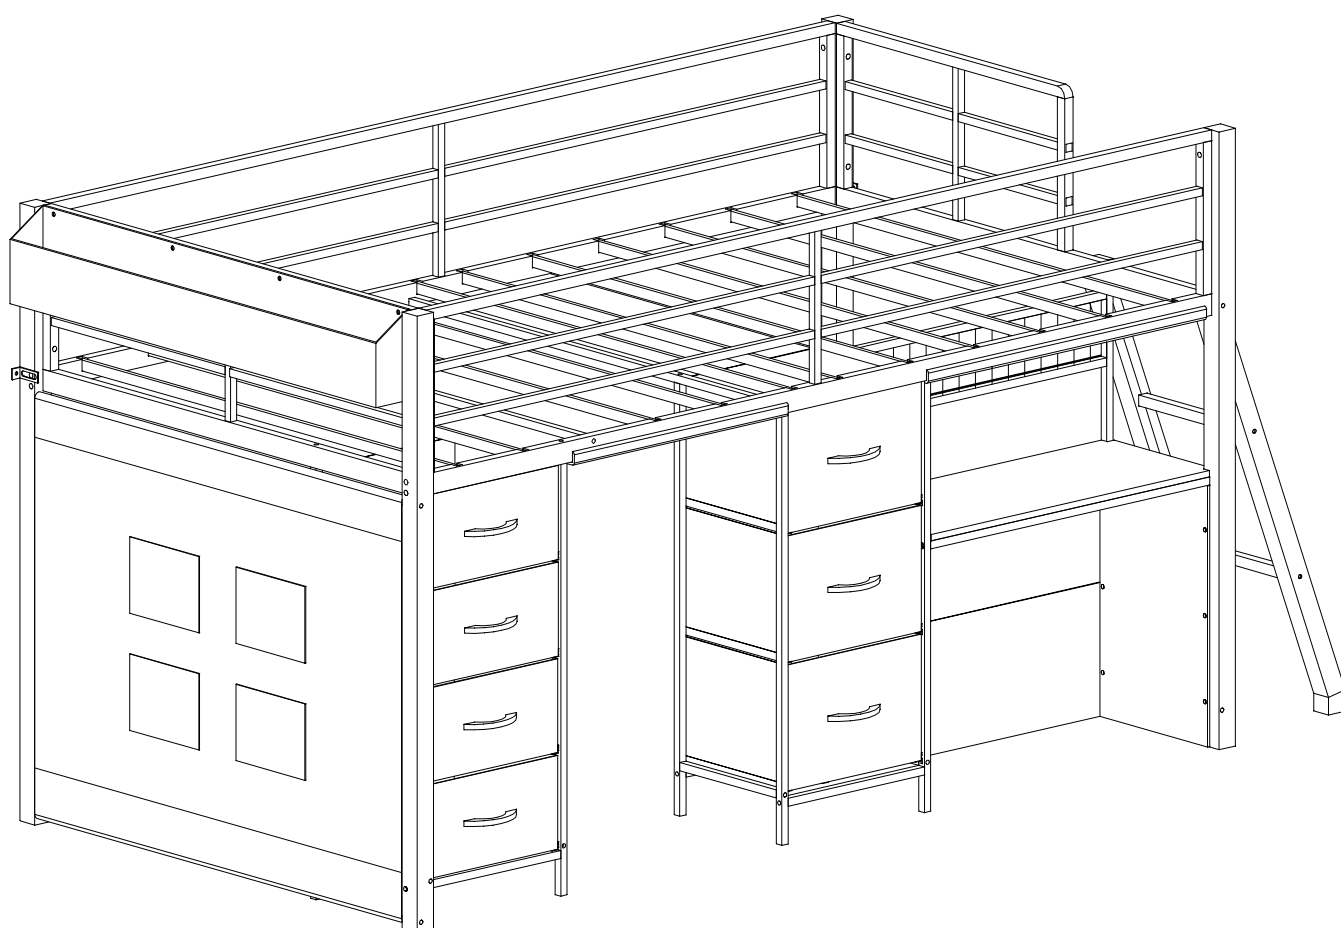


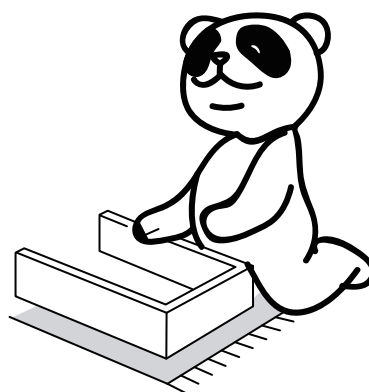



After installation, the bed frame must be securely fixed to the wall to prevent it from collapsing when being climbed, which could cause injury or damage.

CAUTION:When tightening the screws,tighten sequentially.
Do not tighten any screws fully and then towards the next one.
When every part is OK,then tighten all the screws.


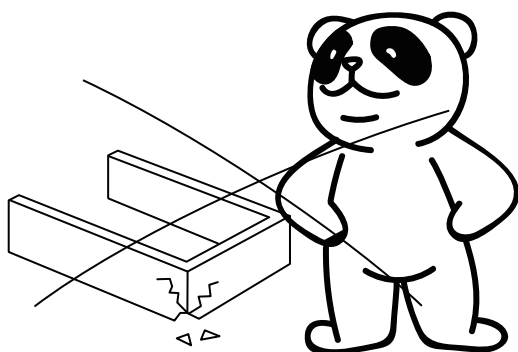


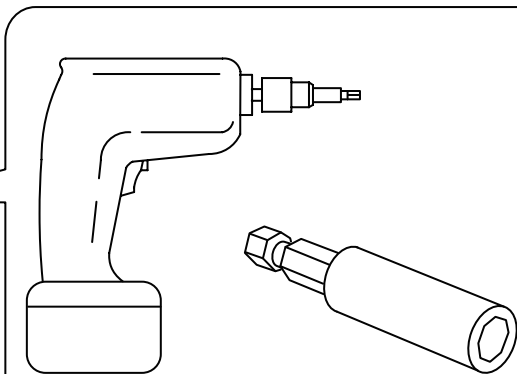

Violent installation is prohibited

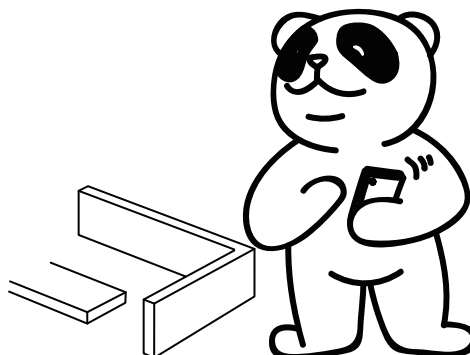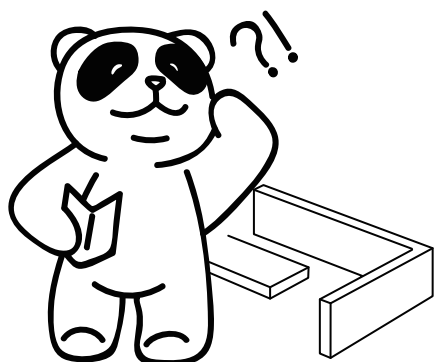

Please call if you need help

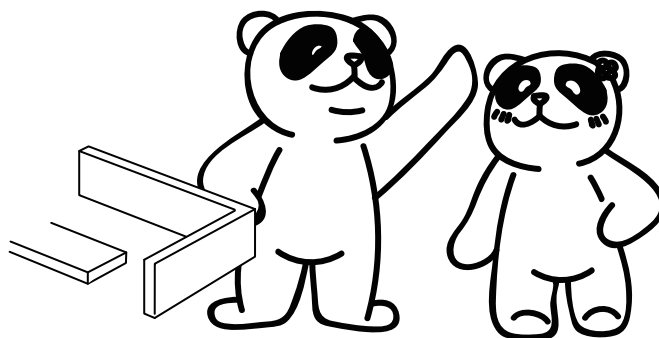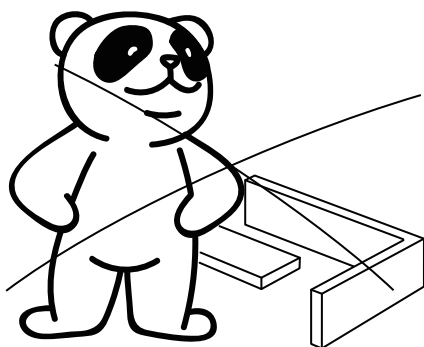

Multi-person cooperation is recommended

Assembly Instruction



1
x1




2
x1




3
x1




4
x1

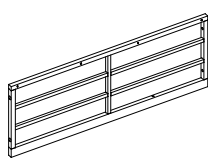


5
x1

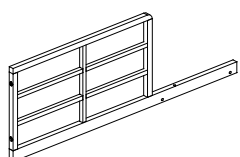

6
x1



7
x1



8
x1



9
x1



10
x1



11
x1



12
x1



13
x1




14
x1




15
x1




16
x1

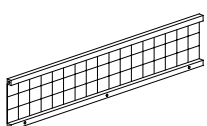


17
x1

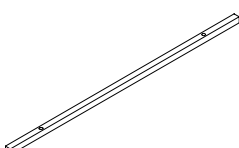


18
x2




19
x5

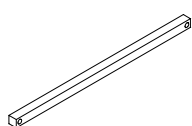

20
x1

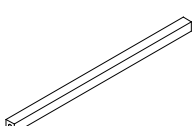

21
x4




22
x2



23
x2



24
x11

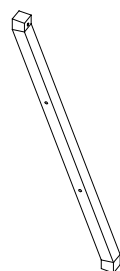


25
x1


Assembly Instruction




26
x1




27
x2

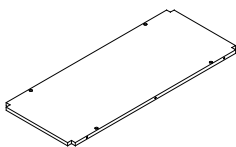


28
x1

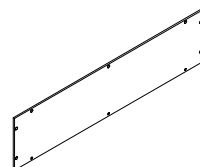


29
x1

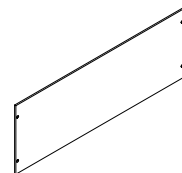

30
x2




31
x1



32
x2




Short




Long


33
x1

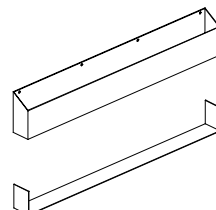


34
x1

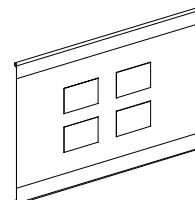


35
x1

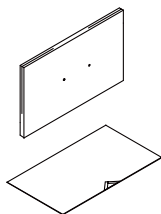


36
x4

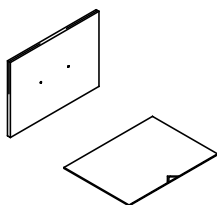

37
x3



38
x2

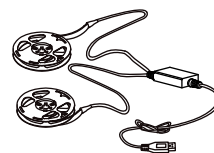

LED Light

39
x1



40
x1

Hardware parts 1



A
M6*12
x25+2



B
M6*22
x34+3



C
M6*28
x6+1



D
M6*55
x12+1



E
M6*70
x2+1



F
M8*35
x10+1



G
M8*60
x8+1



H
M5*40
x3+1



J
M6
x2+1



K
M4*10
x14+1



M
x7




N
Velcro
x6



P
M6*60
x2



L
x7



R
x7




M4



M3




M10&M12





friendly reminder



To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

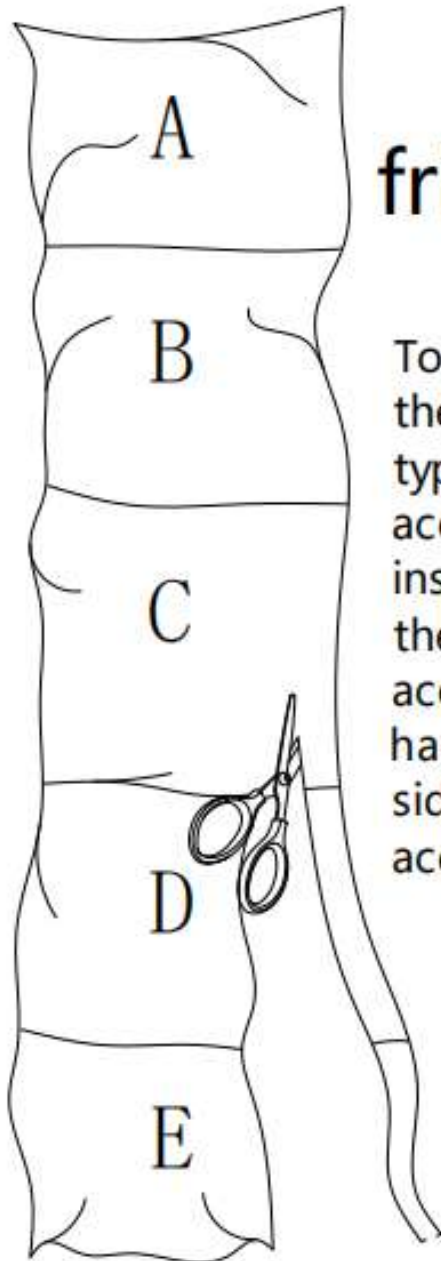


Assembly Instruction

LED light strip electronic accessories list

(Long)
LED strip 1

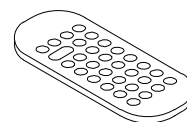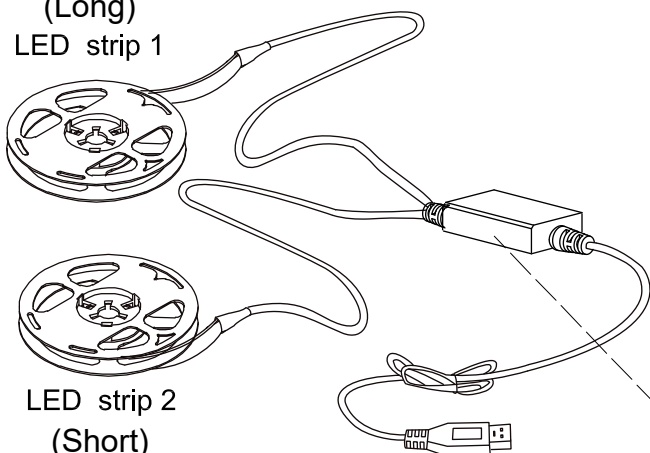


x1
Remote control

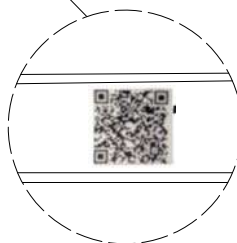


There is a two-dimensional code at the position of the power line. Scanning can download the APP for the control light

Velcro straps

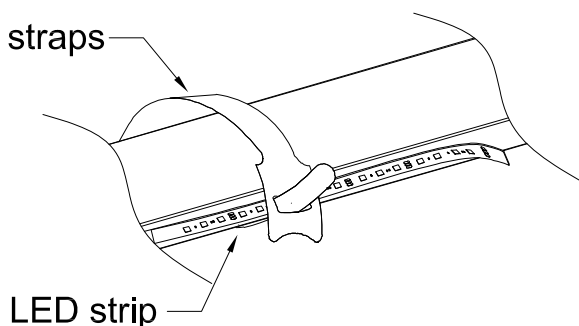

LED strip

When the wire is disturbed, place the wire inside the velcro and thread the small end of the strap through the strip hole in the head and gently pull it tight

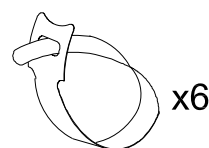


x6
Velcro straps


Assembly Instruction

Note:


1. should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

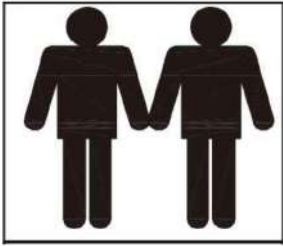



It needs at least two people to install.

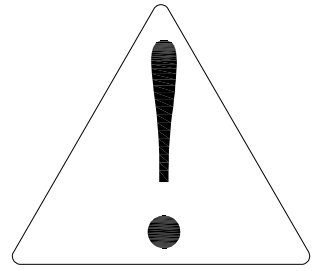

Before starting the assembly, you must read the whole manual and follow the instructions

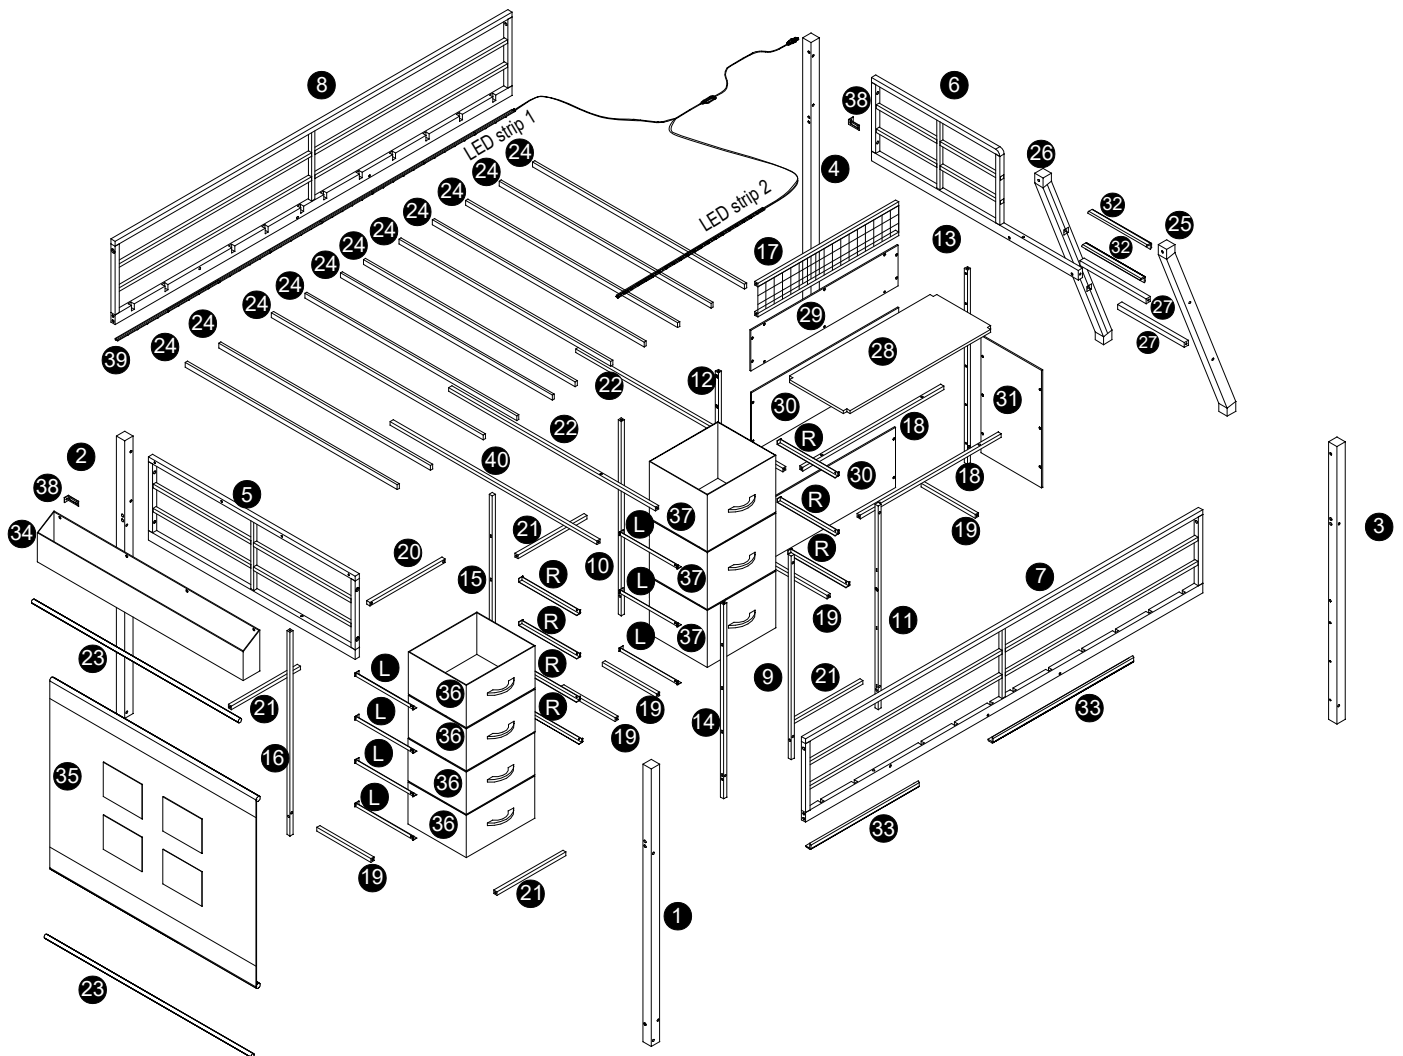


Assembly Instruction

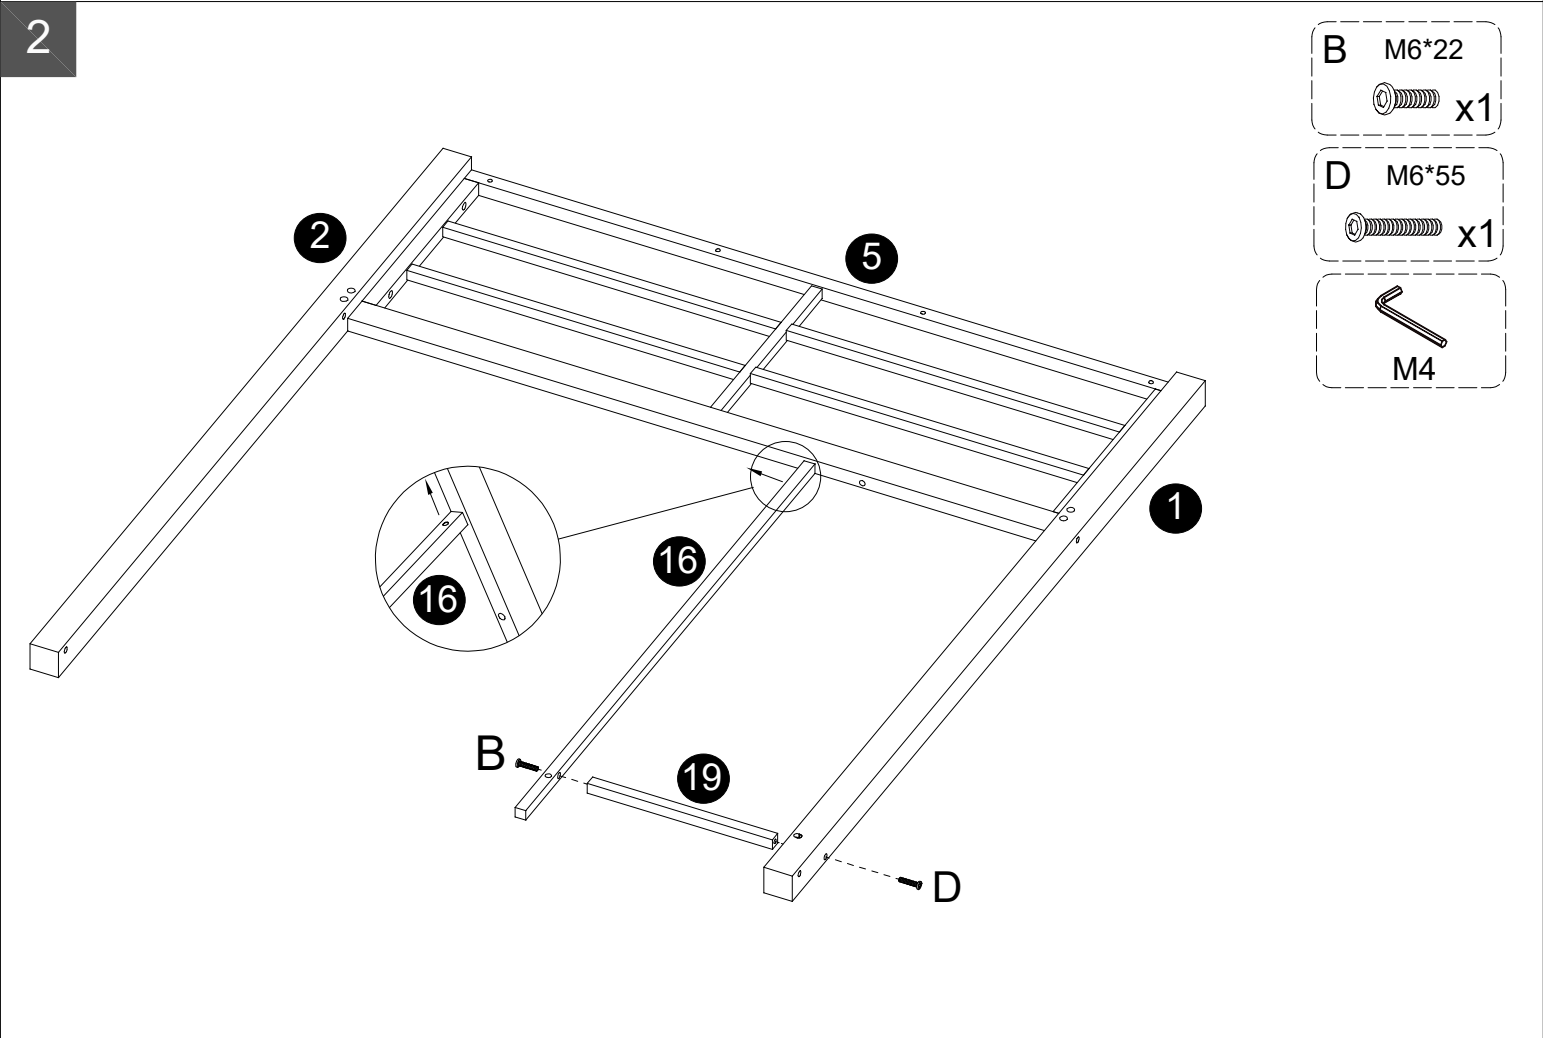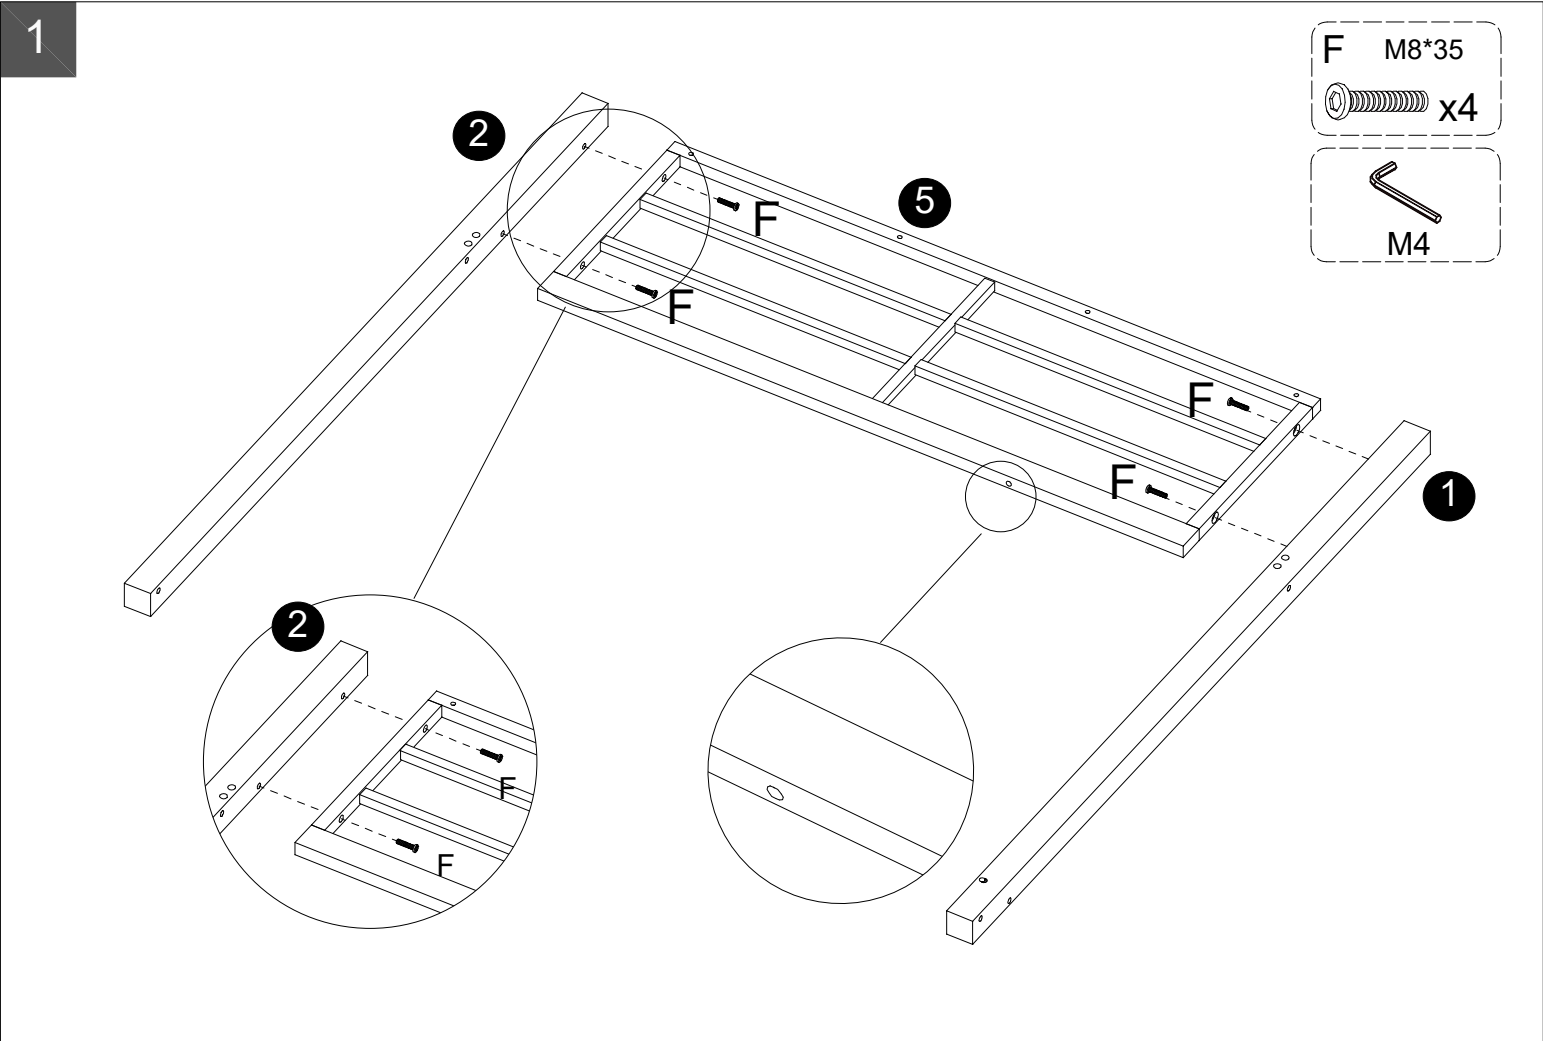


Assembly Instruction

3

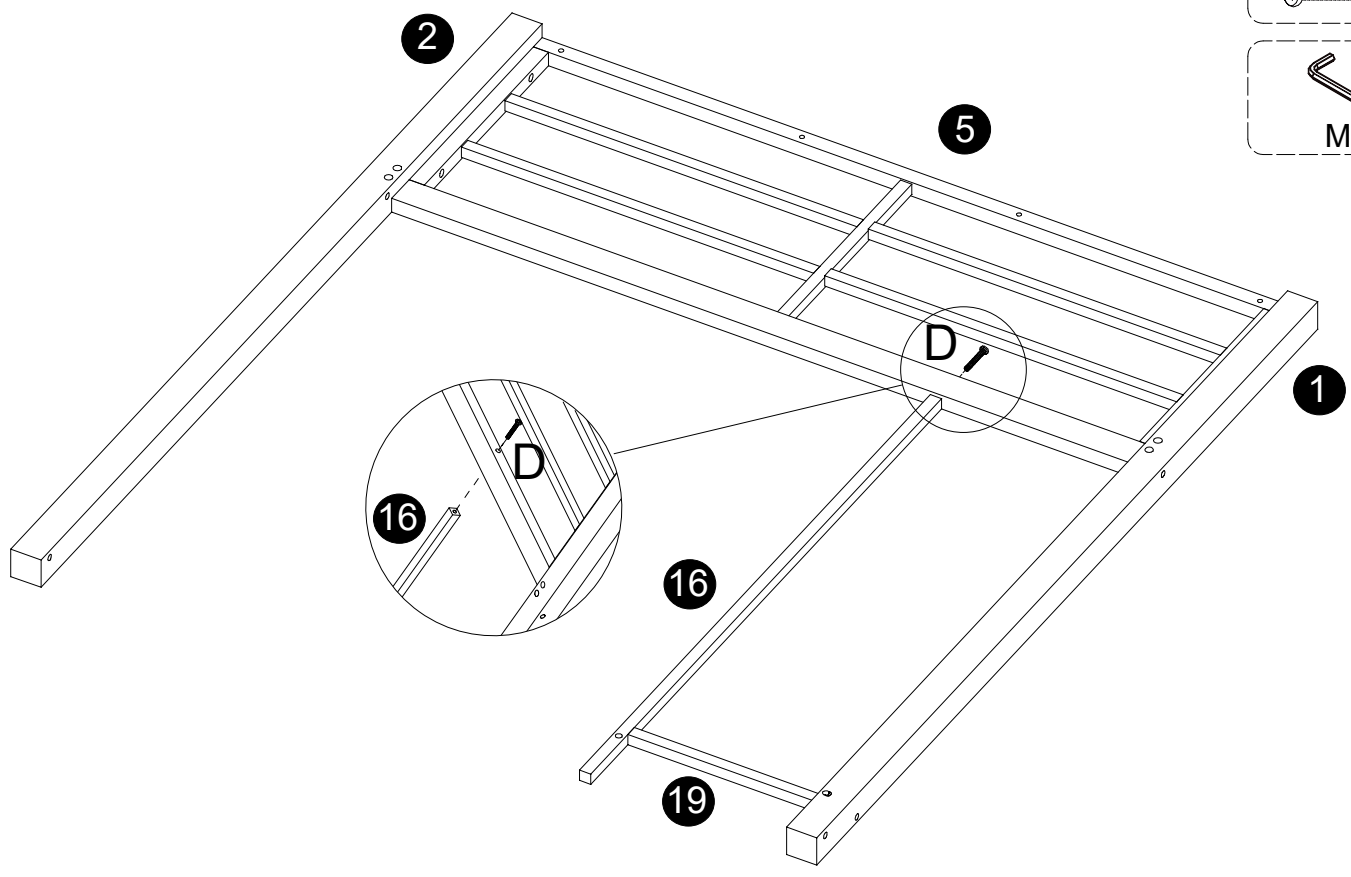

4

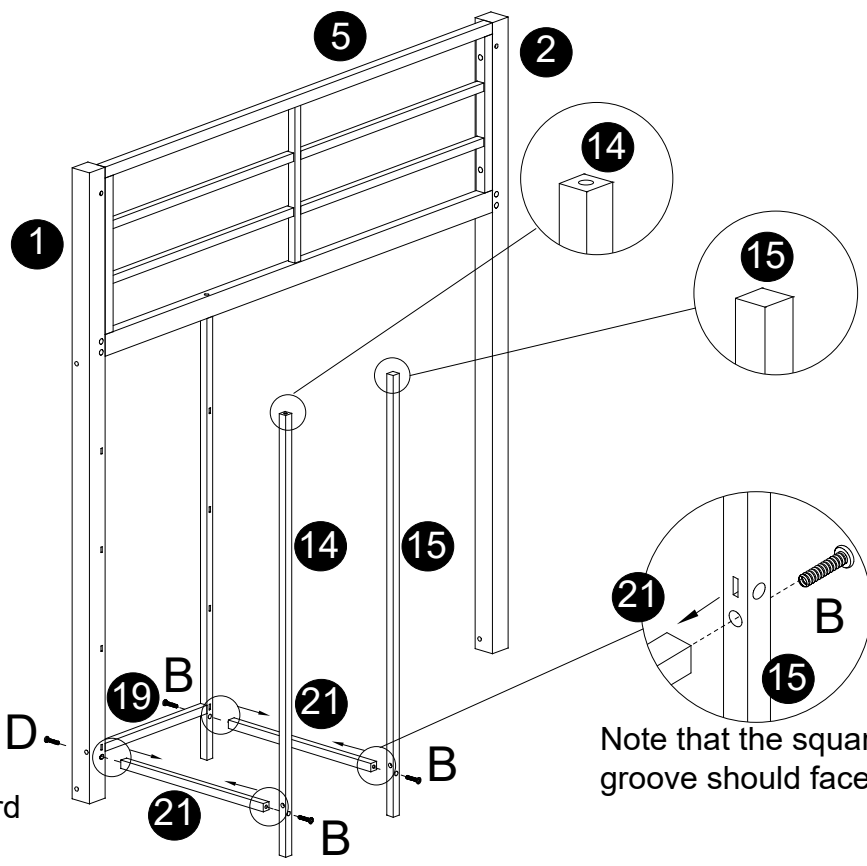


Note that the square groove should face inward


Note that the square groove should face inward

Assembly Instruction


5

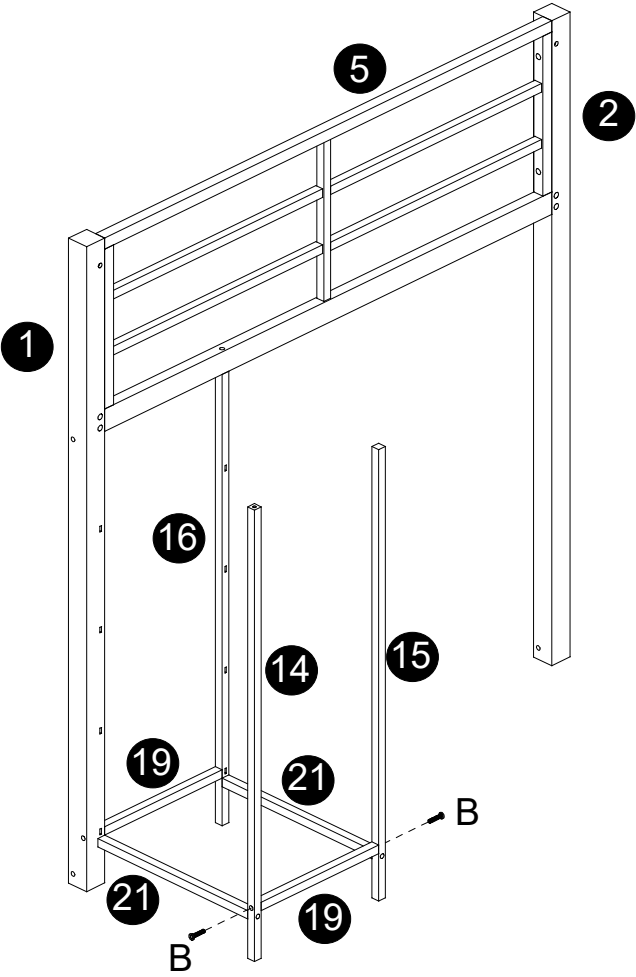


B M6*22
x2

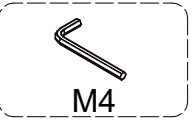


6

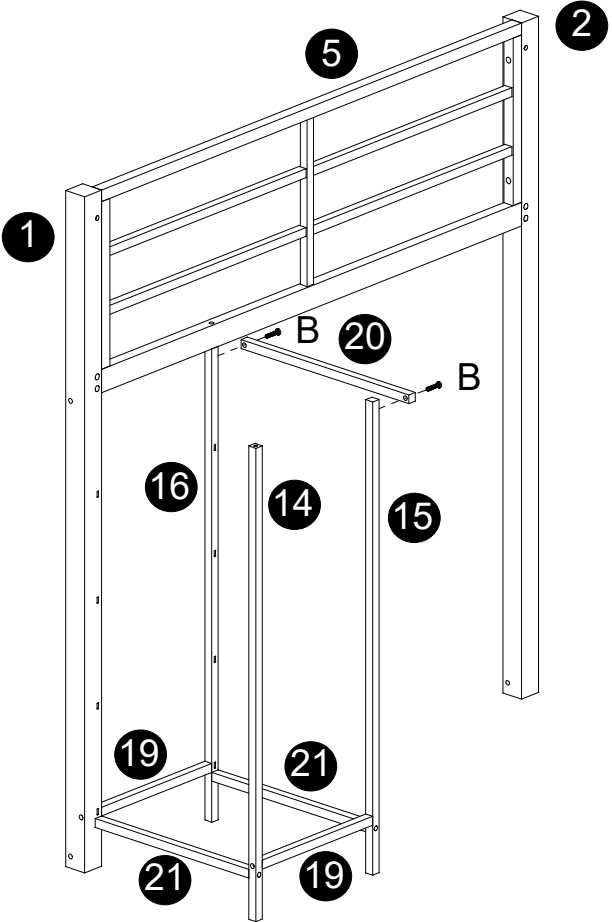

B M6*22
x2

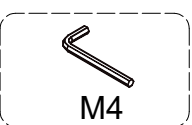

7




8



Assembly Instruction

9

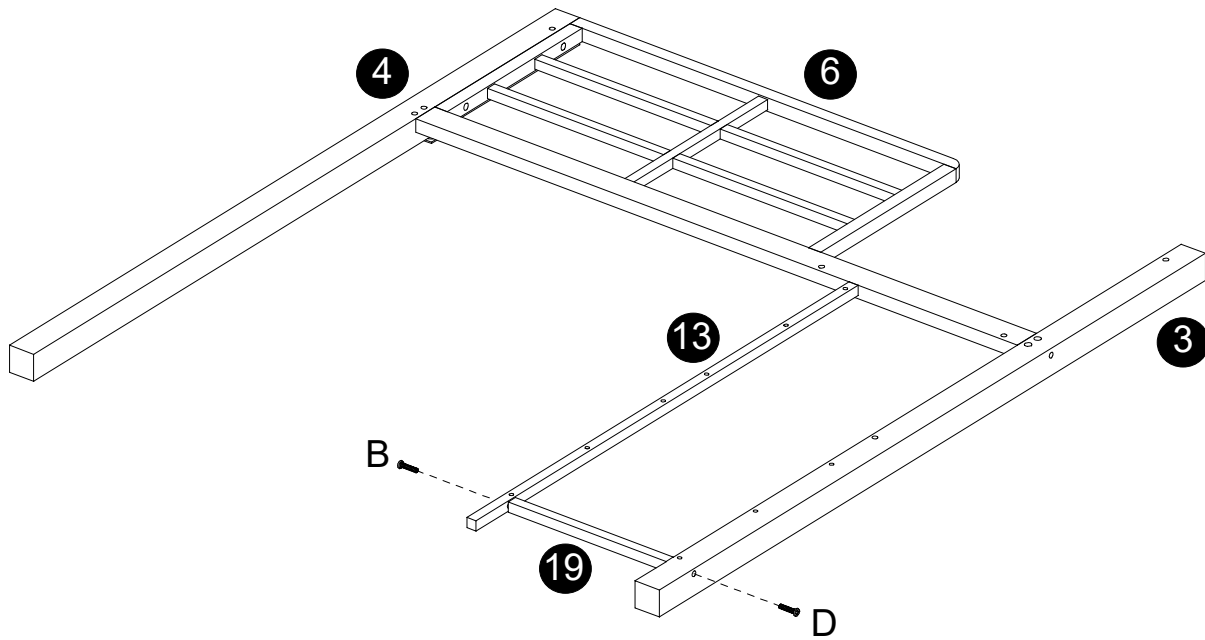


B M6*22
x1

D M6*55
x1

M4

10

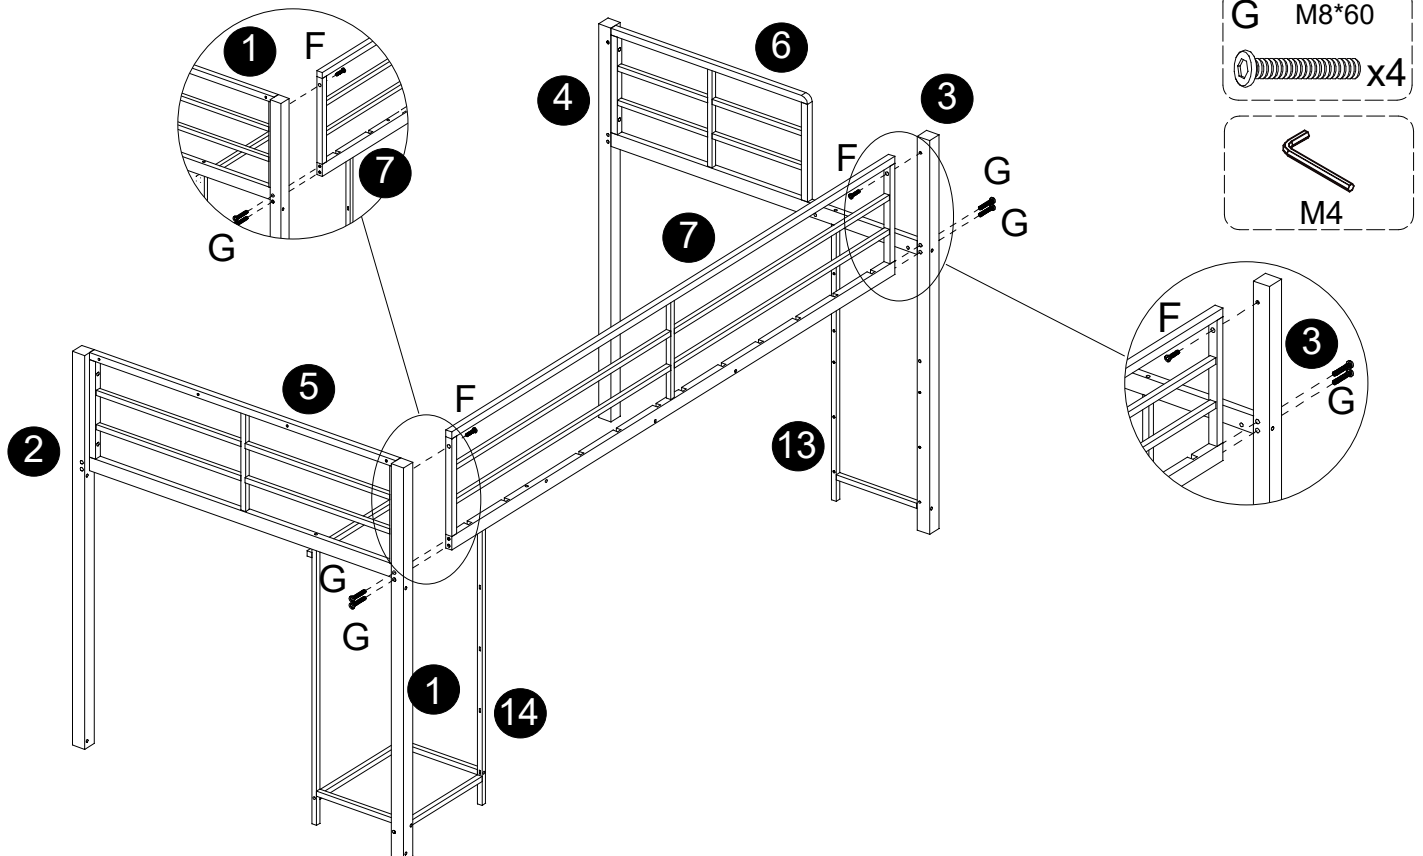


F M8*35
x2

G M8*60
x4

M4

Assembly Instruction


11

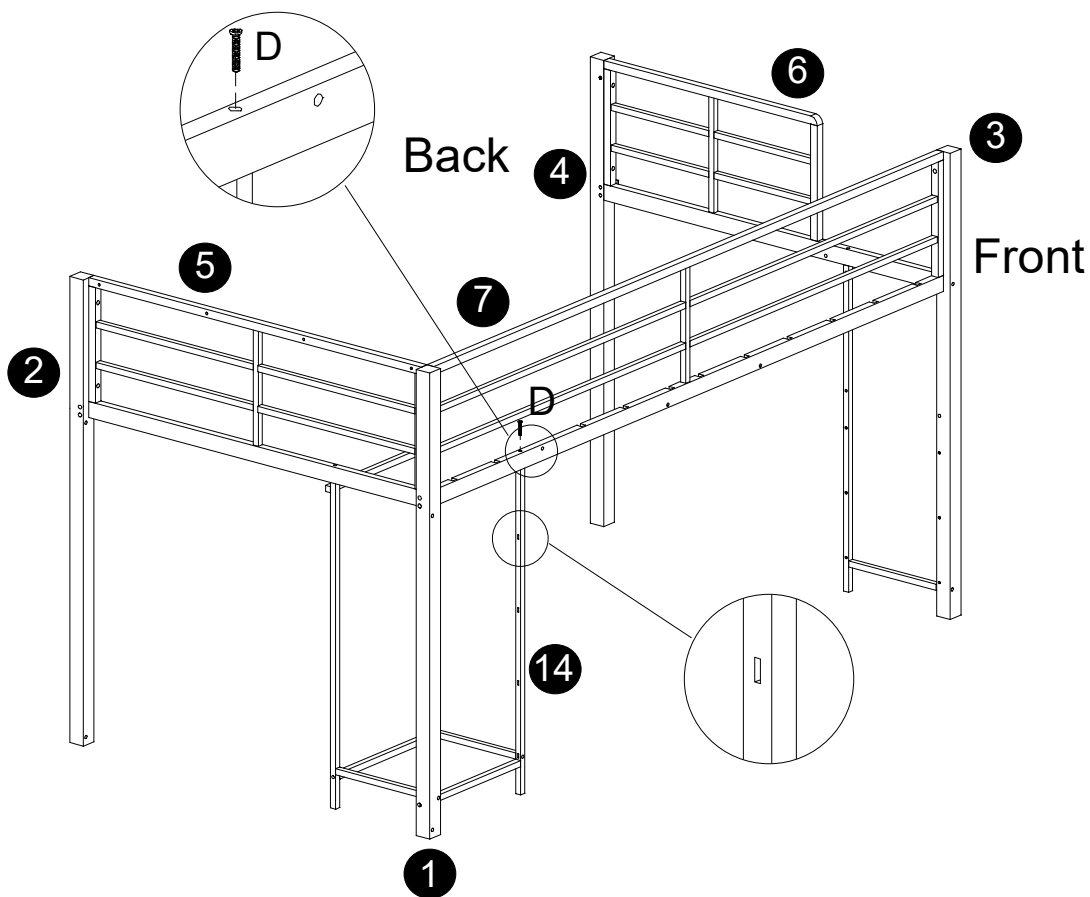

D M6*55
x1

M4

12

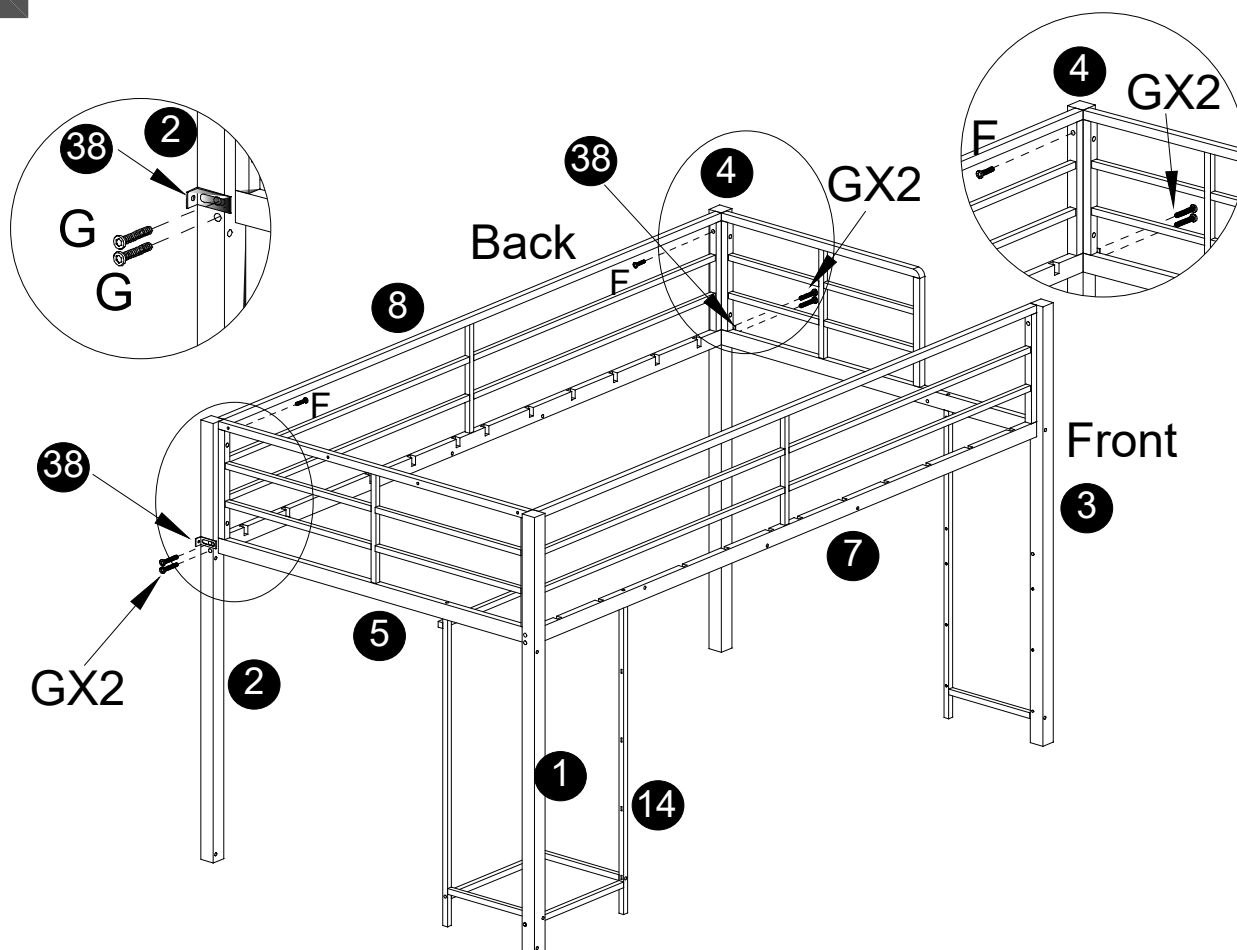

F M8*35
x2

G M8*60
x4


M4

13




Assembly Instruction

15

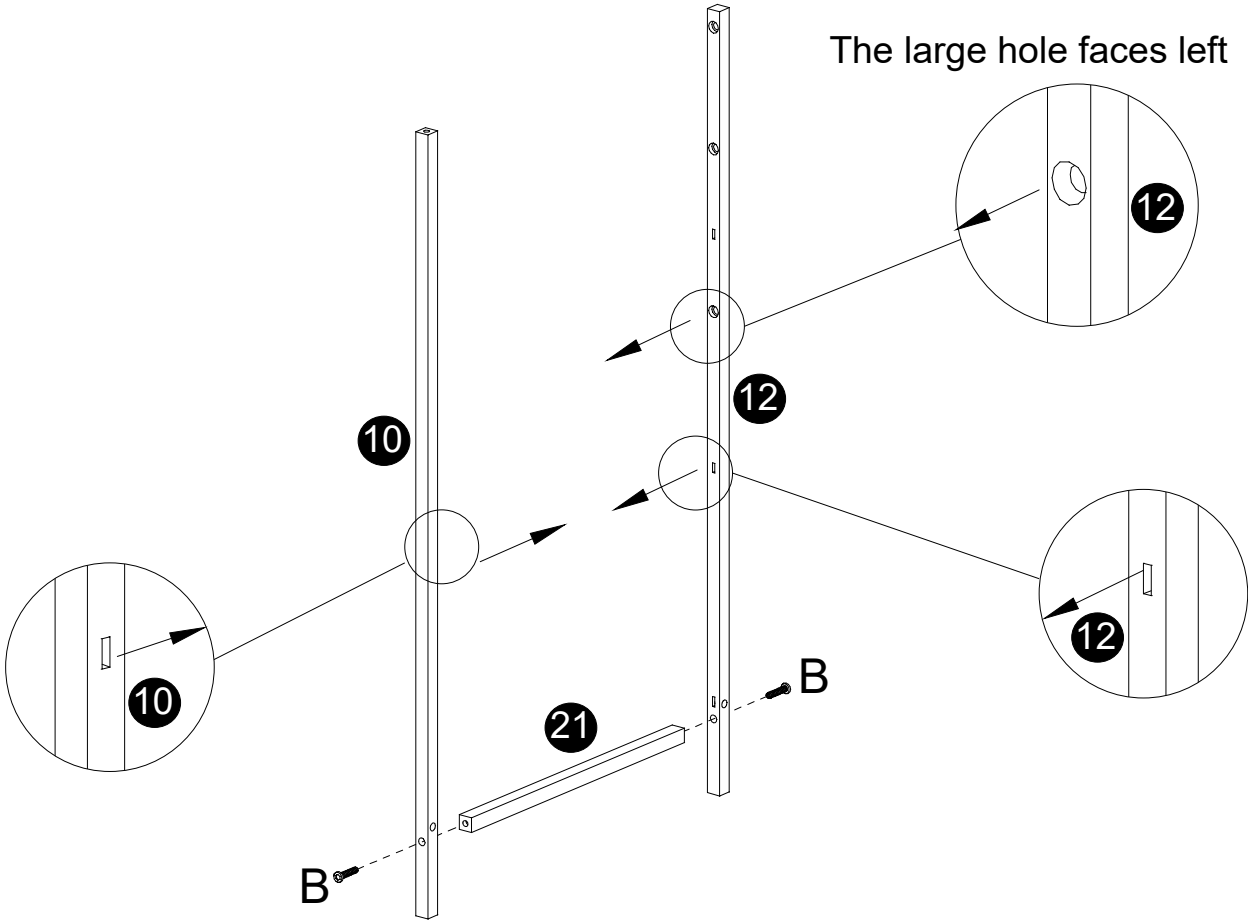


16

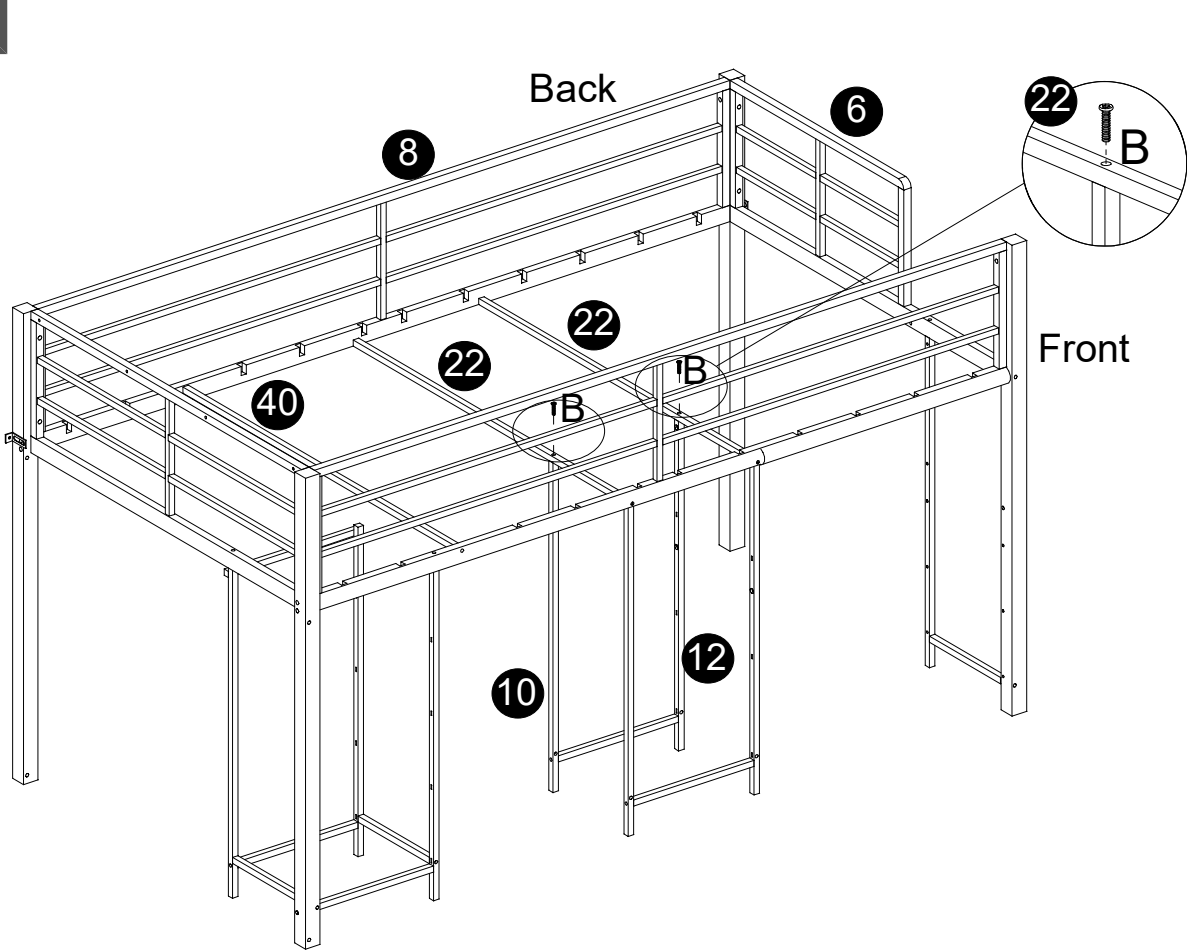

Assembly Instruction


17

- B M6*22
x4
- M4

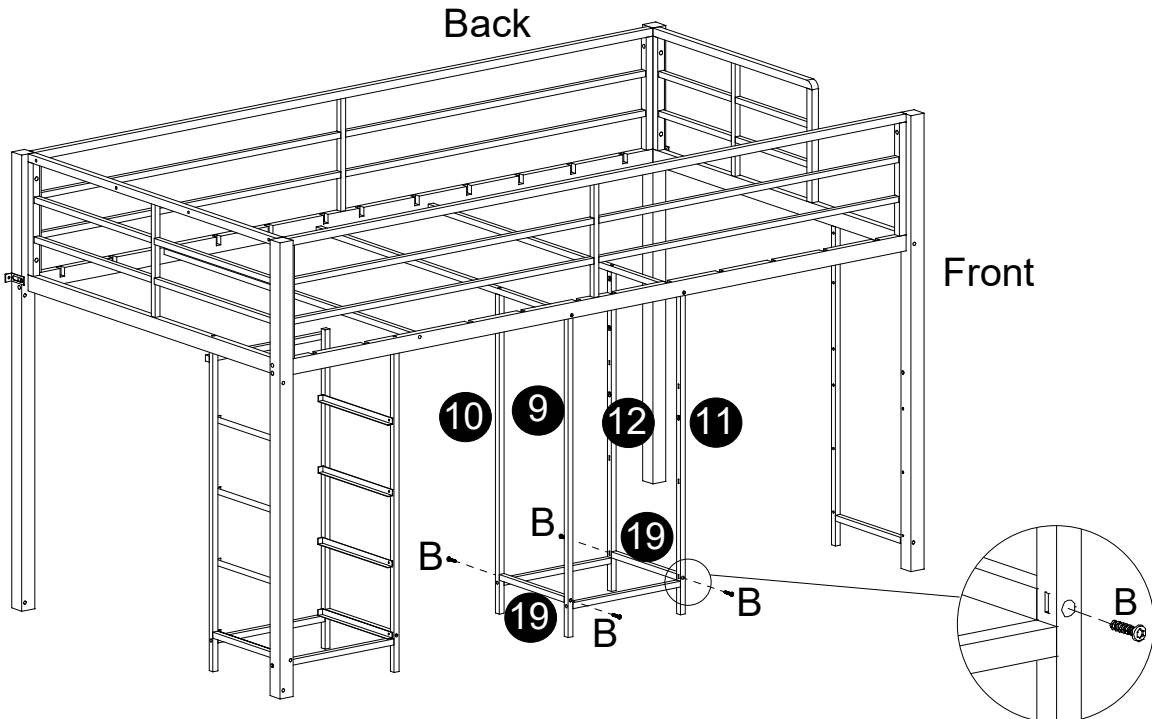


18

- B M6*22
x3
- D M6*55
x1
- M4

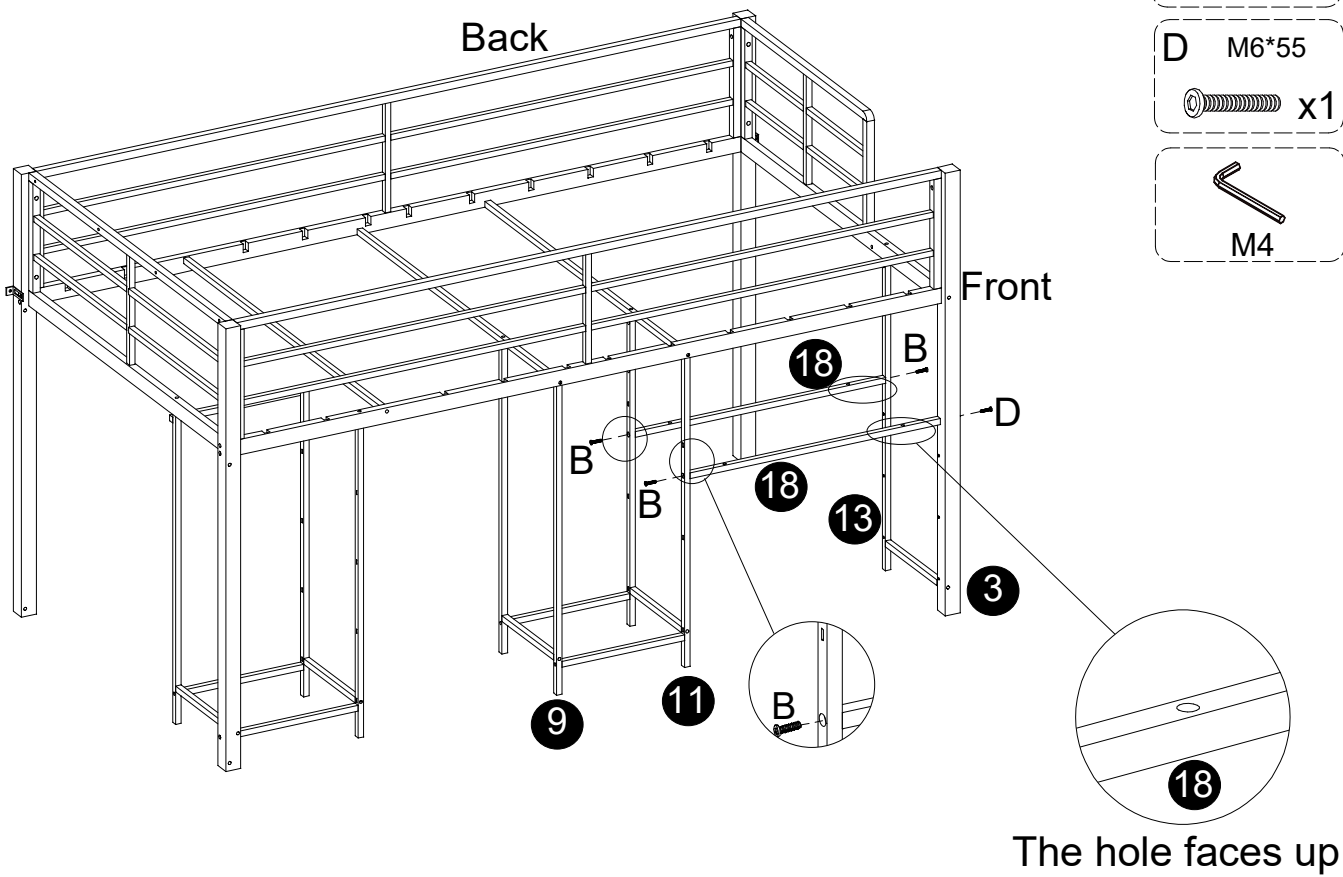


Assembly Instruction



19

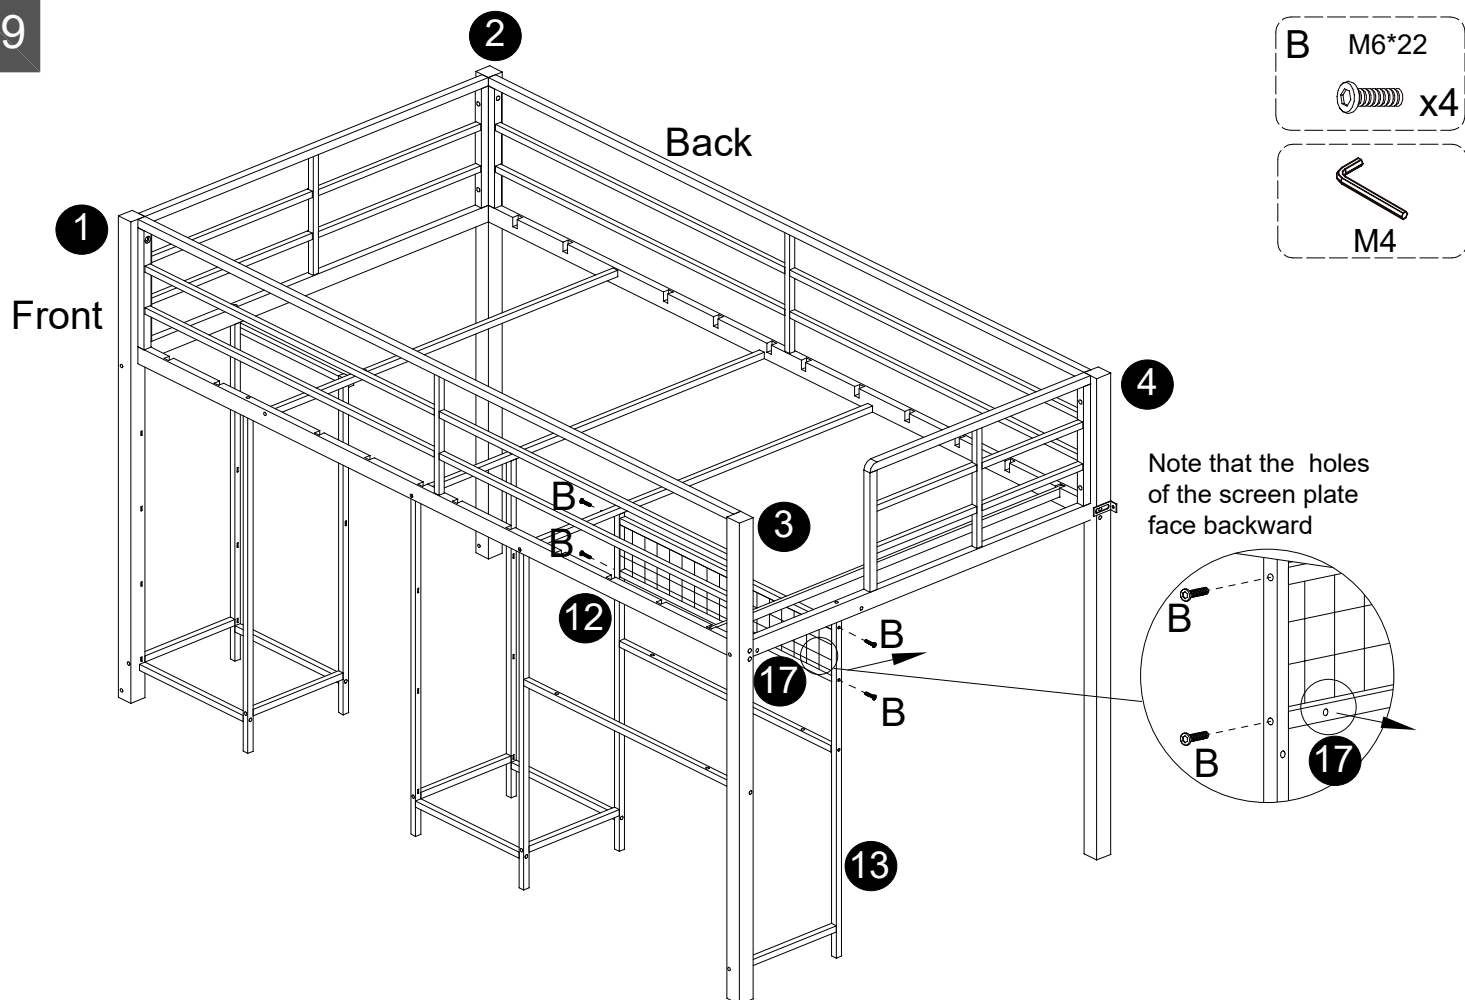

20

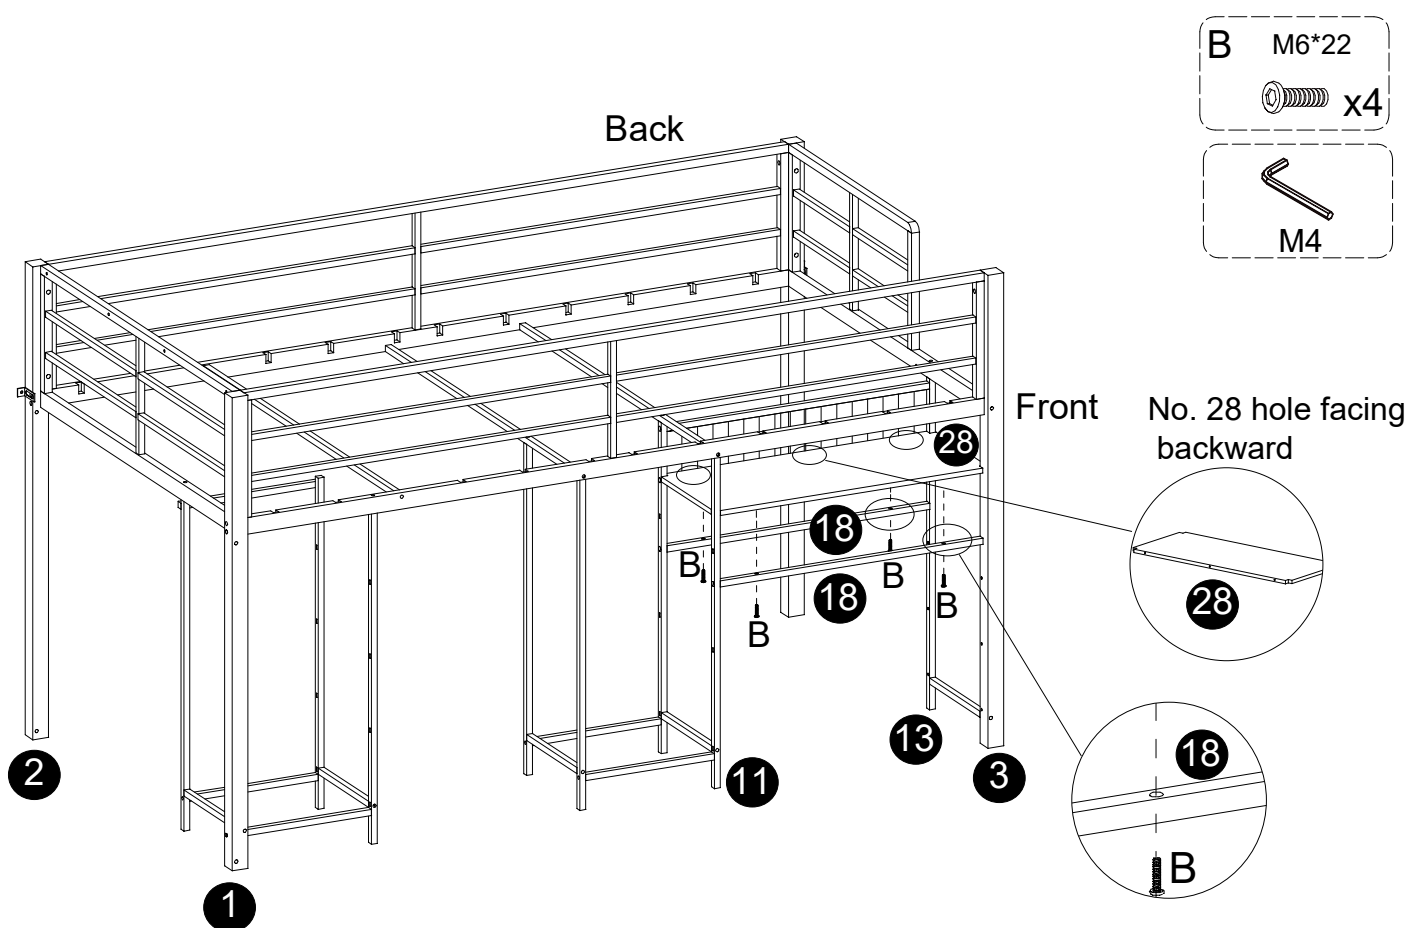


21

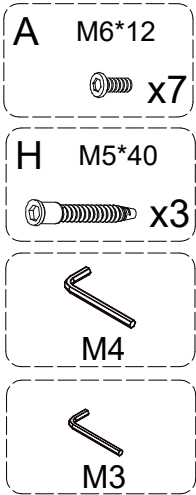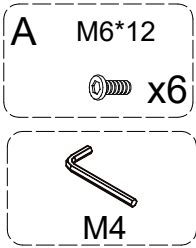


Assembly Instruction

23

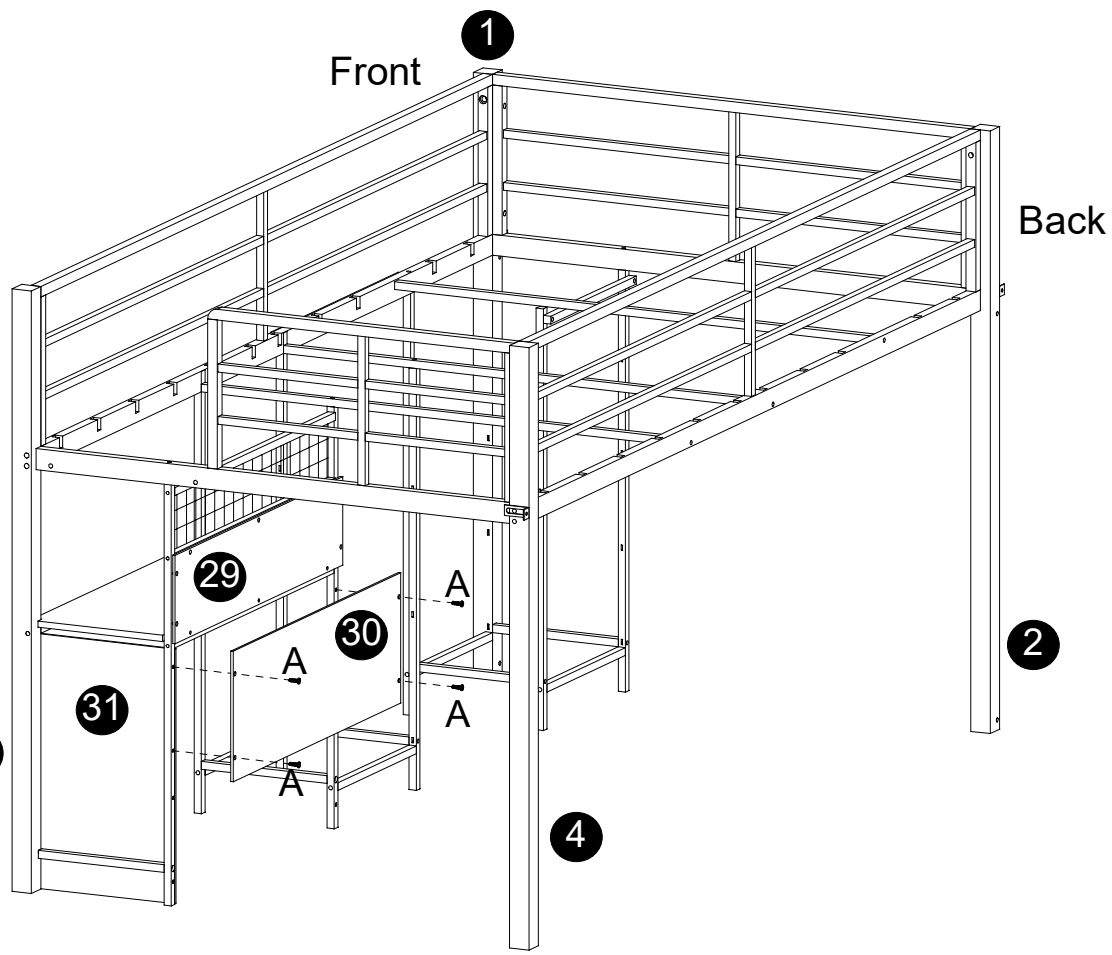

- A M6*12 x4
- M4

24

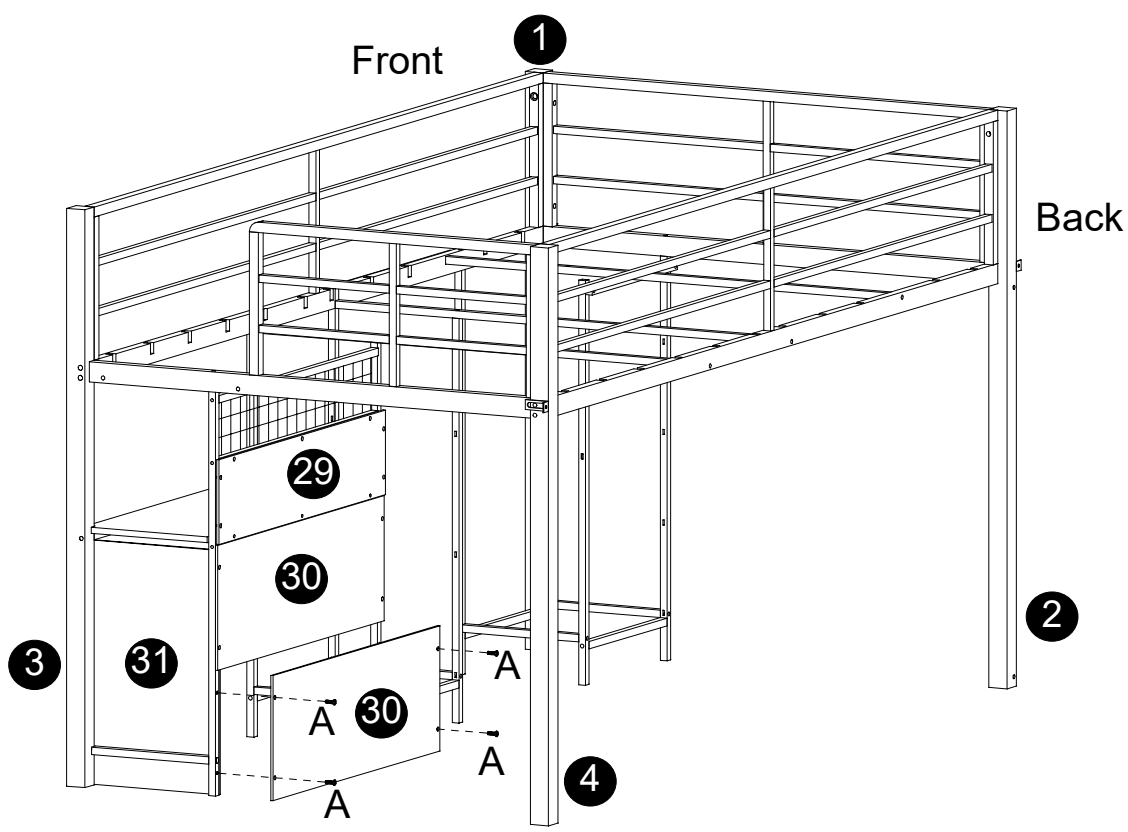


- A M6*12 x4
- M4

Assembly Instruction


25

- B** M6*22
 x4
- 
M4

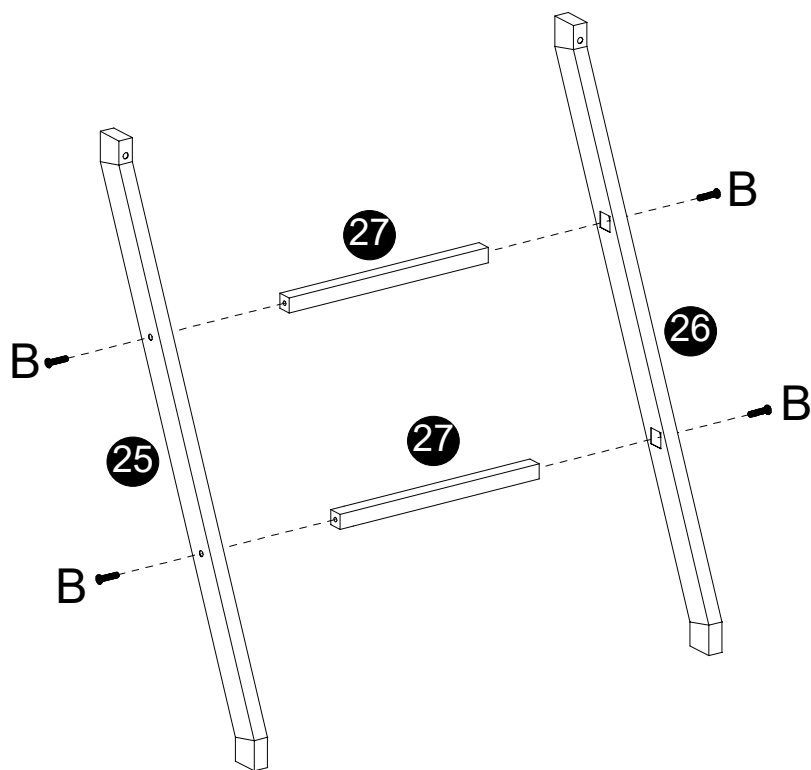


26

- E** M6*70
 x2
- J** M6
 x2
- 
M4
- 

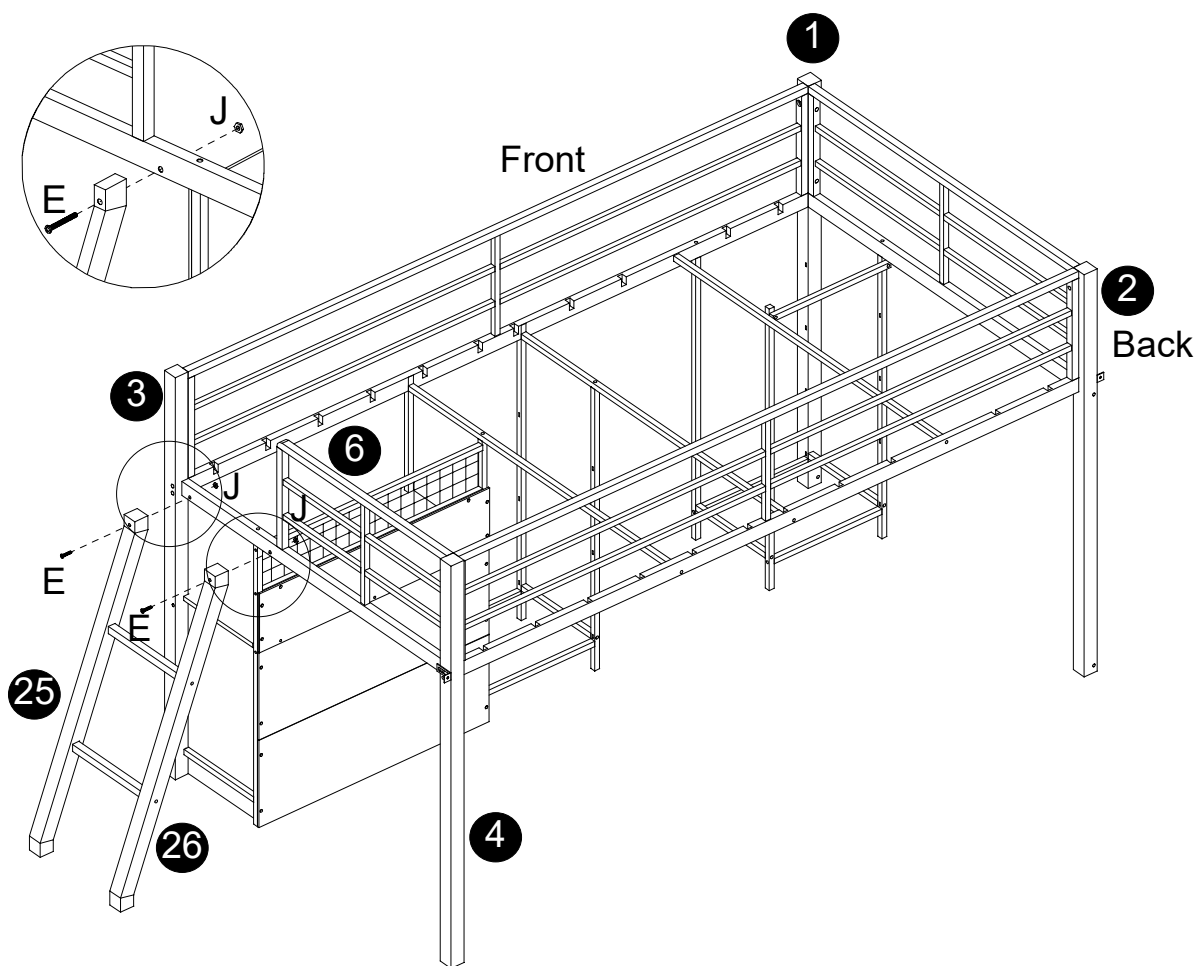


Assembly Instruction

27


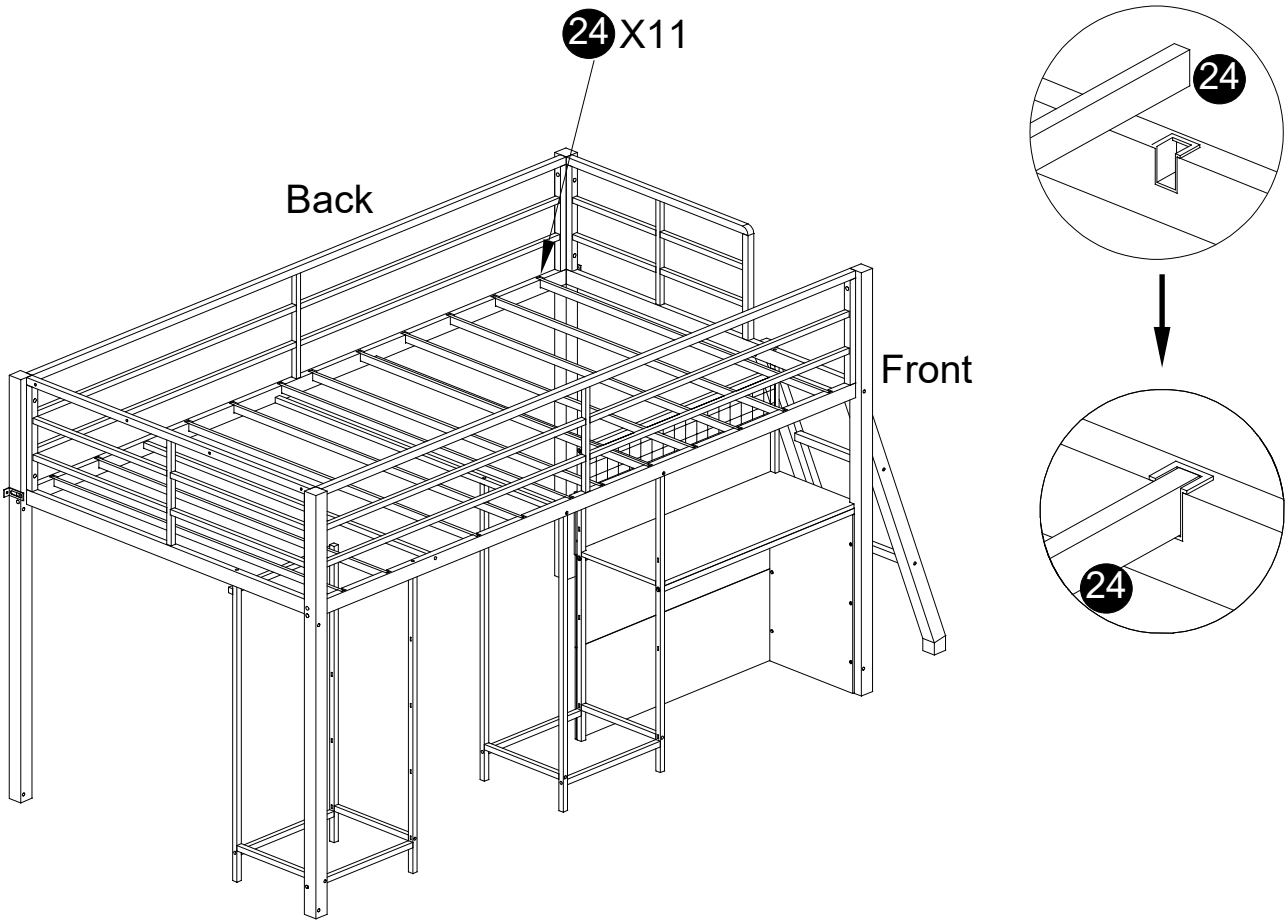


28

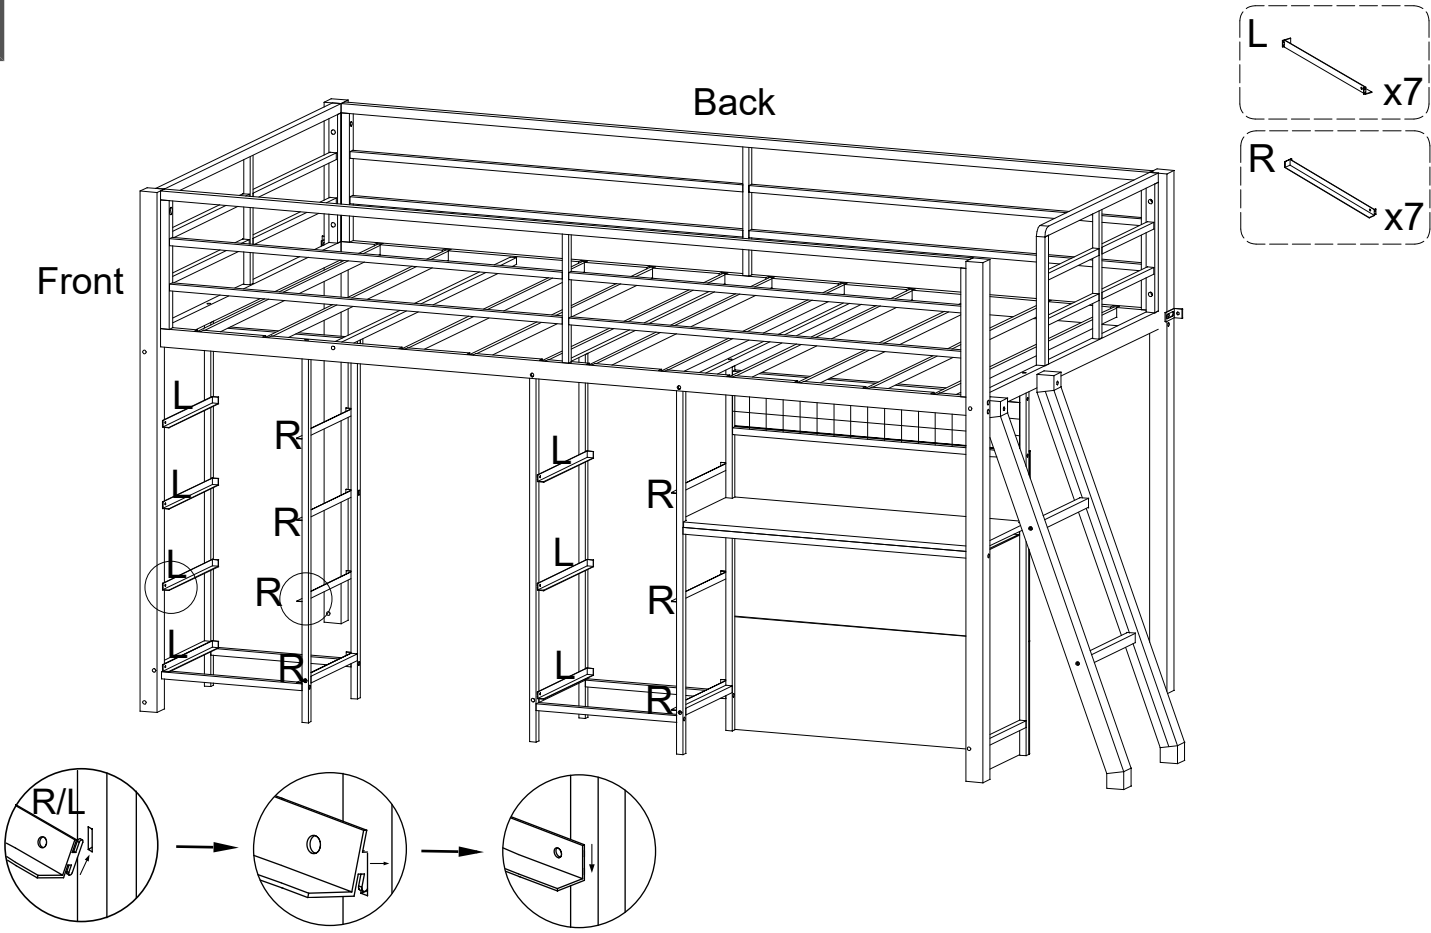


Assembly Instruction

29

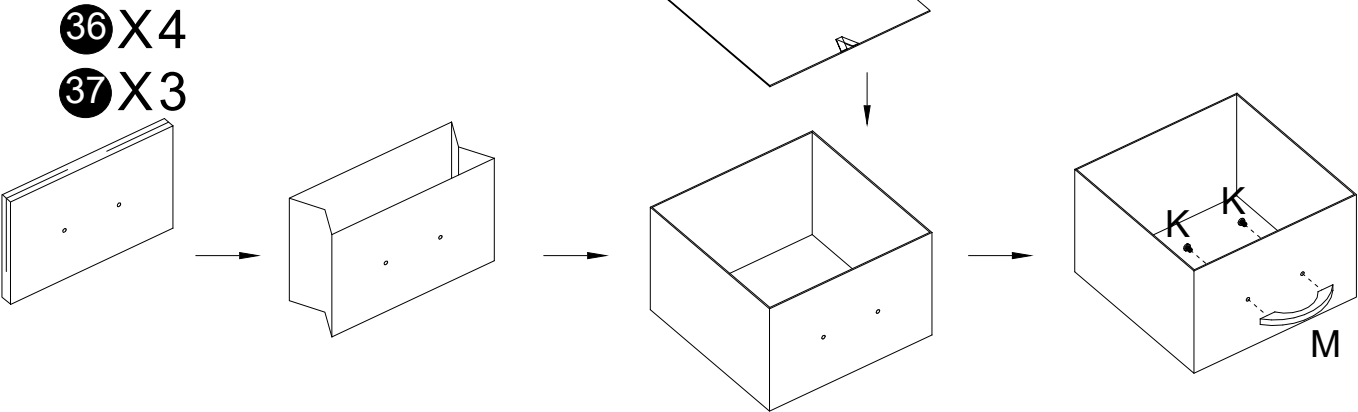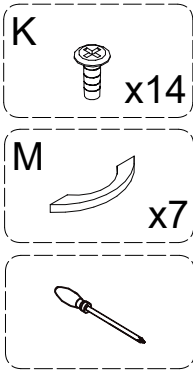


30

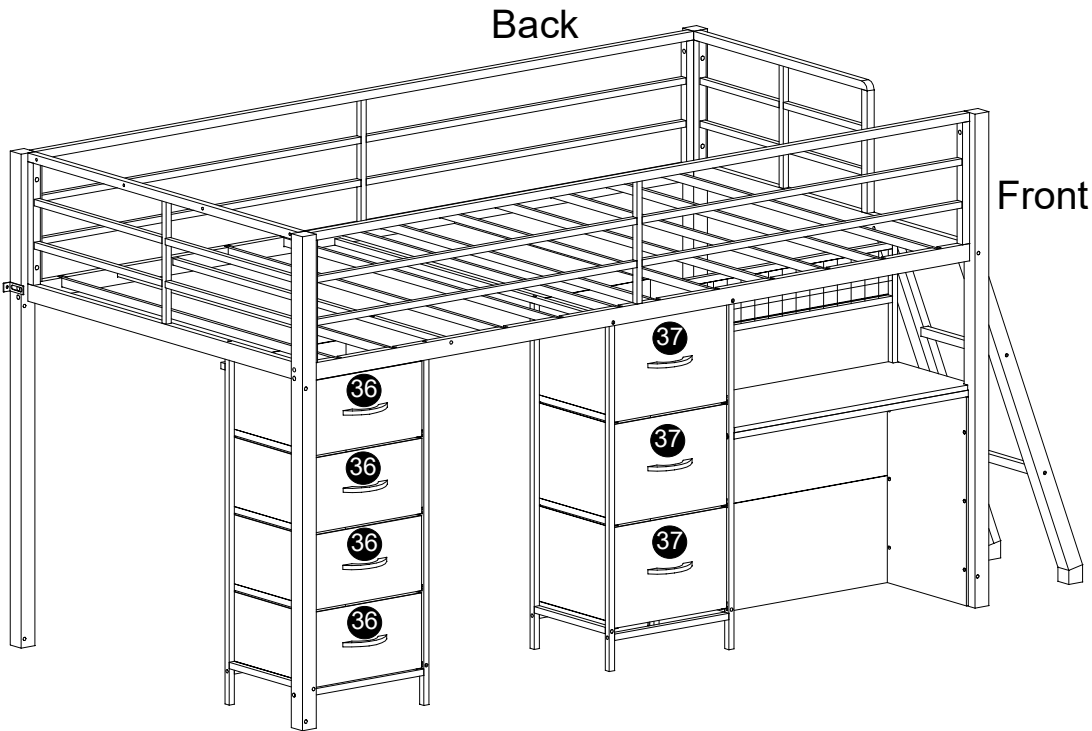


Assembly Instruction

31

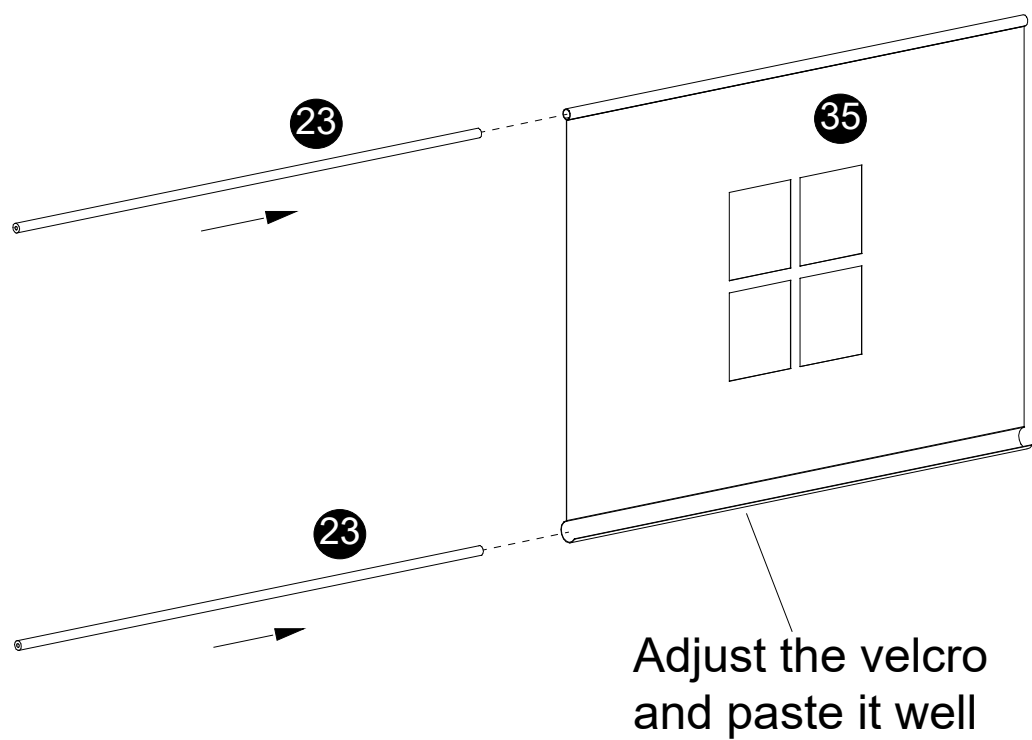


32

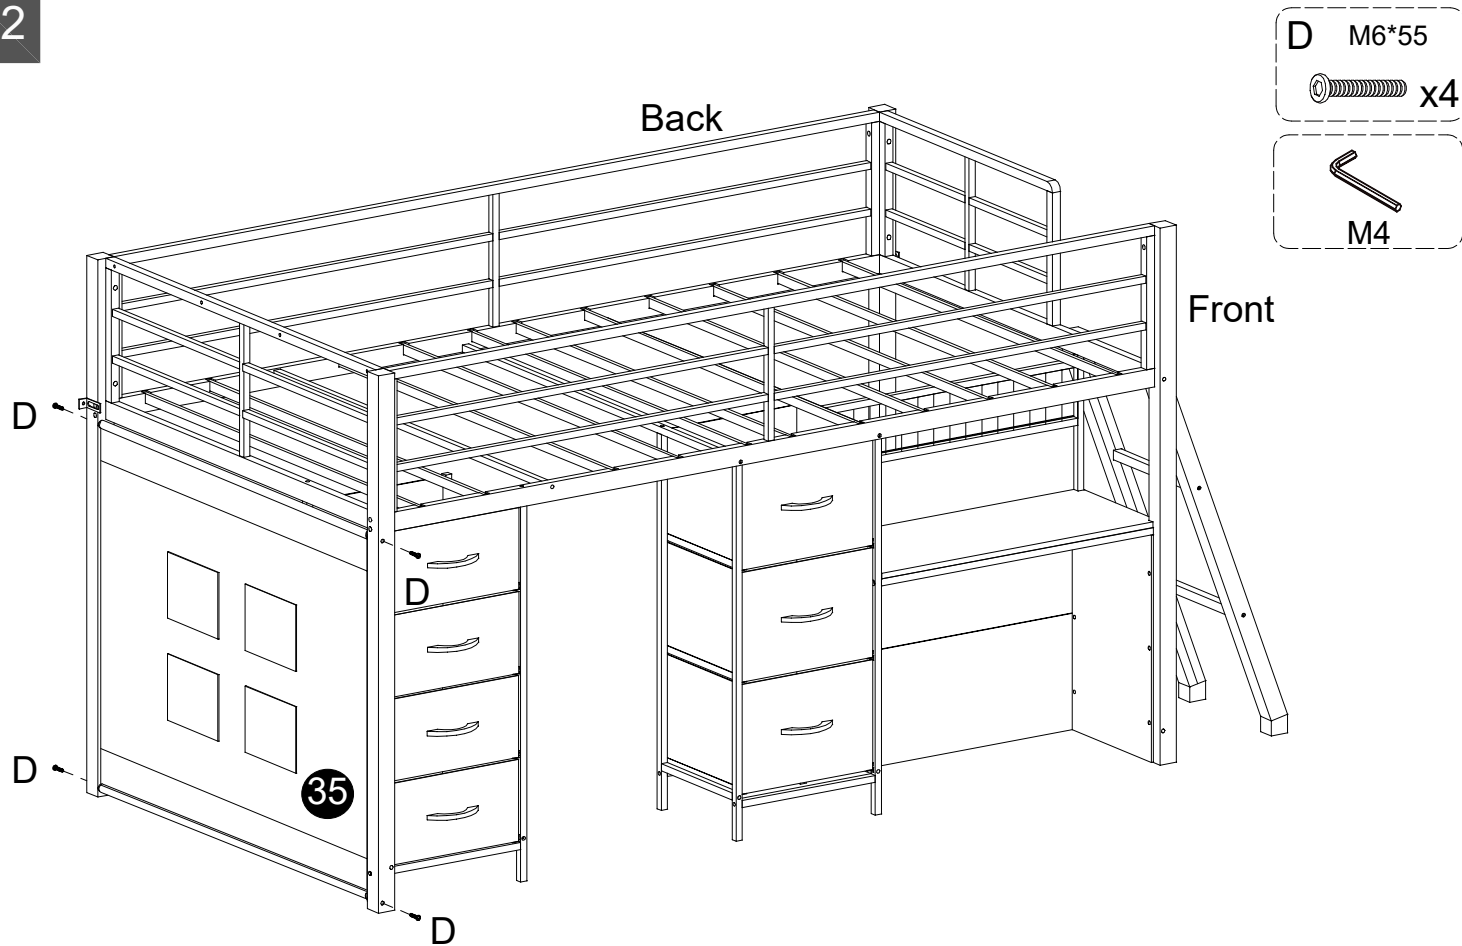


Assembly Instruction

33

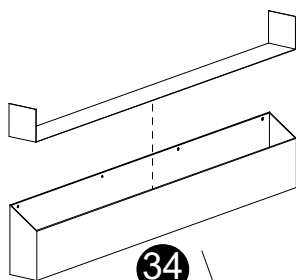

34

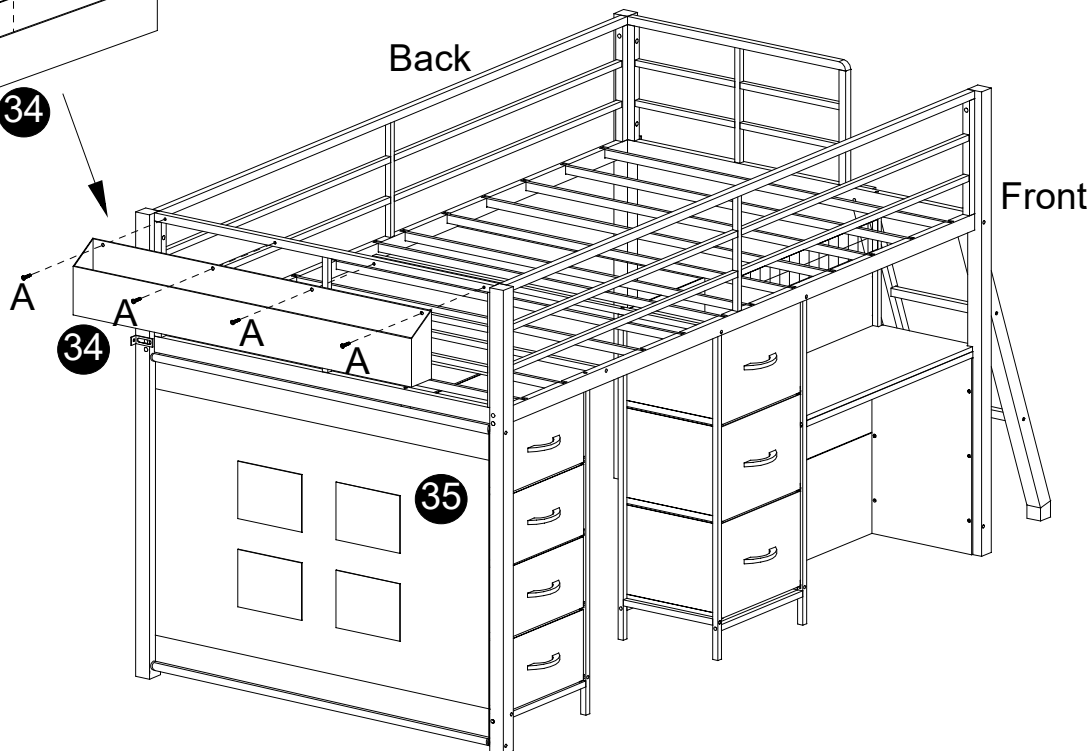


A M6*12
x4



M4

34

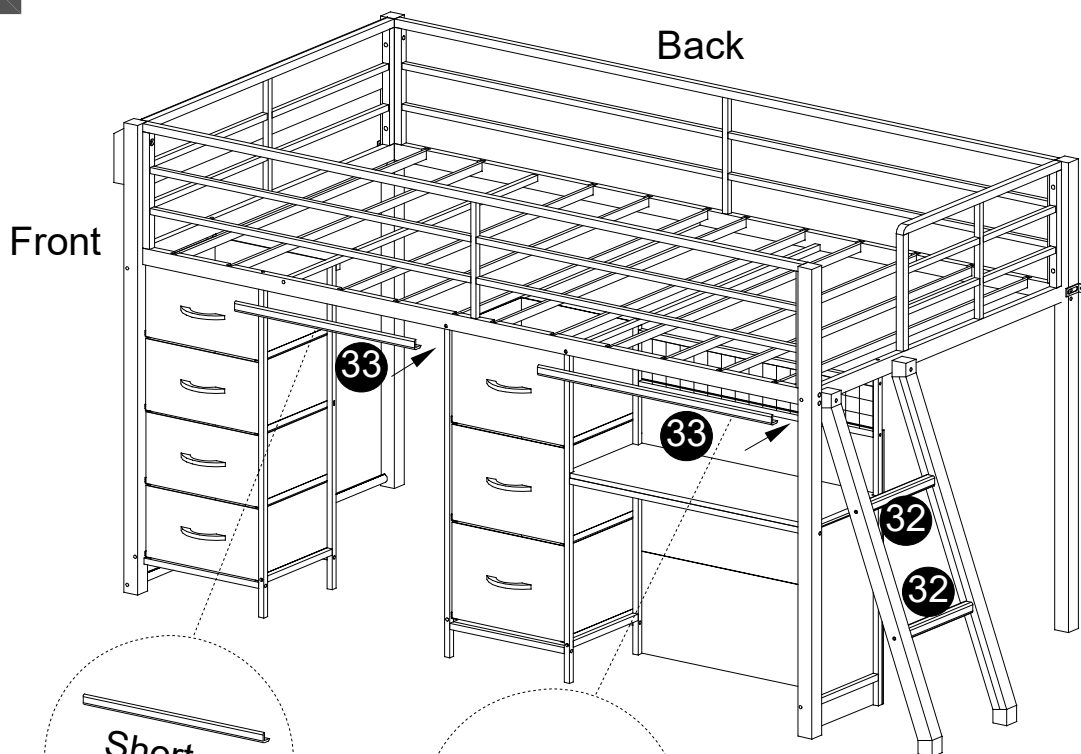

Back

Front

33

33

32

32


32



Short




Long

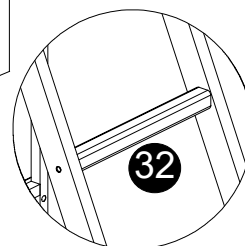

After tearing the tape off the sponge
attach the sponge to the stair tube

Assembly Instruction

35

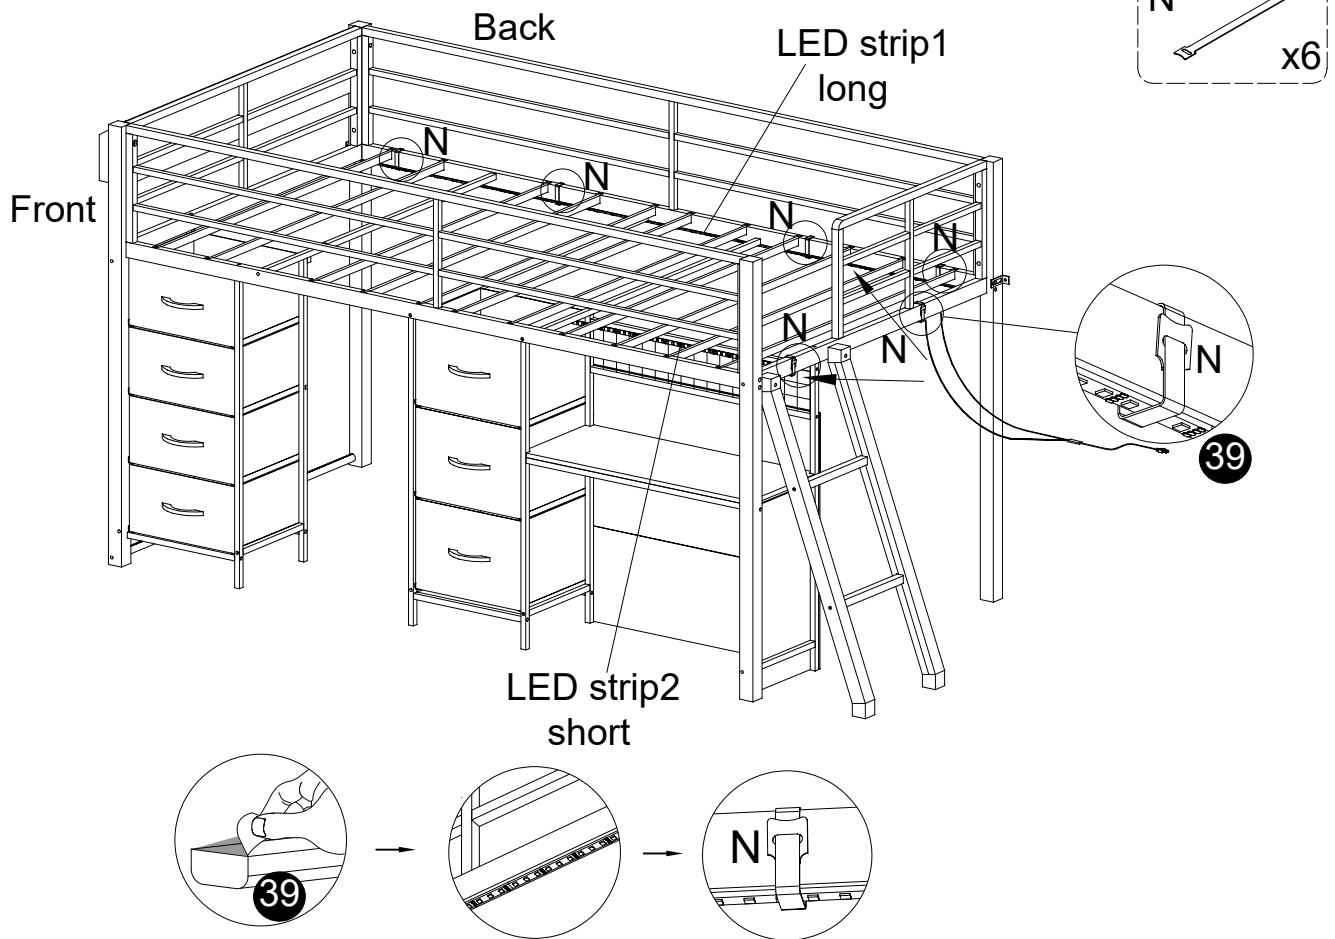

36

