

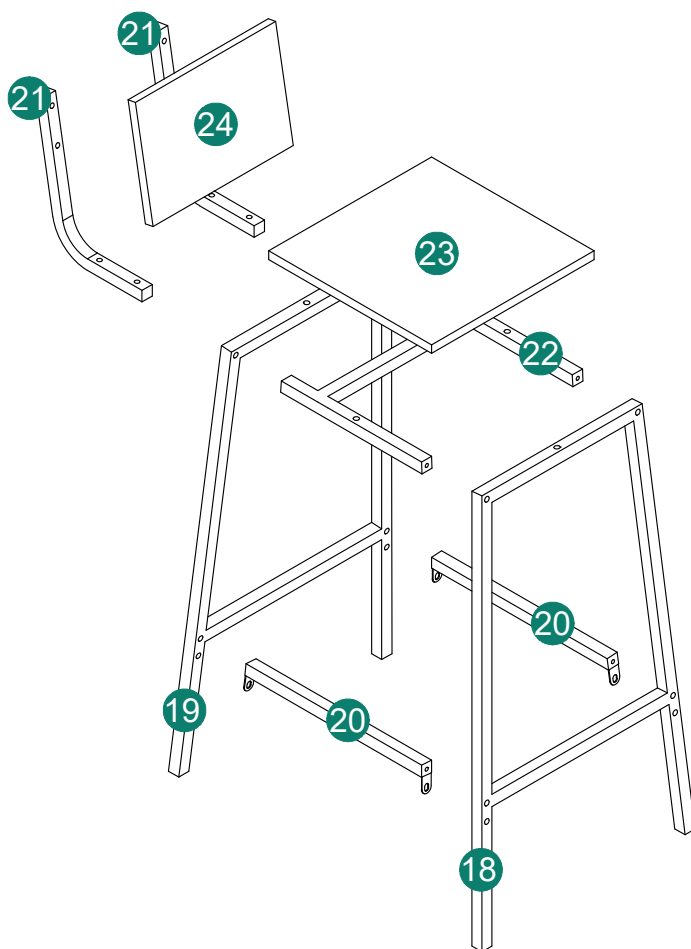
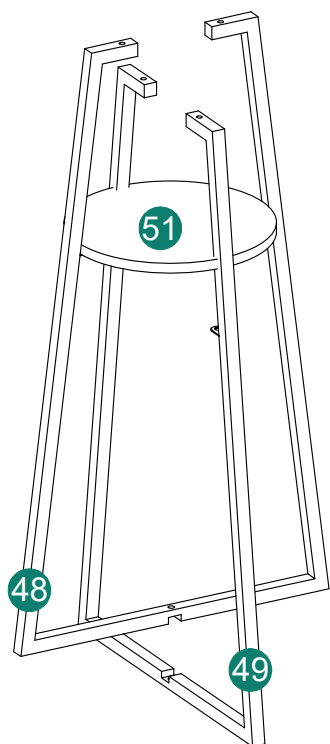
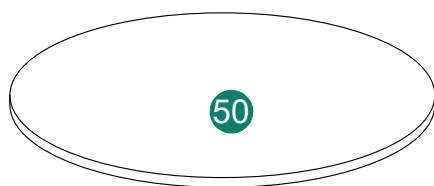
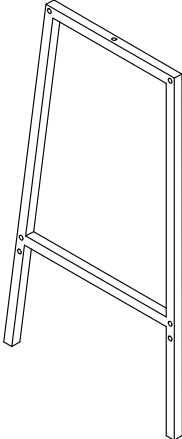
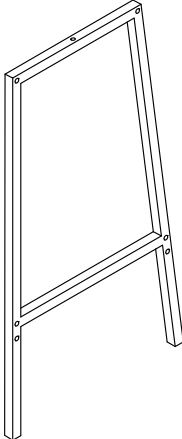
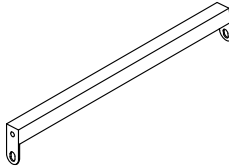
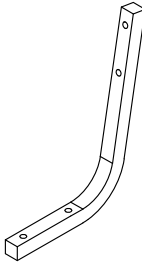
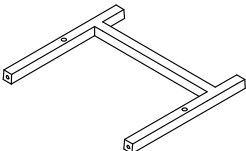
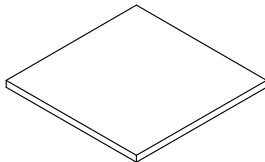
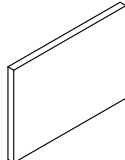
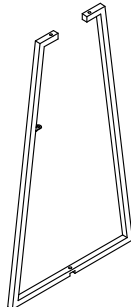
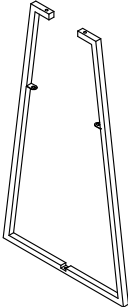
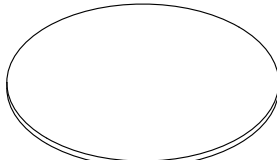
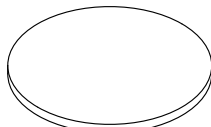








ASSEMBLY INSTRUCTION

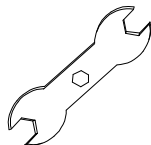








x2

18	19	20	21	
				
2PCS	2PCS	4PCS	4PCS	
22	23	24	48	
				
2PCS	2PCS	2PCS	1PCS	
49	50	51	A	B
				
1PCS	1PCS	1PCS	M6*40mm 16+1PCS	M6*30mm 36+3PCS
C	D	E	F	
		 		 
M6*12mm 4+1PCS	M6 8+1PCS	E1 E2 M6*16mm 1+1PCS	4+1PCS	4mm

1




- ⑱ 2pcs
- ⑲ 2pcs
- ⑳ 4pcs
- ㉒ 2pcs
- Ⓐ 16pcs

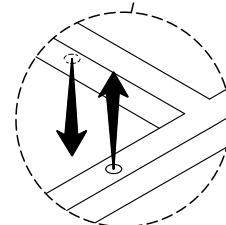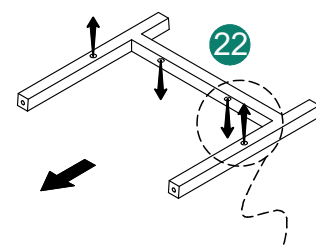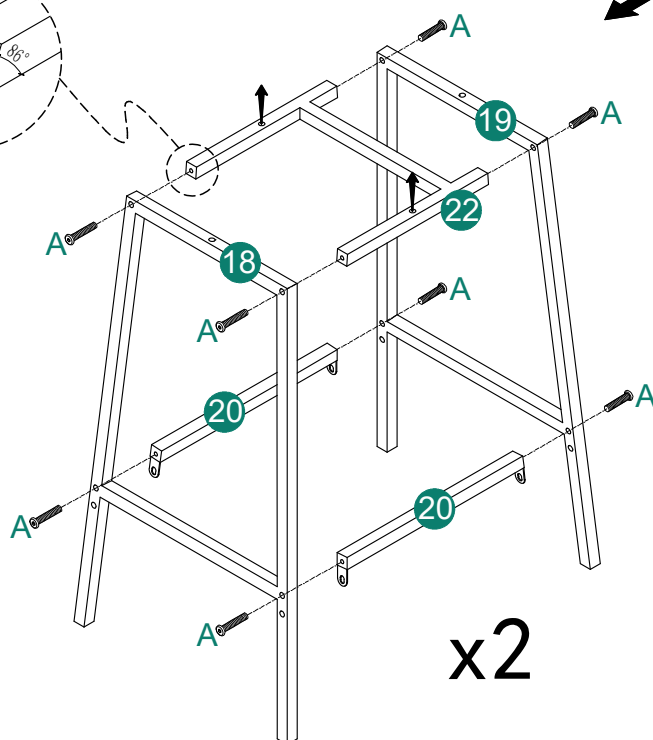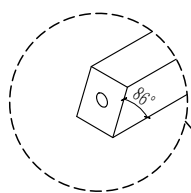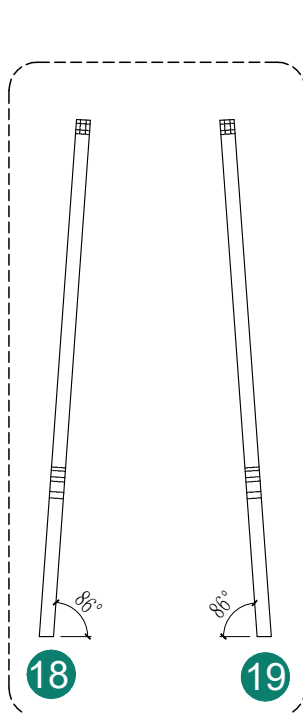


Please pay attention to the orientation of these holes.

2

- ㉑ 2pcs
- Ⓑ 16pcs
- Ⓓ 8pcs

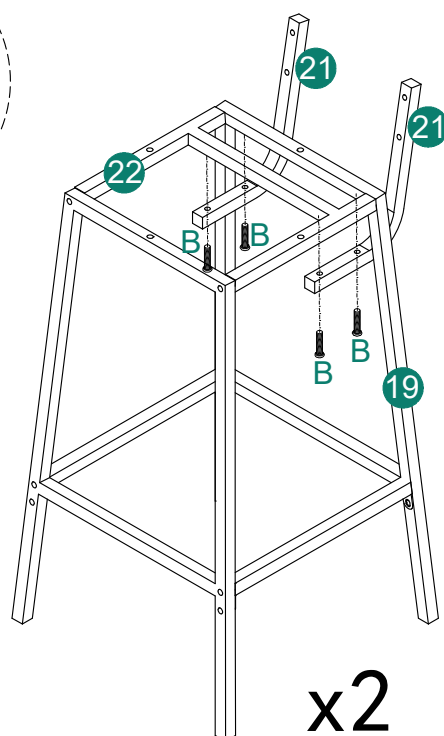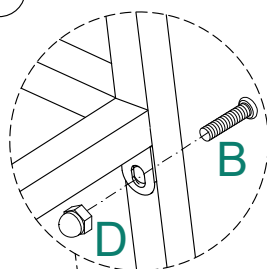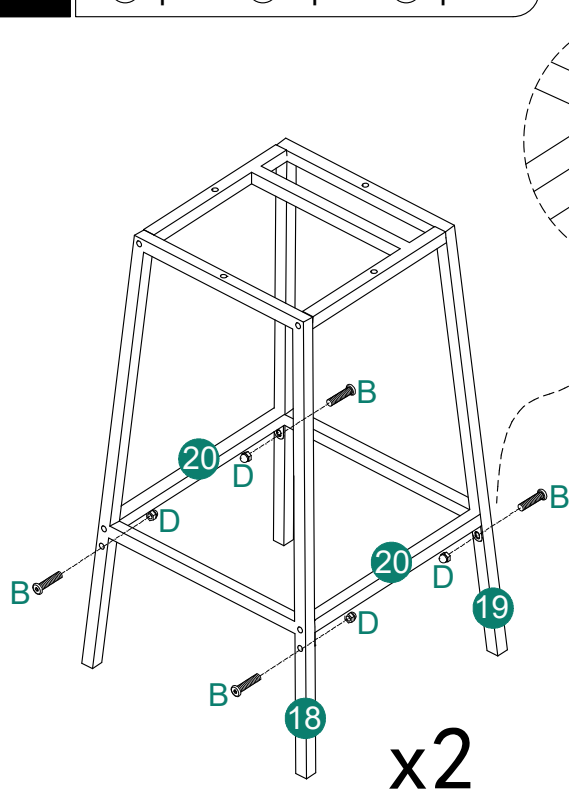

3





23 2pcs



24 2pcs



B 16pcs

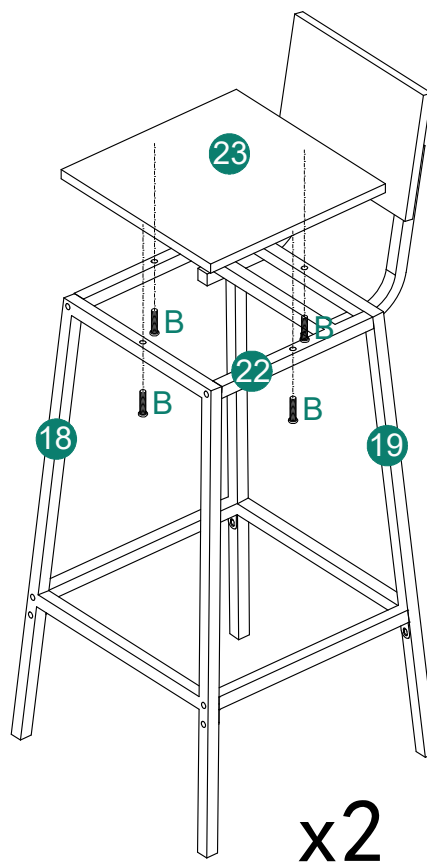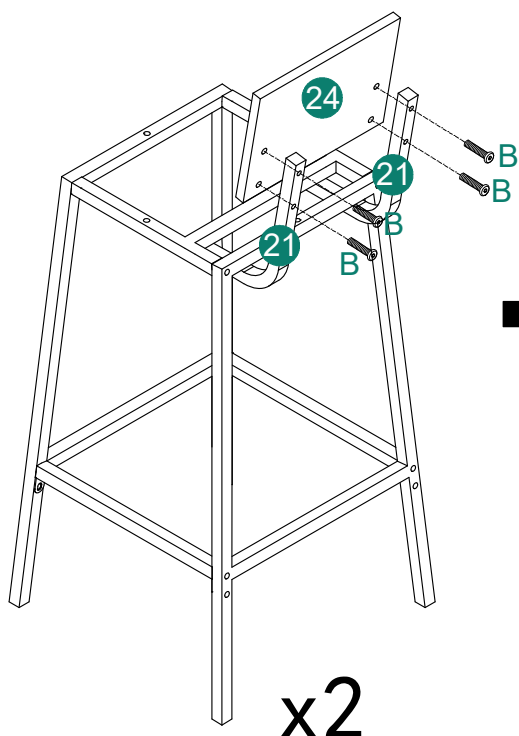

4



48 1pcs



49 1pcs



51 1pcs



C 4pcs





E1



E2

E 1pcs

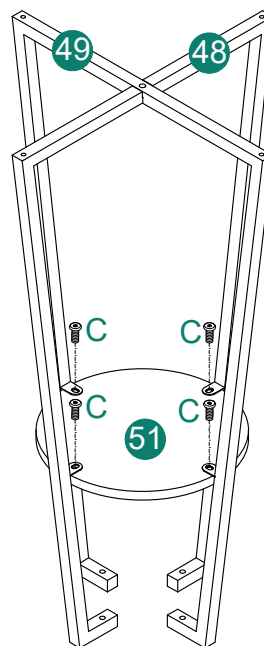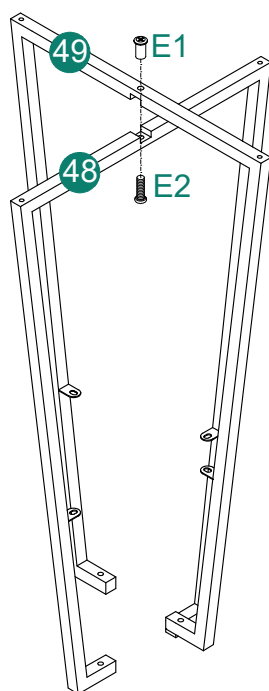

5






50 1pcs



B 4pcs



F 4pcs

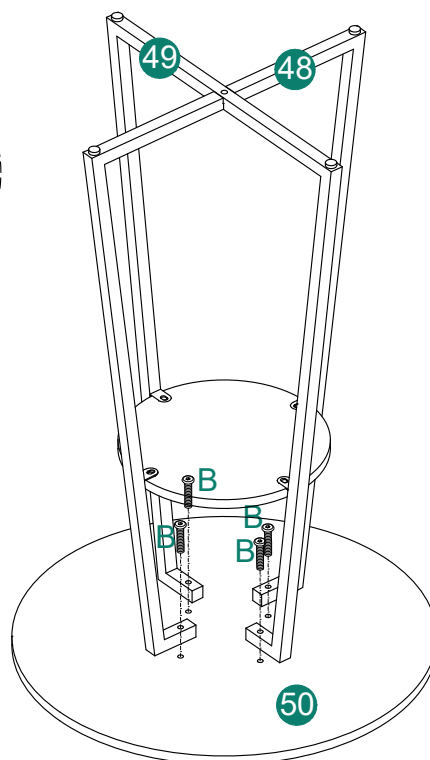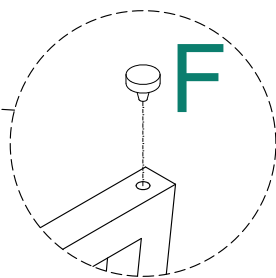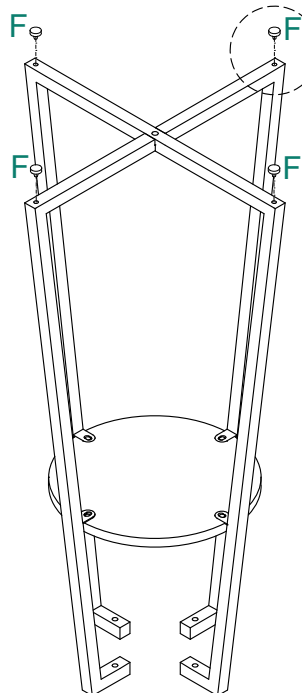

Installation Completed