TWIN/FULL/QUEEN/E-KING SIZE
ASSEMBLY INSTRUCTIONS

PARTS AND FITTING PACKAGING DETAIL

BOX #1

A. HEADBOARD/ FOOTBOARD 2 PCS

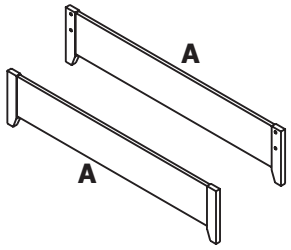

BOX #2

B. LEFT SIDERAIL 1 PC
C. RIGHT SIDERAIL 1 PC
D. CENTER SLAT 1 PC
E. LEG SUPPORTS 4 PCS
HARDWARE BOX*

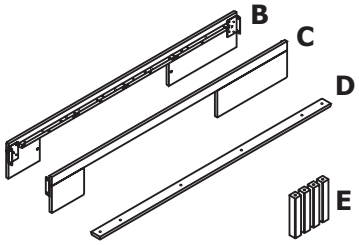

BOX #3

F. STORAGES 2 PCS
G. STORAGE FEETS 12 PCS

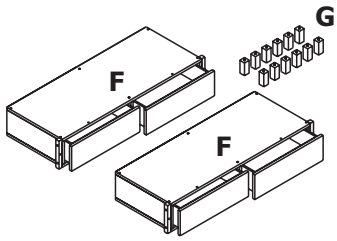

BOX #4

H. BED SLATS 12 PCS

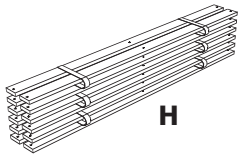

TOOL REQUIRED :

PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

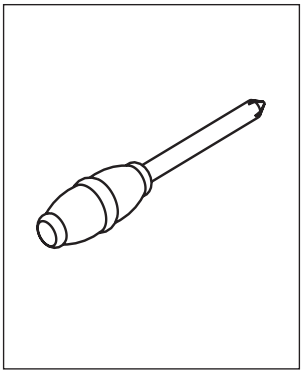

SIMPLE STORAGE BED ASSEMBLED

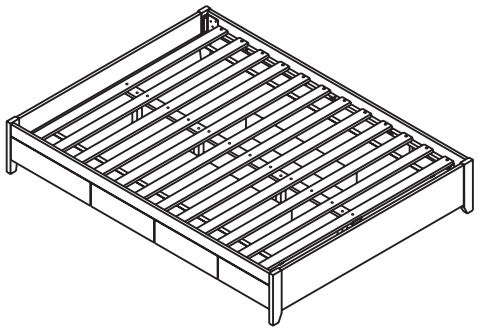

HARDWARE* PACKED IN BOX #2

1	PHILLIPS HEAD BOLTS 20MM	8 PCS	2	WOOD SCREWS Ø8X30MM	12 PCS			
								
3	ALLEN KEY	1 PC	4	ALLEN BOLTS 40MM	18 PCS	5	WASHERS 8MM	8 PCS
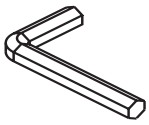								

STEP 1 :

FIX LEFT SIDERAIL (**B**) TO THE ONE OF HEADBOARD/FOOTBOARD (**A**) USING PHILLIPS HEAD BOLTS (**1**) AND WASHERS (**5**).

DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

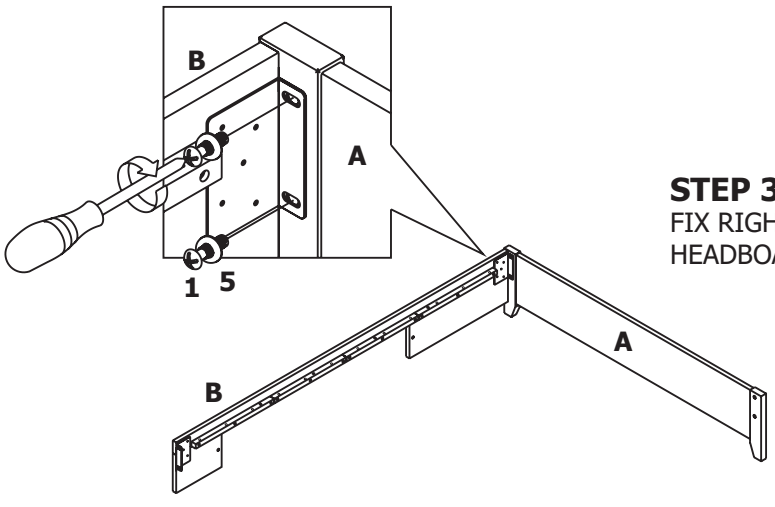

STEP 2 :

FIX THE OTHER END OF LEFT SIDERAIL (**B**) TO THE OTHER ONE OF HEADBOARD/FOOTBOARD (**A**).

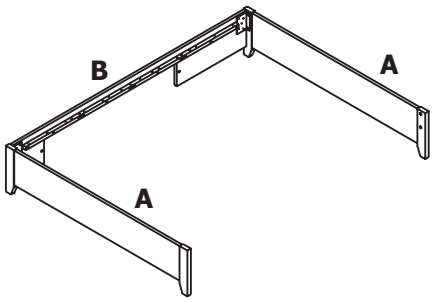

STEP 3 :

FIX RIGHT SIDERAIL (**C**) TO THE HEADBOARD/FOOTBOARD (**A**).

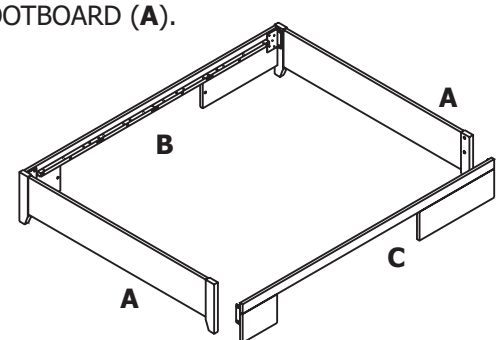

STEP 4 :

REMOVE PLASTIC COVER FROM STORAGE FEETS (**G**) BOLT. FOLLOW THE ILLUSTRATION TO FIX STORAGE FEETS (**G**) TO STORAGES (**F**).

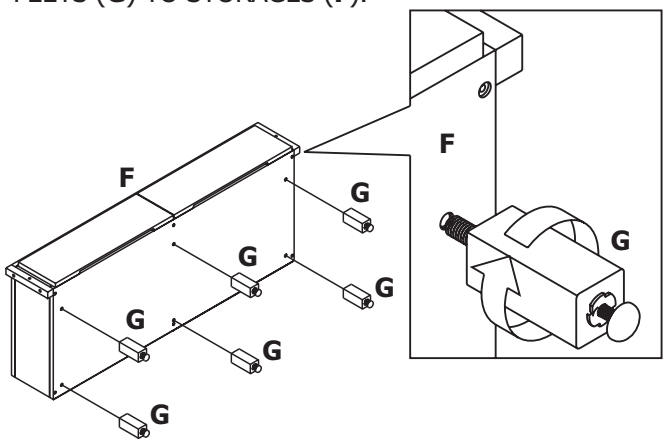

STEP 5 :

FOLLOW THE ILLUSTRATION TO FIX STORAGE (**F**) TO LEFT SIDERAIL (**B**) USING ALLEN BOLTS (**4**). USE ALLEN KEY (**3**) TO TIGHTEN THE BOLTS.

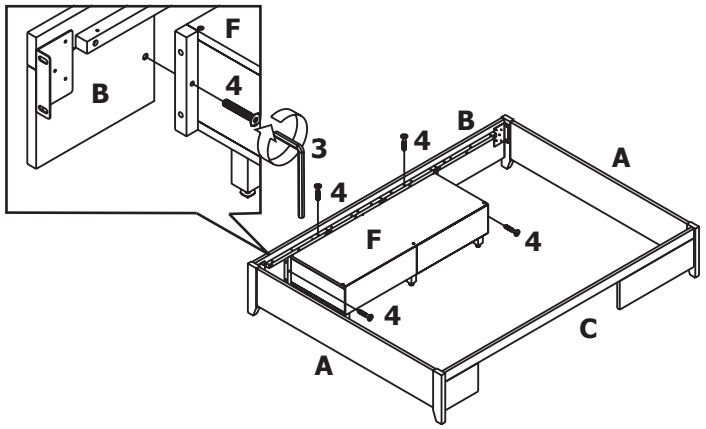

STEP 6 :

FIX STORAGE (**F**) TO RIGHT SIDERAIL (**C**) USING ALLEN BOLTS (**4**).

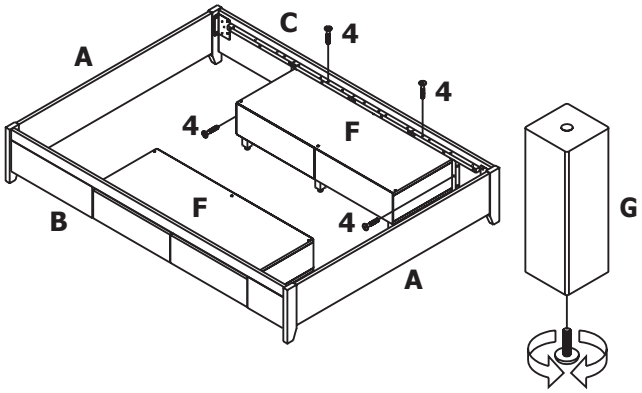

TURN LEVELER UNDERNEATH STORAGE FEETS (**G**) TO ADJUST THE STORAGES (**F**) LEVEL AS SHOWN ON ILLUSTRATION.

STEP 7 :

FIX LEG SUPPORTS (**E**) TO CENTER SLAT (**D**) USING ALLEN BOLTS (**4**). SLIDE ALLEN BOLTS (**4**) INTO PREDRILLED HOLES THAT DON'T HAVE A T-NUT IN IT ON THE CENTER SLAT (**D**). MAKE SURE THE T-NUT IS FACING THE FLOOR.

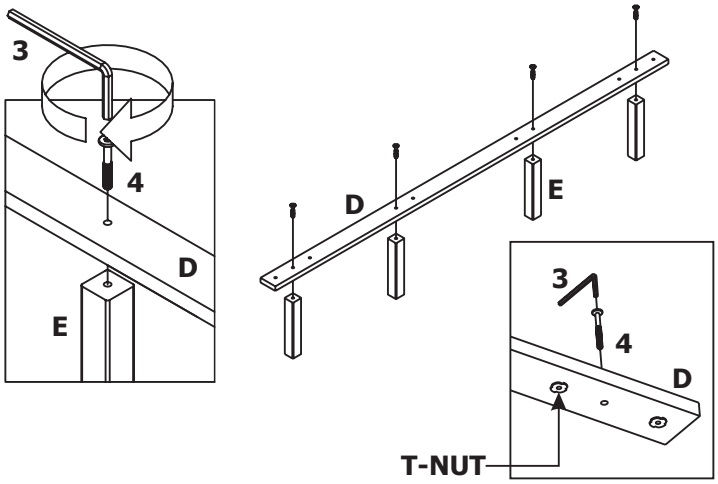

STEP 8 :

FOLLOW THE ILLUSTRATION TO SPREAD OUT ALL THE BED SLATS (**H**). FIX THE CENTER SLAT (**D**) TO THE BED SLATS (**H**) BY SLIDING IN THE ALLEN BOLTS (**4**) THROUGH THE HOLES FROM THE TOP OF BED SLATS (**H**) TO THE CENTER SLAT (**D**). USE THE 1ST, 2ND, 5TH, 8TH, 11TH AND 12TH PRE- DRILLED HOLES ON BED SLATS (**H**)

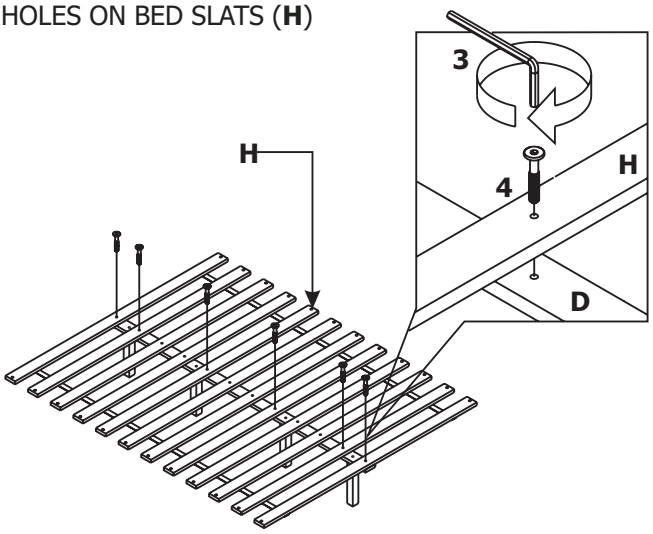

STEP 9 :

FOLLOW THE ILLUSTRATION TO PLACE THE BED SLATS (**H**) ON THE BED FRAME, AND FIX THE BED SLATS (**H**) USING WOOD SCREWS (**2**). USE THE PILOT HOLES ON THE SIDERAILS (**B,C**) AS YOUR REFERENCE, FOR EASY ASSEMBLY. YOU MAY NEED TO ADJUST THE SIDERAILS (**B,C**) POSITION TO LINE UP THE HOLES. MAKE SURE ALL BOLTS AND SCREWS ARE TIGHTENED BEFORE USING.