


ASSEMBLY INSTRUCTION


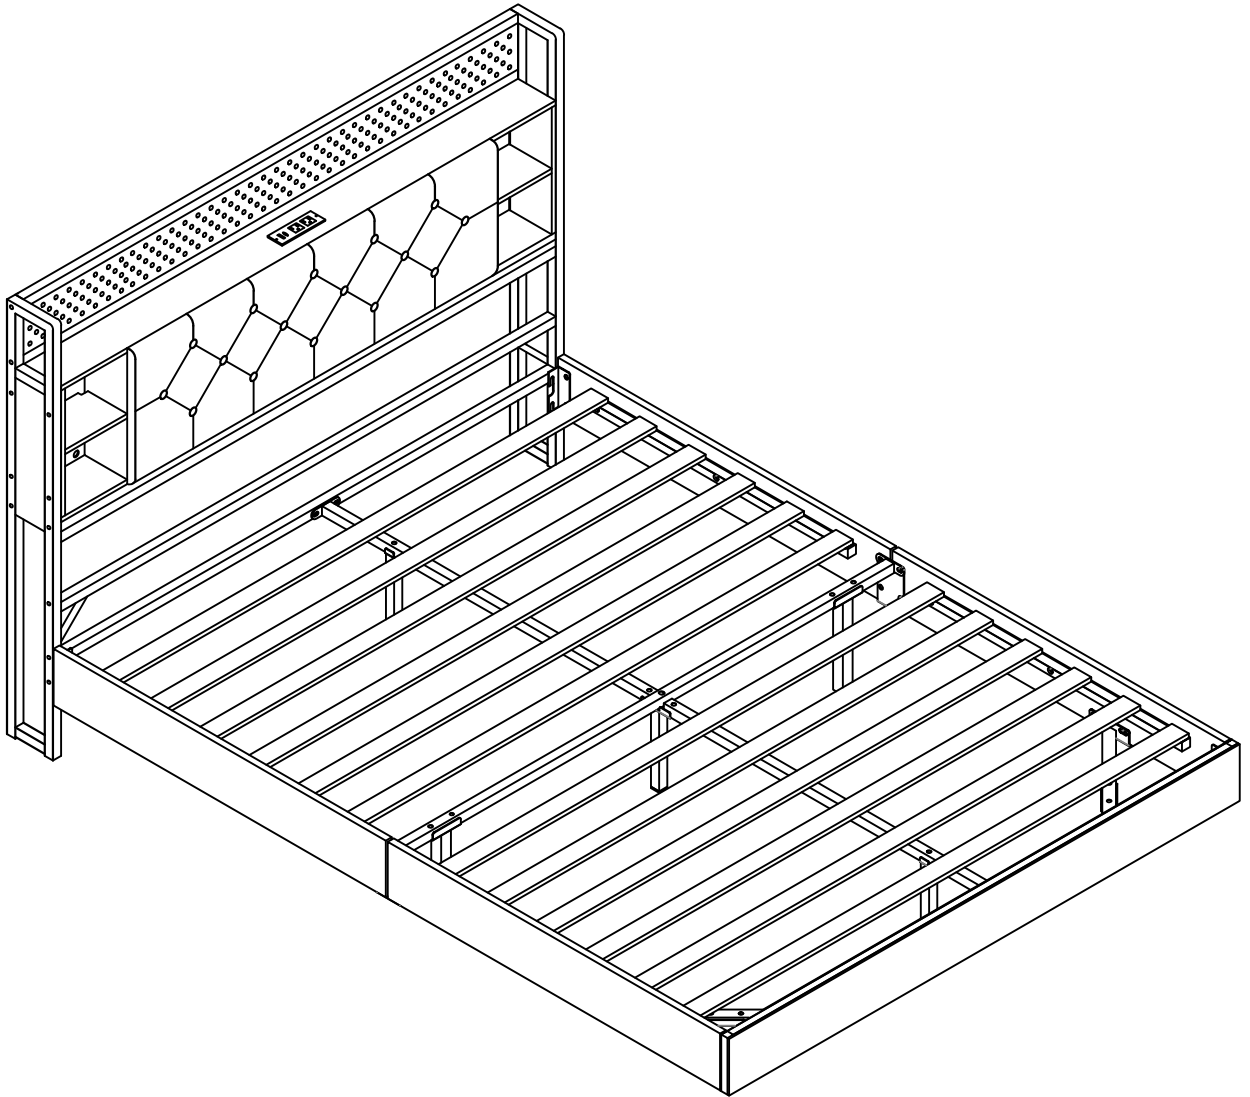


Note:


- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**




Assembly Instruction

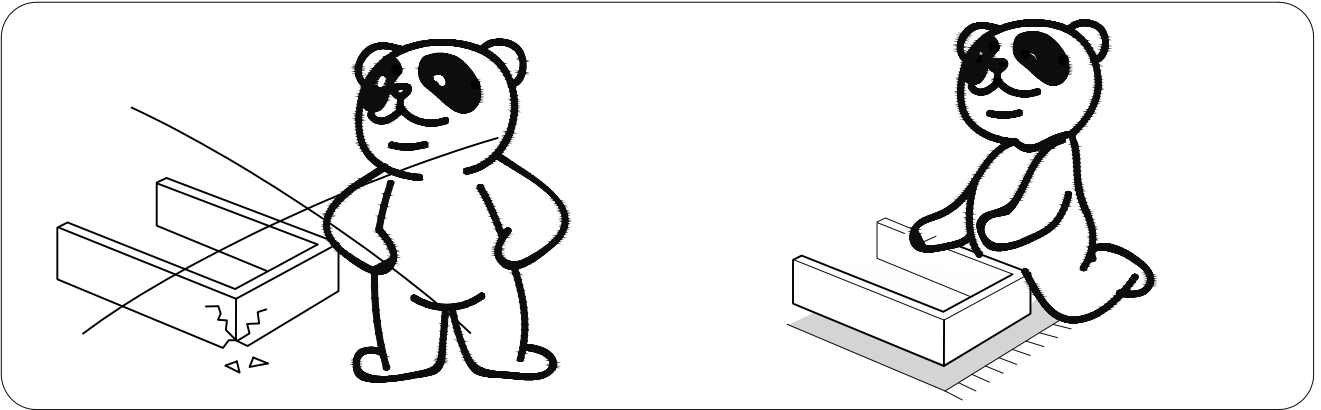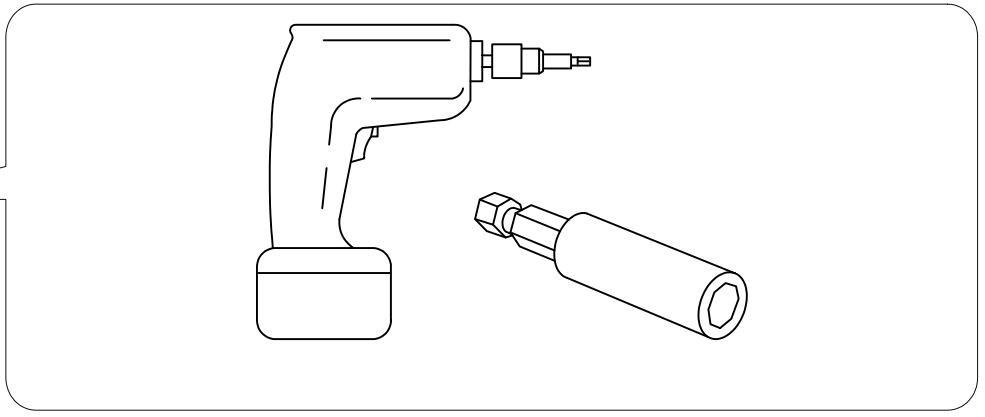

Violent installation is prohibited

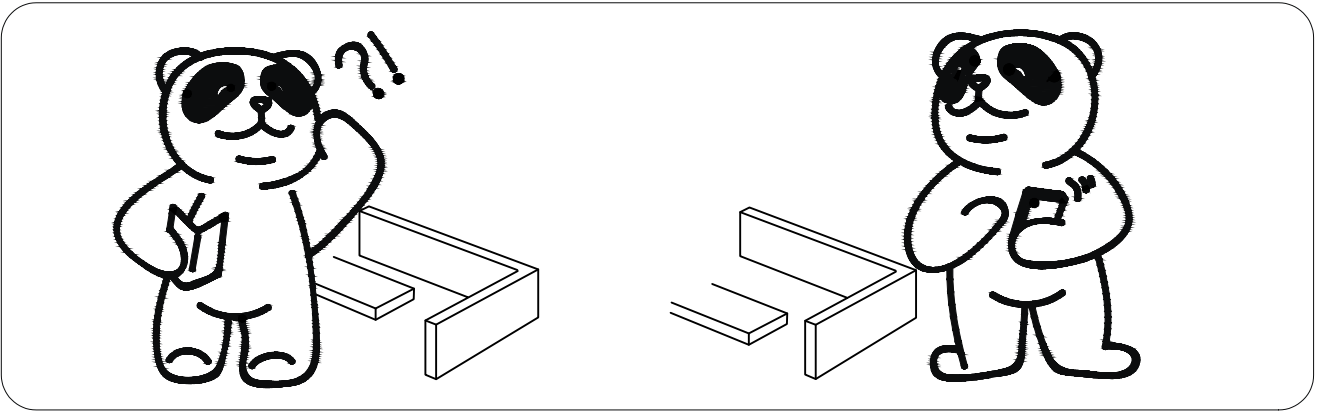


Please call if you need help

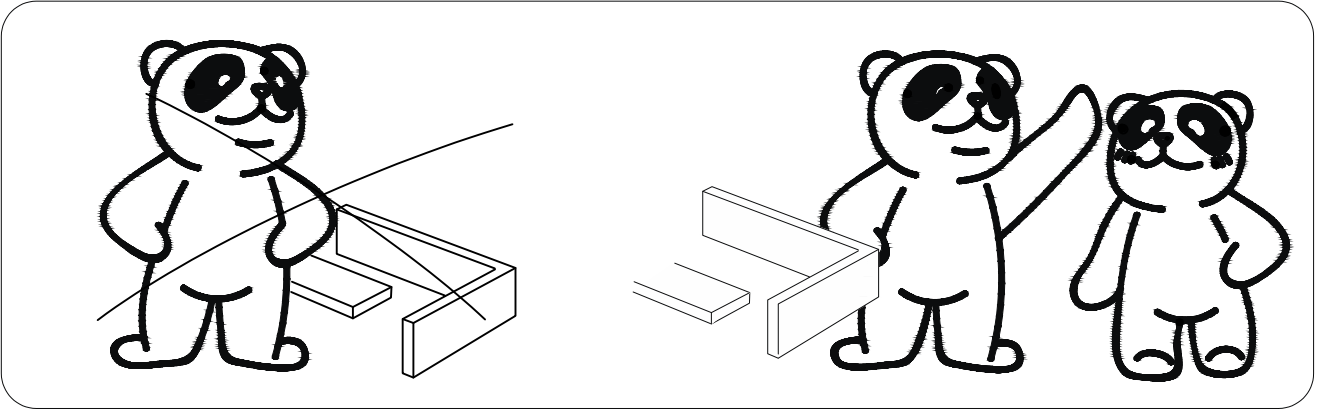


Multi-person cooperation is recommended


Assembly Instruction

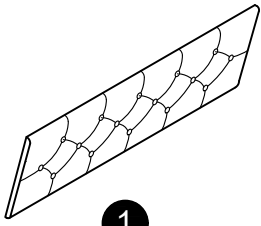


1
X1

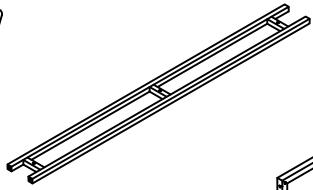


2
X1

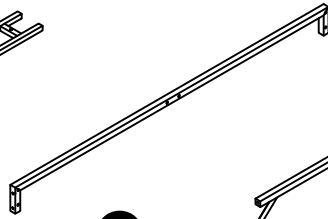

3
X1

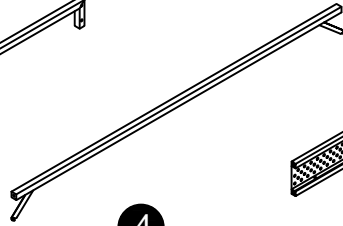


4
X1

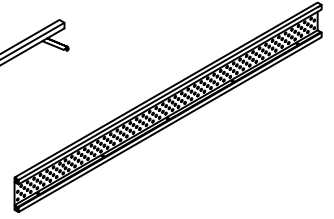


5
X1




6
X2

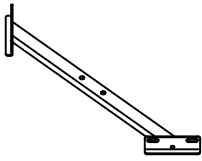

7
X2



8
X2

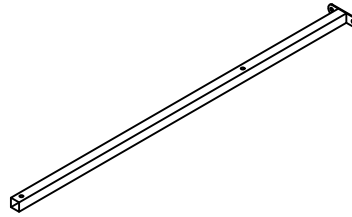


9
X2




10
X1




11
X1




12
X2

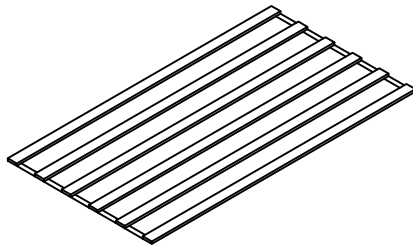


13
X2




14
X1



High
15
X2




Short
16
X2




17
X2




18
X2

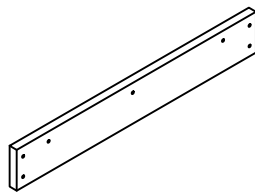


19
X2

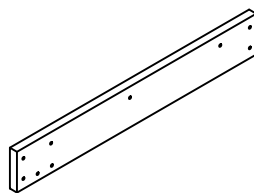

20
X1

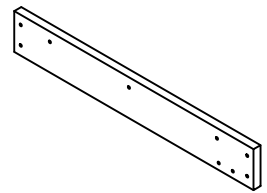


21
X1

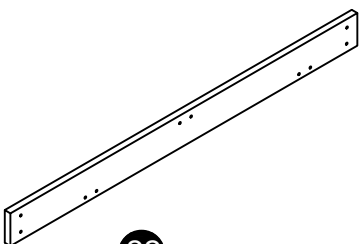


22
X1




23
X2

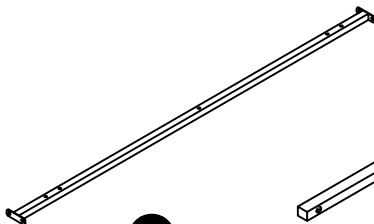

24
X1

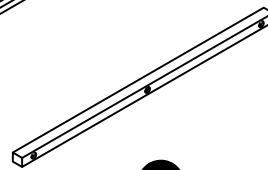


25
X4

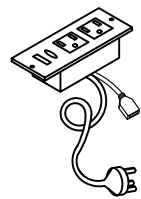

35
X1


Assembly Instruction

Hardware parts 1




A

M6*12
X8+2




B

M6*20
X42+4




C

M6*28
X4+1




D

M6*33
X8+2




E

M6*35
X24+4




F

M6*45
X16+2




G

M6*25
X4




H

M3*12
X2+1



I

M5
X1

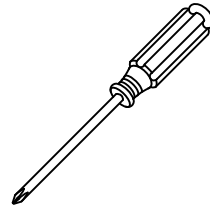


J


X1

Assembly Instruction

Sheet accessories




26
X1




27
X2




29
X1

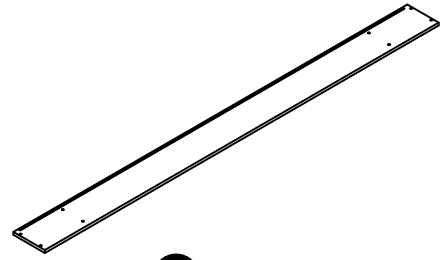


30
X1

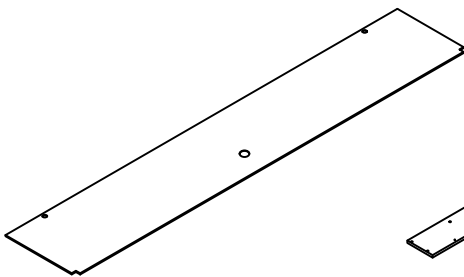


31
X1

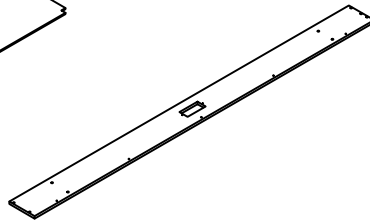


32
X1

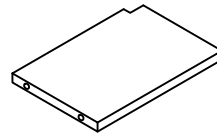


33
X2




34
X2



L
M5*30
X5+1




M
M5*35
X28+2




N
M3
X1

Assembly Instruction


LED light strip electronic accessories list

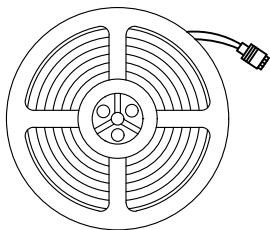


Adhesive light bar X1

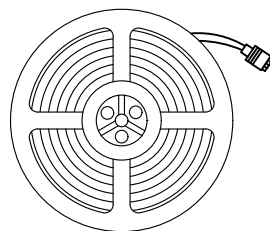


Velcro light bar X2

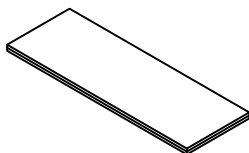


Strap magic tape X4

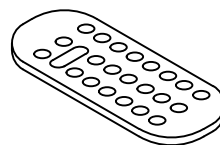

Remote control X1

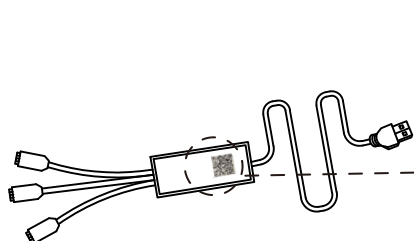


Power cord X1

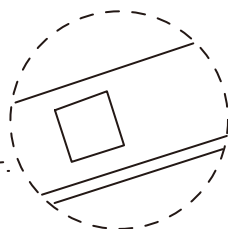


There is a two-dimensional code at the position of the power line.

Assembly Instruction

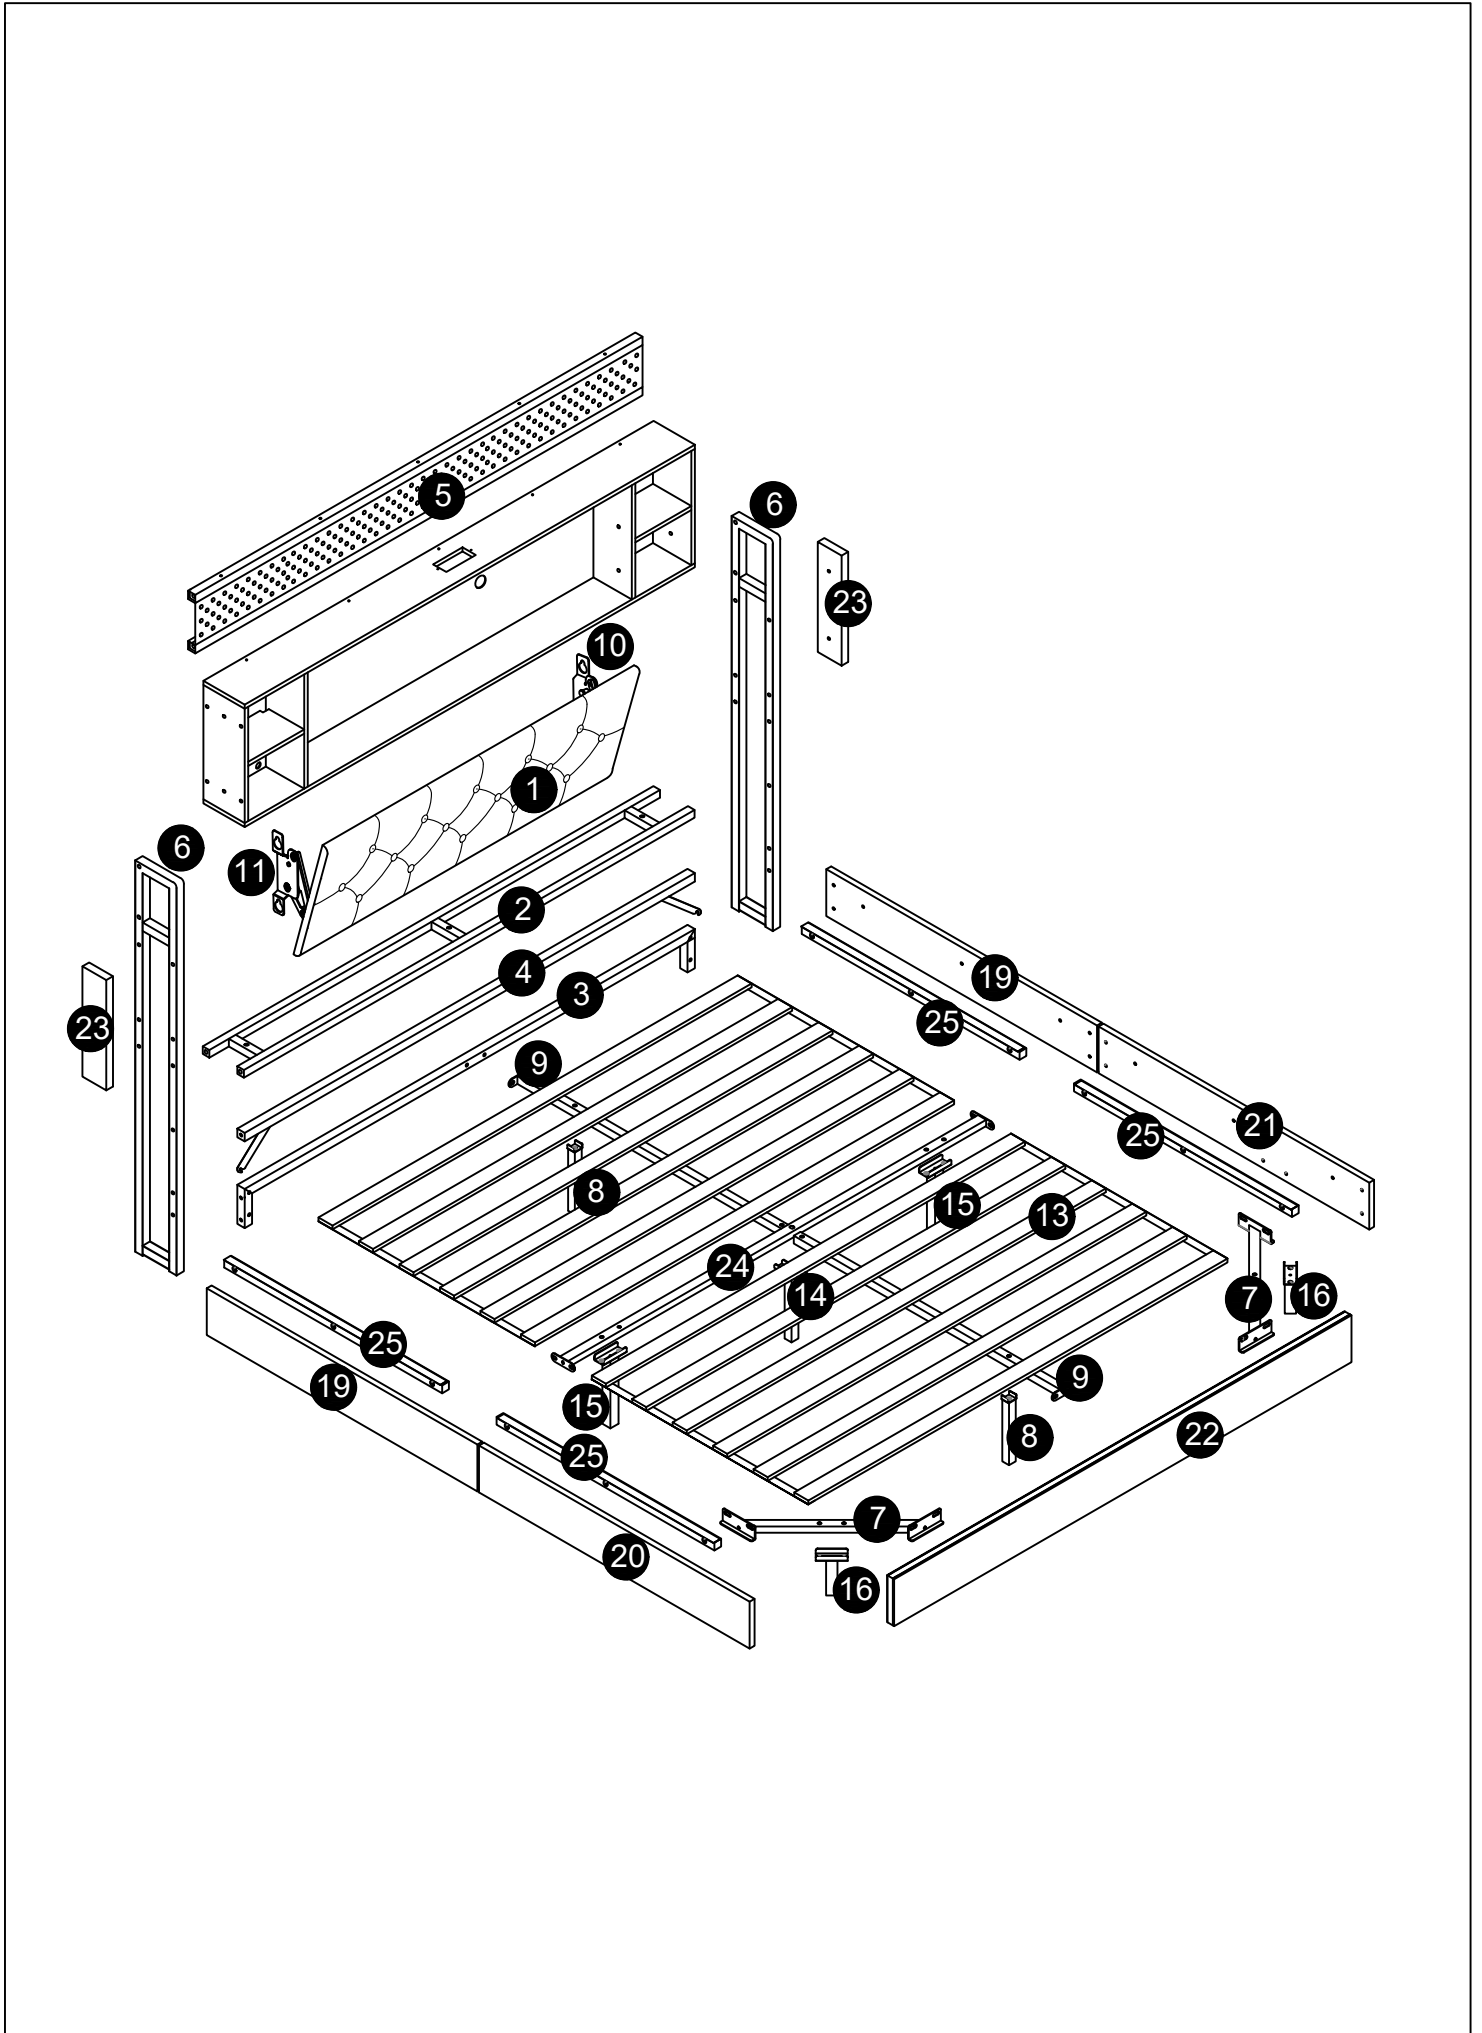

Assembly Instruction

Assembly instruction of Bedside cabinet Exploded general view

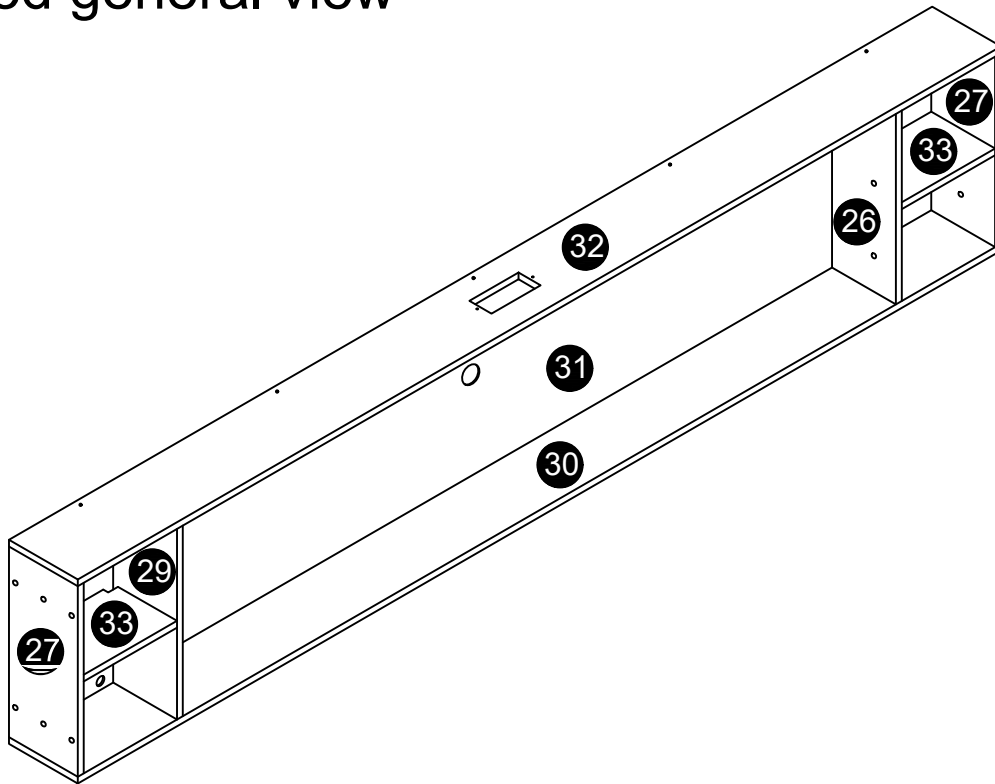


1

Note that boards 29 and 26 have edge sealing directions


M M5*35

X8

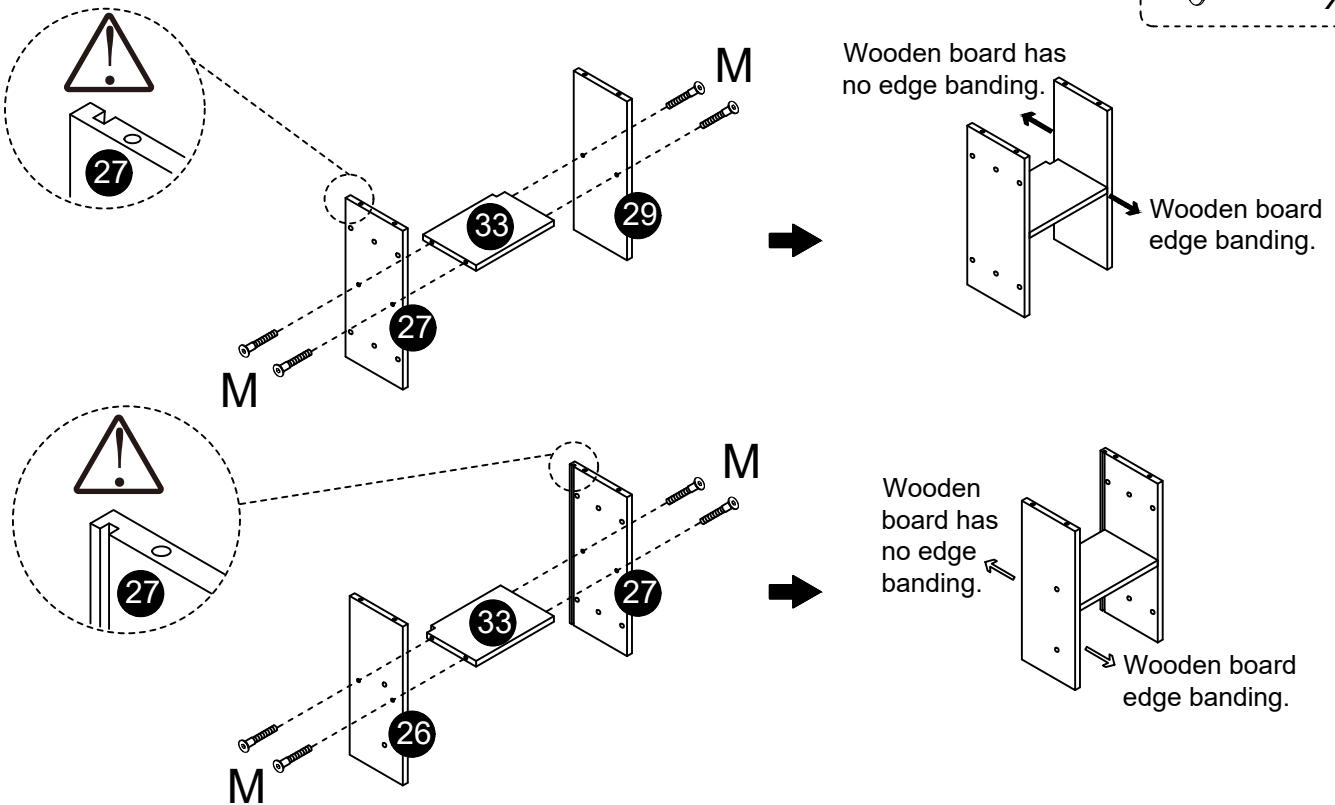


Assembly Instruction

2

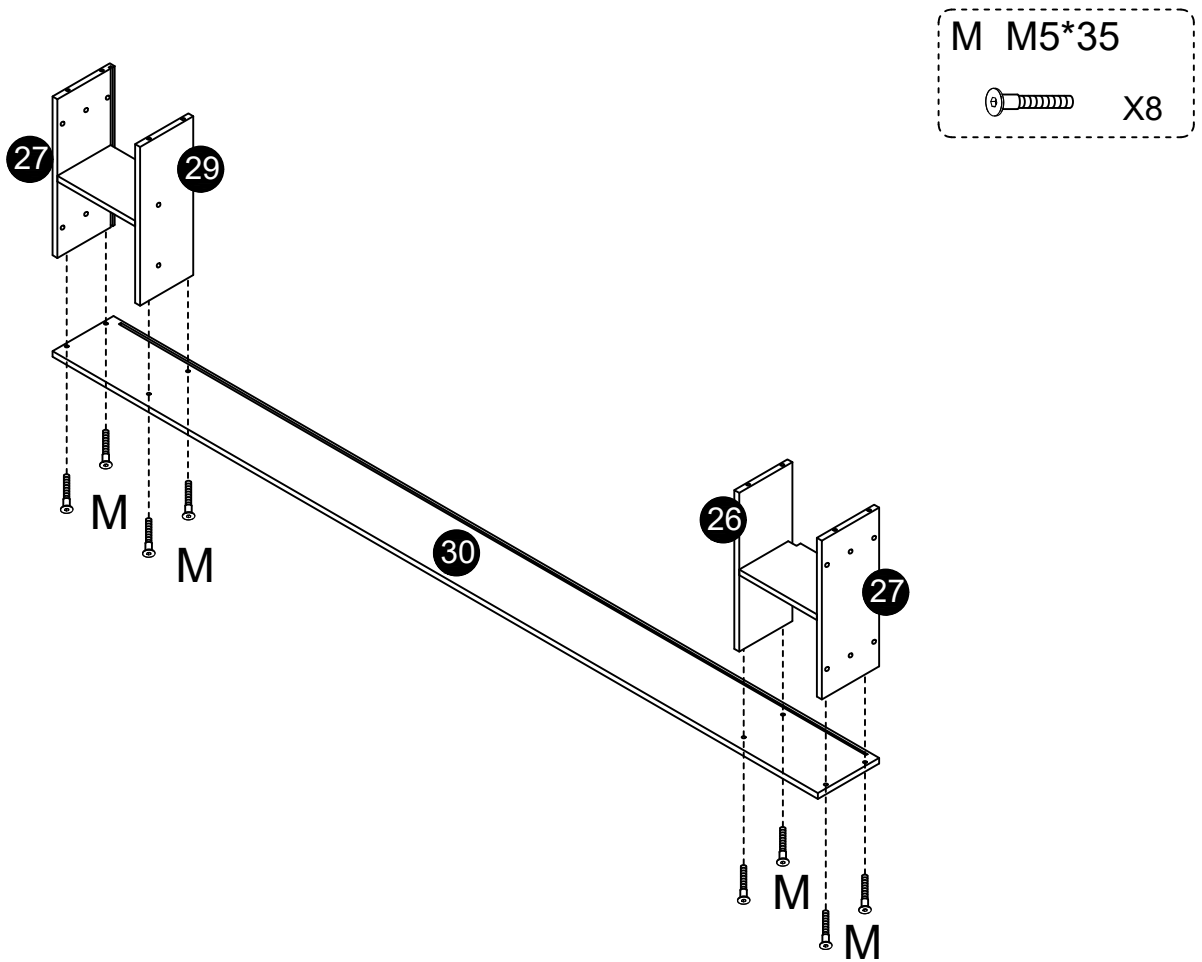


3

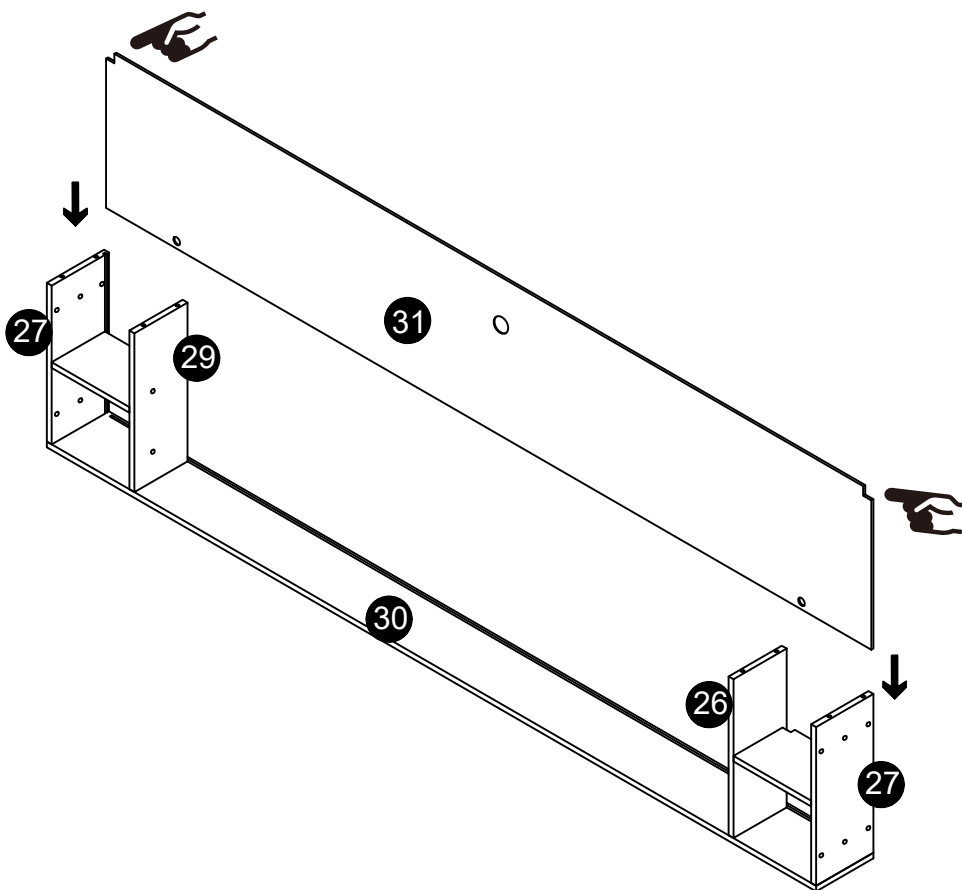


Assembly Instruction

4

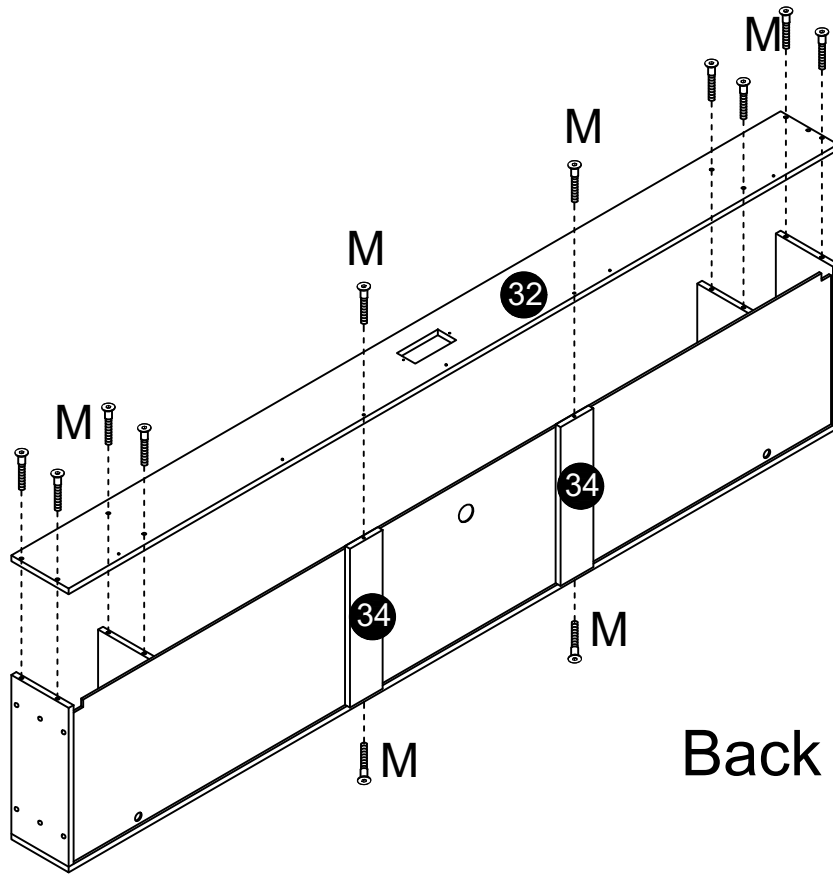

M M5*35
X12

5

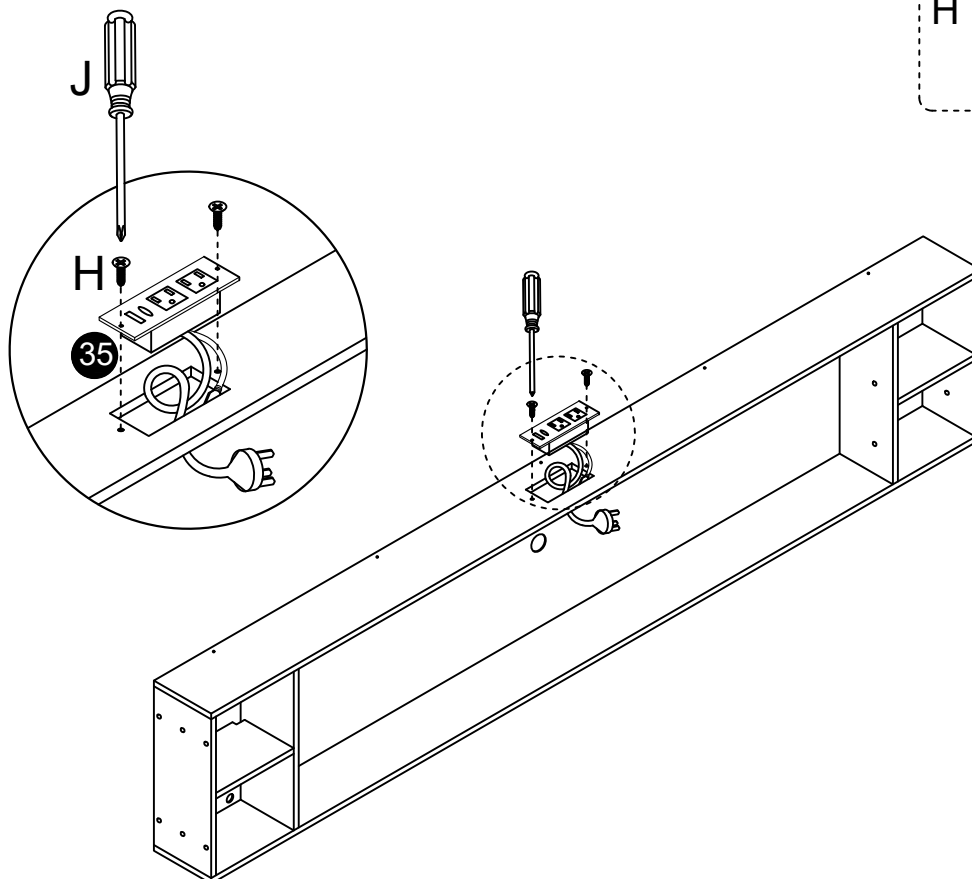


H M3*12
X2

Assembly Instruction

6


L M5*30
X5

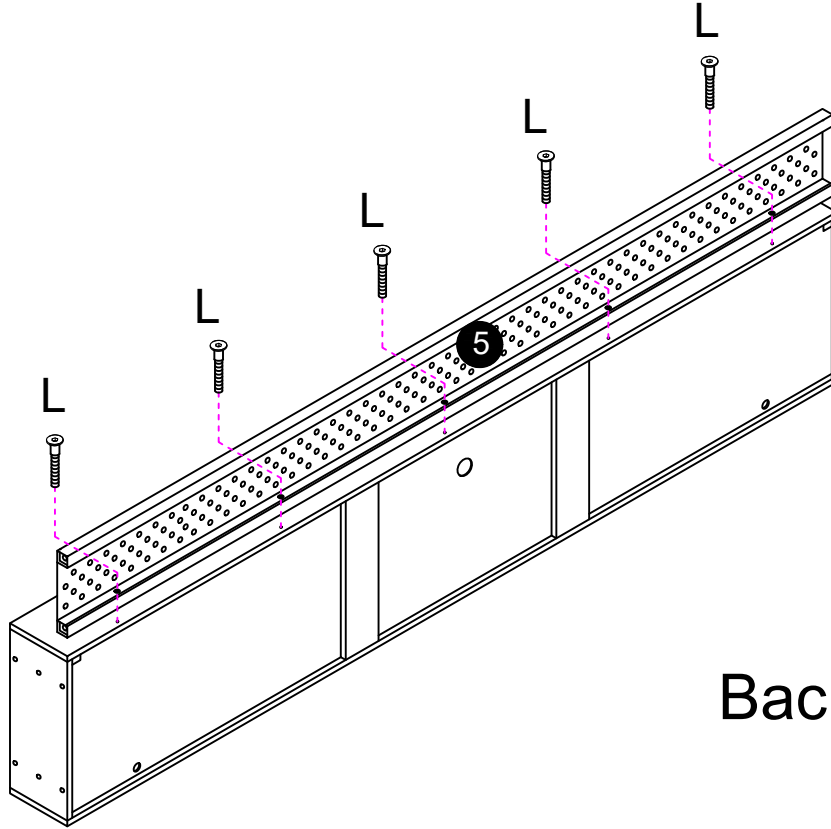

Back

7


F M6*45
X10

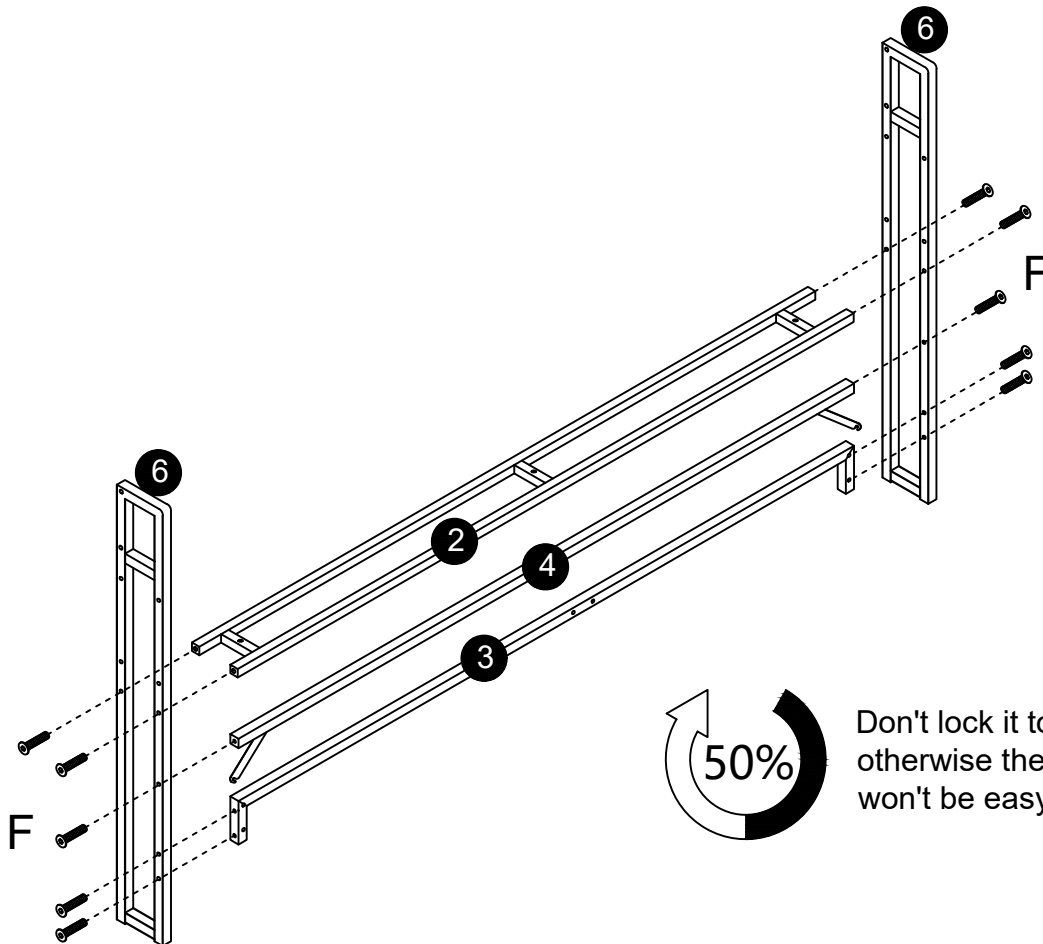


Don't lock it too tightly for now, otherwise the head of the bed won't be easy to install.

Assembly Instruction

8

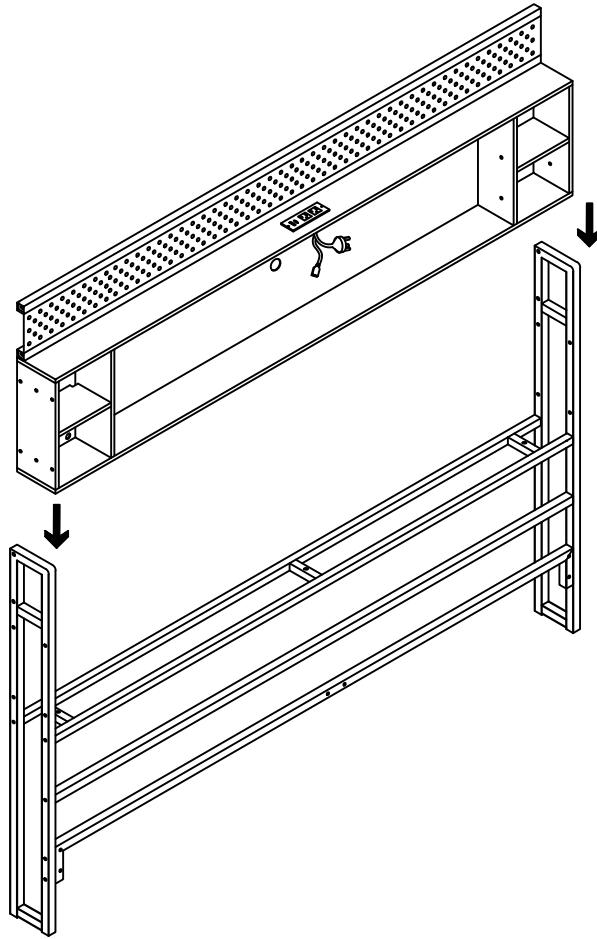

9

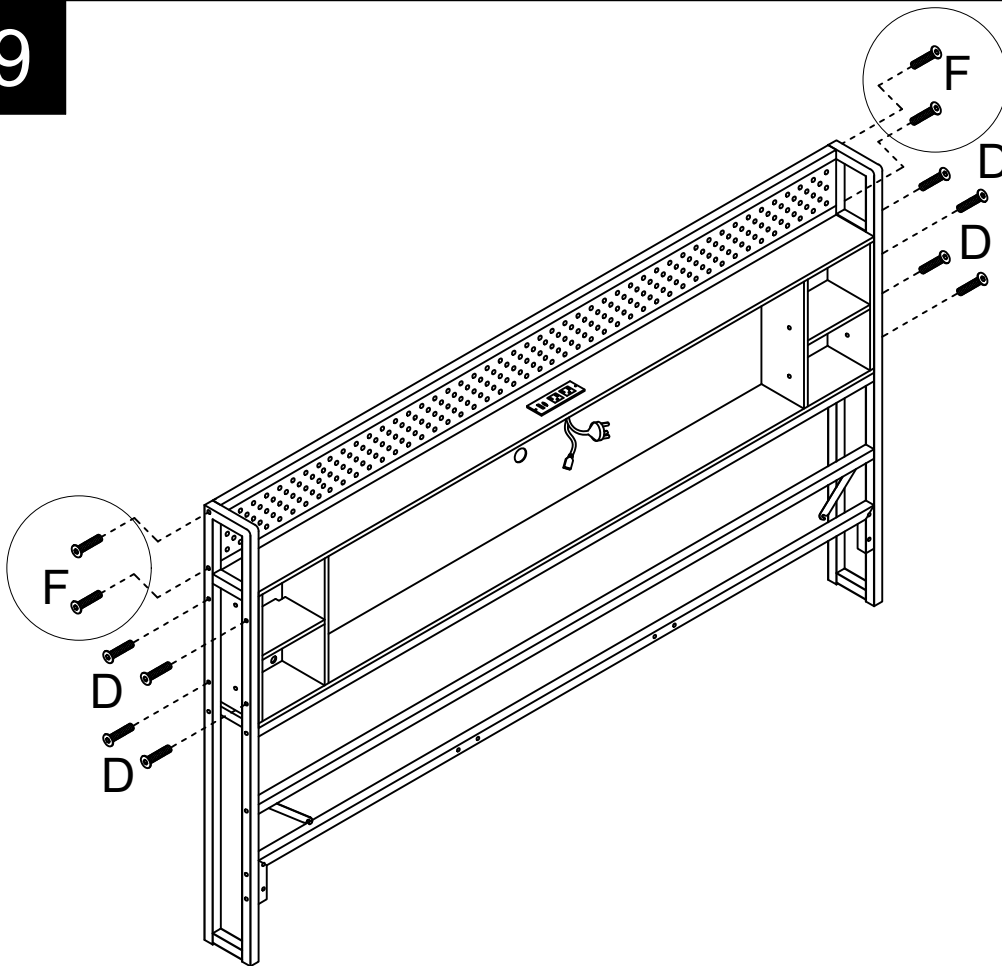



D M6*33
X8

F M6*45
X4

Assembly Instruction

10


C M6*28
 X3

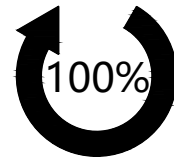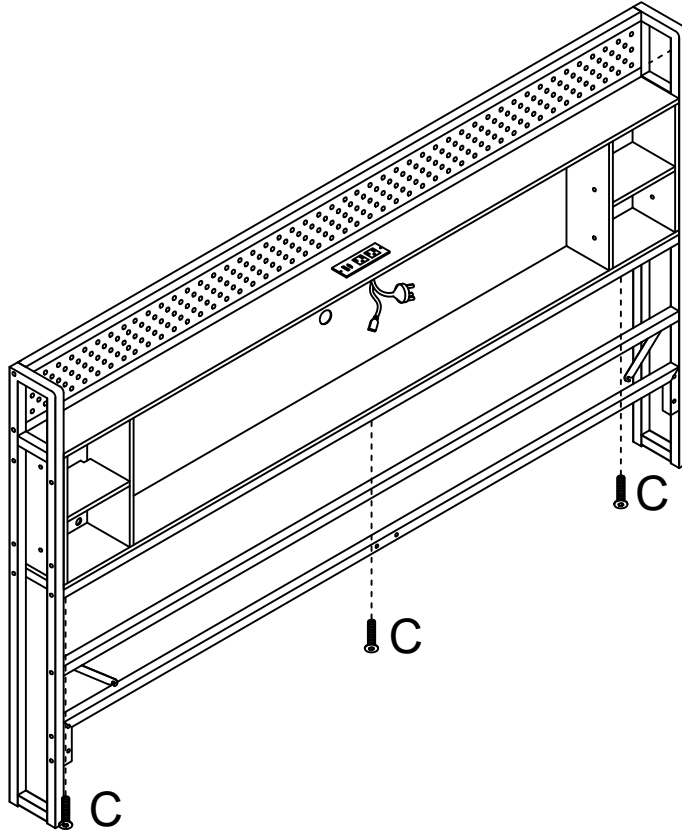

After installing the cabinet,
tighten the screws.


11


G M6*25
 X4

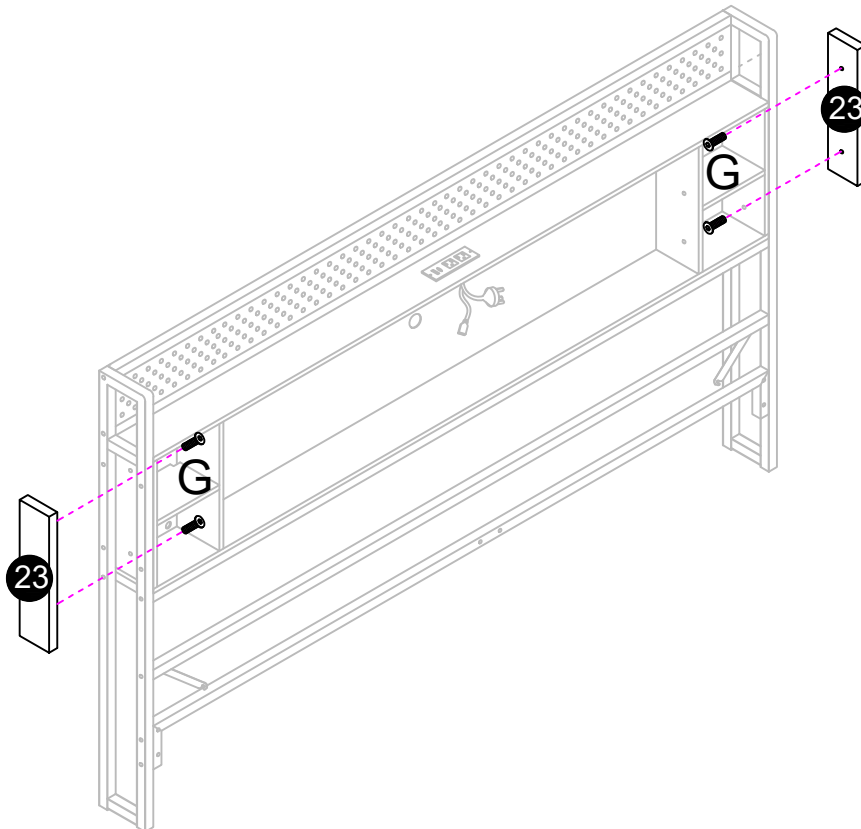


Assembly Instruction


12



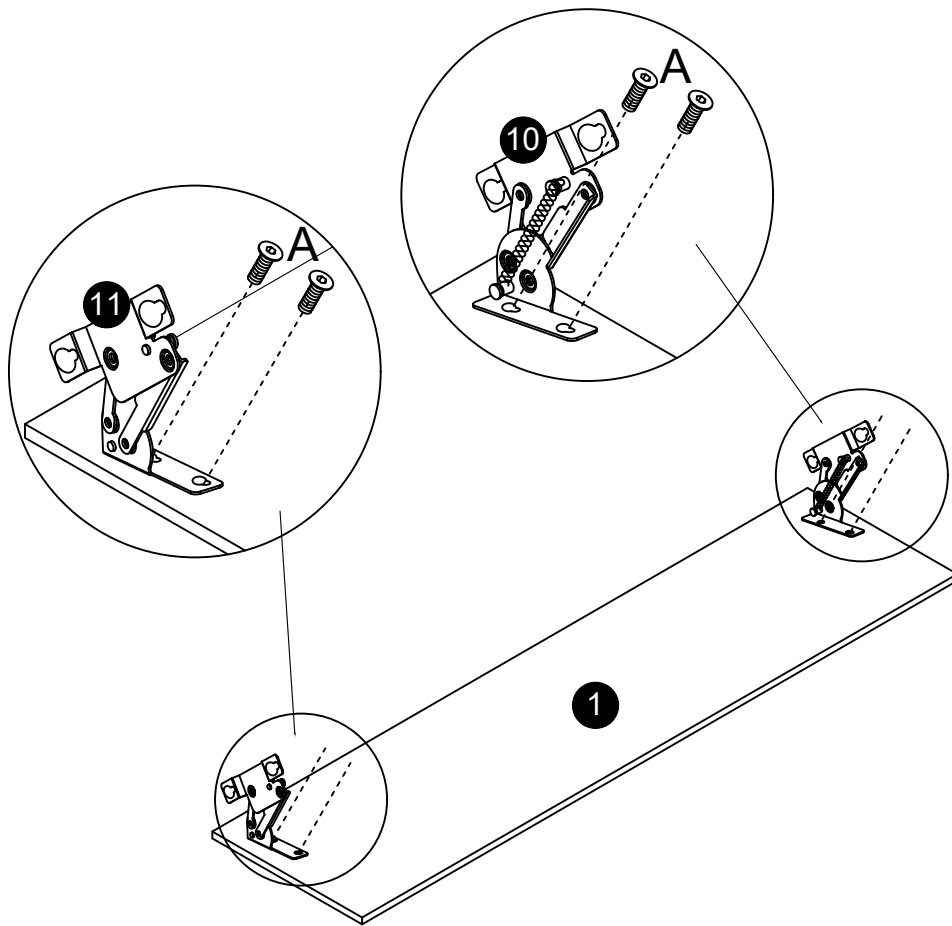


A M6*12
 X4

13

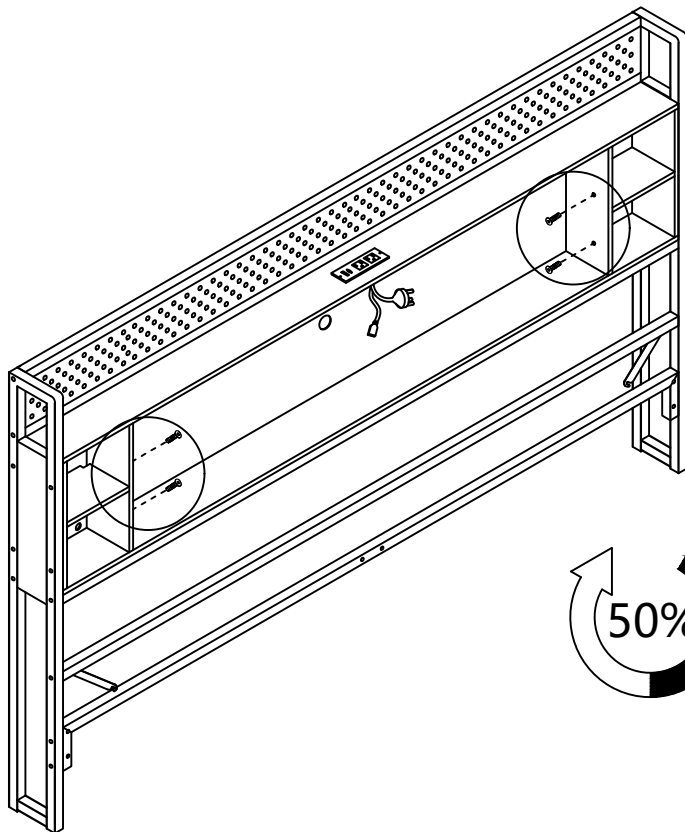


A M6*12
 X4

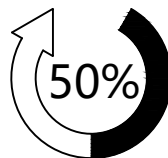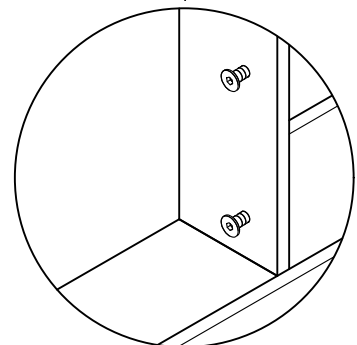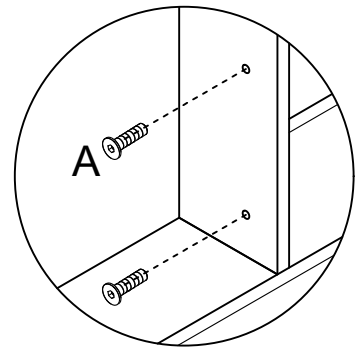


Assembly Instruction


14

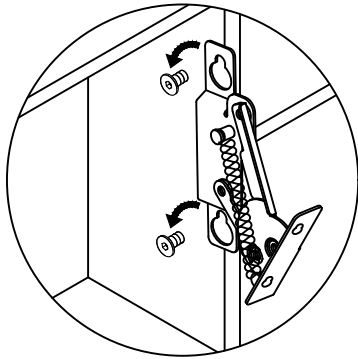

Hang it up first


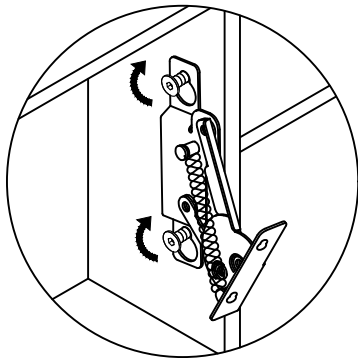


Lock it, don't use
fore to lock it.

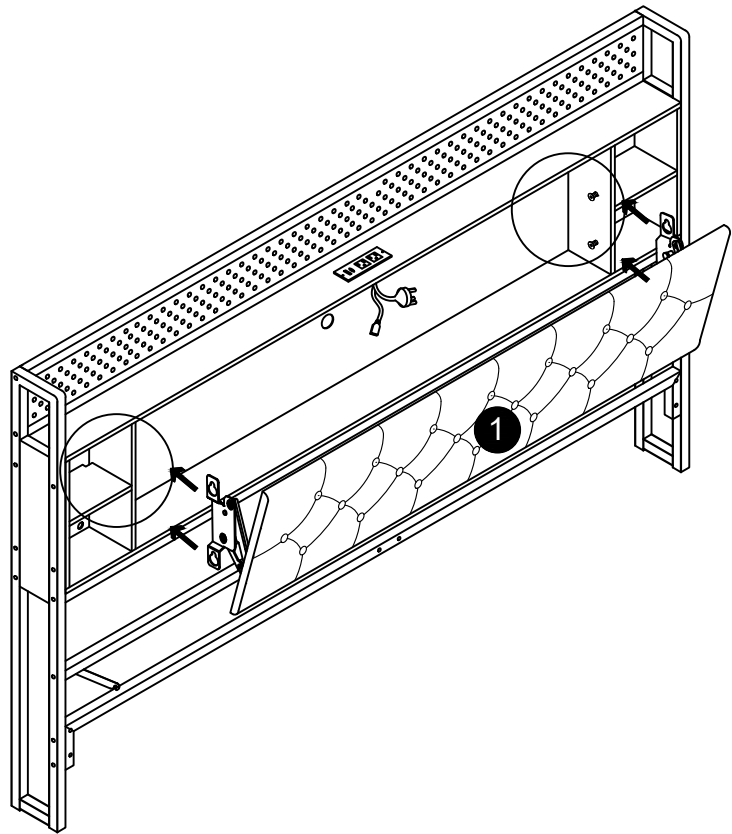

15




B M6*20

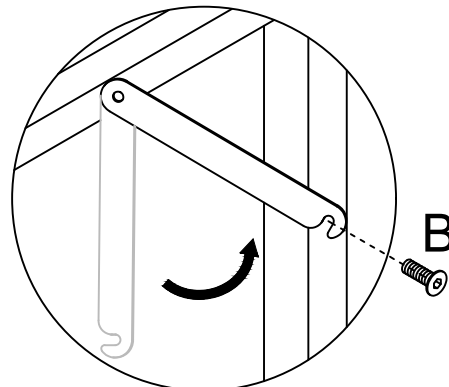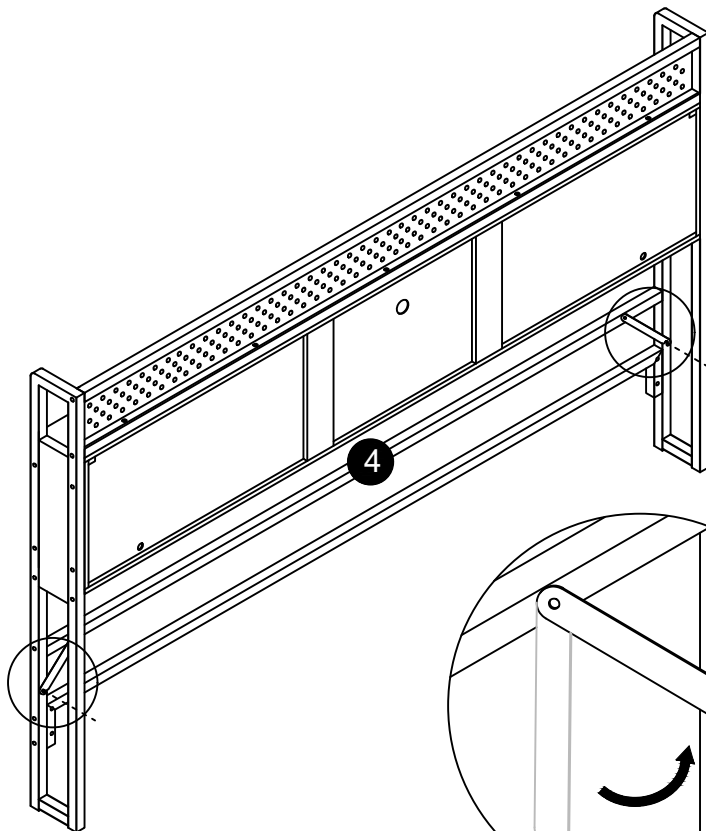

Assembly Instruction

16

E M6*35
X12

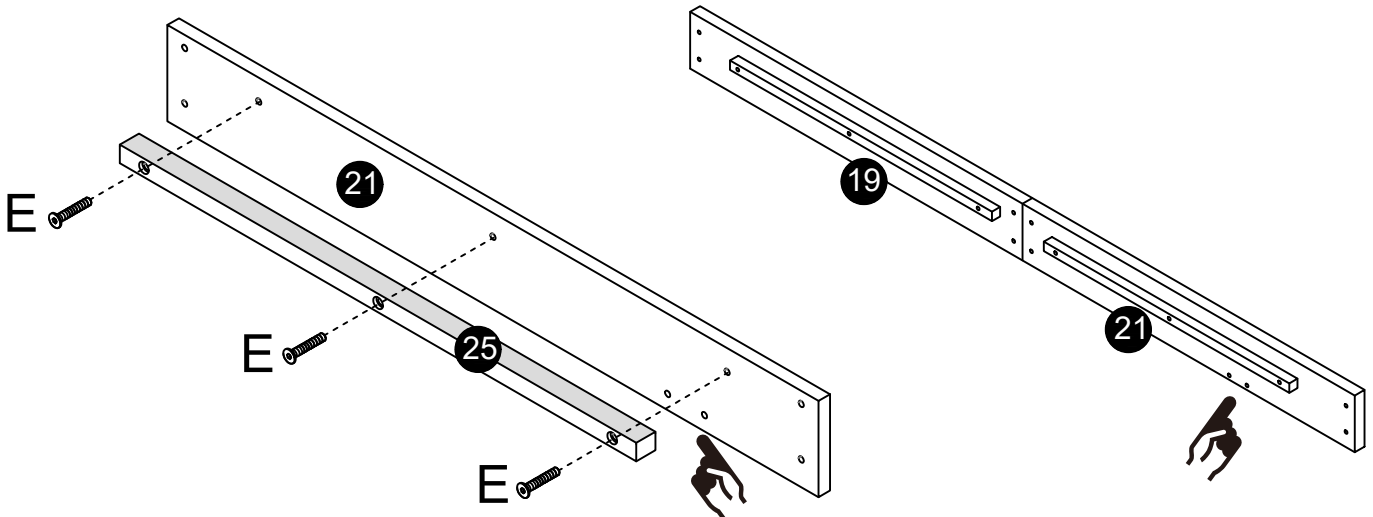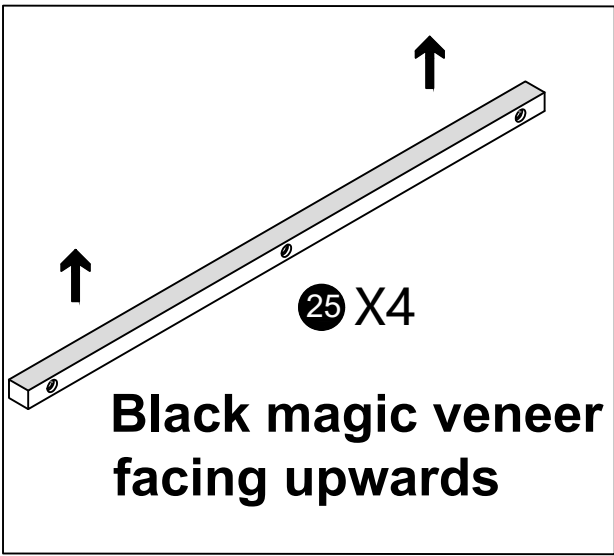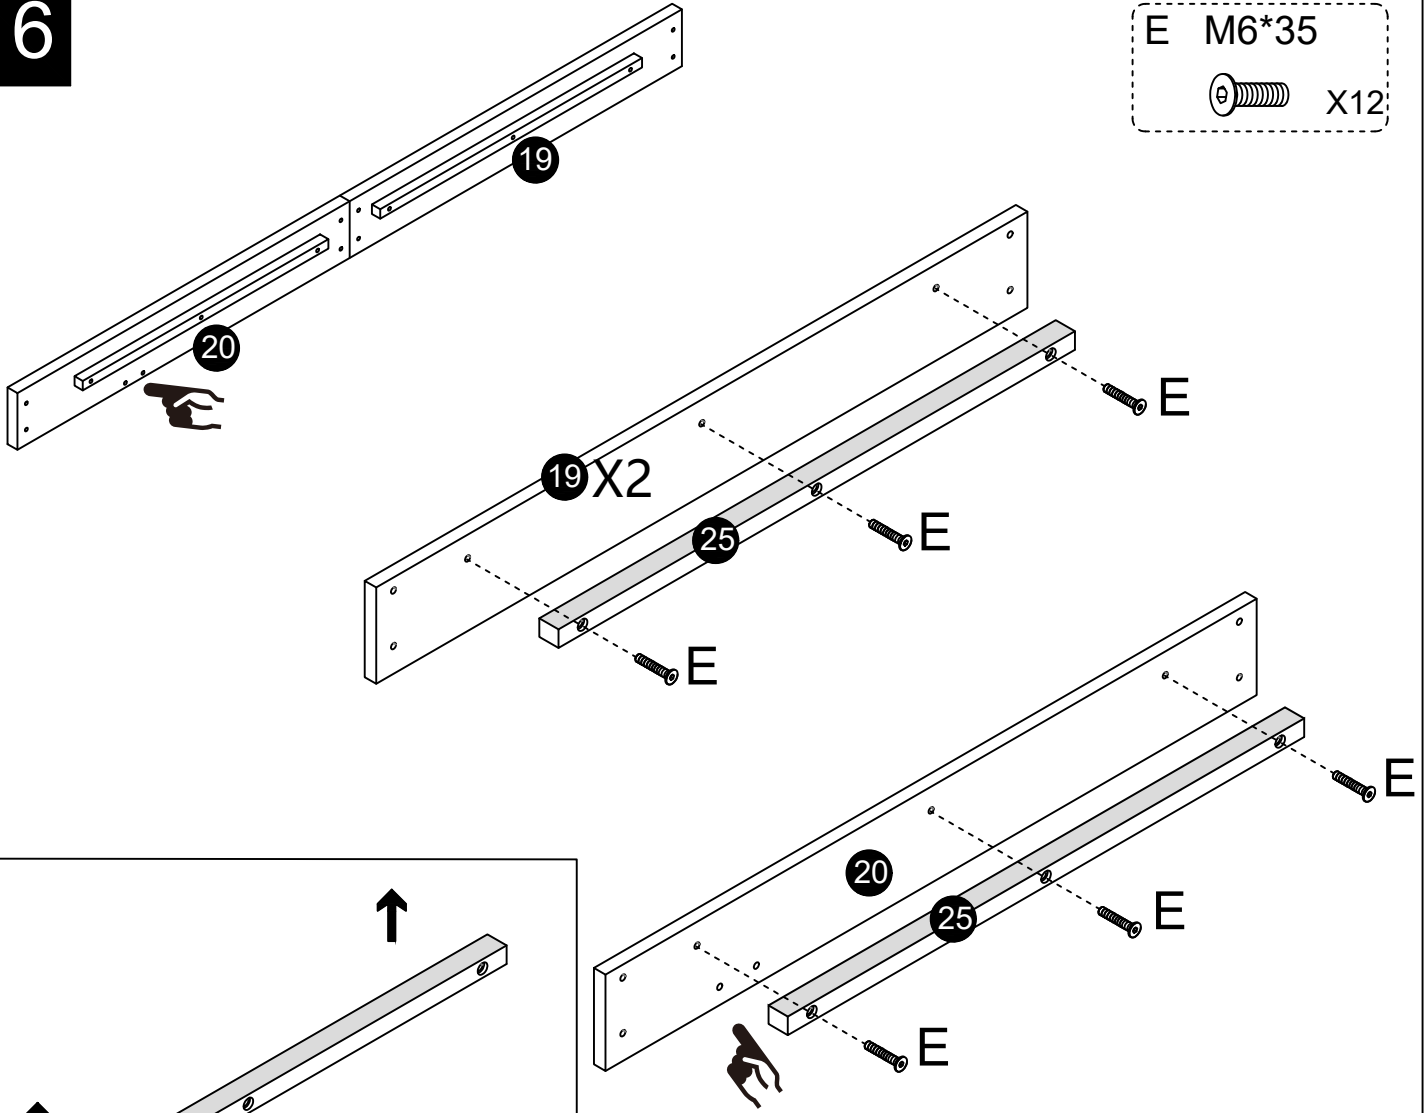




Assembly Instruction

19

Hang it up

B M6*20



 X4

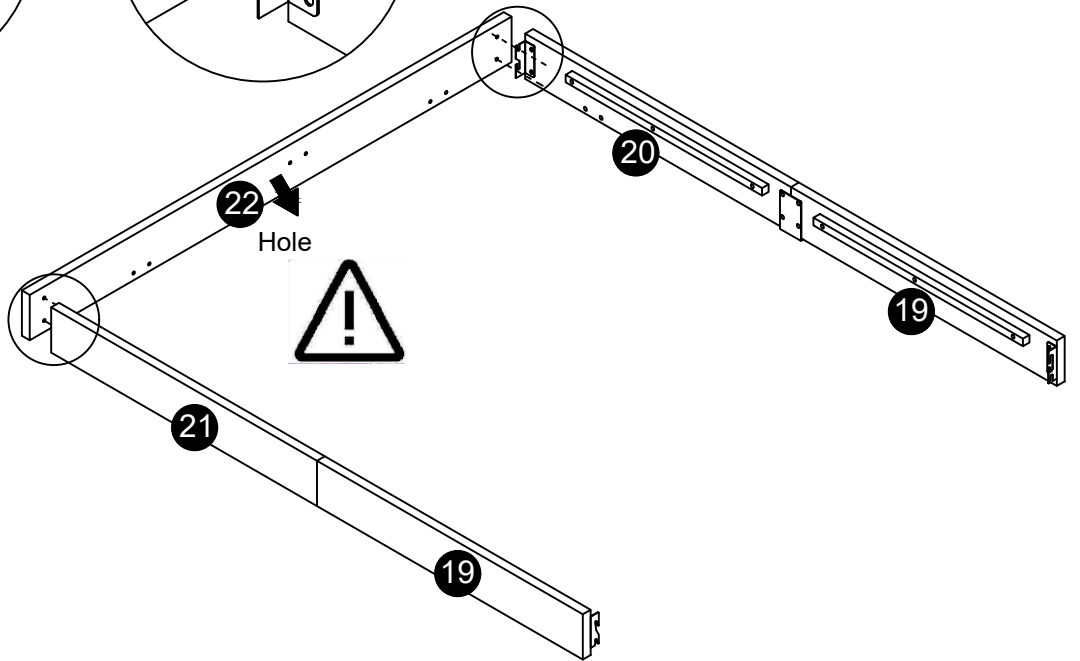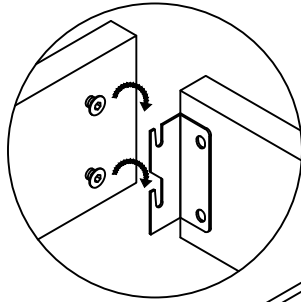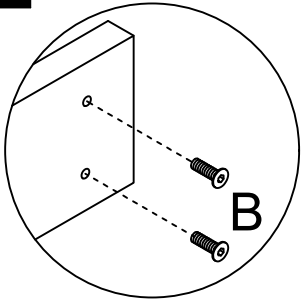

20


B M6*20

 X4

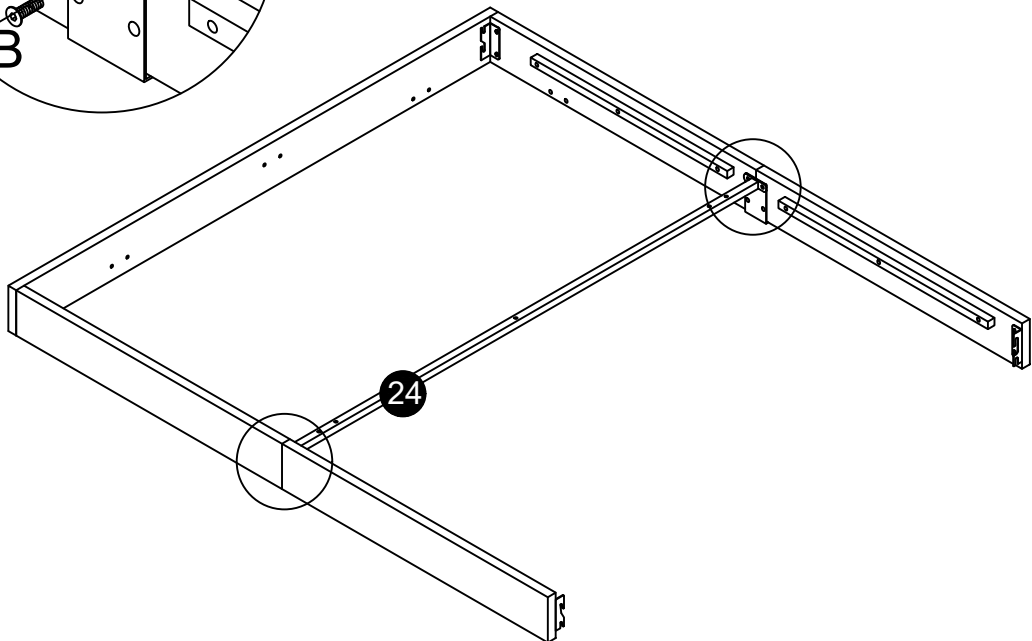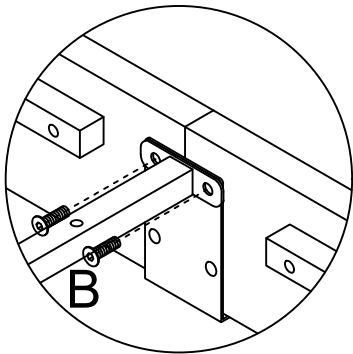


Assembly Instruction

21

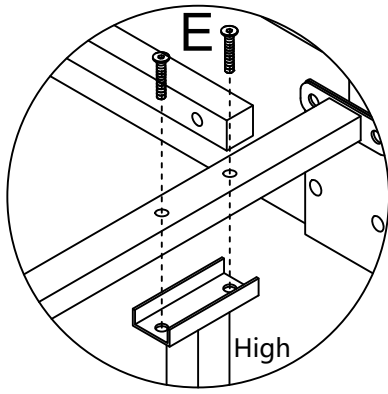


E M6*35


X4

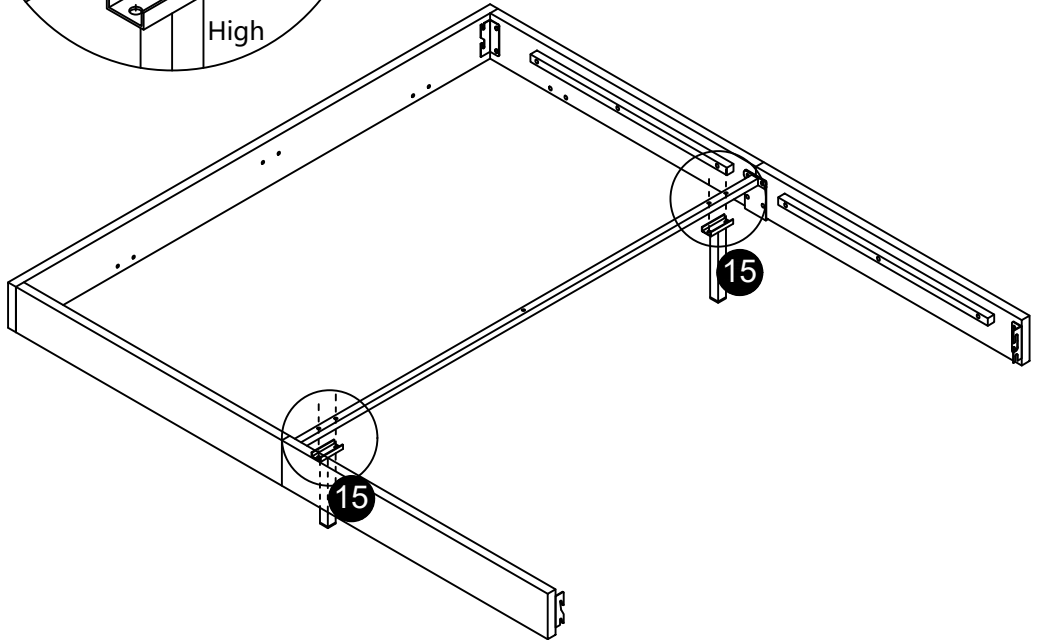

22

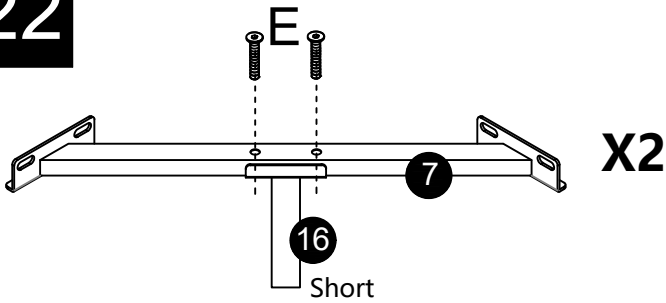

X2

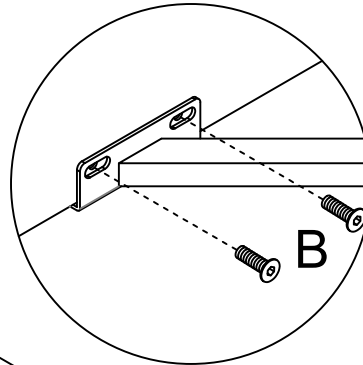


B M6*20

X8

E M6*35

X4

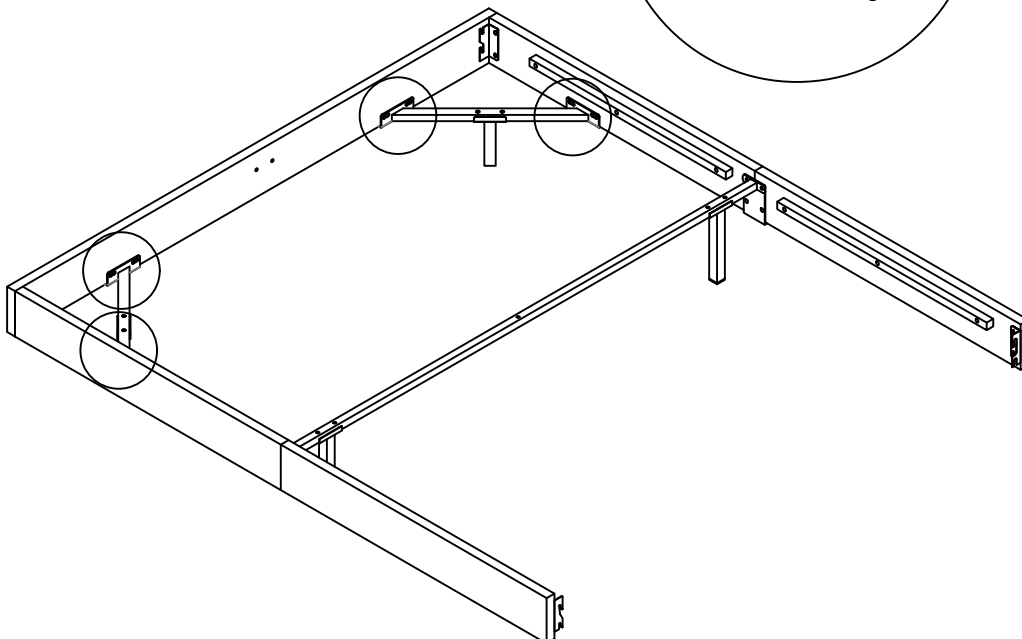


Assembly Instruction



23

E M6*35

 X2

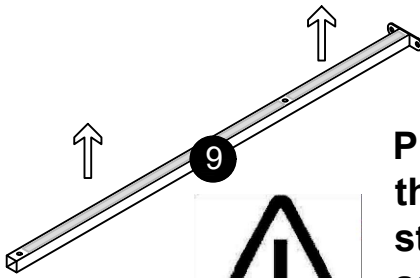

Please be sure to pay attention to the fact that there are mute stickers facing upwards during assembly, and the material feels soft to the touch

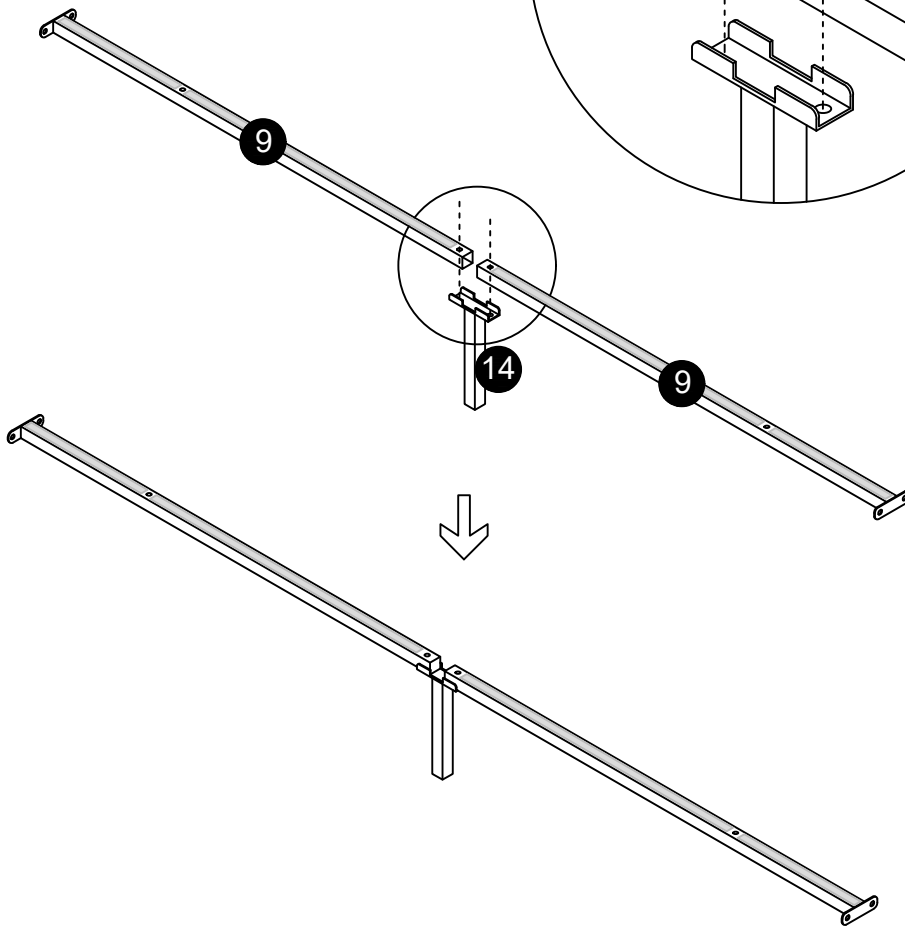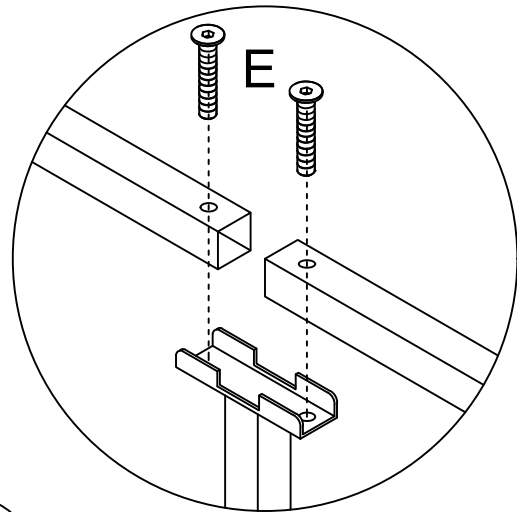


Assembly Instruction

24


F M6*45


 X1

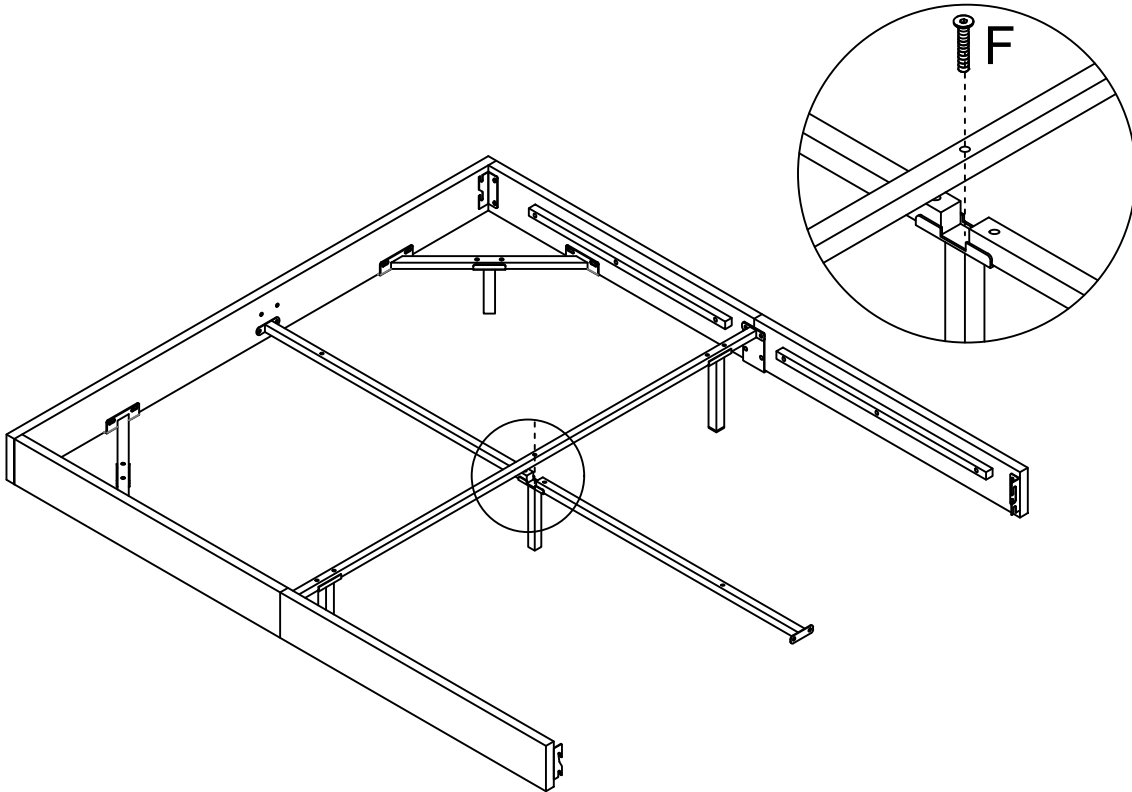

25

B M6*20

 X2

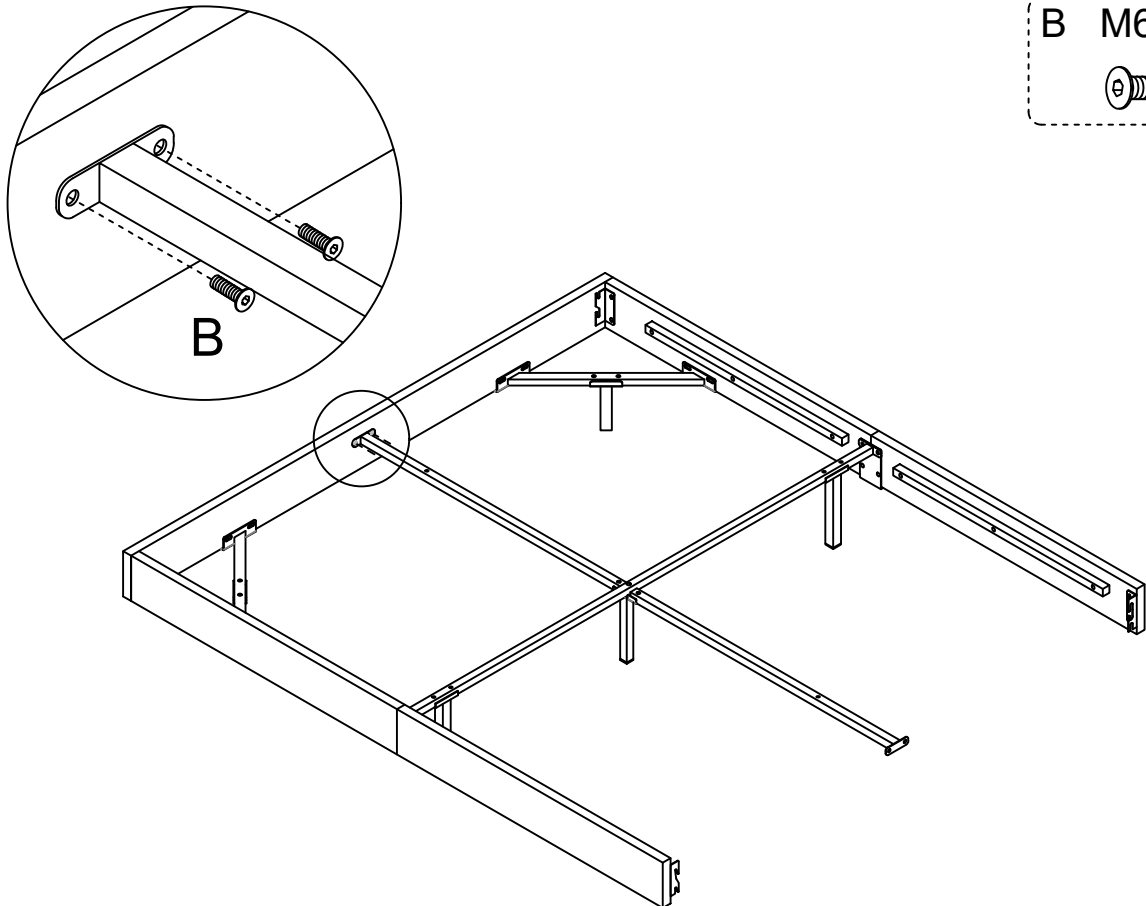

Assembly Instruction


26

B M6*20



X6

Hang it up

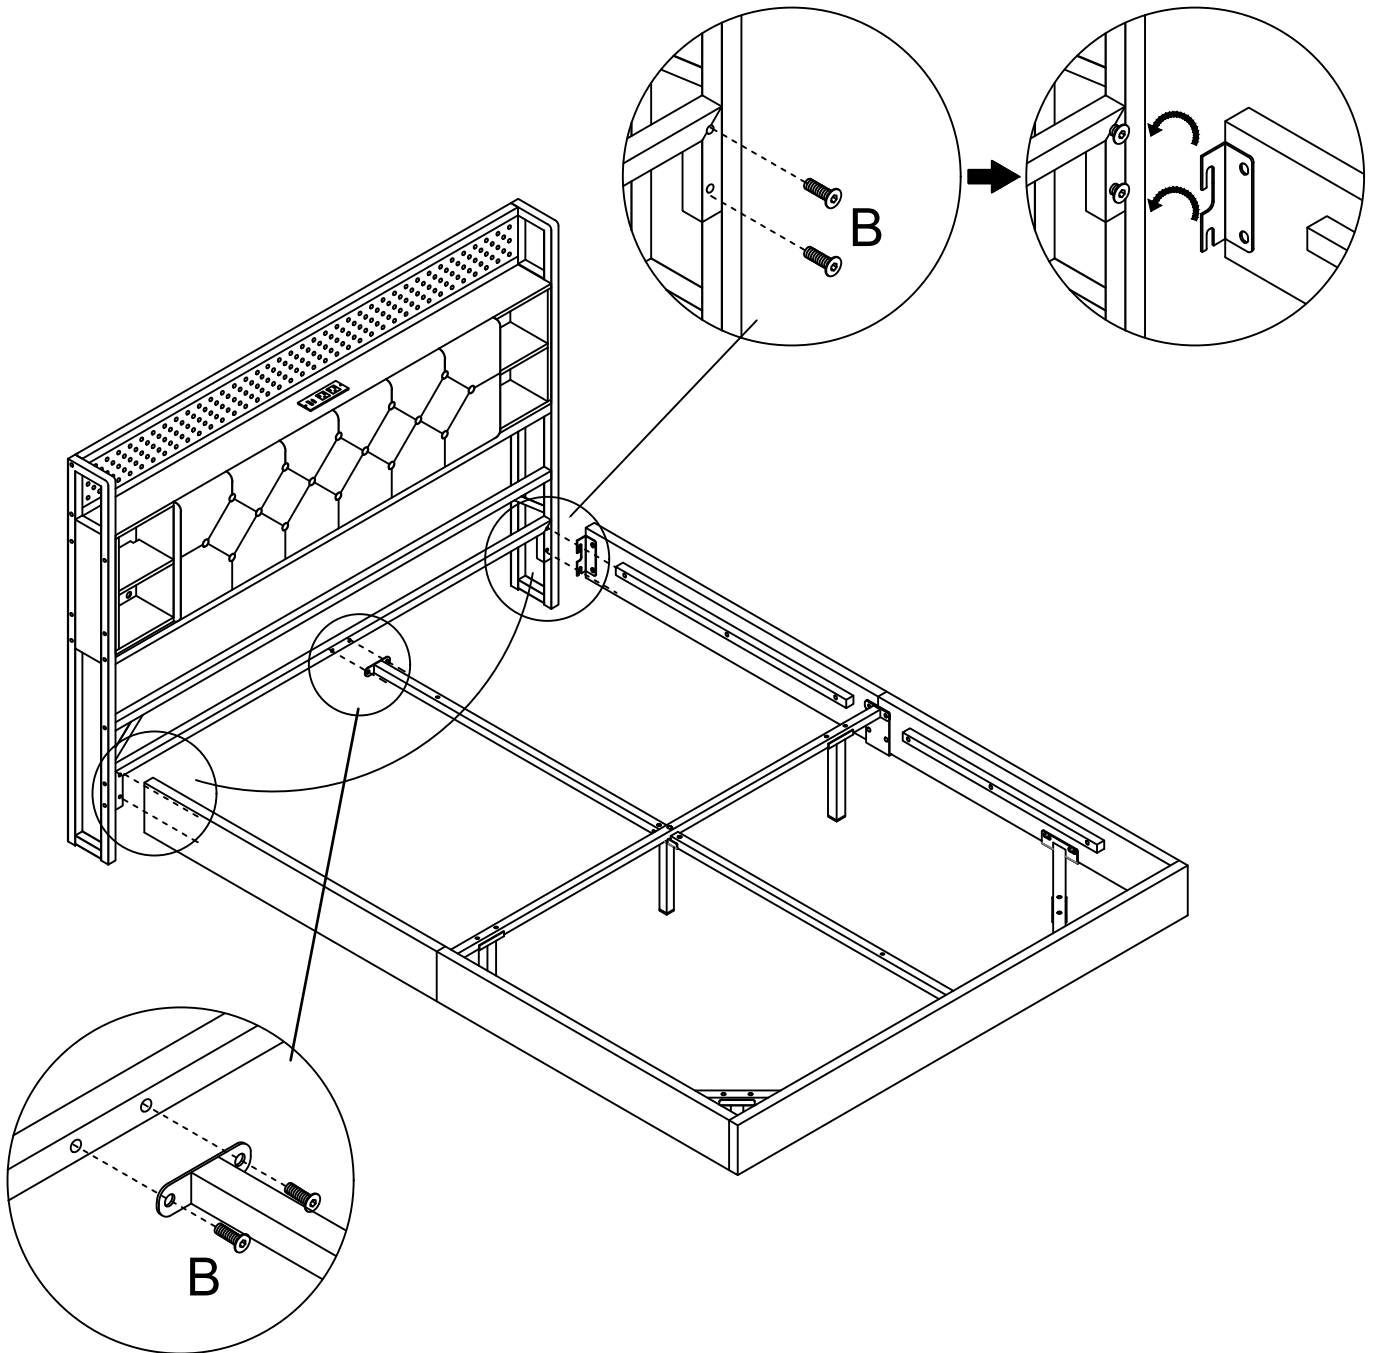


Assembly Instruction

27


E M6*35

 X2

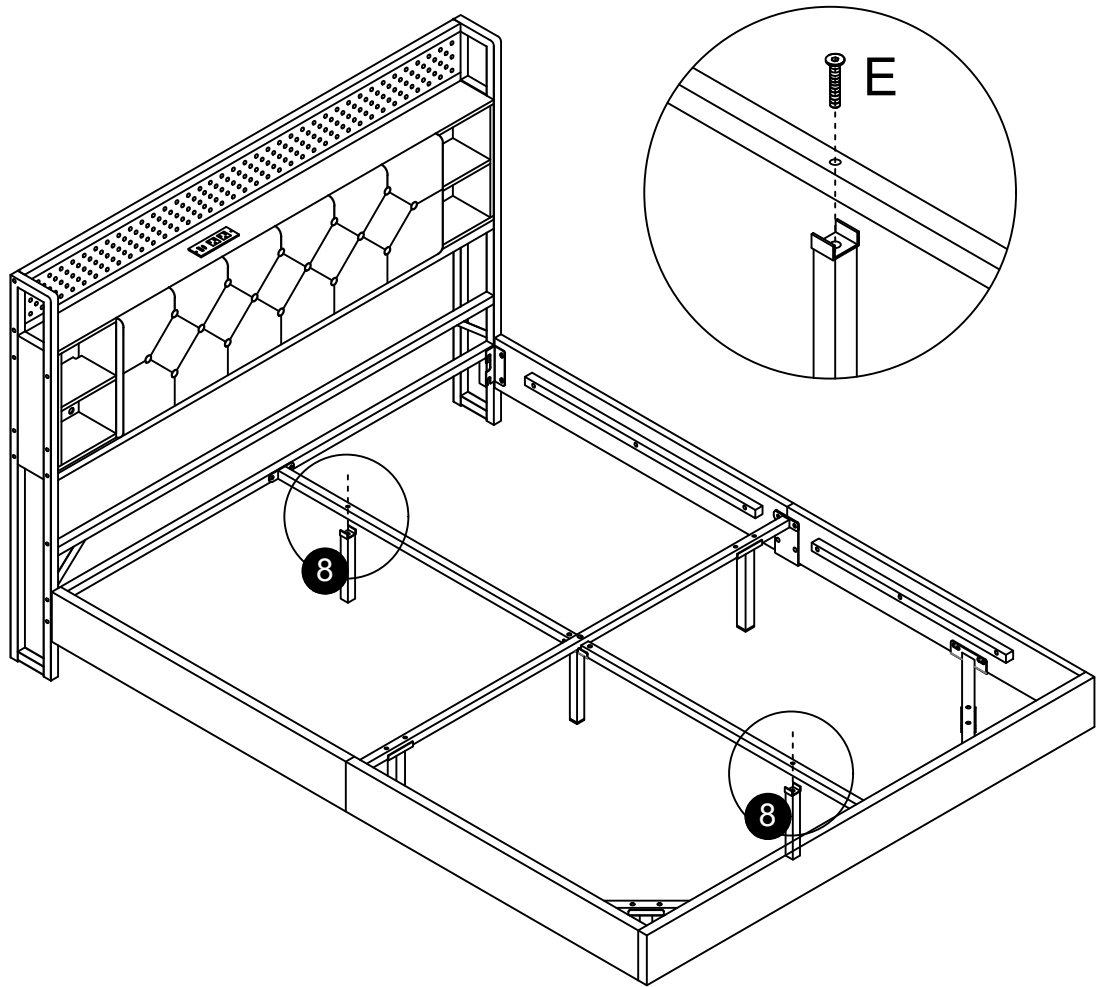


Assembly Instruction

28

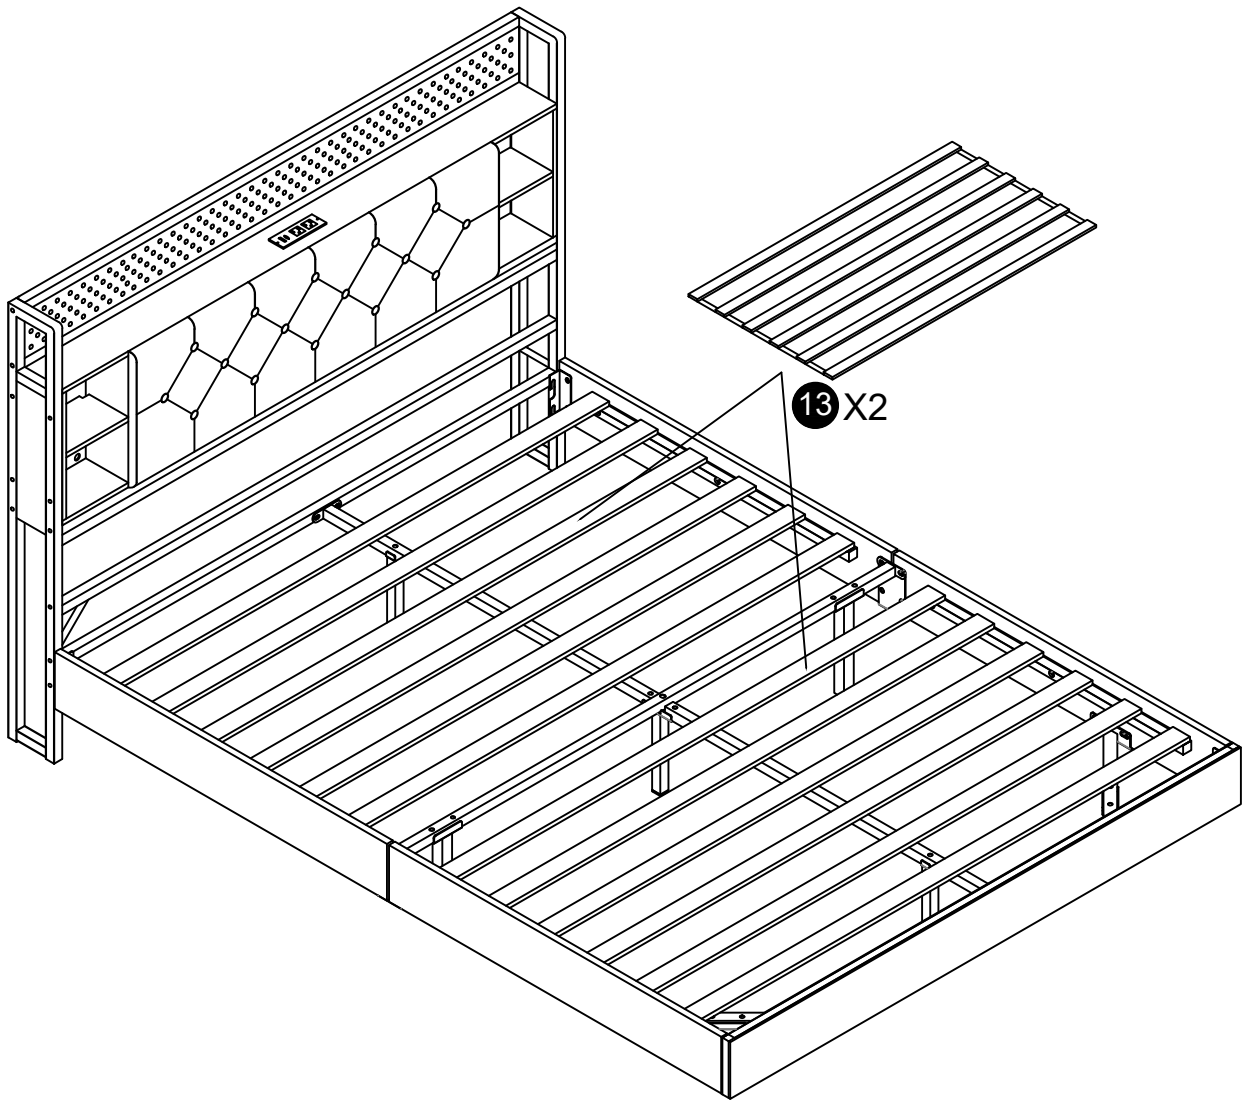


Assembly Instruction

29

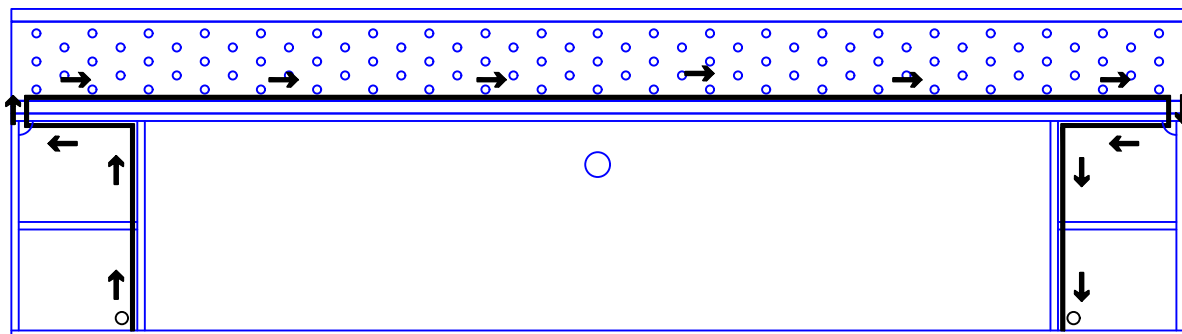

In order to better reflect the assembly process of LED light belt, this drawing adopts the exploded view of bed cabinet.


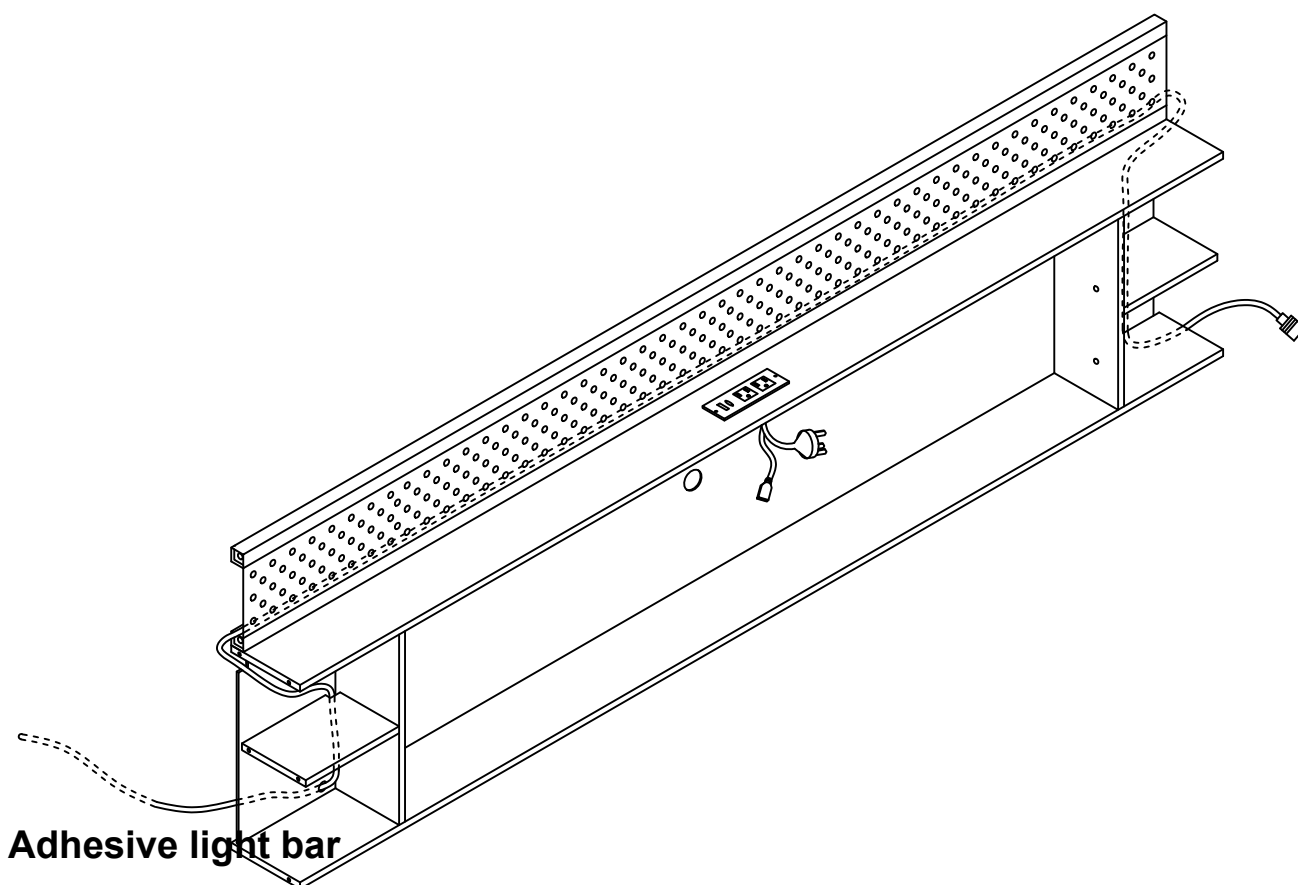


Please pass the light strip through the holes in sequence as shown in the diagram and exit from the holes in the rear panel.

Please note that the adhesive surface should be attached to the inner winding surface for optimal use.



Assembly Instruction

30

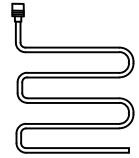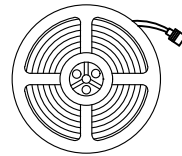

Pull out
Velcro light bar and unfold **Velcro light bar**


The unfolded light strip has a light strip surface on one side and a magic veneer on the other side

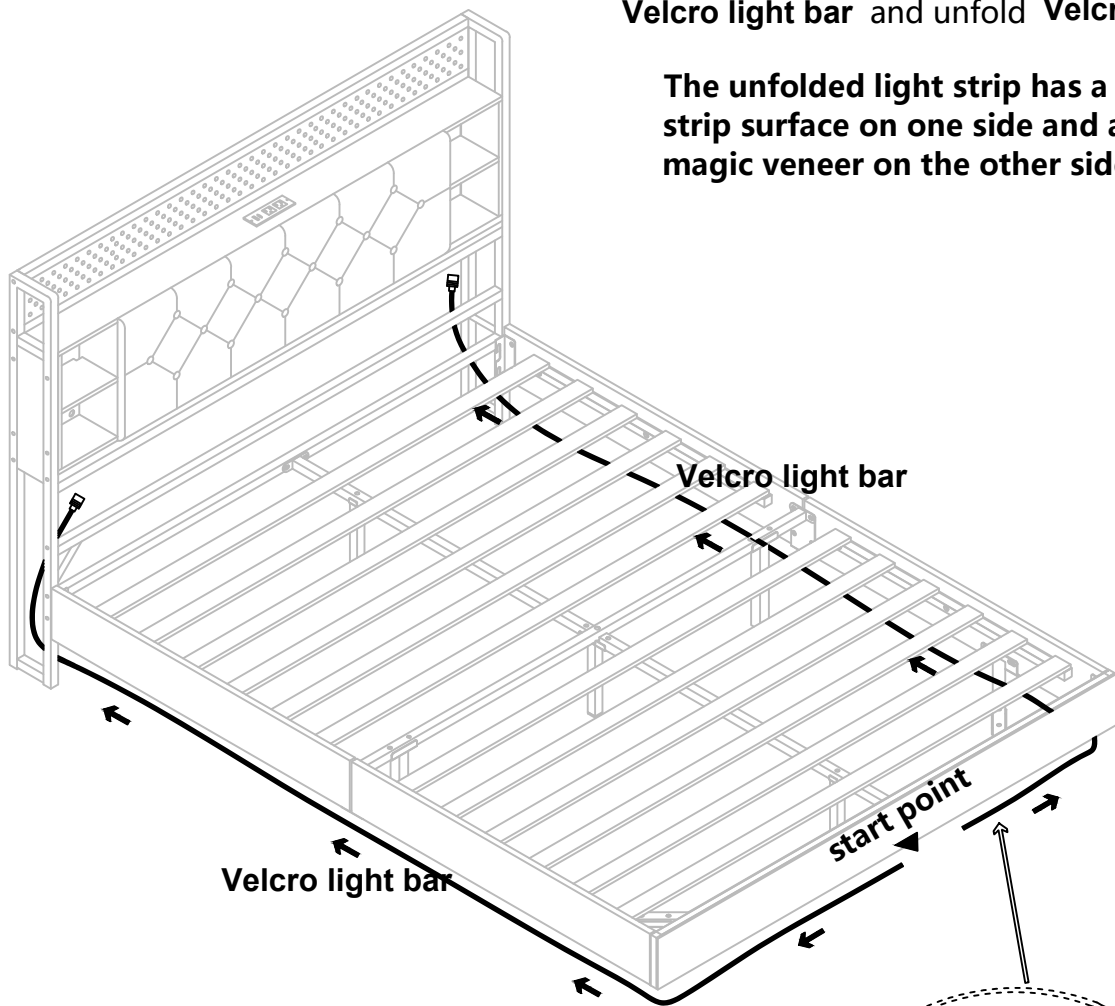

At the bottom
Stick the light strip on


Assembly Instruction

31




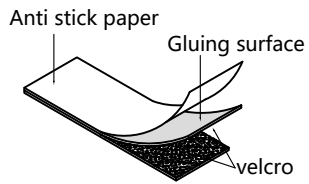


Strap magic tape

When the wires are disordered, tear off the anti stick paper, paste it on the place where the wires pass, and then bind the wires.

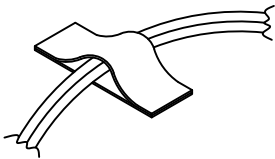

There is a USB bus under the socket, connect the USB plug of the power cord to it.

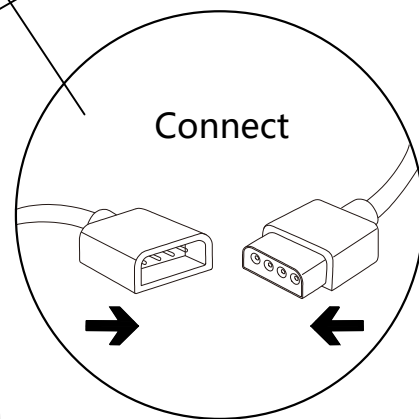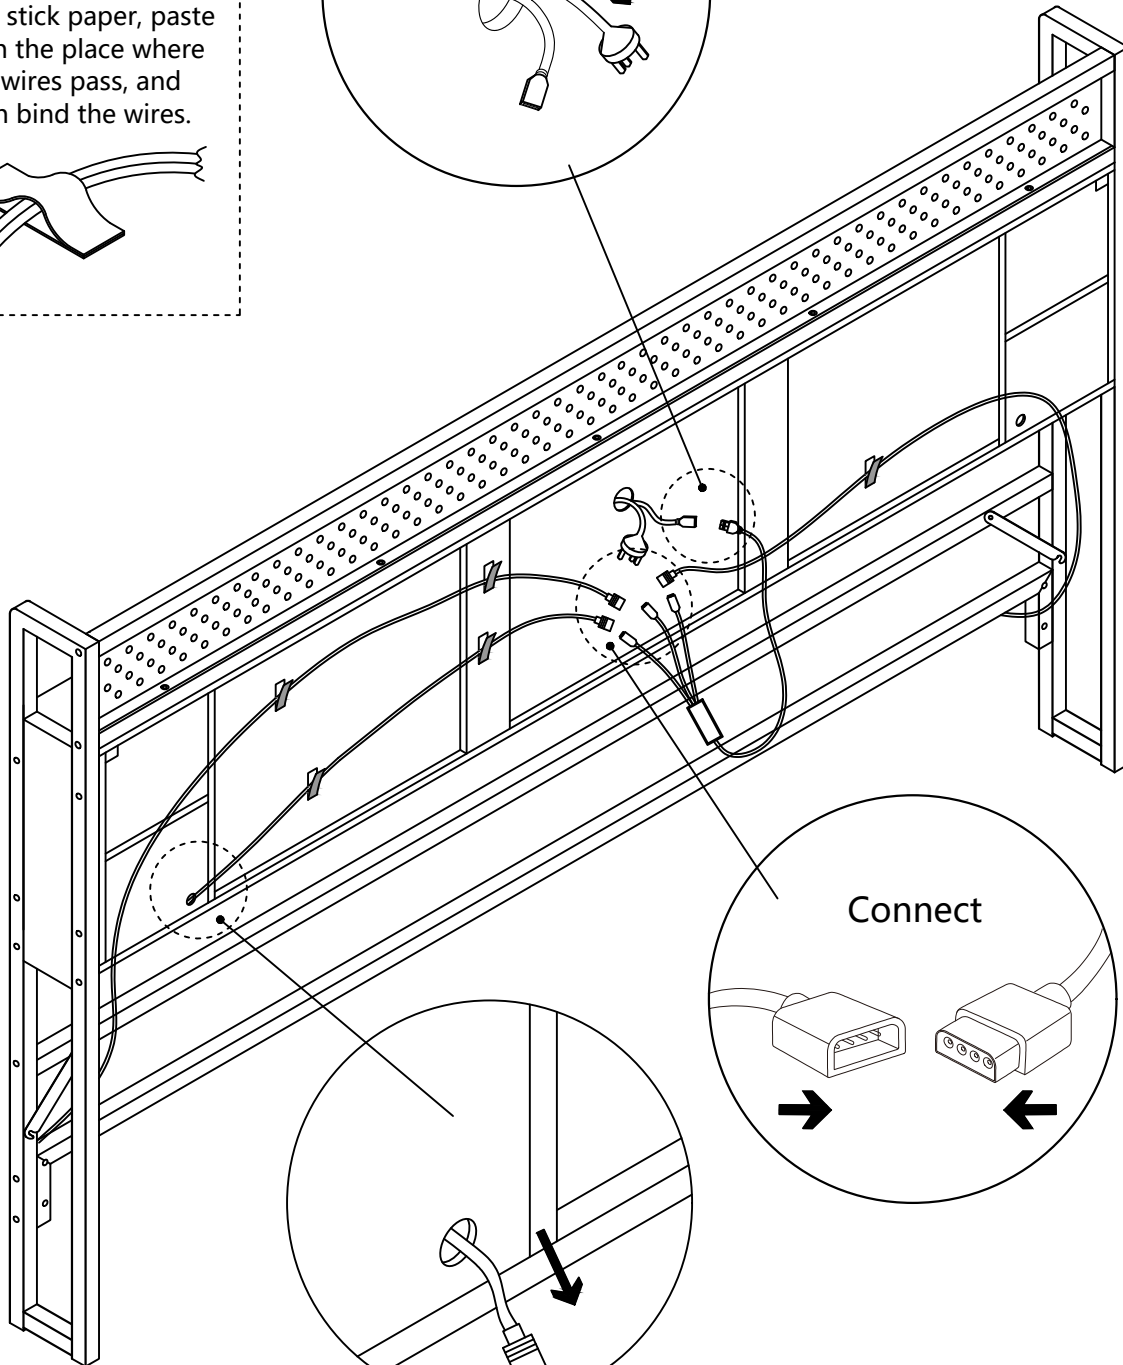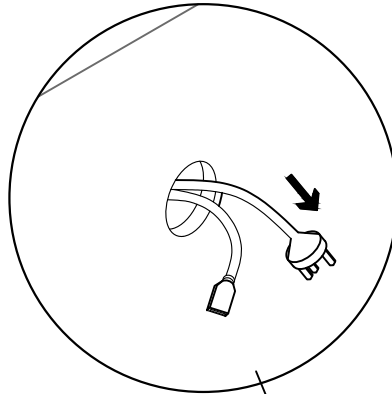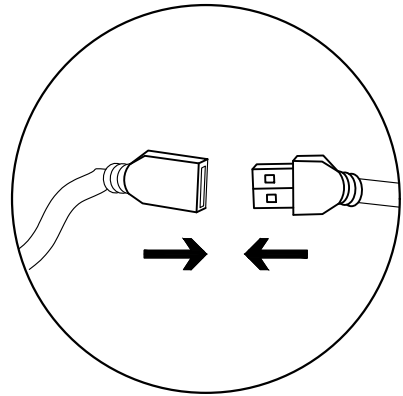

Just pull out the connector of the light strip from the back.