



### STANDARD BED ASSEMBLY INSTRUCTIONS

Video Tutorial available at [www.DavidFrancisFurniture.com/pages/bed-assembly-instructions](http://www.DavidFrancisFurniture.com/pages/bed-assembly-instructions)

**BED PARTS**

- One (1) foot rail  
One (1) headboard rail
- Two (2) side rails
- Five (5) slats
- Slat support legs  
(Twin bed doesn't require)

**OPTIONAL  
DAVID FRANCIS  
HEADBOARD**

**BED  
HARDWARE**


- Countersunk head screws
- Sixteen (16) pan-head screws

**HEADBOARD  
HARDWARE**


- Four (4) hex bolts
- Four (4) wing nuts
- Four (4) washers

**TOOLS  
NEEDED**


- Power drill
- Phillips drill bit

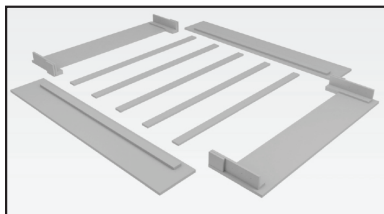


**Step 1.** Lay out foot rail, headboard rail, and side rails matching each corner with the corresponding numbers.

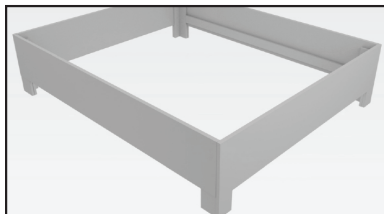


**Step 2.** Erect foot rail and headboard rail and mount side rails matching the corresponding numbers on each piece.

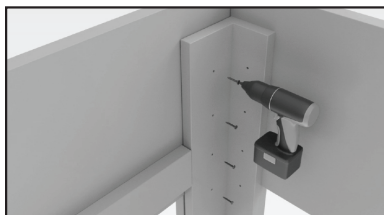


**Step 3.** Make sure you have perfectly square corners. Using a power drill, fasten four (4) pan-head screws into each connecting corner (4 pan-head screws per corner). Repeat for each corner until bed frame is fully secured.

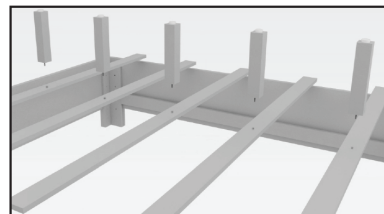


**Step 4.** Screw one (1) support leg on each slat, on the opposite side of the tee-nut. Place slats, spaced evenly, on the side rails. Using a power drill, fasten one (1) countersunk screw at each end of slats.  
(Twin bed doesn't require)

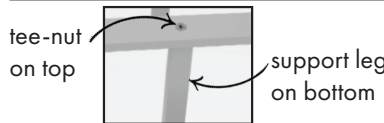

**IF YOU PURCHASED A DAVID FRANCIS HEADBOARD, PLEASE CONTINUE ONTO STEP 5.**

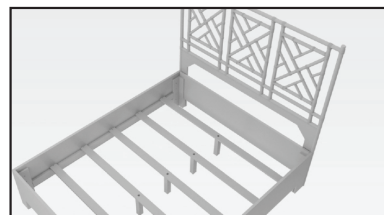


**Step 5.** Position the headboard against headboard rail. The David Francis nameplate should face the wall.

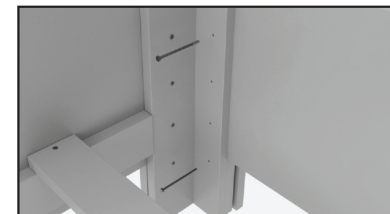

**Step 6.** Insert two (2) hex bolts through pre-drilled headboard rail from the inside of the headboard rail to the outside of the back of the headboard.



**Step 7.** Place one (1) washer per bolt, at the back of the headboard, secure with one (1) wingnut.

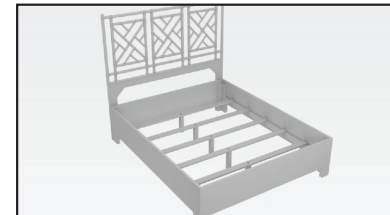

**Step 8.** Ensure all screws and wingnuts are secure.