


Pantry Cabinet

Assembly Instructions - Please keep for future reference

SKU: N715P422569/N715P422570

 WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

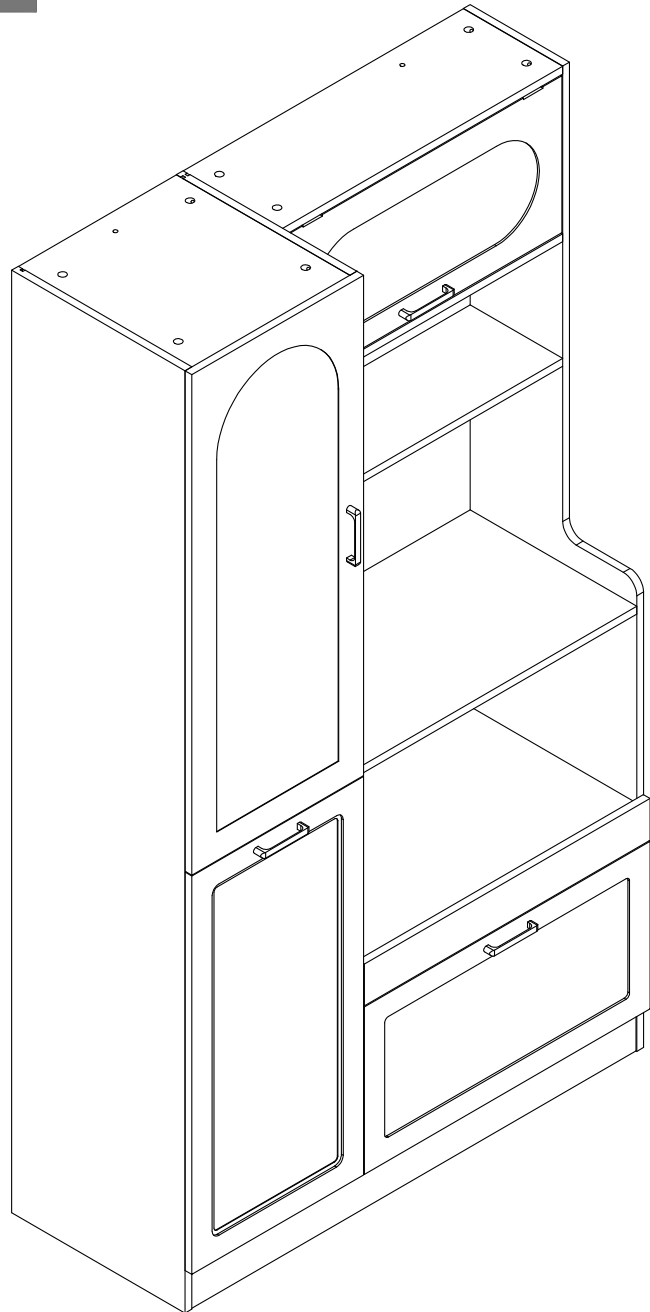

Dimensions

Width-39.64inch

Depth-14.40inch

Height-70.64inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 3 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions












To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

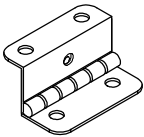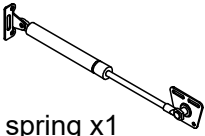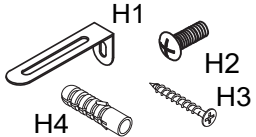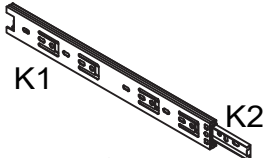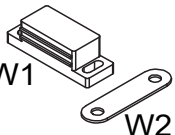(A)  Cam Bolt x 73+3	(B)  9.5mm Cam lock x 73+3	(C)  6x40mm Dowel x 34+2	(D)  3x12mm Screw x 80+3
(E)  7x50mm Screw x 2	(F)  Cabinet hinge x2	(G)  Gas spring x1	(H)  Anti-tipping device X 2
(I)  3.5x35mm Screw x 21+2	(K)  x8	(L)  Plastic buckle x 8	(M)  3*16mm Screw x 8+1
(N)  Concealed hinge x2	(O)  Hold hands x4	(P)  Movable partition bracket x 8	(Q)  Allen Wrench x 1
(R)  Screwdriver x 1	(W)  Magnetic door catch x1		

Tools required Not Included




Phillips screwdriver
(medium & large)

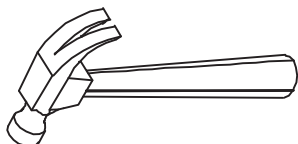

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

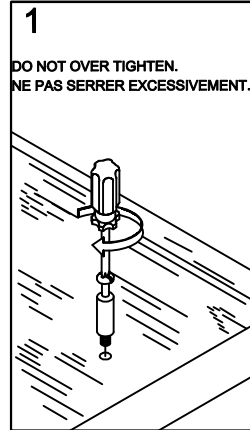

Step 2


Push the male camlock into the entry hole.

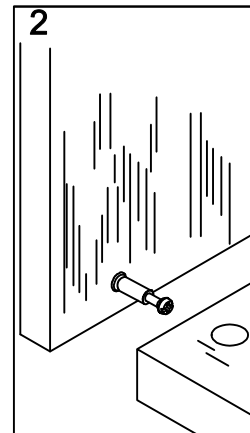

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

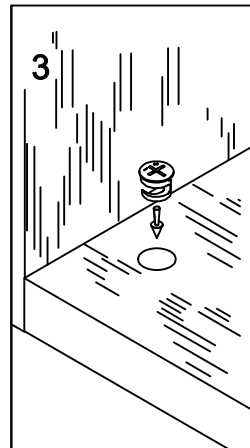


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

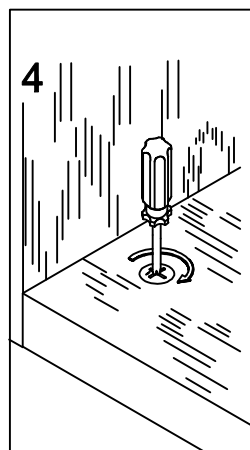


SLIDE RAIL

Please split component "Minto "M1" and "K-2" before assembling the slide and then proceed to the next step of assembly

Step 1















Pull apart component "M to each side, and then gently push up the lever of component "M2"

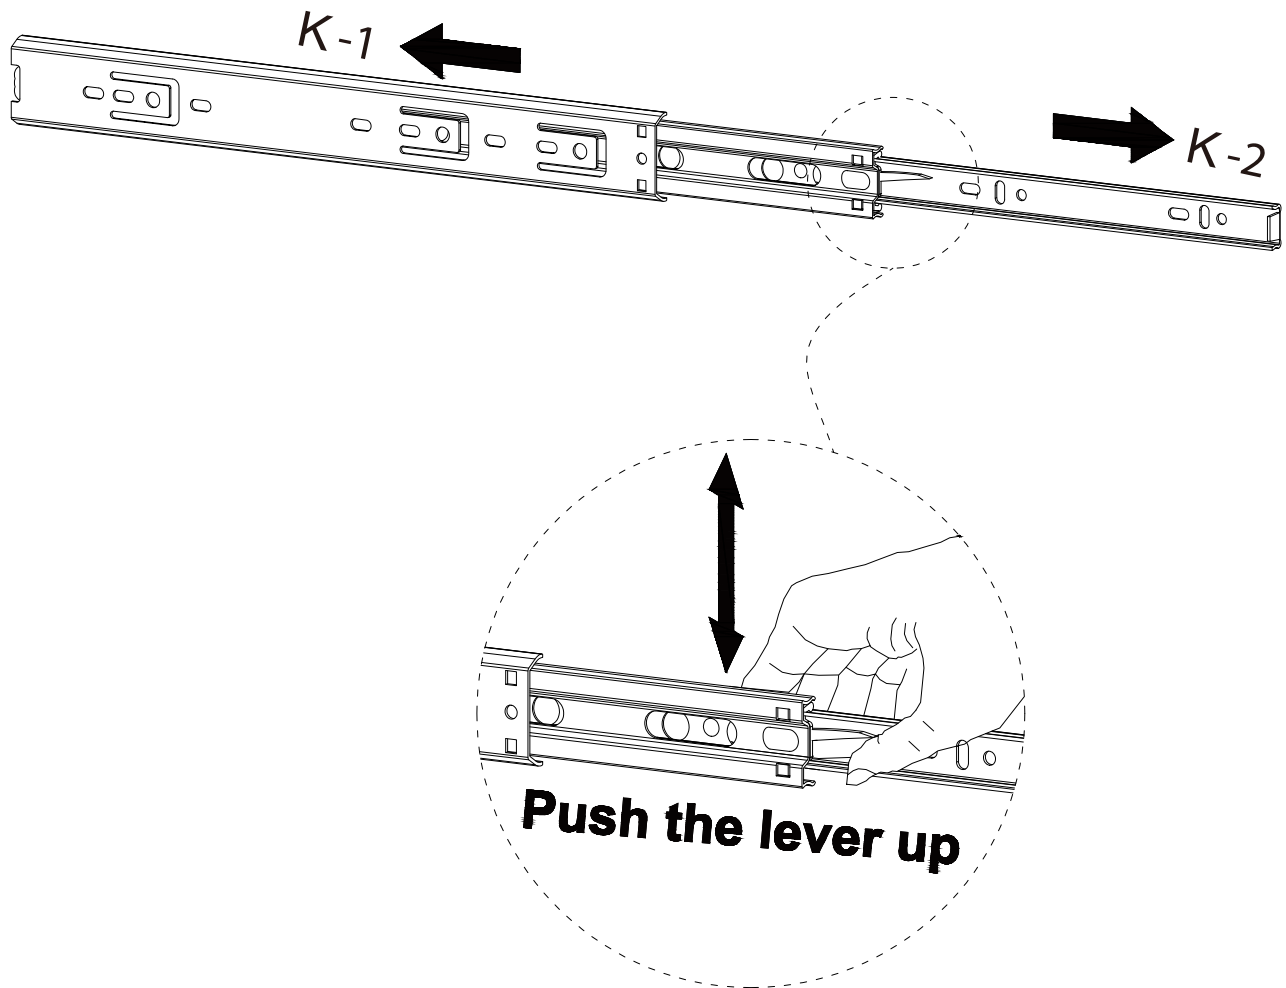






Components - Parts

Please check you have all the panels listed below.

BOX A - N715P422569

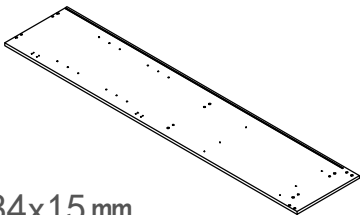
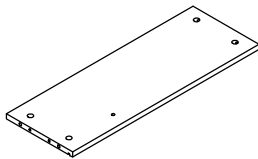
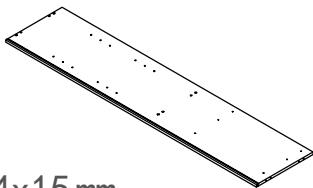
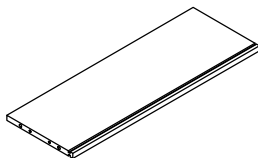
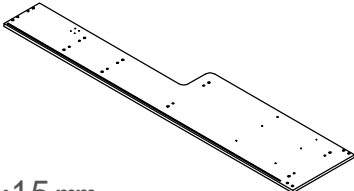
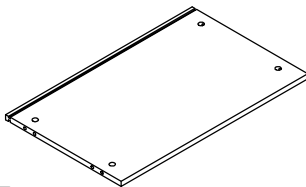
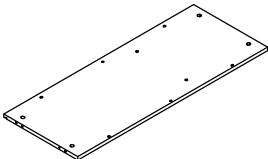
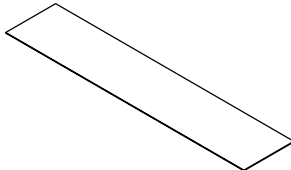
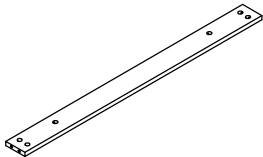
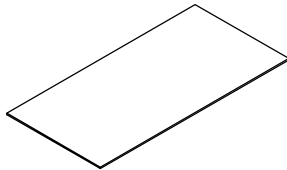
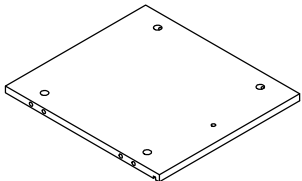
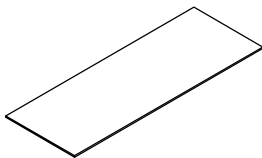
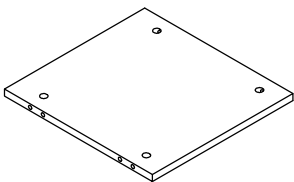
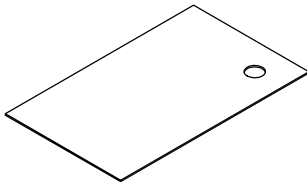
①  1800x384x15 mm 1PC	⑧  620x220x15mm 1PC
②  1800x384x15 mm 1PC	⑨  620x220x15mm 2PCS
③  1800x384x15 mm 1PC	⑩  620x384x15mm 1PC
④  985x384x15mm 1PC	⑪  1696x356x4mm 1PC
⑤  985x80x15mm 2PCS	⑫  626x311x4mm 1PC
⑥  350x384x15mm 1PC	⑬  626x229x4mm 1PC
⑦  350x369x15mm 1PC	⑭  626x383x4mm 2PCS

Components - Parts

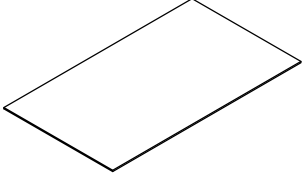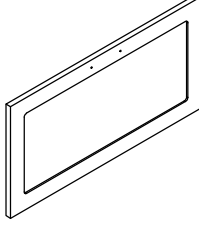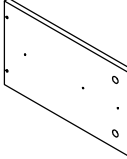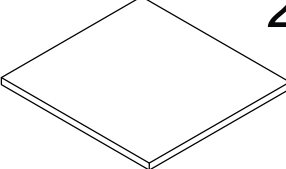
⑮  626x361x4mm	1PC	⑳  632x320x15 mm	1PC
⑯  761x380x16mm	1PC	㉓  340x200x12mm	1PC
㉒  346x346x12mm	2PCS		

Components - Parts



BOX B - N715P422570

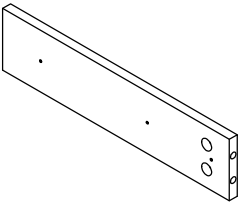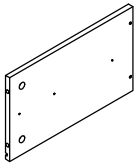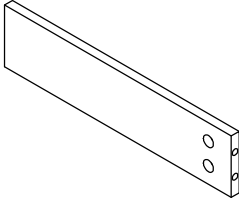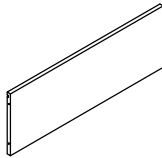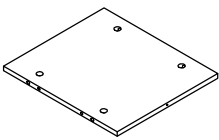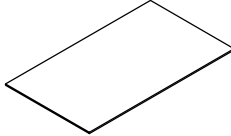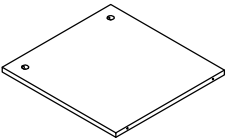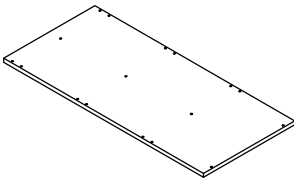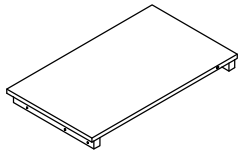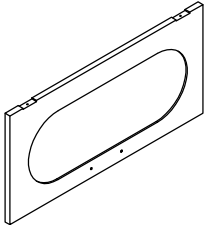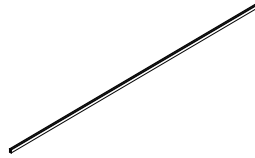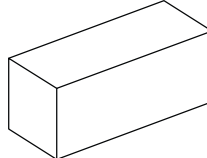①⑦  340x80x12mm	4PCS	②④  340x200x12mm	1PC
①⑧  340x80x12mm	2PCS	②⑤  571x200x12mm	1PC
①⑨  340x301x12mm	3PCS	②⑥  578x334x4mm	1PC
②⑩  340x325x12mm	1PC	②⑦  632x80x15mm	1PC
②⑪  711x325x12mm	1PC	②⑧  614x366x15mm	1PC
②⑨  615x300x15mm	1PC	③①  610x10x4mm	1PC
③⑩  956x380x15mm	1PC	Hardware kid 	1PC





Assembly Instructions

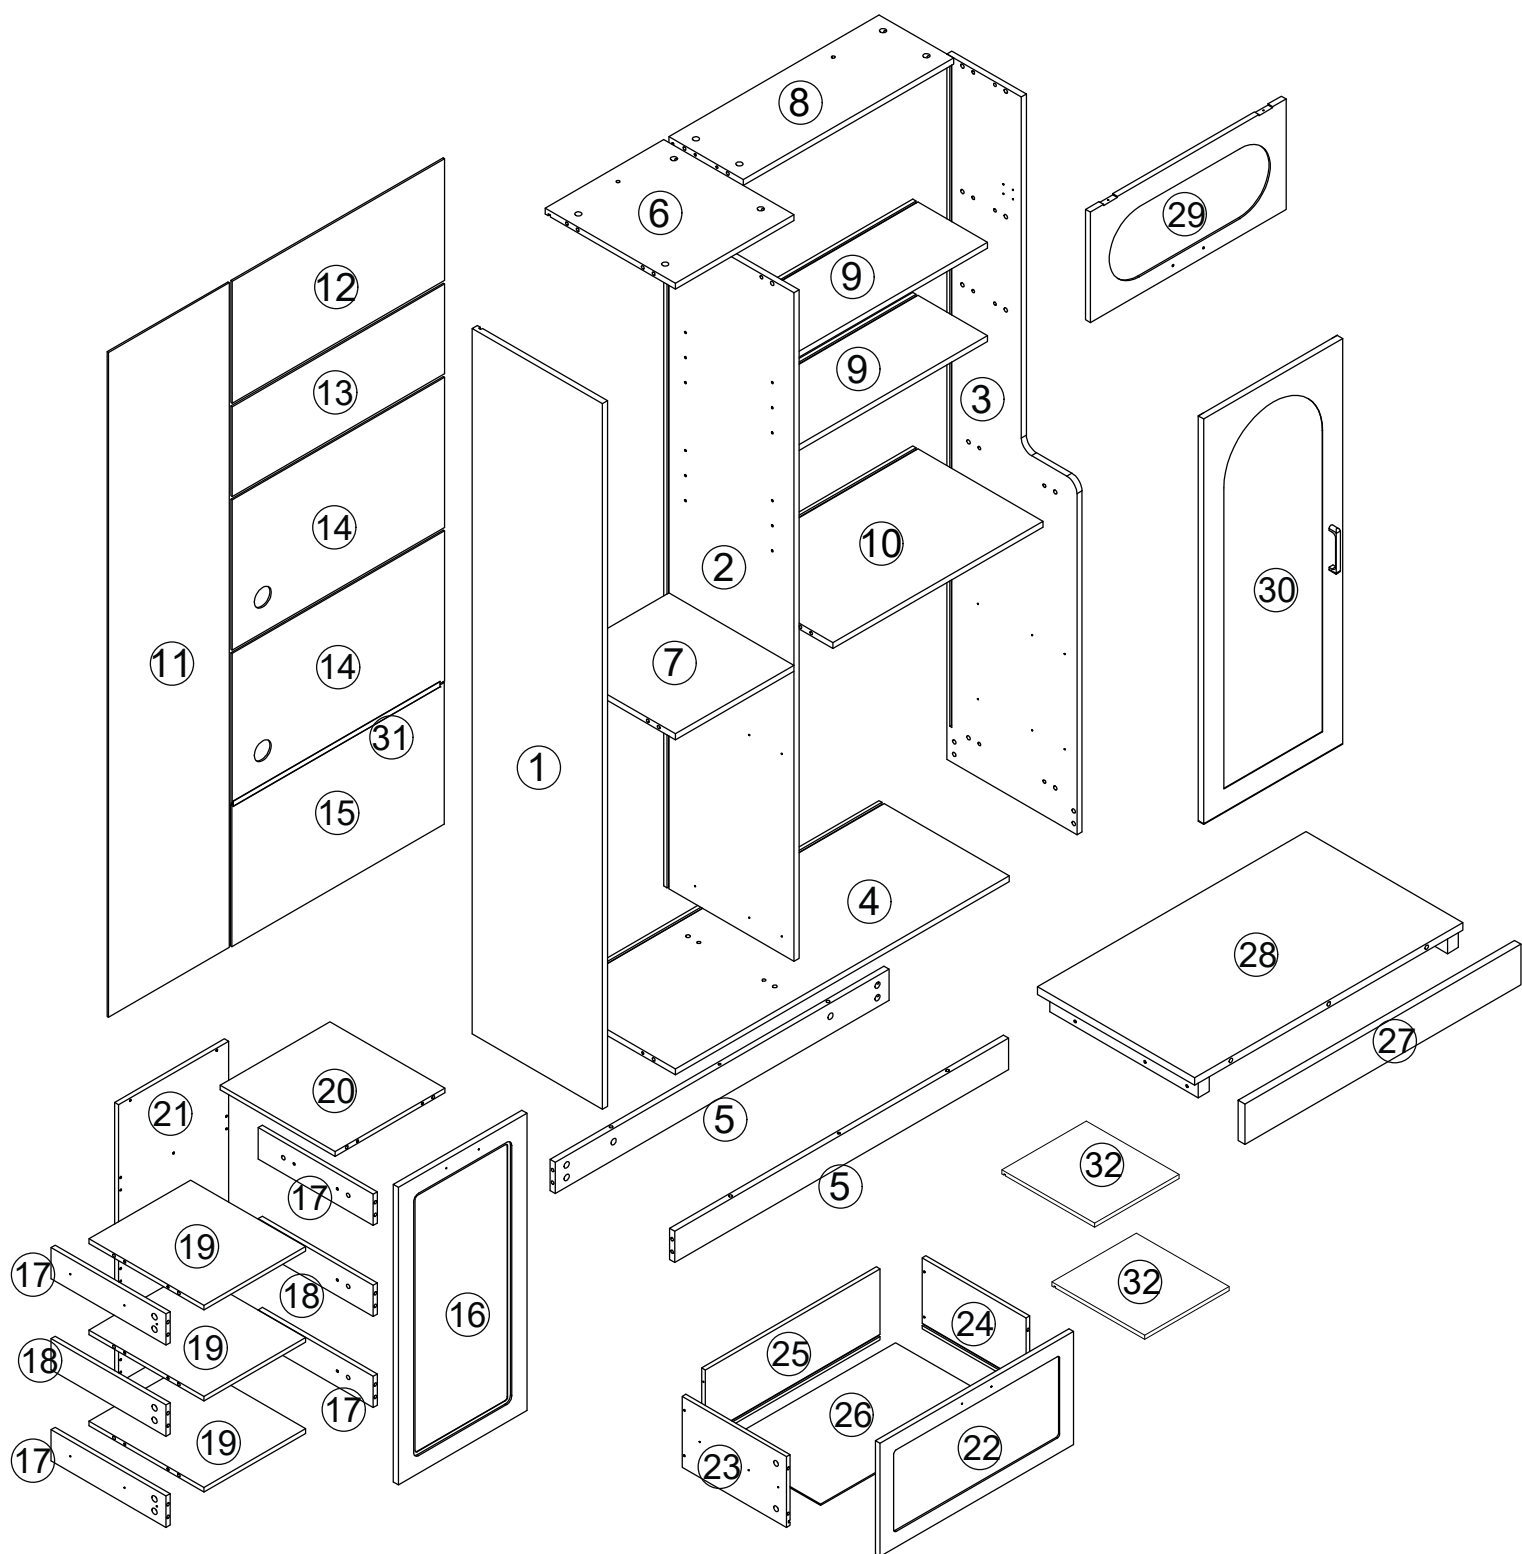


STEP 1

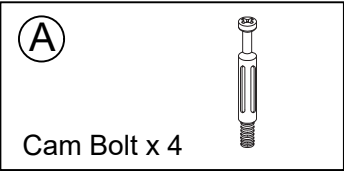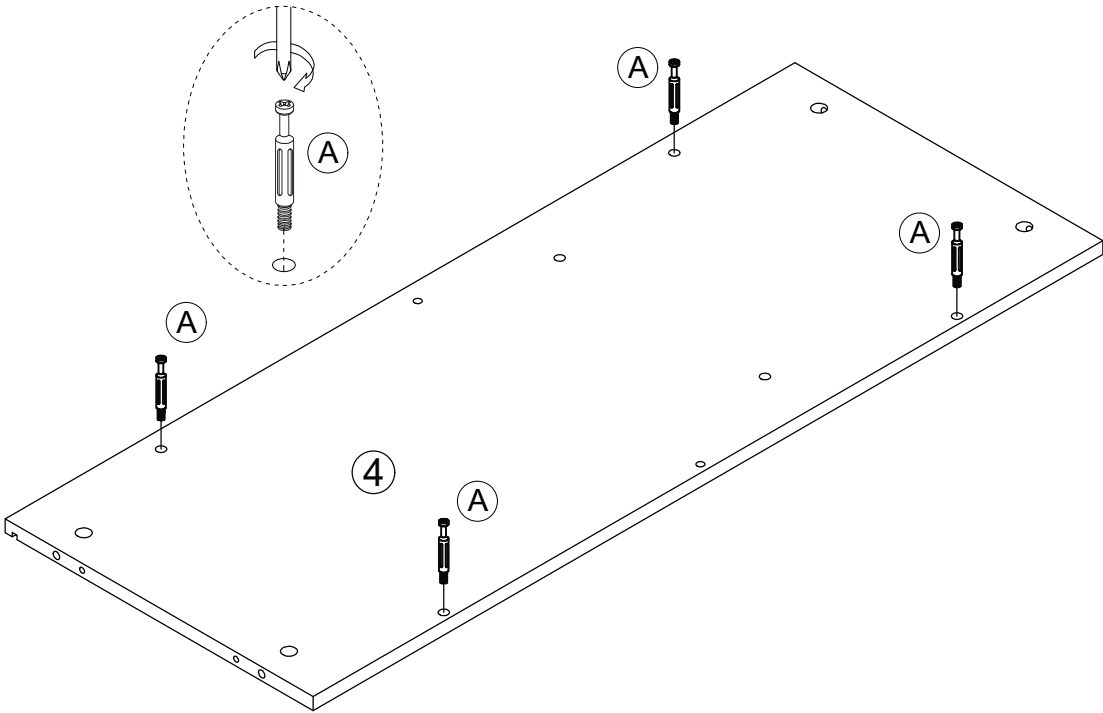

STEP 2

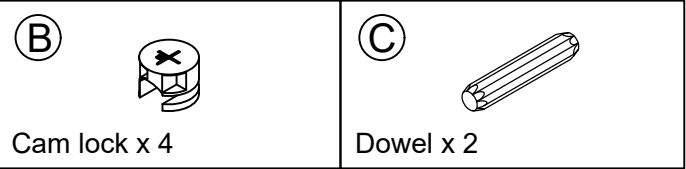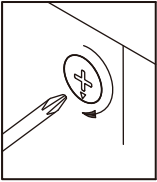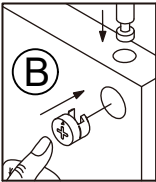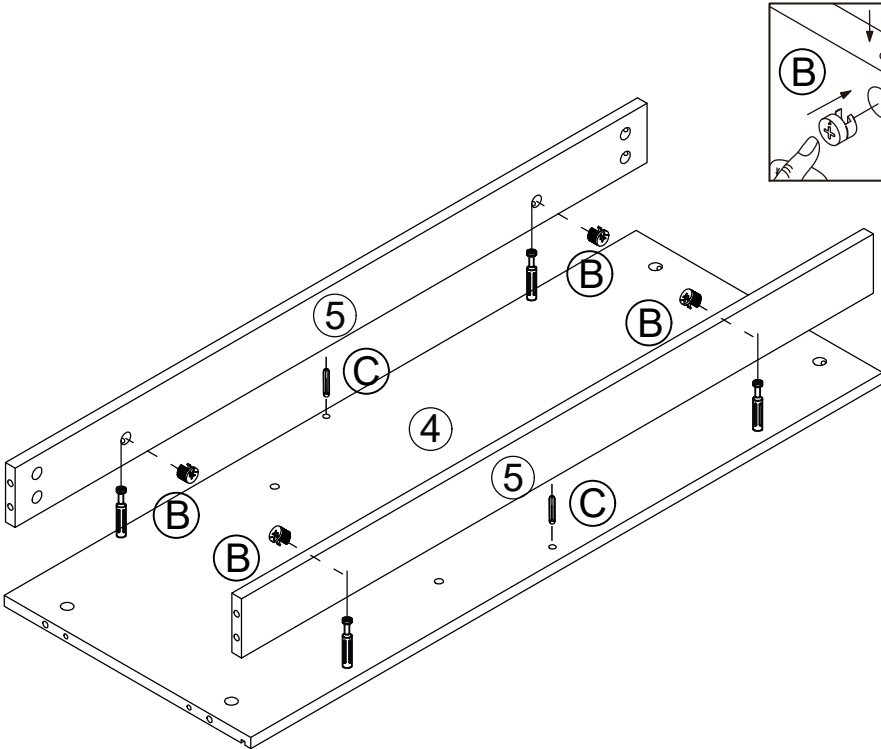


STEP 3

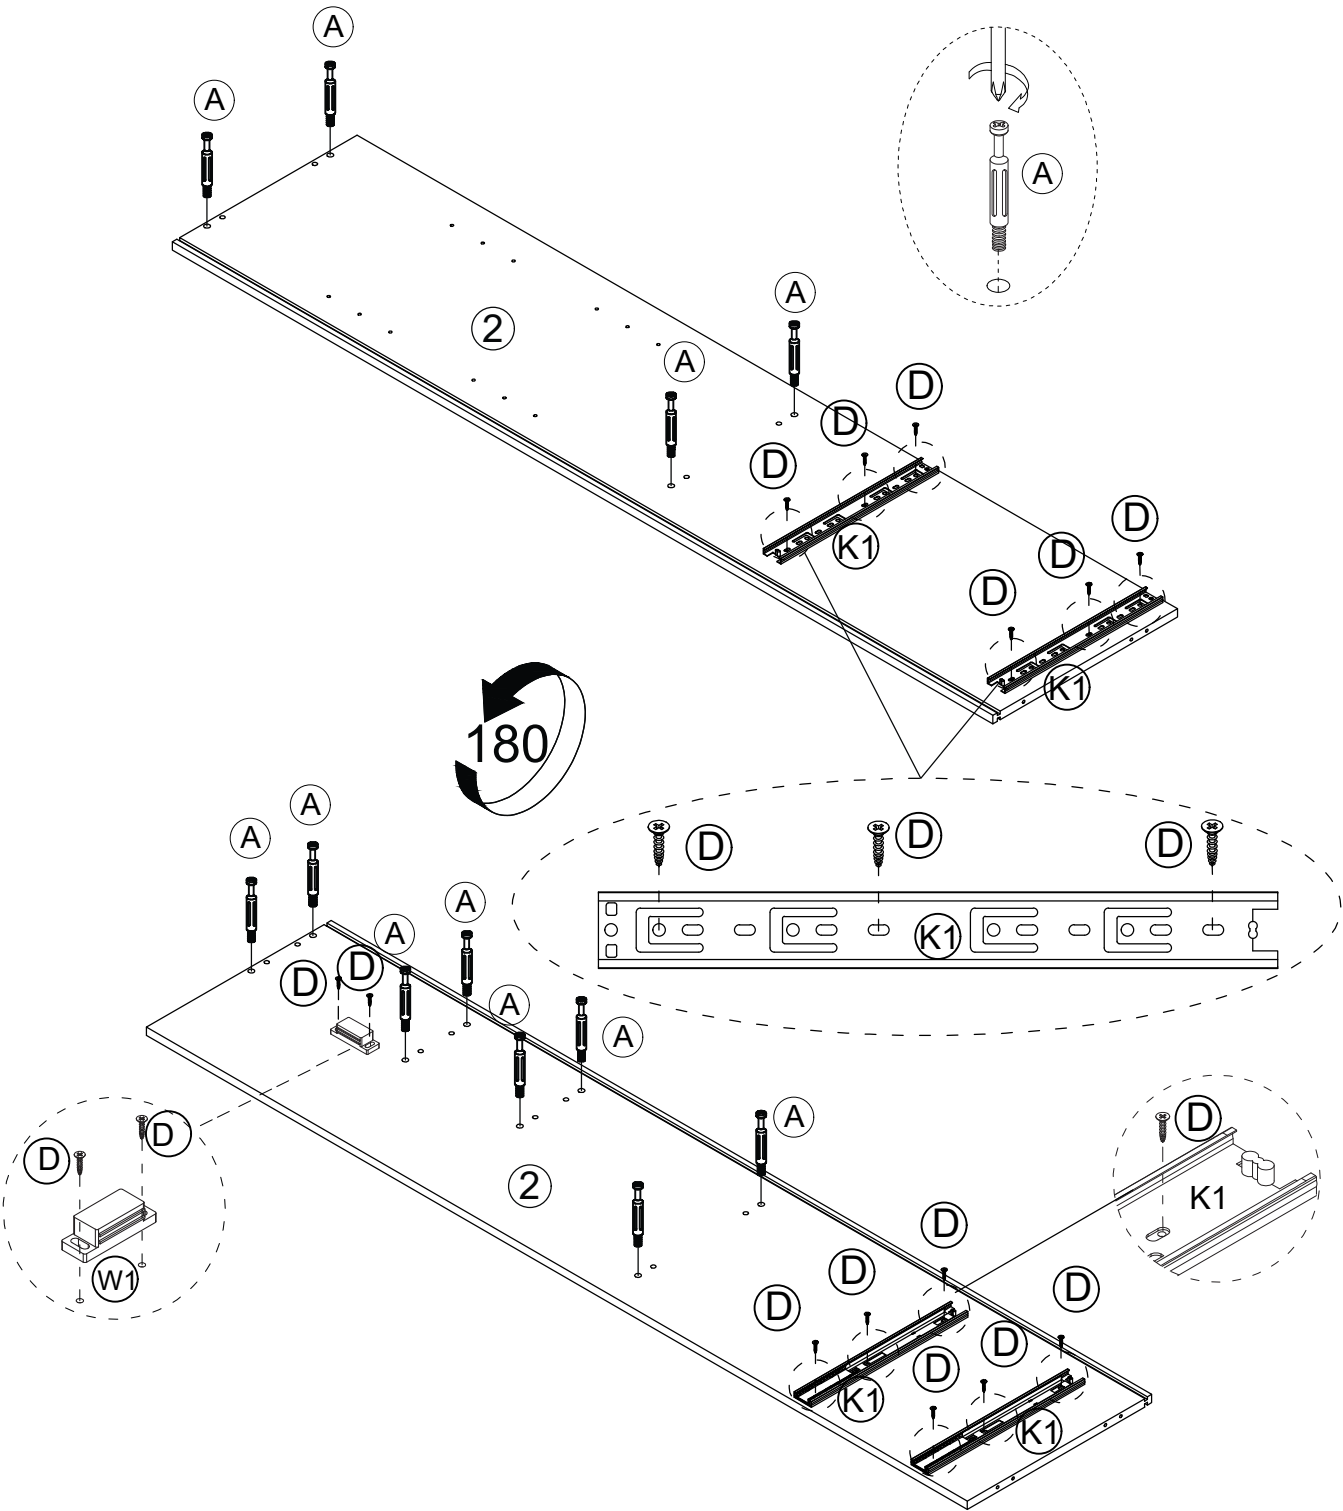


 (A)	 (D)	 (K1)	 (W)
Cam Bolt x 12	3*12mm Screw x 14	x4	Magnetic door catch x1

STEP 4

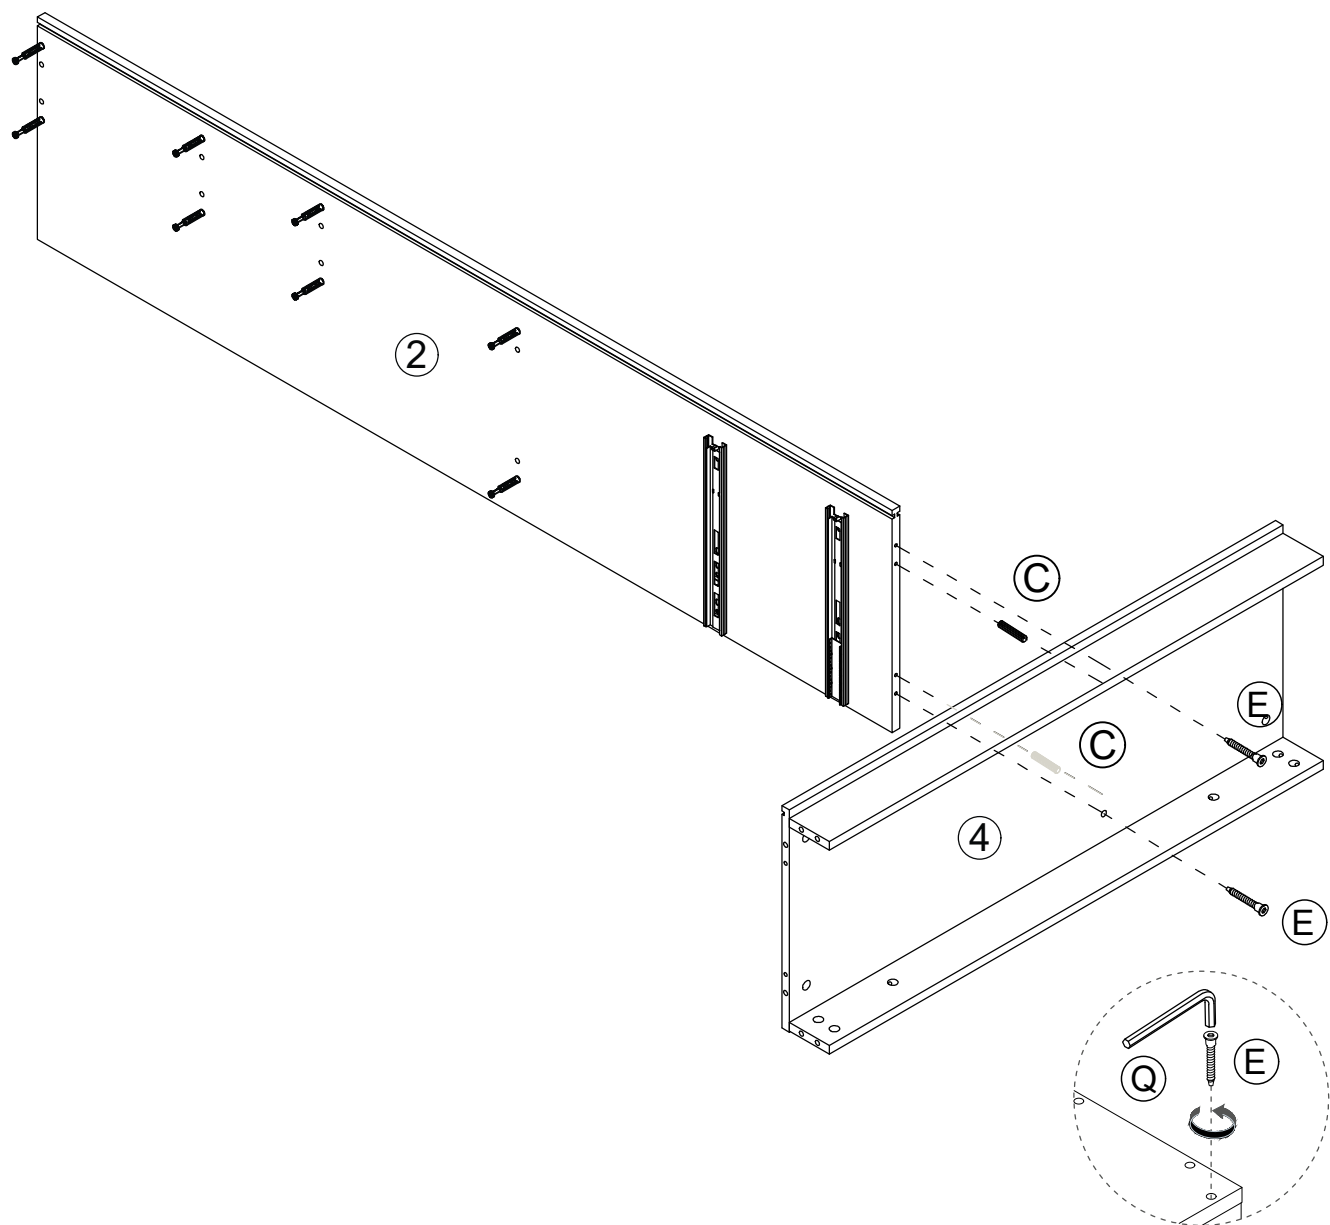

Ⓒ




Dowel x 2

Ⓔ




7*50mm Screw x 2


STEP 5

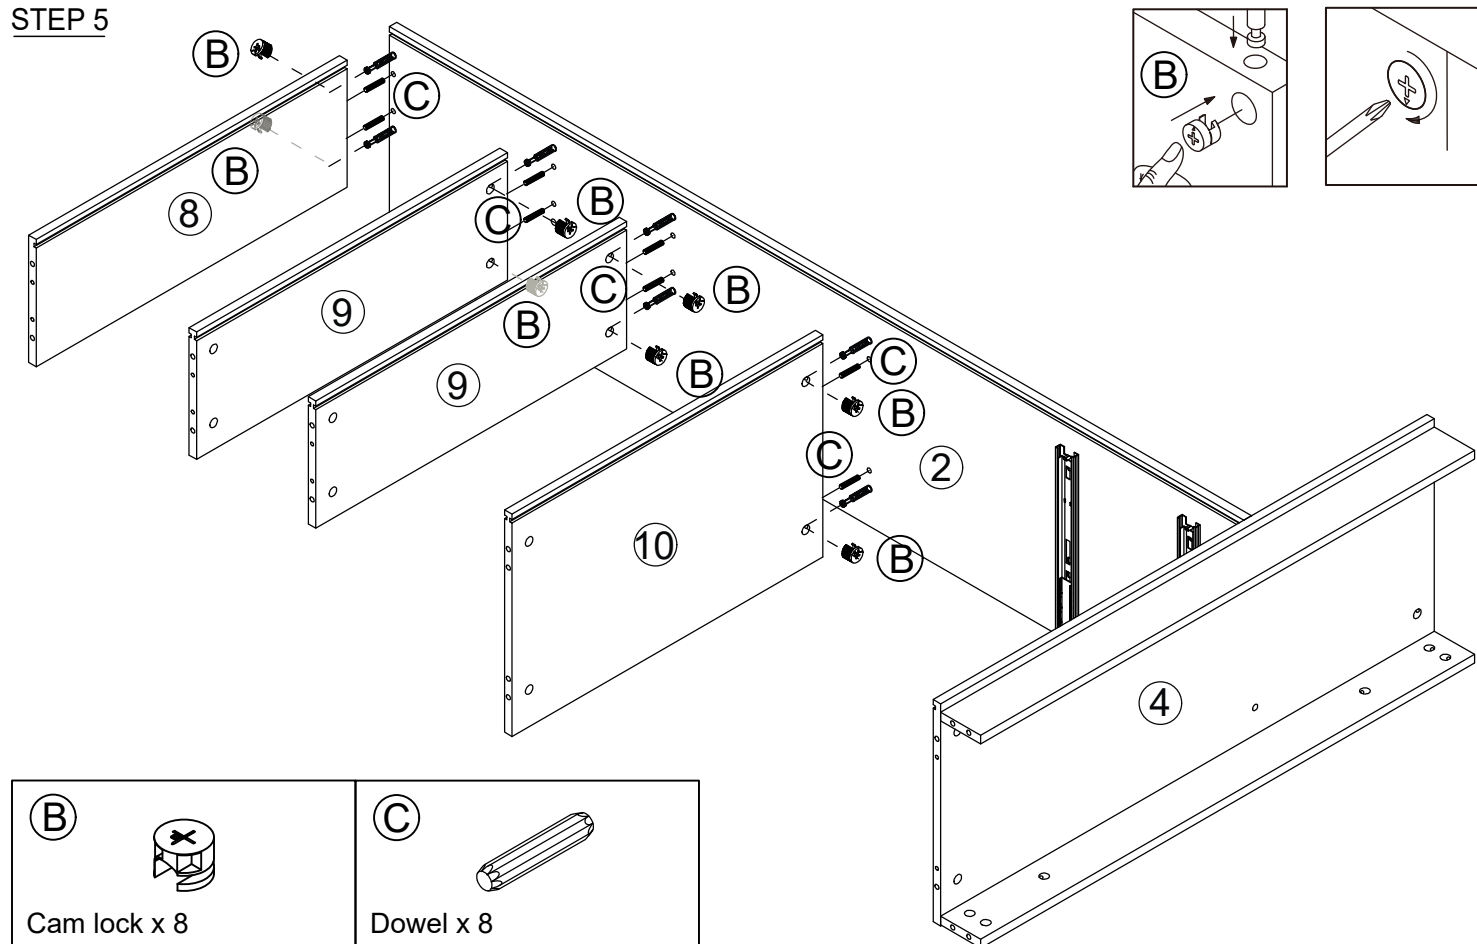


STEP 6

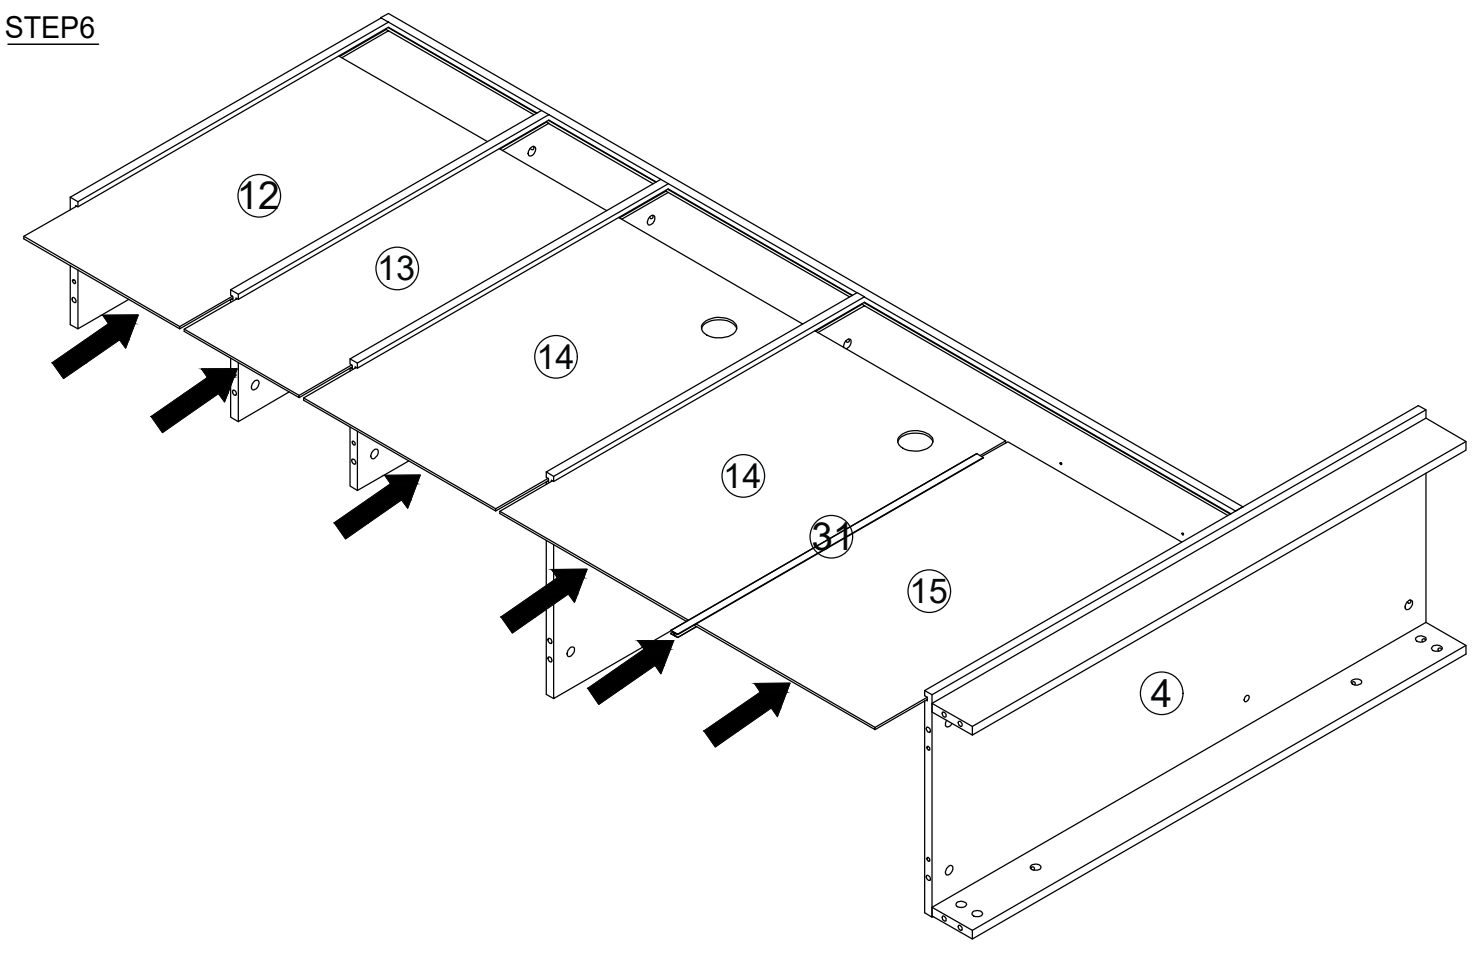


STEP 7

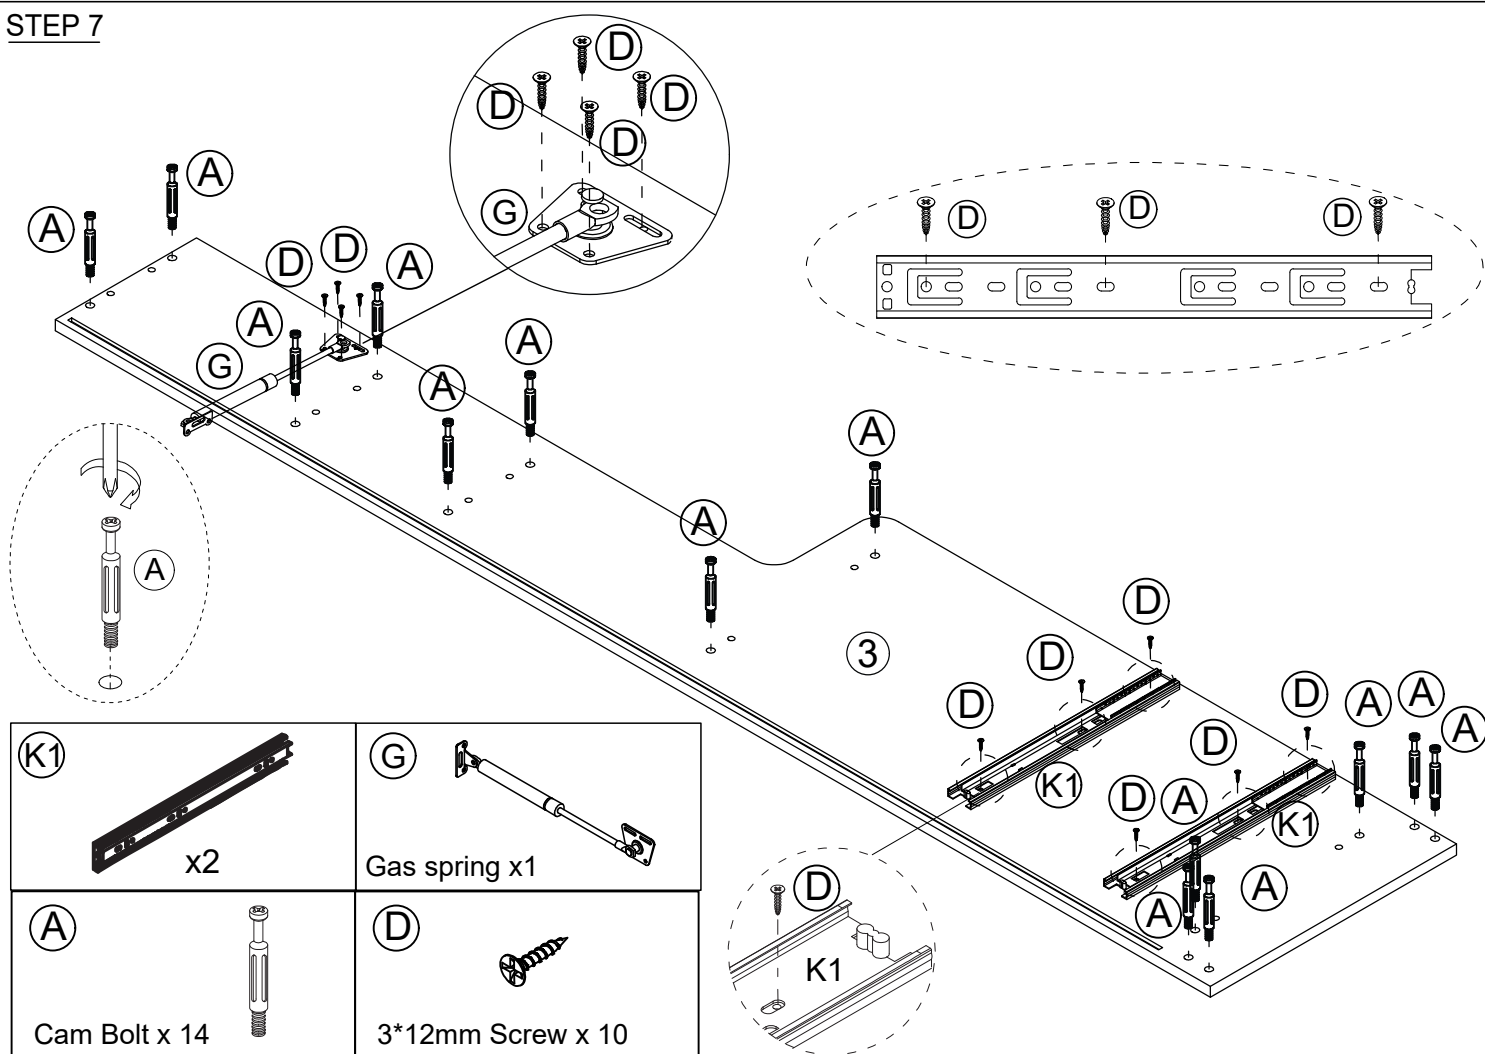


STEP 8

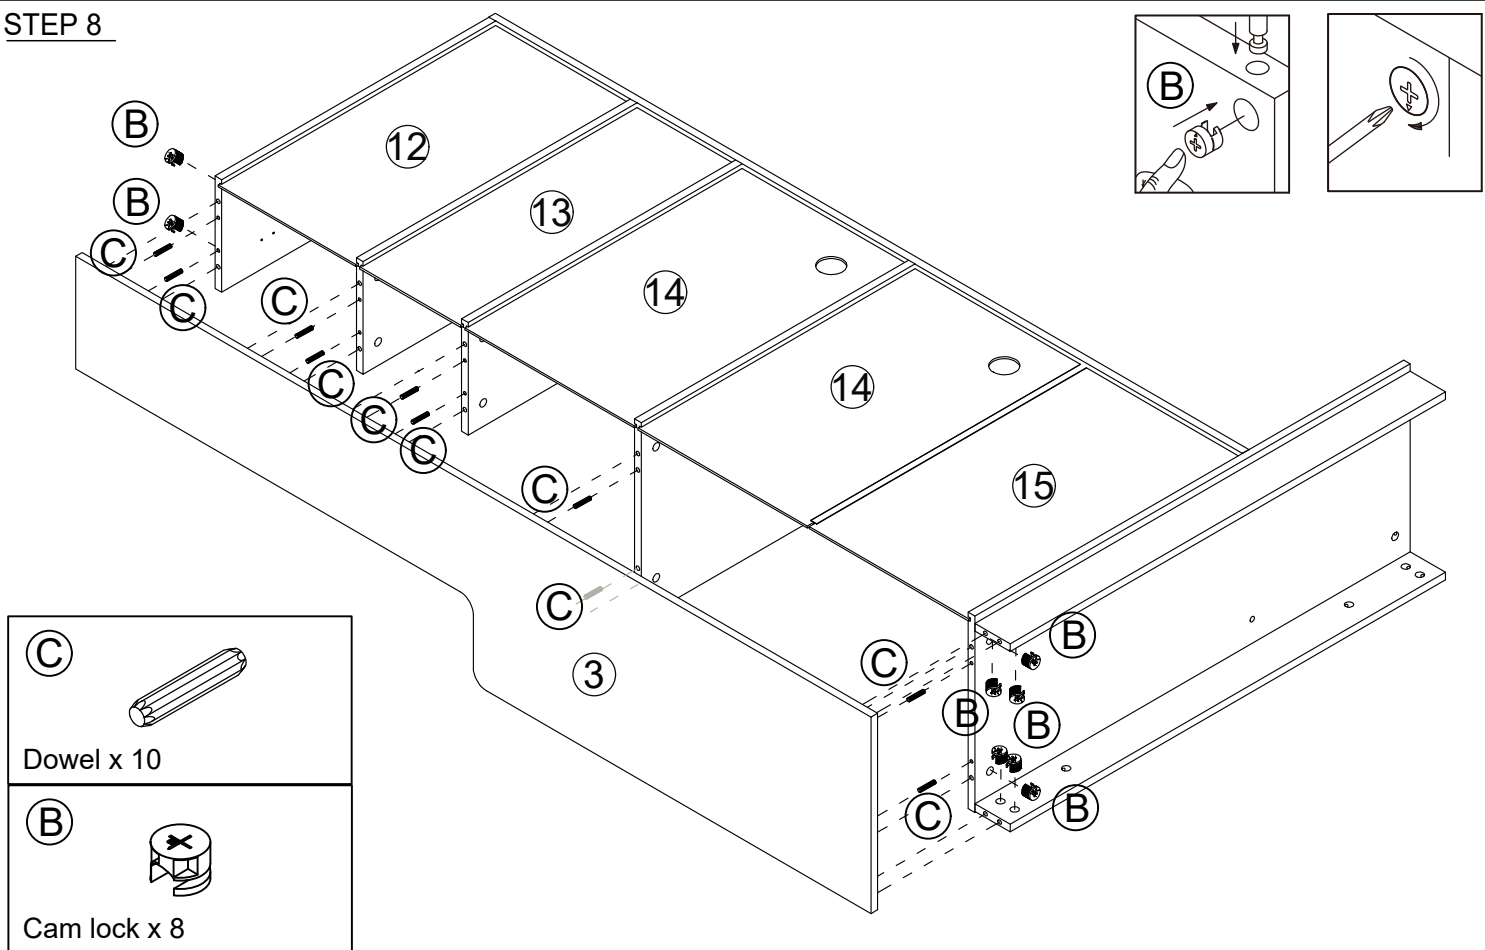


STEP 9

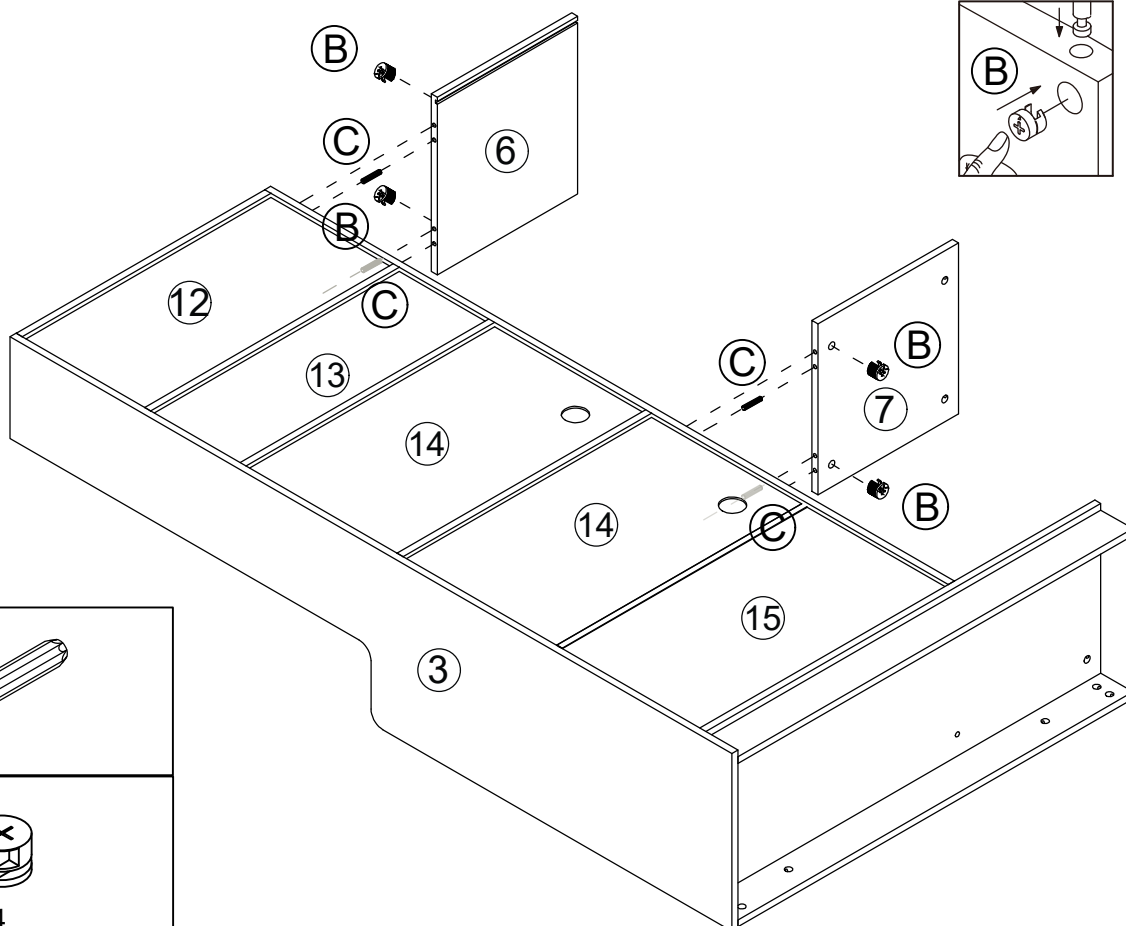


STEP 10

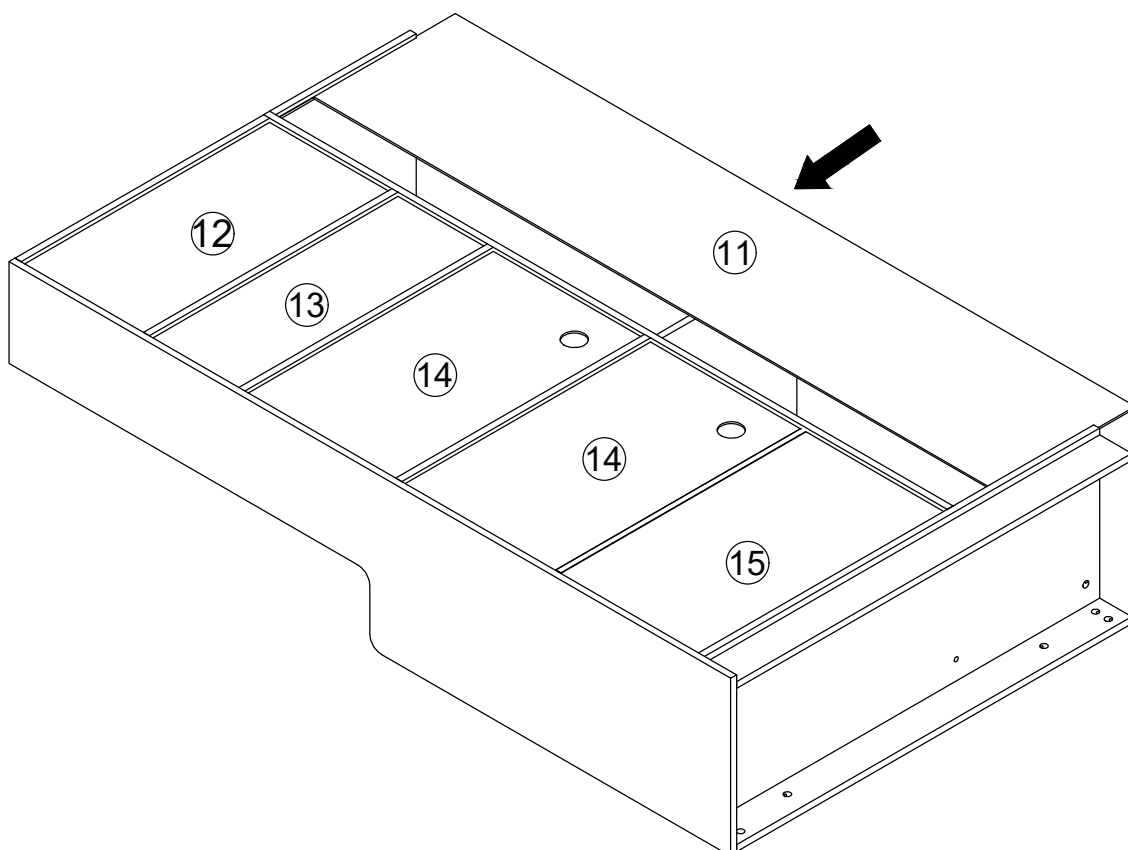




STEP 11

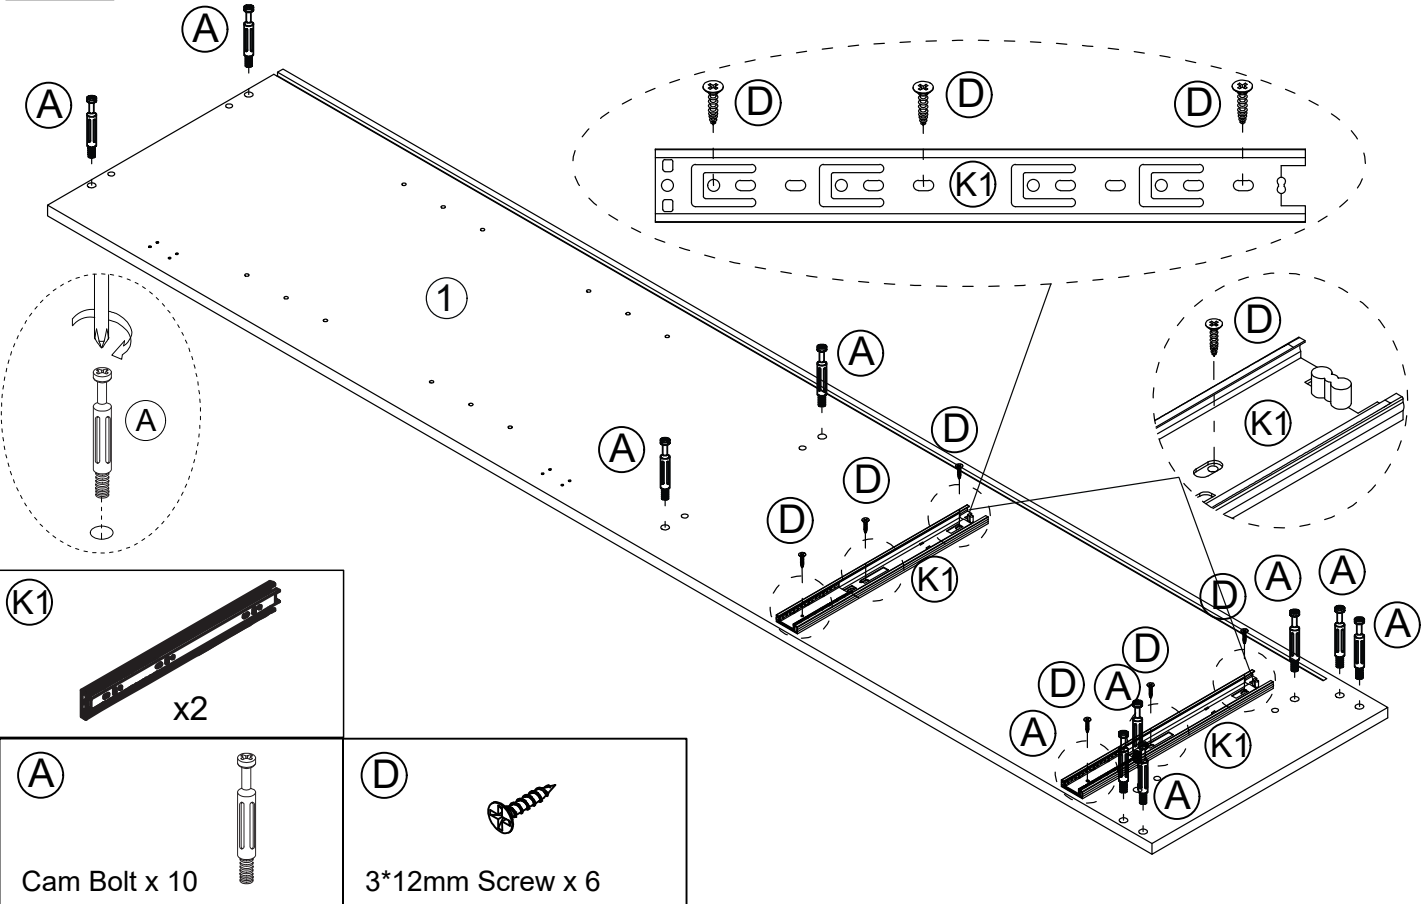

STEP 12

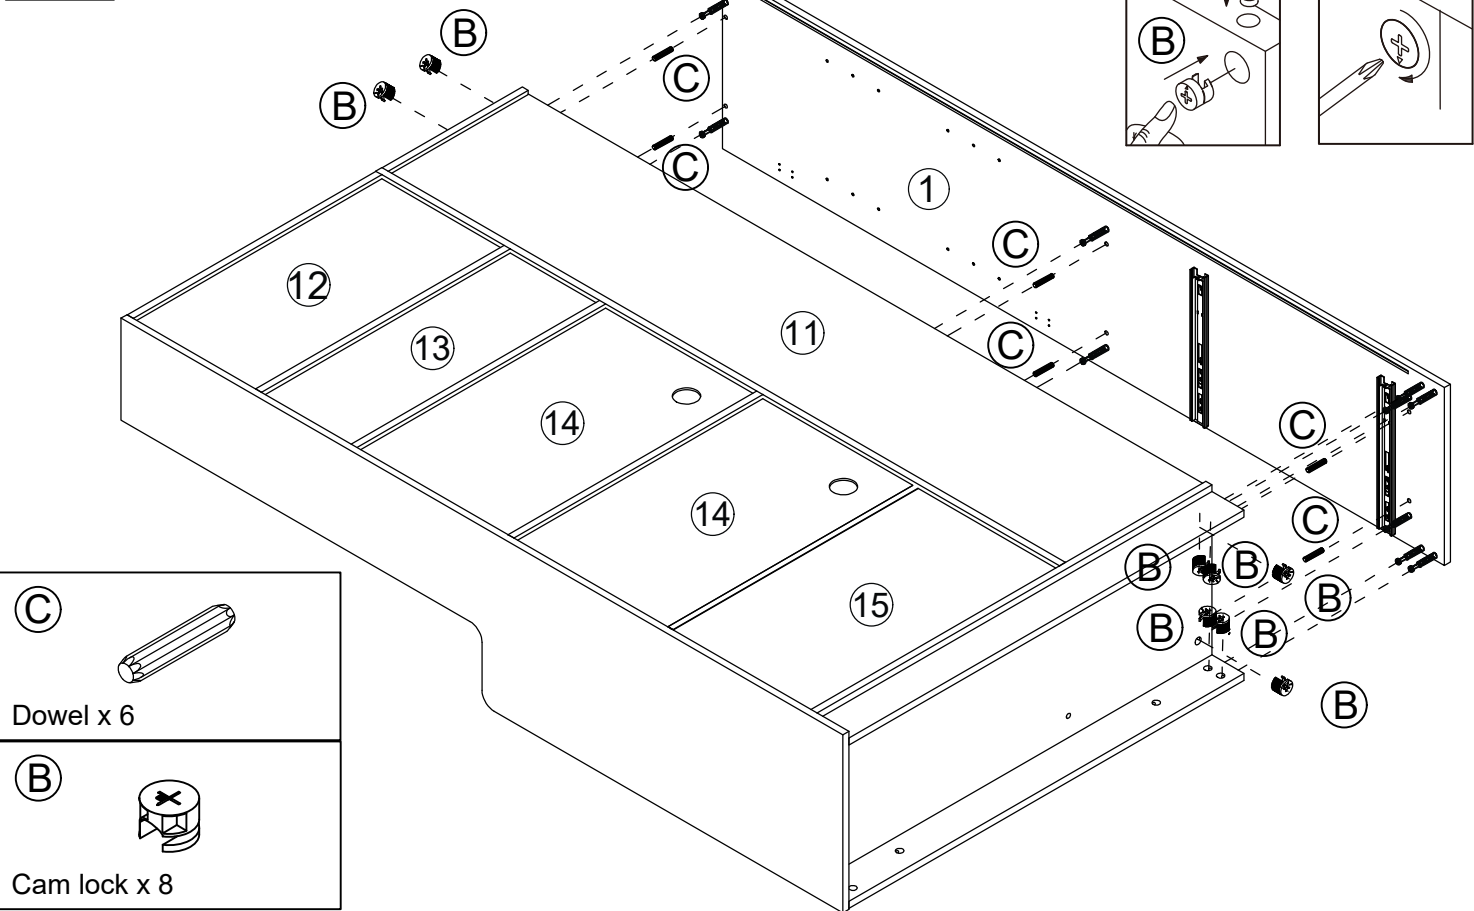

STEP 13

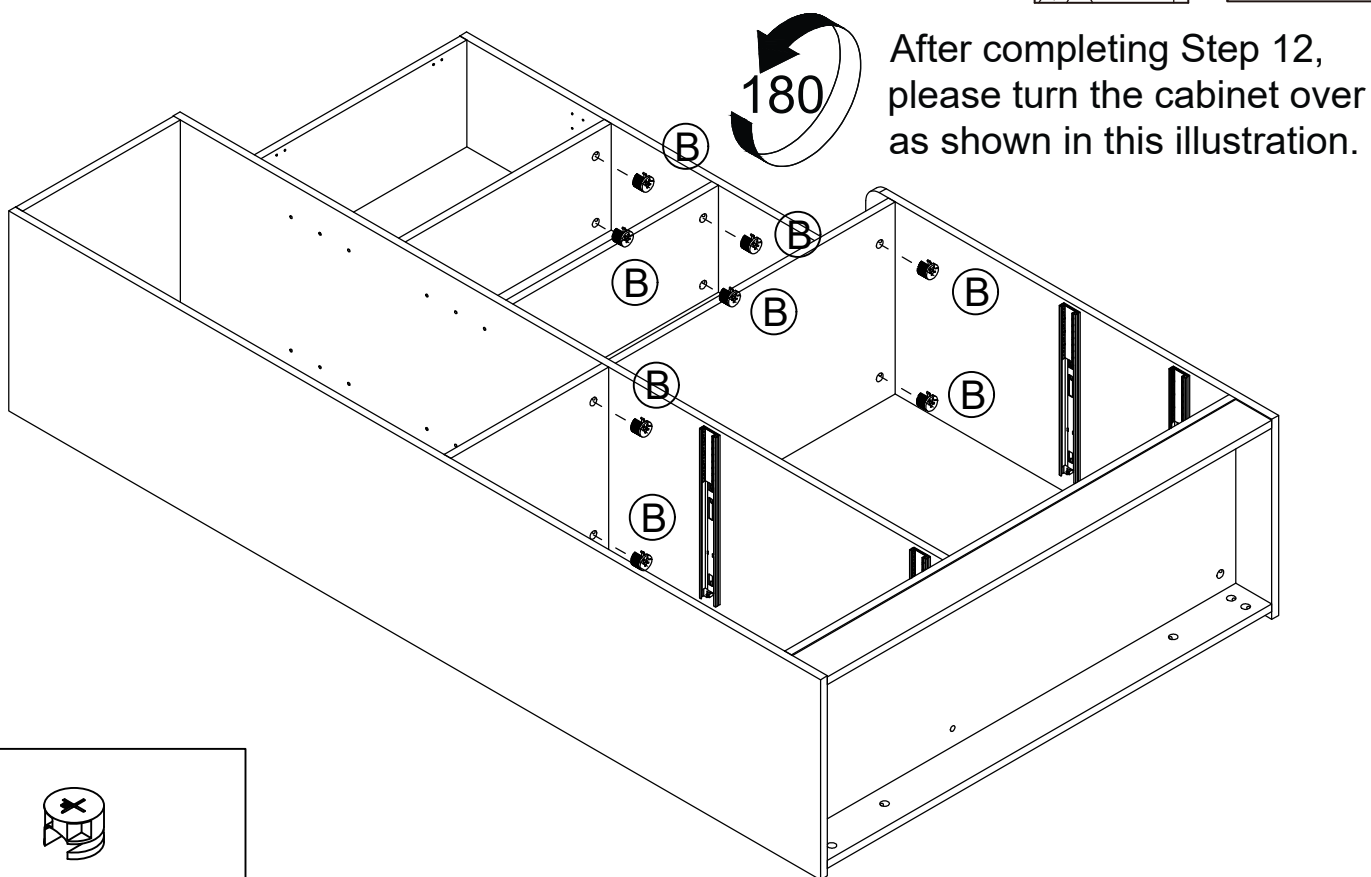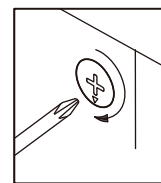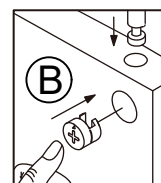


(B)



Cam lock x 8

STEP 14

(W)




Magnetic door catch x1

(D)




3*12mm Screw x 6

(F)

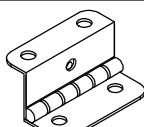


Cabinet hinge x2


(O)



Hold hands x1

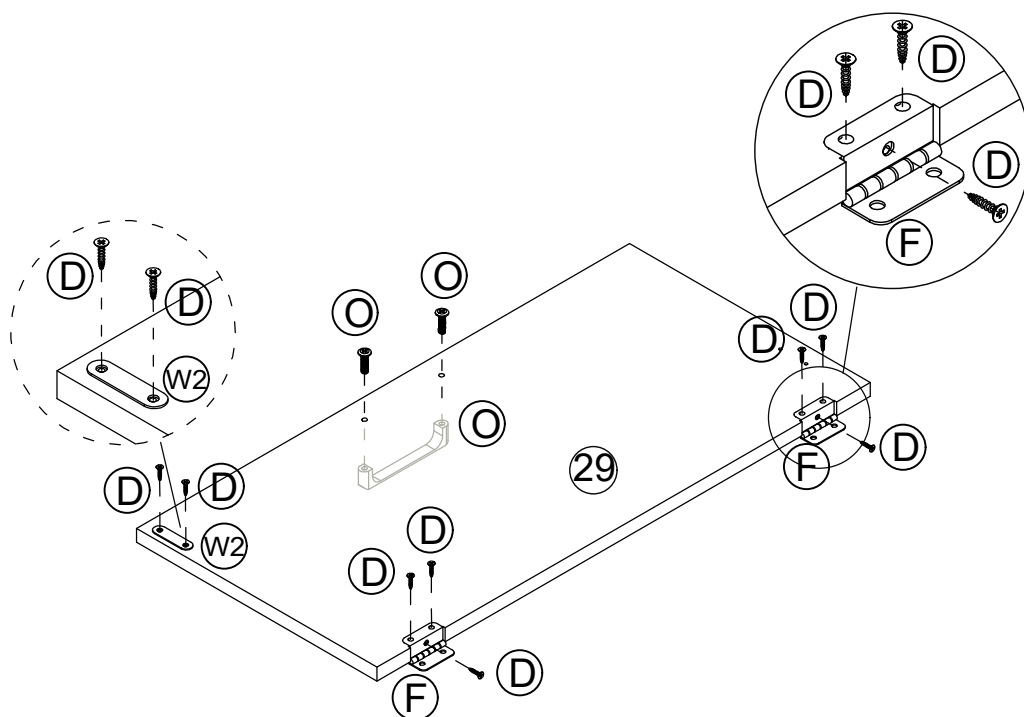


STEP 15

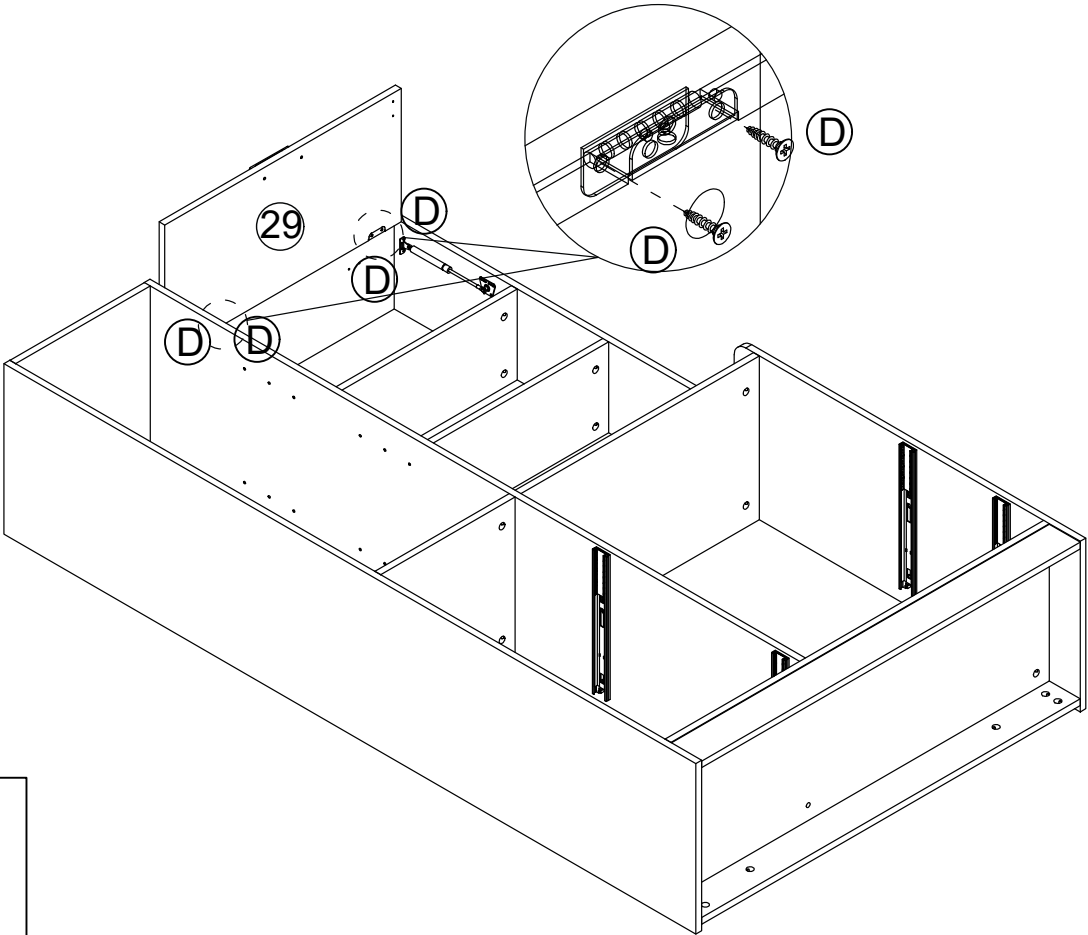



3*12mm Screw x 4



STEP 16

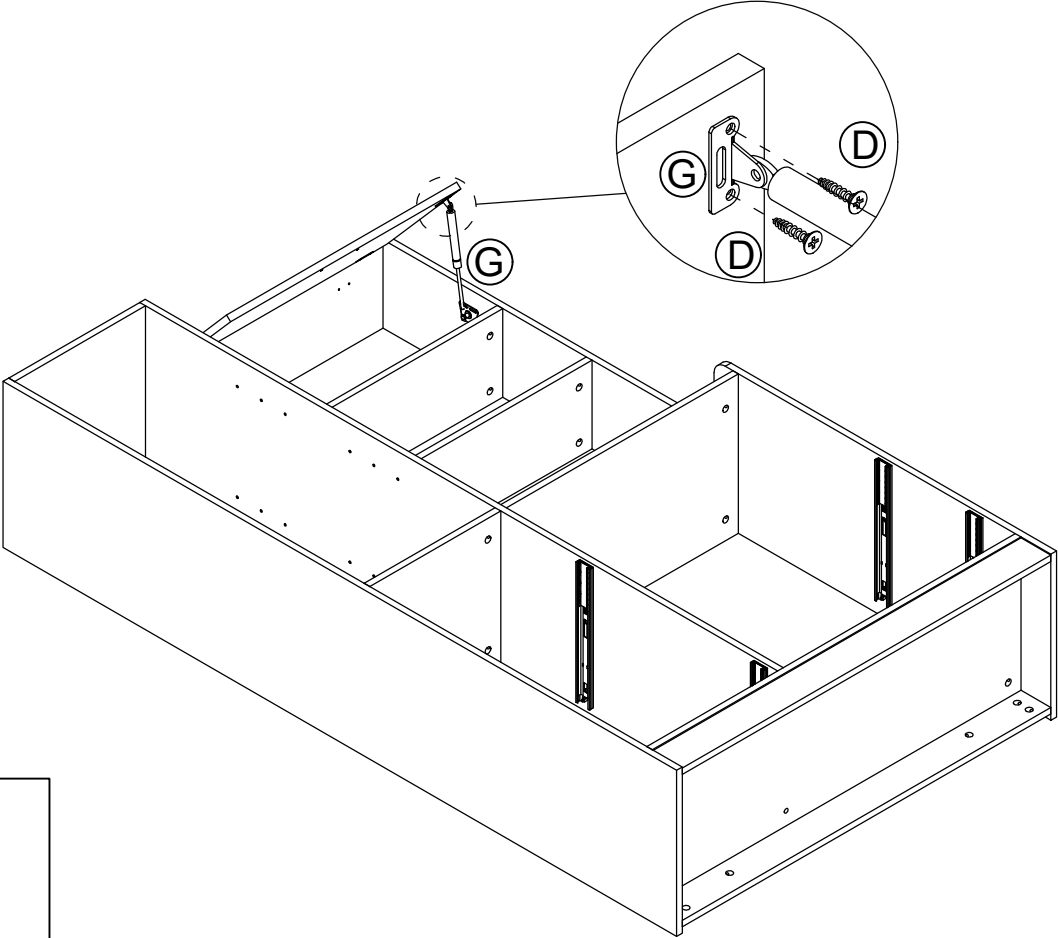






3*12mm Screw x 2


STEP 17

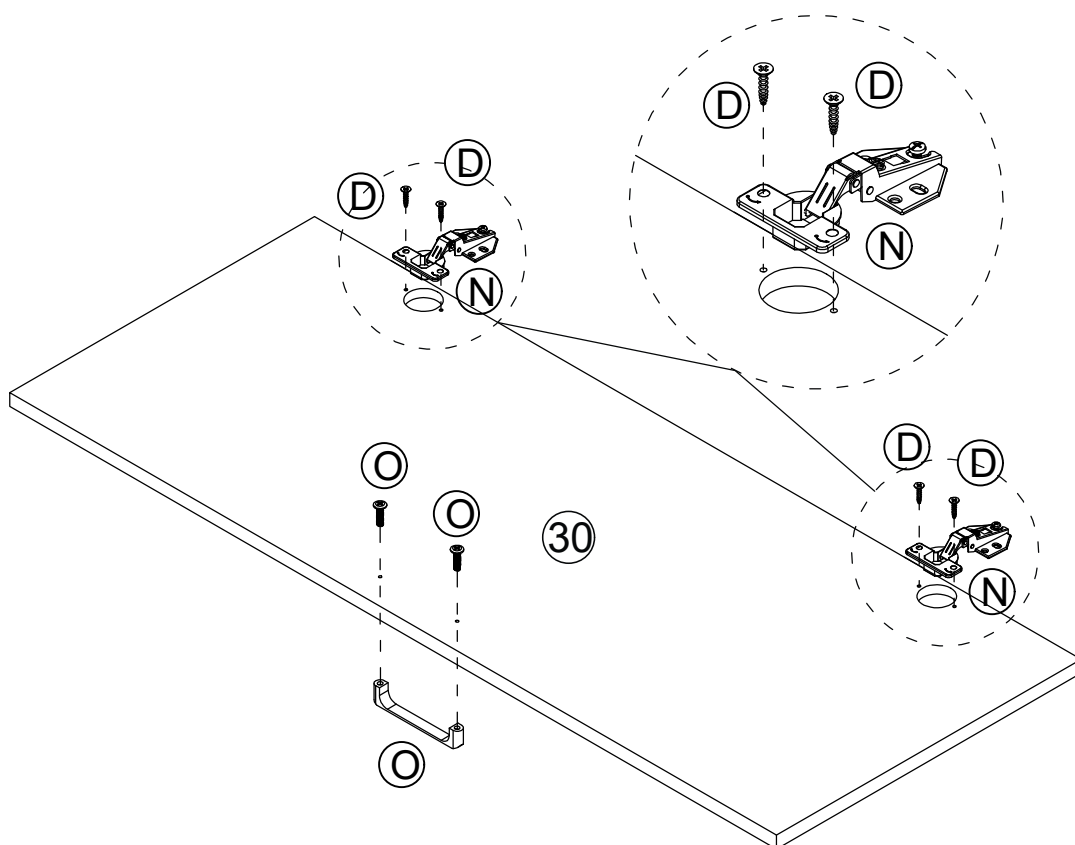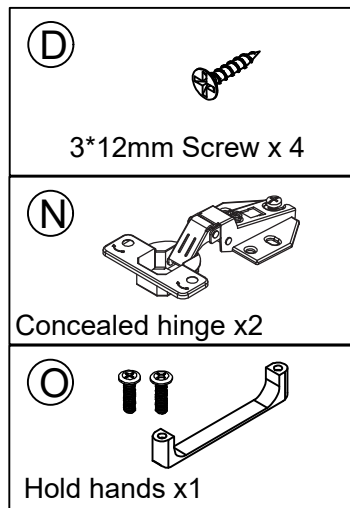


STEP 18

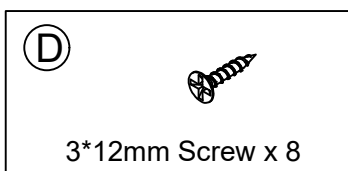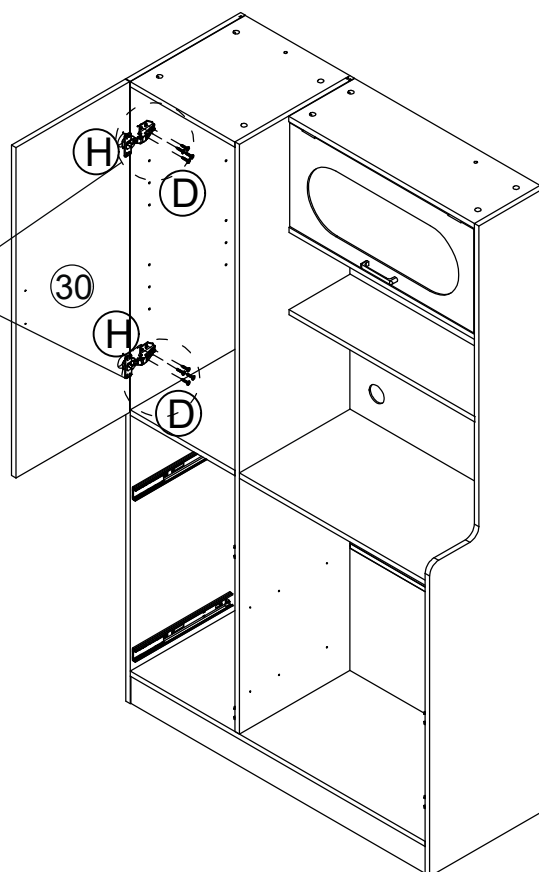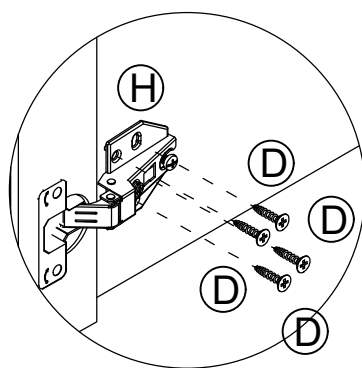


ADJUSTING POSSIBILITIES

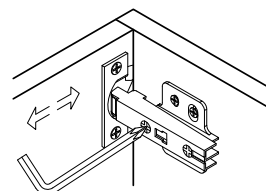

• LATERAL ADJUSTMENT BY SCREW ADJUSTMENT


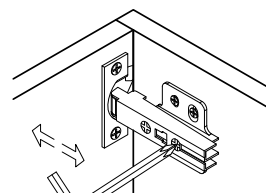


• FRONT-TO-BACK BY SLACKENING THE HINGE-ARM MOUNTING SCREW

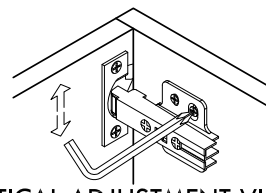

• VERTICAL ADJUSTMENT VIA MOUNTING PLATE (VIA SLOTS OR, IF IN TWO PIECES, BY SCREWS)


STEP 19

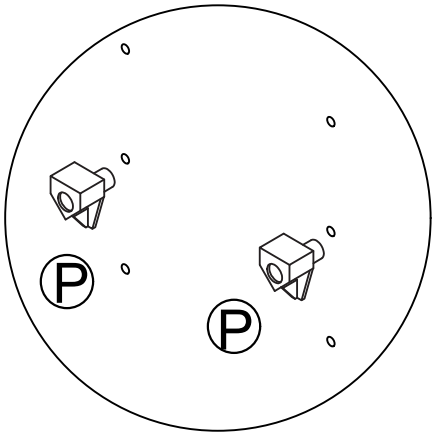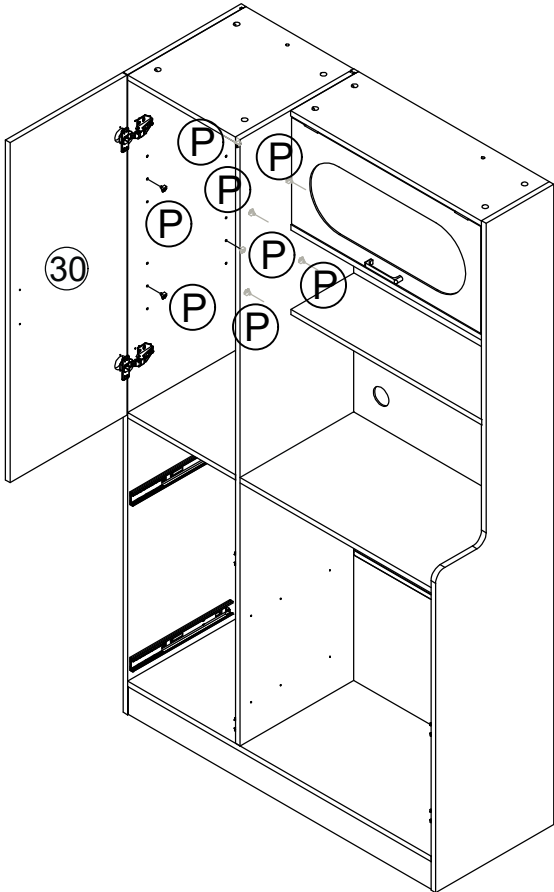





A detailed line drawing of a single movable partition bracket, labeled with a circled 'P'.

Movable partition bracket x 8




STEP 20

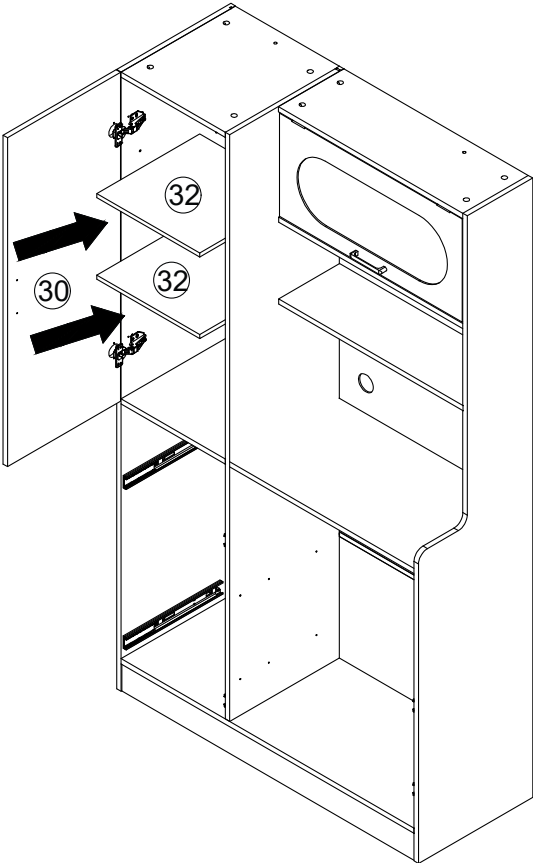


STEP 21

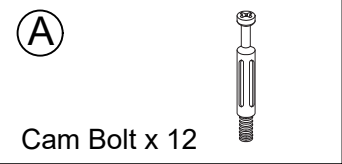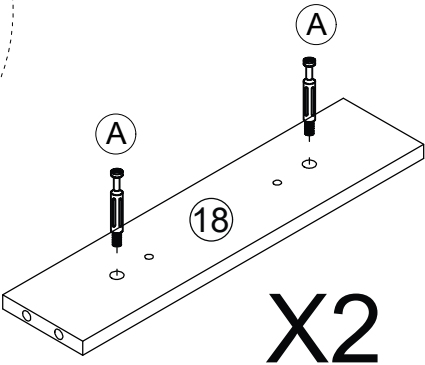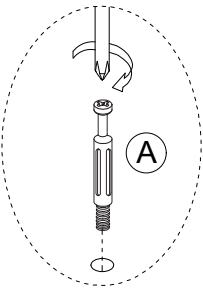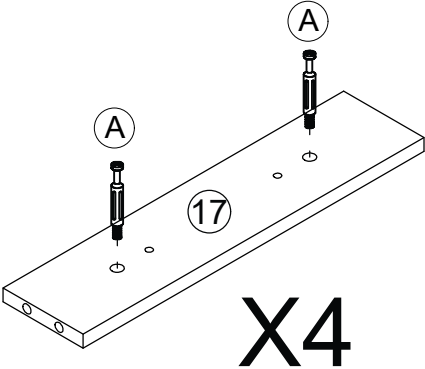


STEP 22

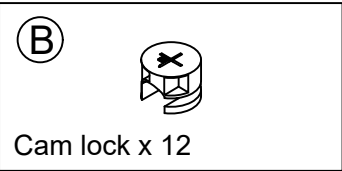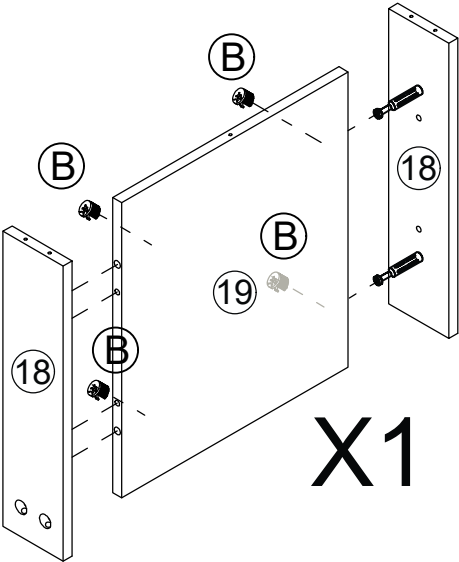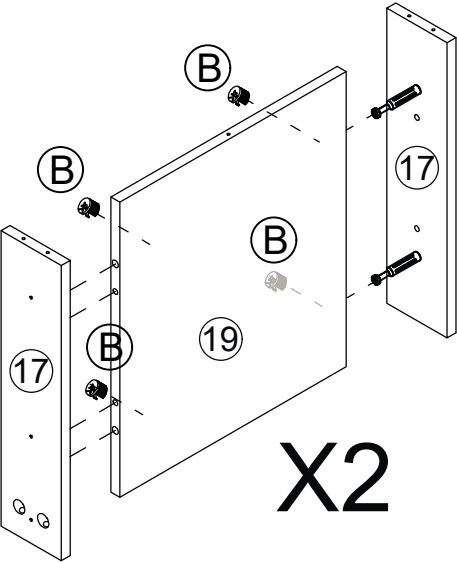



STEP 23

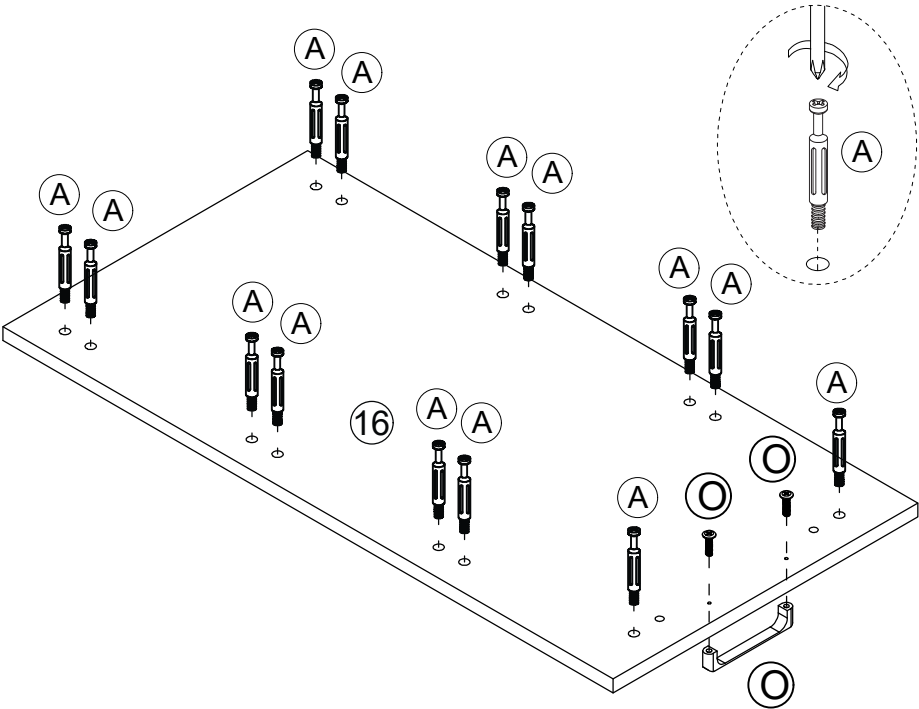


(A) 	(O) 
Cam Bolt x 14	Hold hands x 1

STEP 24

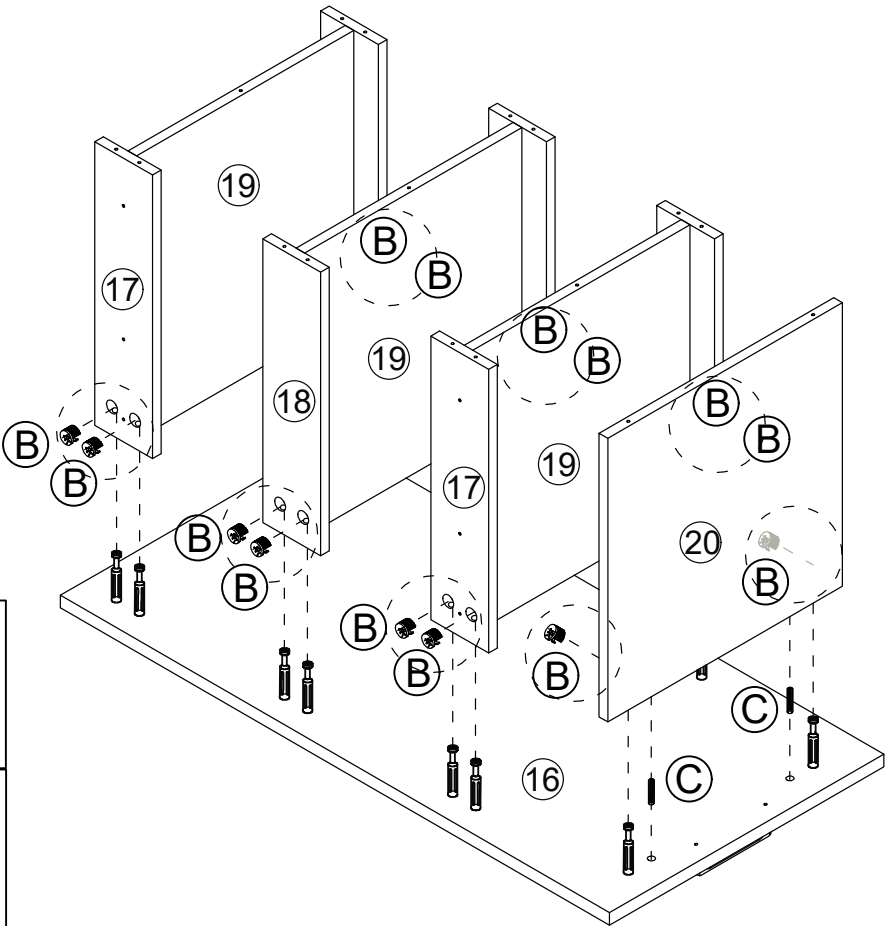




(C) 
Dowel x 2
(B) 
Cam lock x 14

STEP 25

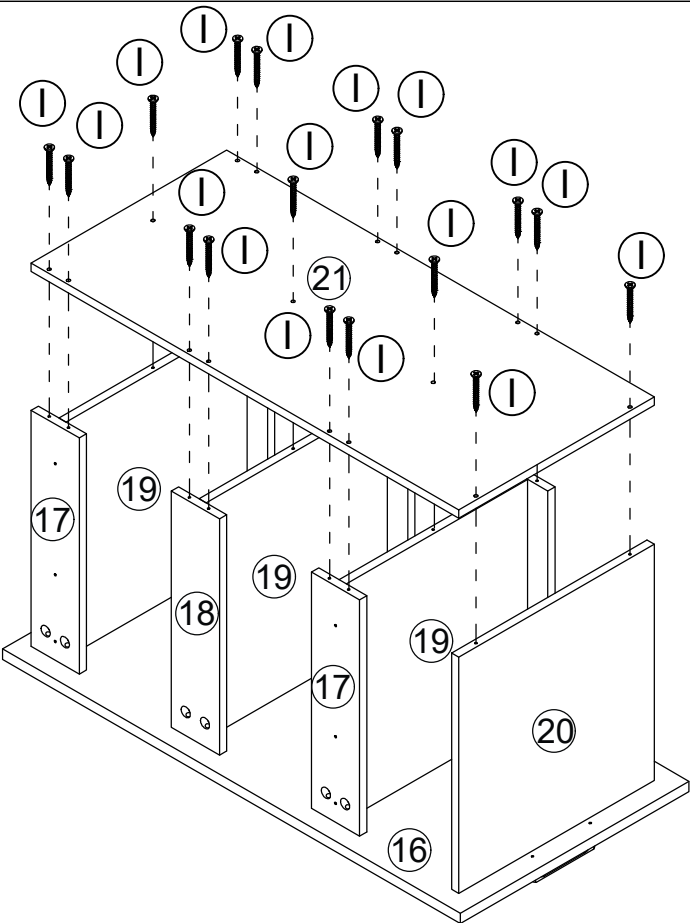


STEP 26


Assemble both sides in the same way.

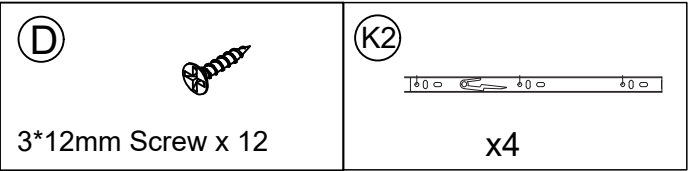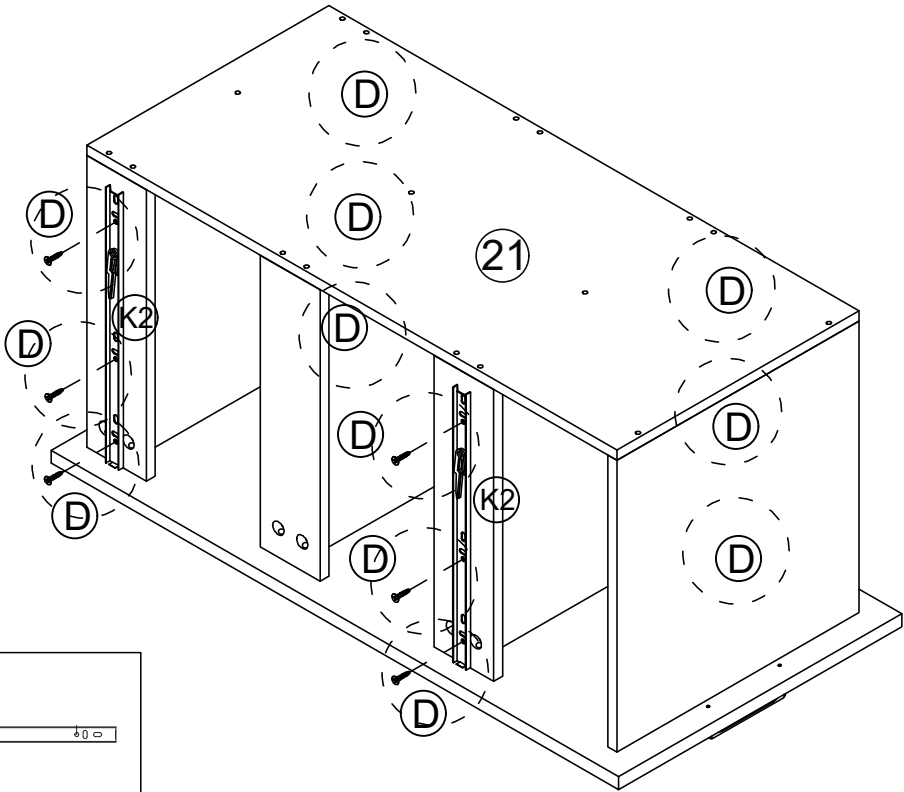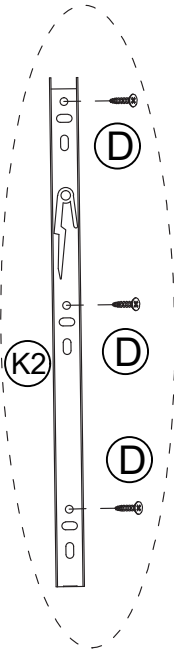


STEP 27

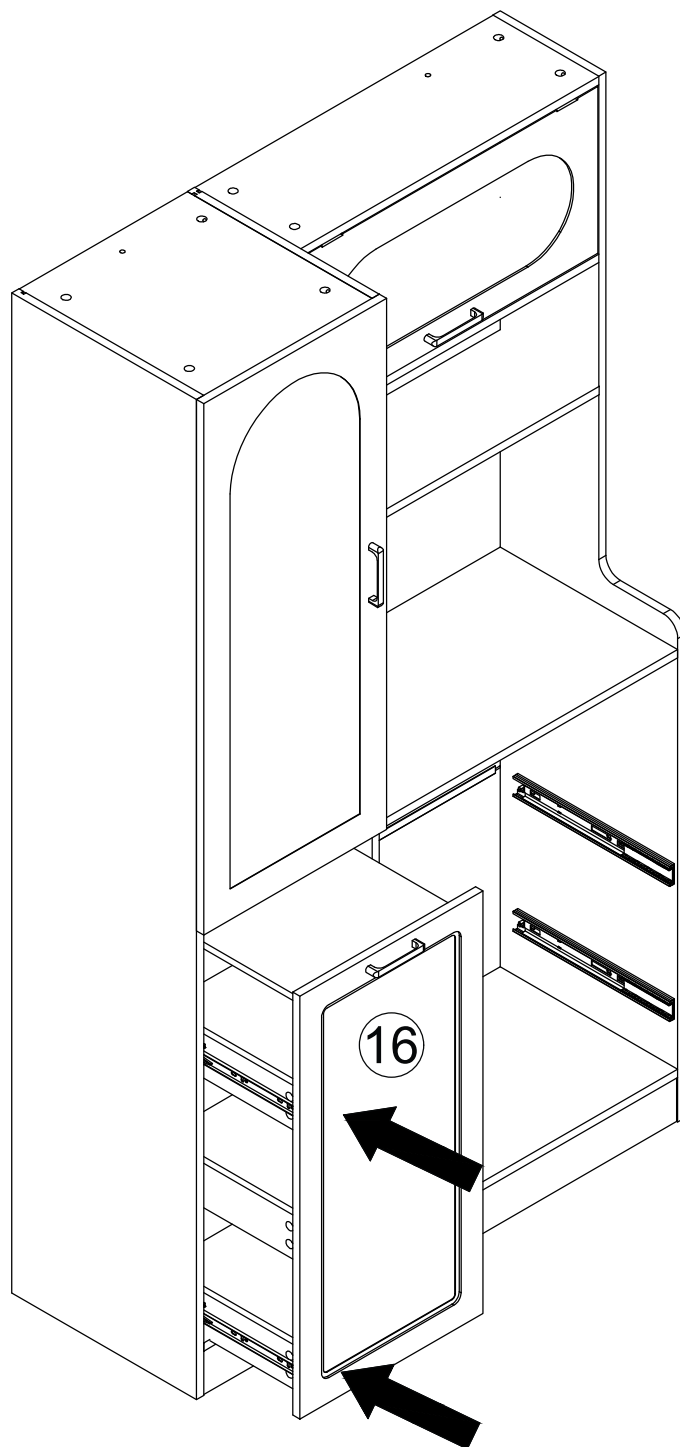



STEP 28

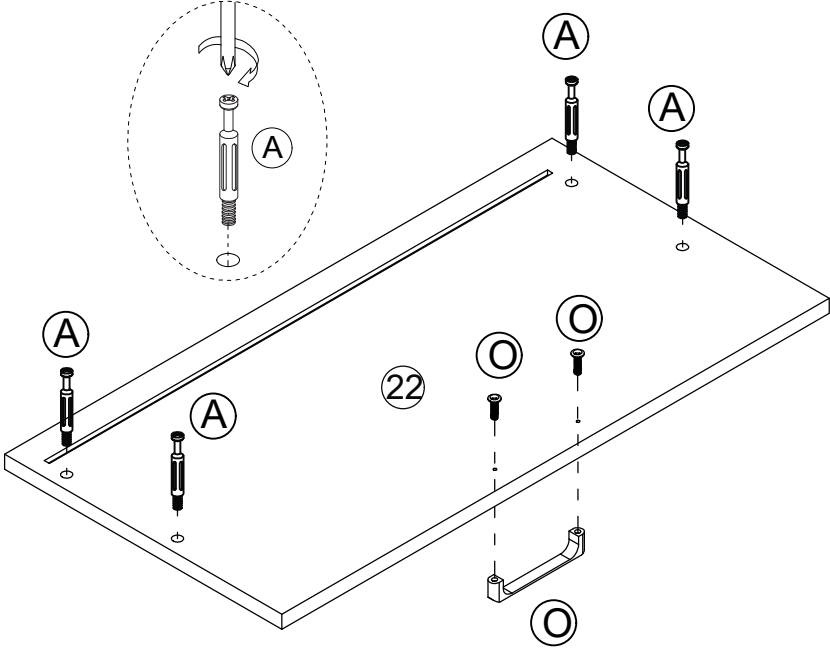


(A) 	(O) 
Cam Bolt x 4	Hold hands x1

STEP 29

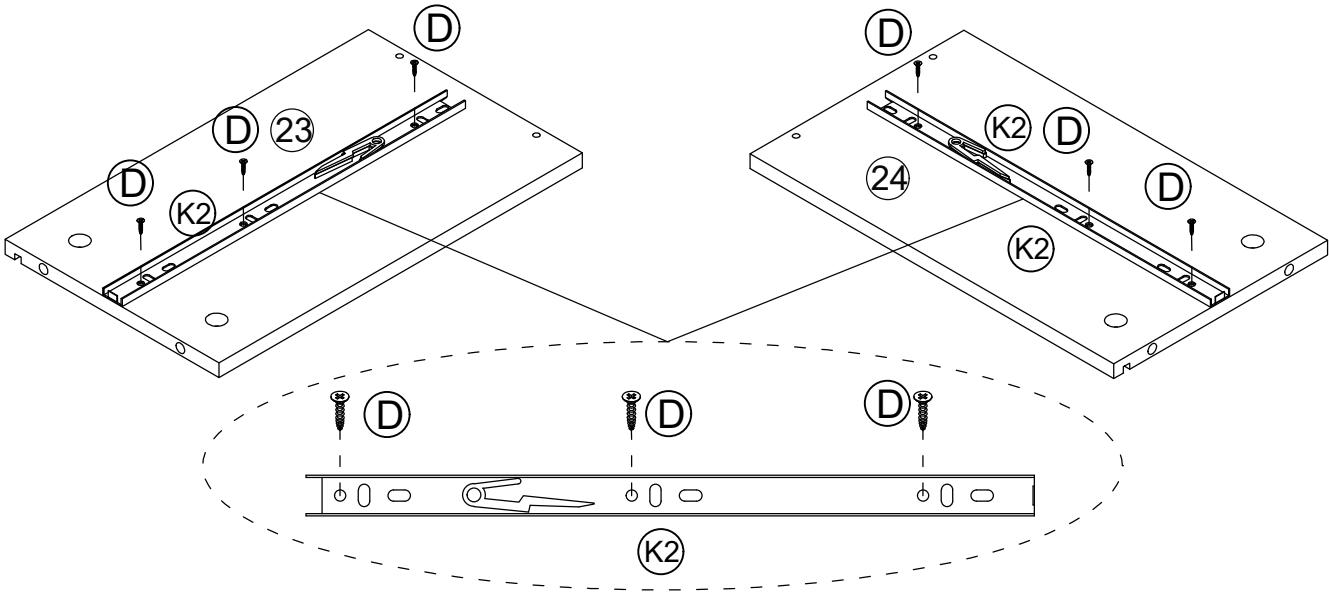

(D) 	(K2) 
3*12mm Screw x 6	x2

STEP 30

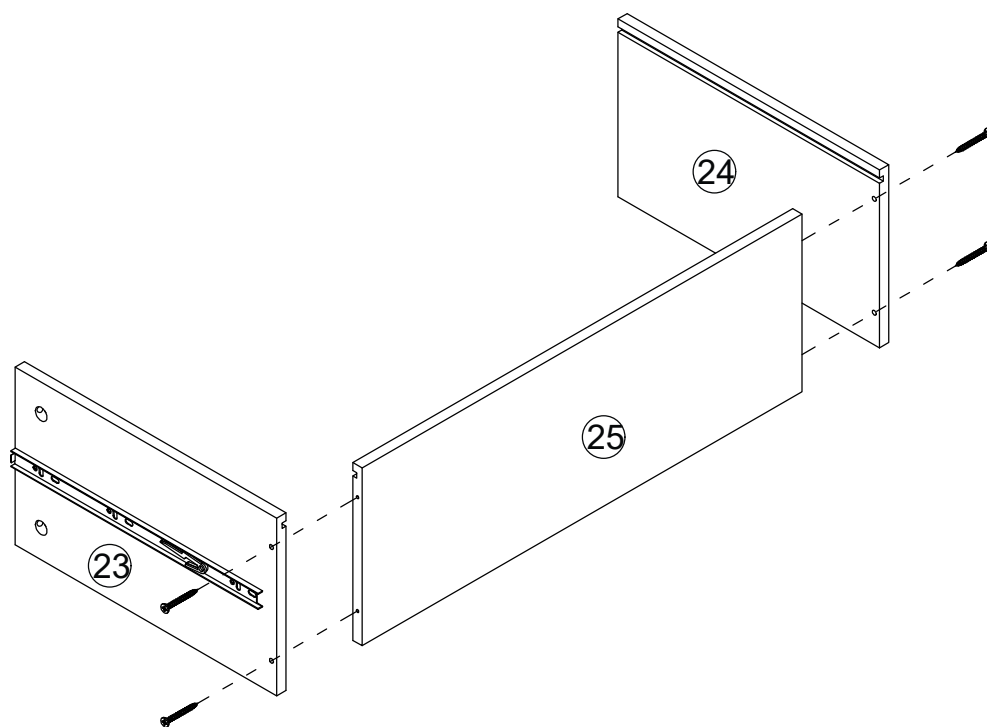


①




3.5*35mm Screw x 4

STEP 31

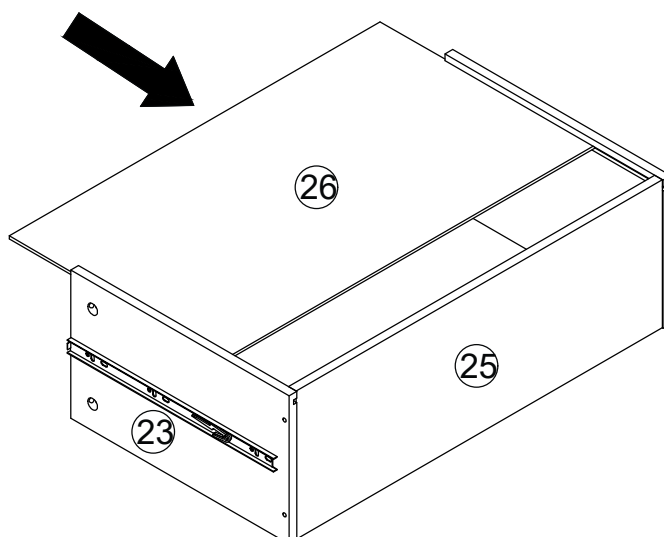

STEP 32

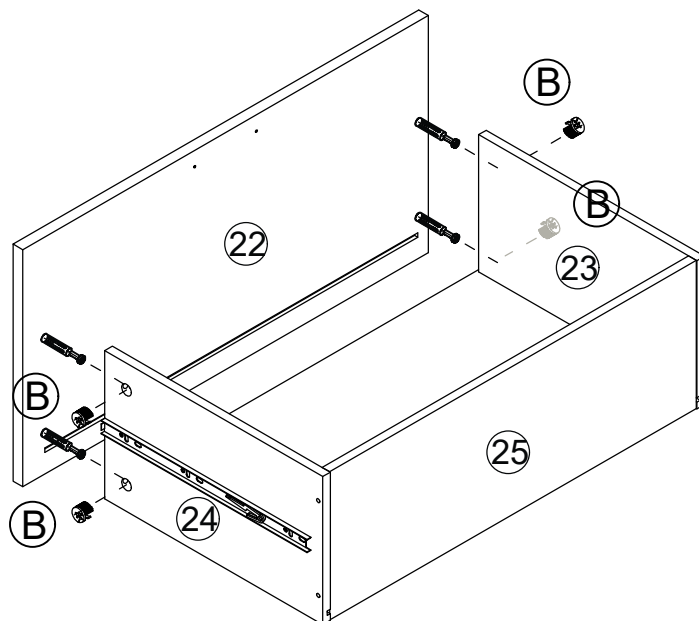


(B)





Cam lock x 4



STEP 33

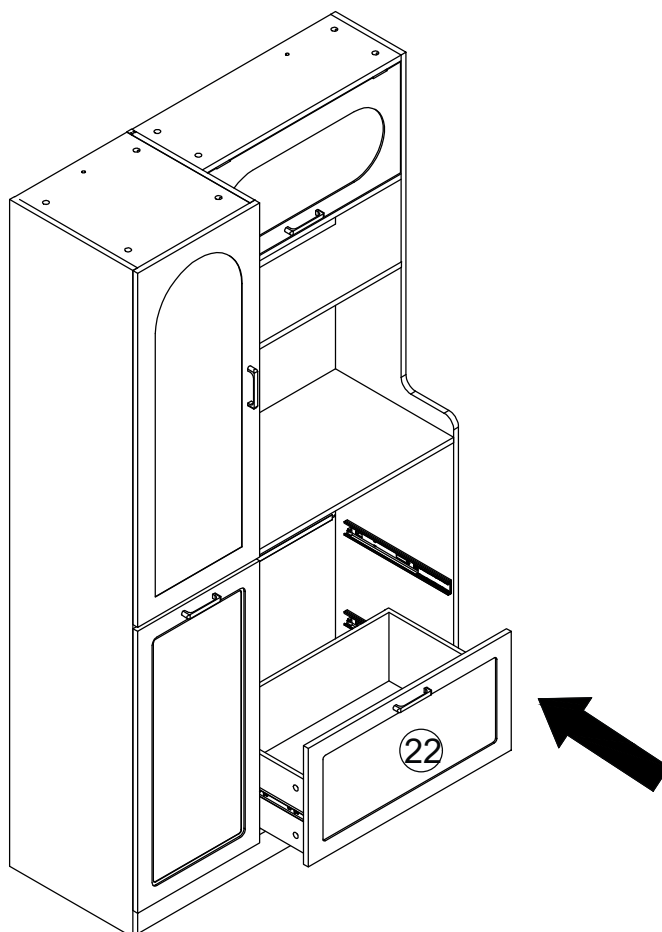


STEP 34

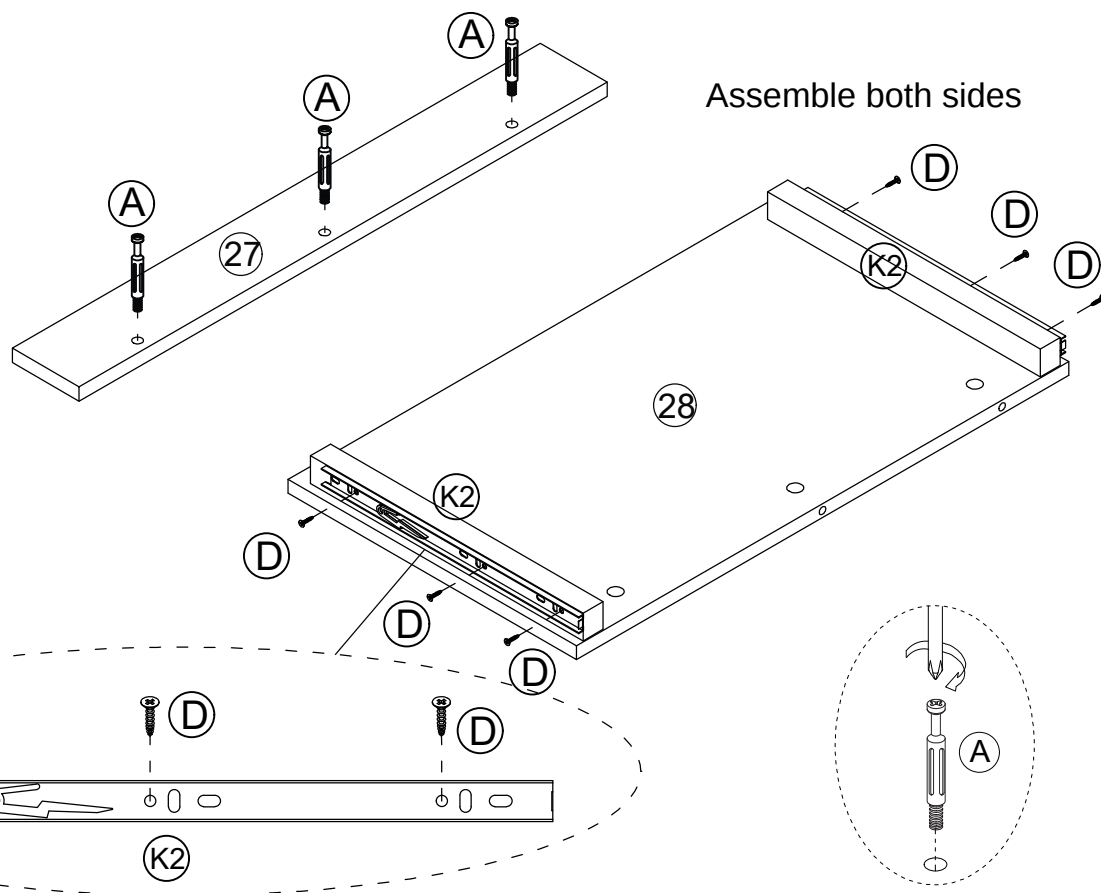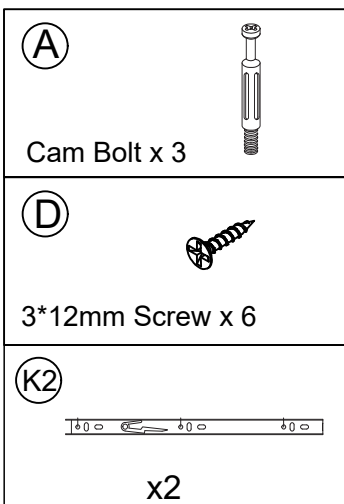


STEP 35

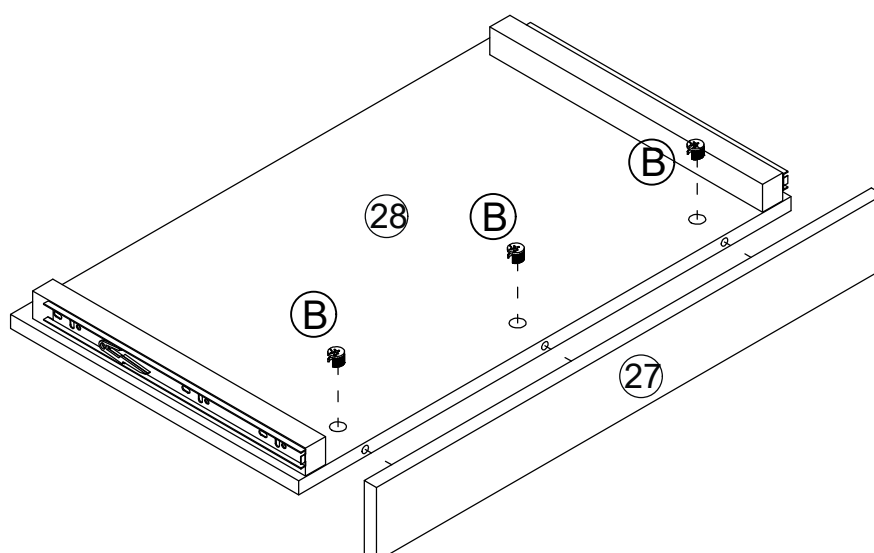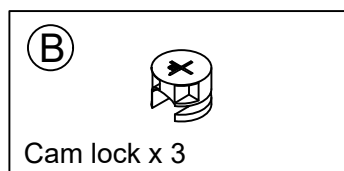



STEP 36

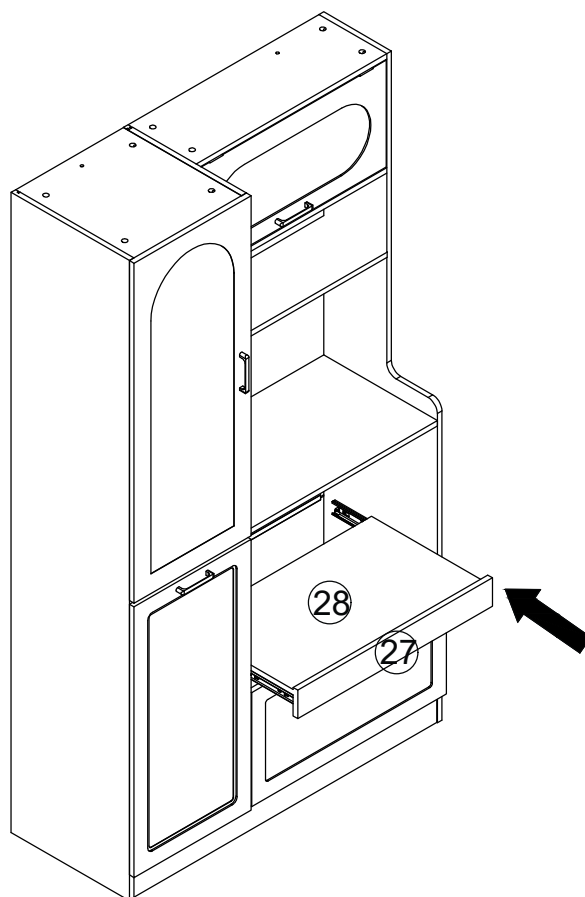


STEP 37

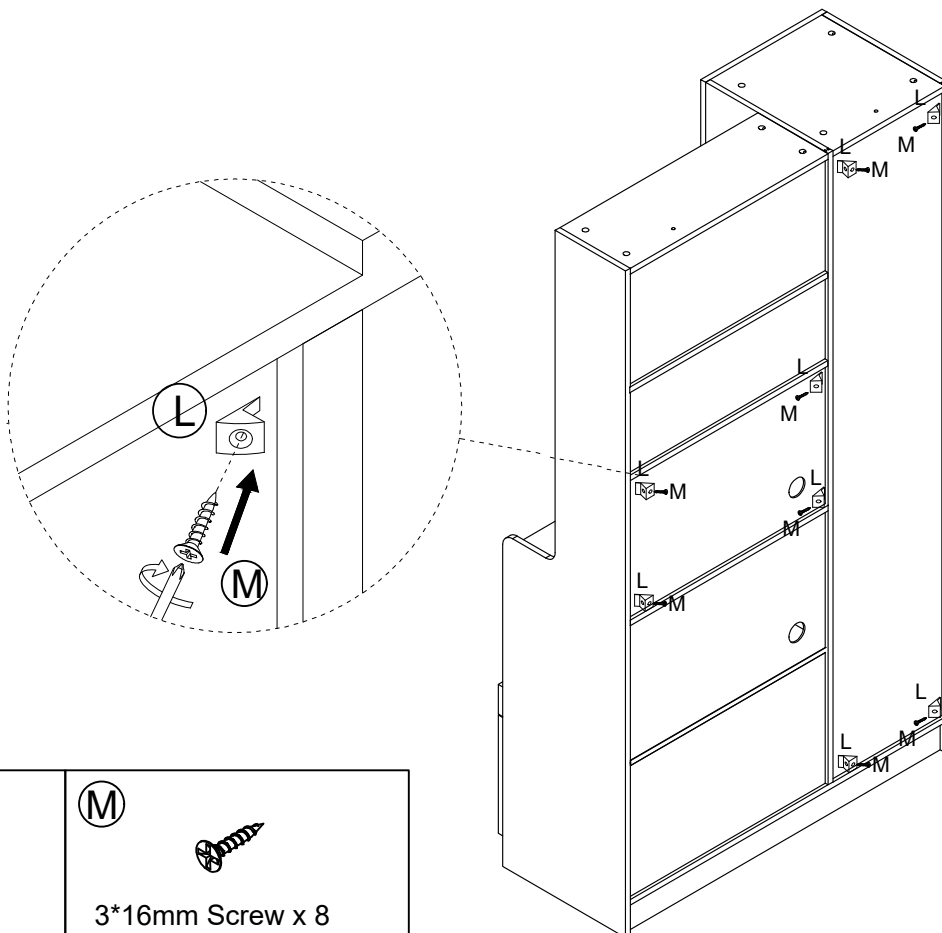

STEP 38

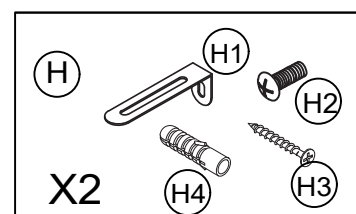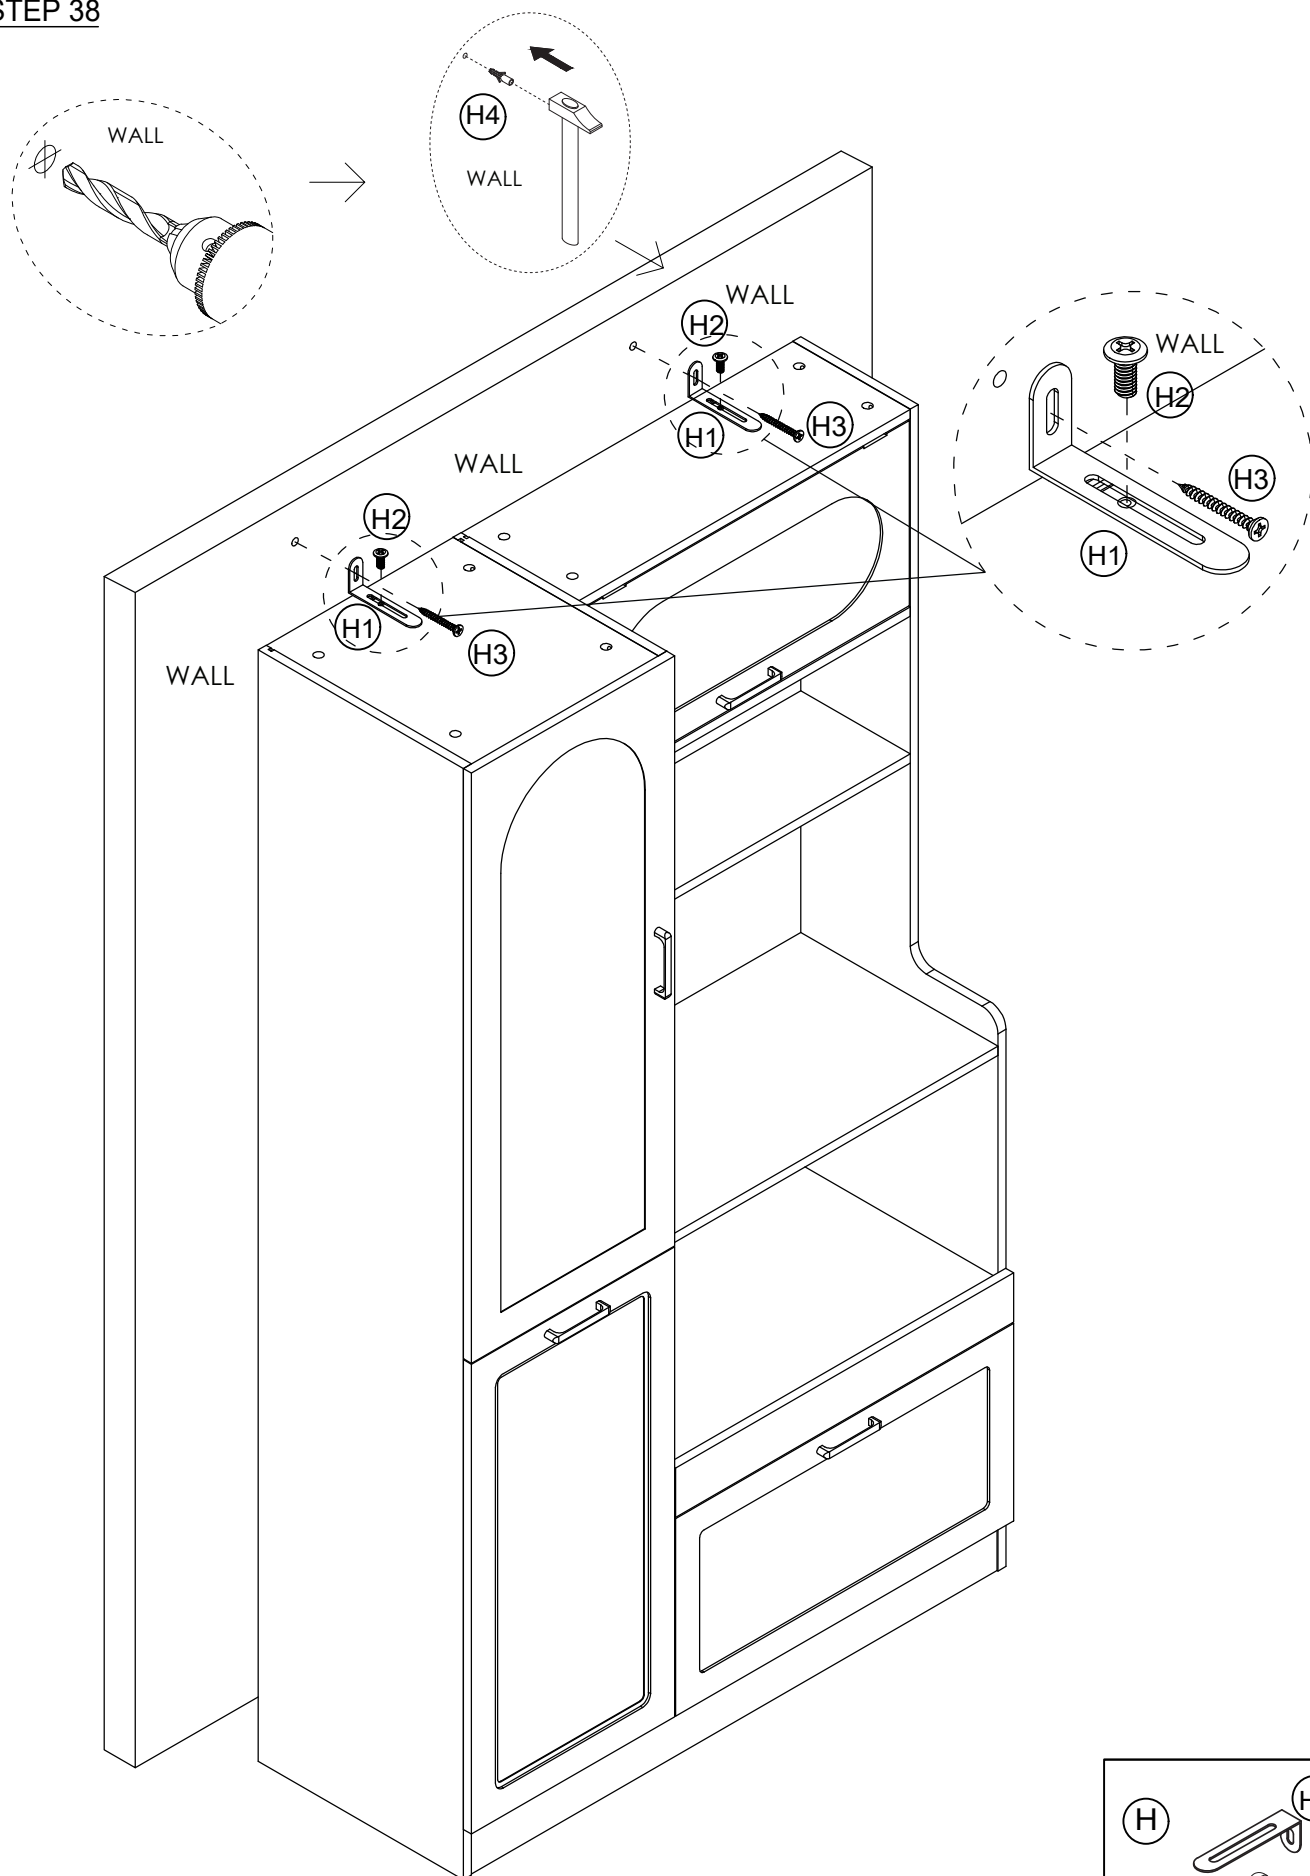

STEP 39

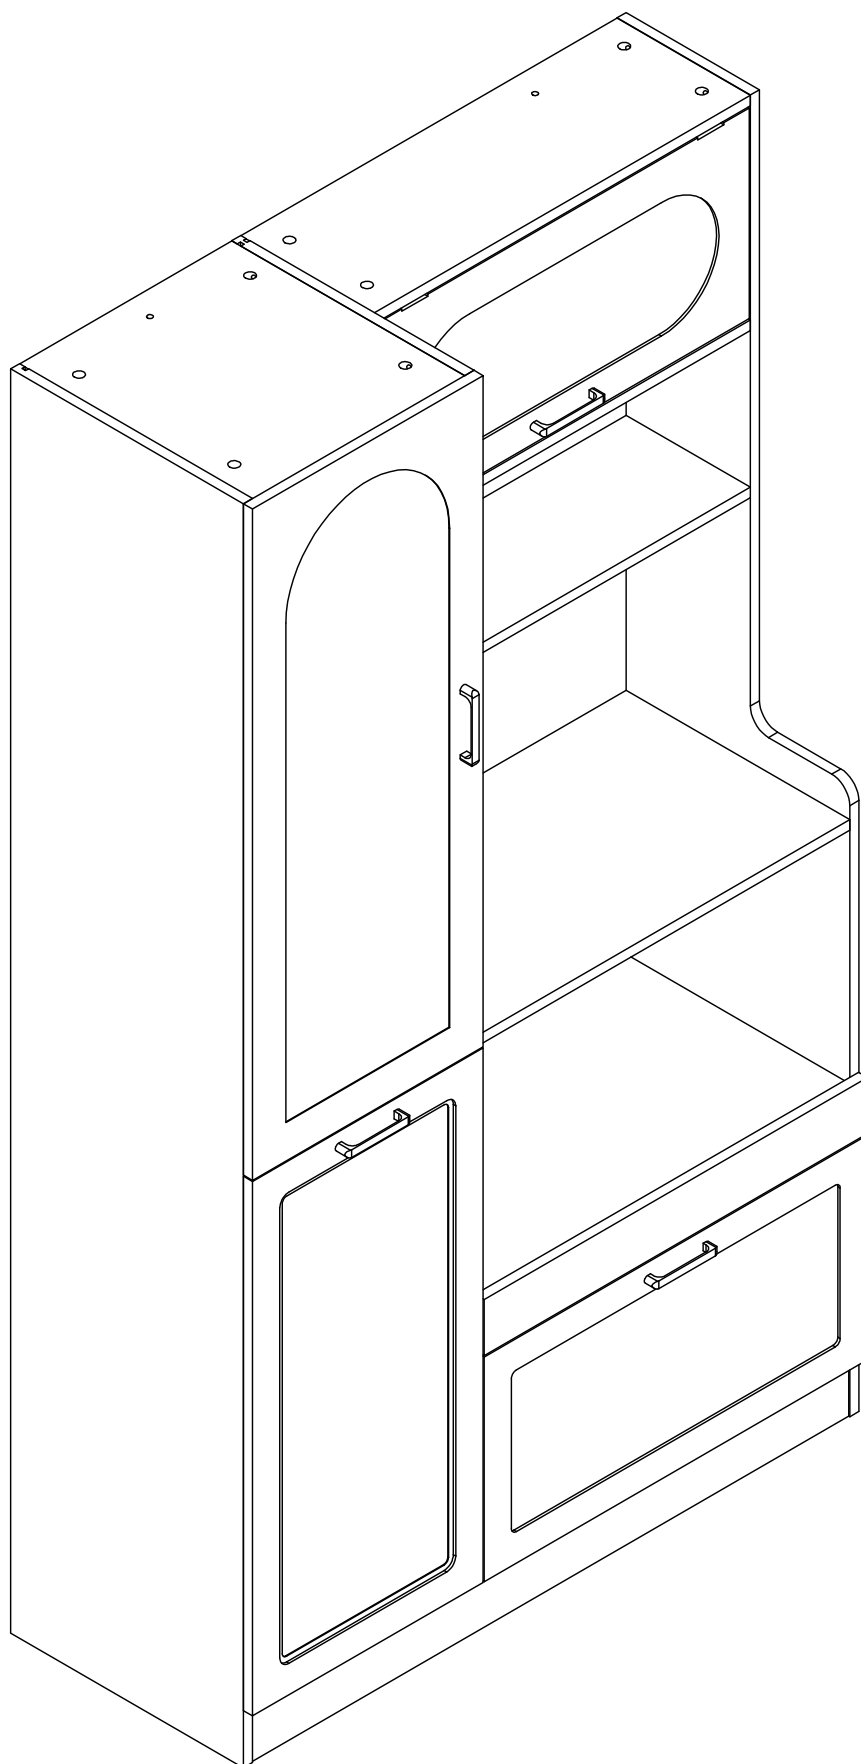

FINISH