


# ASSEMBLY INSTRUCTIONS


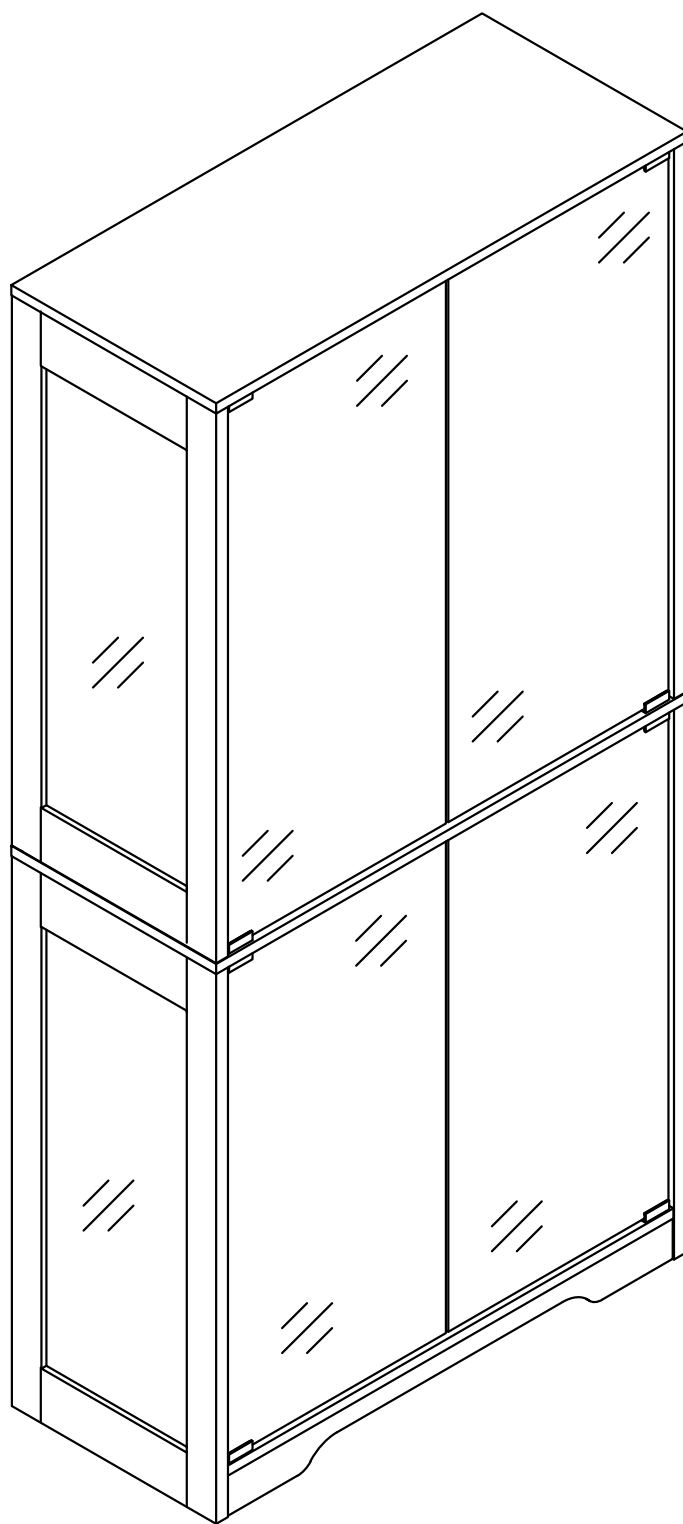


# WARNING !




Estimated Time for Assembly

60 mins

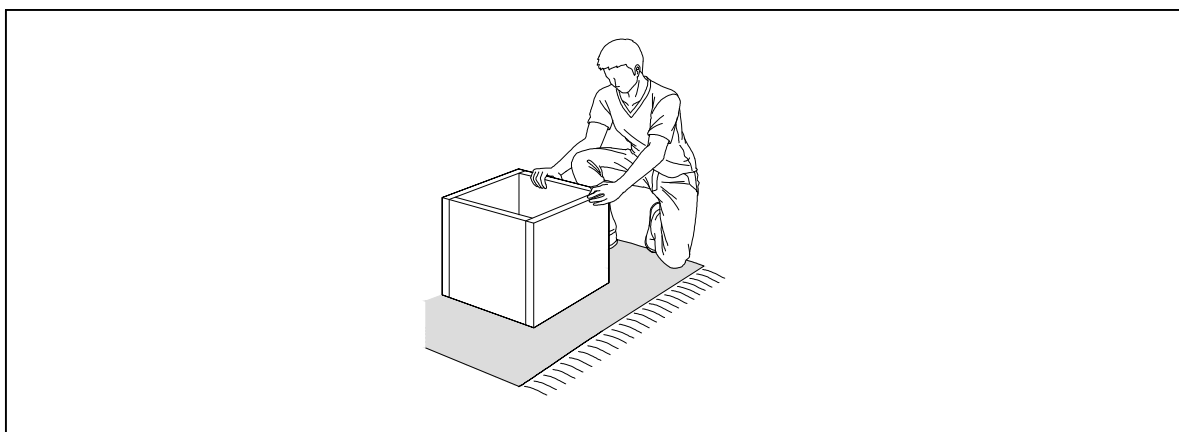

**Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.**

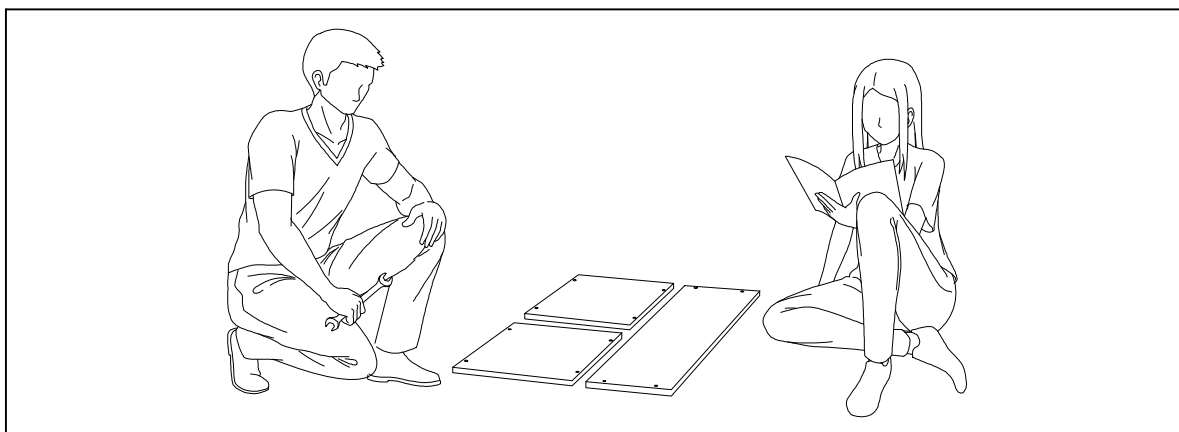


**This furniture requires 2 people to assembly.**

**Make sure no parts are missing or damaged before assembly.**


# Board Identification

Not actual size

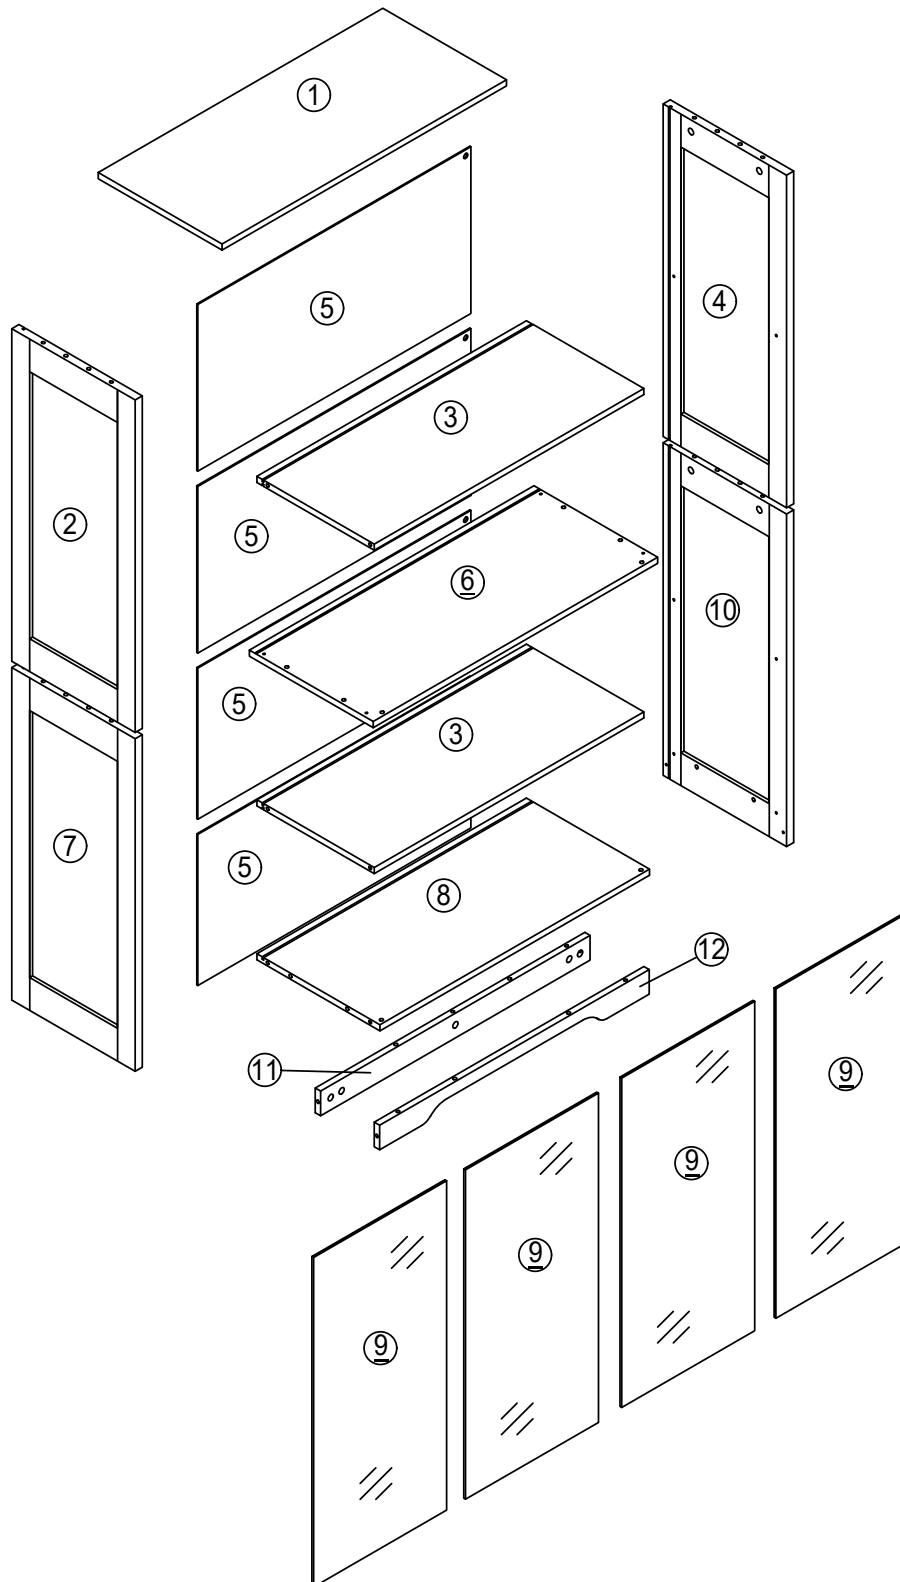


# BOARD IDENTIFICATION


Not actual size

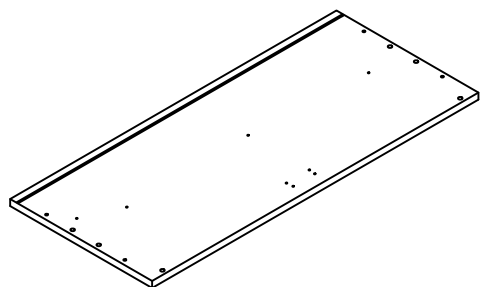


①X1

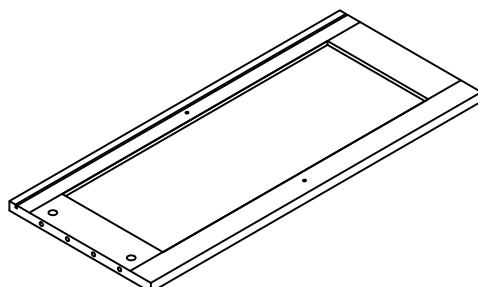


②X1

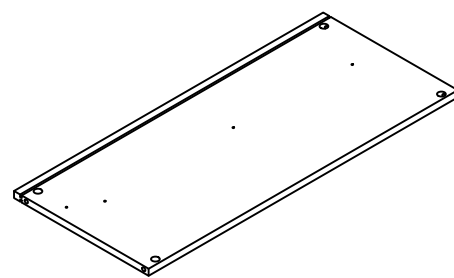


③X2

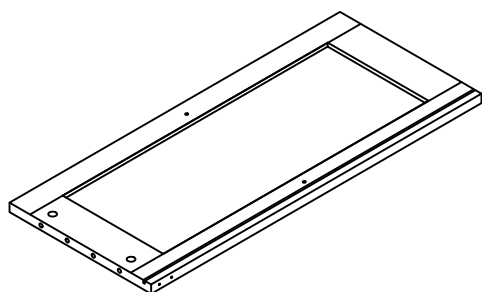


④X1

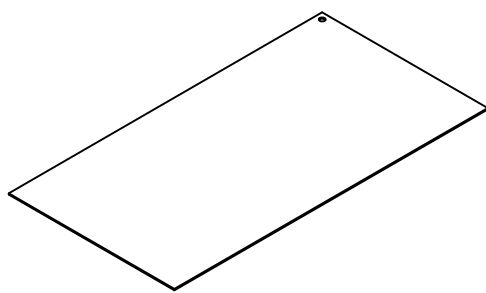


⑤X4

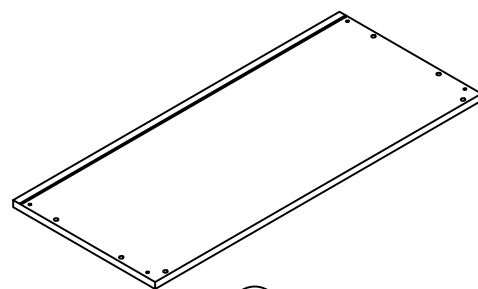


⑥X1

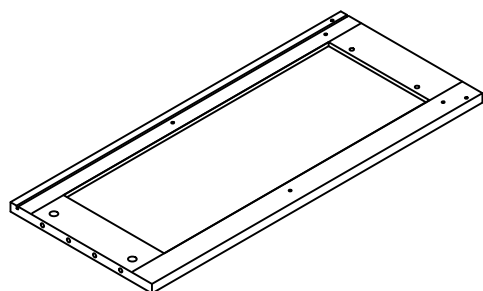


⑦X1

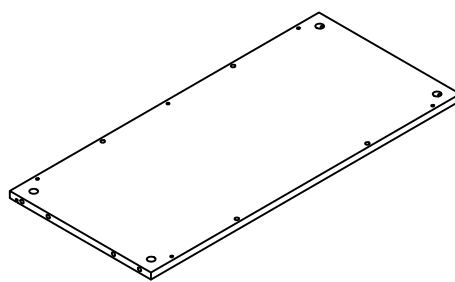


⑧X1

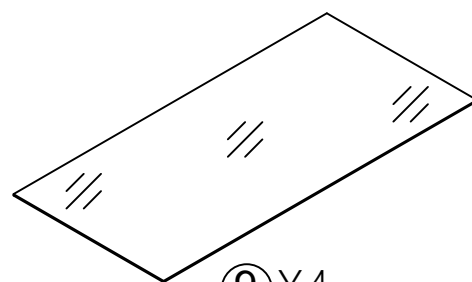


⑨X4

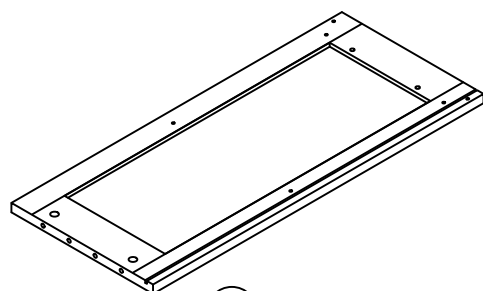

⑩X1












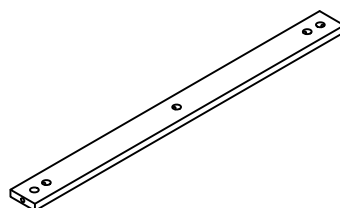


⑪X1

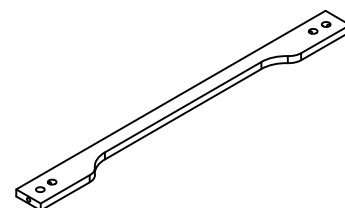





⑫X1

# HARDWARE LIST

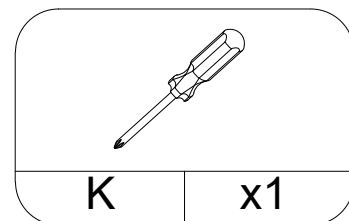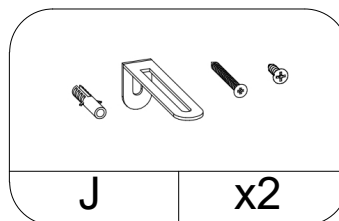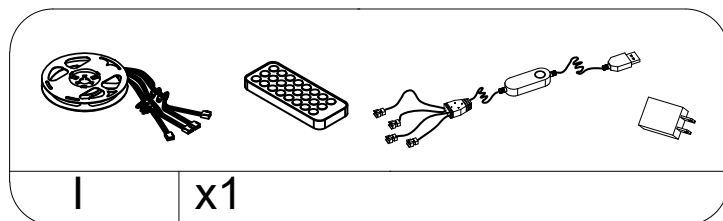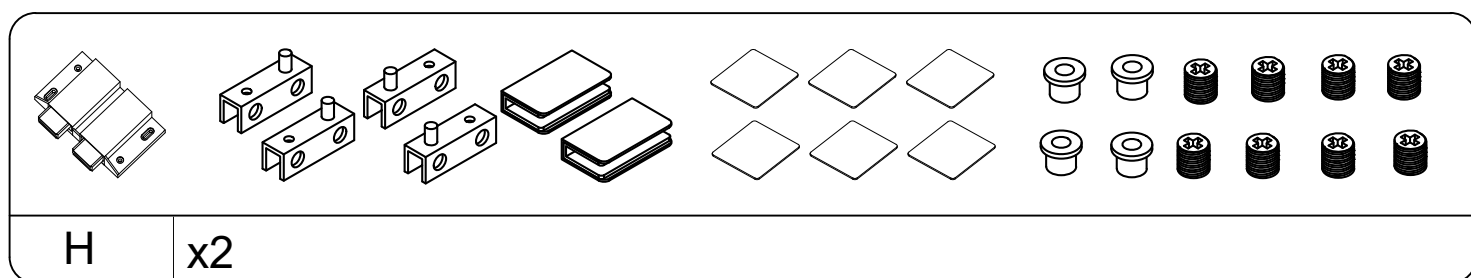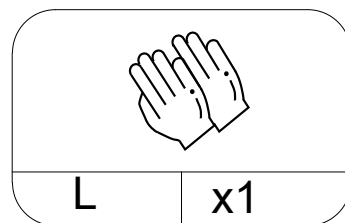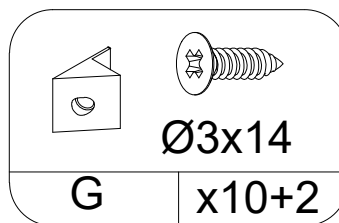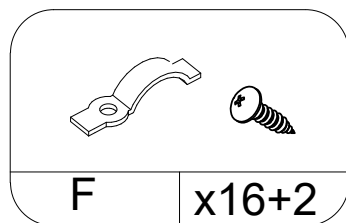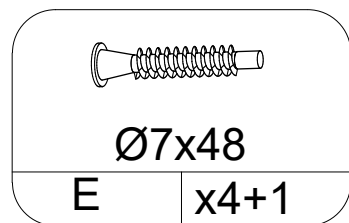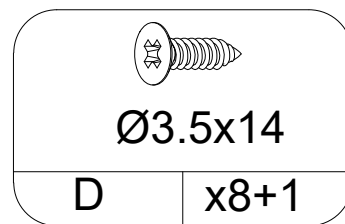
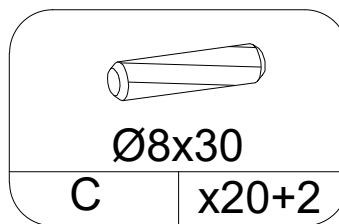
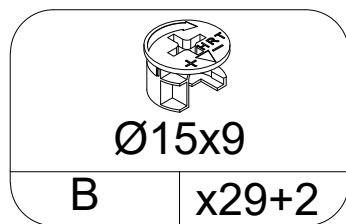
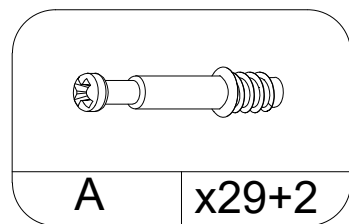


## Cam Lock Fastening System





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

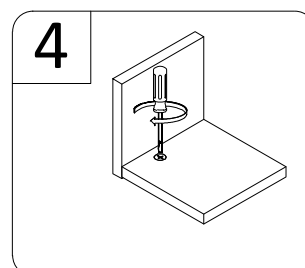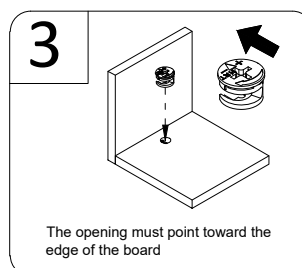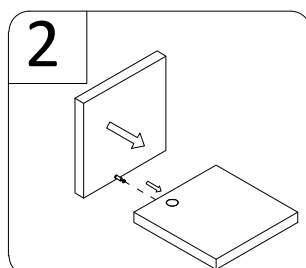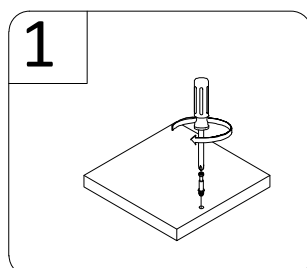

# STEP 1

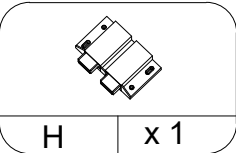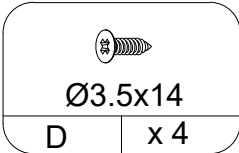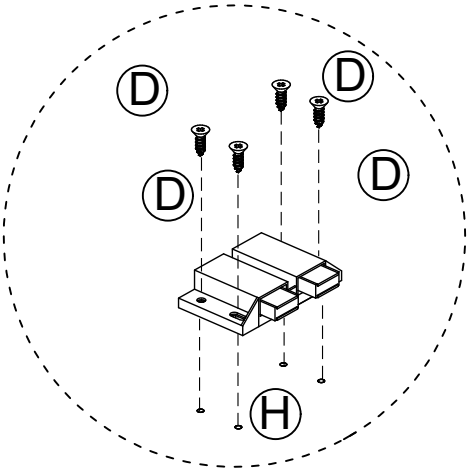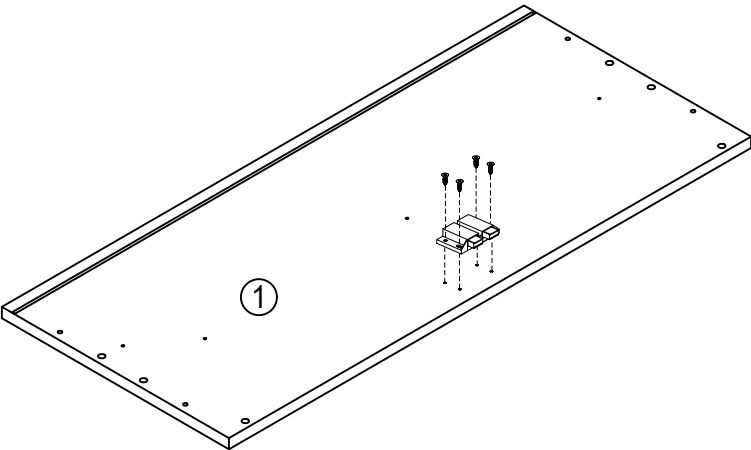





# STEP 2

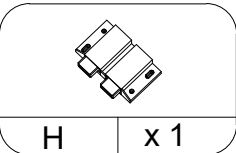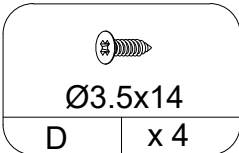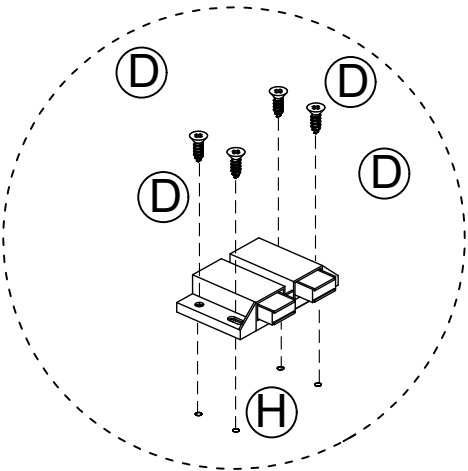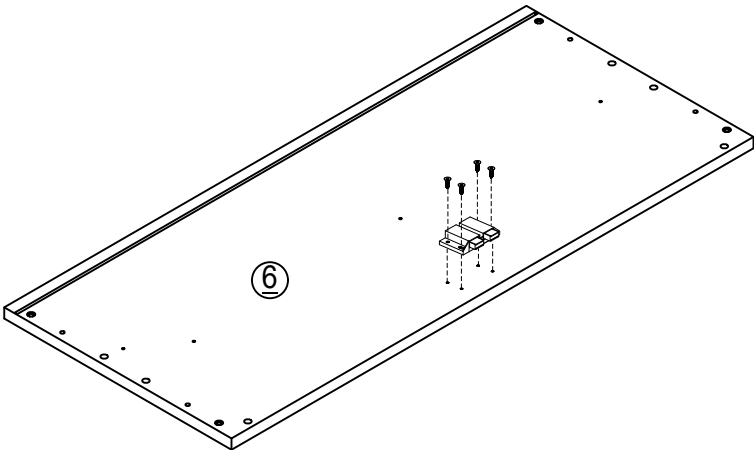

# STEP 3

When installing the LED strip light, follow these steps in sequence:





1. Peel off the protective backing from the adhesive tape on the strip light.
2. Affix the strip to the inner surface of Plate 1, ensuring the total length of the strip is appropriate and maintaining a minimum clearance of 22mm from the left edge.
3. Secure the strip using Screw F at designated points, as illustrated in the accompanying diagram.

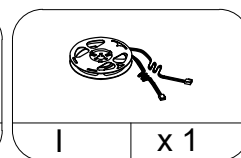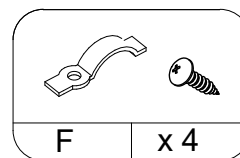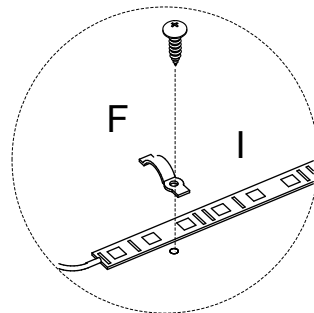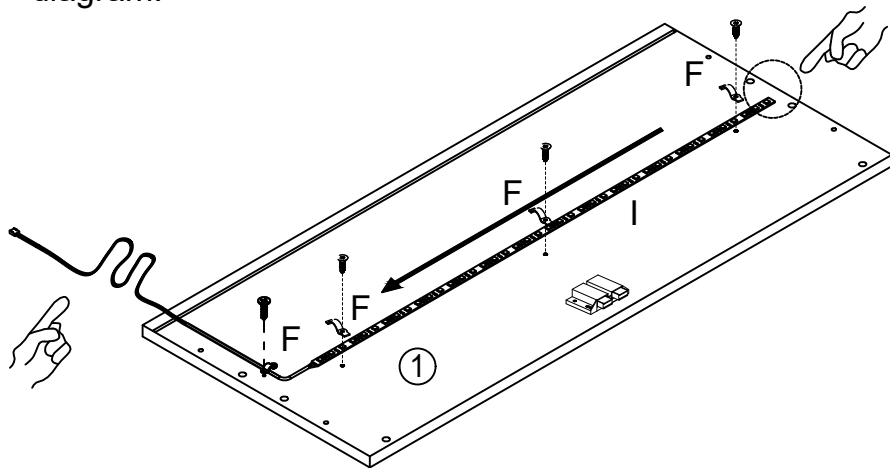

# STEP 4

When installing the LED strip light, follow these steps in sequence:





1. Peel off the protective backing from the adhesive tape on the strip light.
2. Affix the strip to the inner surface of Plate 6, ensuring the total length of the strip is appropriate and maintaining a minimum clearance of 22mm from the left edge.
3. Secure the strip using Screw F at designated points, as illustrated in the accompanying diagram.

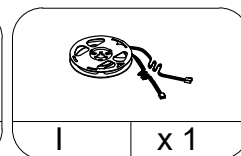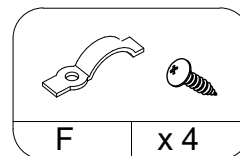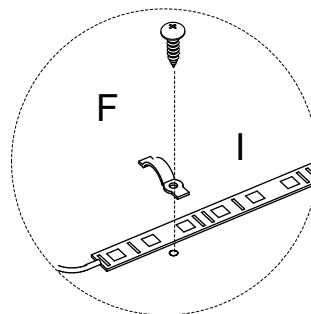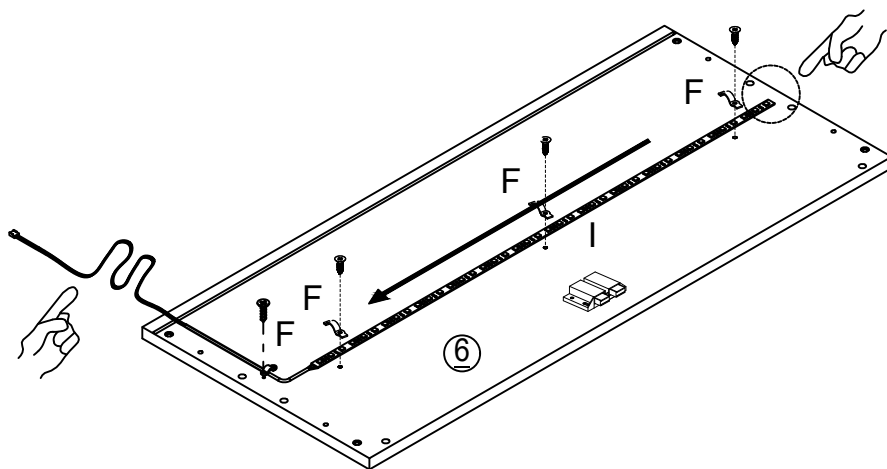



# STEP 5

When installing the LED strip light, follow these steps in sequence:



1. Peel off the protective backing from the adhesive tape on the strip light.
2. Affix the strip to the inner surface of Plate 3, ensuring the total length of the strip is appropriate and maintaining a minimum clearance of 22mm from the left edge.
3. Secure the strip using Screw F at designated points, as illustrated in the accompanying diagram.

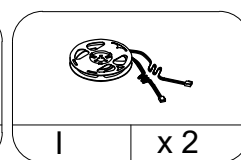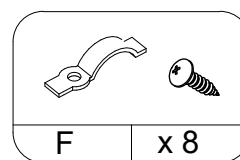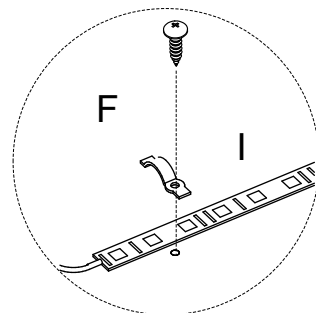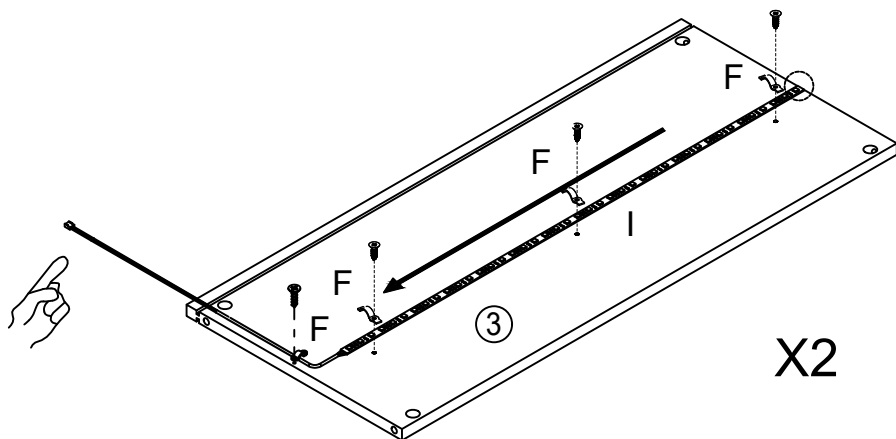



# STEP 6

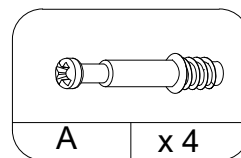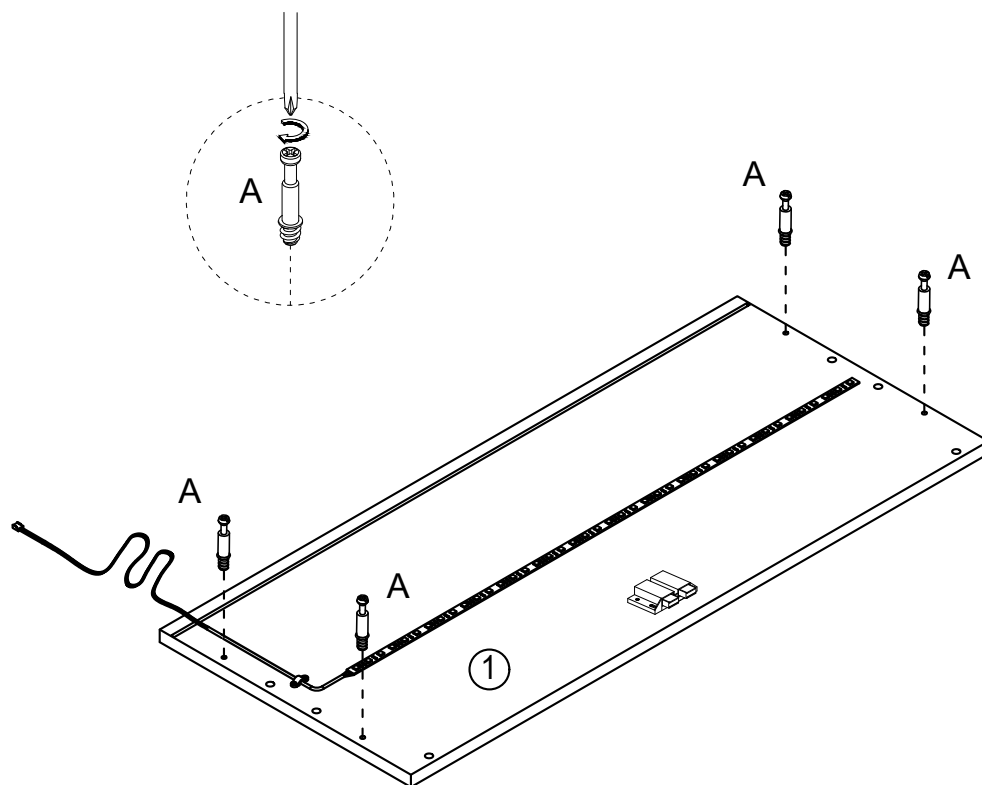


# STEP 7

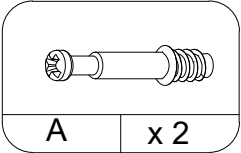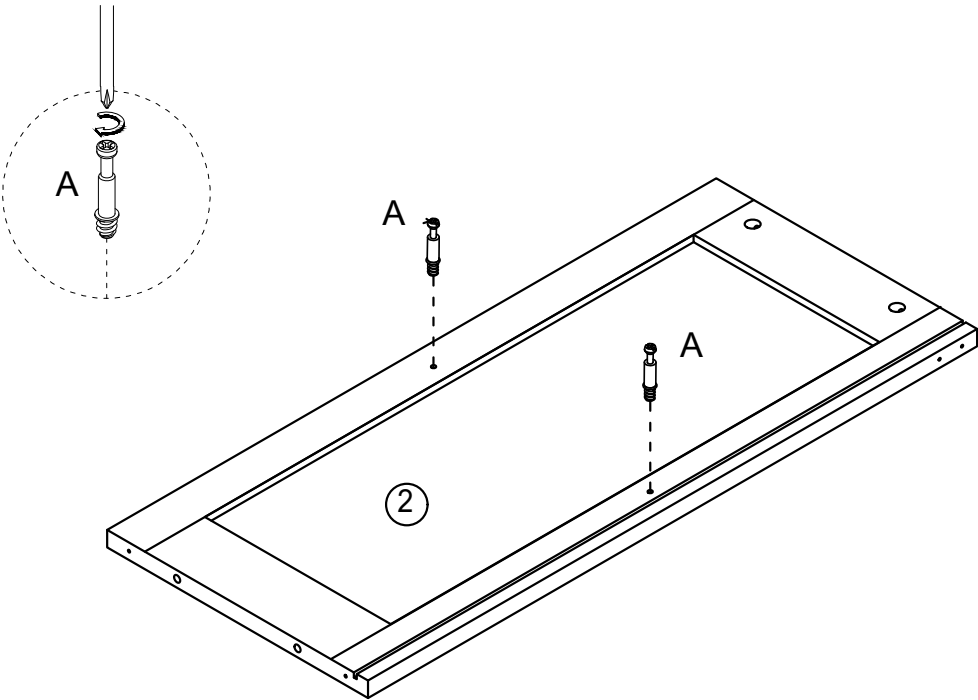


# STEP 8

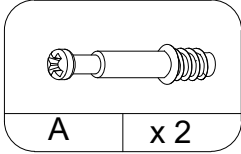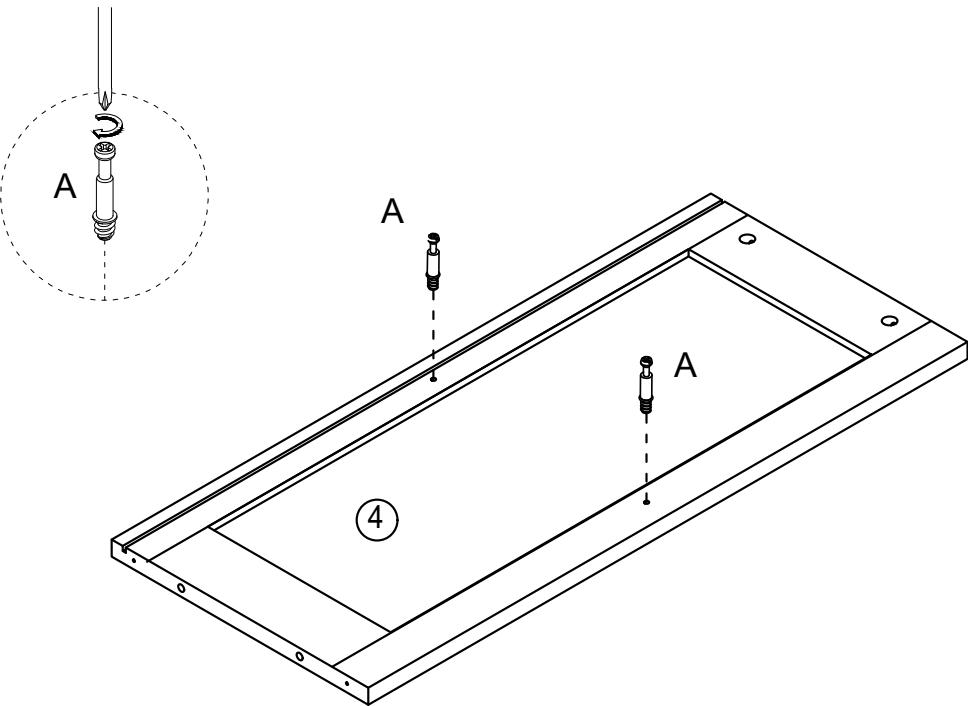


# STEP 9

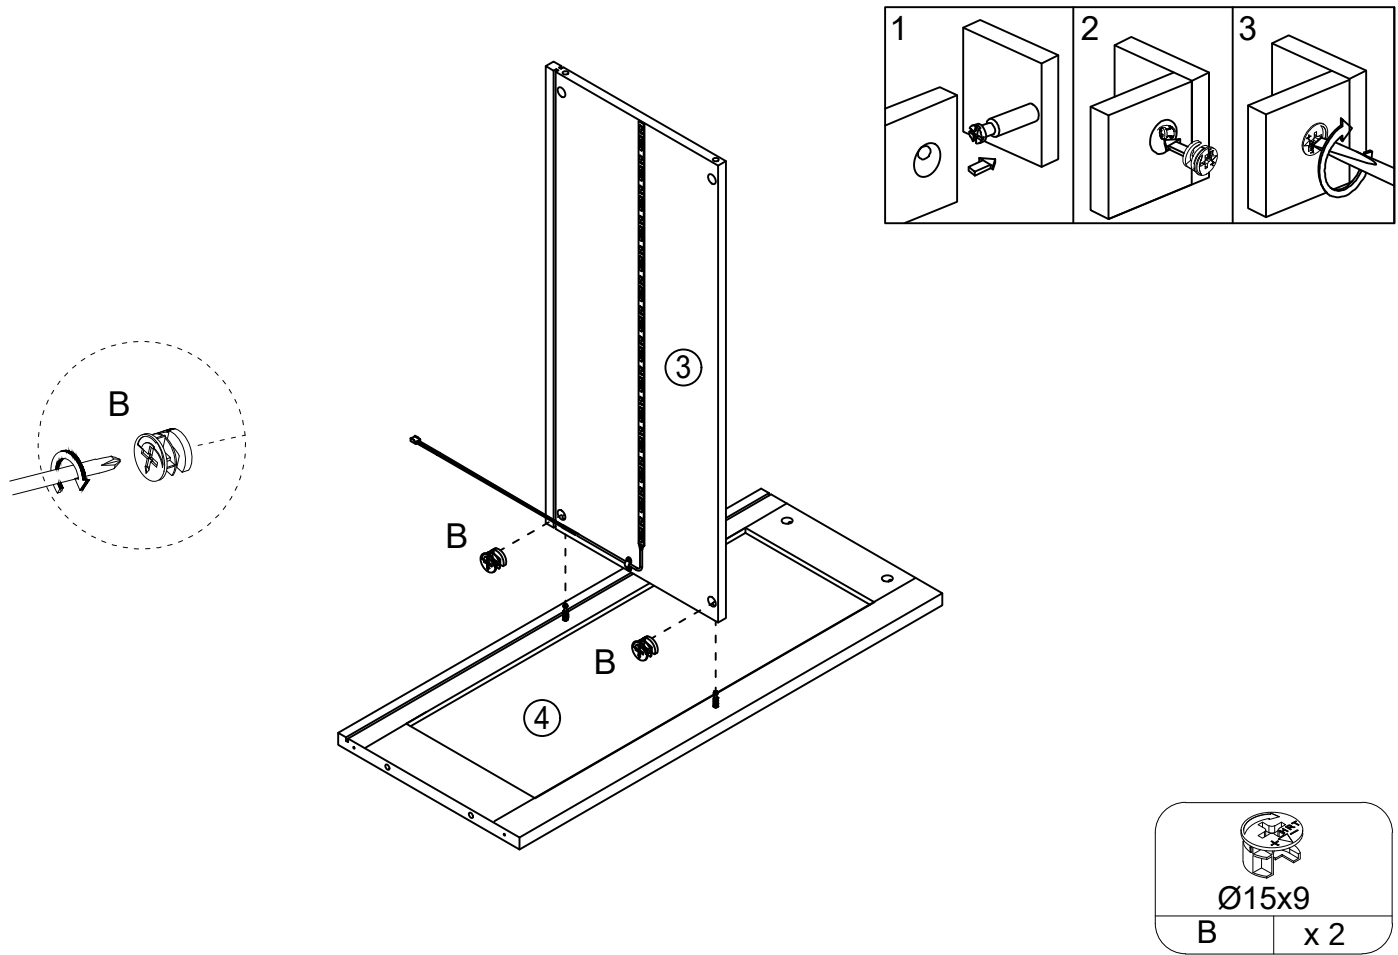



# STEP 10

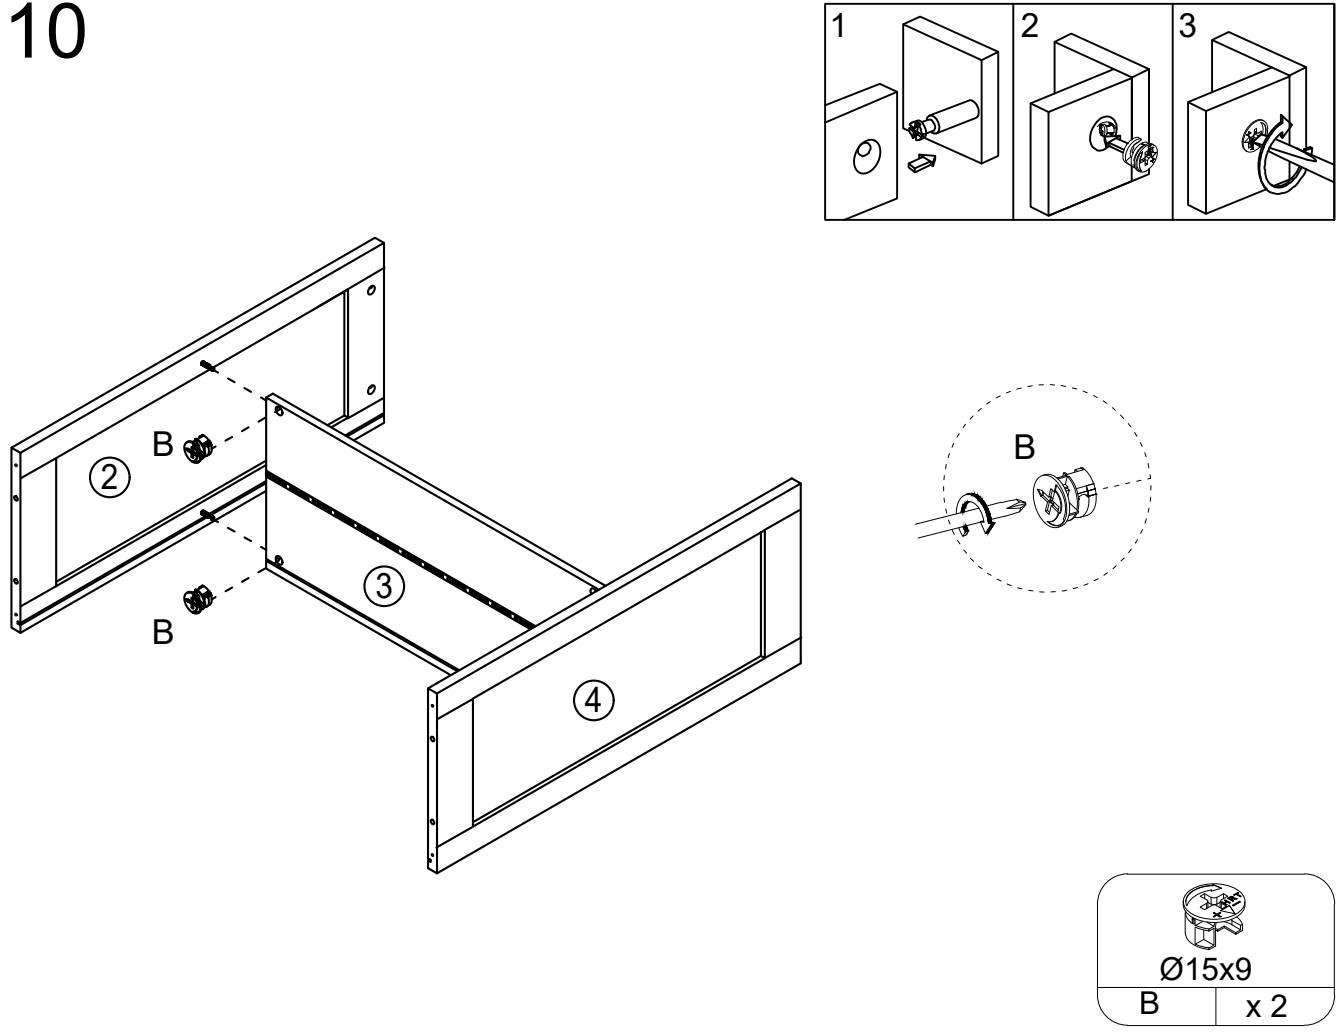

# STEP 11

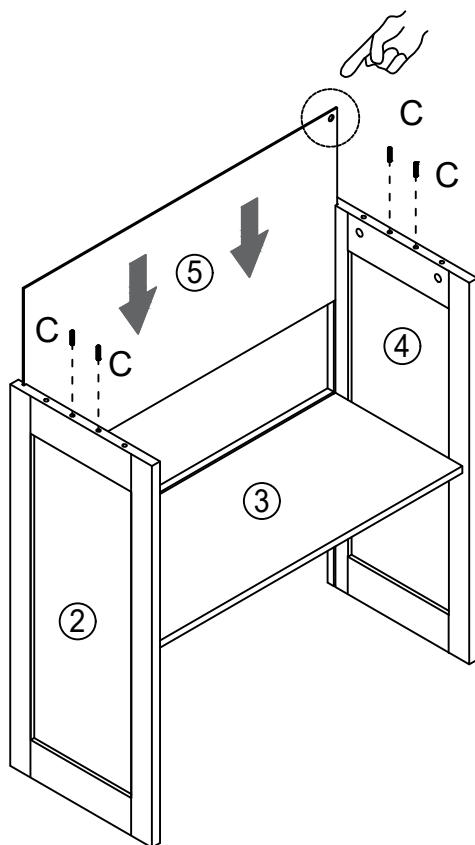





Pay attention to  
hole position .

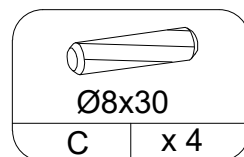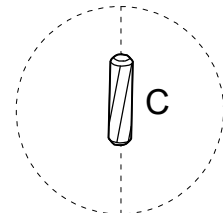

# STEP 12





Let the wire pass  
through this hole.

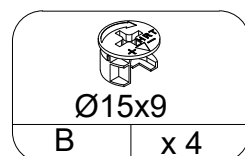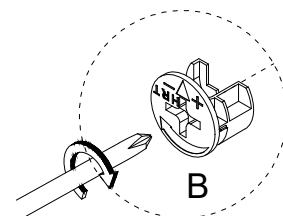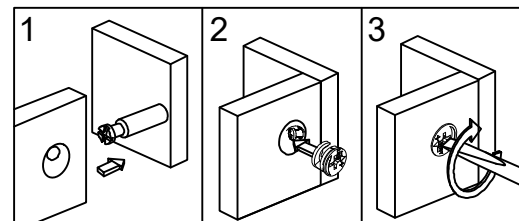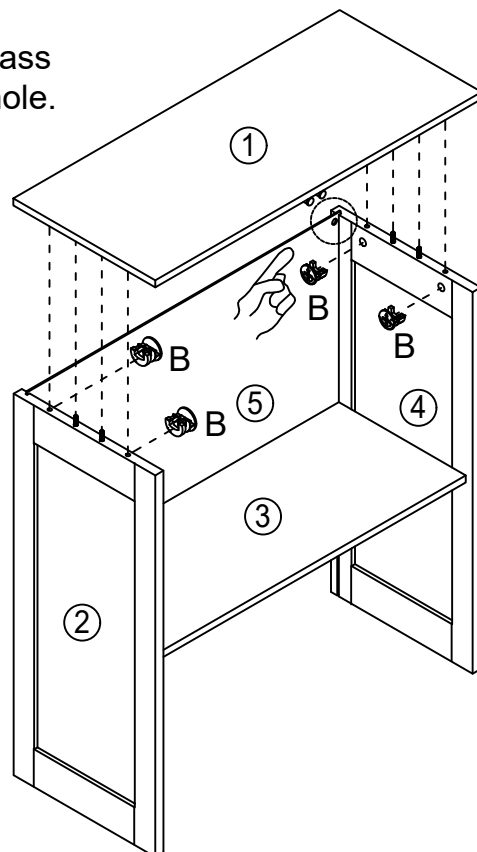

# STEP 13






Pay attention to hole position. then let the wires pass through this hole.

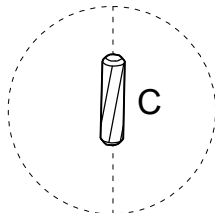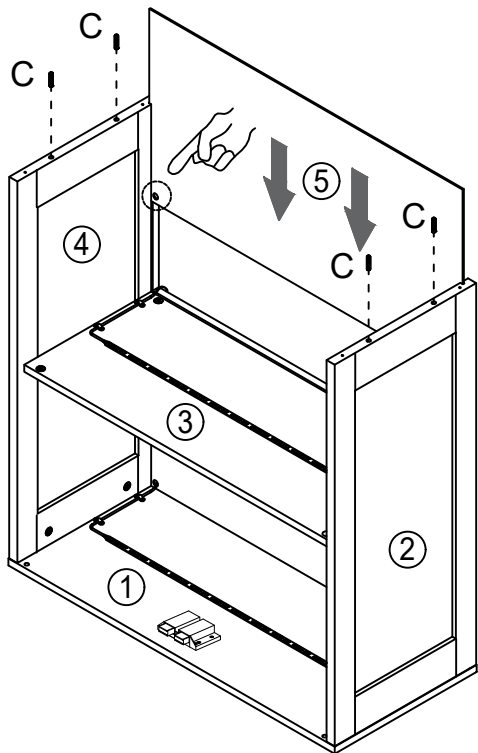




|                                                                                     |     |
|-------------------------------------------------------------------------------------|-----|
|  |     |
| Ø8x30                                                                               |     |
| C                                                                                   | x 4 |

# STEP 14


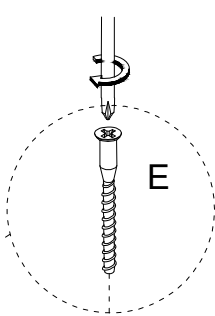
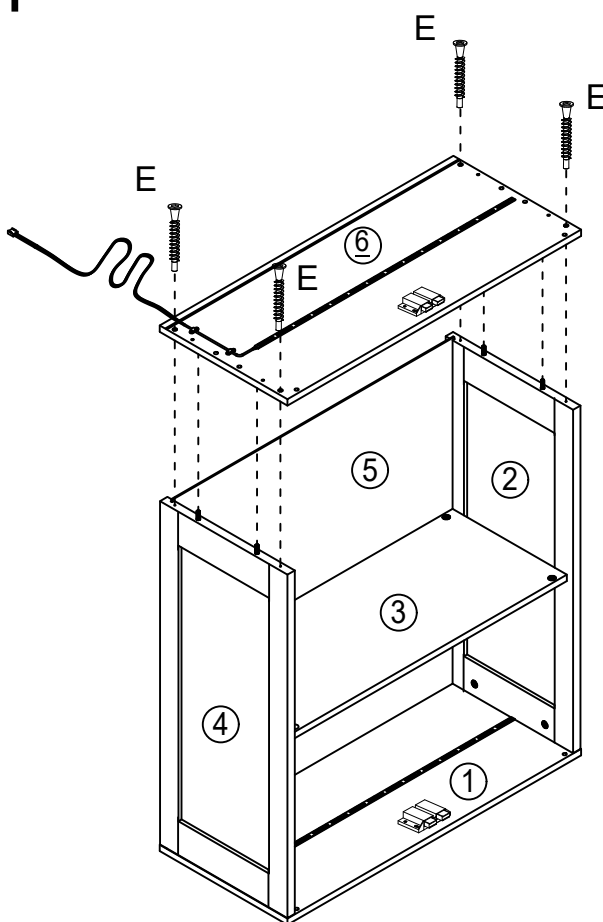


|                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|
|  |     |
| Ø7x48                                                                                 |     |
| E                                                                                     | x 4 |


# STEP 15

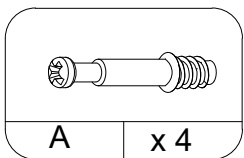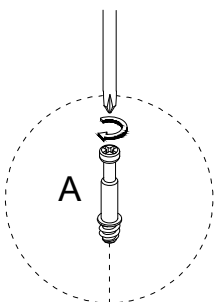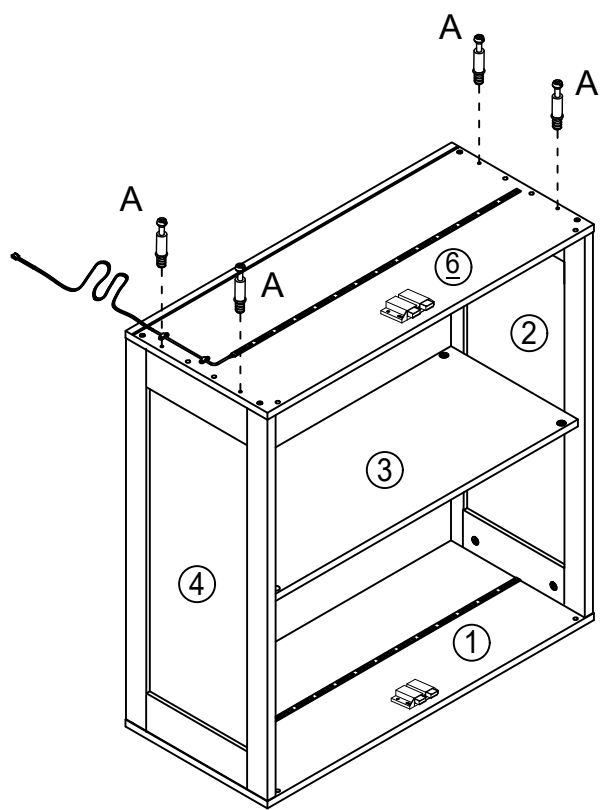


# STEP 16

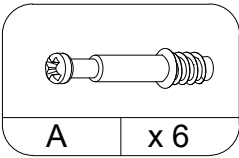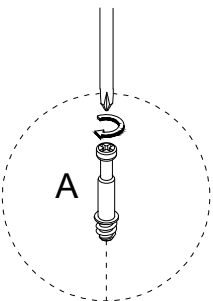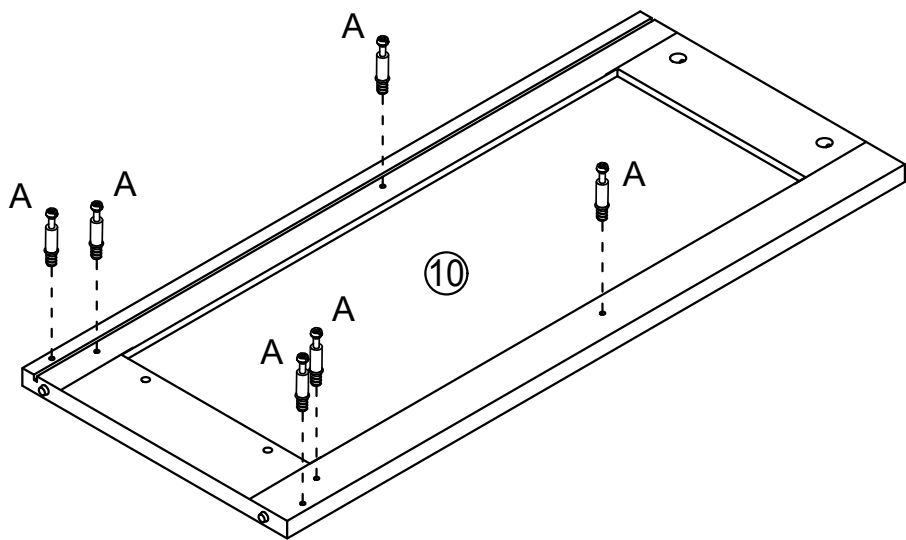




# STEP 17

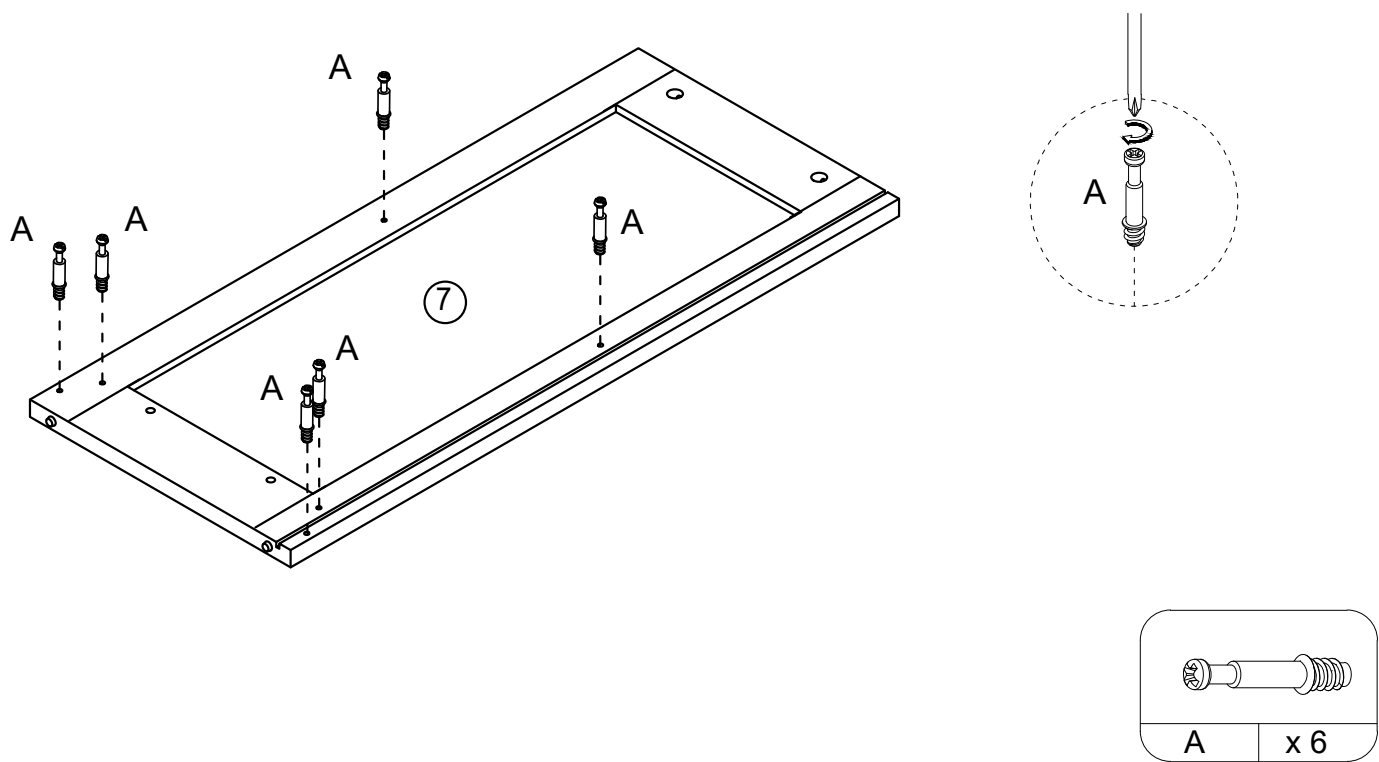





# STEP 18

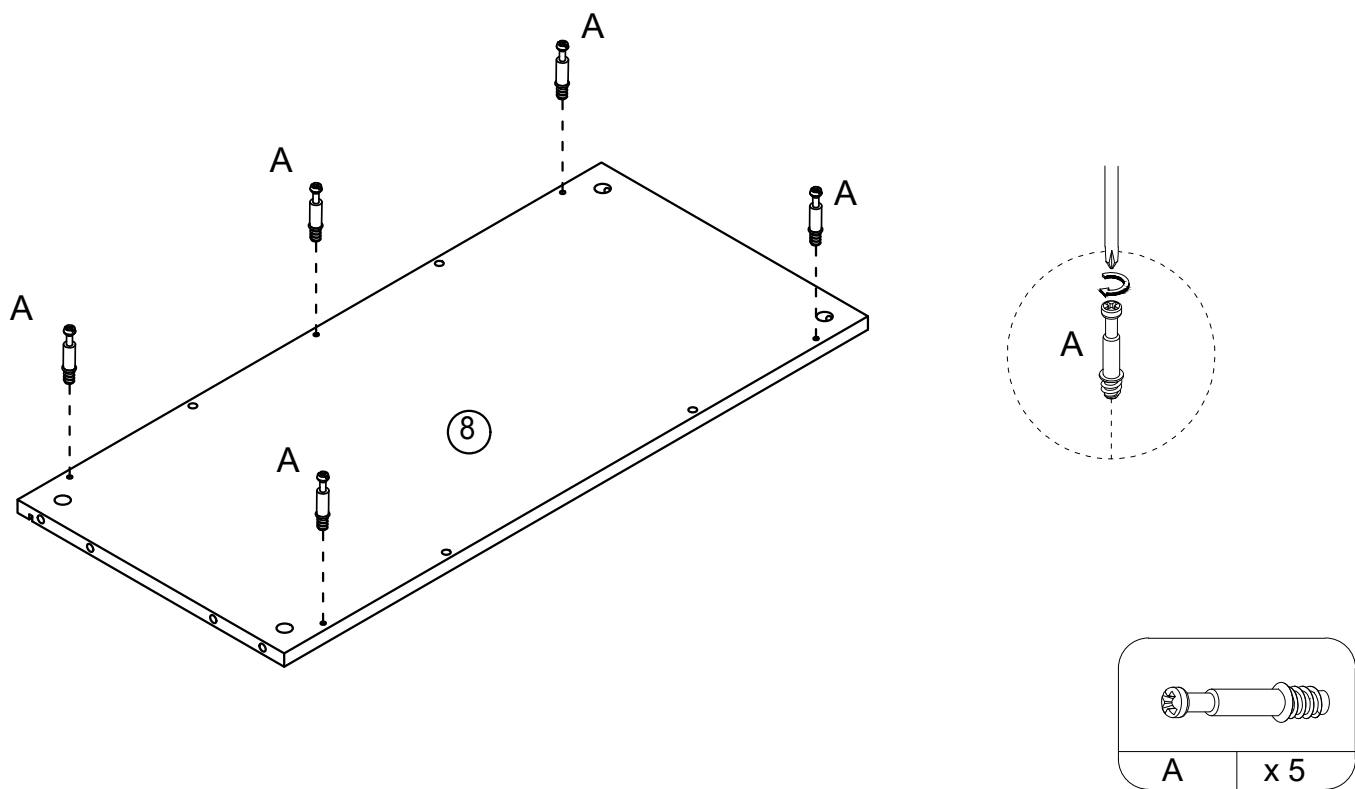






# STEP 19

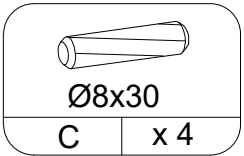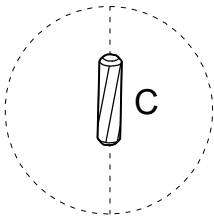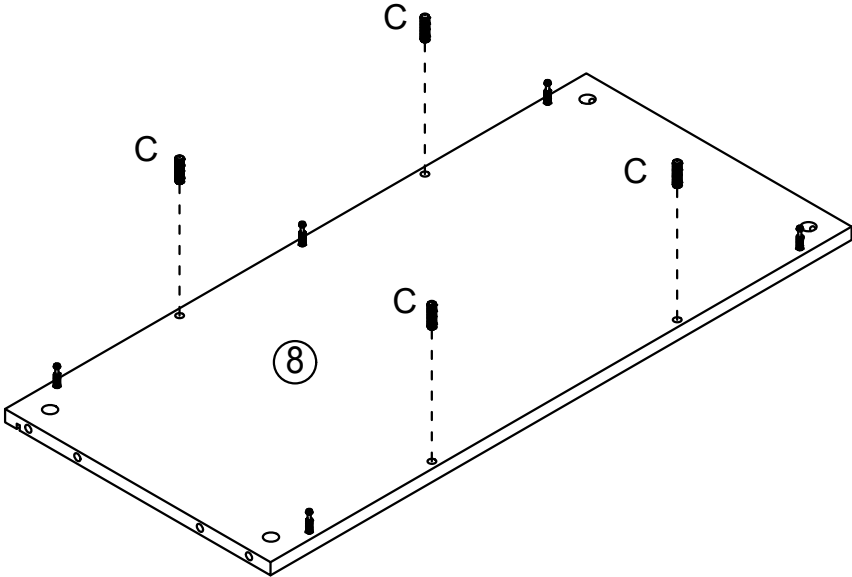





# STEP 20

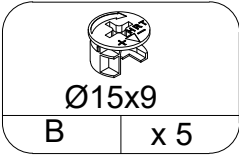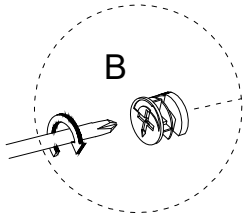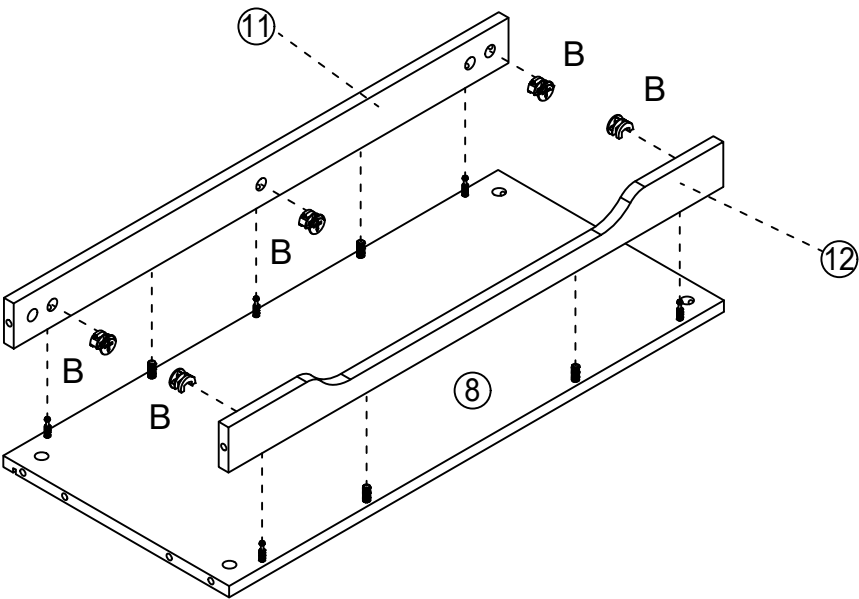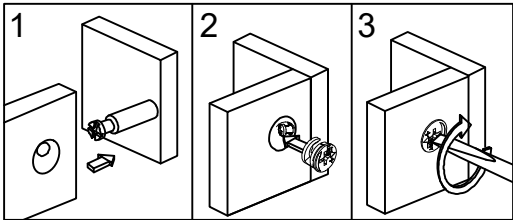

# STEP 21

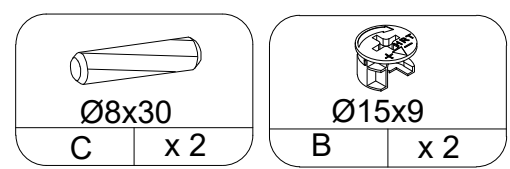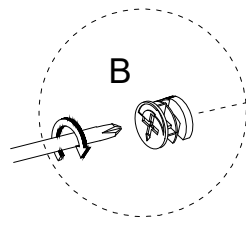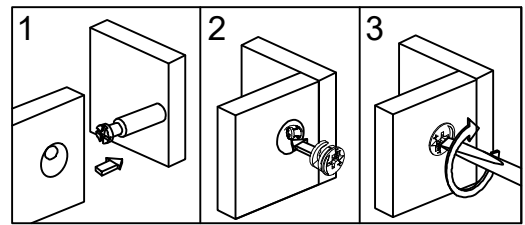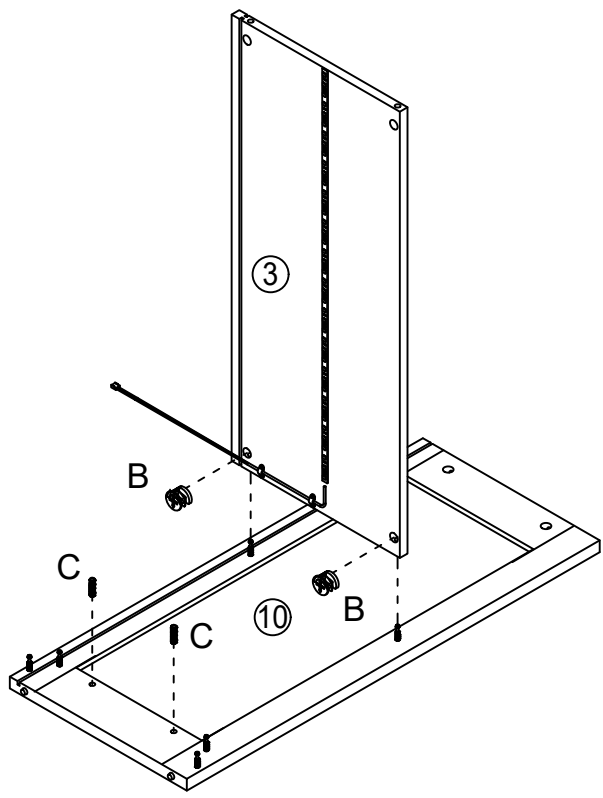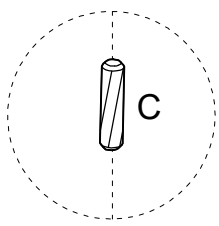




# STEP 22

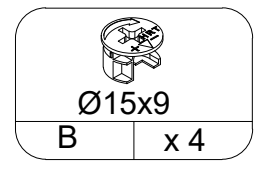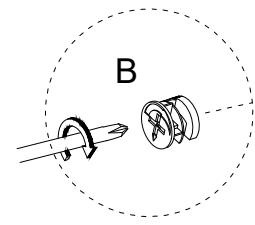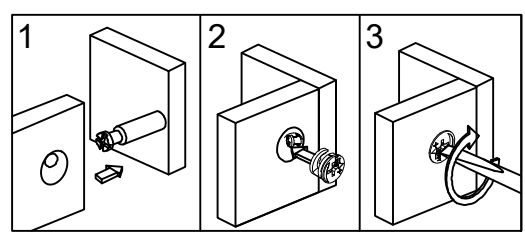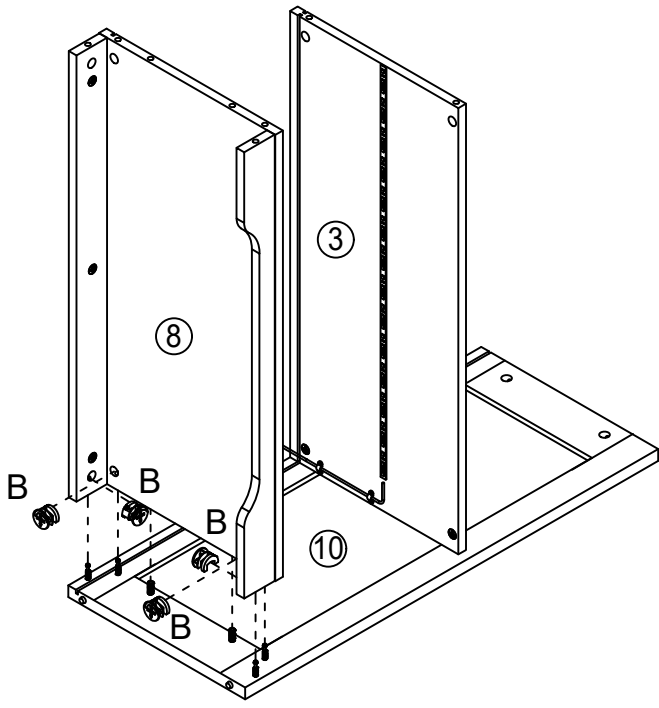





# STEP 23




Pay attention to hole position. then let the wires pass through this hole.

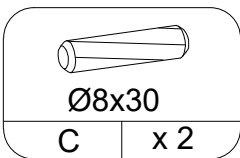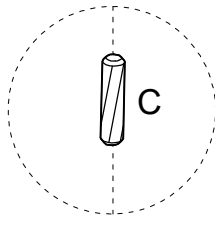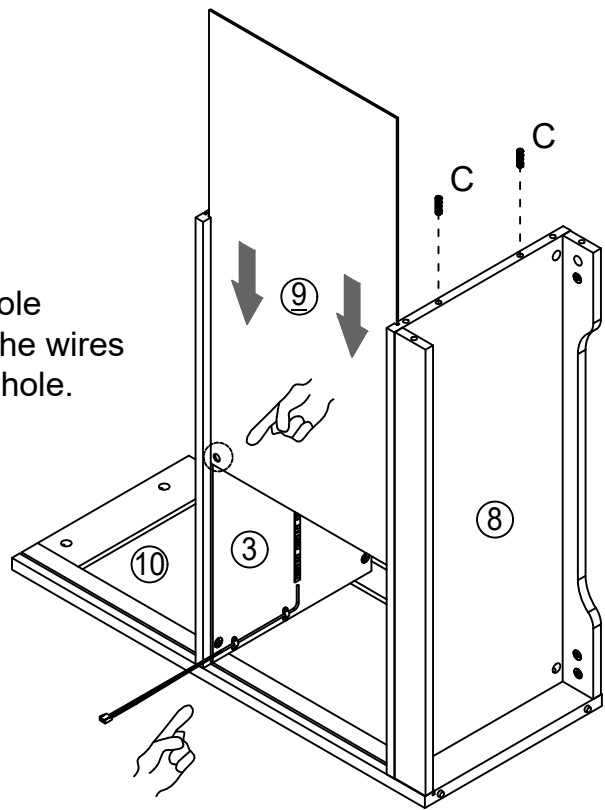

# STEP 24

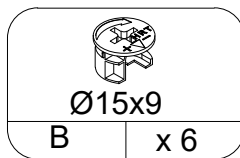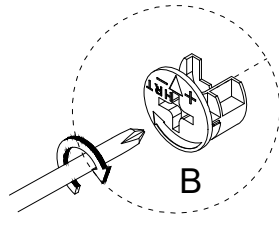
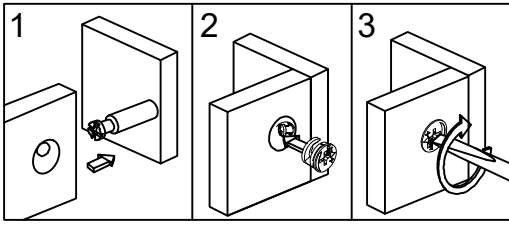
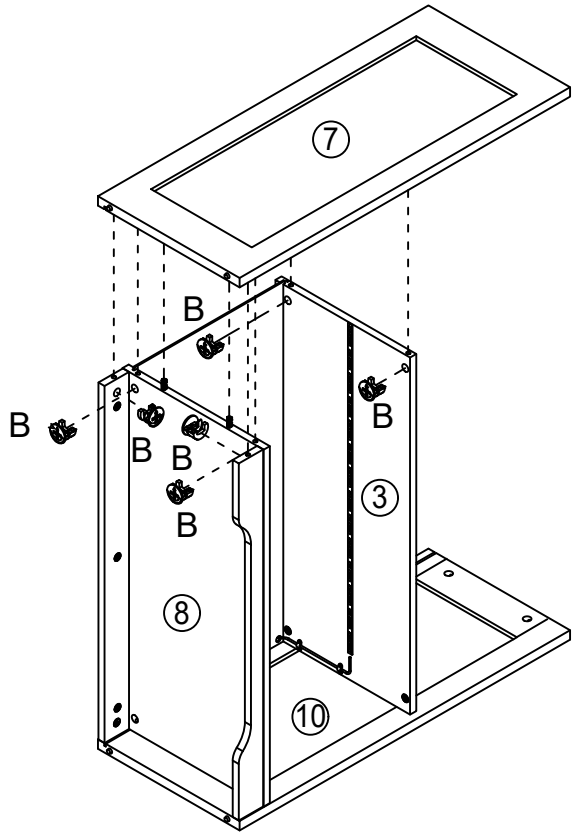


# STEP 25

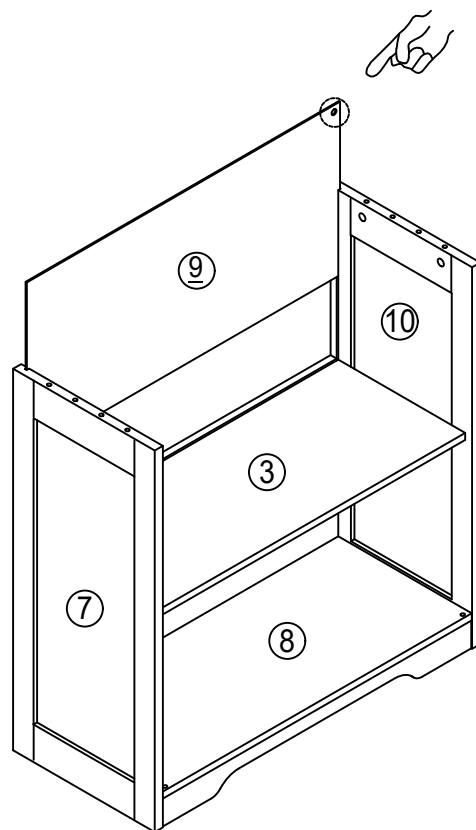

Pay attention to  
hole position .




# STEP 26

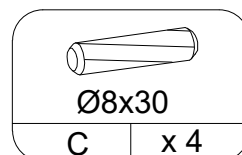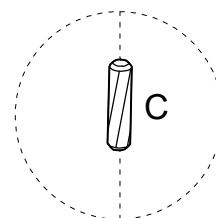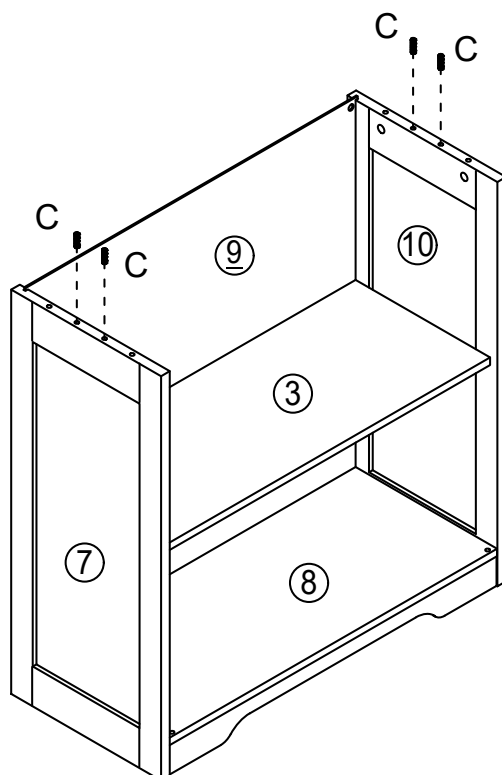






# STEP 27



For this step, you  
need one helper.

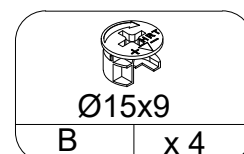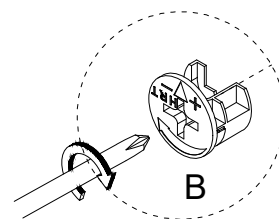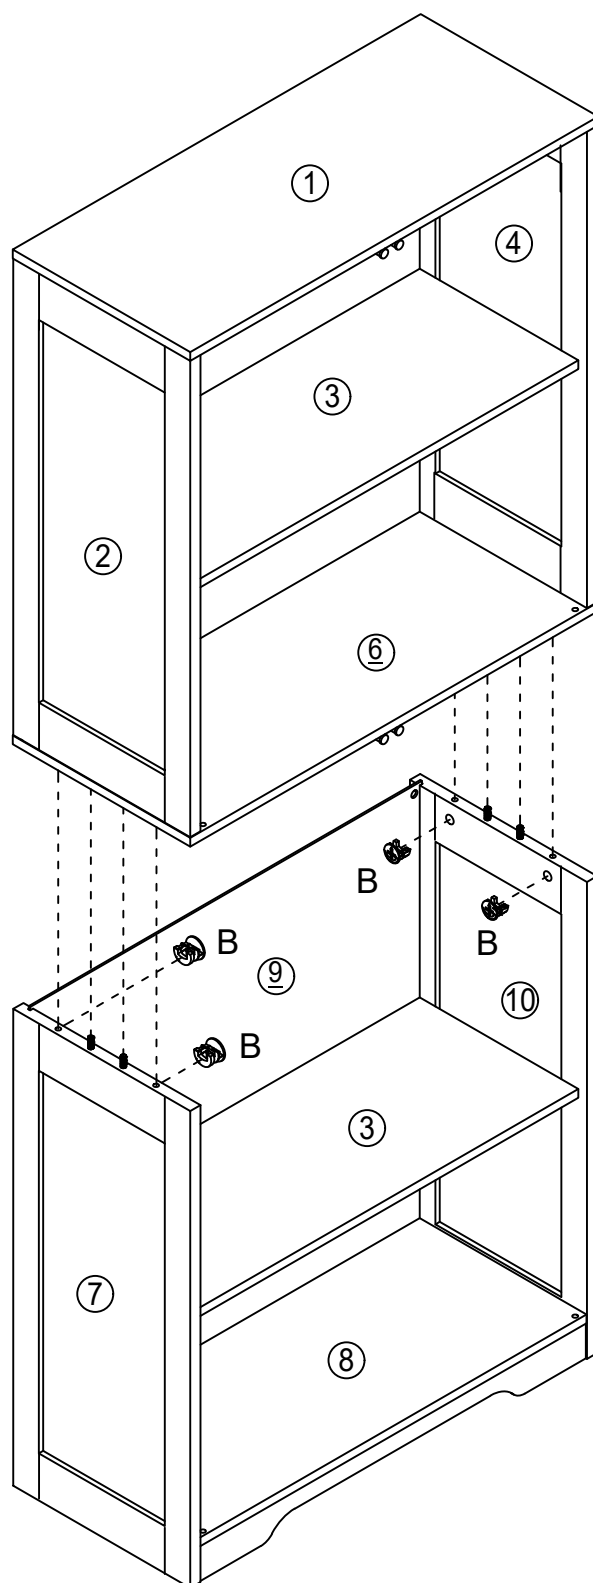


# STEP 28

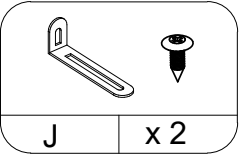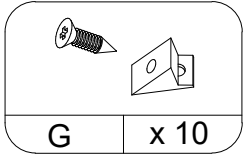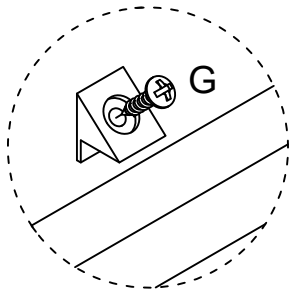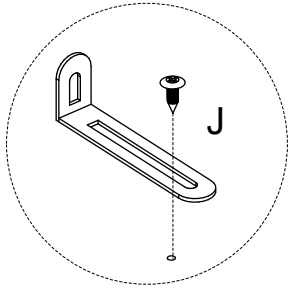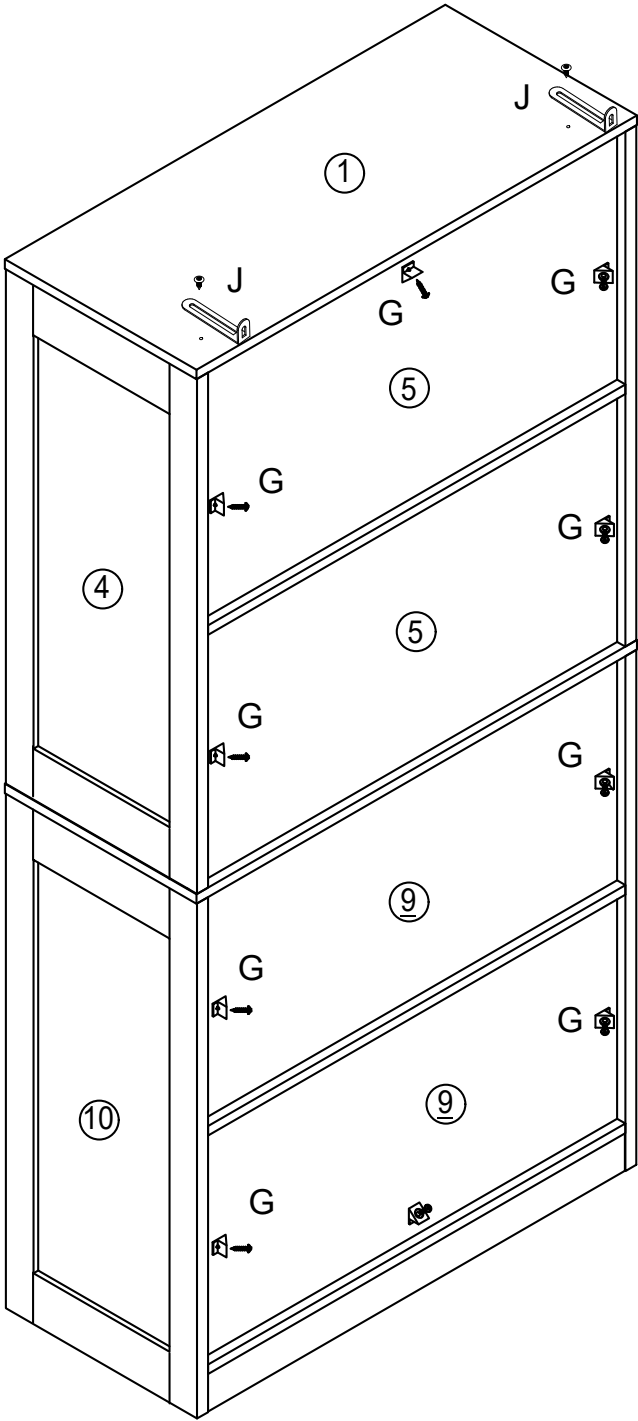


# STEP 29




First, perform steps 1 to 3, then install tempered glass, and finally perform steps 4 to 5.

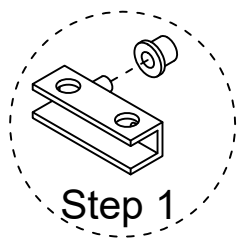

Step 1

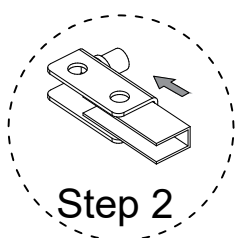


Step 2

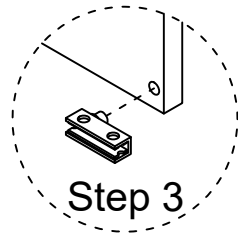


Step 3




Please wear gloves while operating

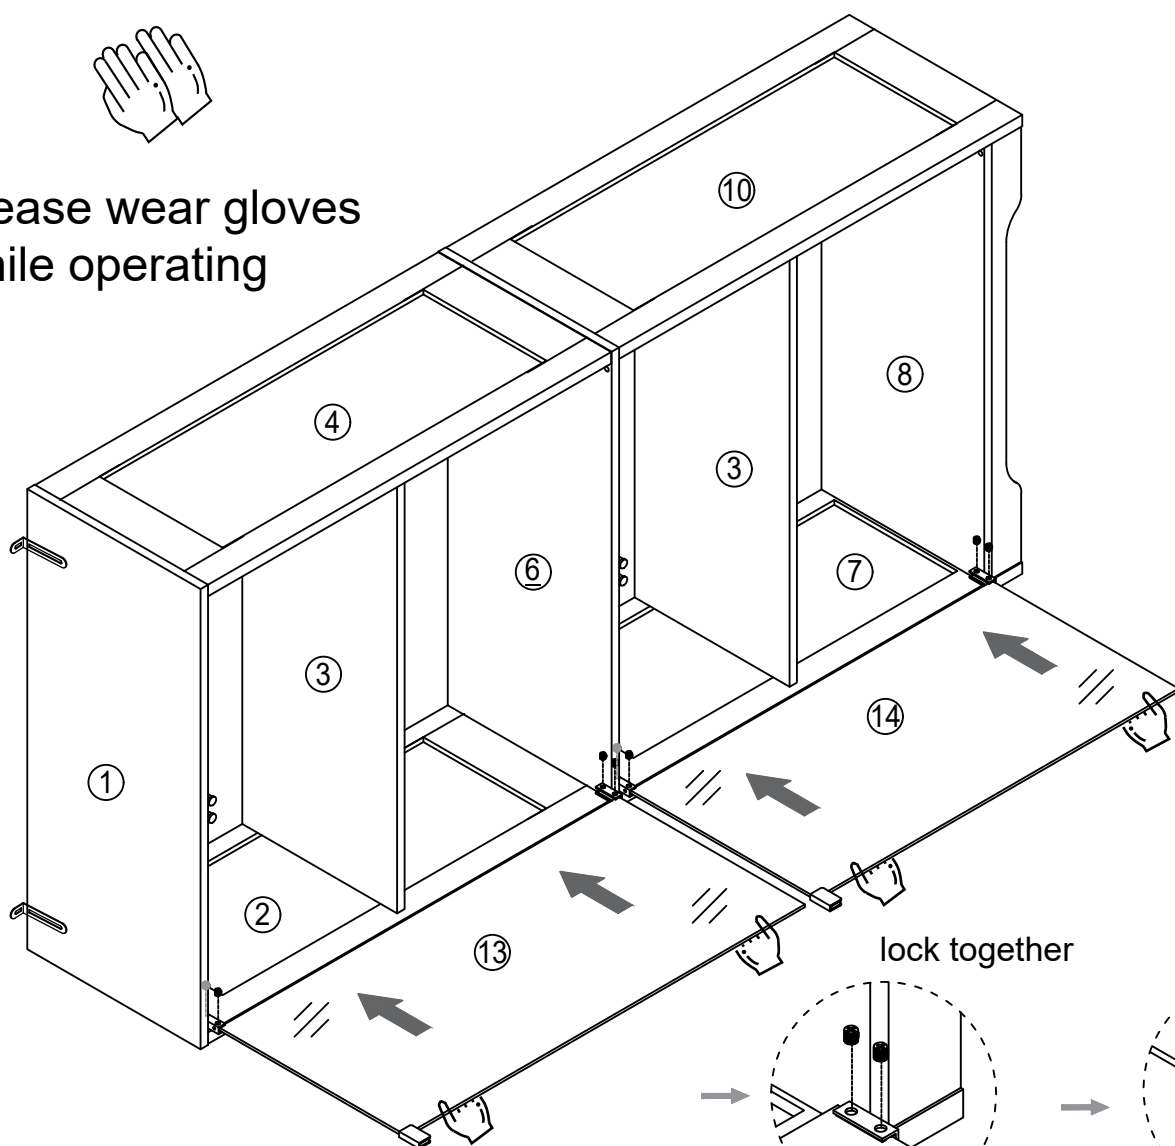

lock together

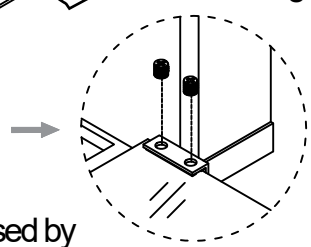


Step 4

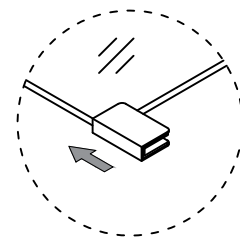


Step 5

The glass is recessed by about 1-2mm

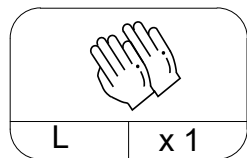

L x 1




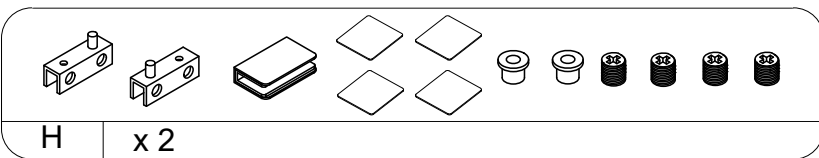


H x 2



# STEP 30





First, perform steps 1 to 3, then install tempered glass, and finally perform steps 4 to 5.

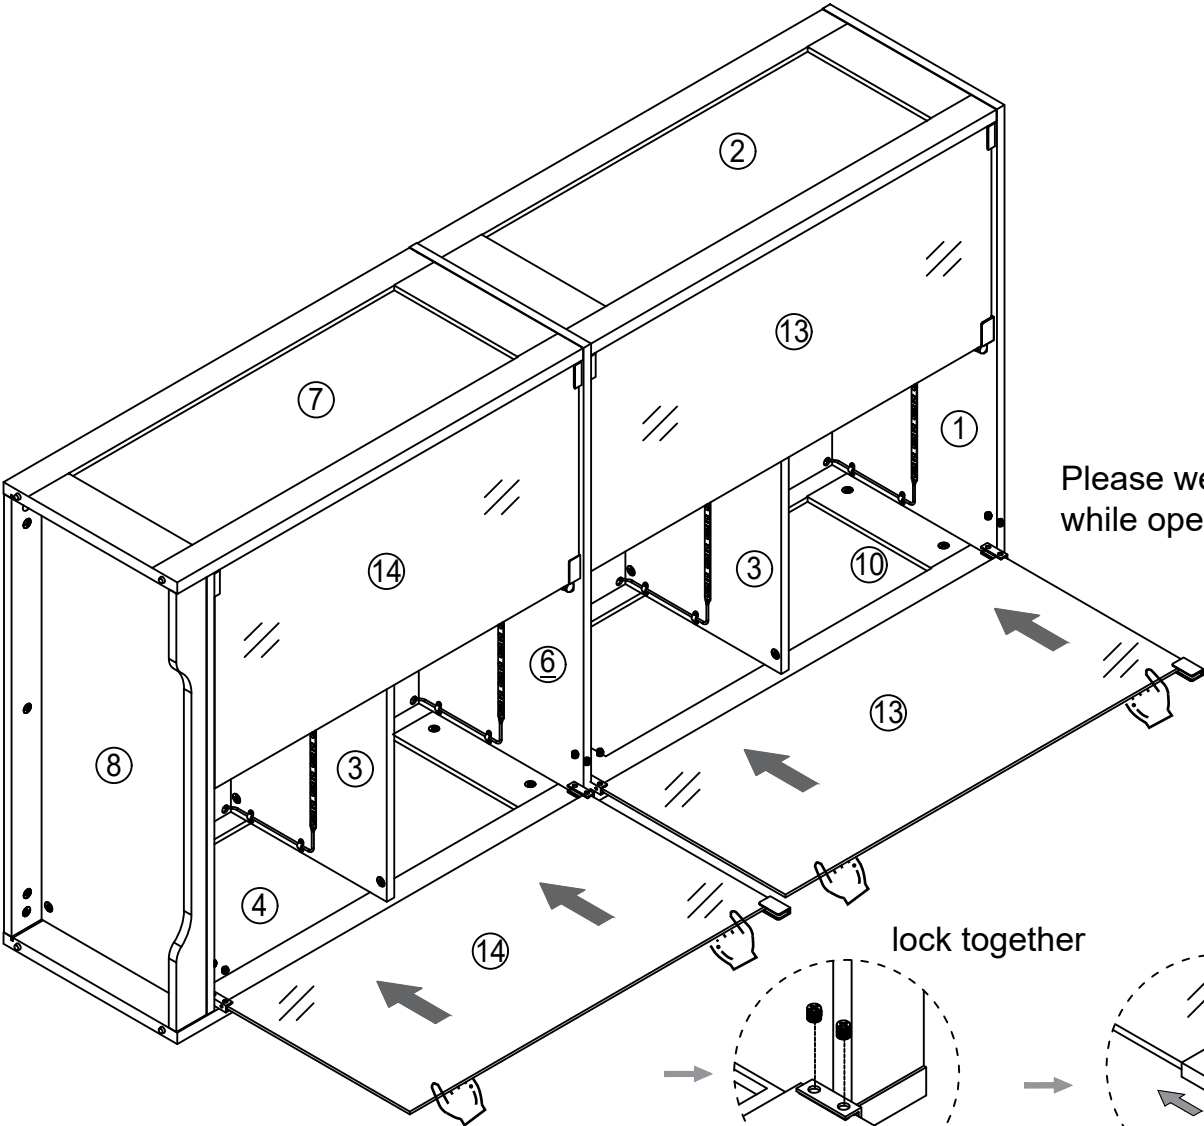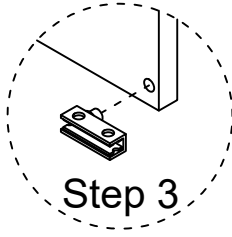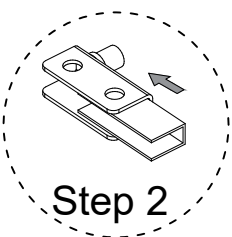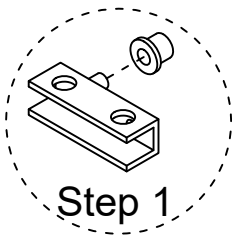



Please wear gloves while operating

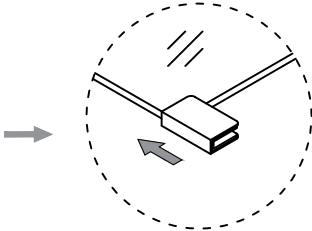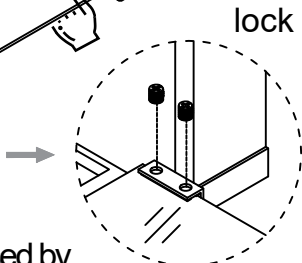


The glass is recessed by about 1-2mm

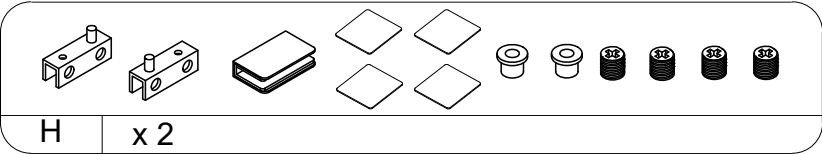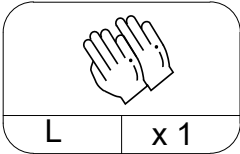

# STEP 31

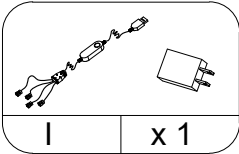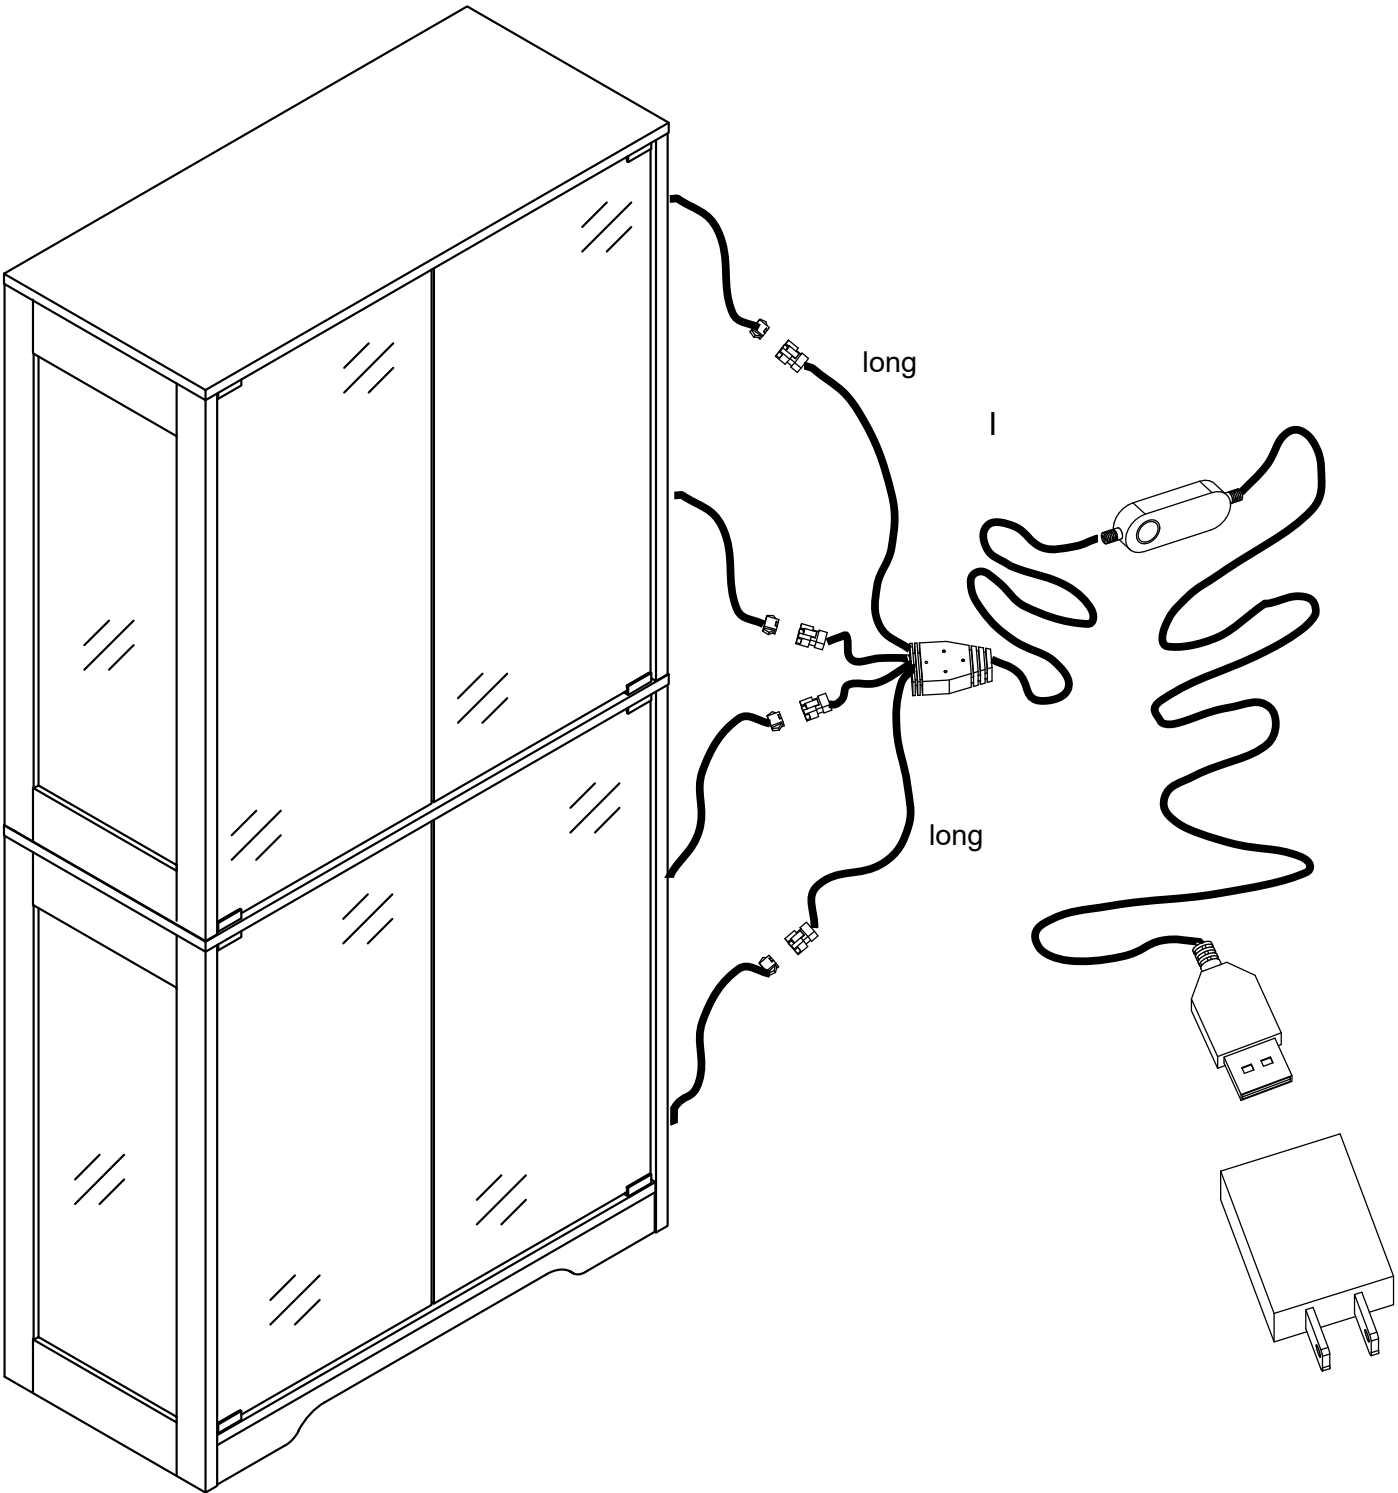

# STEP 32

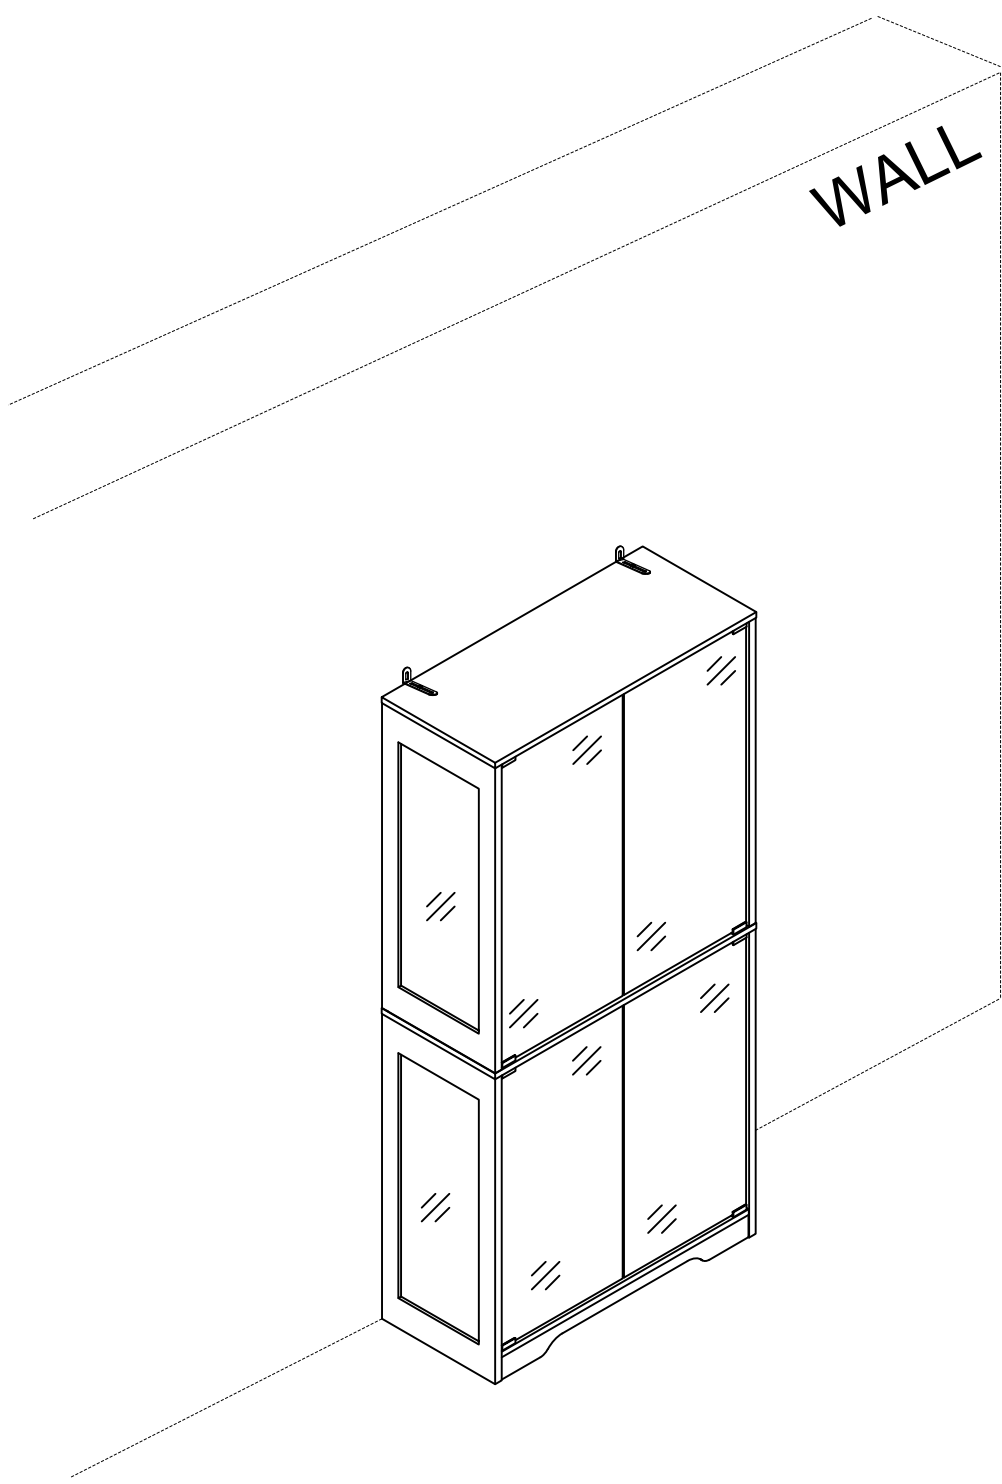

**WALL**

Mark the hole drilling location

**I**

**WALL**


Drill a hole

**II**

**WALL**

Use a hammer to close anchor

**J**

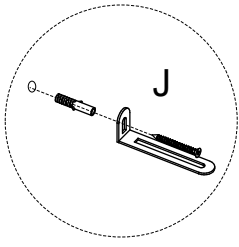


|                                                                                       |
|---------------------------------------------------------------------------------------|
|  |
| <b>J</b> <b>x 2</b>                                                                   |

# STEP 33

## LED light

You need to install the battery before using the remote control  
Please purchase the appropriate battery model yourself.  
Battery model:CR2025

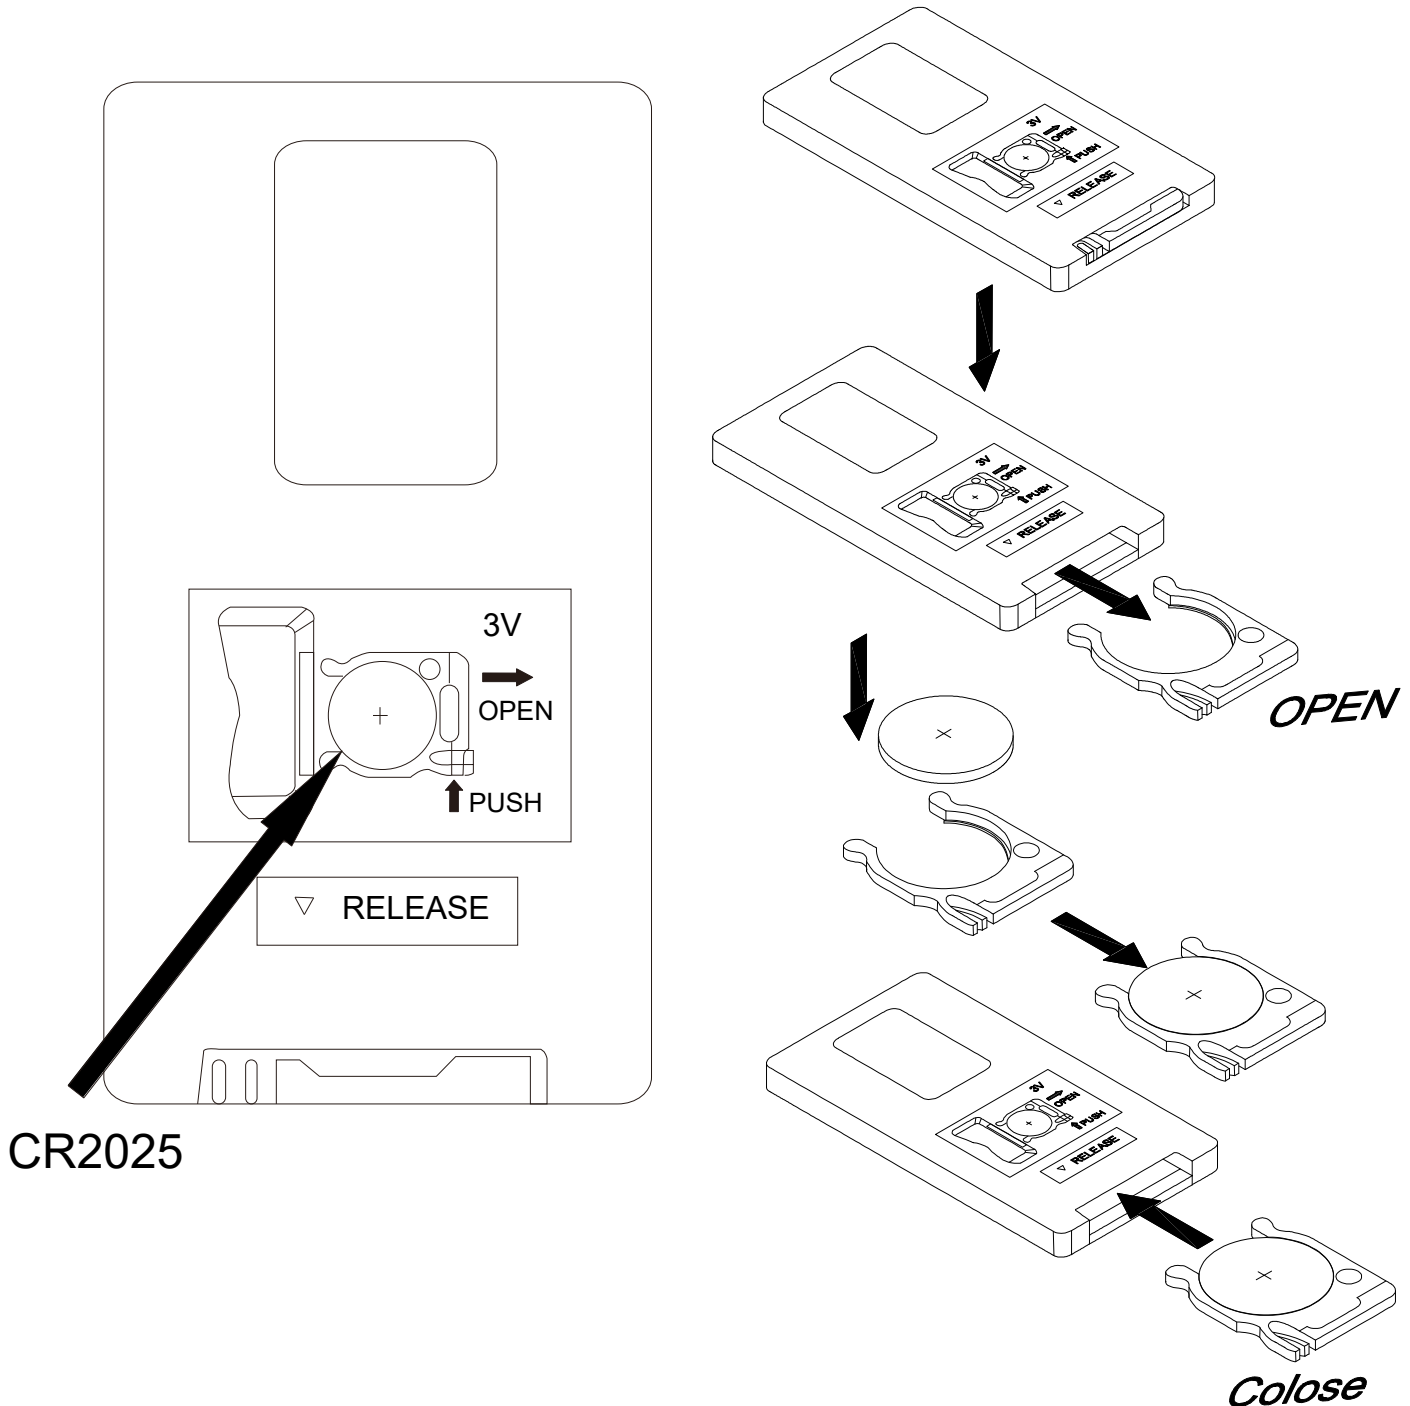

If the lights are not working properly, please check the following:

1. Please check the remote control sensor cover,
2. Don't use the remote too far from the receiver, may sure you have a clear line of sight.

# FURNITURE CARE AND MAINTENANCE

## Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



### MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



### CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning