



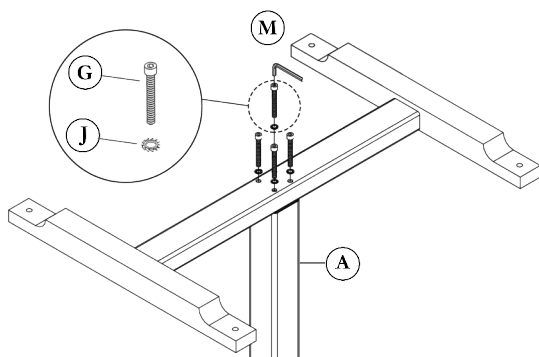

STEP 5.

Align holes on **BASE (D)** with **COLUMN (A)** making sure holes for feet face upward.

Attach with **LONG BOLTS (G)** through **TOOTH WASHERS (J)** using **5 MM HEX KEY (M)**

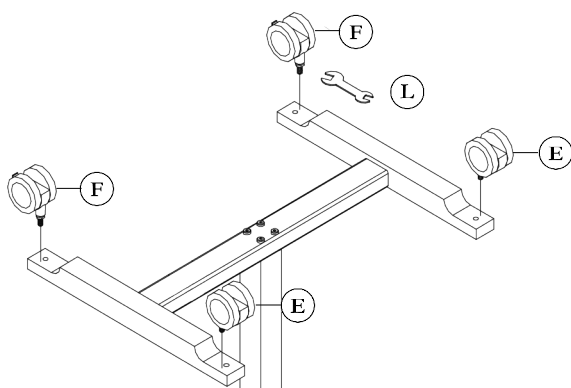

STEP 6.


Install **LOCKING CASTERS (F)** to the open end of **BASE (D)** with **WRENCH (L)**.

Repeat for **CASTERS (E)** on the opposite side.

Congratulations! Enjoy your new Mobile Desk Cart!

airLIFT[®]
by seville classics[®]

24.5" Pneumatic Sit-Stand Mobile Laptop Desk Cart

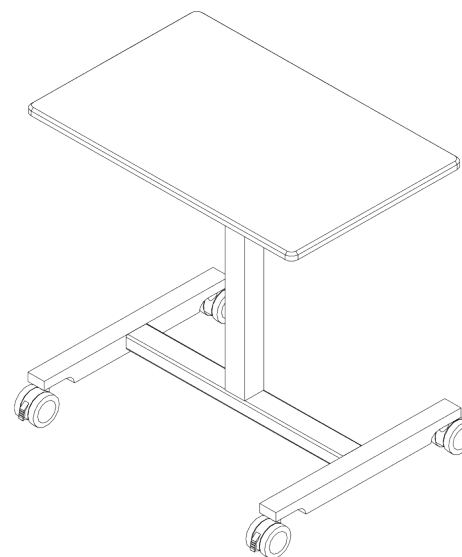

Model: OFF42630/1
OFF65945/6B

Please contact Seville Classics for help with assembly and to report any damaged or missing components.

Phone: 1 (800) 323-5565

Email: Support@SevilleClassics.com

Homepage: www.SevilleClassics.com

Use Instructions

- Roll desk into desired position.
- Lock casters to prevent the table from rolling.
- To lift, pull up on the adjustment lever.
- To lower, pull up on the adjustment lever while pressing down on the table top.
- Release adjustment lever to lock in height.

Safety

Do not tip the desk over or place upside down.
Do not place more than 35 lbs. on the desk top.

Customer Service Information

Telephone: (800) 323-5565

Fax: (310) 533-3899


Hours: 8:30 AM – 4:30 PM (PST)

Email: Support@SevilleClassics.com


Homepage: www.SevilleClassics.com

Parts List


A. Column (1)

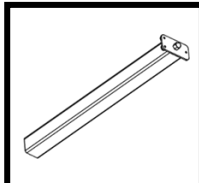


H. Medium bolt (11)

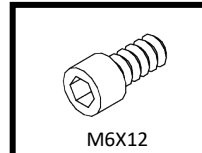


B. Mount (1)

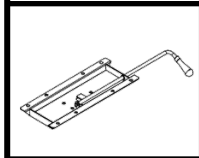


I. Screw (2)

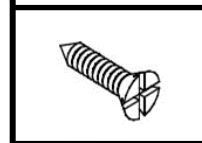


C. Top (1)

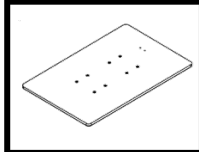


J. Tooth washer (4)

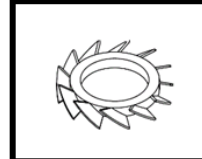


D. Base (1)

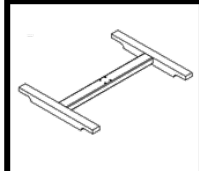


K. Clip (1)

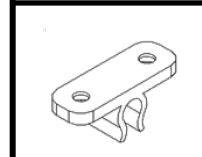


E. Caster (2)

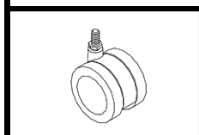

L. Wrench (1)

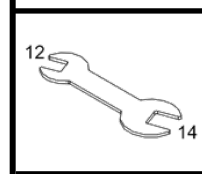


F. Locking caster (2)

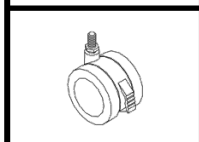

M. 5mm Hex key (1)




G. Long Bolt (4)

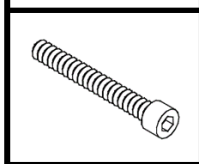


Please make sure you have all the parts on this list.

If you're missing parts, contact us for replacements at (800) 323-5565 or send an email to Support@SevilleClassics.com

Assembly Instructions

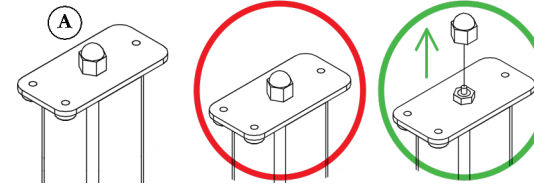


STEP 1.
Remove cap from **COLUMN (A)**.

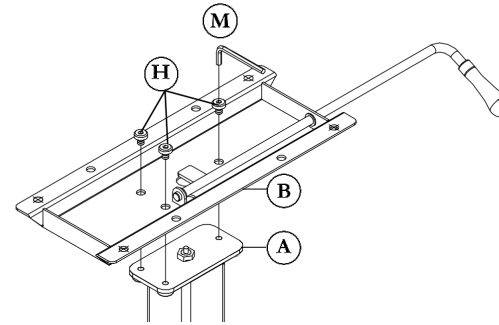


STEP 2.
Align holes on **MOUNT (B)** with top of **COLUMN (A)**.

Attach with **MEDIUM BOLTS (H)** using **5 MM HEX KEY (M)**.

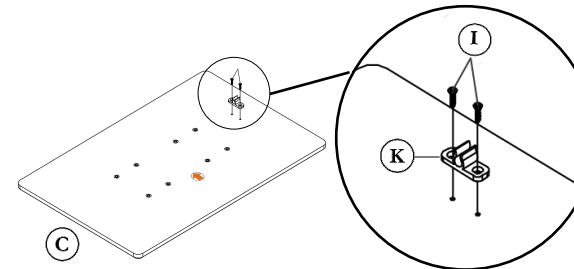

STEP 3.
Attach **CLIP (K)** to underside of **TOP (A)** with **SCREWS (I)**.

TIP! Place desk top on soft surface like carpet when assembling to prevent damage to the surface.

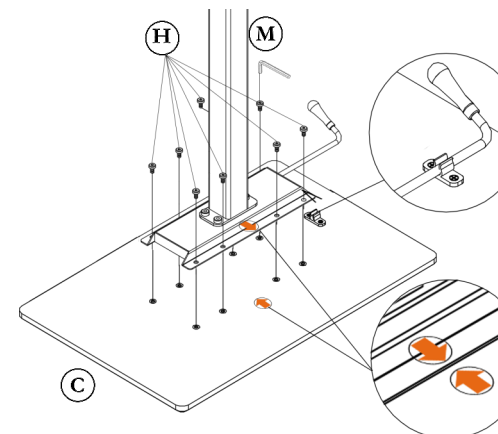

STEP 4.
Align column assembly with holes on rear of **TOP (C)**.

IMPORTANT: Make sure the orange arrows match, and the lever fits into the **CLIP (K)**.

Attach with **MEDIUM BOLTS (H)** using **5 MM HEX KEY (M)**.

