

DESK

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


















Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

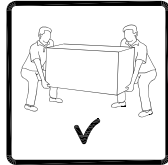


ASSEMBLY TIME PER UNIT: 60 MINUTES

PARTS IDENTIFICATION:

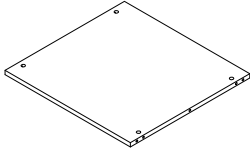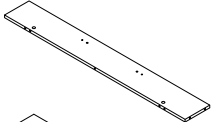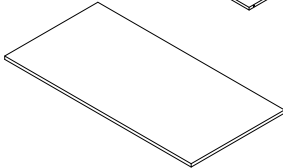(A) LEFT SIDE PANEL		1 PC	(J) DRAWER FRONT PANEL		2 PCS
(B) RIGHT SIDE PANEL		1 PC	(K) DRAWER BACK PANEL		2 PCS
(C) LEFT DIVIDER PANEL		1 PC	(L) DRAWER LEFT SIDE PANEL		2 PCS
(D) RIGHT DIVIDER PANEL		1 PC	(M) DRAWER RIGHT SIDE PANEL		2 PCS
(E) LEFT BOTTOM PANEL		1 PC	(N) DRAWER BOTTOM PANEL		2 PCS
(F) MIDDLE BOTTOM PANEL		1 PC	(O) MIDDLE DRAWER FRONT PANEL		1 PC
(G) RIGHT BOTTOM PANEL		1 PC	(P) MIDDLE DRAWER BACK PANEL		1 PC
(H) BACK PANEL		1 PC	(Q) MIDDLE DRAWER LEFT SIDE PANEL		1 PC
(I) TOP PANEL		1 PC	(R) MIDDLE DRAWER RIGHT SIDE PANEL		1 PC


PARTS IDENTIFICATION:

(S) MIDDLE DRAWER BOTTOM PANEL




1 PC

(U) CROSS BAR

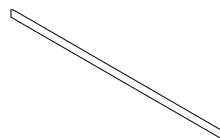

1 PC

(T) METAL FRAME

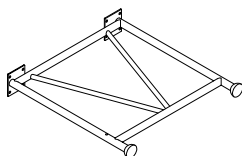








2 PCS

Z							
HARDWARE PACKAGE							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	GLIDES SCREW ø3x12mm		36 PCS
2	WOODEN DOWEL ø8x30mm		45 PCS	9	KNOB		3 PCS
3	CAM BOLT ø7x35.5mm		20 PCS	10	KNOB BOLT ø4x28mm		3 PCS
4	CAM LOCK ø15x12mm		20 PCS	11	BOLT M6x20mm		16 PCS
5	SCREW ø4.5x42mm		16 PCS	12	BOLT M6x44mm		2 PCS
6	DRAWER SCREW ø4.3x35mm		12 PCS	13	ALLEN WRENCH		1 PC
7	GLIDES L = 350mm		3SET	14	STICKER ø20mm		4 PCS



Z7,Z9,Z10 not included in blister packaging.

ASSEMBLY INSTRUCTION


STEP 1 :

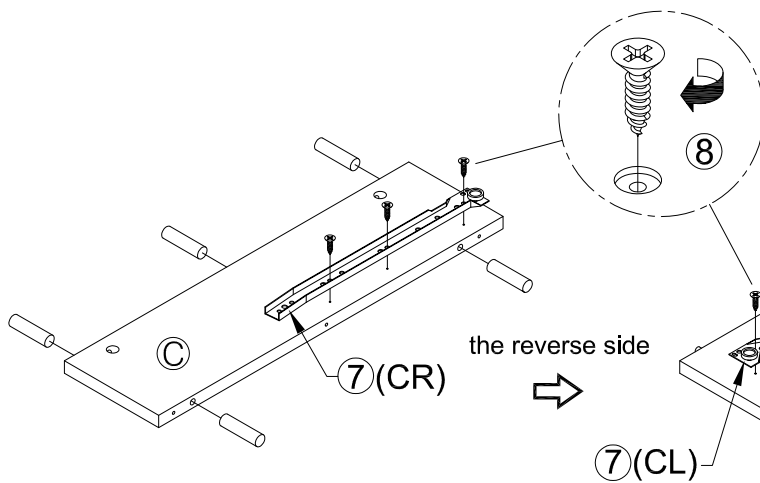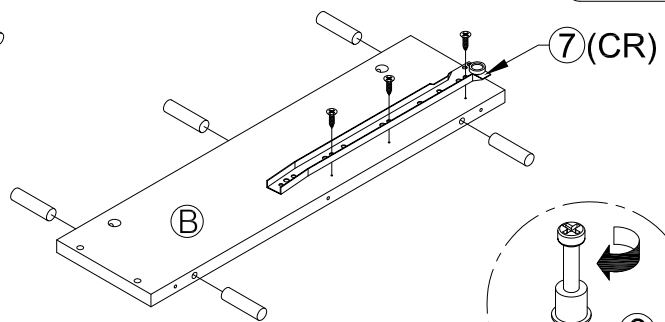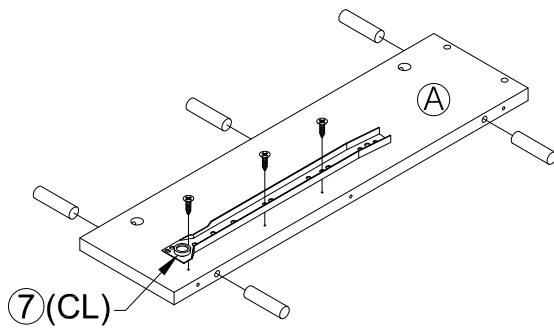


the reverse side

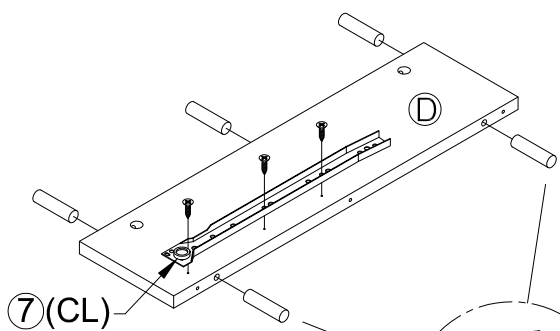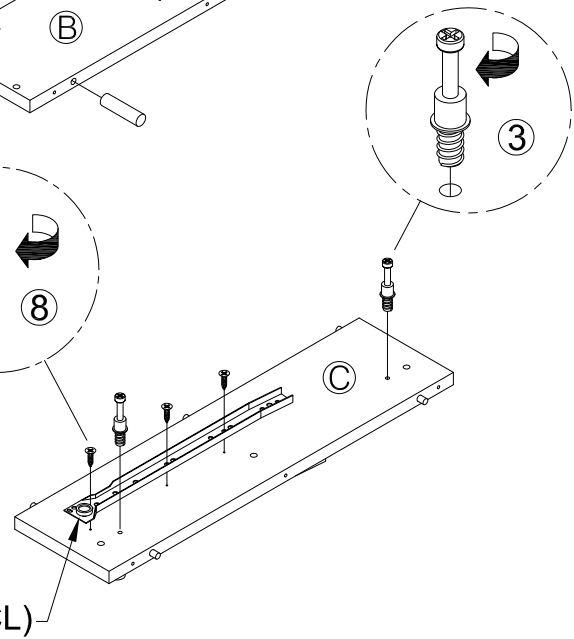



the reverse side

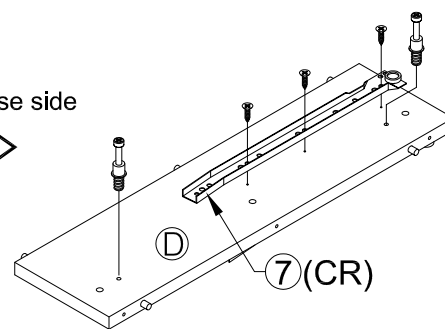


INCORRECT CORRECT

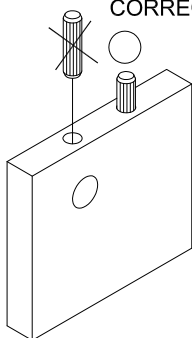

Apply glue on all wooden dowels to ensure integrity of the structure.

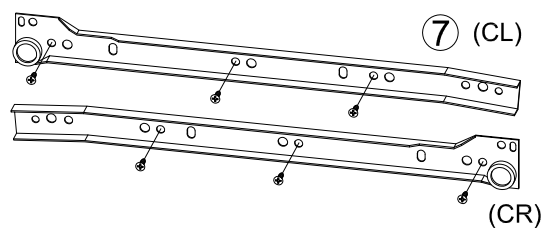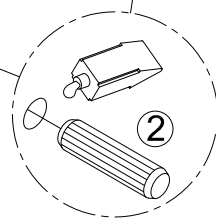


STEP 2 :

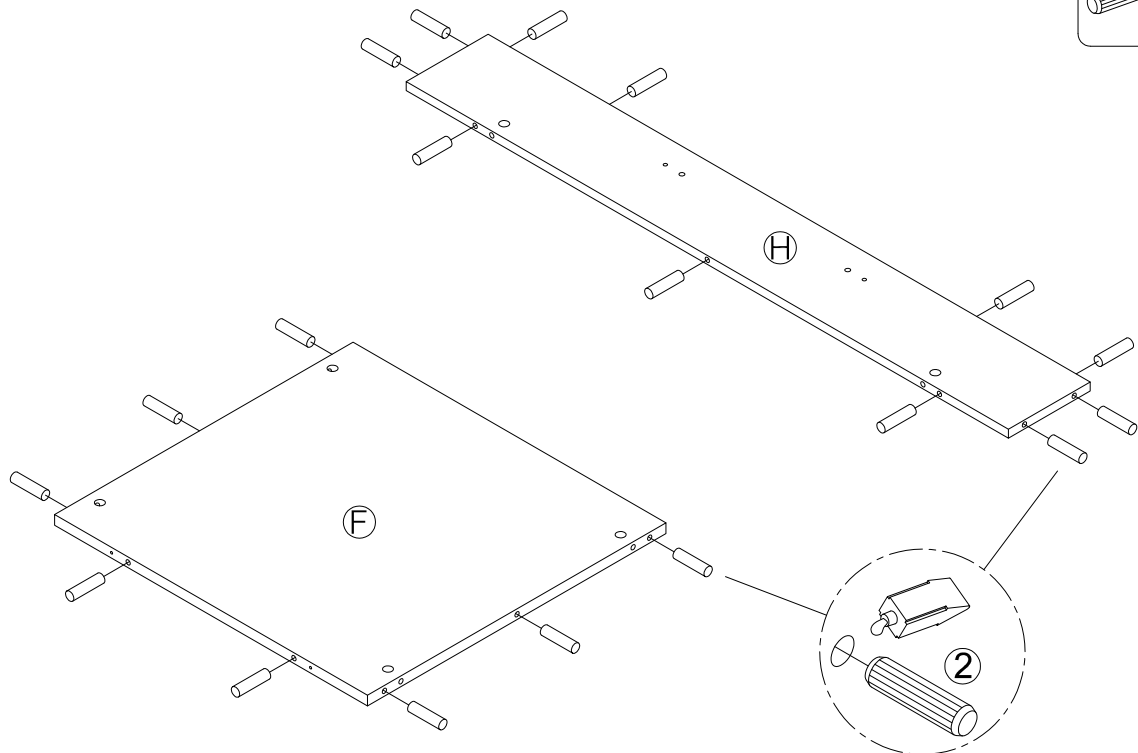

2
x 19

Apply glue on all wooden dowels to ensure integrity of the structure.


STEP 3 :

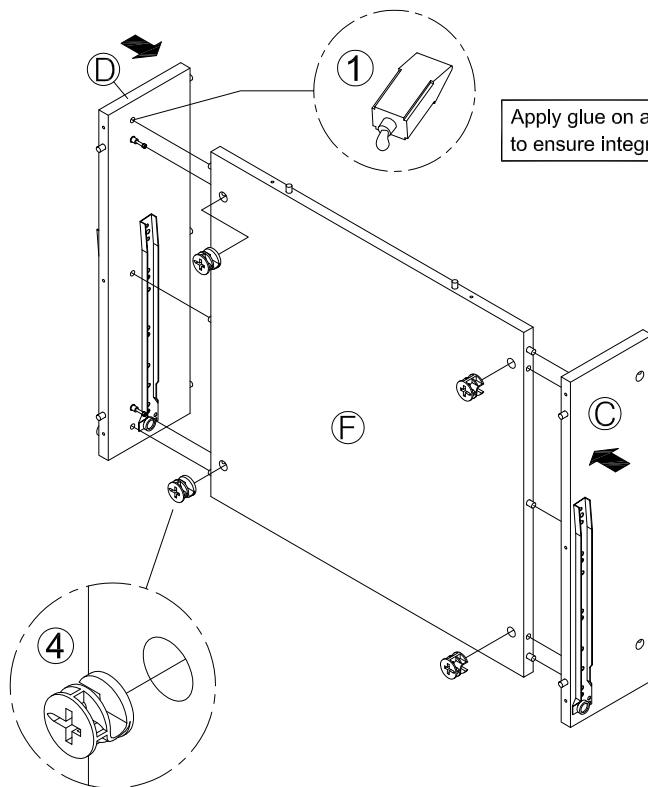



4
x 4

14


Apply glue on all wooden dowels to ensure integrity of the structure.

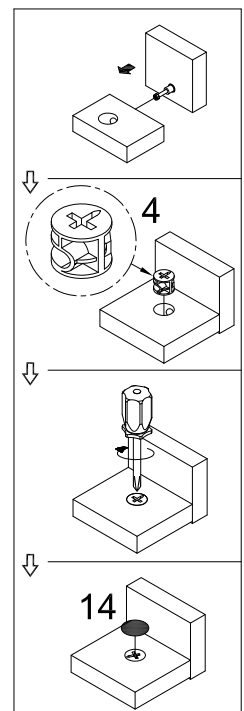


STEP 4 :

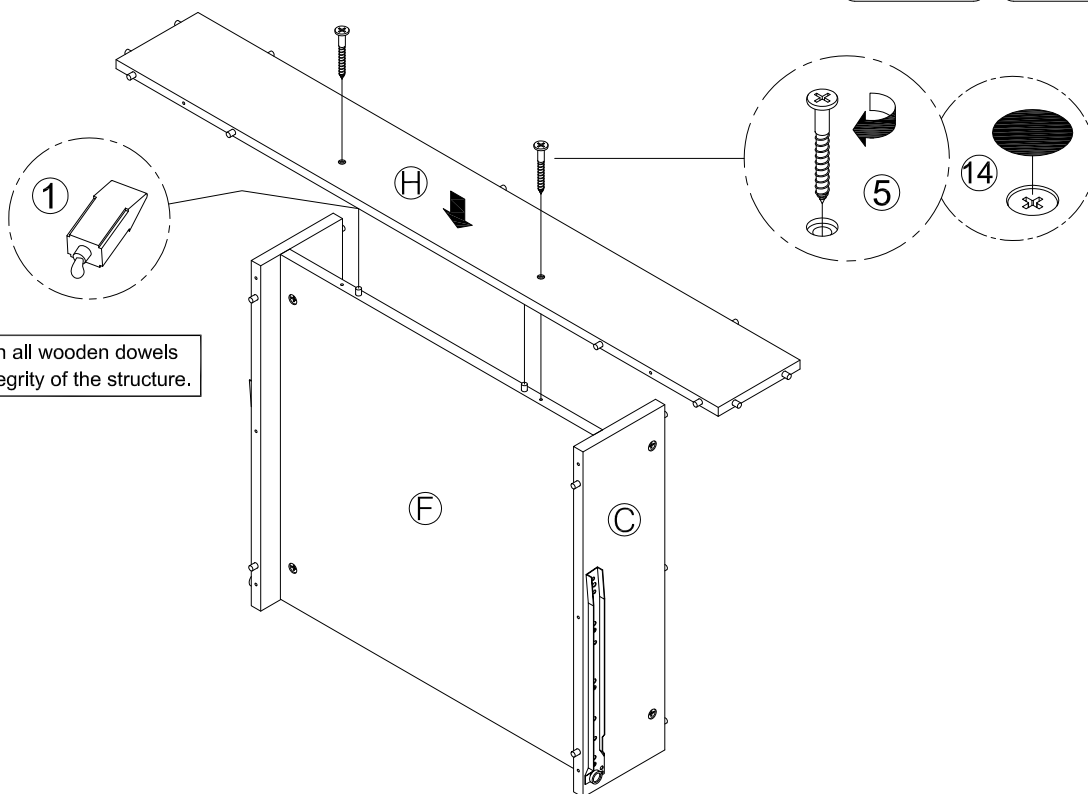


STEP 5 :

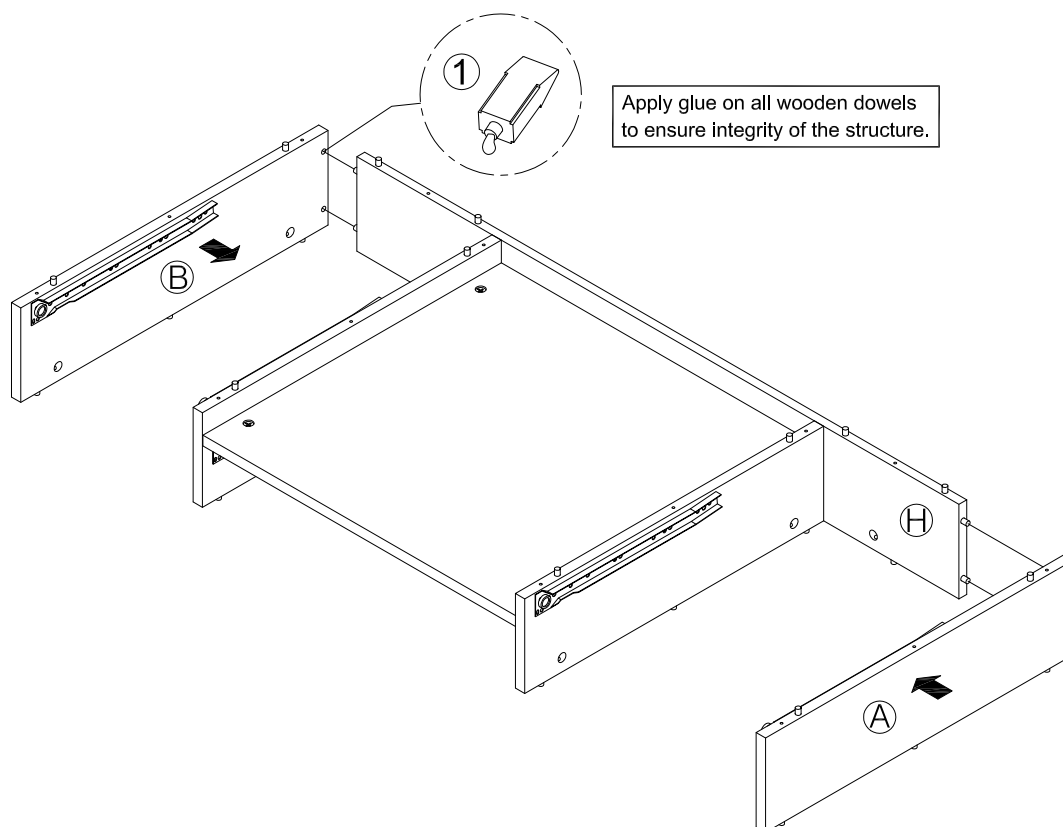



STEP 6 :

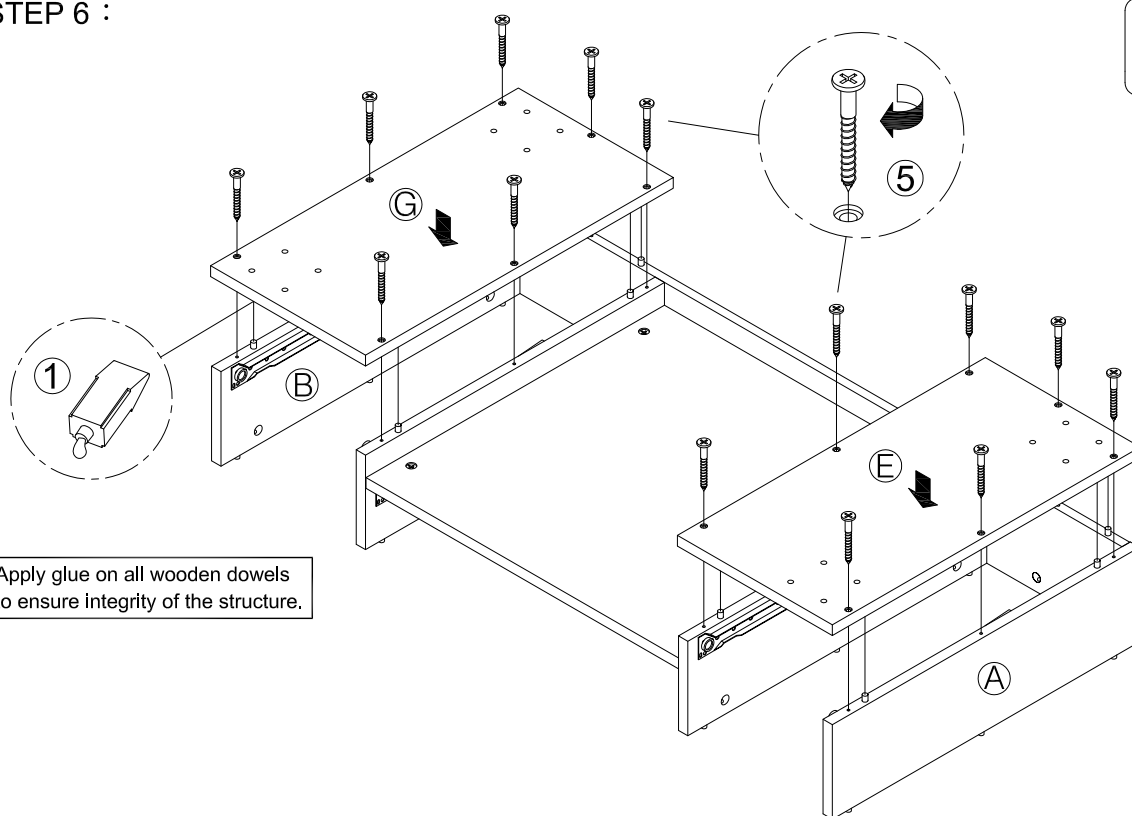




STEP 7 :

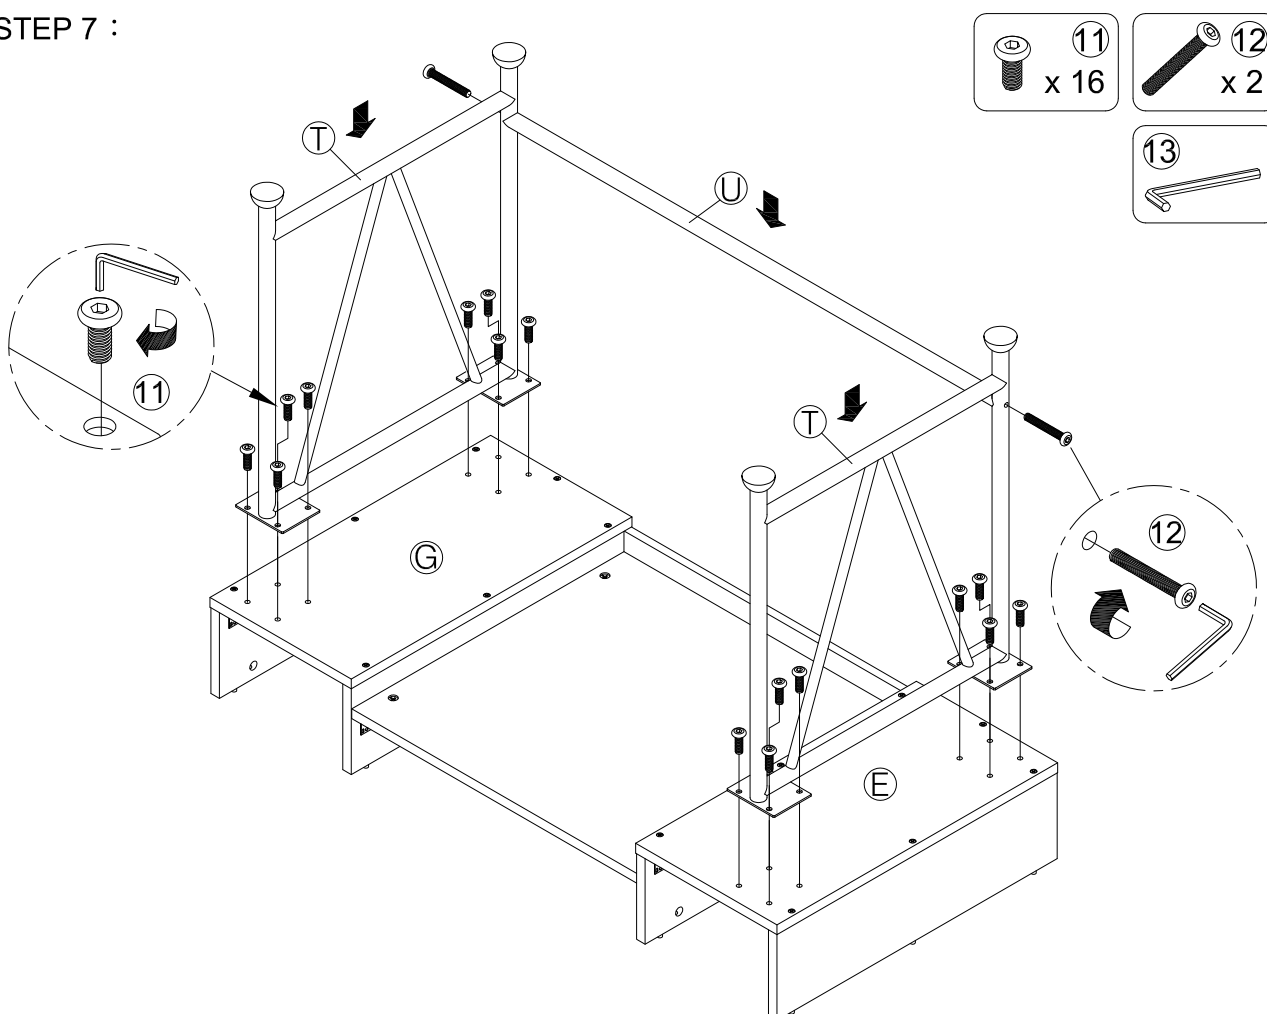



STEP 8 :

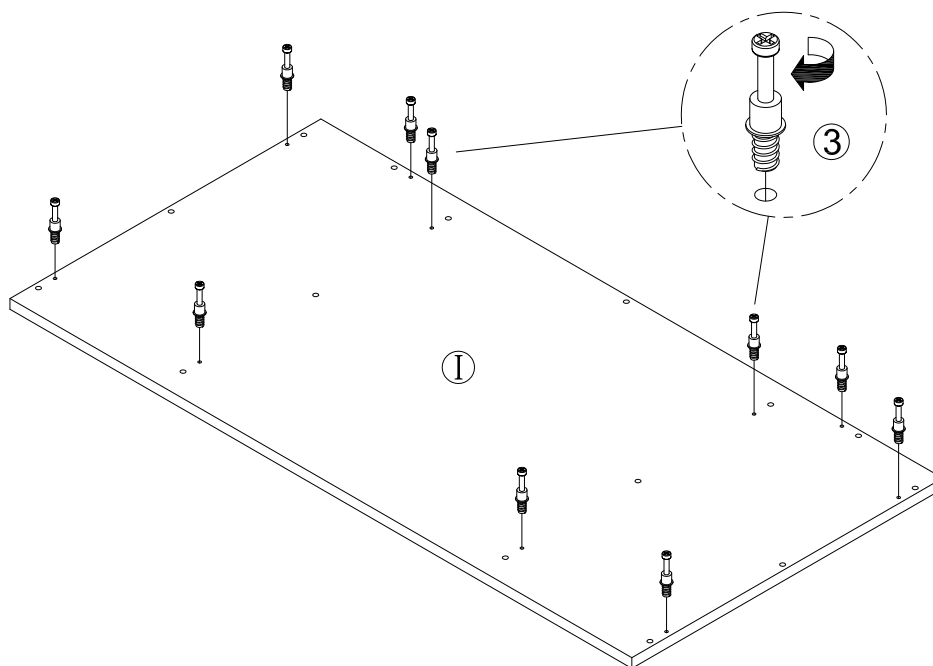


STEP 9 :

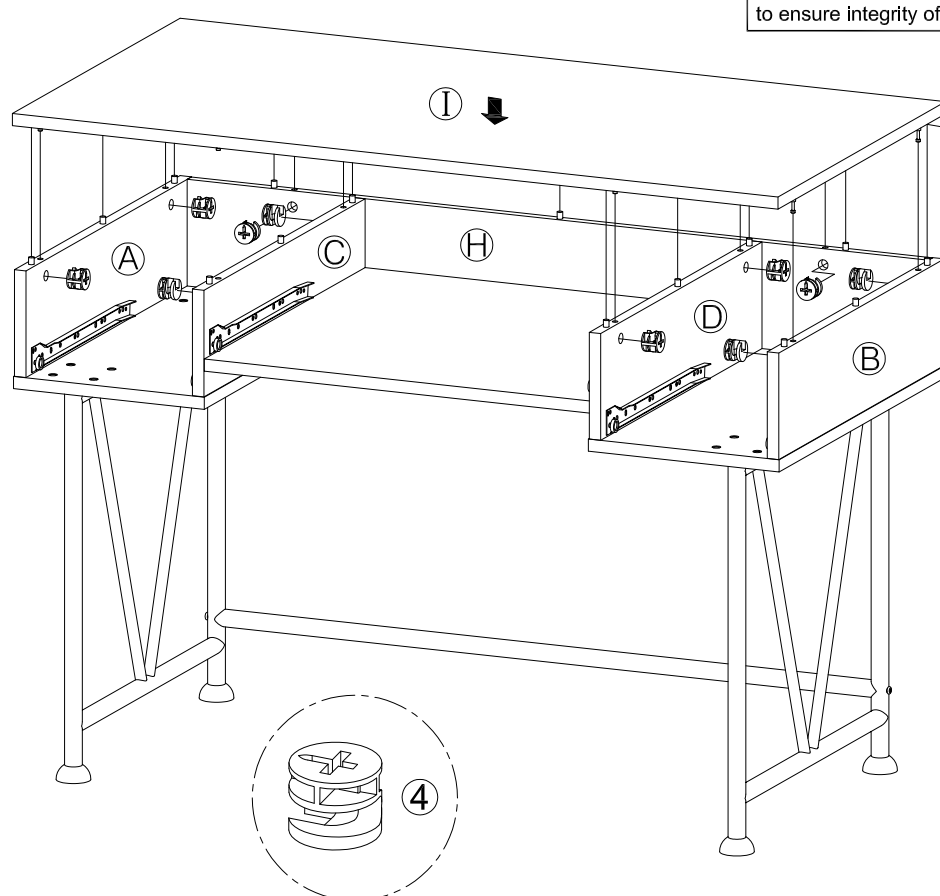


Apply glue on all wooden dowels to ensure integrity of the structure.

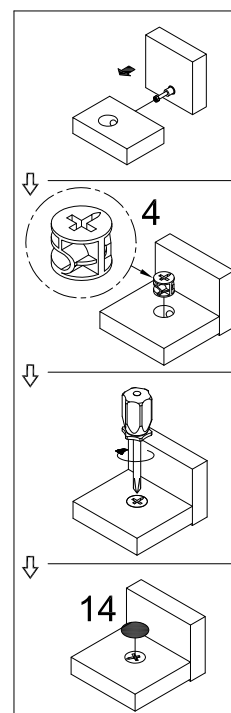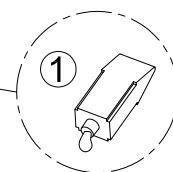


STEP 10-1 :

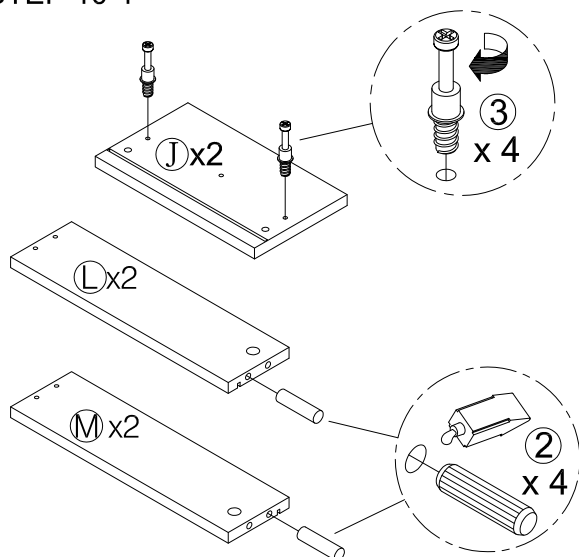


STEP 10-2 :

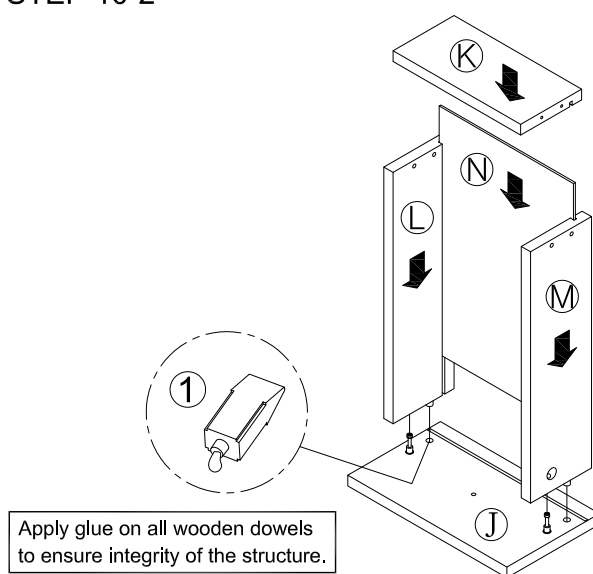


STEP 10-3 :

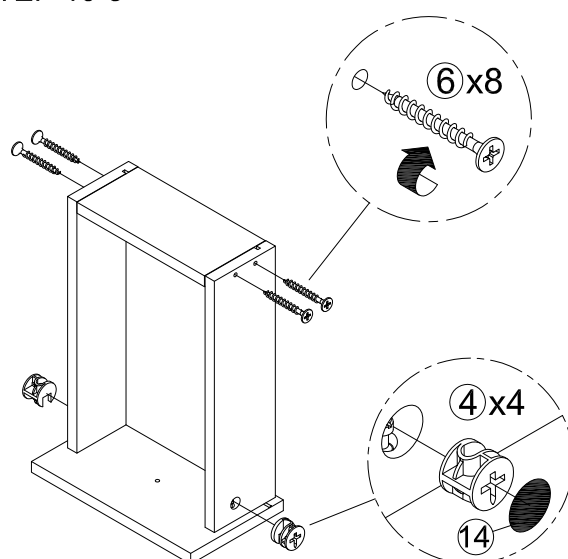


STEP 10-4 :

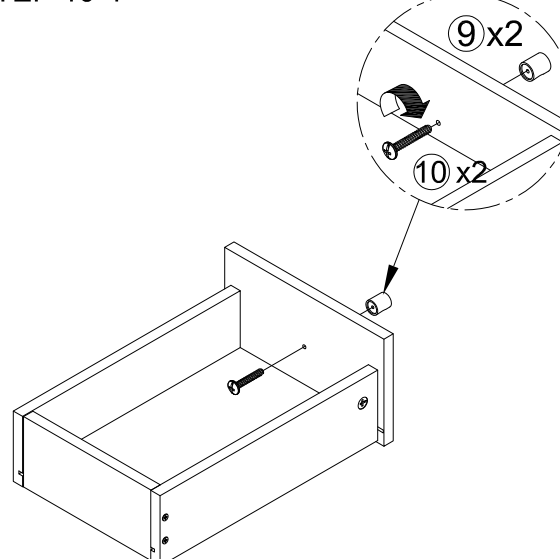


STEP 10-5 :

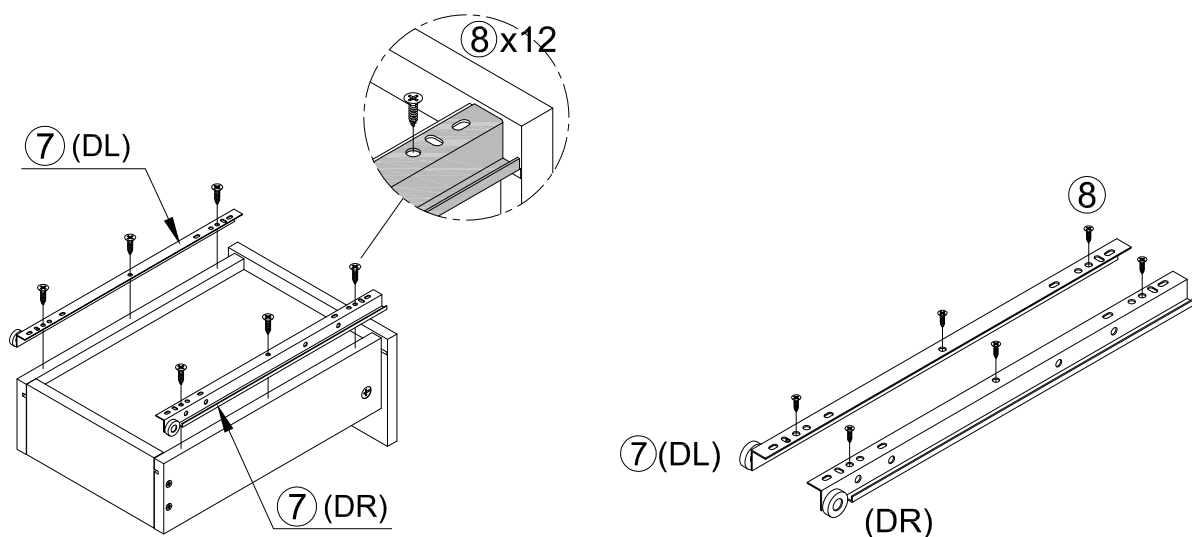


STEP 11-1 :

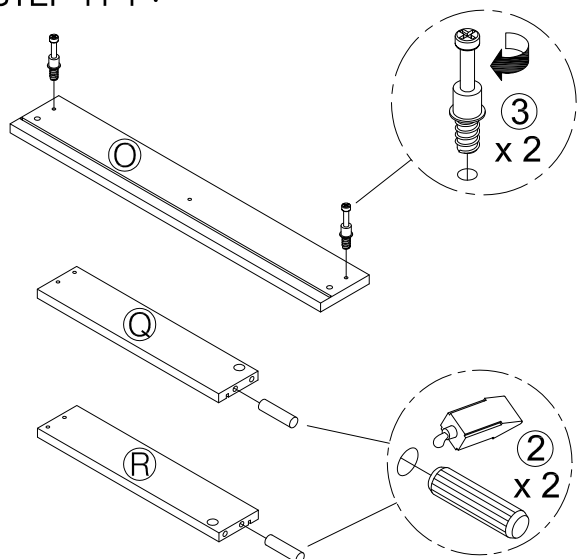


STEP 11-2 :

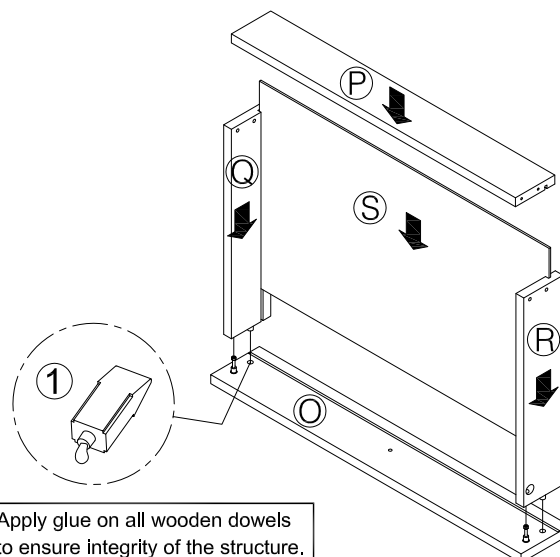


STEP 11-3 :

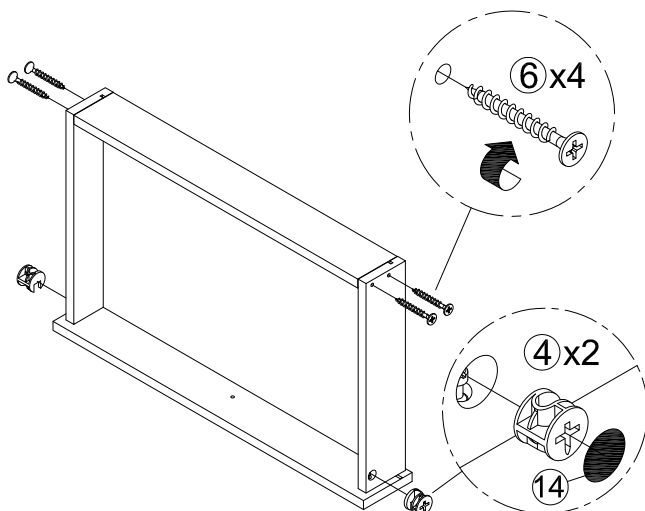


STEP 11-4 :

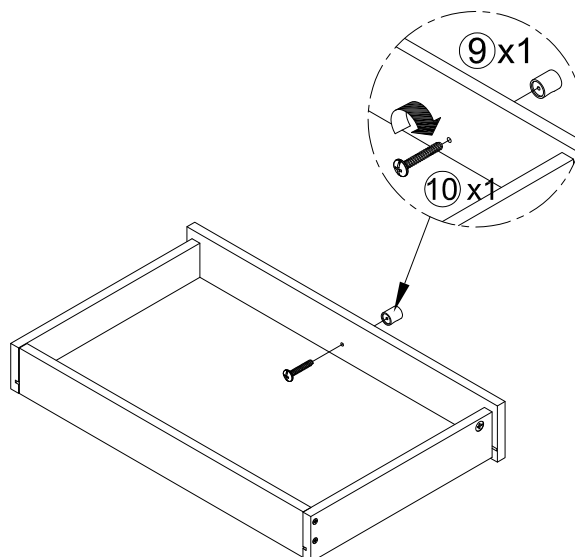

STEP 11-5 :

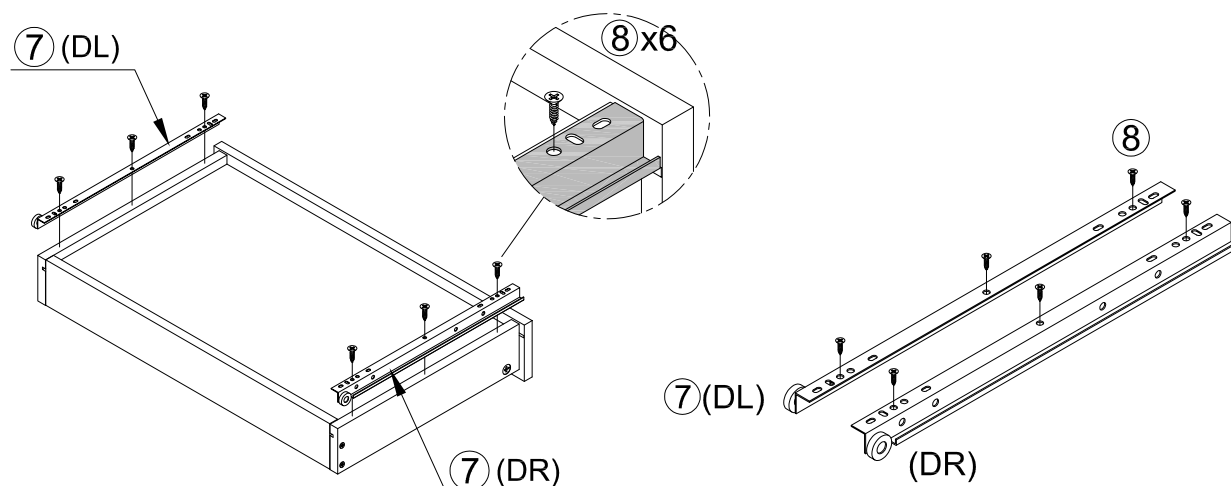

STEP 12 :

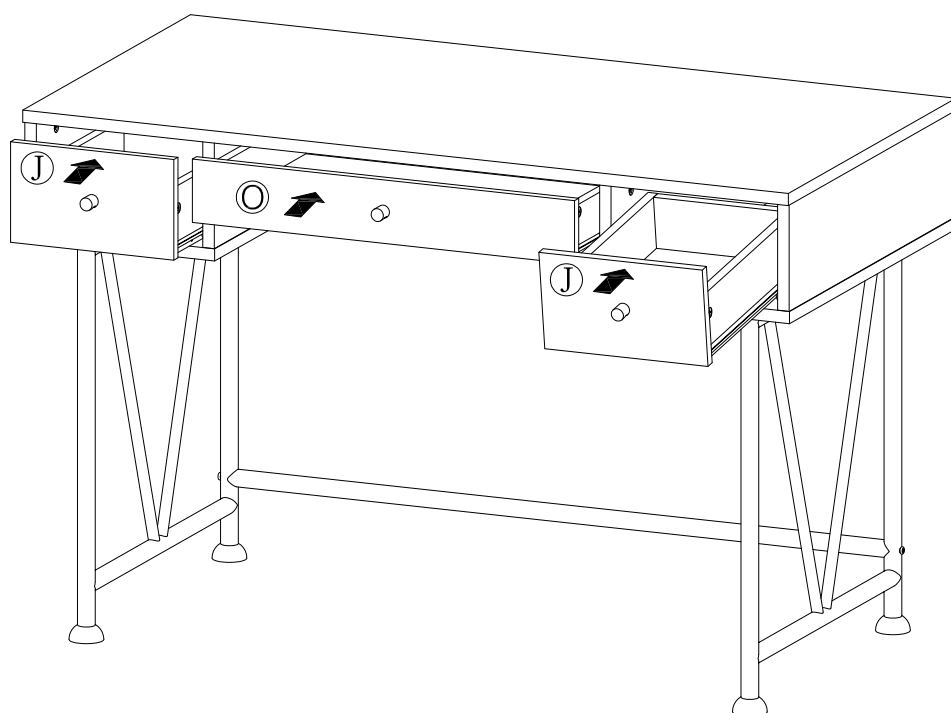

FINISH

