



ASSEMBLY INSTRUCTIONS

- A. Seat(1 unit)
- B. Backrest(1 unit)
- C. Front legs part(1 unit)
- D. Arm(2 units)
- E. Allen Wrench(1 unit)
- F. Carriage bolts 2.4"(2 units)
- G. Carriage bolts 2.55"(2 units)
- H. Carriage bolts 2"(2 units)
- I. Bolts 2.4"(2 units)
- J. Flat washer(6 units)
- K. Lock nut(6 units)


WARNING :
USE ONLY THE ALLEN WRENCH (E)
PROVIDED. DO NOT USE POWER
TOOLS. DO NOT OVER TIGHTEN.

WARNING:
**DO NOT SIT ON THE
ARMRESTS!**

Step- 1:

Position front legs part(C) to seat(A) corresponding 2 holes, insert 2.4" carriage bolts, one flat washer and one lock nut, manually tighten.


Important note: Do not fully tighten.

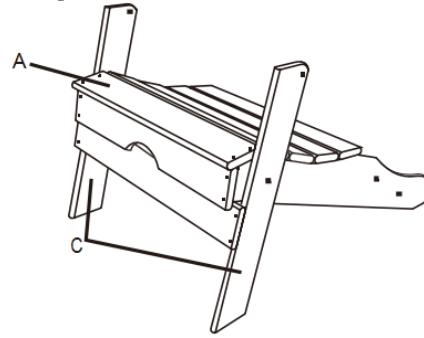

Step- 2:

Position arms (D) to front legs (C) corresponding 2 holes, insert 2.55" carriage bolt, one flat washer and one lock nut, manually tighten.

Important note: Do not fully tighten.

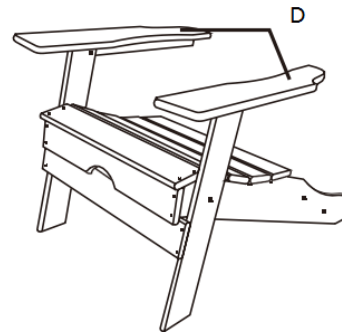

Step- 3:

Position glider piece on the backrest (B) to seat (A) corresponding 2 holes, insert 2" carriage bolt, one flat washer and one lock nut, manually tighten.

Position backrest (B) to arm (D) corresponding 2 holes, insert 2.4" bolts and manually tighten.

Important note: Do not fully tighten.

