


# Assembly Directions for Adirondack Footstool

#PAFS2400

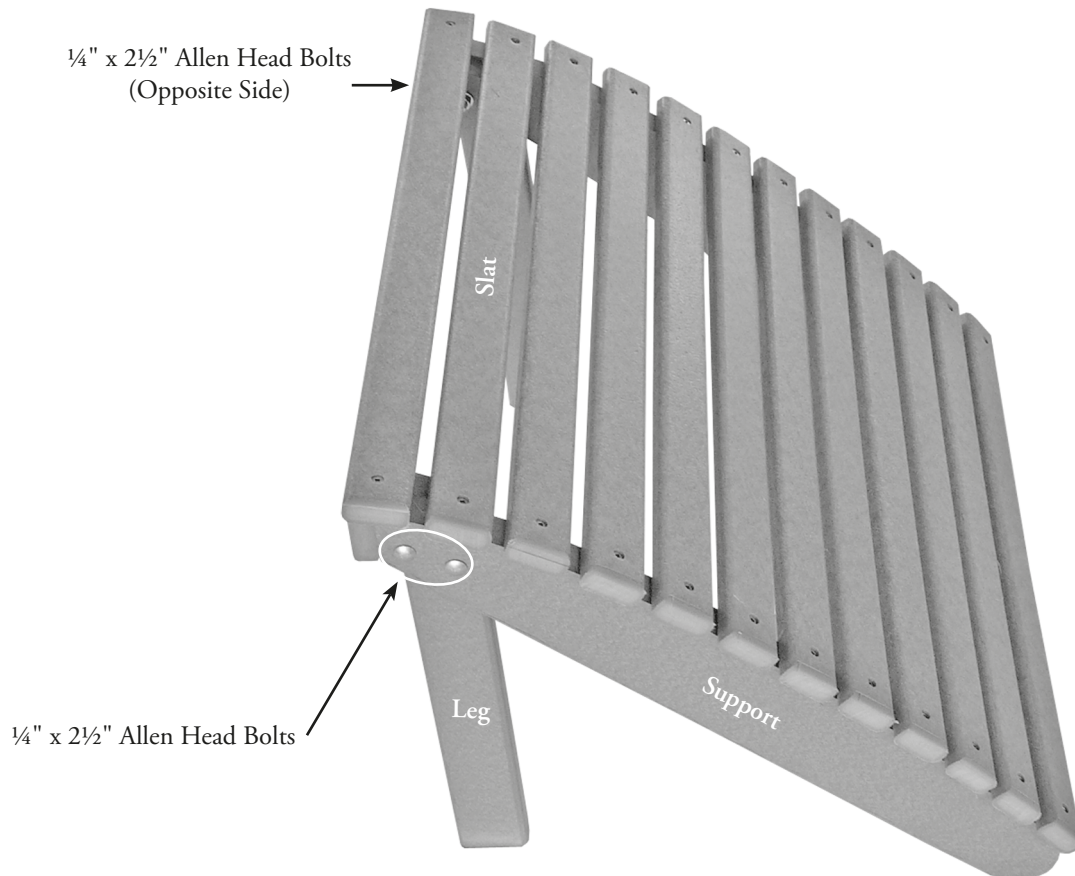

## PACKAGE CONTENT


- 1 Footstool
- 2 Legs
- 1 Hardware Package

## HARDWARE PACKAGE

- 4 1/4" x 2 1/2" Allen Head Bolts
- 4 1/4" Flange Nuts
- 1 Allen Wrench

## TOOLS NEEDED:

- Hammer & 7/16" Wrench
- Allen Wrench (Included)



Use to measure bolts

