


ASSEMBLY INSTRUCTIONS

DJ1163-200CM

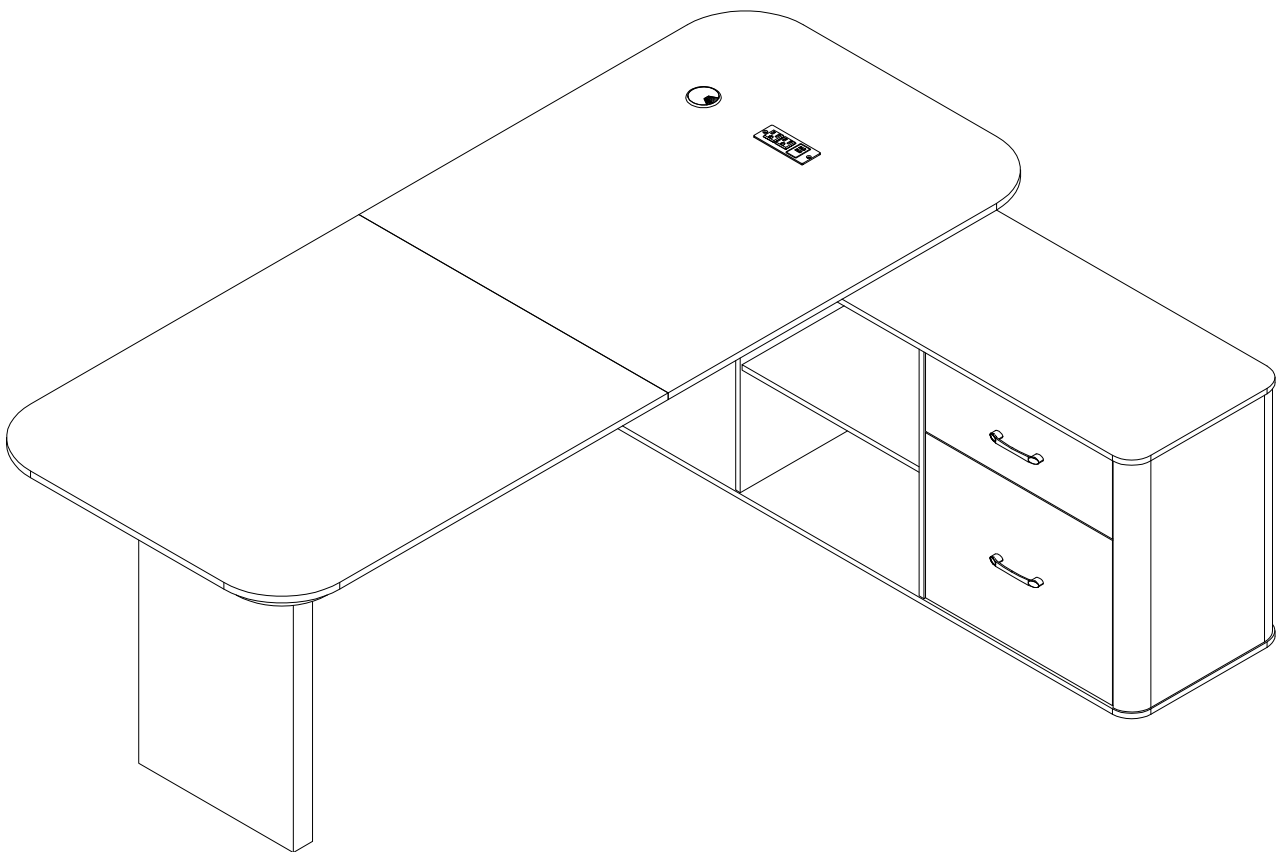

⚠ SAFETY TIPS:

Static charge may cause dust on foam-clean with a dry or damp cloth. Small foam strands may be present-handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guideline.

Installation Video QR



DJZH000818


<https://vimeo.com/1154208605>

Have an assembly question or need a replacement part?
Please contact with our customer service.

Warnings


Important reminder:

- ⚠ Please sort and check all accessories before assembly.
- ⚠ Place the product on an empty cardboard box or on carpet to prevent scratches.
- ⚠ Please use proper tools for assembly. Using an electric screwdriver can accelerate the assembly speed, but please do not overtighten the screws.
- ⚠ Please follow the assembly steps and do not skip any of them.
- ⚠ If possible, please find a partner to help you with assembly, which can accelerate assembly.
- ⚠ Keep all small parts of this product away from children. They may cause serious injury.
- ⚠ We hope you can retighten the screws 2 weeks after assembly, and check the tightening procedure of the screws every 3 months.
If you meet any difficulty, our friendly customer team are always ready to help you.



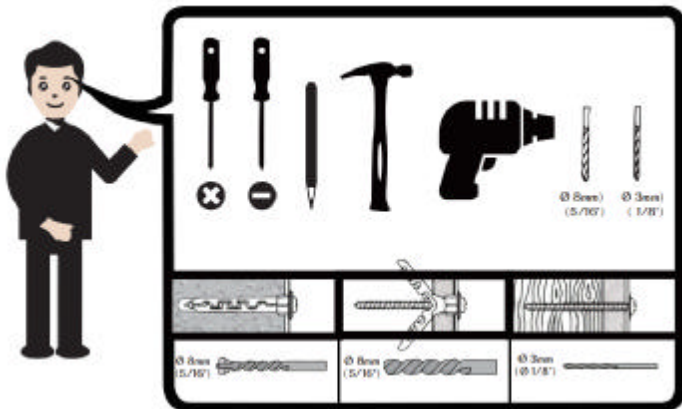


Warning: Overturning the product can cause serious crushing injuries. We have a wall connection device attached, please use it to hold the furniture following assembly instructions. Do not change the structure of this product in any way. Our products have been tested and meet any 1st sales specific security measures. We won't be responsible for any modifications, which may cause significant security risks.

Explosion Diagram

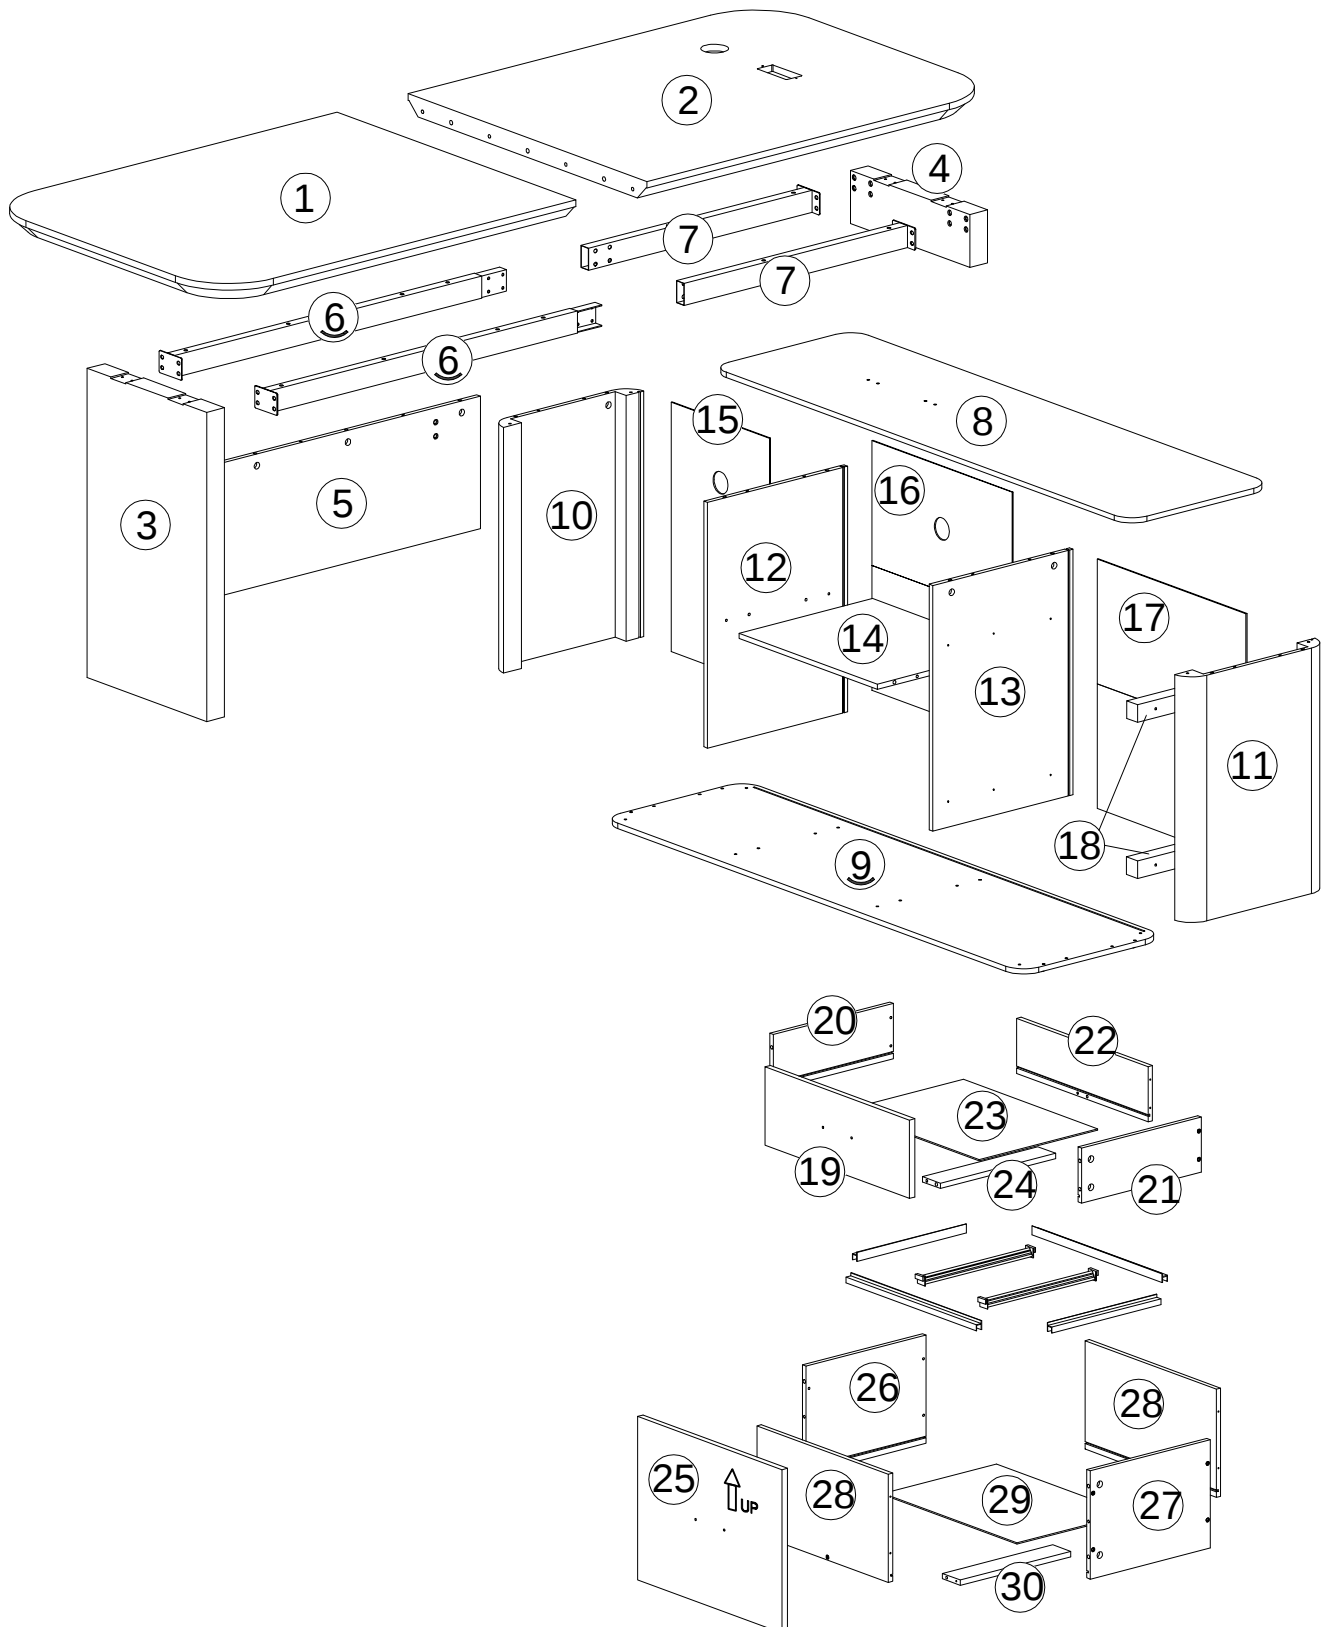

Hardware List


No.	Code	Diagram	Description	Quantity	Spare
1	A		Ø6 x 33.5 mm	25	2
2	B		Ø15 x 9 mm	25	2
3	C		Ø6 x 30 mm	39	2
4	D		Ø5 x 38 mm	27	2
5	E		Ø6 x 38 mm	10	2
6	F		Ø3.5 x 12 mm	24	2
7	G		Ø4 x 32 mm	4	
8	H			28	2
9	J		Ø3 x 17 mm	28	2
10	K		M4*20 mm	4	
11	L			2	
12	M		Ø8*120 mm	3	
13	N		Ø8*6 mm	6	
14	P		S12	2	
15	Q		Ø16 mm	6	
16	R		Ø8*50 mm	4	
17	S			4	
18	T		M6*12 mm	12	2
19	U		M6*60 mm	12	2
20	V		S4	1	

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

Hardware List

No.	Code	Diagram	Description	Quantity	Spare
21	W		Ø25 mm	25	2
22	X			1	
23	Y			1	
24	Z		Ø3 x 12 mm	2	
25	AA			2	
26	BB			2	
27	CC			2	
28	DD			2	
29	EE		Ø20mm	10	2
30	FF		M6*15 mm	36	2
31	CL		14" Slide	2	
32	CR		14" Slide	2	
33	DL		14" Slide	2	
34	DR		14" Slide	2	


Spare parts are
packed together
in one package.







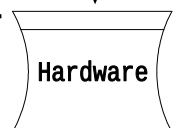


THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR
MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

Assemble


Step 1




			
A 4PCS	F 6PCS	CL 2PCS	

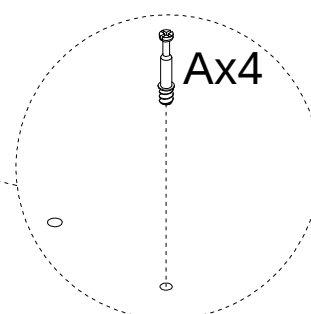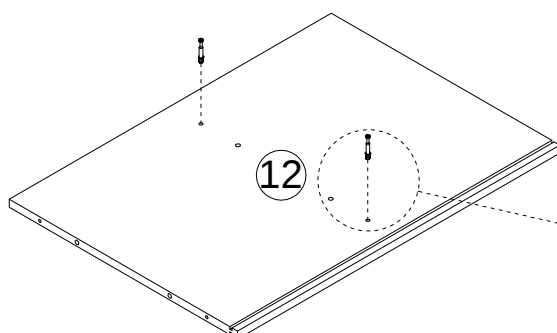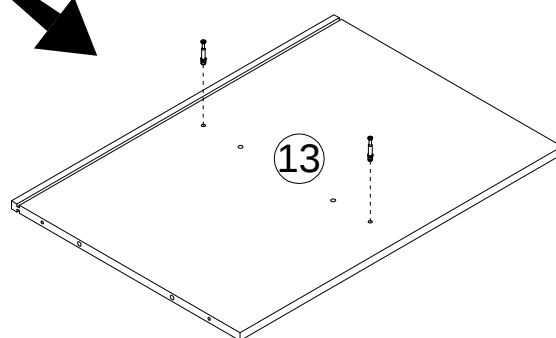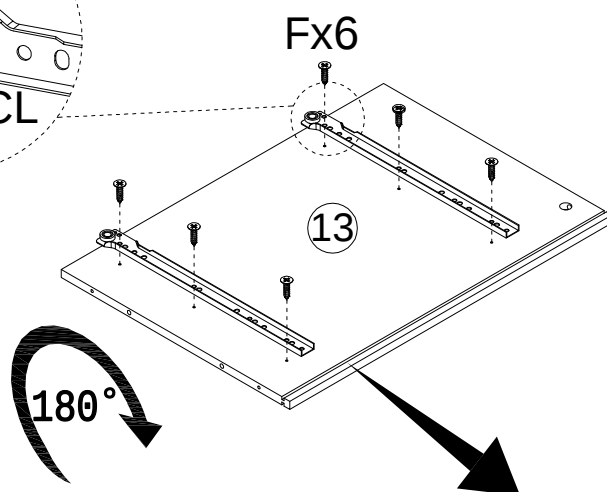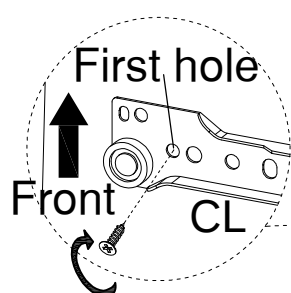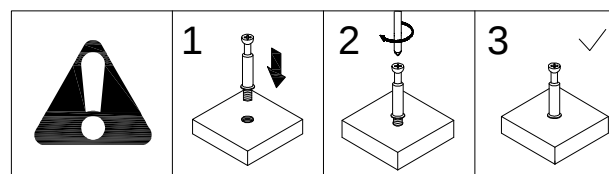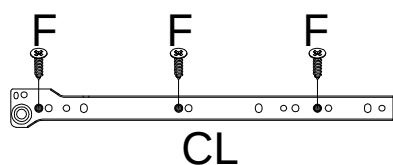

Assemble



Step 2






						
G	4PCS	C	8PCS	B	4PCS	

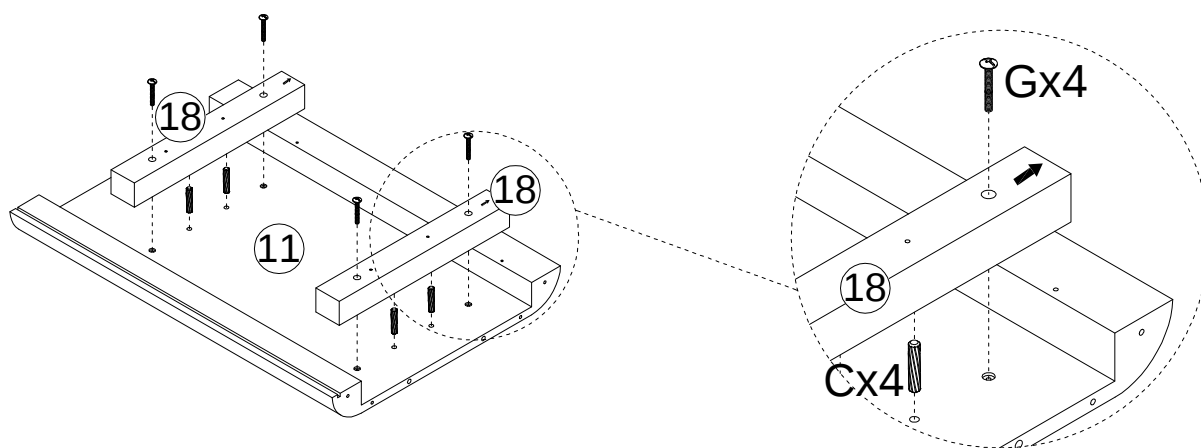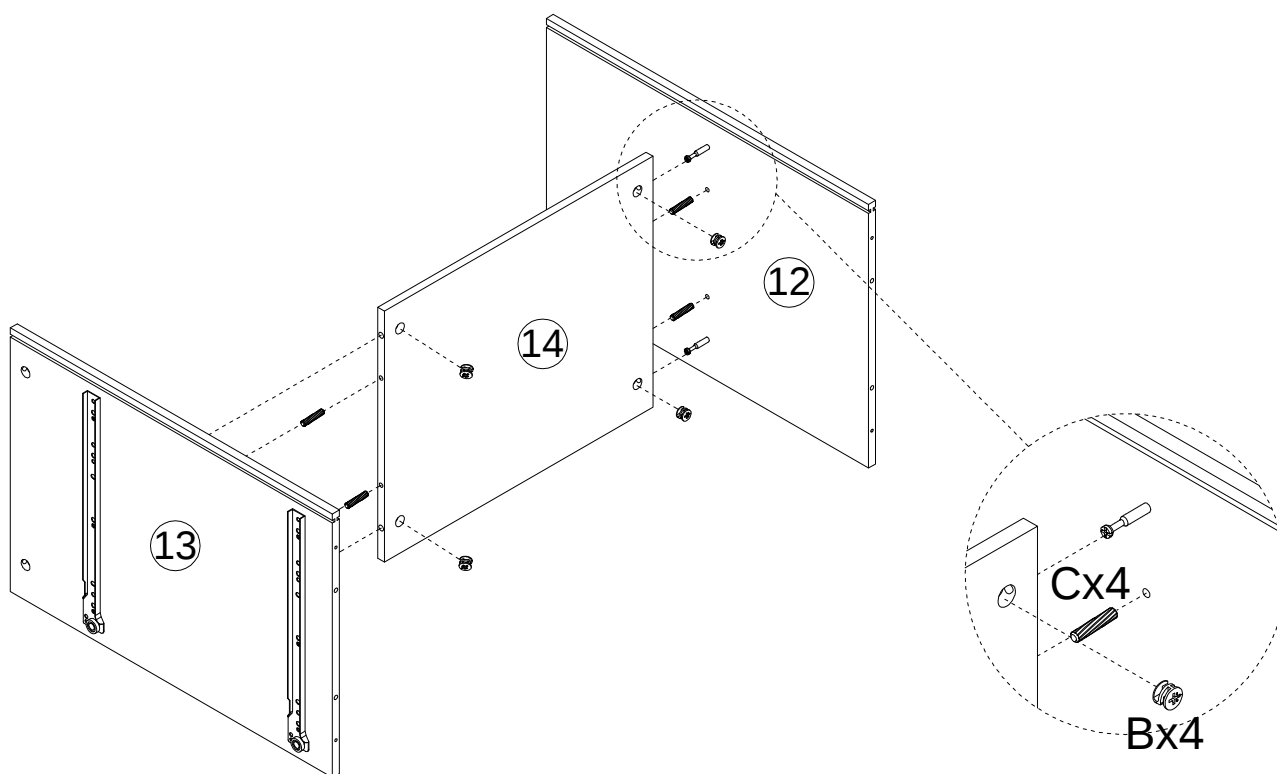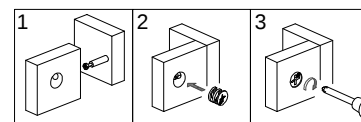

Assemble


Step 3



			
A 8PCS	F 6PCS	CR 2PCS	

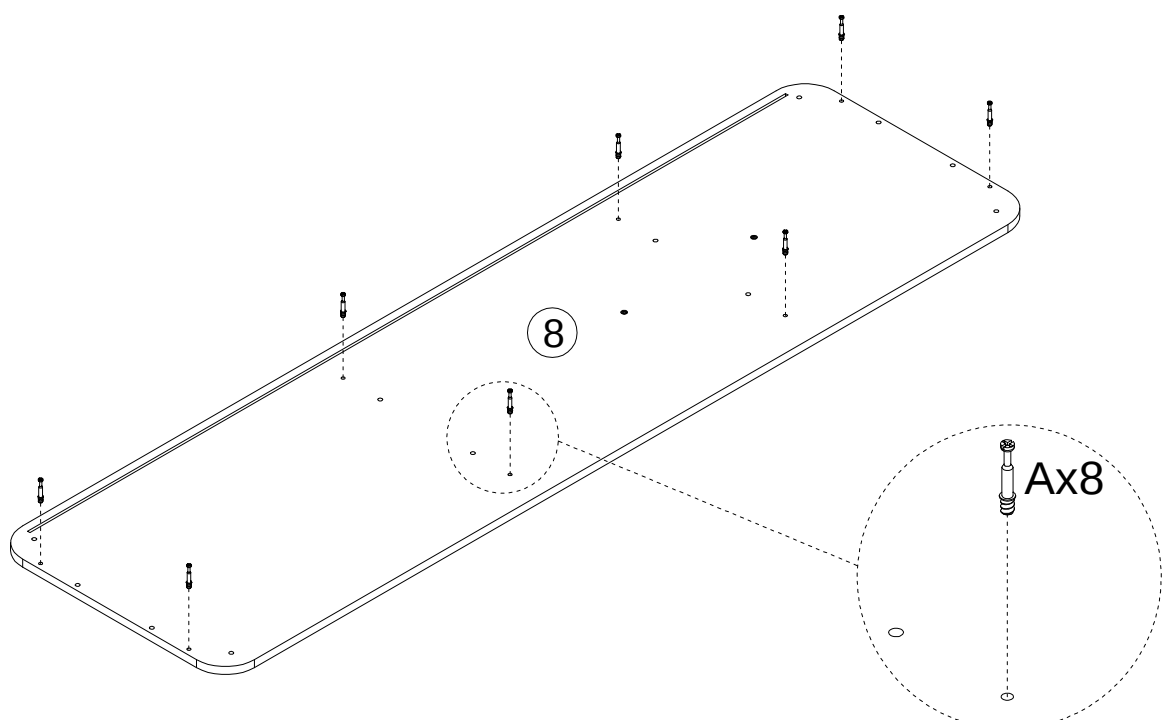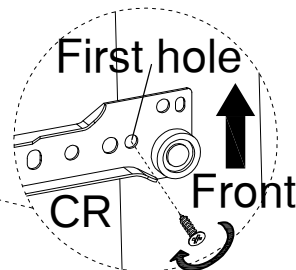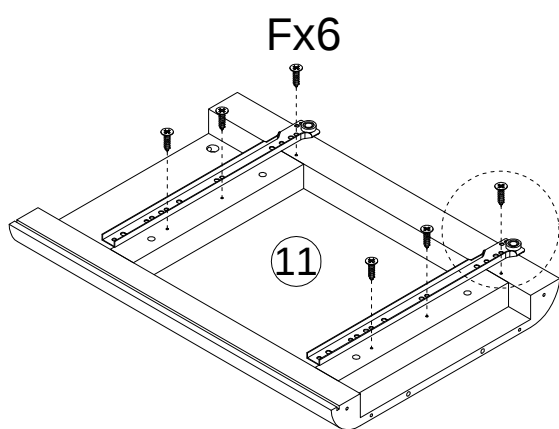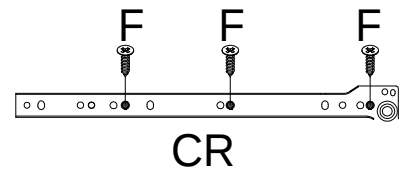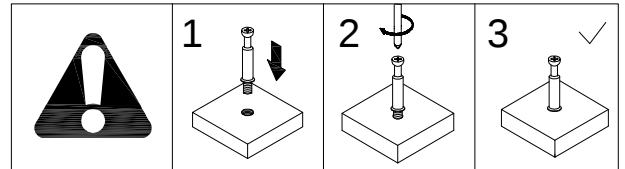

Assemble


Step 4

				
C	12PCS	B	8PCS	

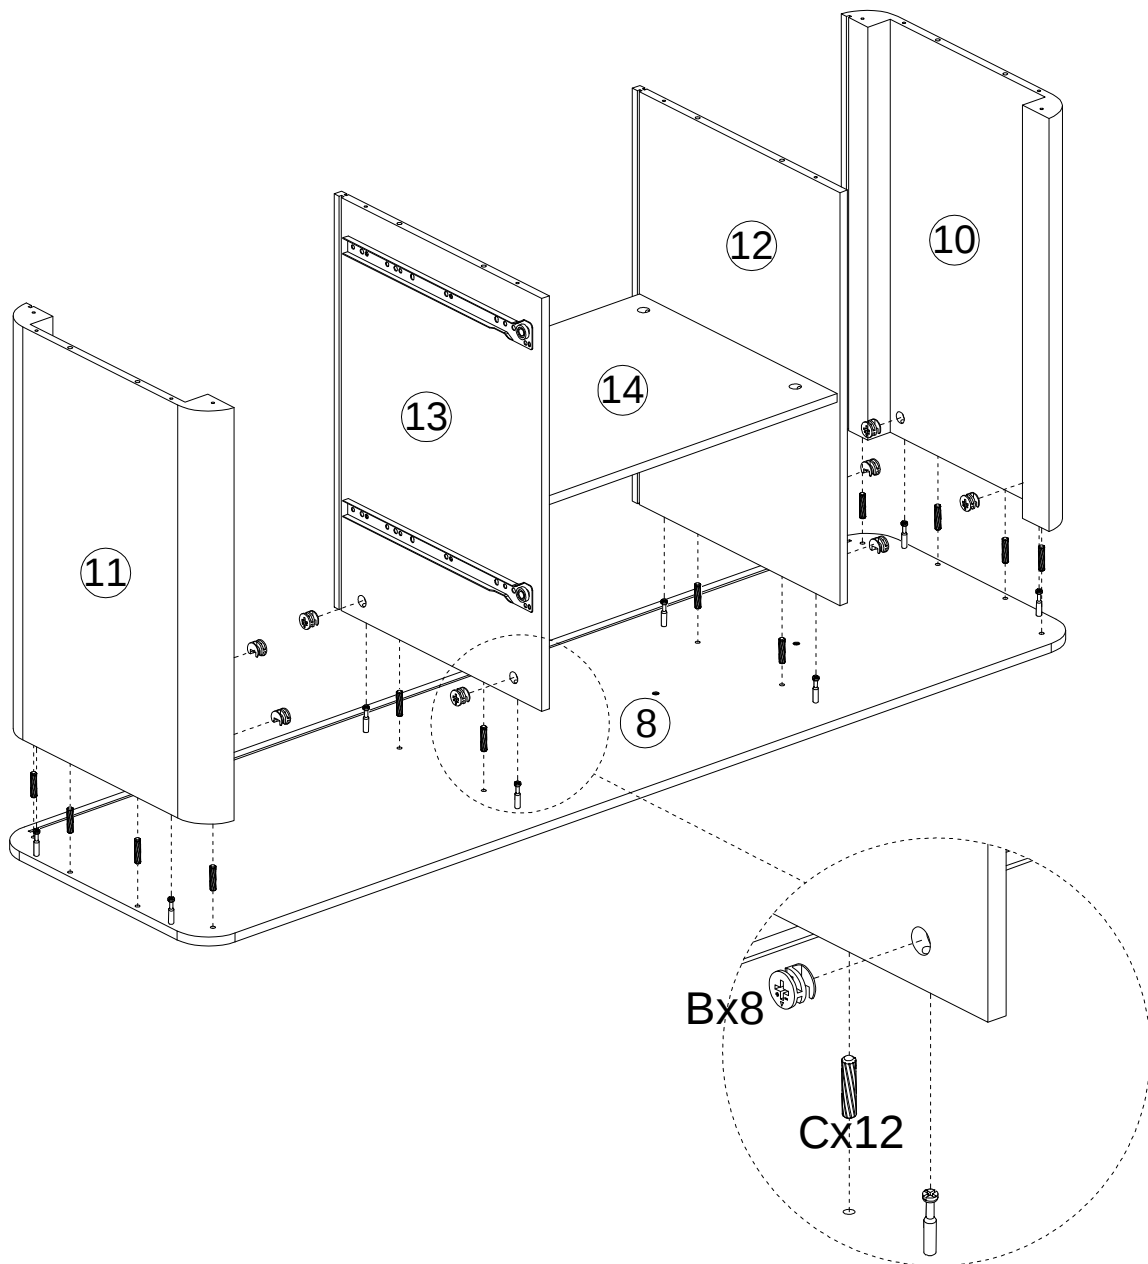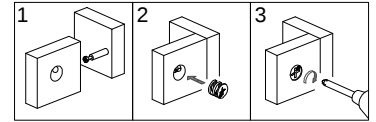


Assemble


Step 5


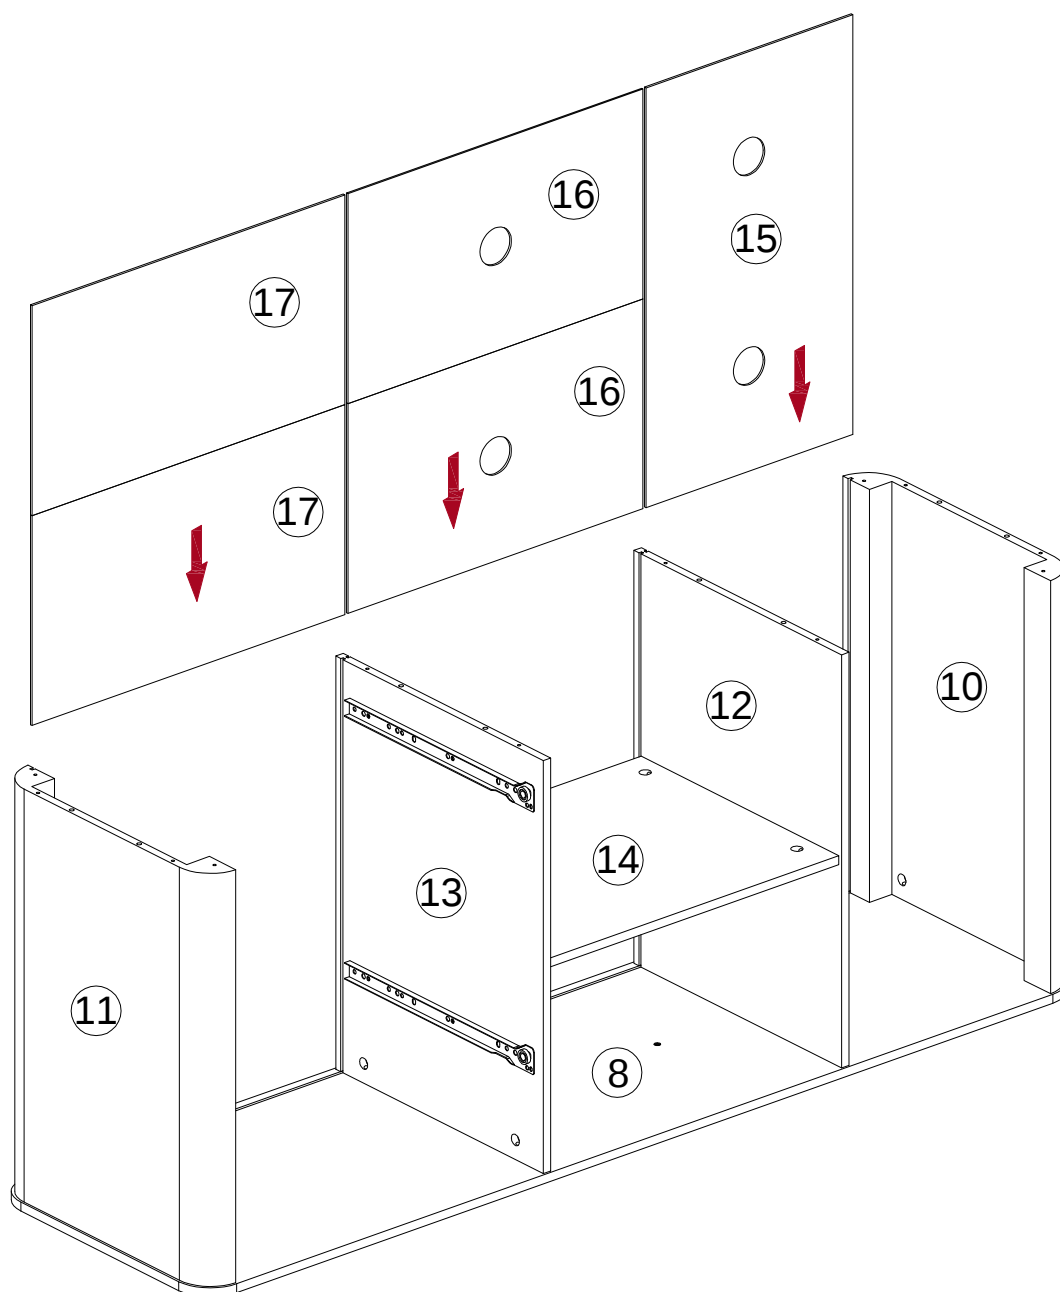


Assemble

Step 6

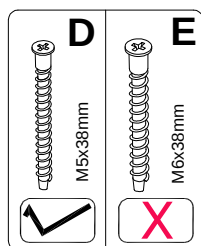



						
C	8PCS	D	12PCS	EE	8PCS	

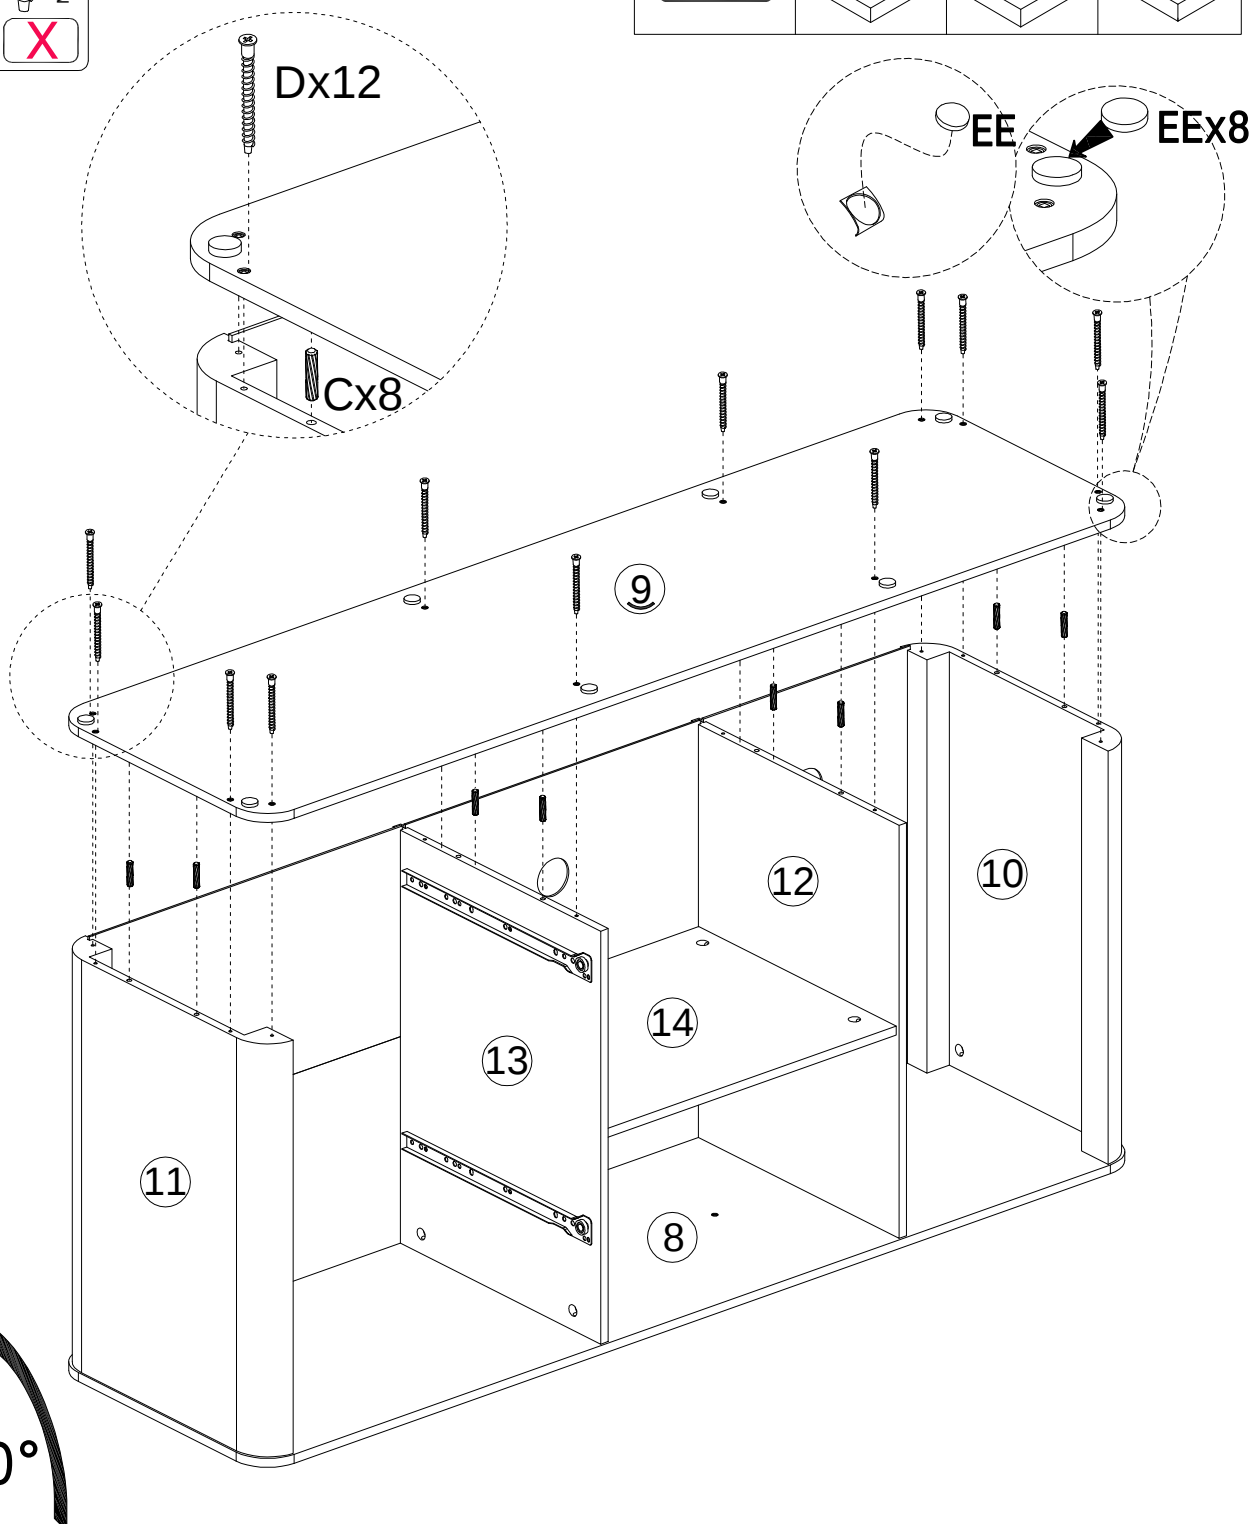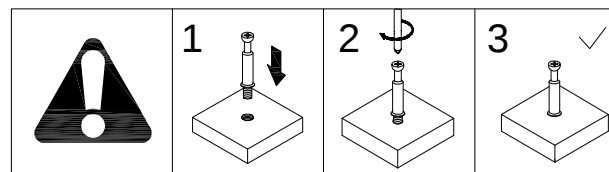

Assemble

Step 7



				
H	28PCS	J	28PCS	

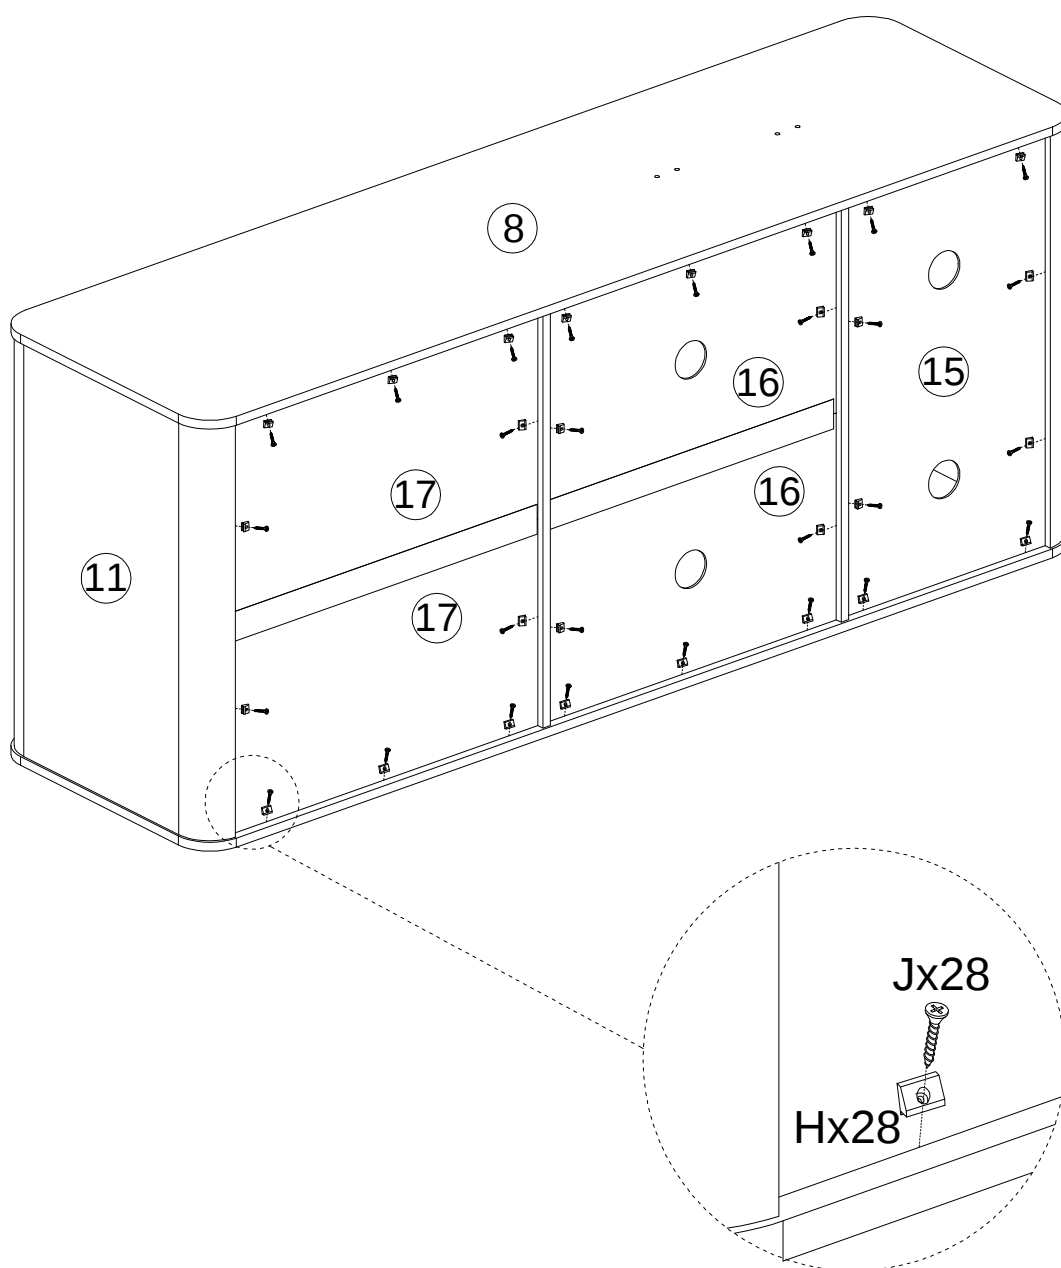

Assemble


Step 8





O	
W	12PCS

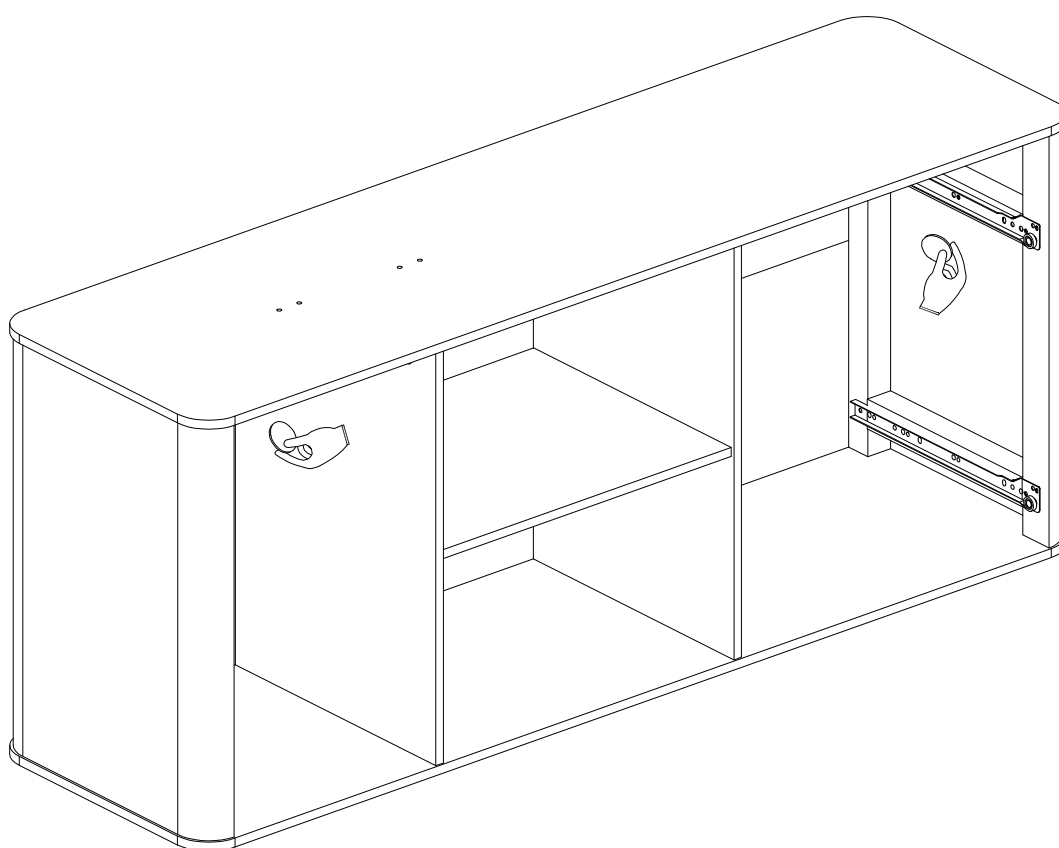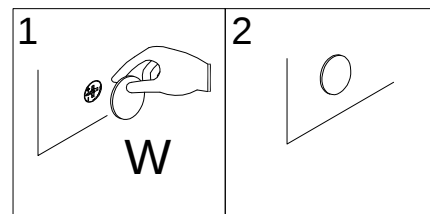

Assemble



Step 9



			
K	4PCS	L	2PCS
		A	9PCS

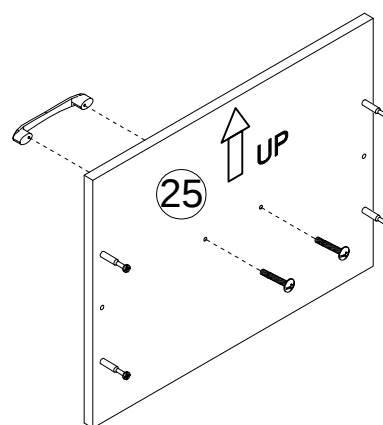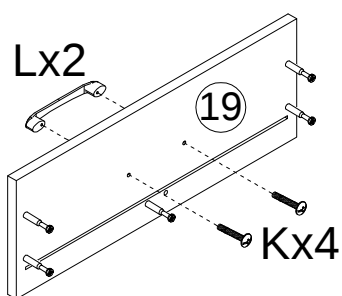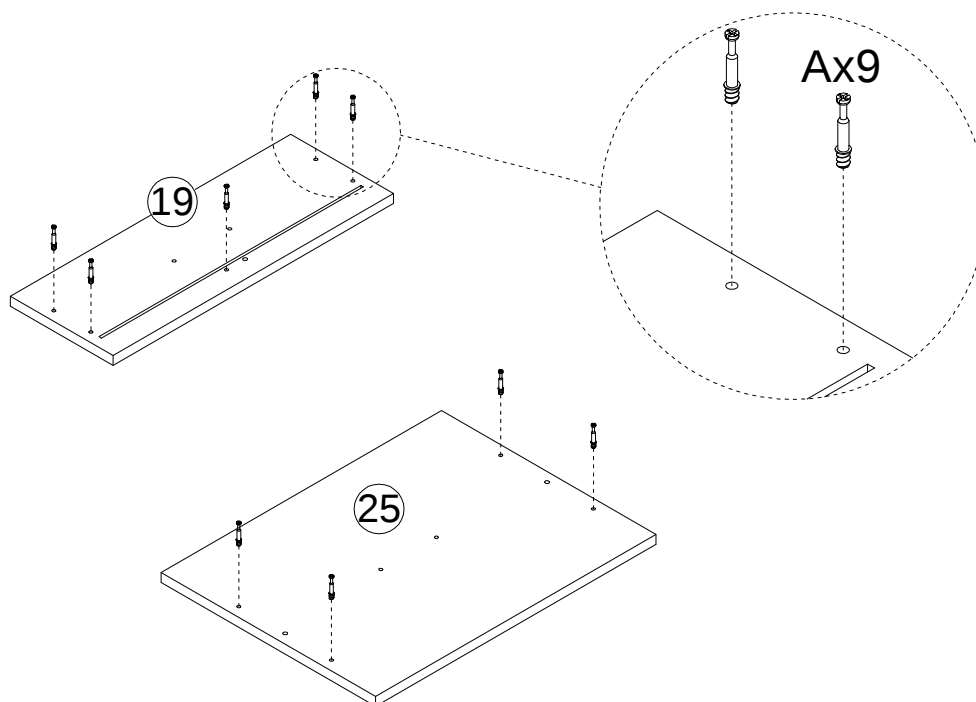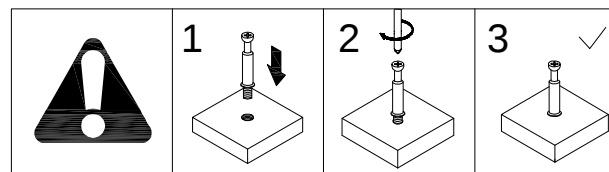

Assemble


Step 10

					
D	10PCS	C	2PCS		


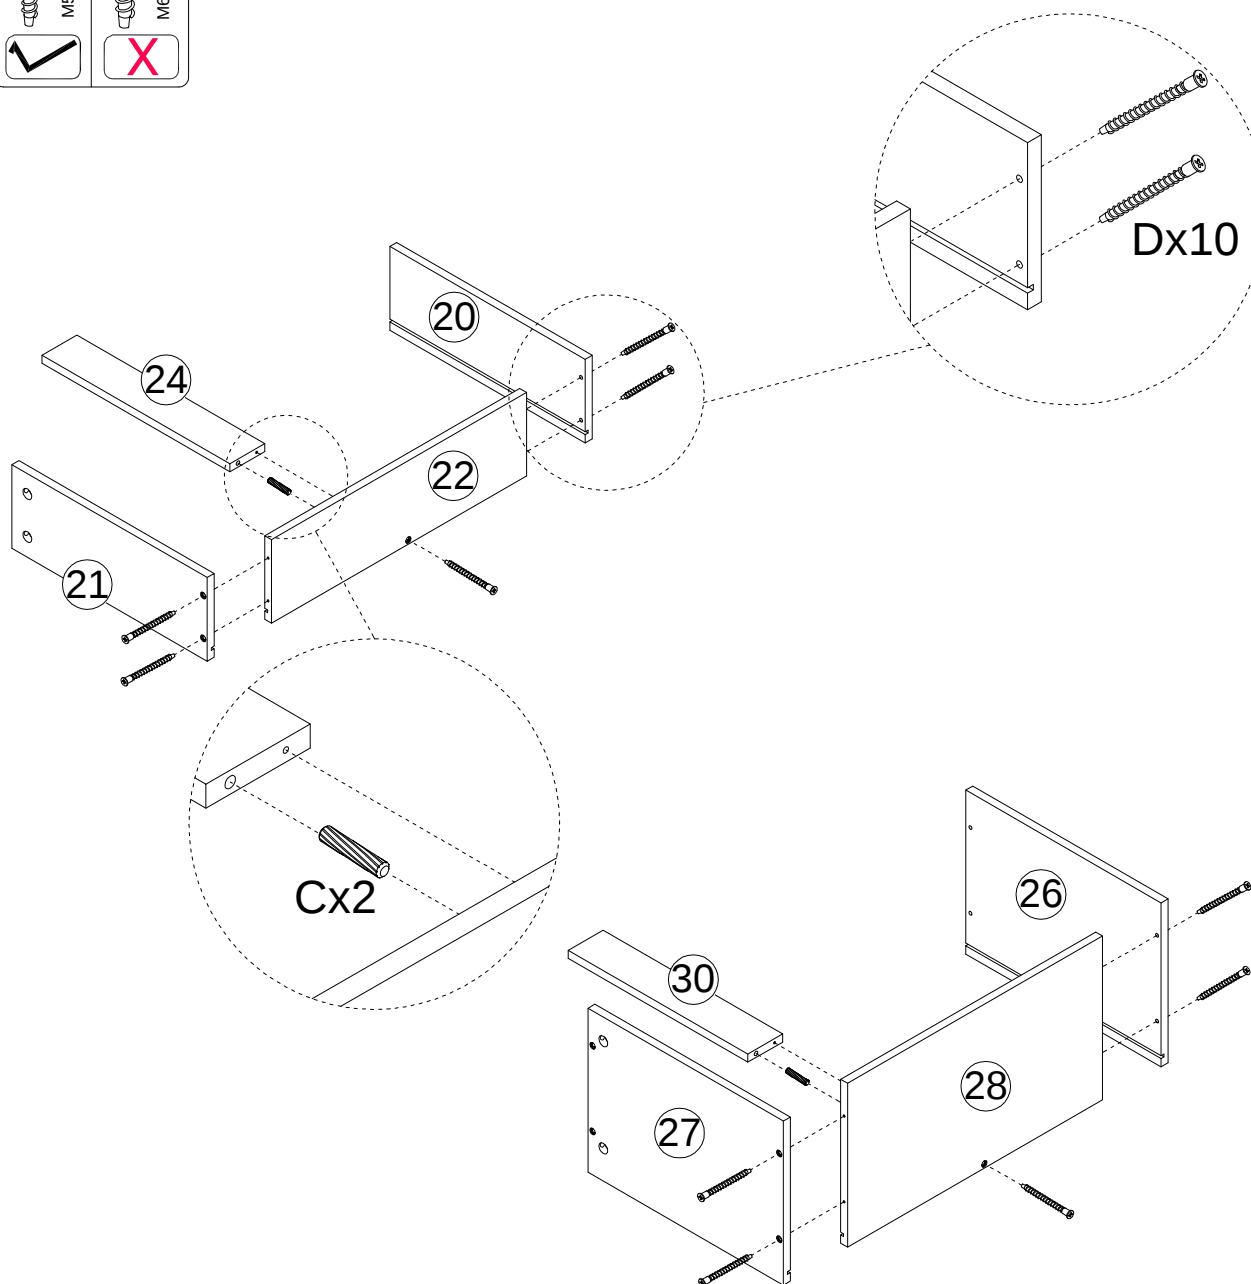
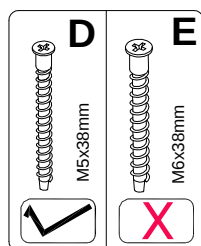


Assemble

Step 11





					
C	1PC	D	5PCS		




	D		E
M5x38mm		M6x38mm	
✓		✗	

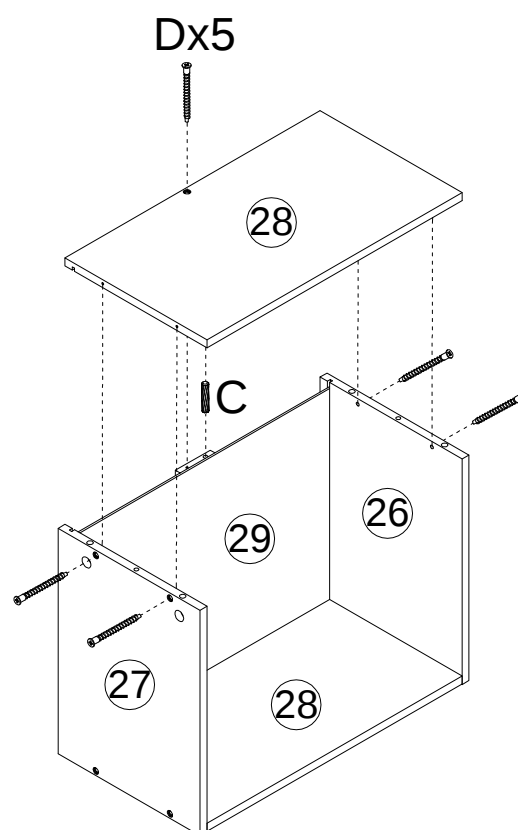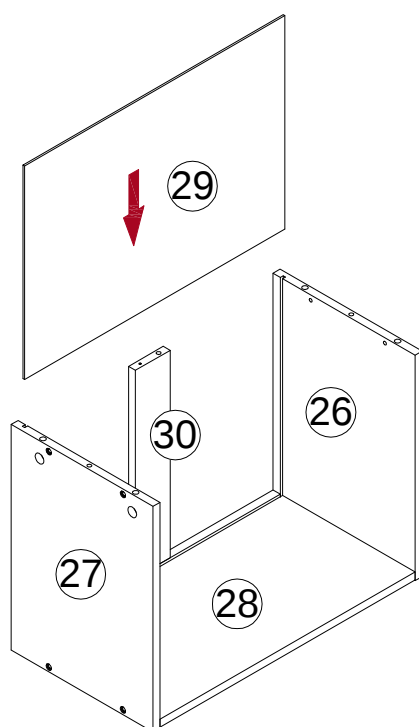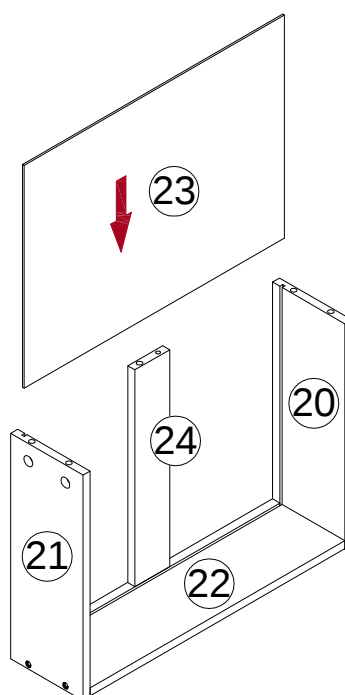

Assemble

Step 12





				
C	3PCS	B	9PCS	
		1 	2 	3 

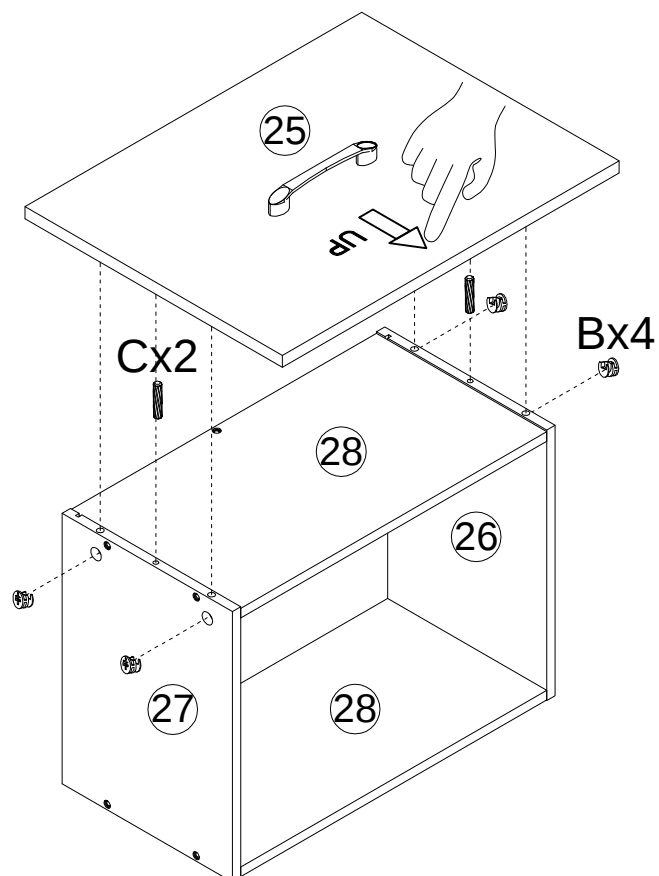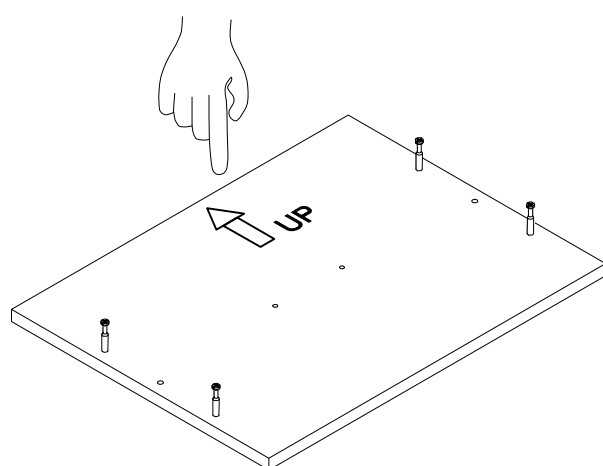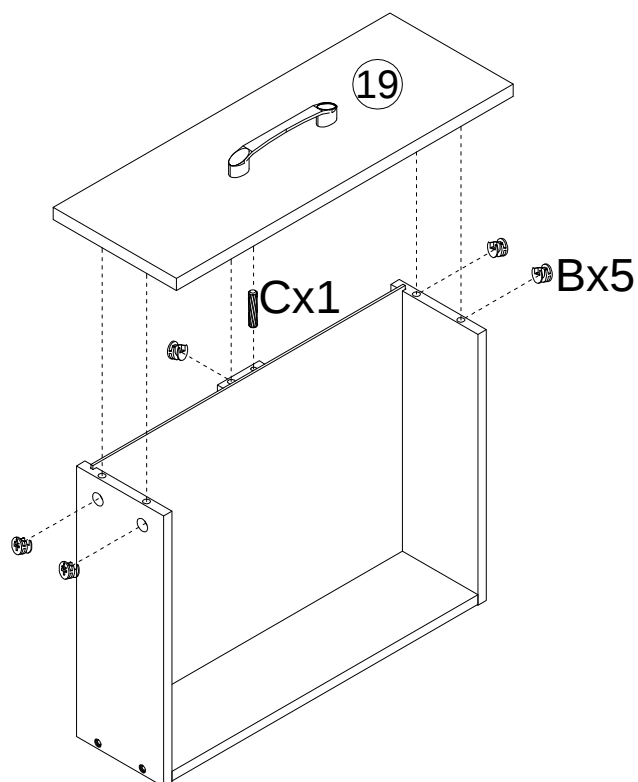

Assemble


Step 13





						
F	12PCS	DR	2PCS	DL	2PCS	

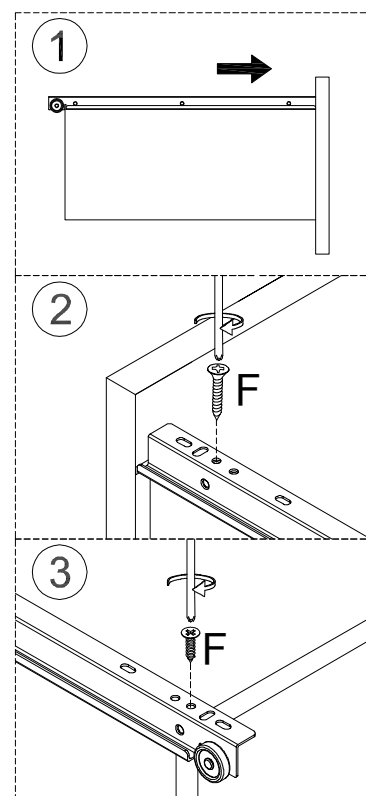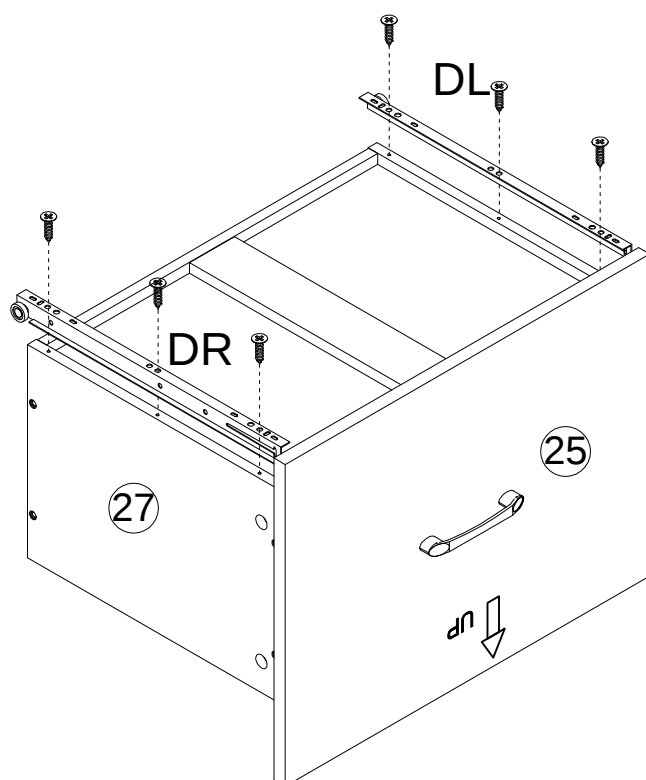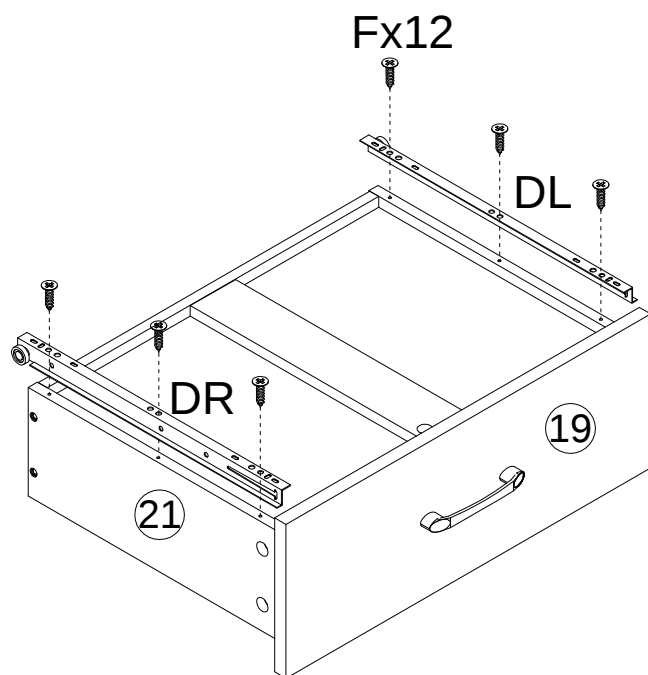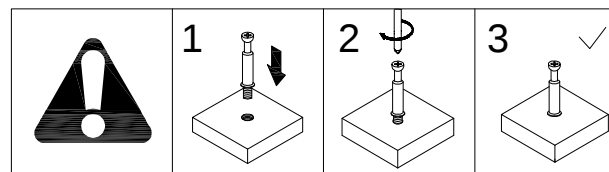

Assemble





Step 14

			
AA 2PCS	BB 2PCS	CC 2PCS	W 9PCS

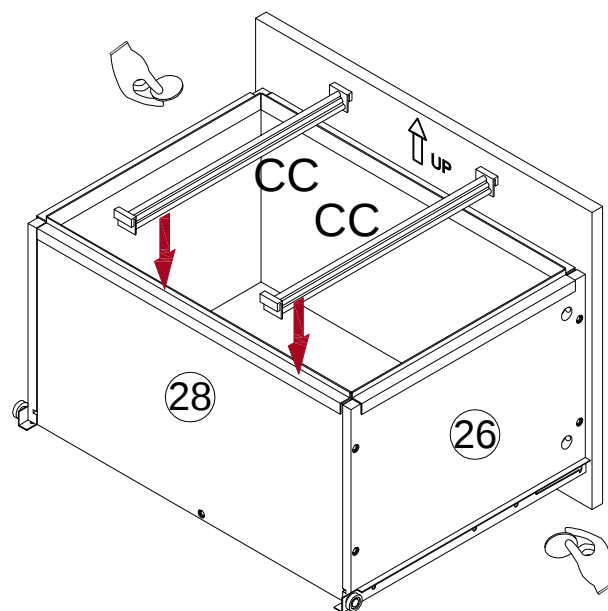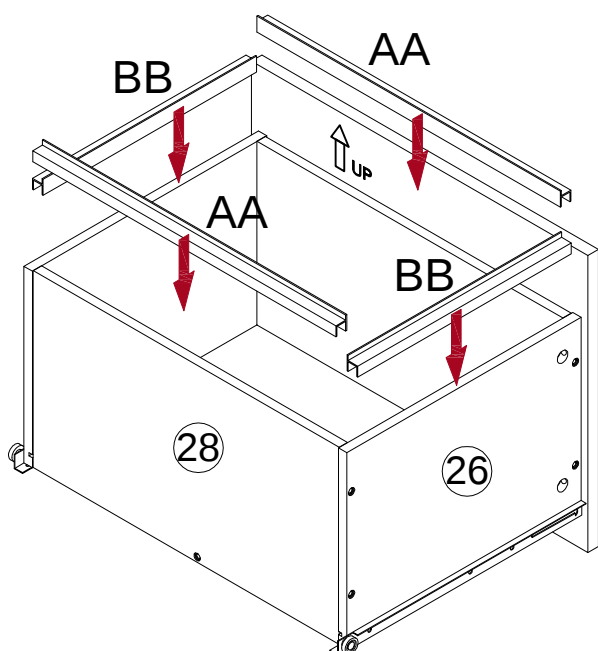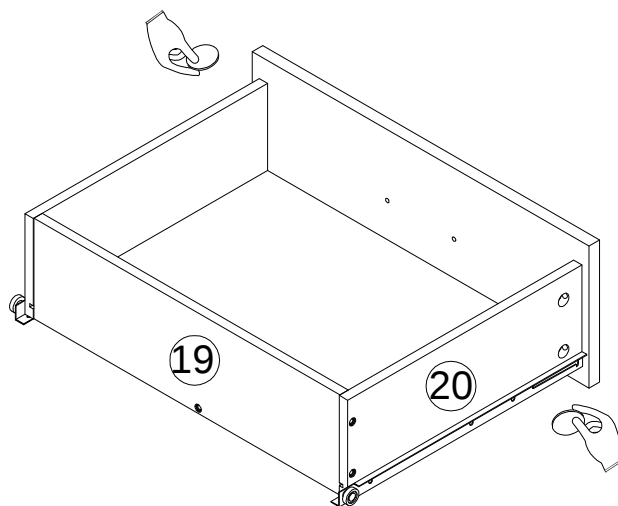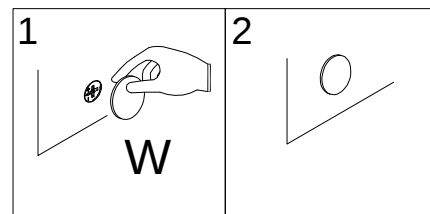





Assemble


Step 15

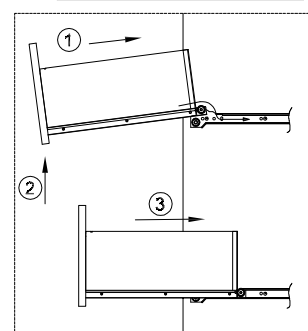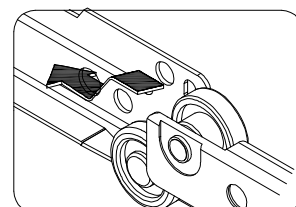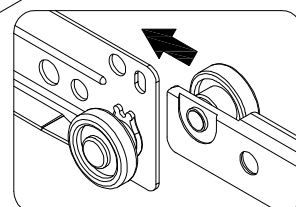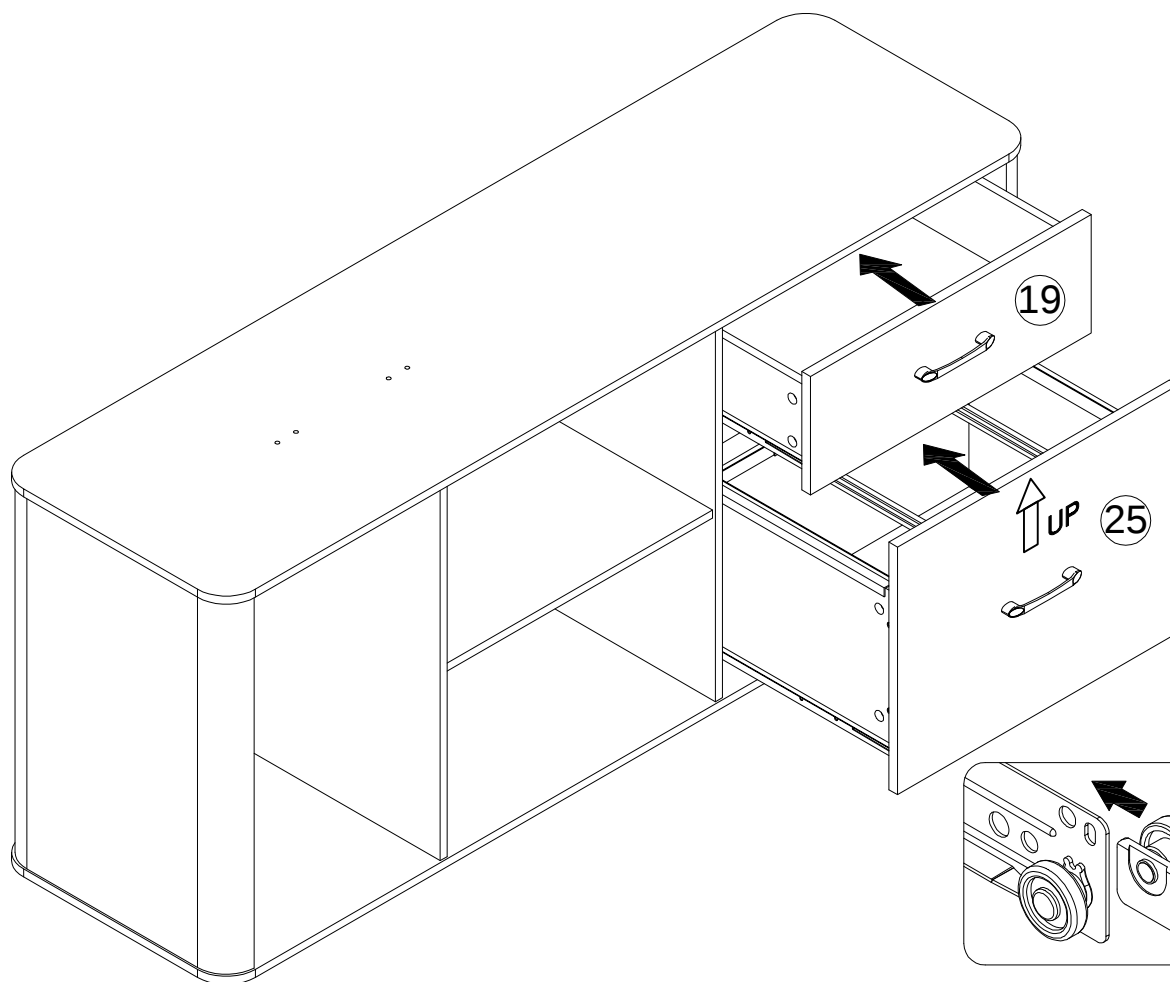

Assemble



Step 16



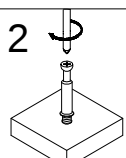
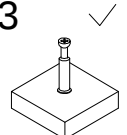
								 	
M	3PCS	N	6PCS	P	2PCS	Q	6PCS		
				 1 2 3					
R	4PCS	A	4PCS						

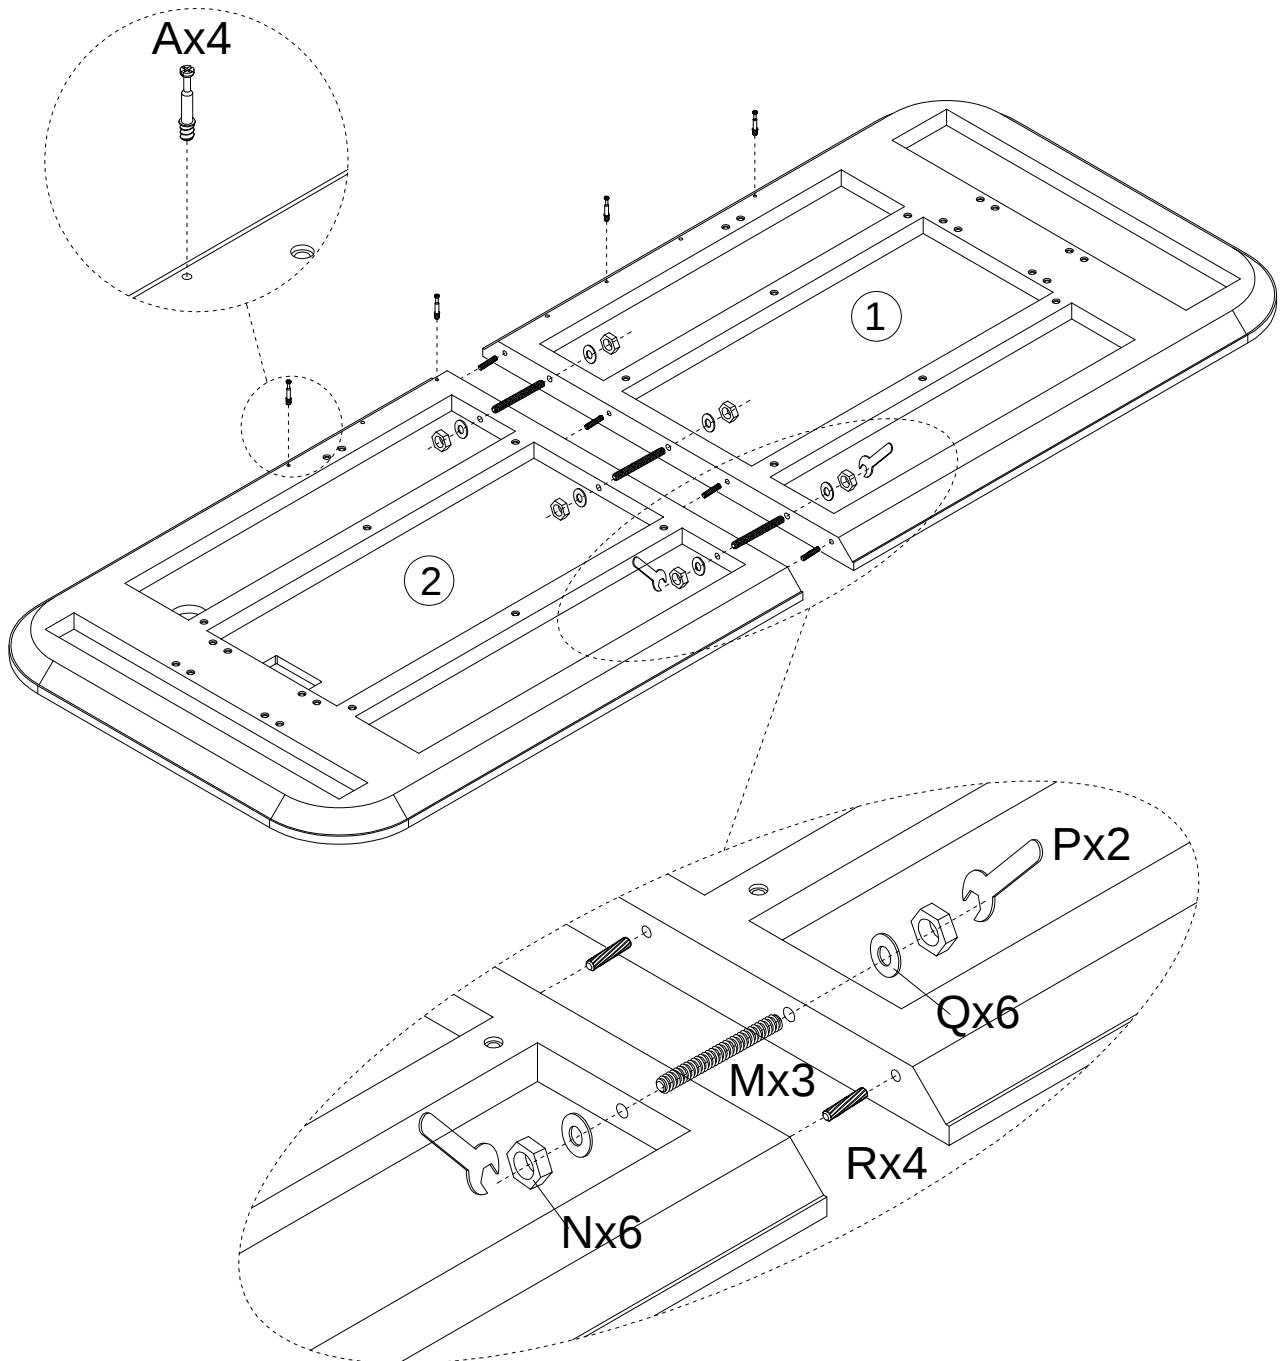

Assemble

Step 17


				
V 1PC	T 8PCS	S 4PCS	E 8PCS	

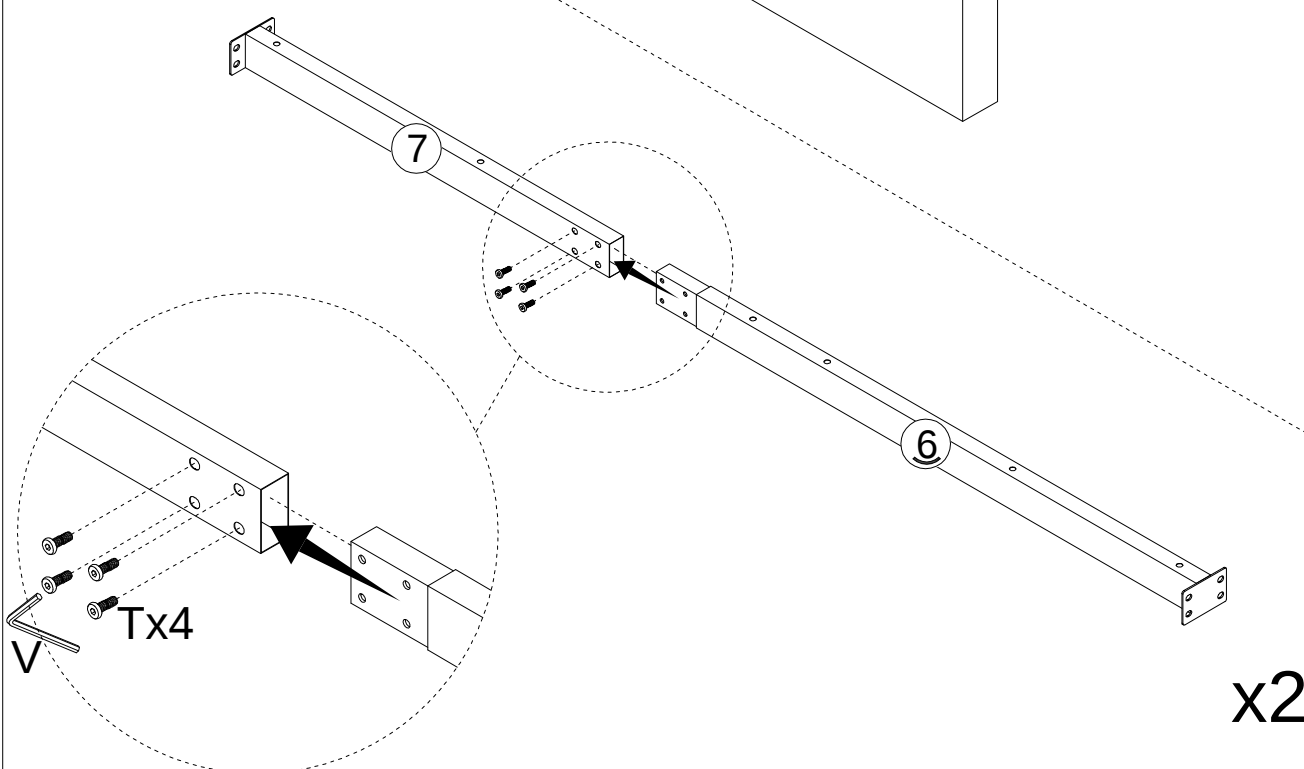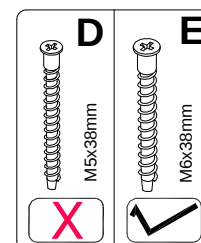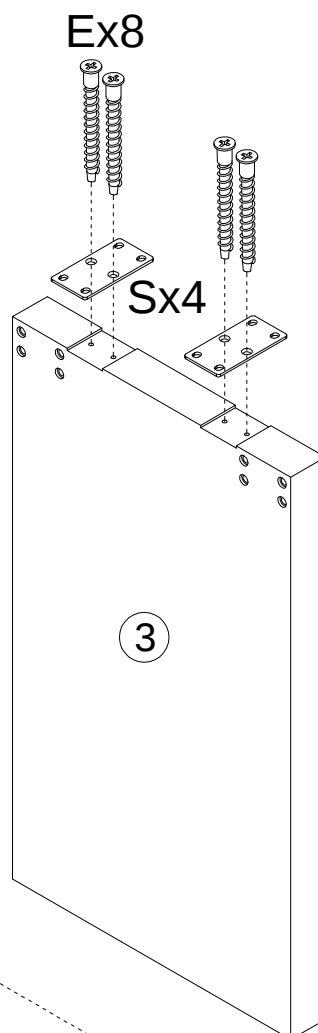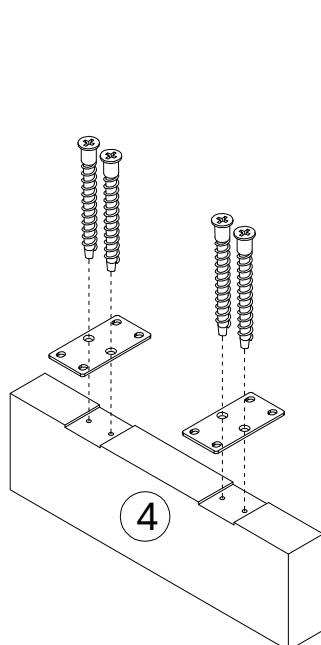


Assemble

Step 18

			
V	1PC	U	12PCS

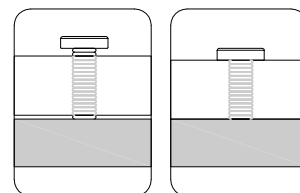


Do not fully tighten all Bolts in this Step by Allen Wrench.

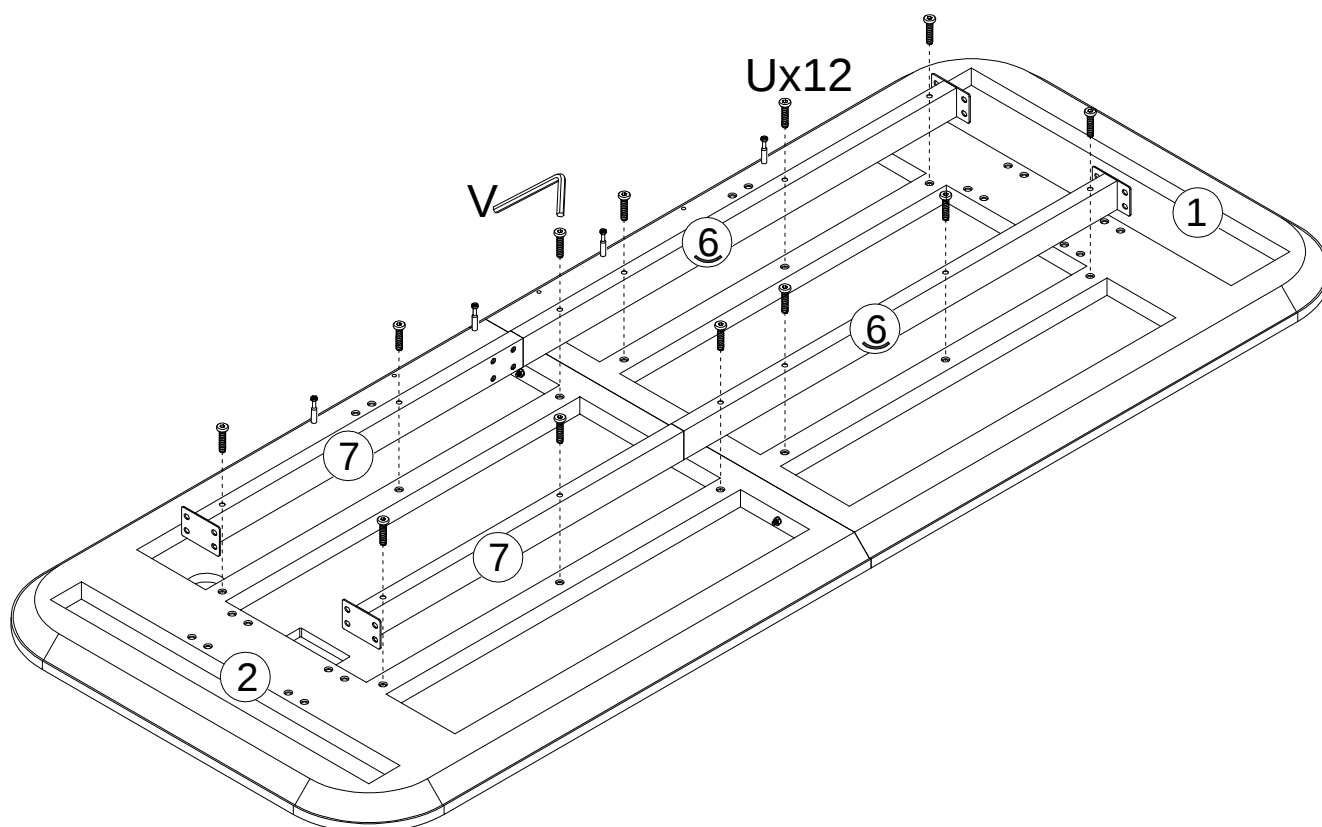

Assemble

Step 19

					
V	1PC	EE	2PCS	FF	16PCS

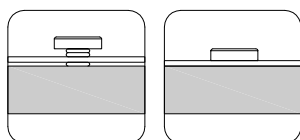


✓

X




Do not fully tighten all Bolts in this Step by Allen Wrench.

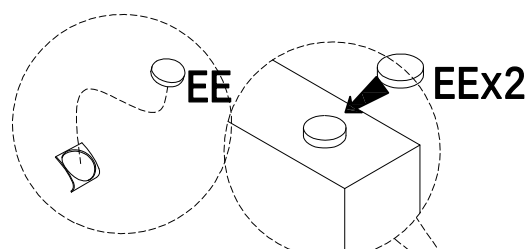

3

1

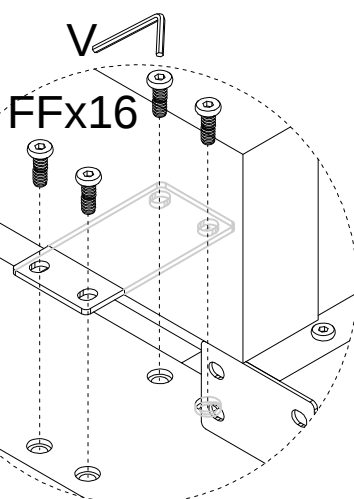


FFx16

V

4


2

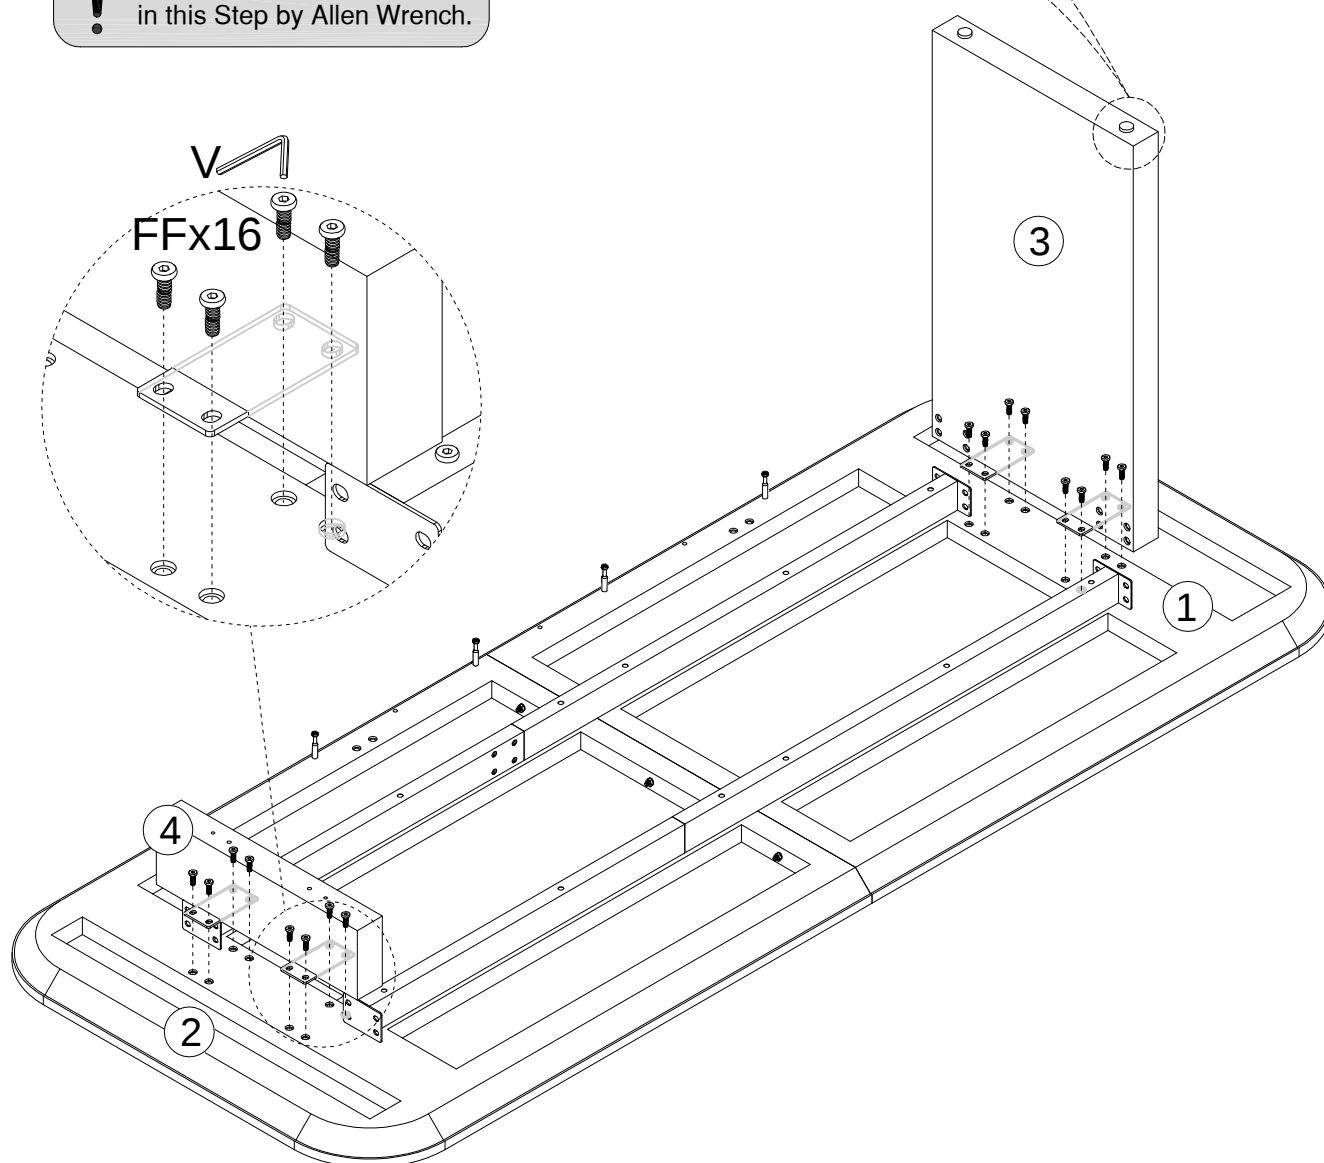

Assemble

Step 20



			
V	1PC	FF	16PCS

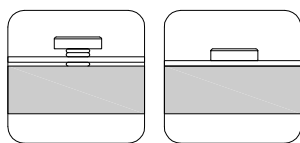

✓ X





Do not fully tighten all Bolts in this Step by Allen Wrench.

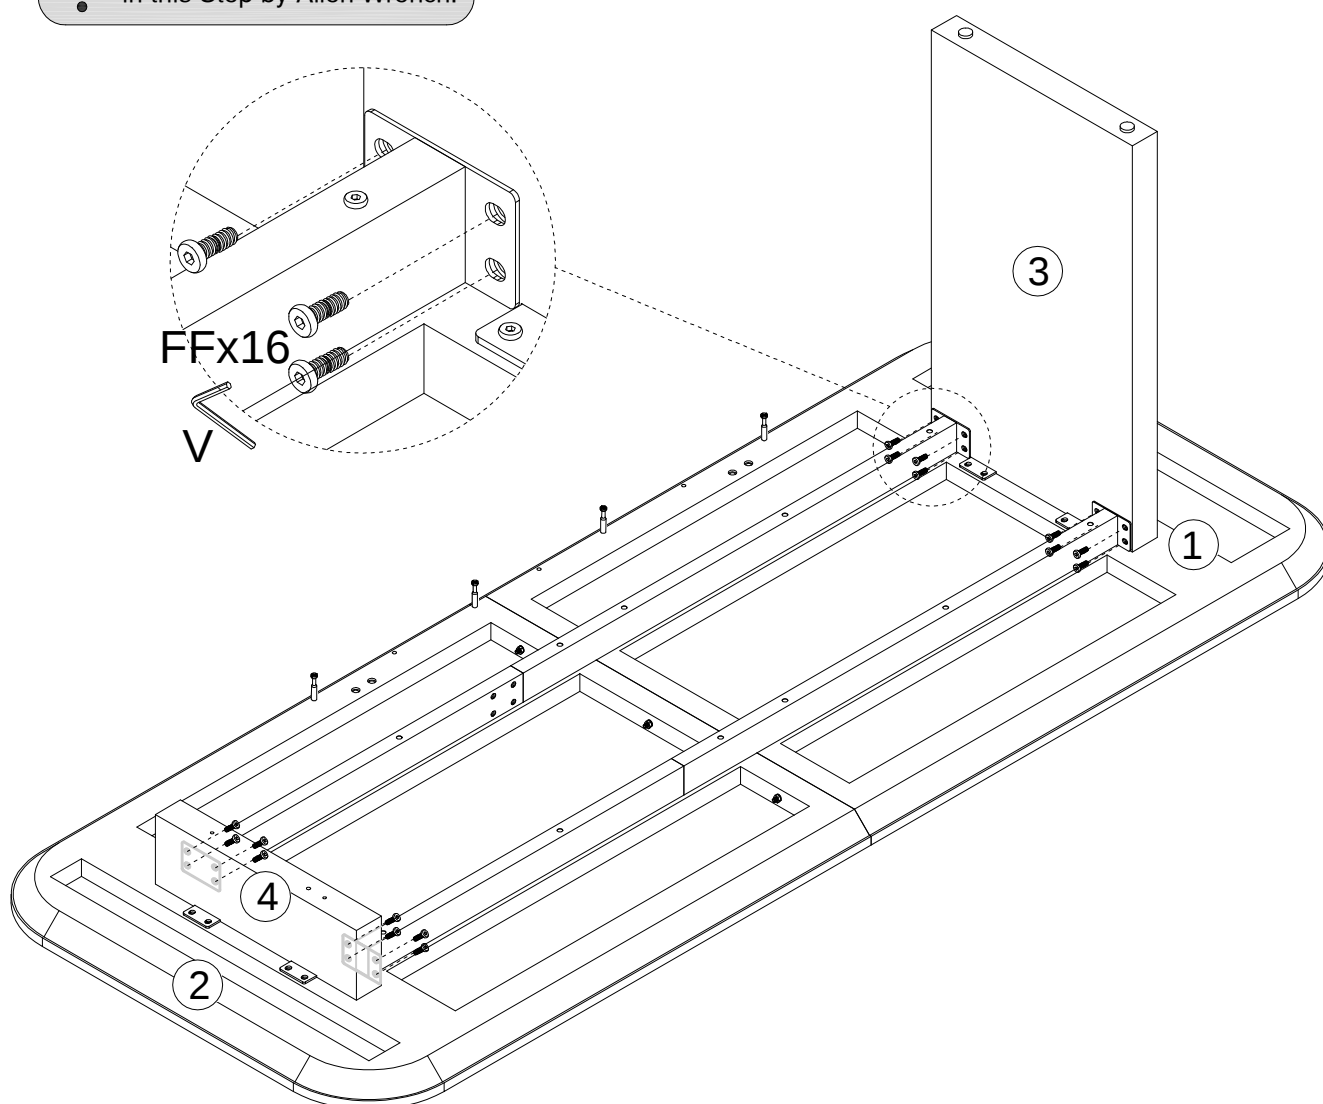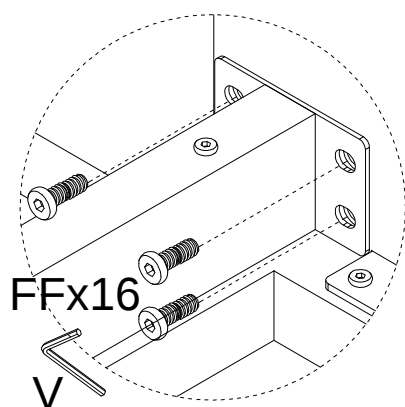


Assemble





Step 21

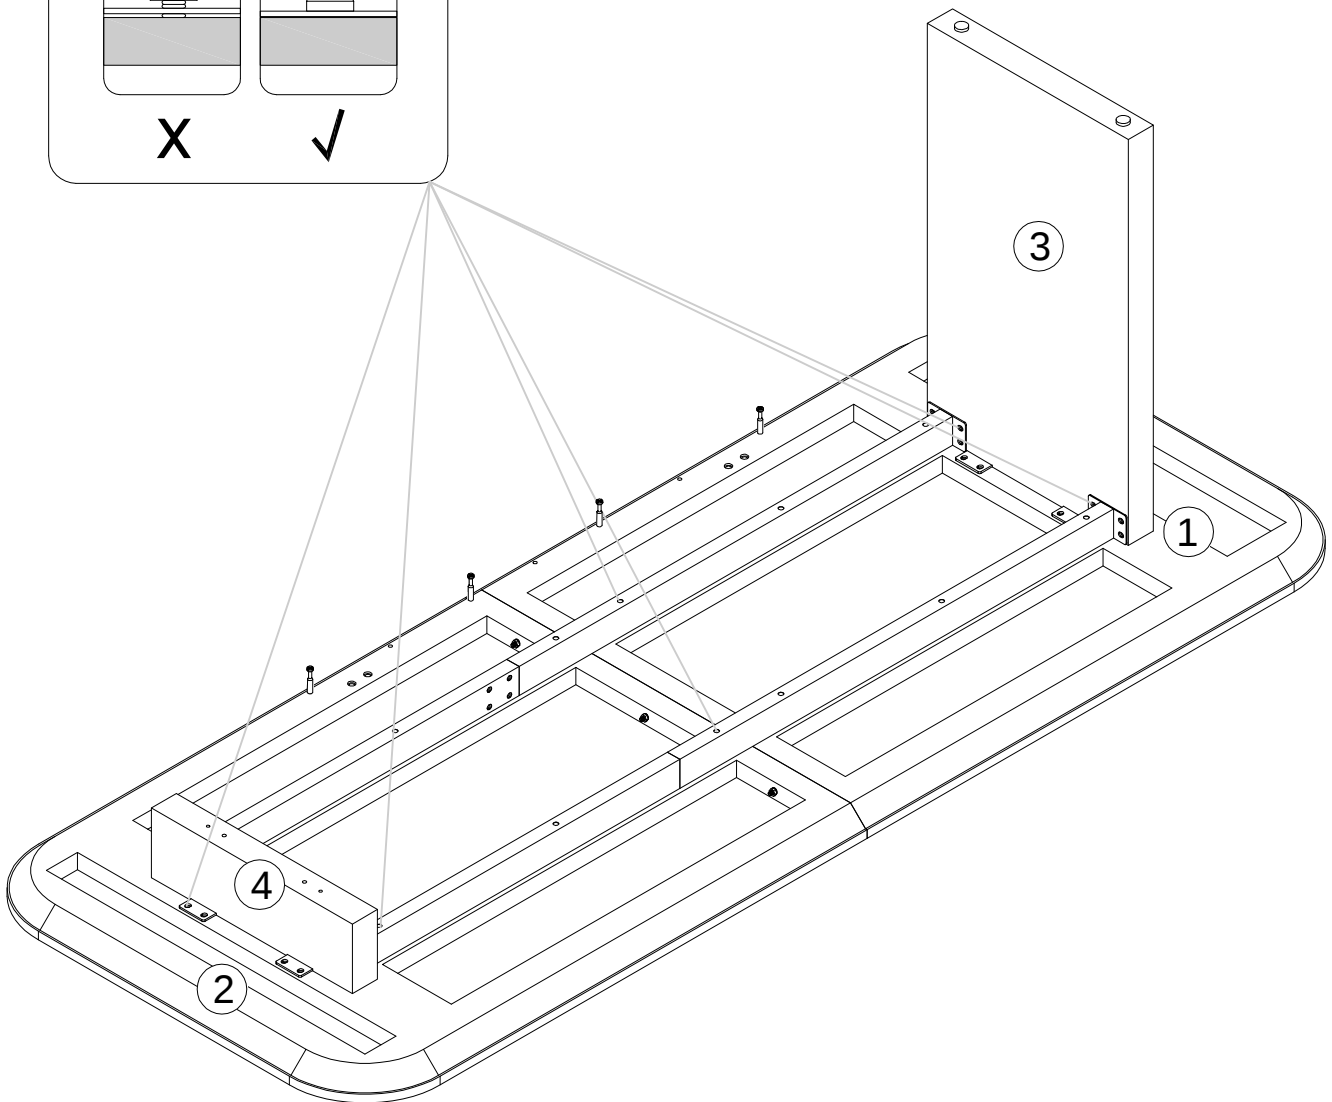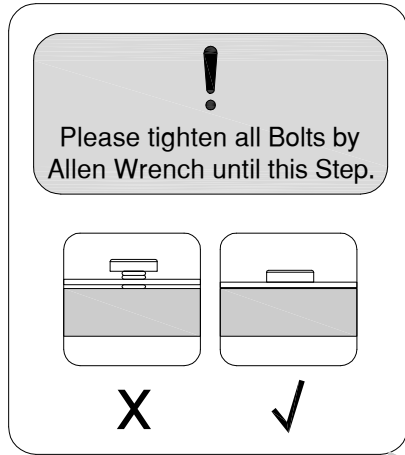

Assemble

Step 22


			
W	4PCS	C	3PCS
		B	4PCS

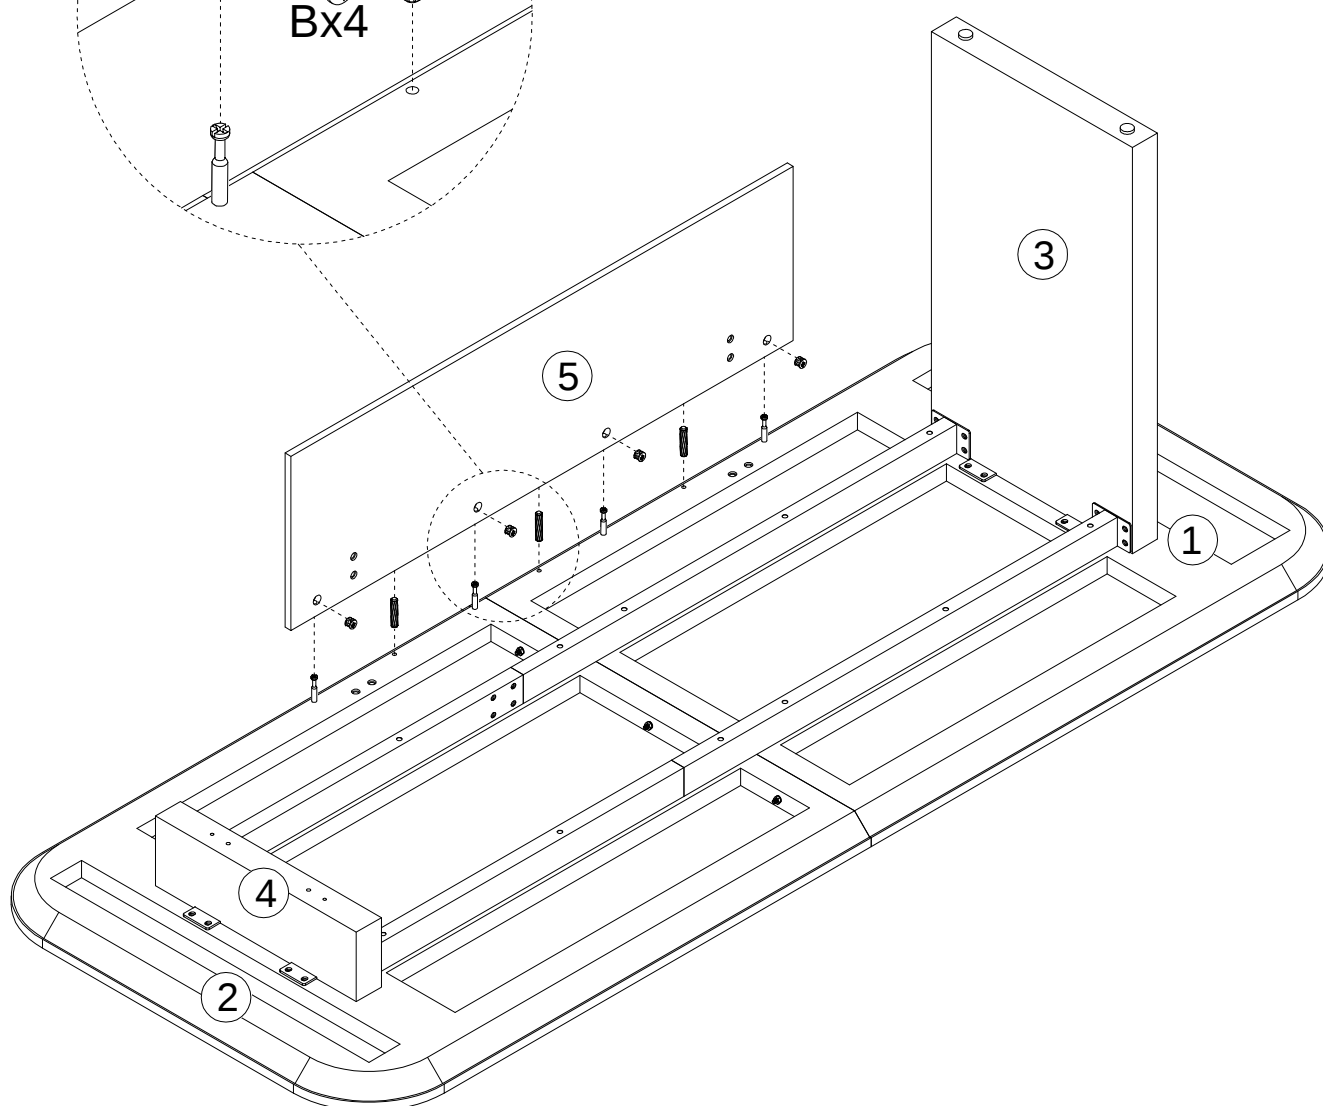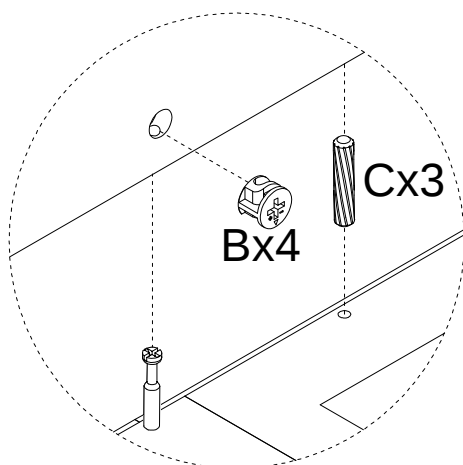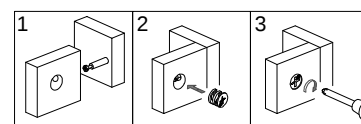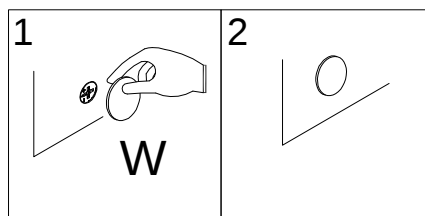

Assemble

Step 23


			
V 1PC	T 4PCS	DD 2PCS	FF 4PCS

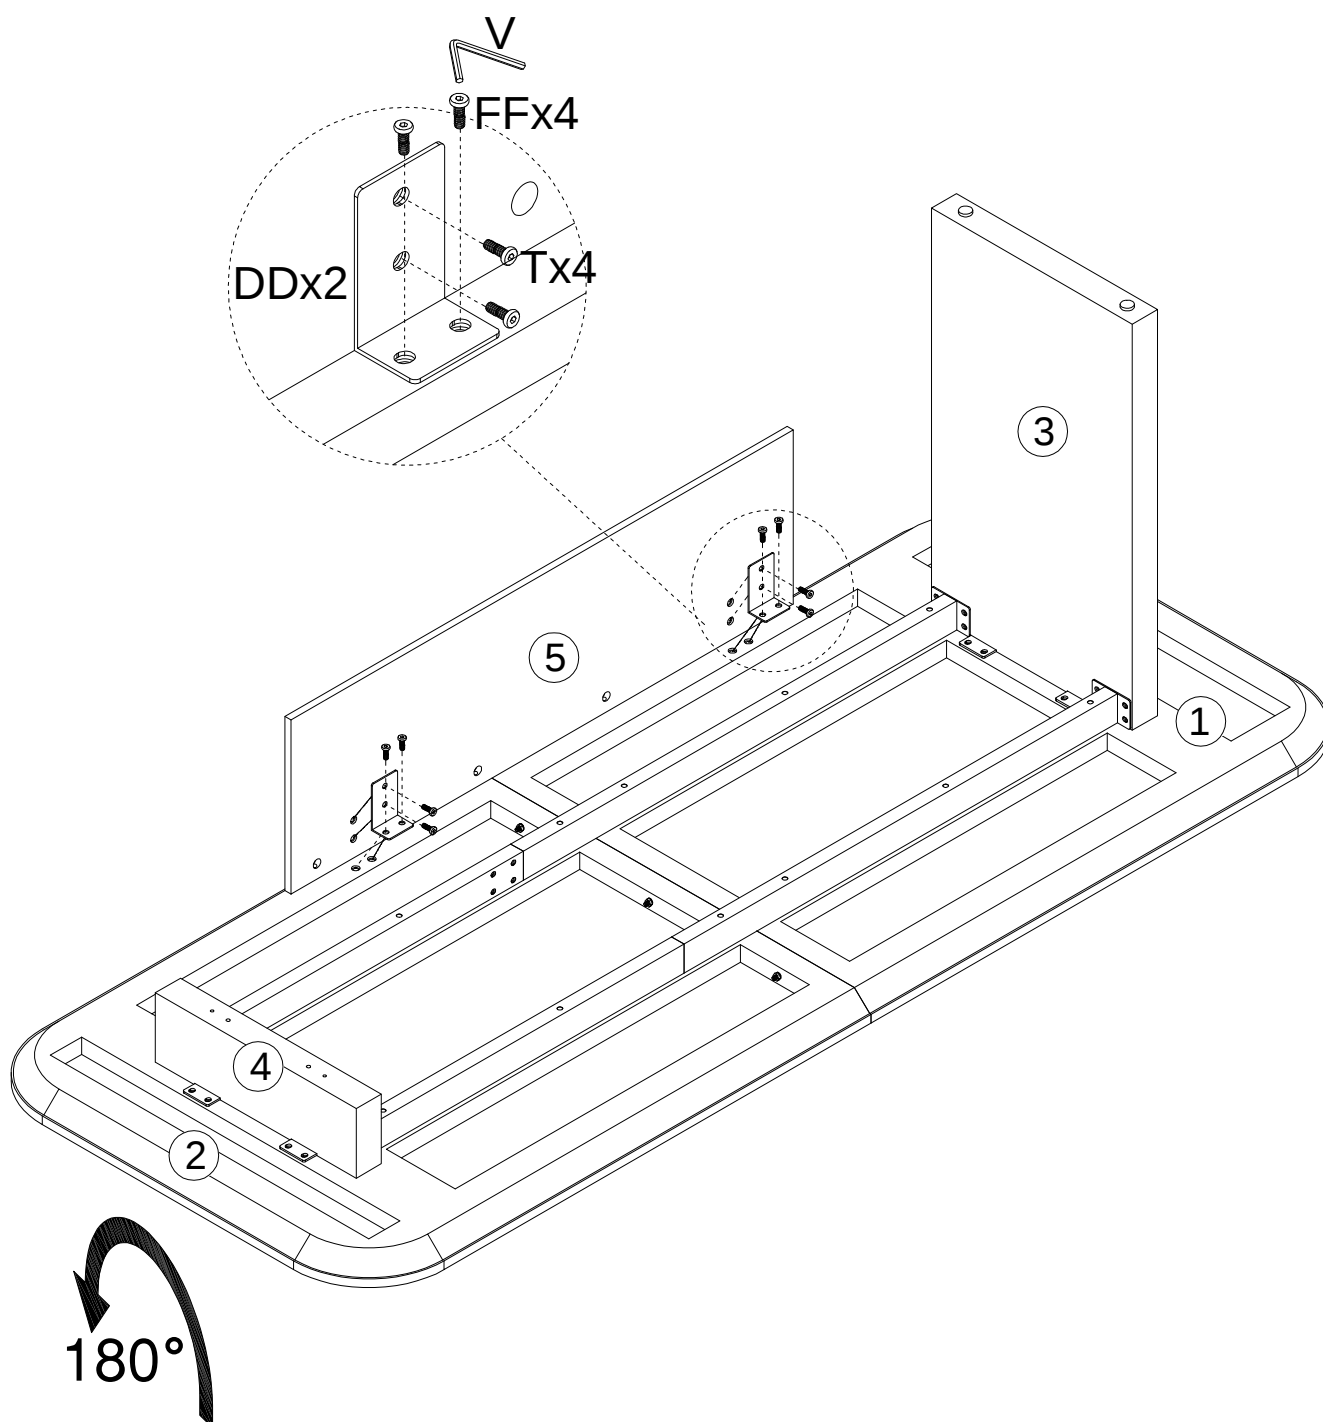


An assistant is required.


Assemble

Step 24

					
C	2PCS	E	2PCS		

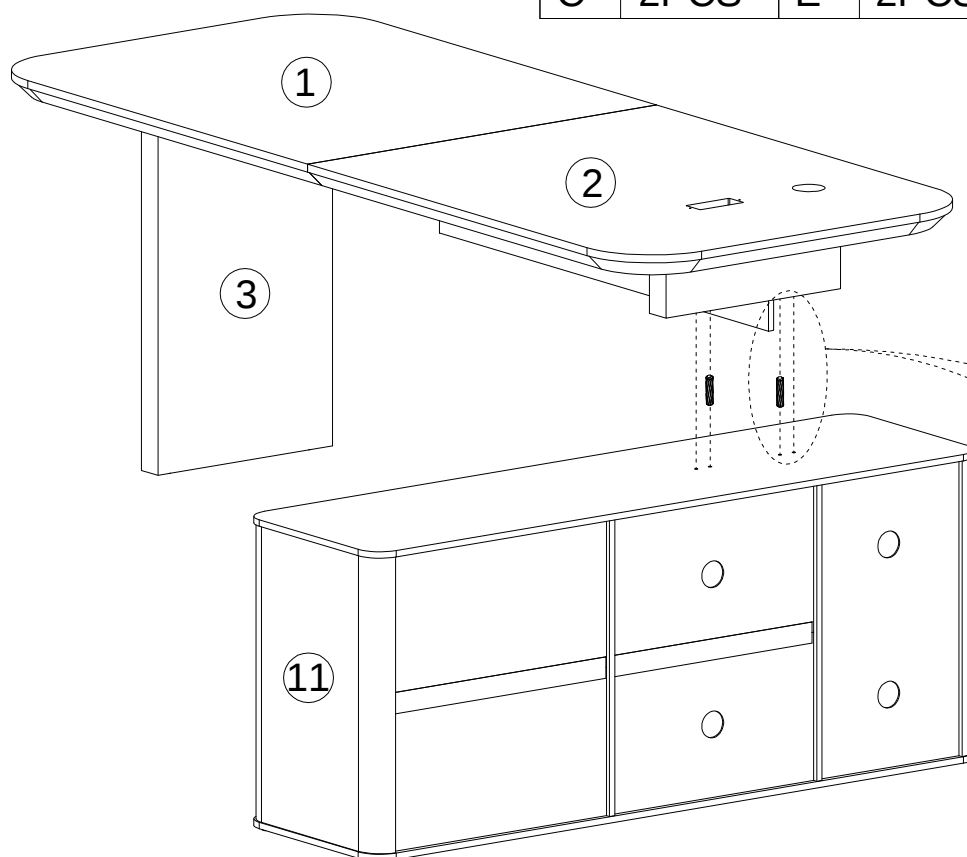



	D		E
M5x38mm		M6x38mm	
			

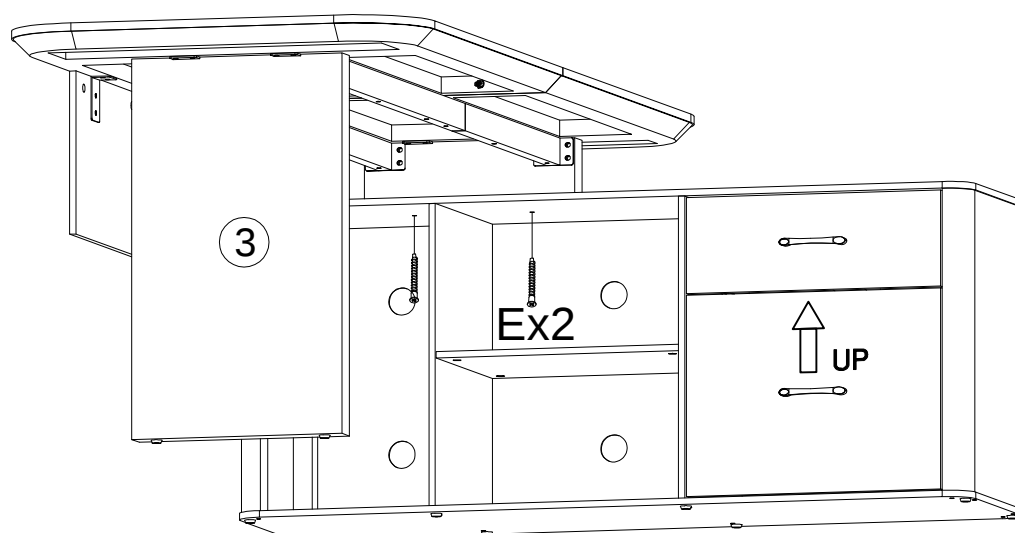

An assistant is required.

Assemble

Step 25

						
Z	2PCS	Y	1PC	X	1PC	

