

Parts List

HEADBOARD CARTON

(6) HEADBOARD PANEL

PART HARDWARE BAG FOR

HEADBOARD ATTACHMENT TO FRAME

(1) 1/4-20 X 1" FLAT ALLEN HEAD SCREW-4


(2) 1/4" ID X 5/8" OD FLAT METAL WASHER-8

(3) 1/4-20 HEX NUT-4

(4) ALLEN WRENCH-1

(5) PLASTIC GLIDE -2

NOTE: GLIDES COME PRE-INSTALLED

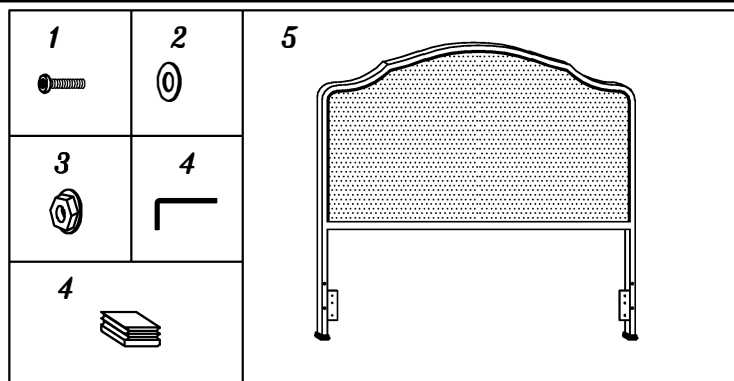

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

STEP 1- Assembly of Headboard to Frame

- Place headboard panel on desire location in room.
- Align bed frame bracket with holes on metal plate on headboard panel (6).
- Place flat metal washer (2) over screw (1). SEE FIGURE 1
- Insert screw (1) through holes on metal bracket on headboard panel (6) and into frame bracket.
- Place flat metal washer (2) over screw (1) and secure with hex nut (3).
- Use Allen wrench (4).

FIGURE 1

