


MANUAL INSTRUCTION

GAZEBO WITH SIDEWALL CURTAINS

WQSP255TN

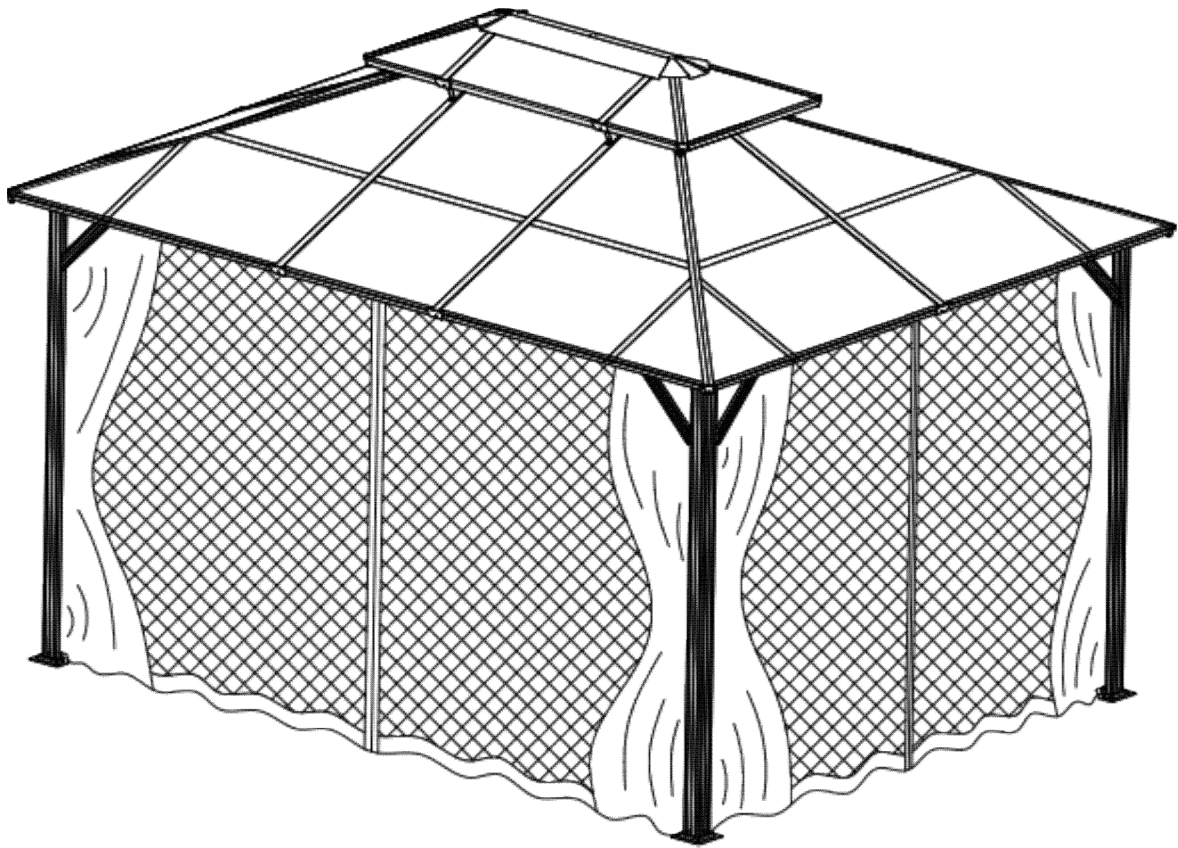

PC ROOF GAZEBO

WARNING

- During windy weather,please avoid standing inside the gazebo.
- Avoid standing under the gazebo during heavy snowfall.
- For safety,please use expansion screws to reinforce the posts around the gazebo.
- During windy weather,tighten the fence and netting to prevent tearing in high winds.
- In extreme weather conditions,you can use a rope to pull the four corners of the gazebo to keep it stable.
- Please clear the snow off the roof in time for heavy snowfall.
- Make sure all screws are tightened before use.
- Periodically check and confirm the tightness of all screws,buckles,and straps every 90 days.
- Please keep all screws loose during the assembly process and tighten them after completing the installation.
- Do not use or store near an open flame or flammable chemicals.
- Please note that some parts have sharp edges and should be handled with gloves.
- If any parts are missing,broken,damaged,or worn,discontinue use of the product until repairs are made or factory replacement parts are installed.
- Installation of the product in a manner that does not conform to the manufacturer's instructions may result in the loss of the warranty policy for this product.
- Consult your local authorities to determine if permits are required for erecting the shed.

I TOOLS REQUIRED

EQUIPMENT REQUIRED (Not included in boxes)

**NOTE: Tools / equipment are not shown to actual size and scale.*



LEVEL



RUBBER Mallet



DRILL



ALLEN KEY



SAFETY HAT



GLOVES



**STEPLADDER
(6.5ft Or More)**



SAFETY GOGGLES



PHILLIPS SCREW

Matters needing attention



**Three or more people
are required for
assembly**



**Do not fully tighten
screws prior to complete
assembly**

PACKING LIST

Serial number

Box A

Part name	J4	J5	J6	J7	K4	K5	K6
Qty	4	4	4	4	4	4	4
Part name	K7	L1	L2	L	C2	C3	Z6
Qty	2	2	2	2	4	4	8
Part name	D4	M	Z5	N1	O	O2	O3
Qty	4	4	4	4	8	4	6
Part name	P	P1	P2	R	T5	U	U1
Qty	8	10	3	4	1	96	8
Part name	V	W	W1	X	X1	Y	Y2
Qty	32	162	18	8	16	20	3
Part name	Z	Z1	Z2	Z3			
Qty	12	1	1	1			

PACKING LIST

Serial number

Box B

Part name	A	B12	B13	D5	B14	B15	E5
Qty	4	2	2	4	2	2	4

Part name	E6	E7	E8	F3			
Qty	4	4	4	8			



Box C

Part name	B8	B9	B10	B11	D1	D6	D7
Qty	2	2	2	2	4	2	4

Part name	D8	F4	F2	G	G2	I	N
Qty	4	4	4	2	2	2	4








Part name	O1	Q1	Q3	Q4	H4	H5	E9
Qty	8	8	1	2	1	1	2


Part name	T4	S2					
Qty	4	4					

	A x4
	B8 x2
	B9 x2
	B12 x2
	B13 x2
	B10 x2
	B11 x2
	B14 x2
	B15 x2
	C2 x4
	C3 x4
	D5 x4
	D1 x4
	D8 x4
 	D6 x2


ASSEMBLY

Instruction

	D4 x4
	Z5 x4
	D7 x4
	E5 x4
	E6 x4
	E7 x4
	E8 x4
	E9 x2
	F3 x8
	F4 x4
	F2 x4
	G x2
	G2 x2




H4 x1




H5 x1




I x2

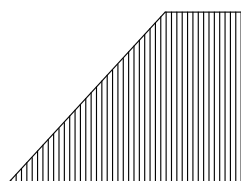


J4 x4

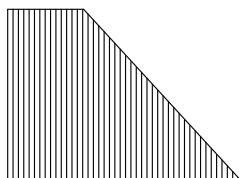


J5 x4

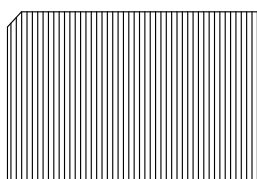


J6 x4

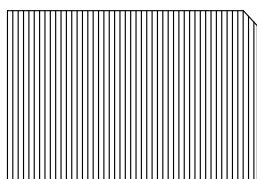


J7 x4

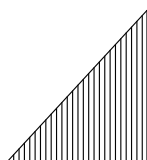


K4 x4

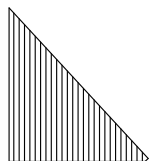


K5 x4

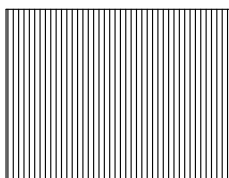


K6 x4




K7 x2




L x2



L1 x2




L2 x2



Z6 x8




M x4






N x4






N1 x4

	O x8
	O1 x8
	O2 x4
	O3 x6
	P x8
	P1 x10
	P2 x3
	Q4 x1
	Q1 x8
	Q5 x2
	R x4
	S2 x4
	T4 x4

		T5 x1
		U x96
 Ø11 * Ø6* 20mm		U1 x8
		V x32
 M6 * 15 mm		W x162
 M6 * 20mm		W1 x18
 M6 * 35 mm		X x8
 M4 * 12 mm		X1 x16
 ST4.8* 12 mm		Y x20
 M6		Y2 x3
		Z x12
		Z1 x1
		Z2 x1
		Z3 x1


No.	Qty	Picture	No.	Qty	Picture
A	4		W	12	 M6 * 15 mm
R	4				

Step1

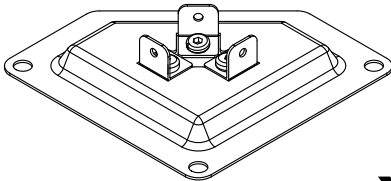
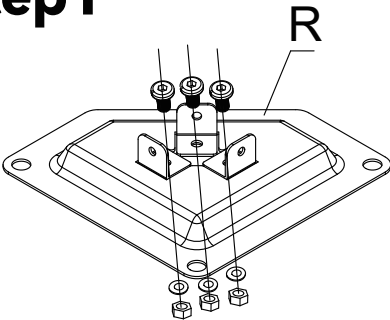


x4


Step2

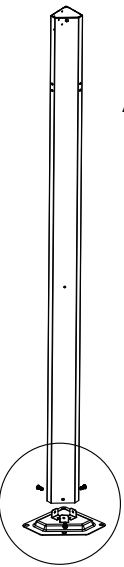

A



W

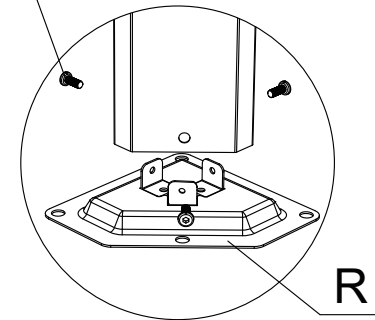



R

Z1	Z2
	

4pcs

No.	Qty	Picture	No.	Qty	Picture
B8	2		B9	2	
B12	2		B13	2	
B10	2		B11	2	
B14	2		B15	2	
W	16	M6 * 15 mm			


Step3

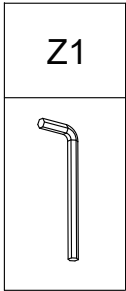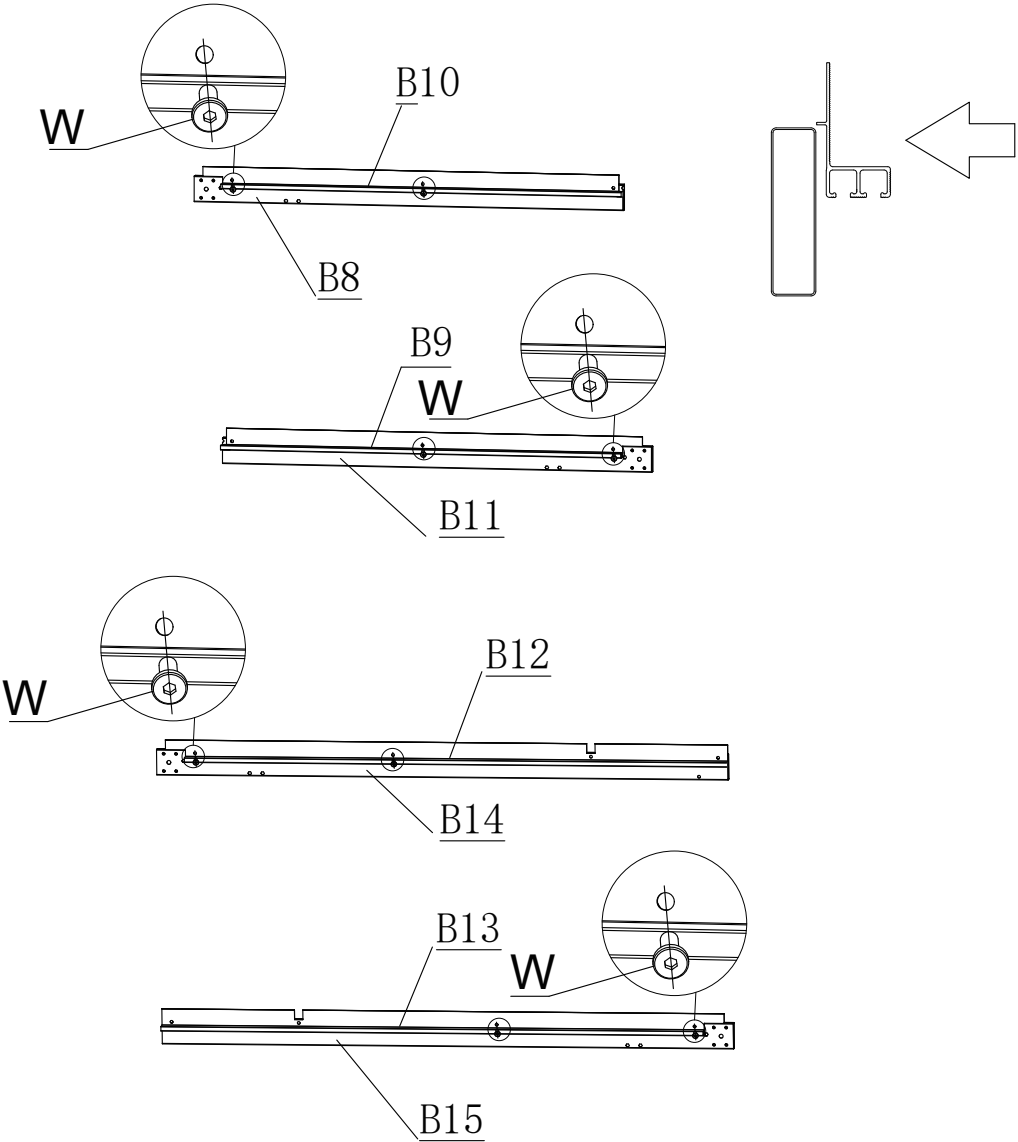

x2


No.	Qty	Picture	No.	Qty	Picture
B8	2		B9	2	
B12	2		B13	2	
W	24	M6 * 15 mm	M	4	

Step4

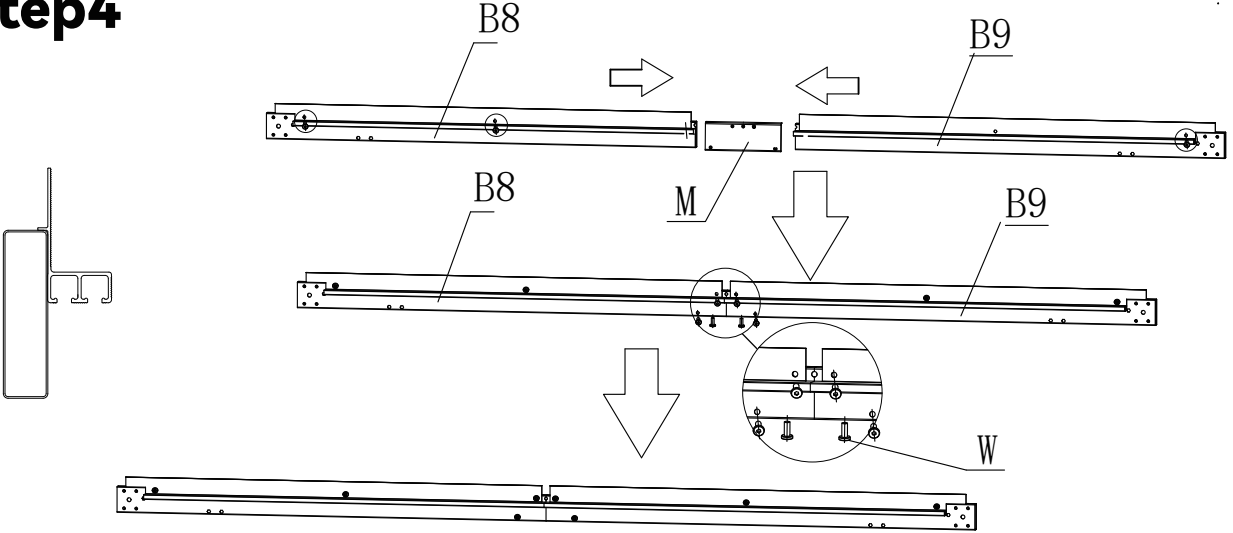



x2

Step5


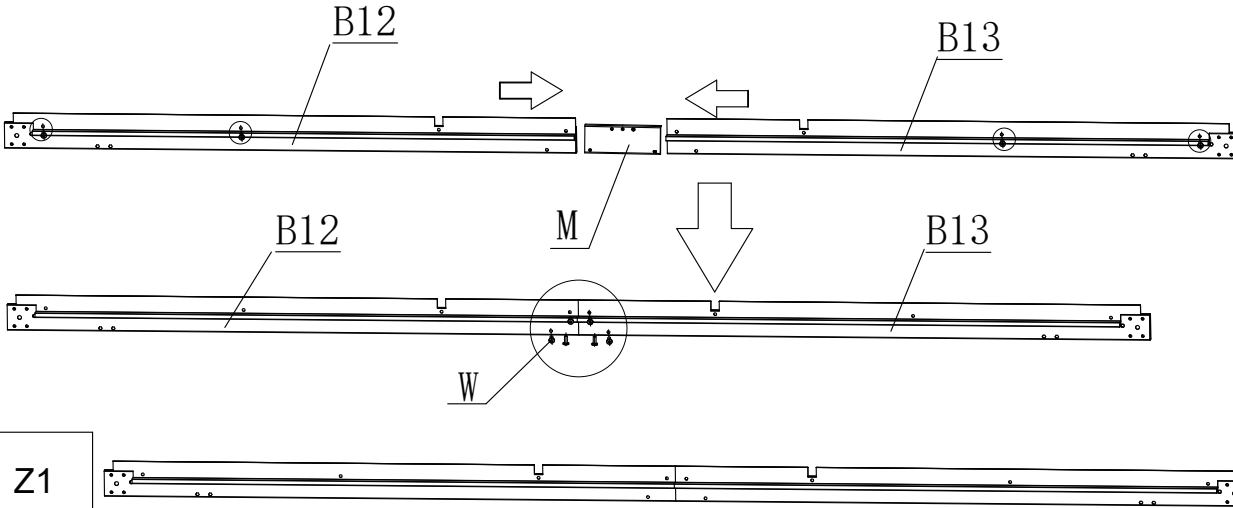


x2

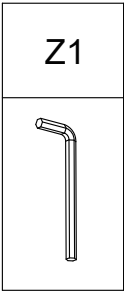


No.	Qty	Picture	No.	Qty	Picture
V	32				

Step6

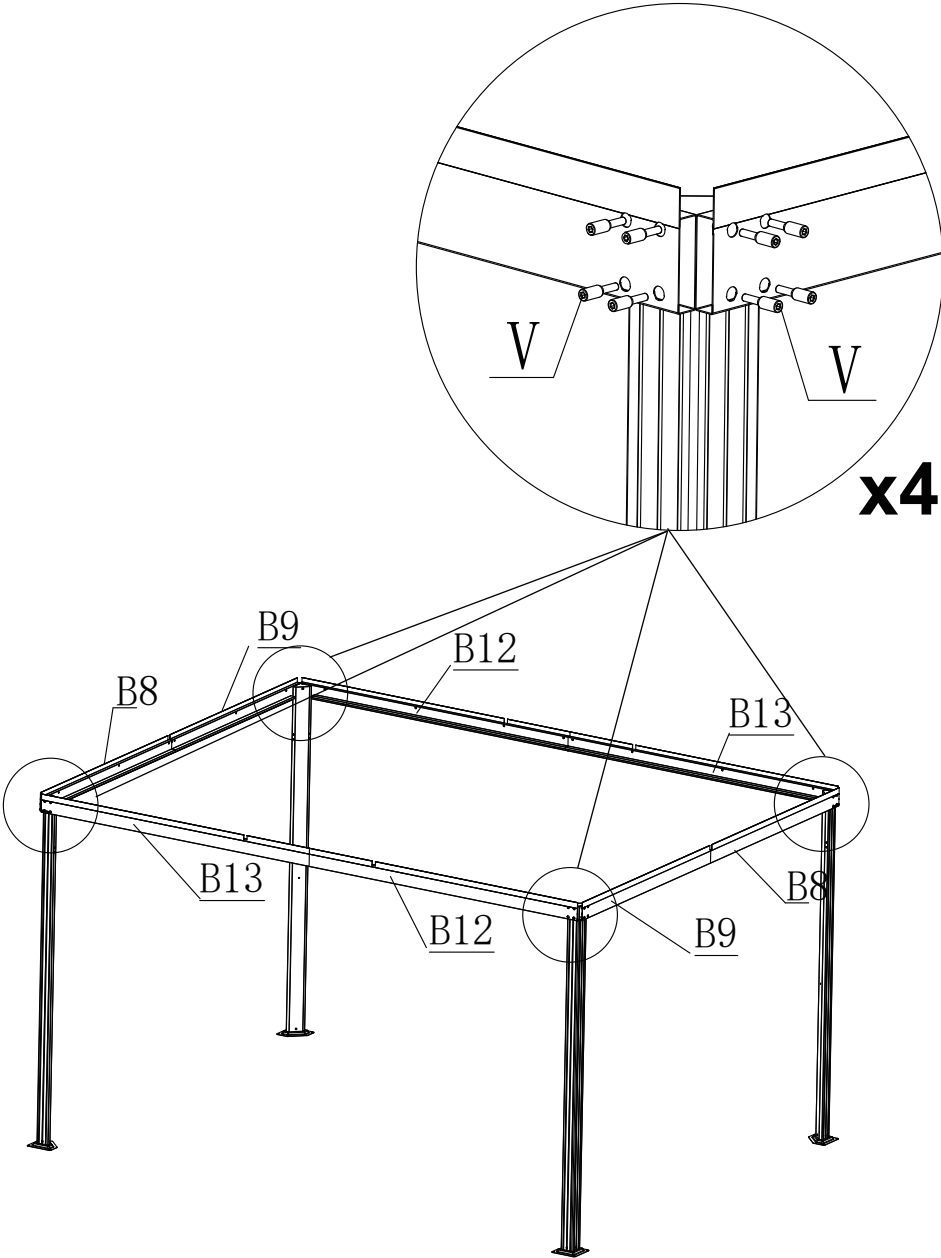

No.	Qty	Picture	No.	Qty	Picture
C2	4		W	24	 M6 * 15 mm
C3	4		O	8	
			X1	16	 M4 * 12 mm


Step7

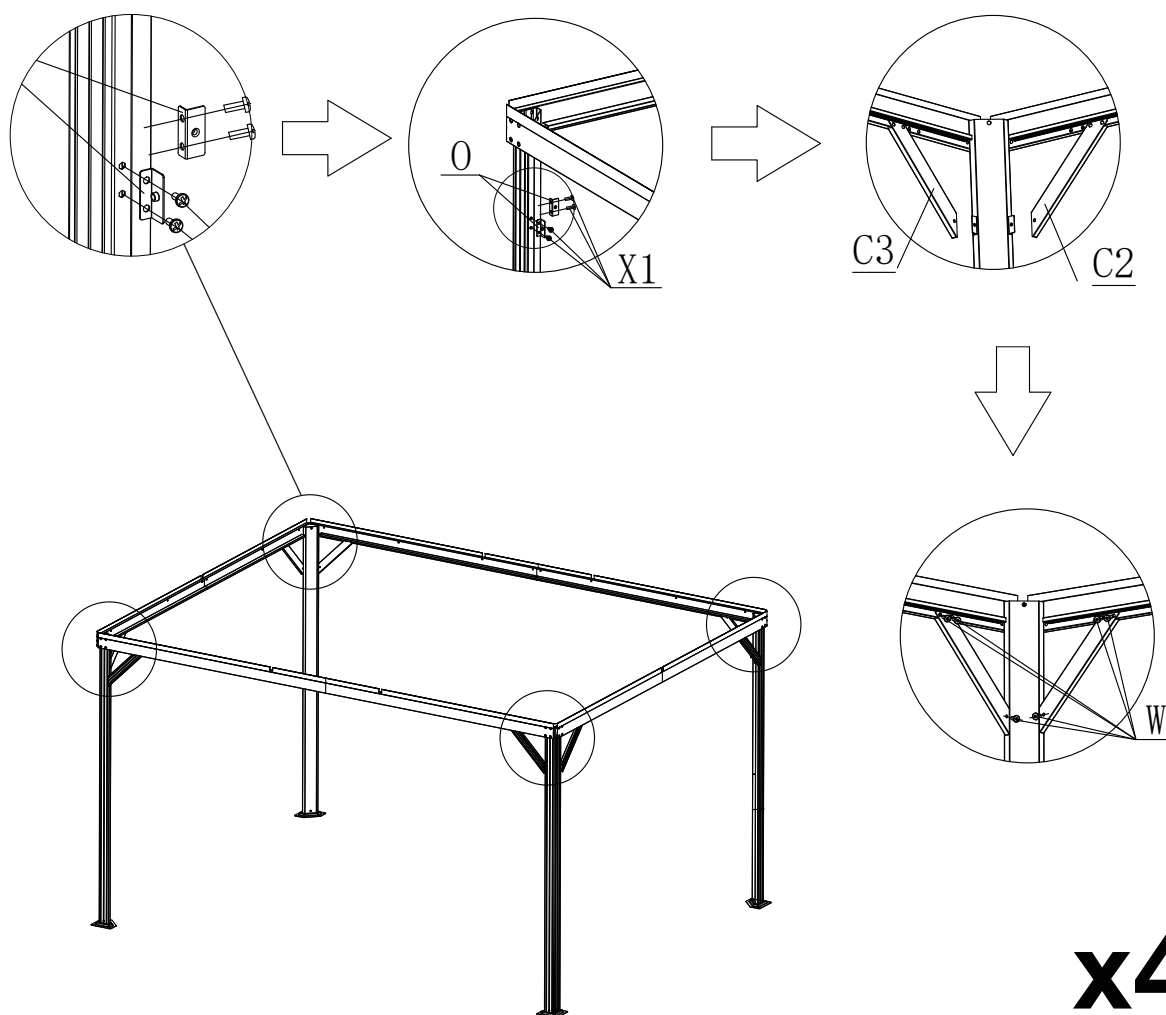

Z1	Z3
	


No.	Qty	Picture	No.	Qty	Picture
N	4		Y	12	 ST4.8* 12 mm
N1	4				

Step8

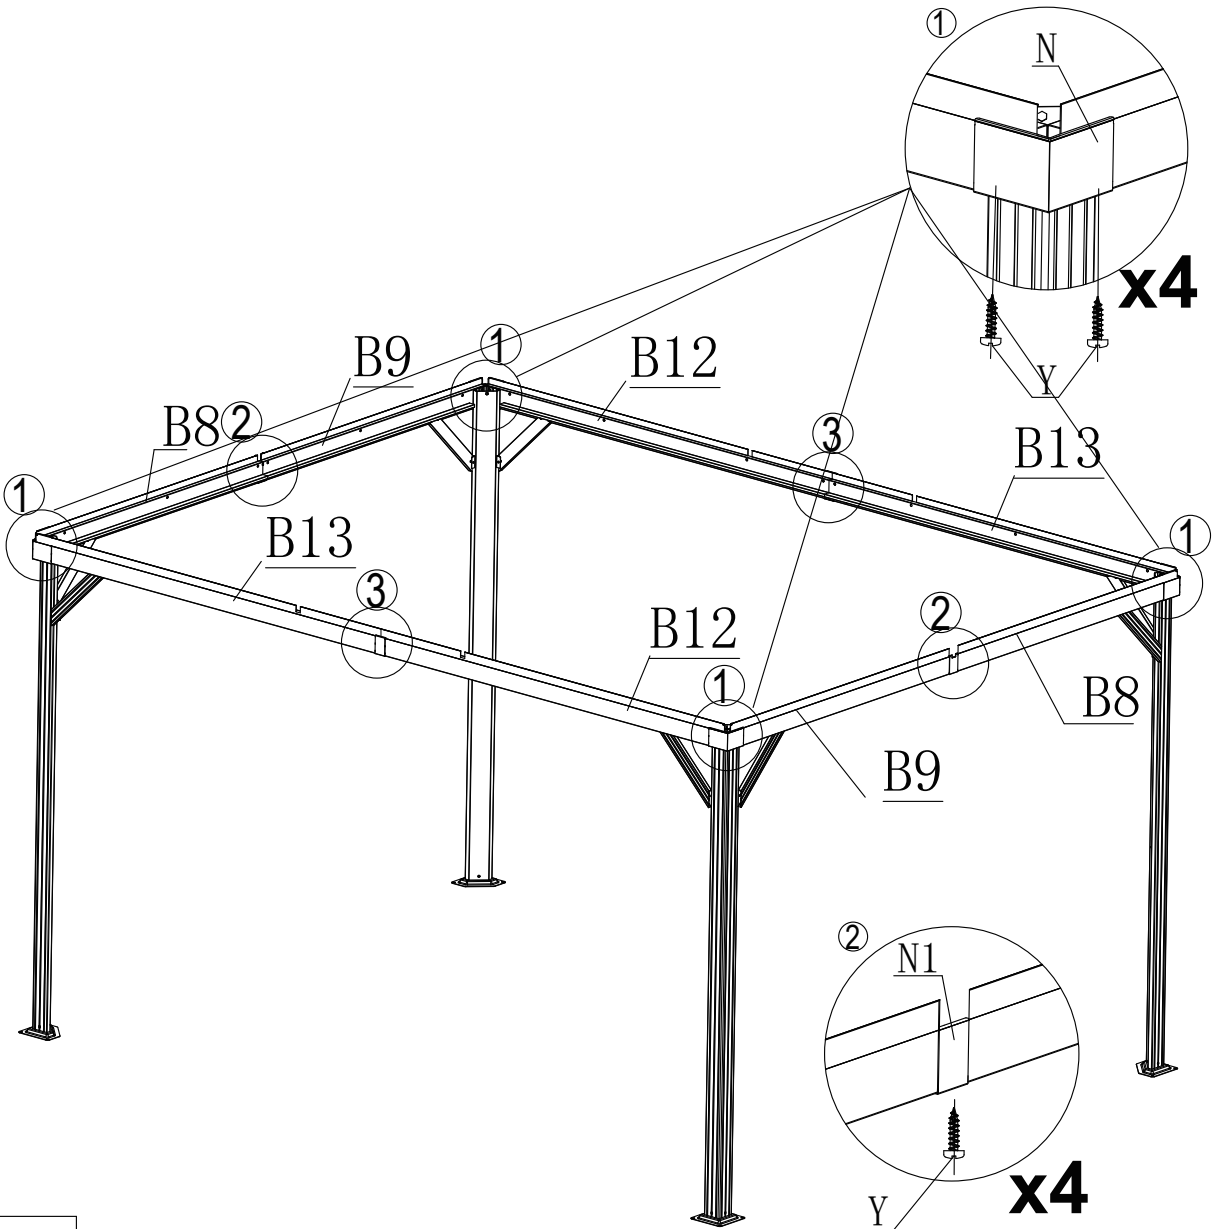



Z3




No.	Qty	Picture	No.	Qty	Picture
D5	4		W	24	
D1	4		O1	4	
O2	4		D7	4	
Z5	4				

Step8


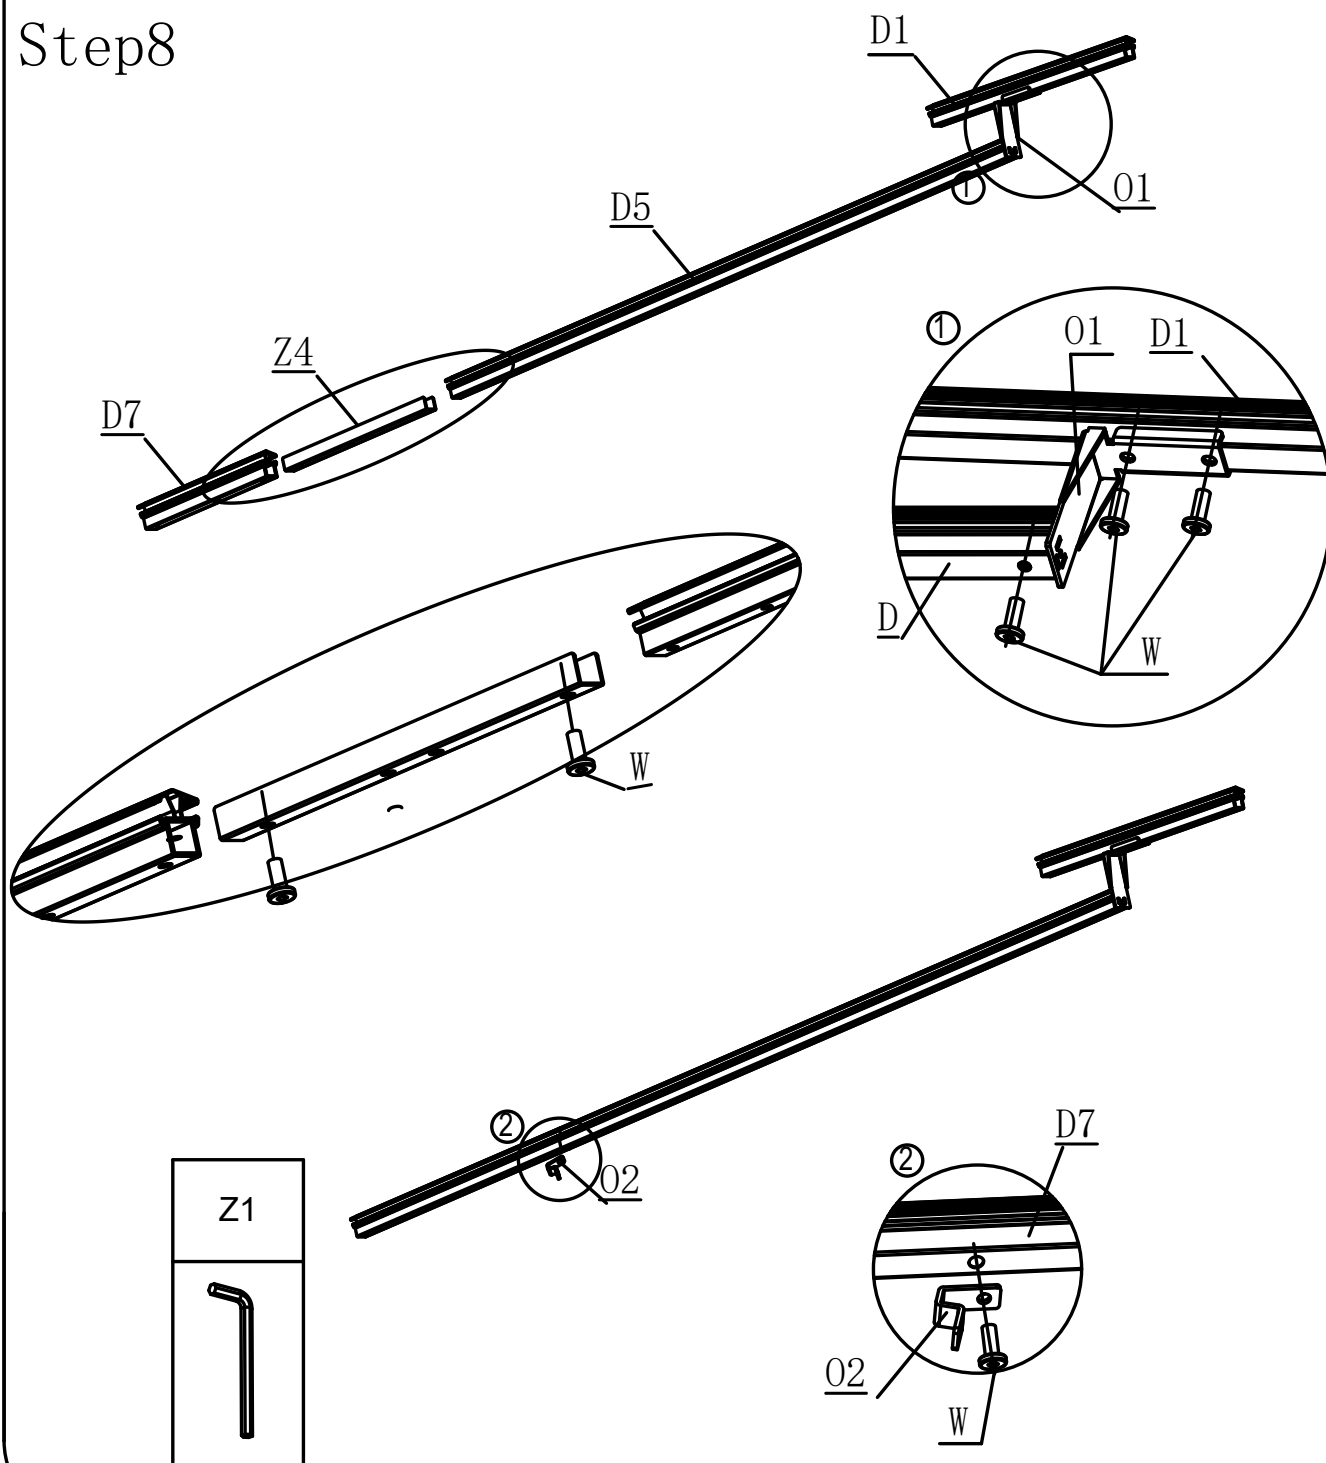


No.	Qty	Picture	No.	Qty	Picture
H4	1		W	12	 M6 * 15 mm

Step10

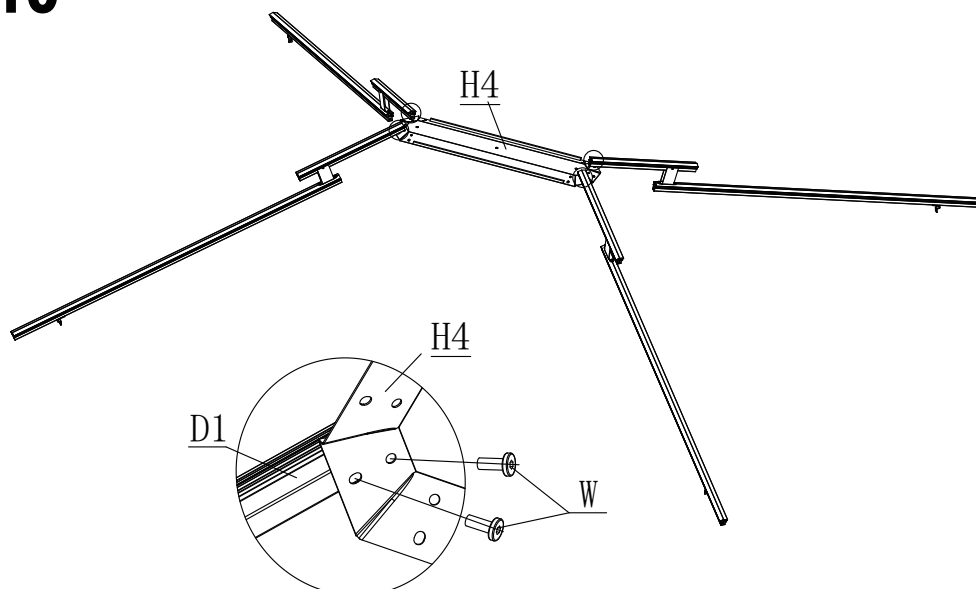

Step11


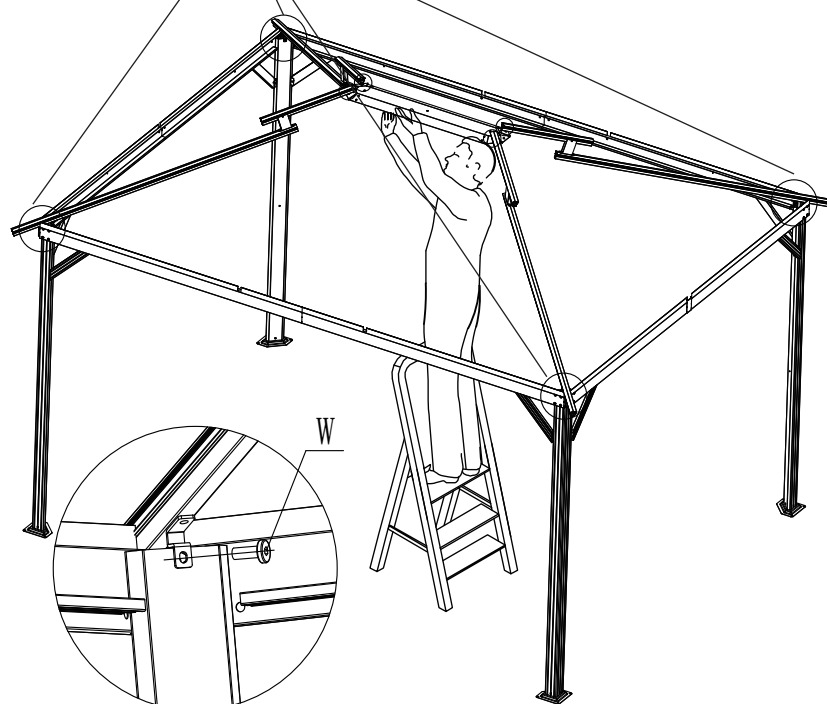


Note:

1. Have one person stand on the ladder to lift and hold "H" while others fasten the screws of "V"
2. Do not release "H" until all the "V" screws are fully tightened.



No.	Qty	Picture	No.	Qty	Picture
D8	4		W	16	 M6 * 15 mm
D4	4		O1	4	
O3	4				

Step12

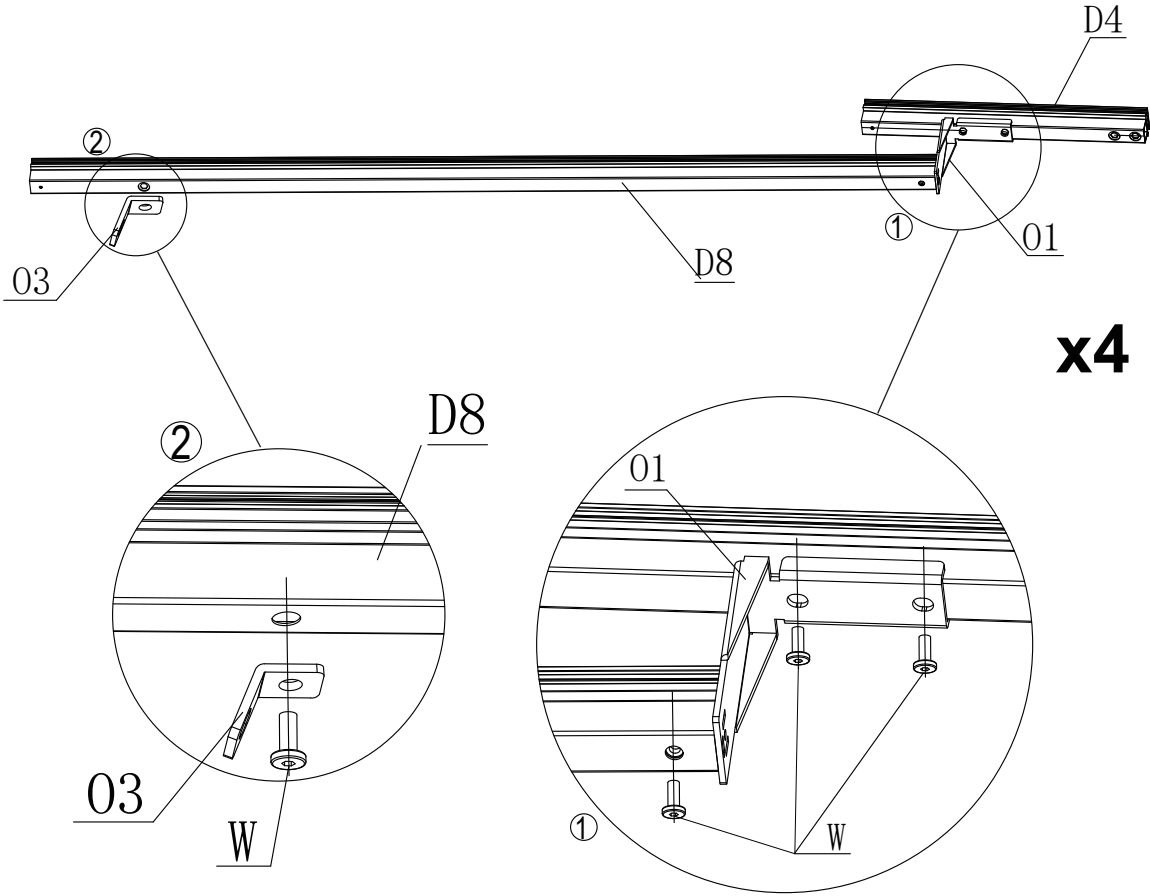



No.	Qty	Picture
W	12	 M6*15 mm

Step13

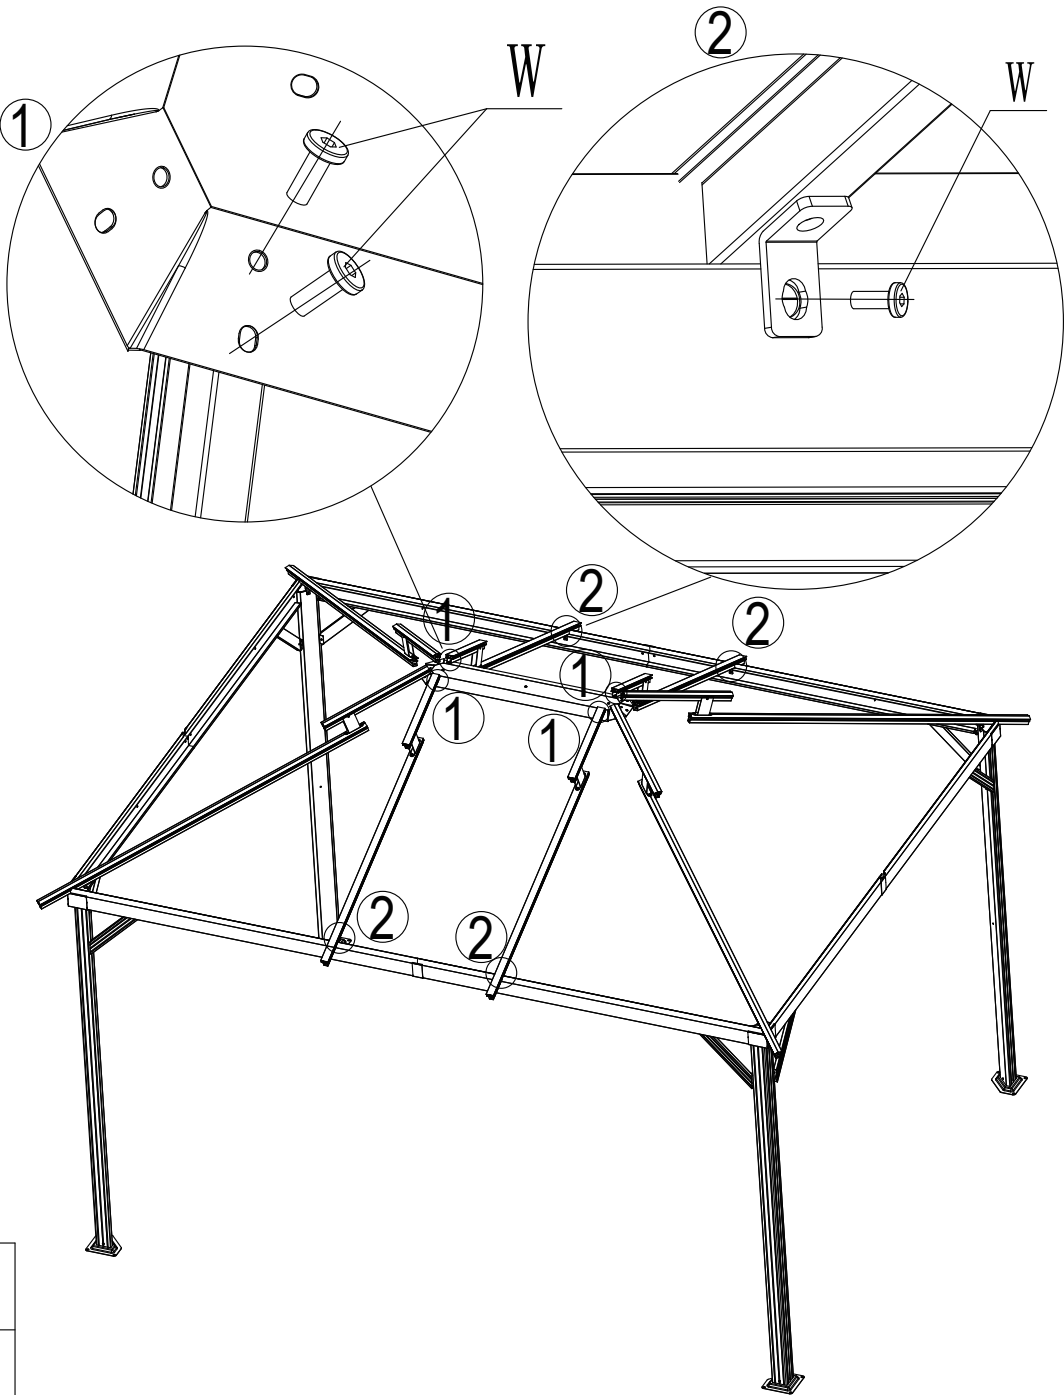



No.	Qty	Picture	No.	Qty	Picture
G2	2		W	4	 M6 * 15 mm

Step14

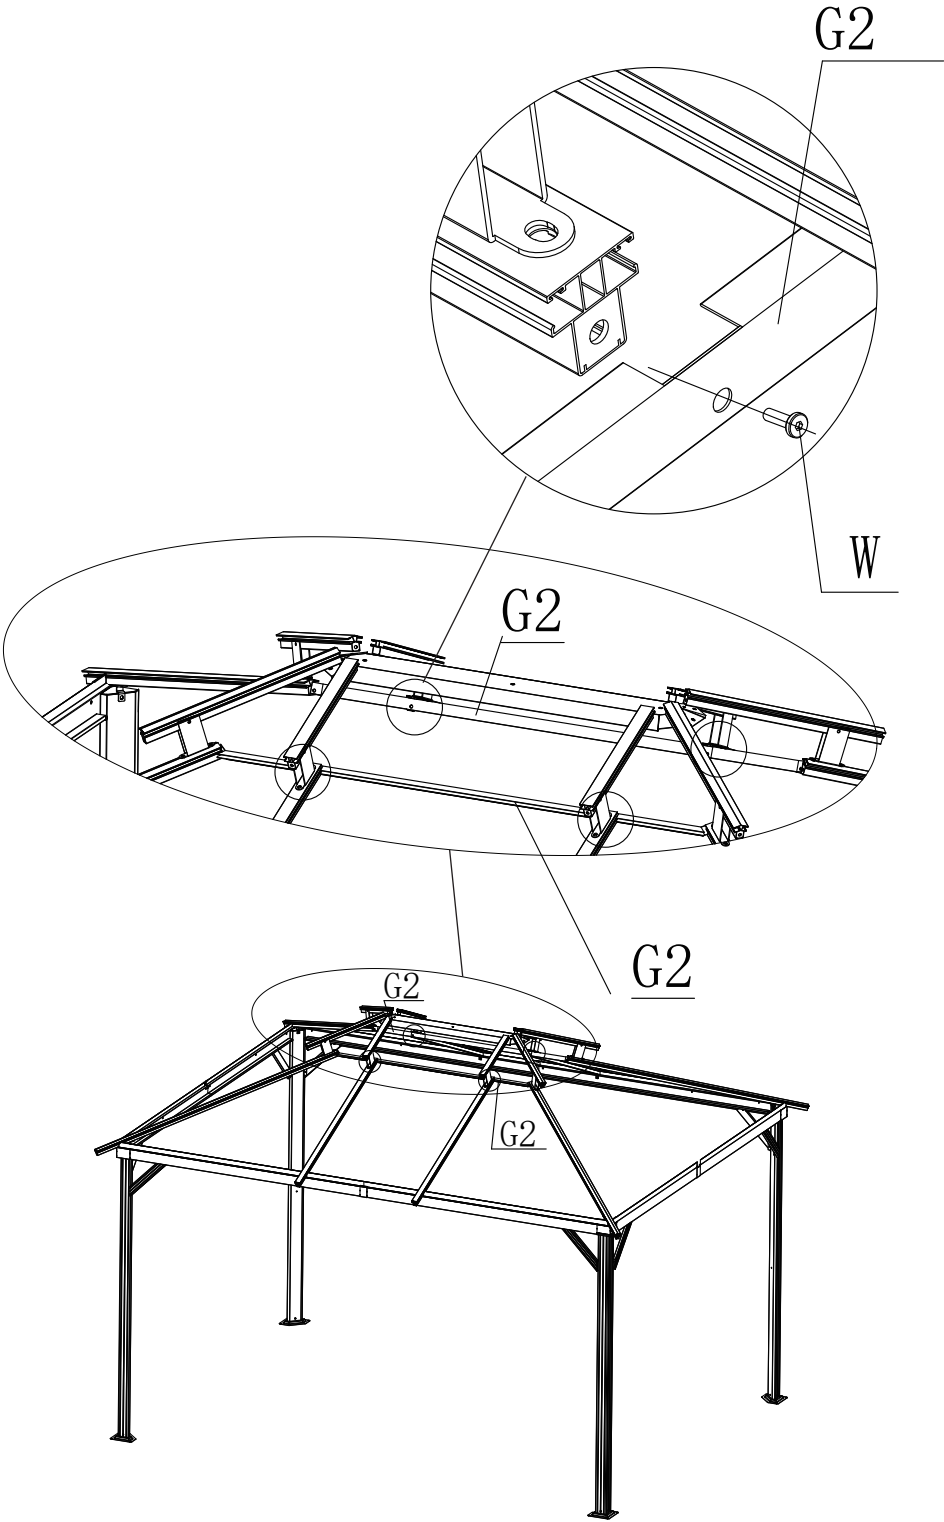



No.	Qty	Picture	No.	Qty	Picture
D6	2		W	4	 M6 * 15 mm
I	2		O3	2	

Step15


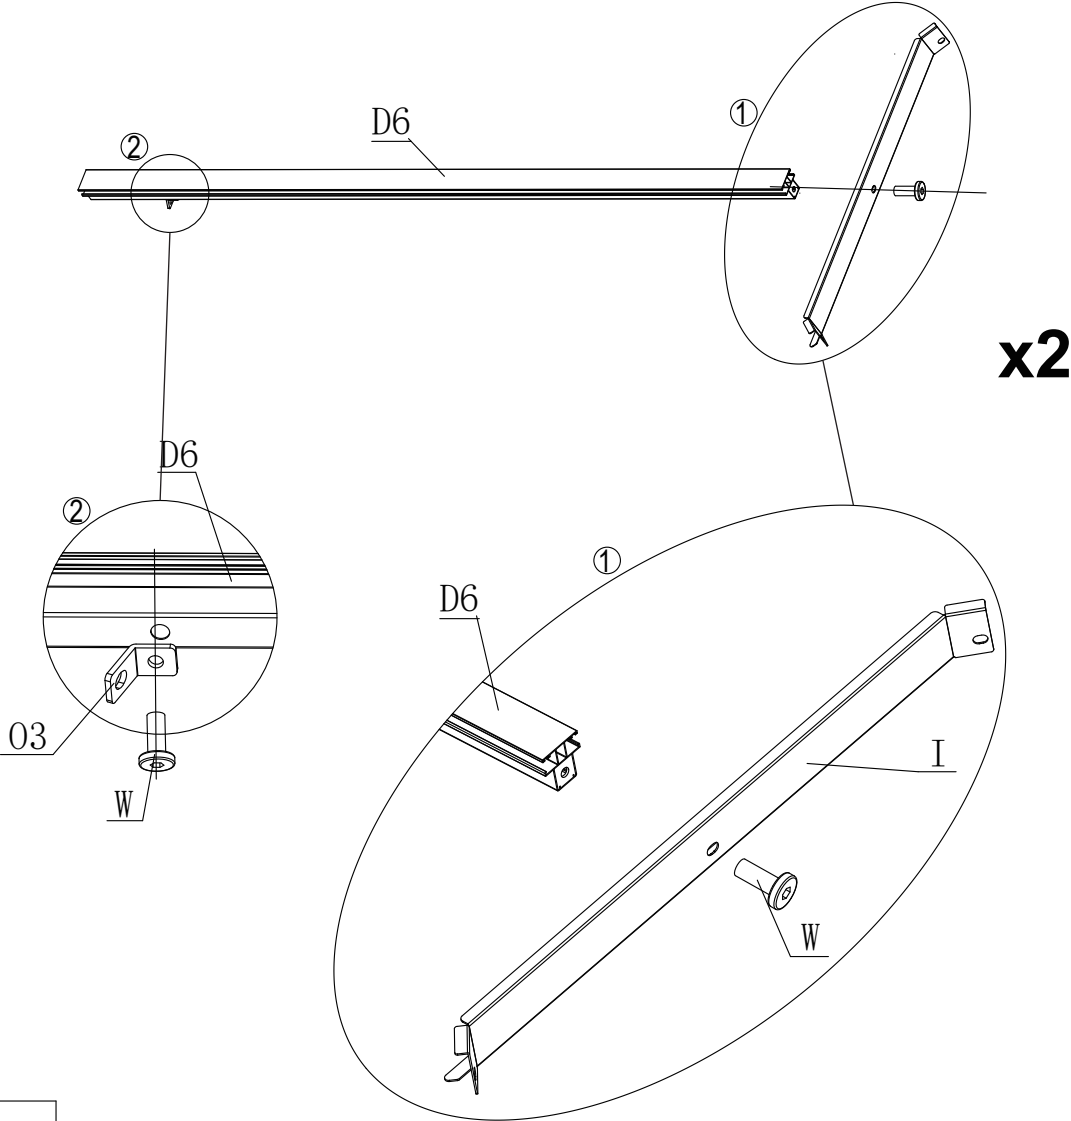


No.	Qty	Picture
W	6	 M6 * 15 mm


Step16

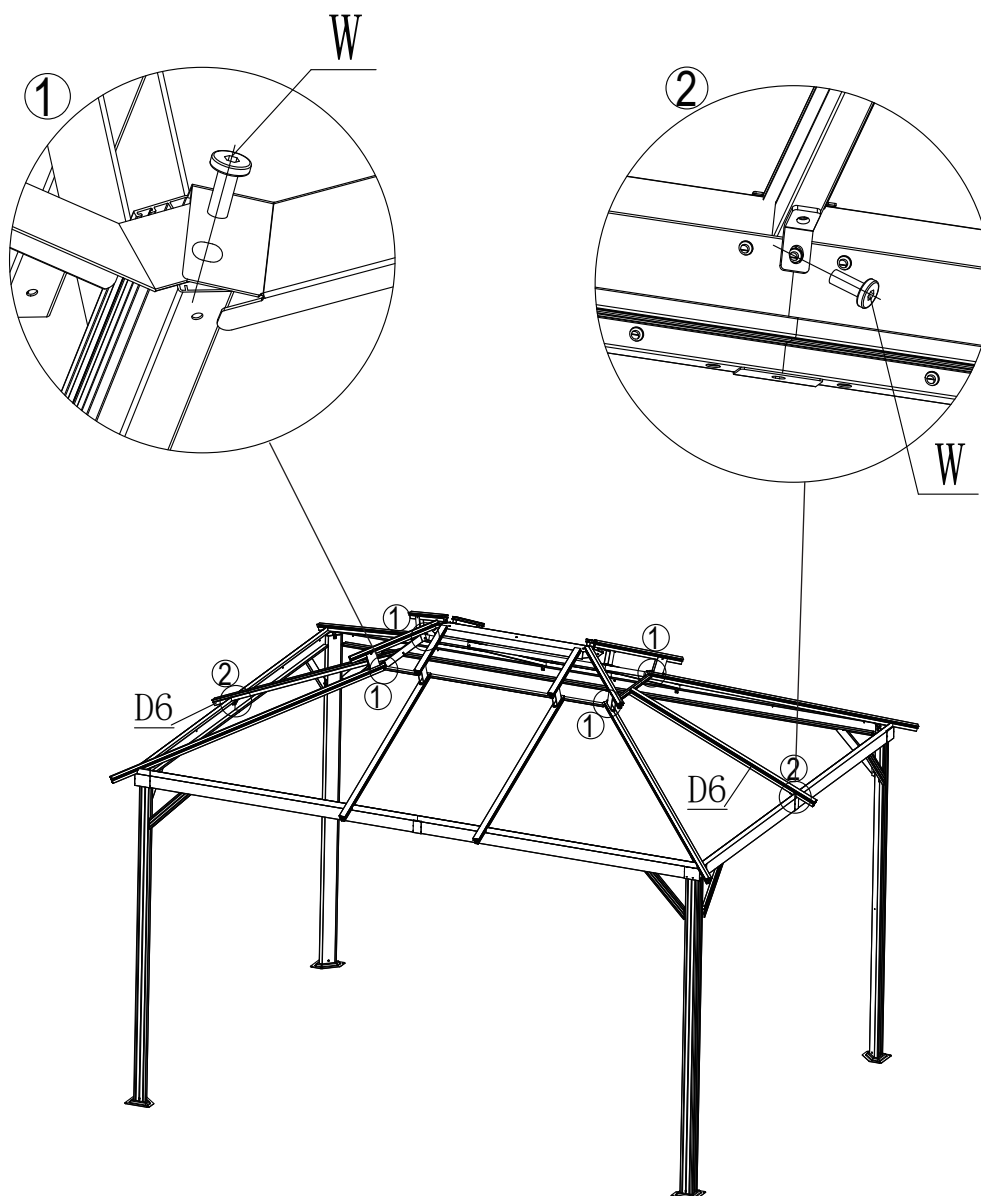



Step17

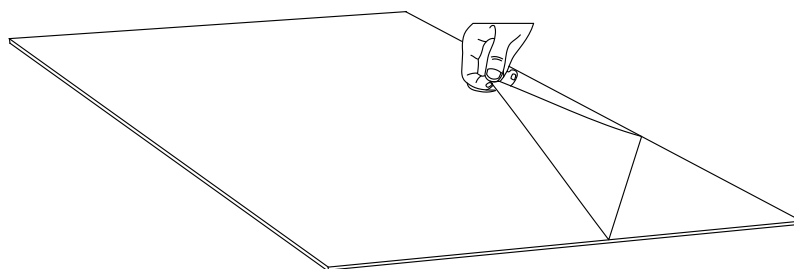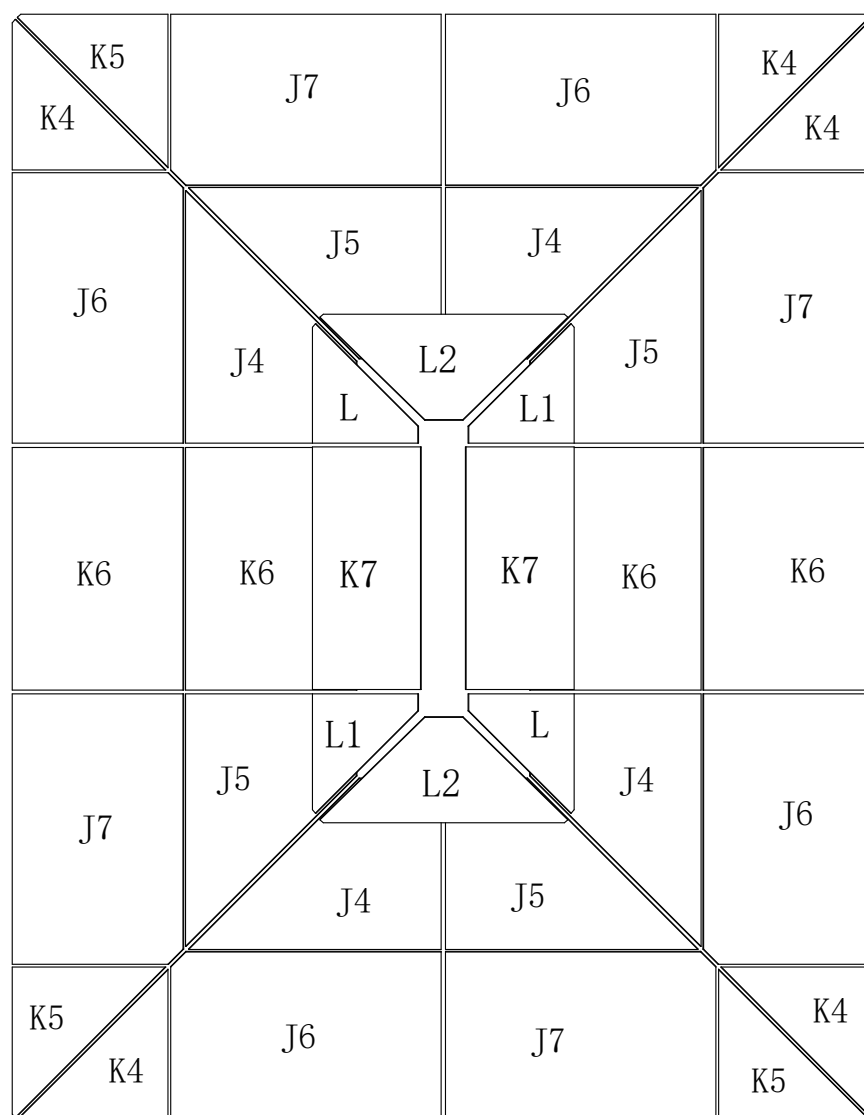


Remove the protective film
before installation.


No.	Qty	Picture	No.	Qty	Picture
K7	2		L	2	
L1	2		F2	4	
F4	2				
P1	4		W	4	 M6 * 15 mm

Step18

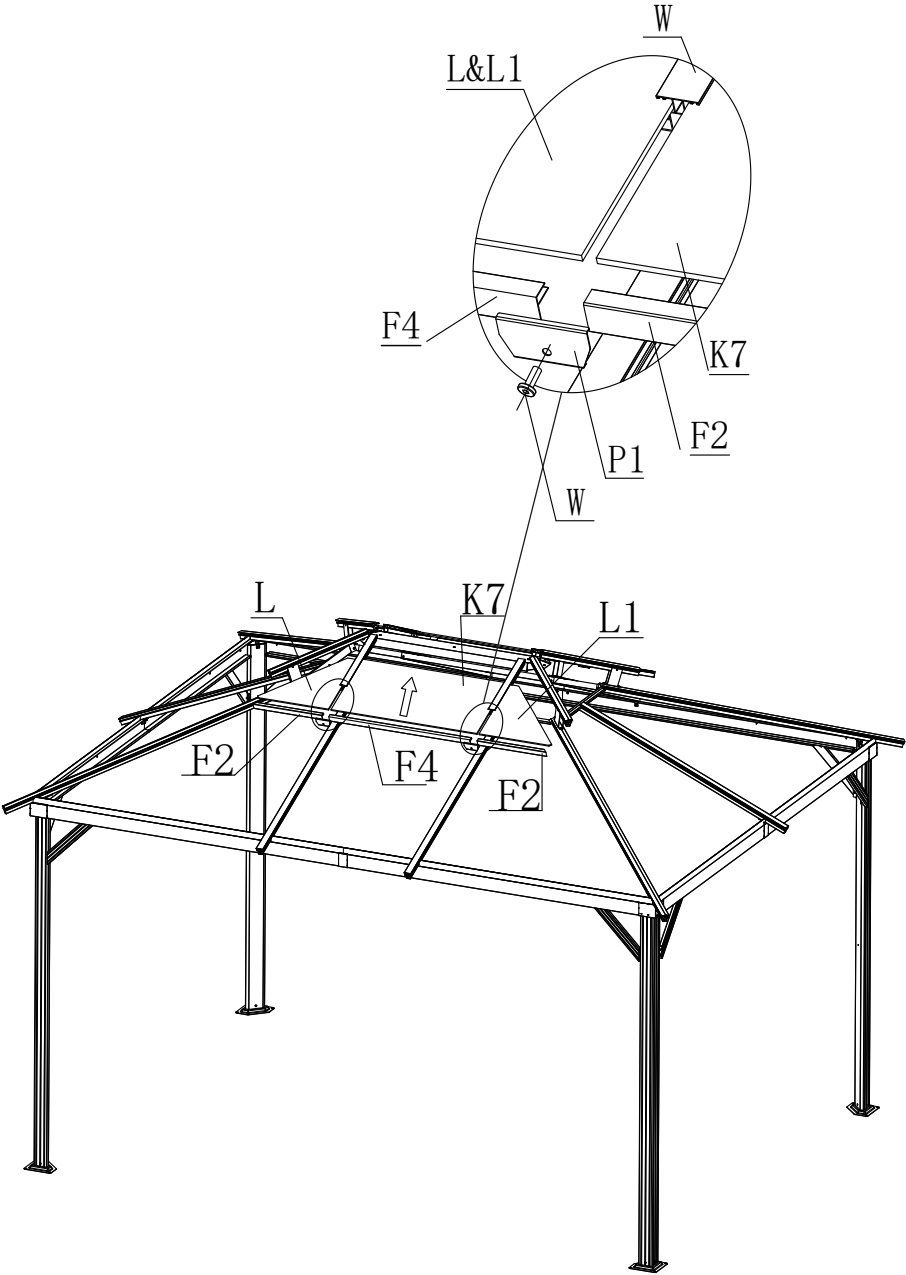


No.	Qty	Picture	No.	Qty	Picture
L2	2		P	4	
G	2		W1	4	 M6 * 20 mm

Step19

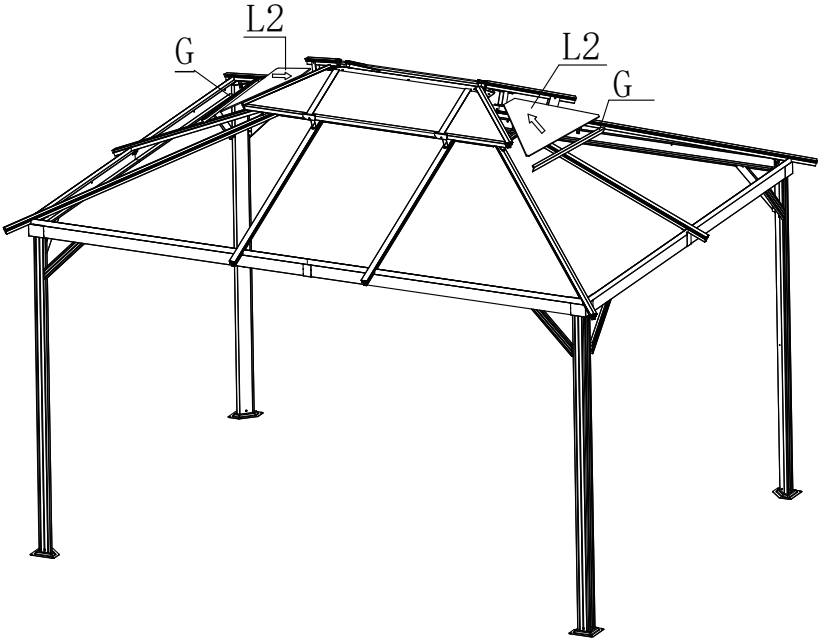


Step20

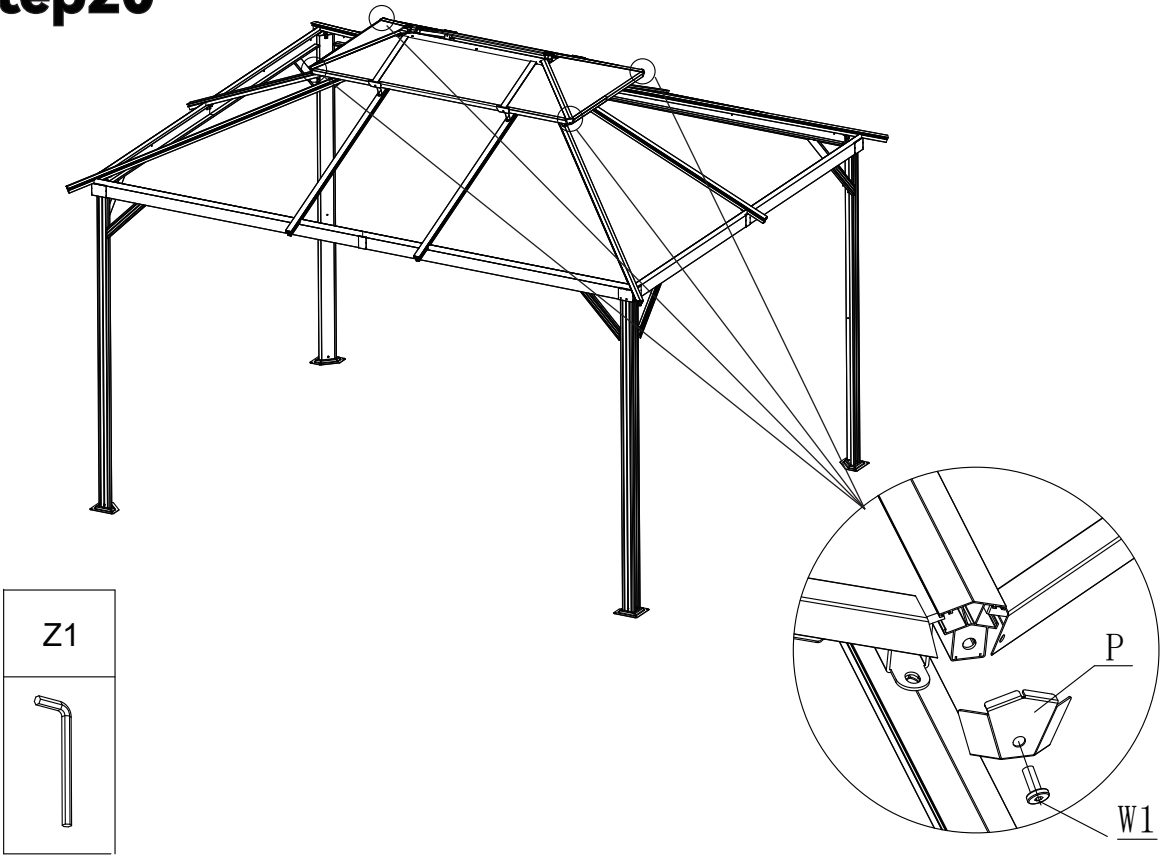


No.	Qty	Picture	No.	Qty	Picture
H5	1		T5	1	
Q4	1		P2	3	
Y2	3				





Step21

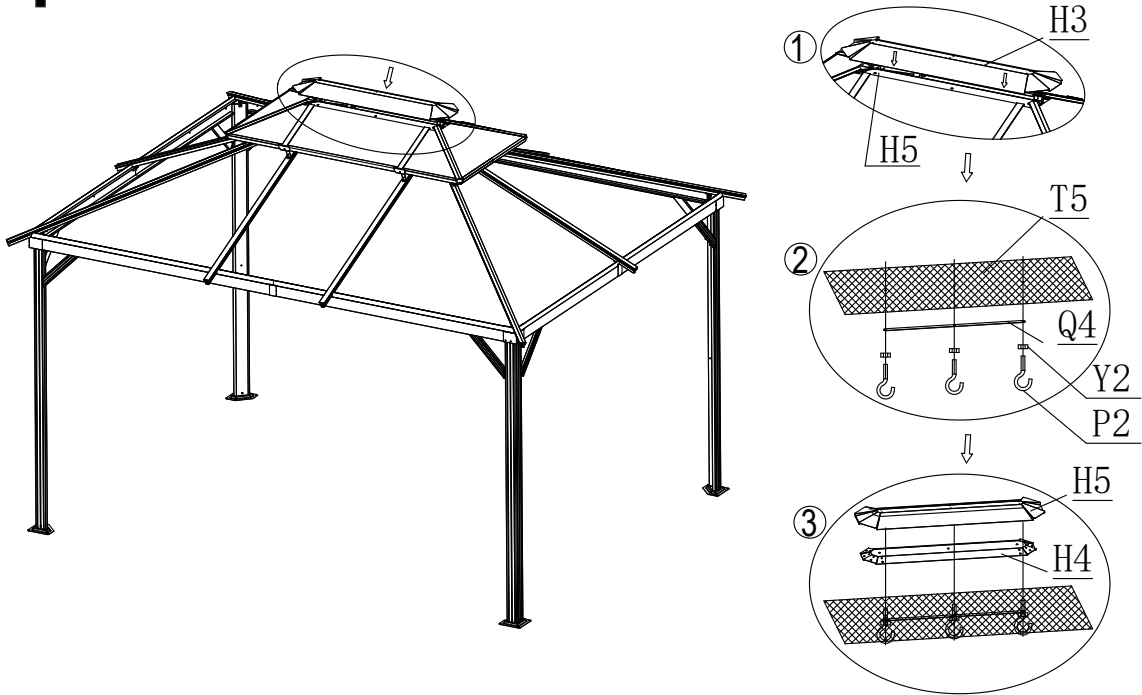


No.	Qty	Picture	No.	Qty	Picture
Q1	8		Q5	2	



Step22

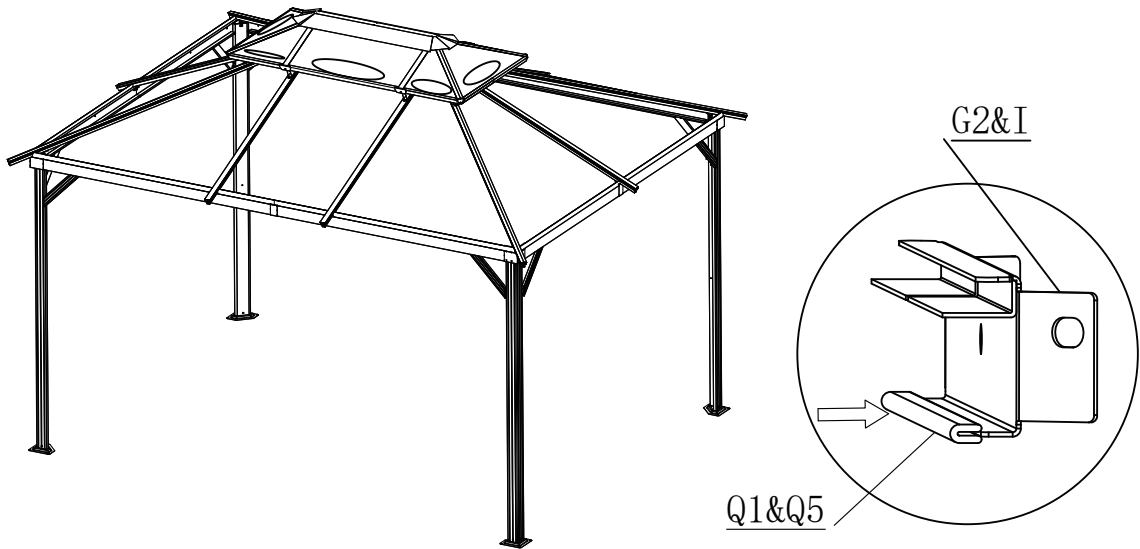


No.	Qty	Picture	No.	Qty	Picture
J4	4		J5	4	
E5	4		E6	4	



Step23

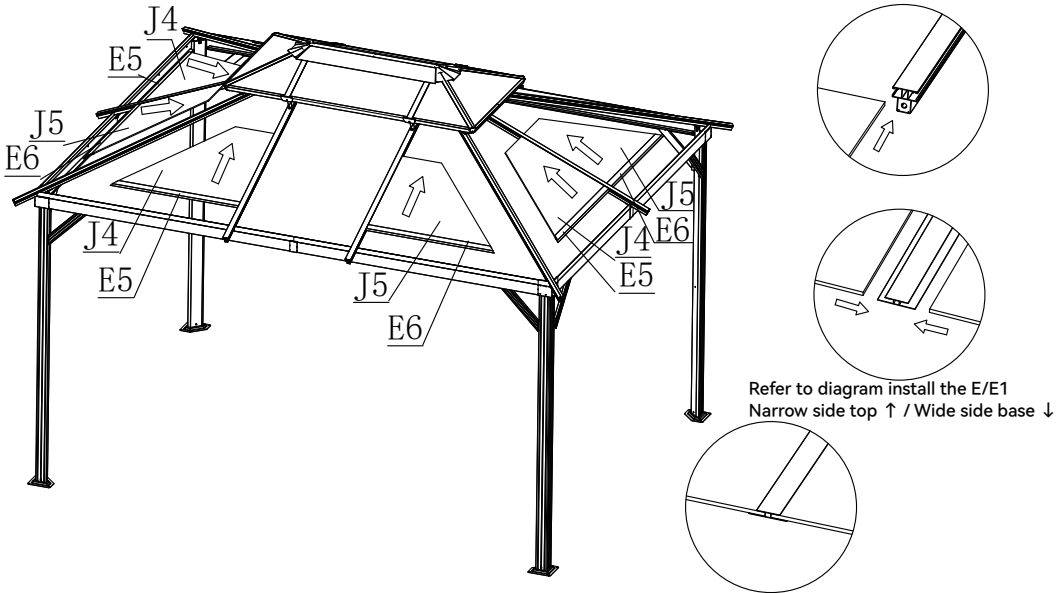


No.	Qty	Picture	No.	Qty	Picture
J6	4		J7	4	


Step24

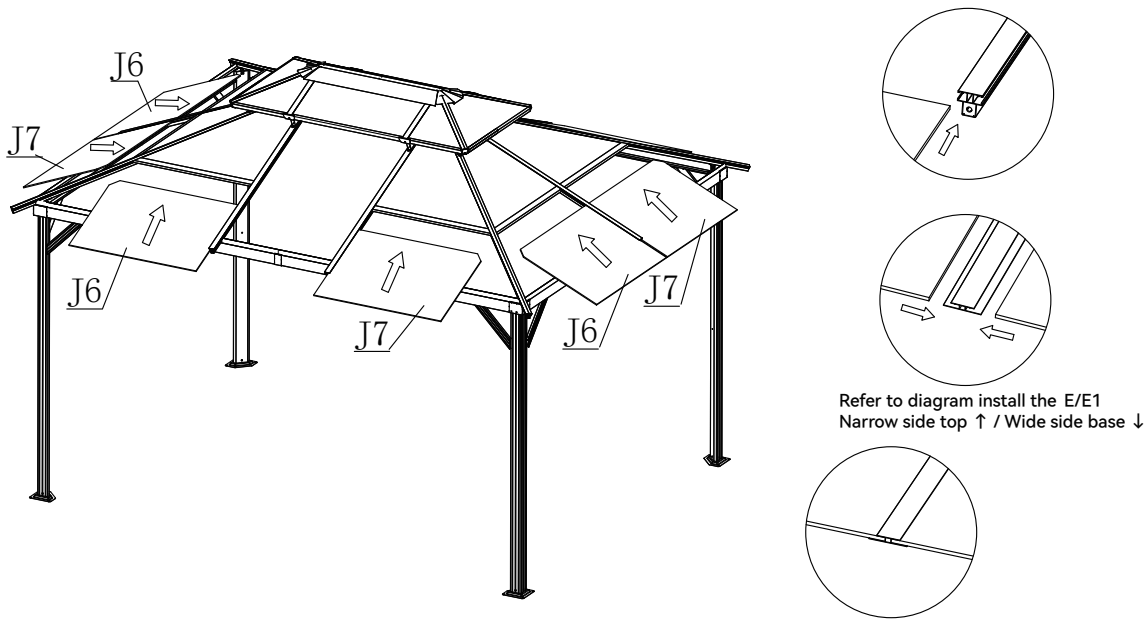


No.	Qty	Picture	No.	Qty	Picture
K4	4		K5	4	
E7	4		E8	4	

Step25

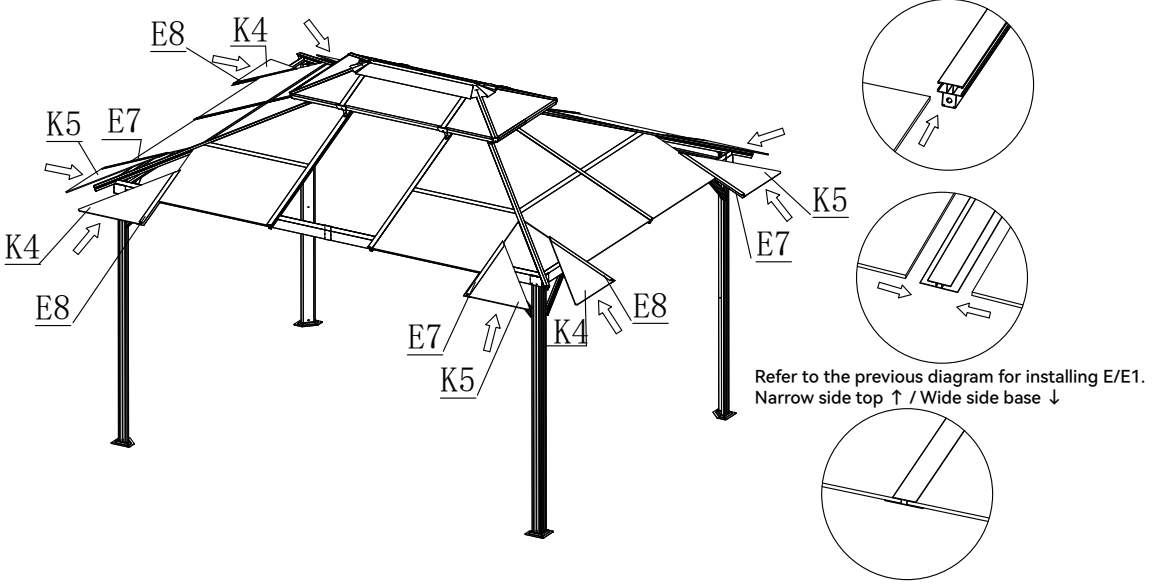


No.	Qty	Picture	No.	Qty	Picture
K6	4		E9	2	

Step26

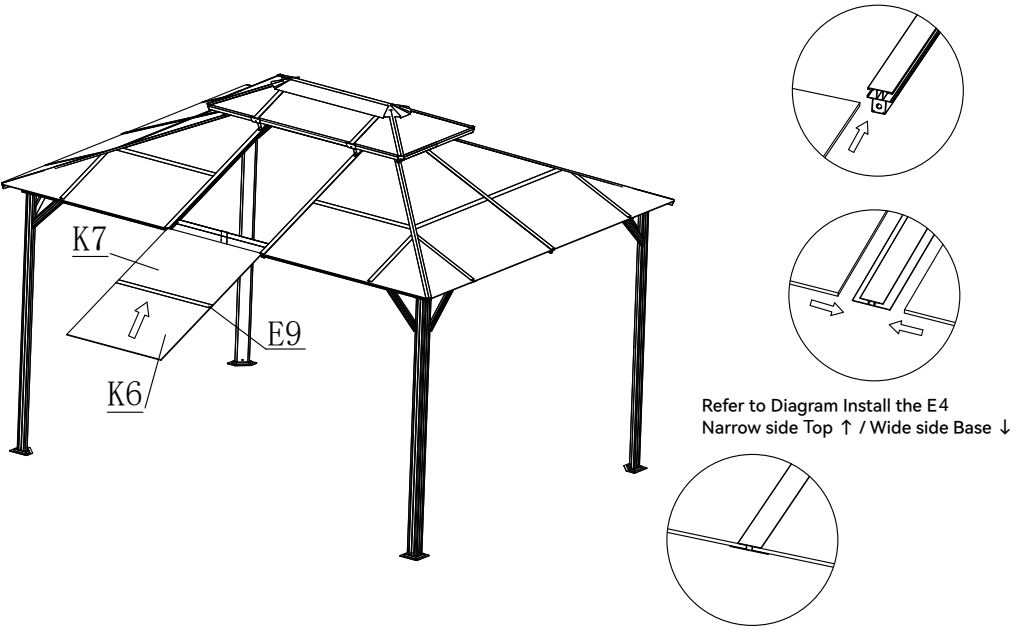


No.	Qty	Picture	No.	Qty	Picture
F3	8		P	4	
F4	2		P1	6	
W1	10	 M6 * 20 mm			

Step27

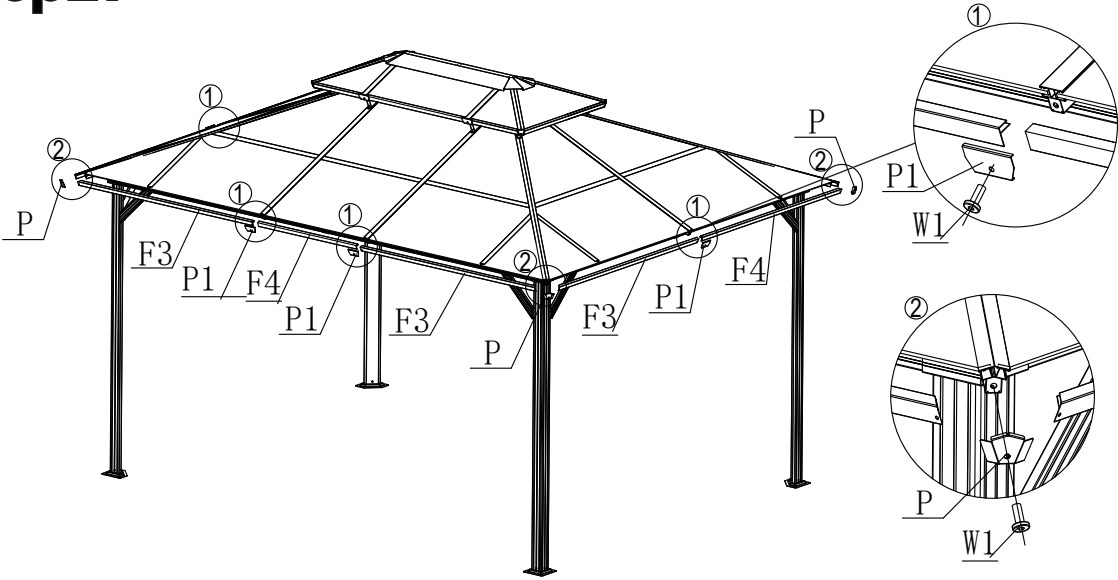



No.	Qty	Picture	No.	Qty	Picture
Z6	8		Y	8	 ST4. 8* 12 mm
W	8	 M6 * 15 mm			


Step28

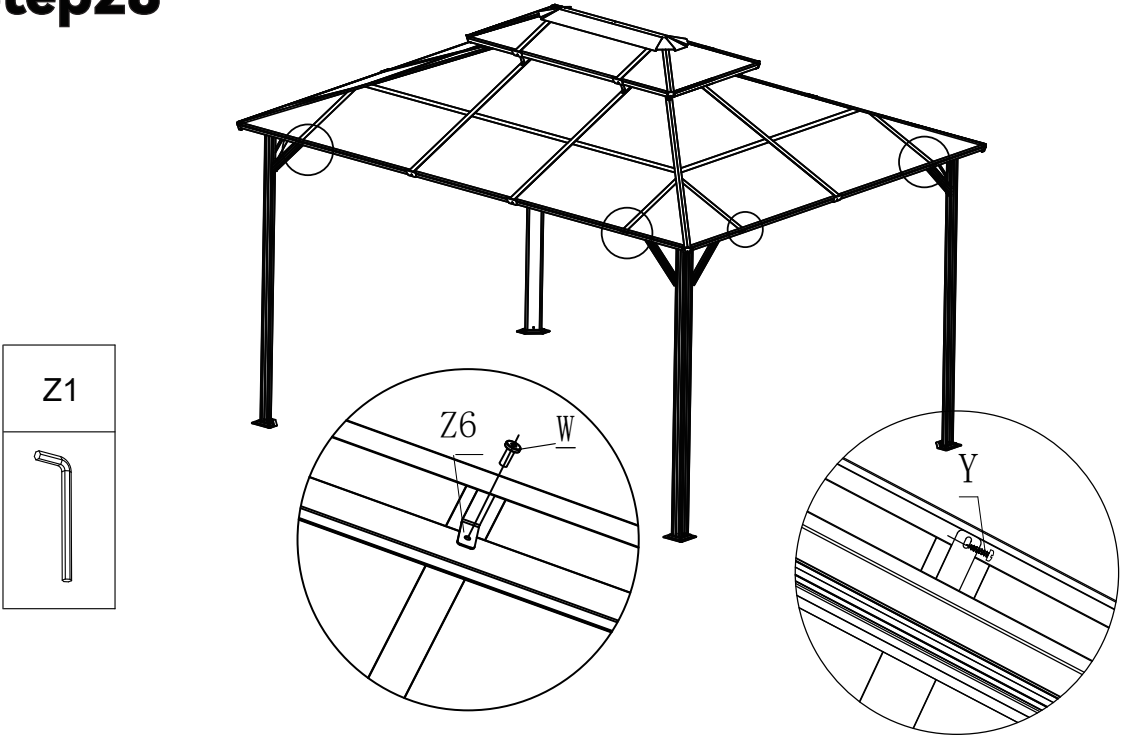




No.	Qty	Picture	No.	Qty	Picture
U	96		U1	8	 Ø11 * Ø 6 * 20mm
X	8	 M6 * 35 mm			

Step29

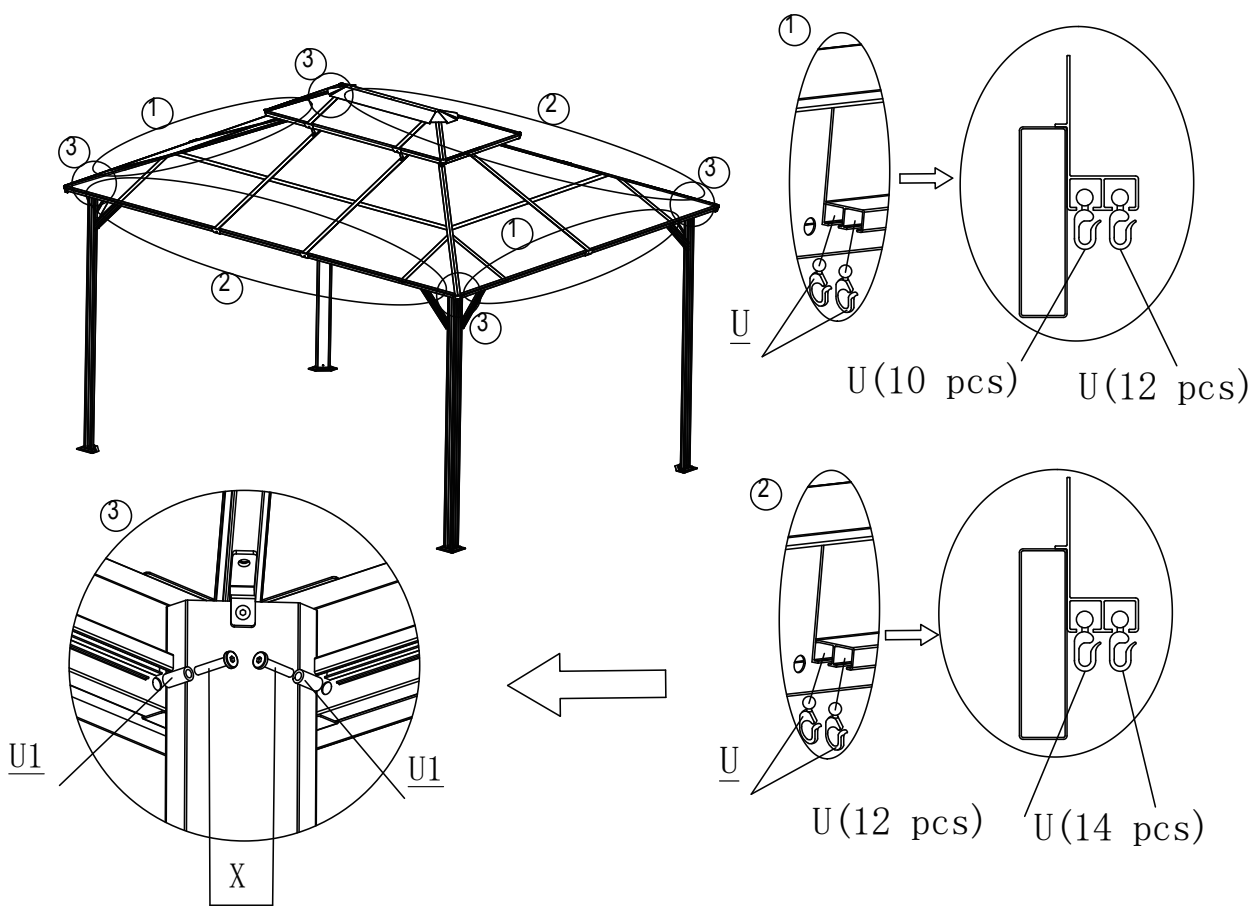


No.	Qty	Picture
S2	4	 Curtain

Step30

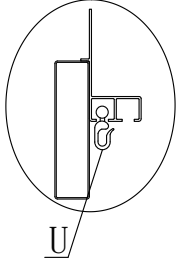
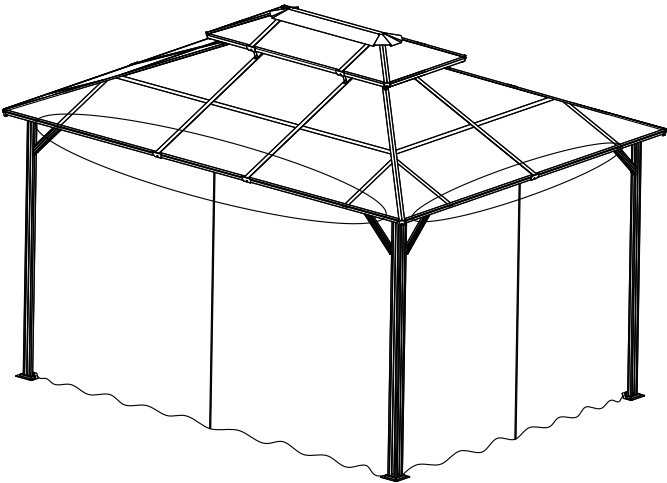
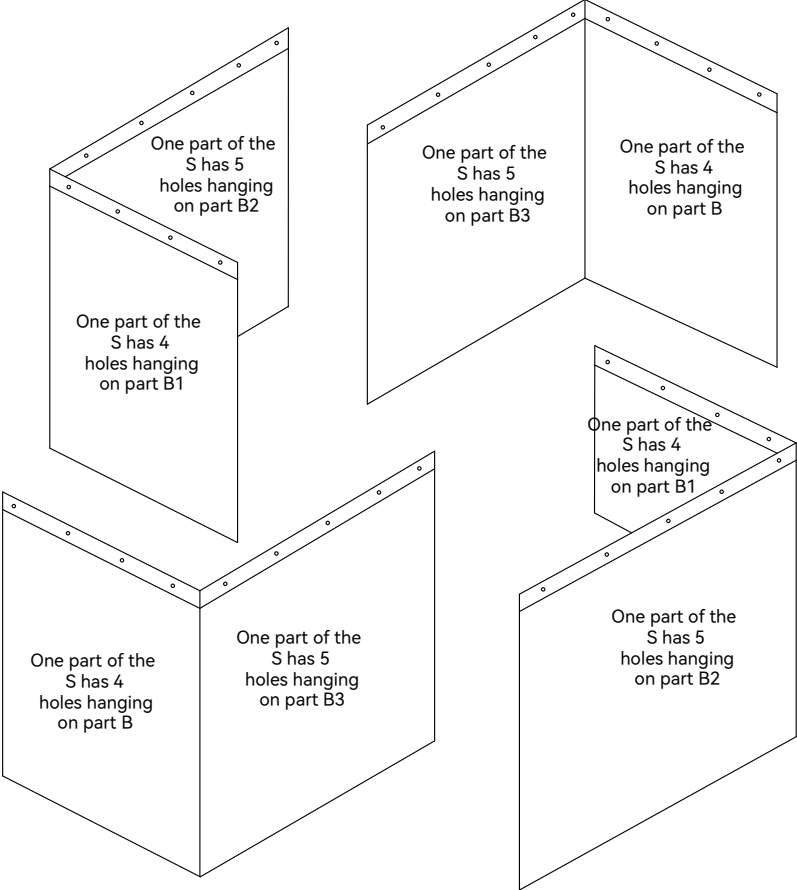


Pay attention to the sidewall curtain's installation position.

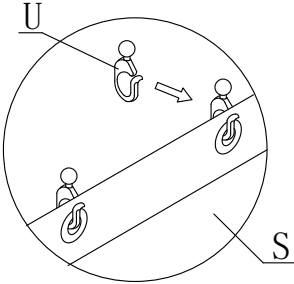


No.	Qty	Picture
T4	4	 Net

Step31

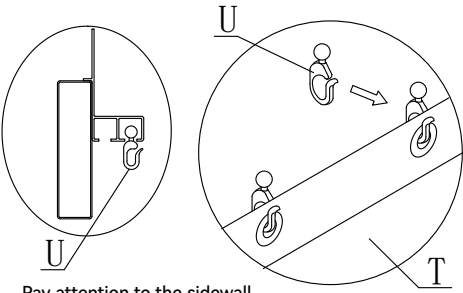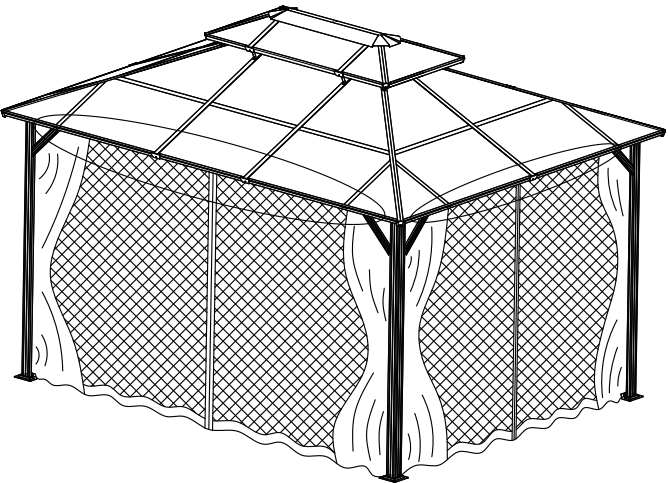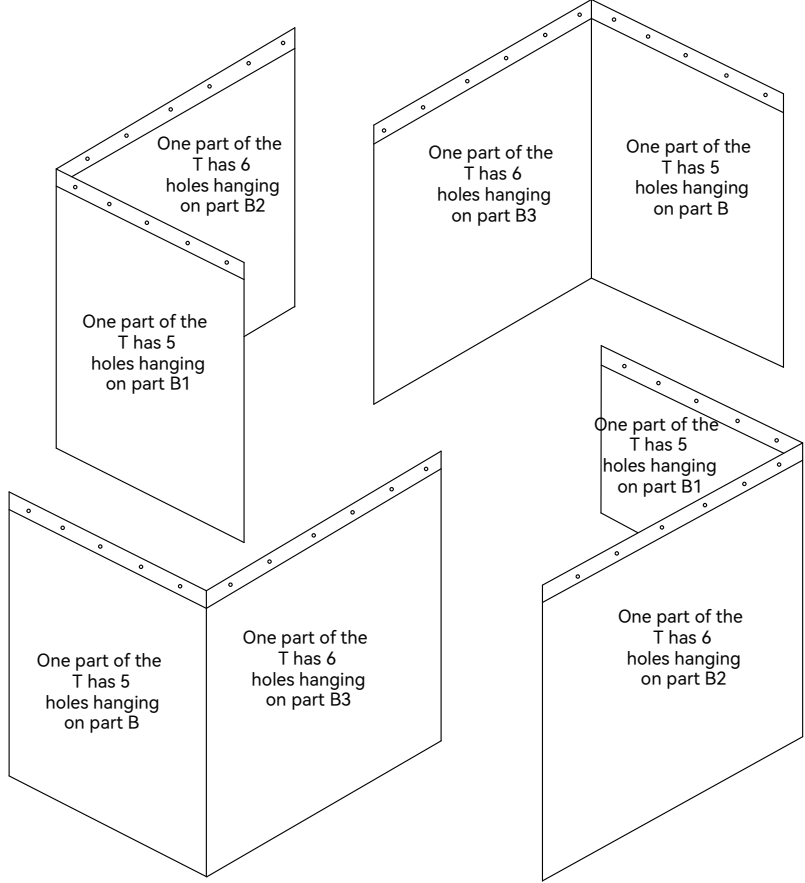

Pay attention to the sidewall netting's installation position.

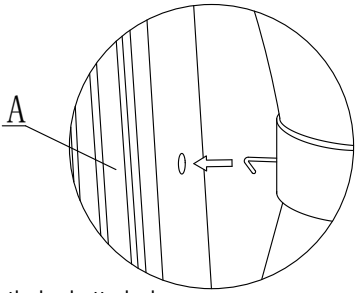

Hang the hook attached to the netting on Part A.

No.	Qty	Picture
Z	12	

Step32

