


Loft Bed

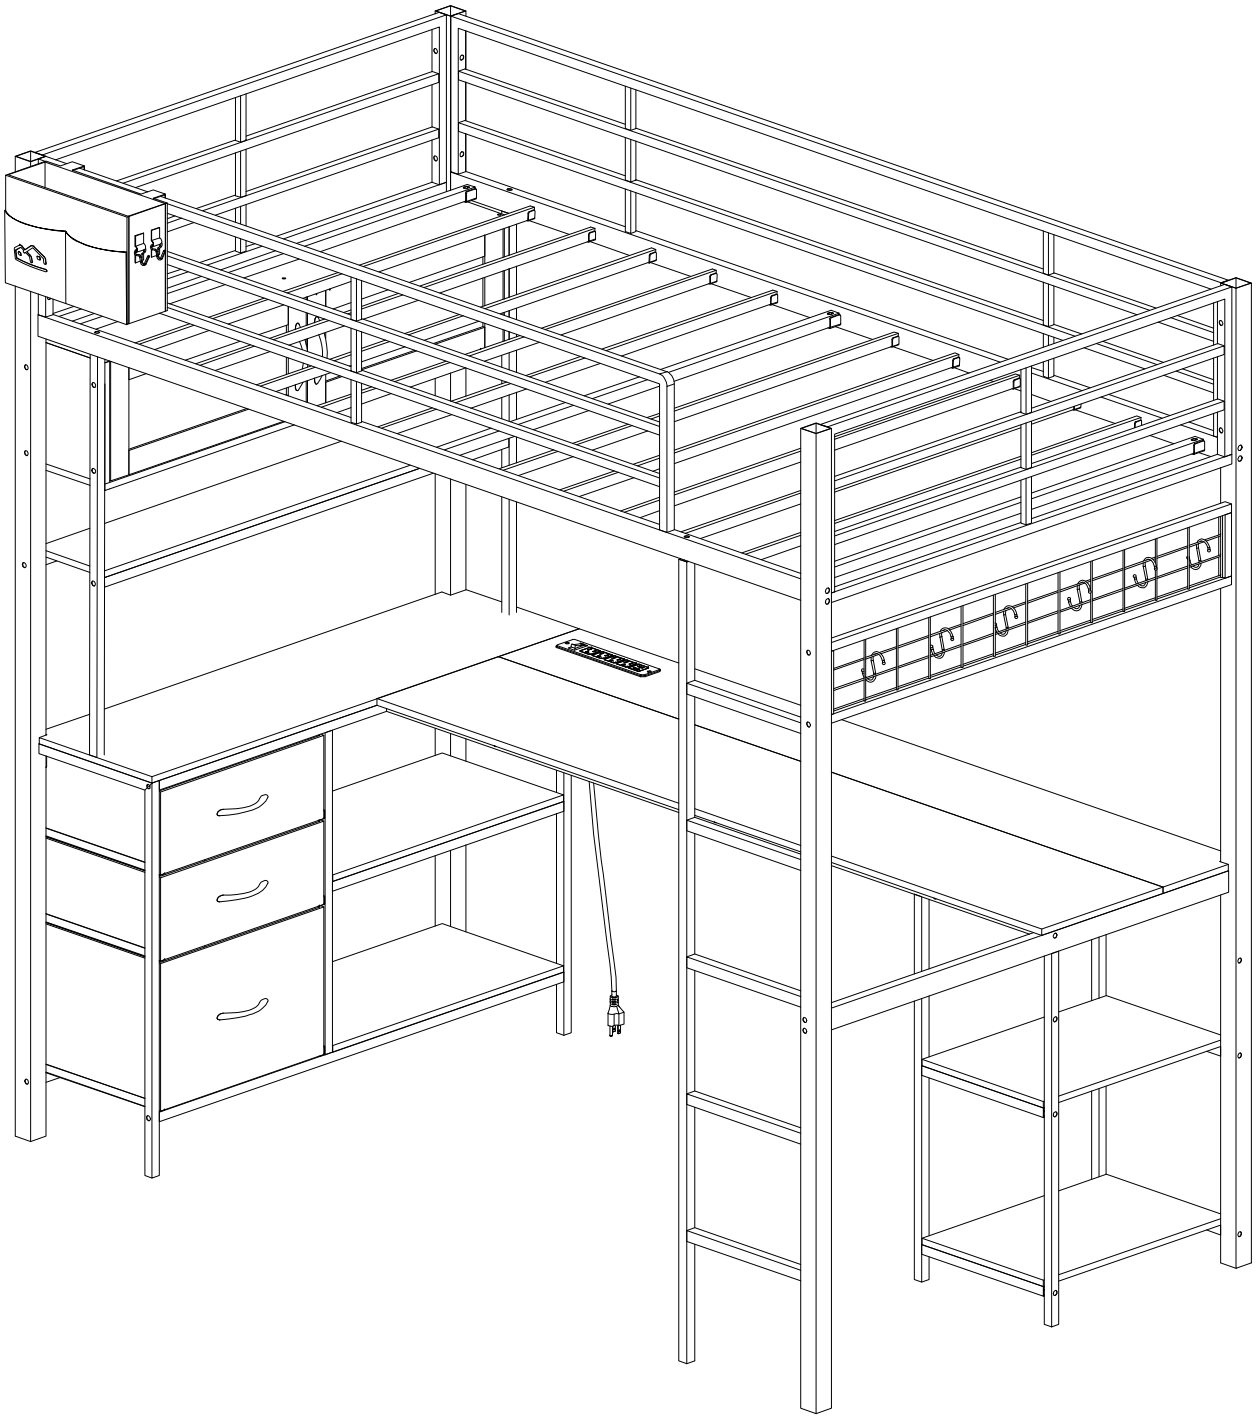


AJ-DJ505154_1
AJ-DJ505154_2

Version : 1.2

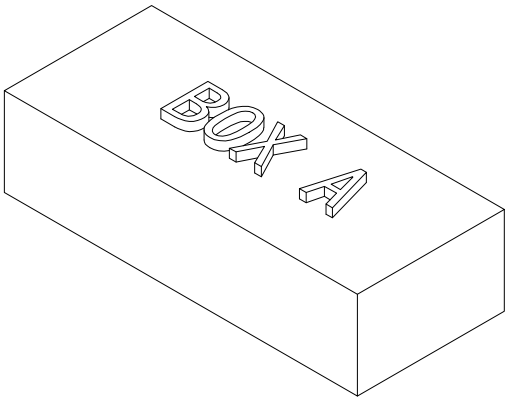

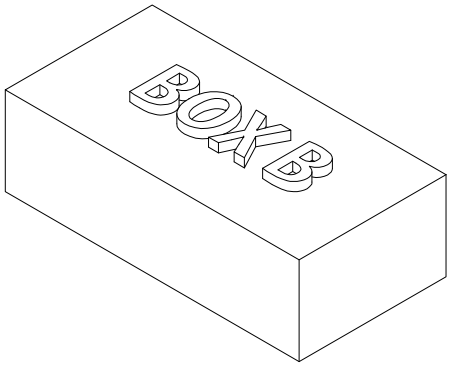

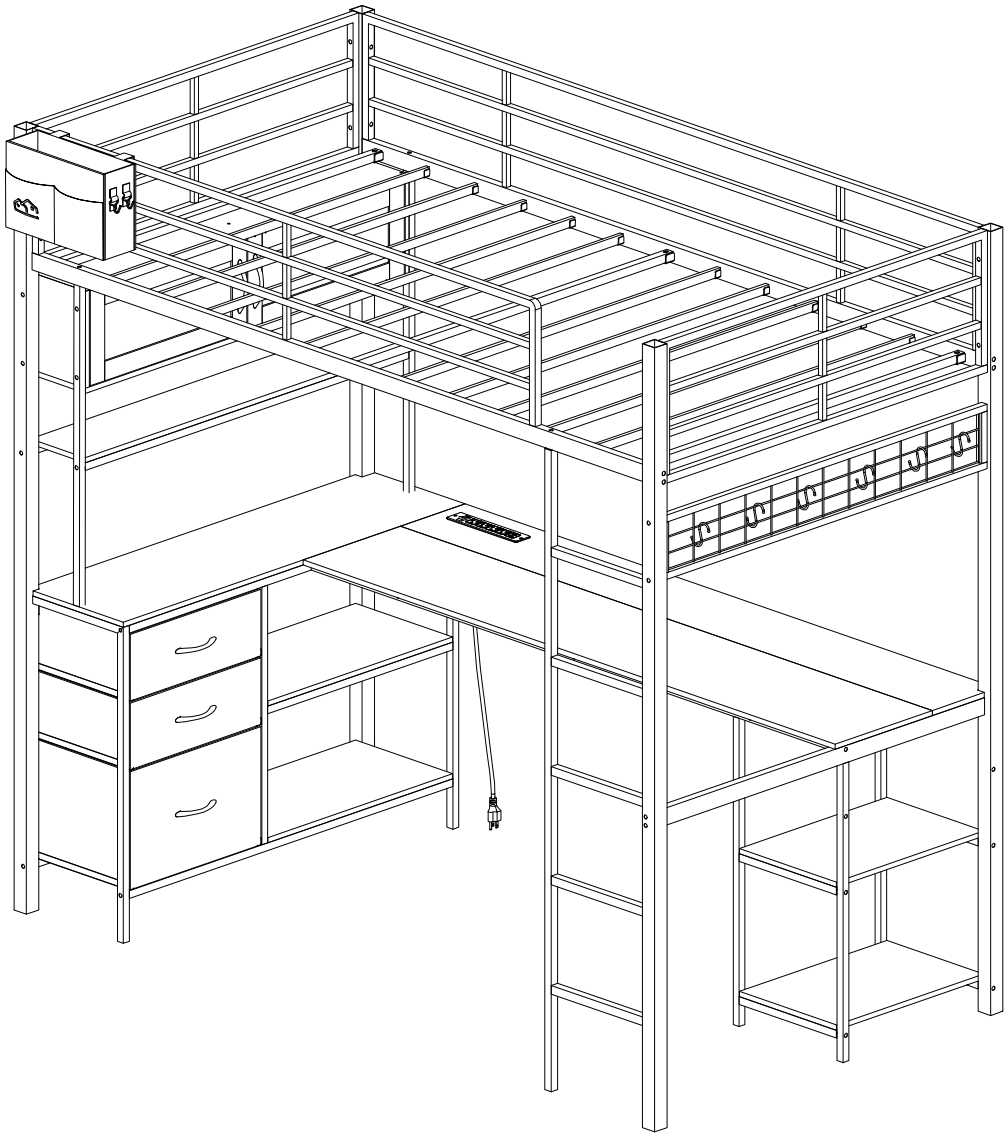


This product comes in two packages: Box A and Box B. You only need the parts in Box A and Box B to assemble the entire bed. Please ensure you begin installation after receiving Box A and Box B.

Package Contents

Plates and iron components | Assembly tool kit | Instruction manual


Precautions

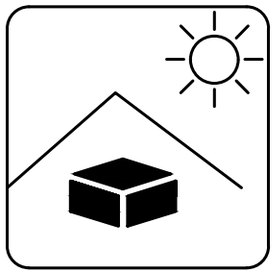


1.Avoid long-term direct sunlight exposure




2.Stay away from fire

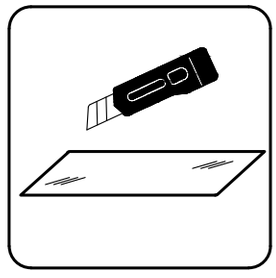


3.Keep away from sharp objects

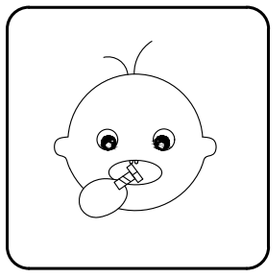


4.Keep infants/children away from assembly parts to avoid choking and suffocation.

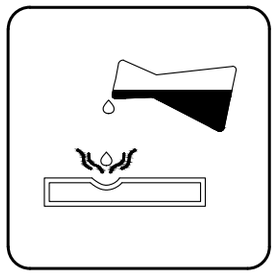


5.Keep away from corrosive substances

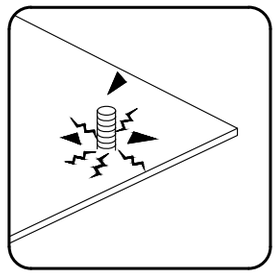


6.Please use the correct screws, otherwise the plate will be damaged.

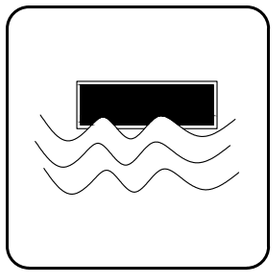

7.Prevent objects from being damaged by immersion in water

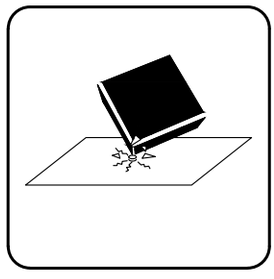

8.Prevent object collision and damage

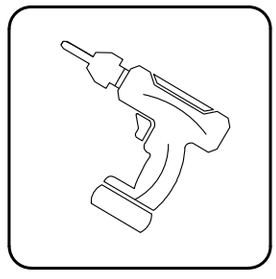


9.It is recommended to use an electric screwdriver for installation. Please be careful not to set the speed too high.


Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly.	Feel free to contact us and we will get back to you within 24 hours.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Product Surface	Board Surface is broken, scratched or lack of some screw holes.	Feel free to contact us and we will get back to you within 24 hours.
	The screw holes on the wooden board and other wooden boards are not aligned.	1. Please tighten the screws on the board by 70 %, do not tighten completely. 2. Adjust the wooden board and board. Until the holes are arranged neatly, then tighten all screws
	table top misalignment and unevenness	1. Please tighten the screws connecting two table boards by 70%, do not tighten them completely, so that to facilitate subsequent installation and adjustment. 2. It will be easier to adjust the gaps between the two tabletop panels after the overall installation is completed. So we advice to tighten the screws, after whole installation. 3. If your problem still can ' t be solved , please feel free to contact us .
Metal acce-- ssories	Metal accessories are damaged, rusted, bent, and broken.	Feel free to contact us and we will get back to you within 24 hours.
	unstable after being assembled.	1. Check if the screws are tightened. 2. Read throughout the manual, check if there are any parts installed incorrectly or some parts are missed to be installed. 3. If the problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.


PARTS LIST

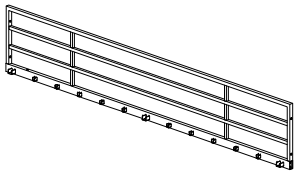


1
x1

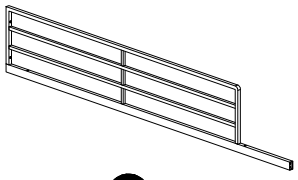

2
x1

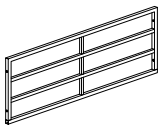

3
x2



4
x1



5
x1



6
x1



7
x2



8
x1



9
x1



10
x1



11
x2



12
x2



13
x3




14
x10




15
x1




16
x2

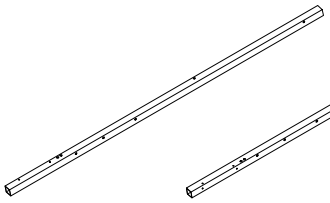


17
x1

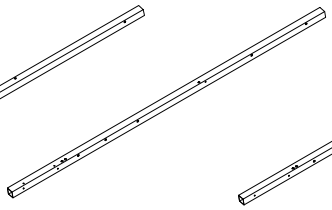

18
x1

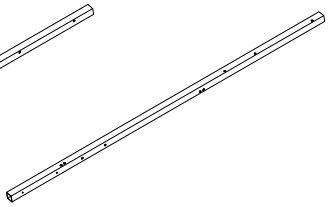

19
x1




20
x1



21
x1



22
x2



23
x1



24
x2



25
x4



26
x3




28
x1




29
x1


HARDWARE LIST A




A
M8*55
x12+1



B
M6*55
x19+1




C
M6*40
x38+3



D
M6*45
x4



E
M6*25
x48+4




F
M6*40
x6



G
M6*10
x15+1




H
M5*40
x17+1



I
ϕ18*8
x26+2




J
3*12
x10+1



K
M4*16
x4




L
M4*7
x6



M

x4

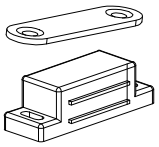

N

x2




O

x6




R

x5



S
M8*60
x2




T


x2




P
M4
x1




Q
M3
x1

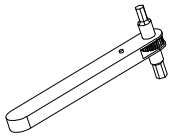

H1
M6-M8
x1



Z4
M8
x1

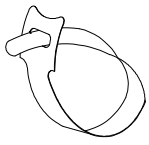

U

x12




V

x1




W
Ø6*30
x4

HARDWARE LIST B

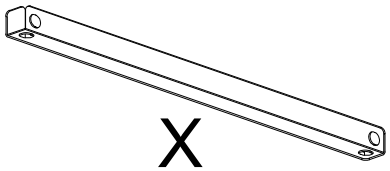


X
x6

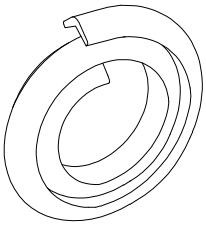


x1


Additional instructions of LED light bar

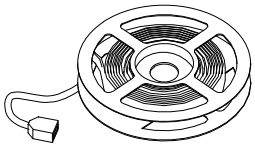


x1
Light strip(Short)

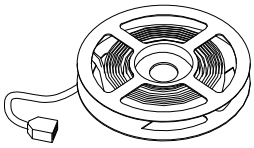

x1
Light strip(Long)

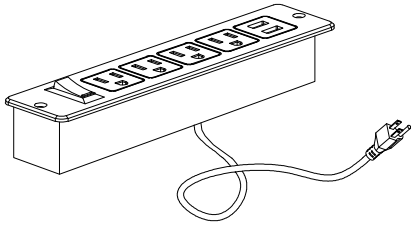


x1
Row insertion

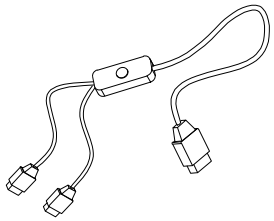


x1
Connecting wires

PARTS LIST

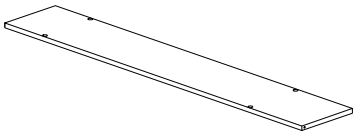


27

x1




30

x1




31

x2




32

x2




33

x1




34

x1




35

x1




36

x1

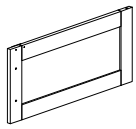


37

x1

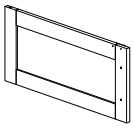


38

x1

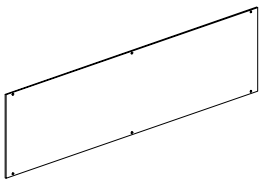

39


x1




40

x1


PARTS LIST

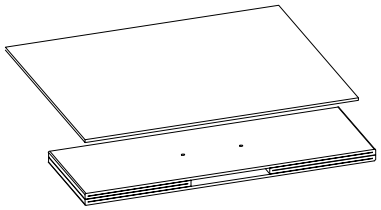

x2

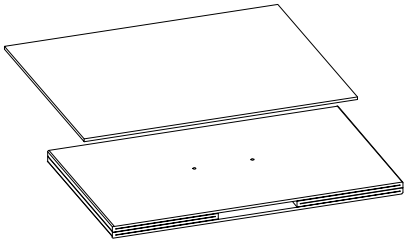

x1

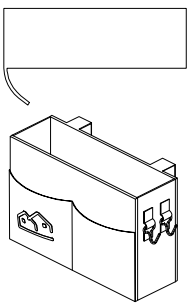


x1

Note:


1. Should be assembled on flat ground to keep balance.

2. Before completing the installation, do not tighten the screws.

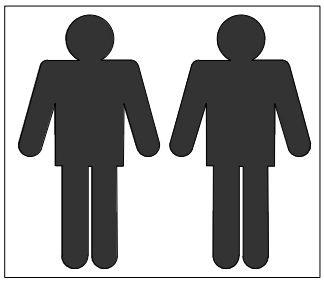


Before starting the assembly, you must read the whole manual and follow the instructions

Assembly method

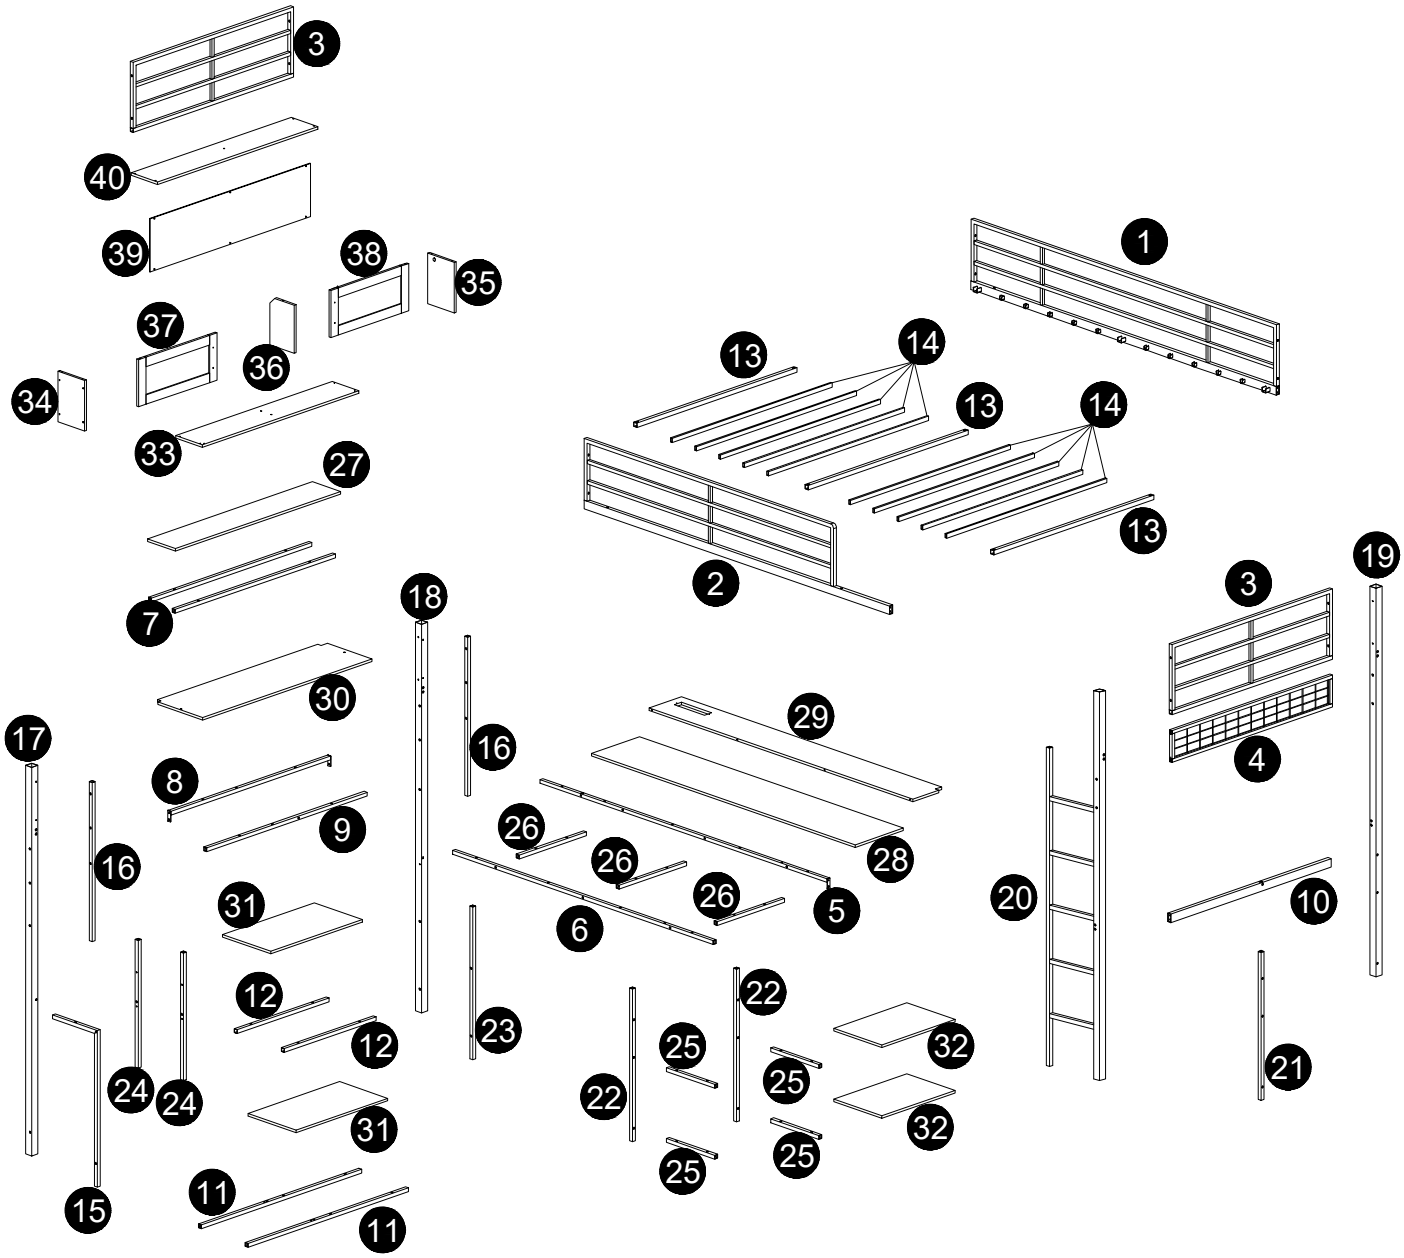



1

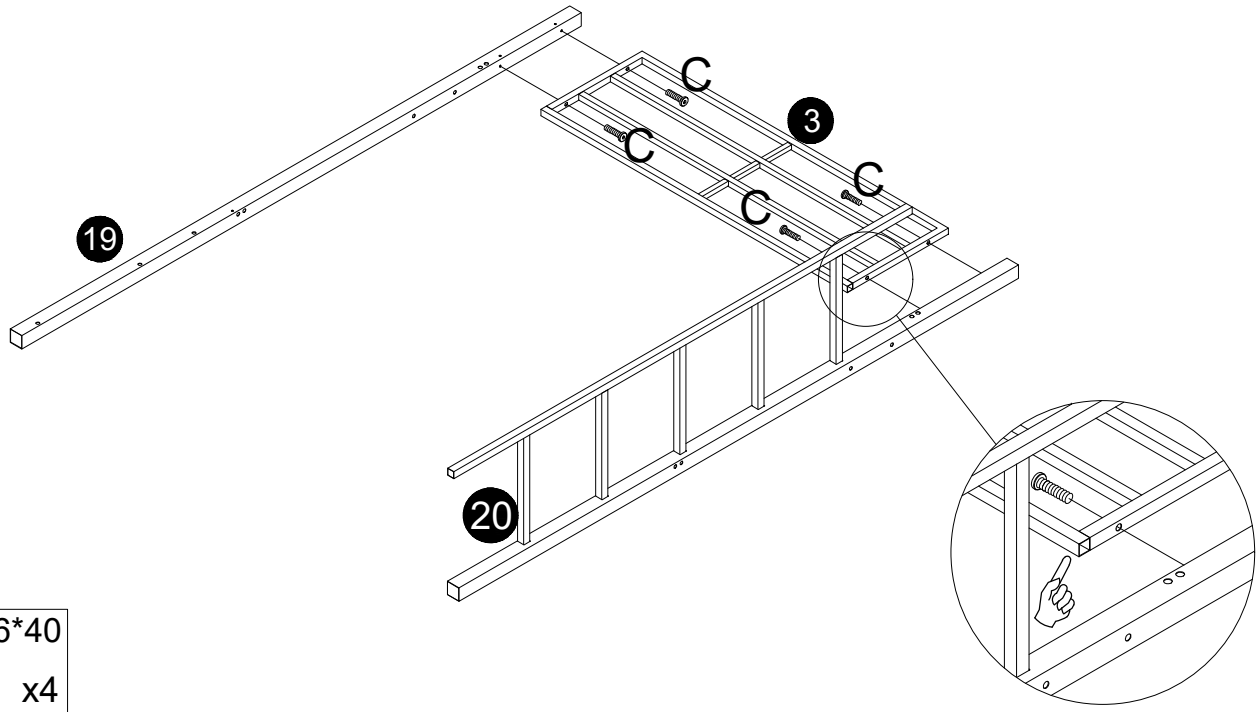

C M6*40	x4
H1	x1

2

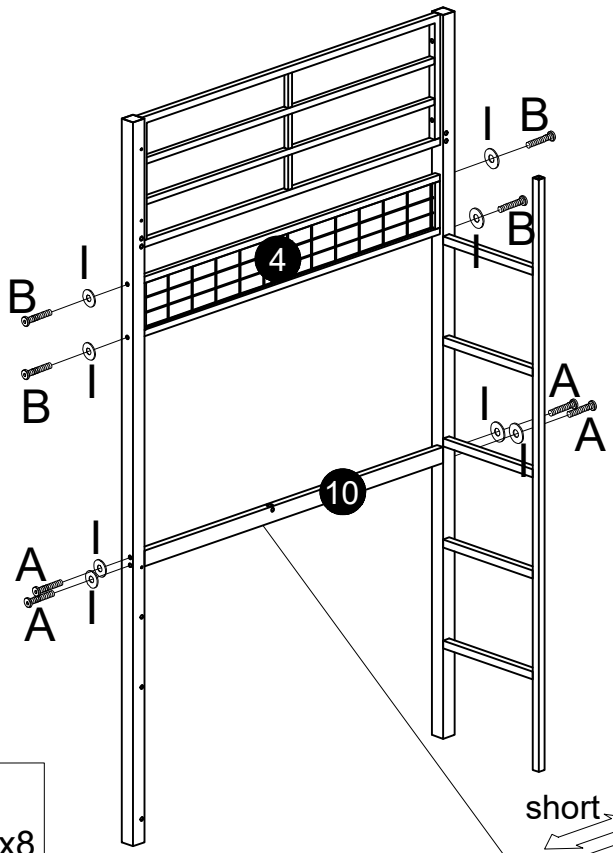


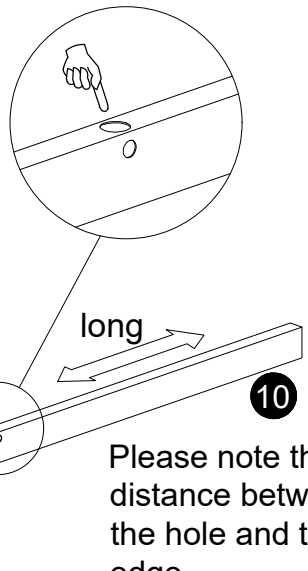

Please note the distance between the hole and the edge.


A M8*55 x4	I x8
H1 x1	B M6*55 x4

3

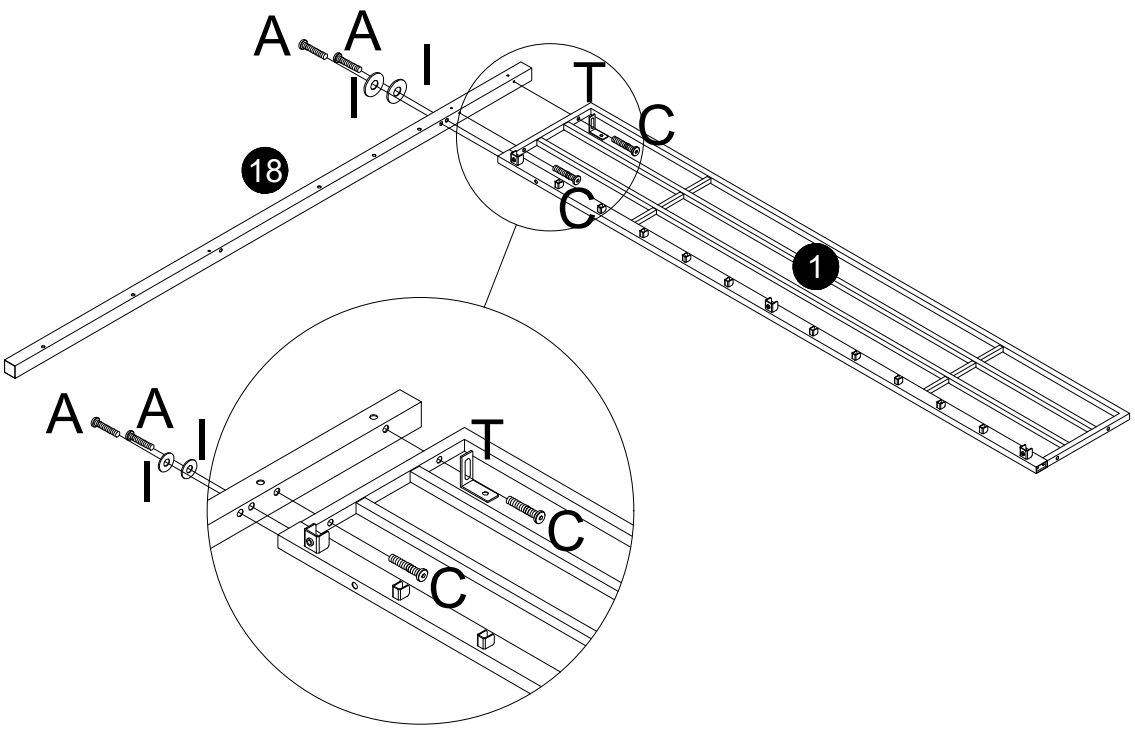


T	x1		
I	x2		
C M6*40	x2		
A M8*55	x2	H1	x1

4

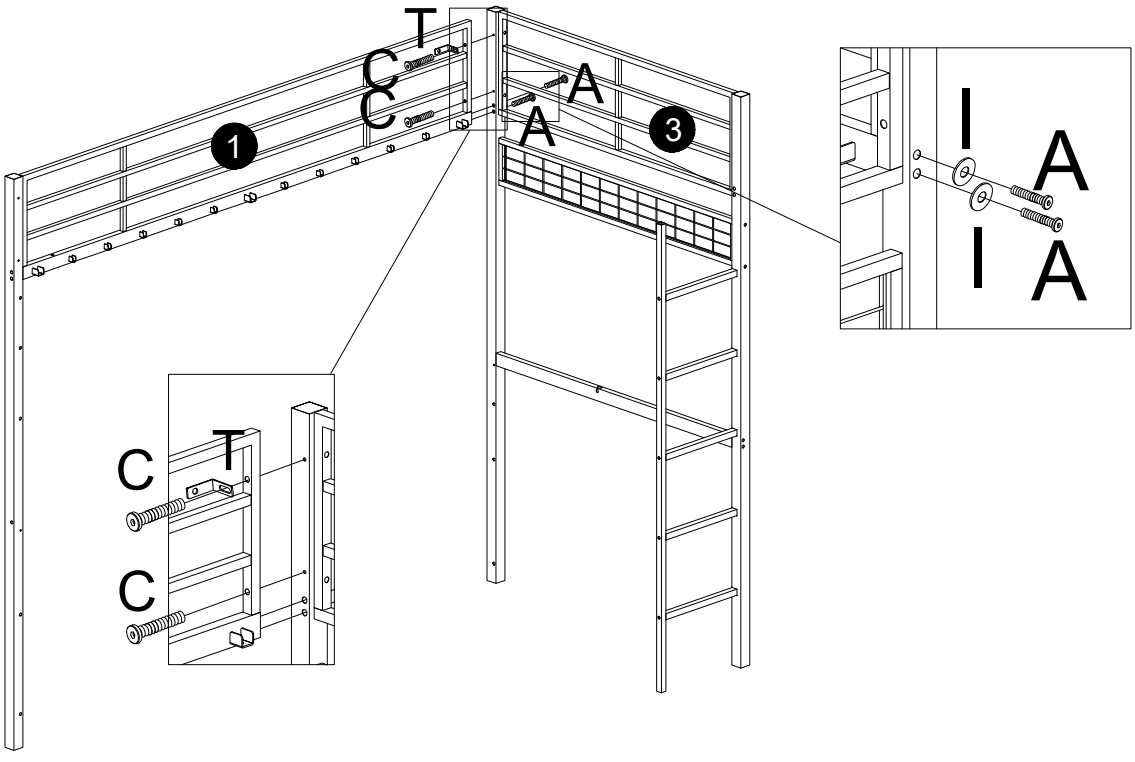


T	x1		
I	x2		
C M6*40	x2		
A M8*55	x2	H1	x1

5

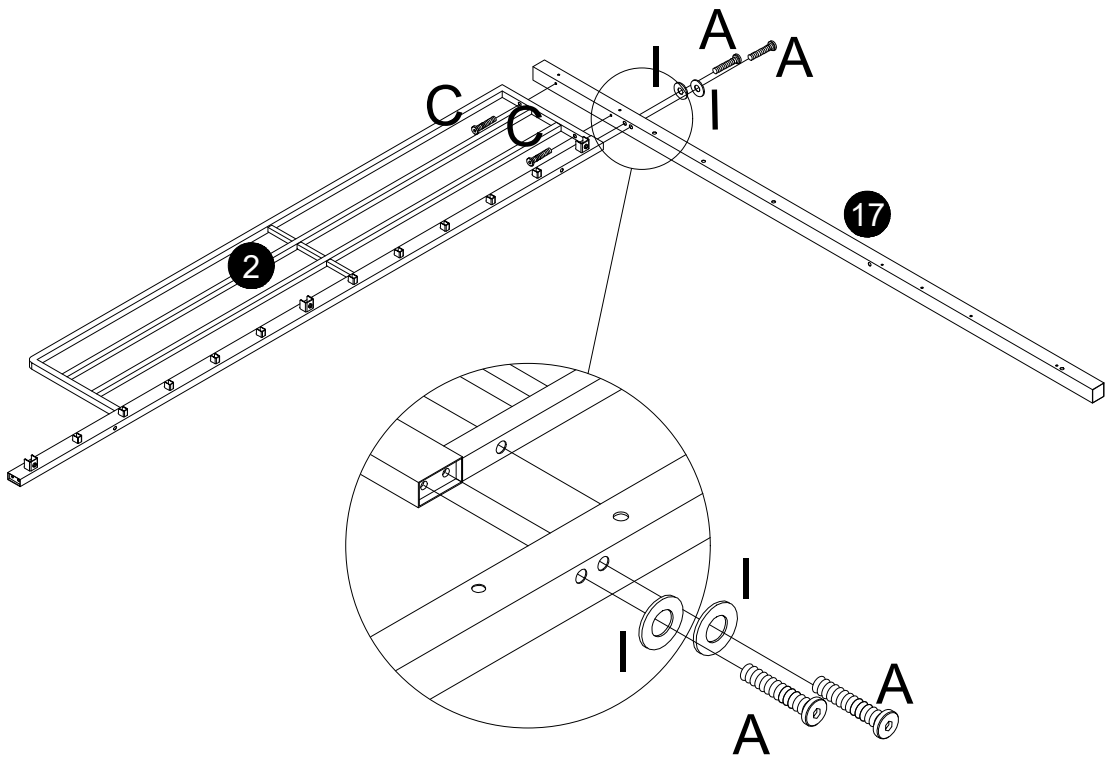


I	x2
C M6*40	x2
A M8*55	x2
H1	x1

6

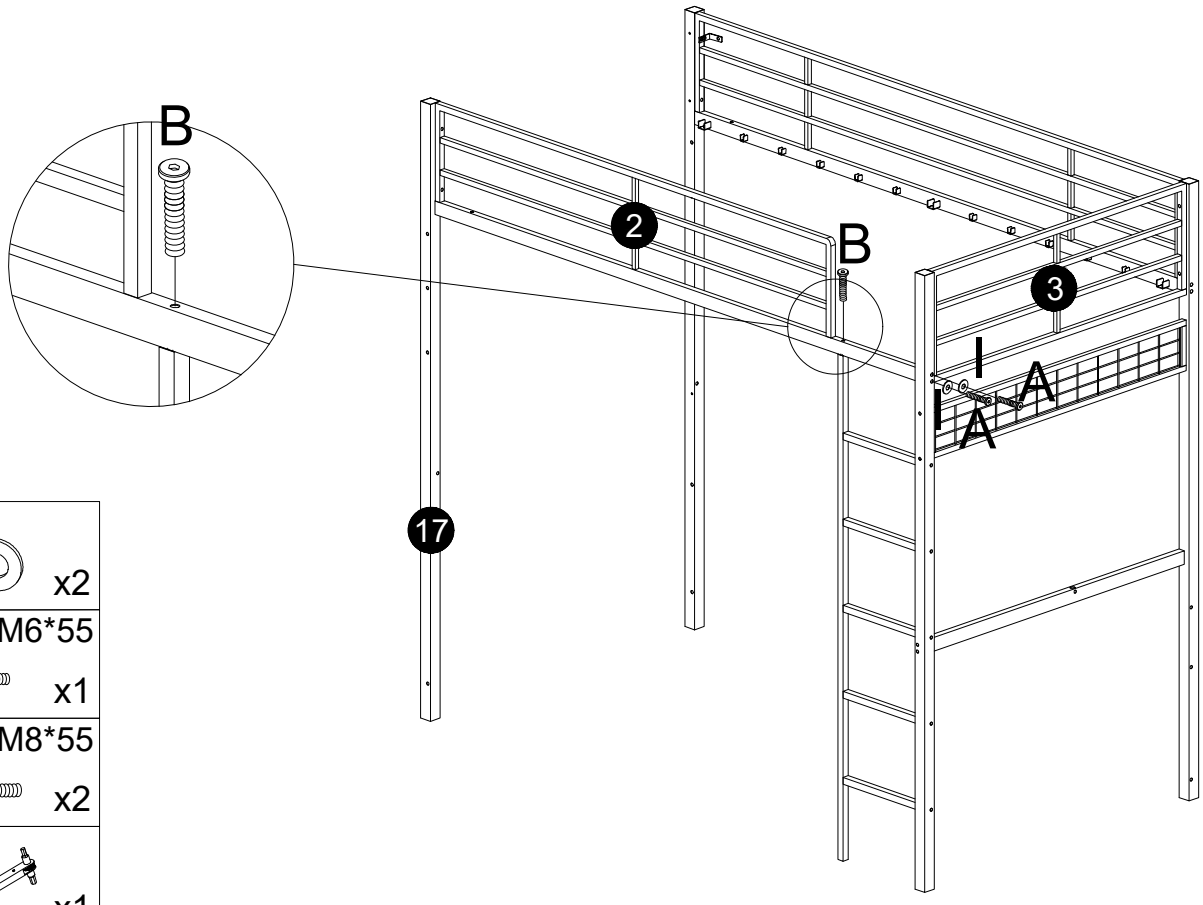

I	x2
B M6*55	x1
A M8*55	x2
H1	x1


7

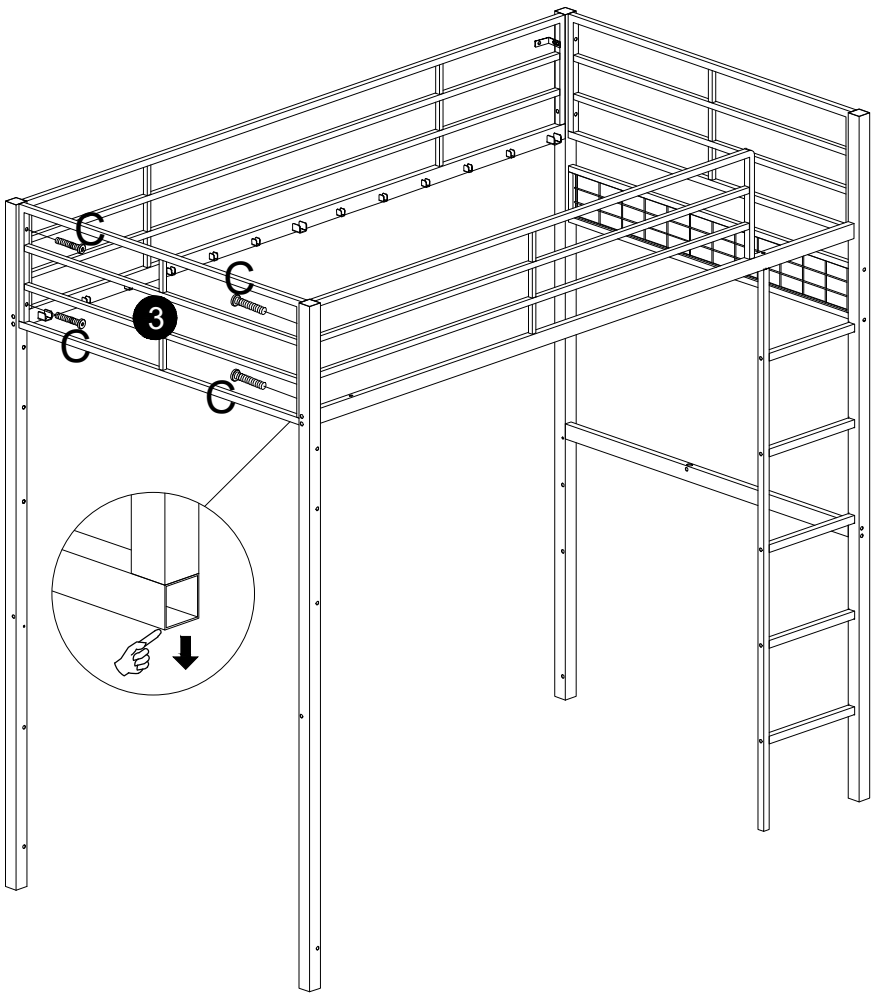

C M6*40	x4
H1	x1


8


Please note the distance between the hole and the edge.

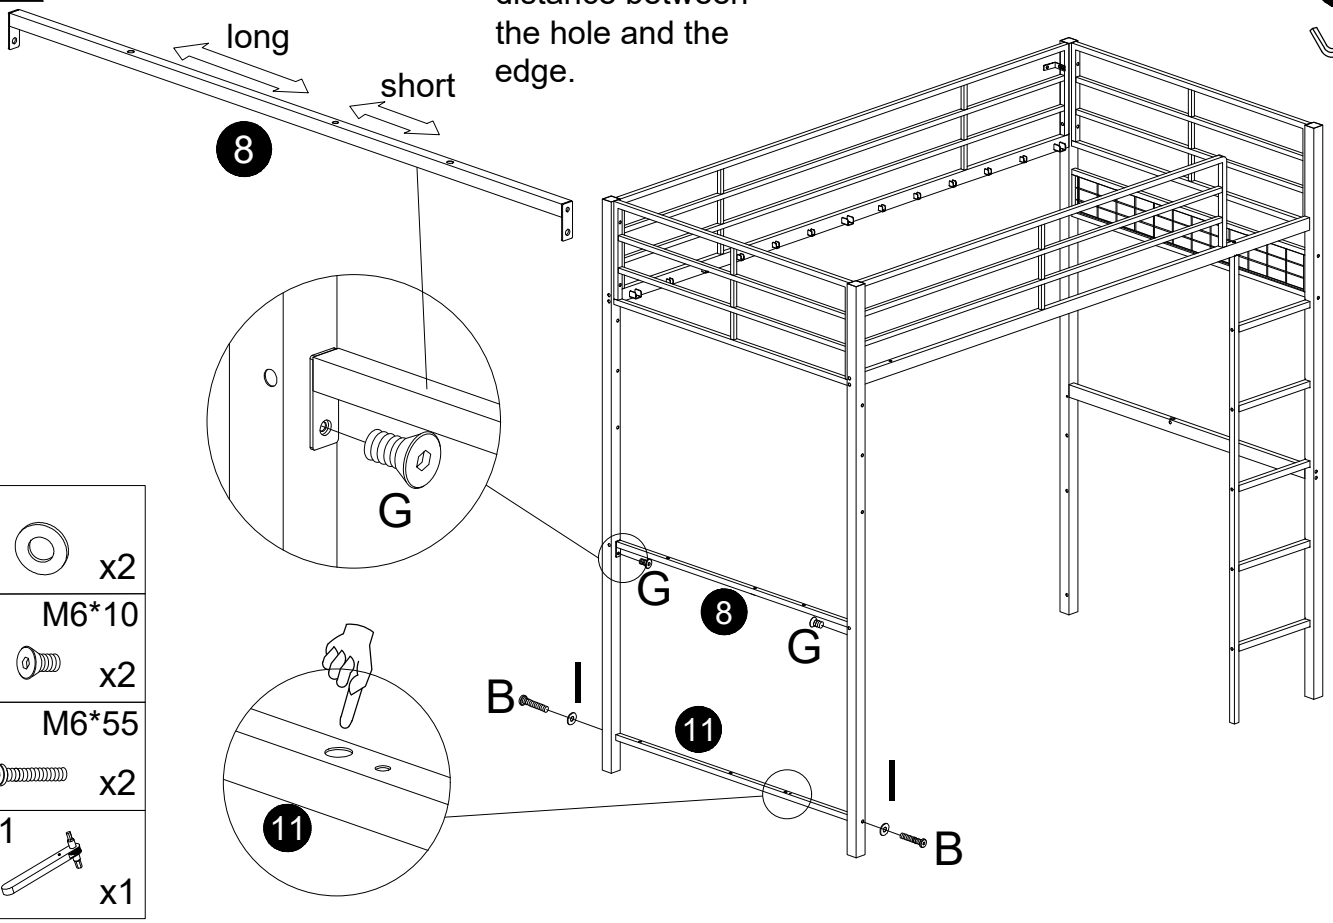

I	x2
G M6*10	x2
B M6*55	x2
H1	x1


9



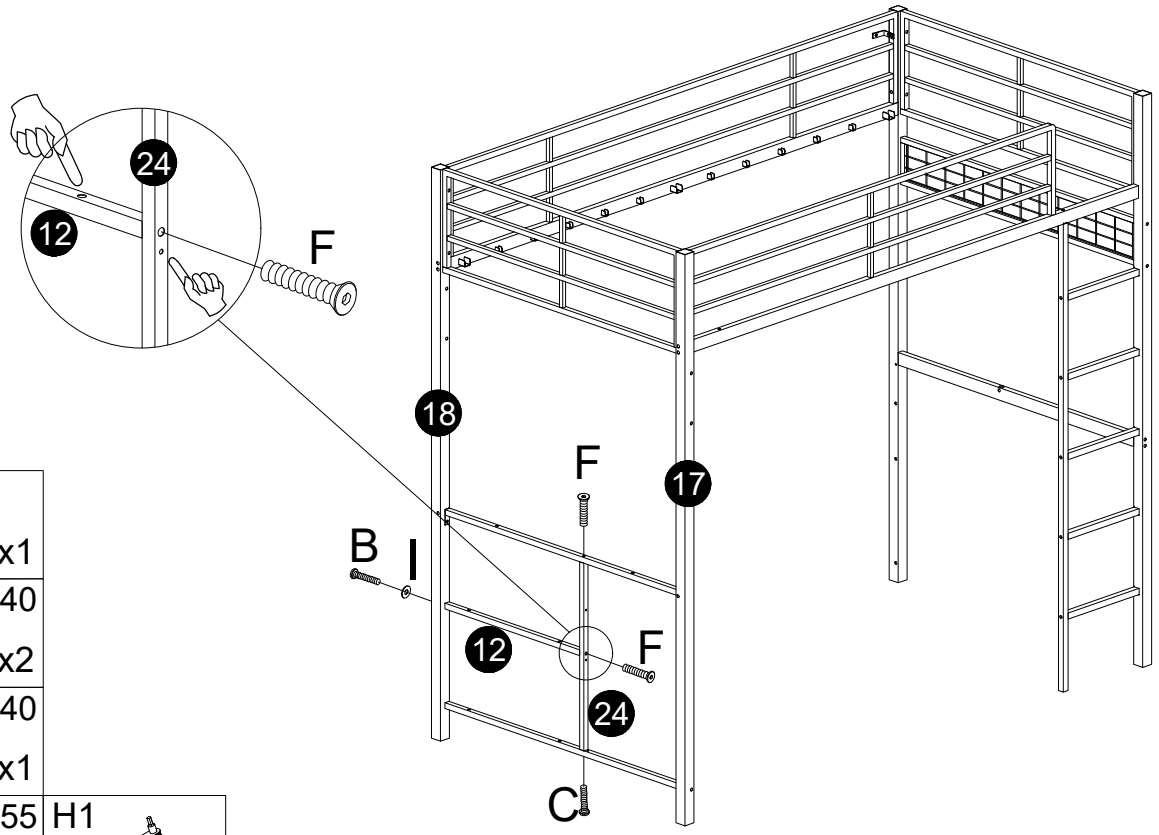


I	x1		
F M6*40	x2		
C M6*40	x1		
B M6*55	x1	H1	x1

10

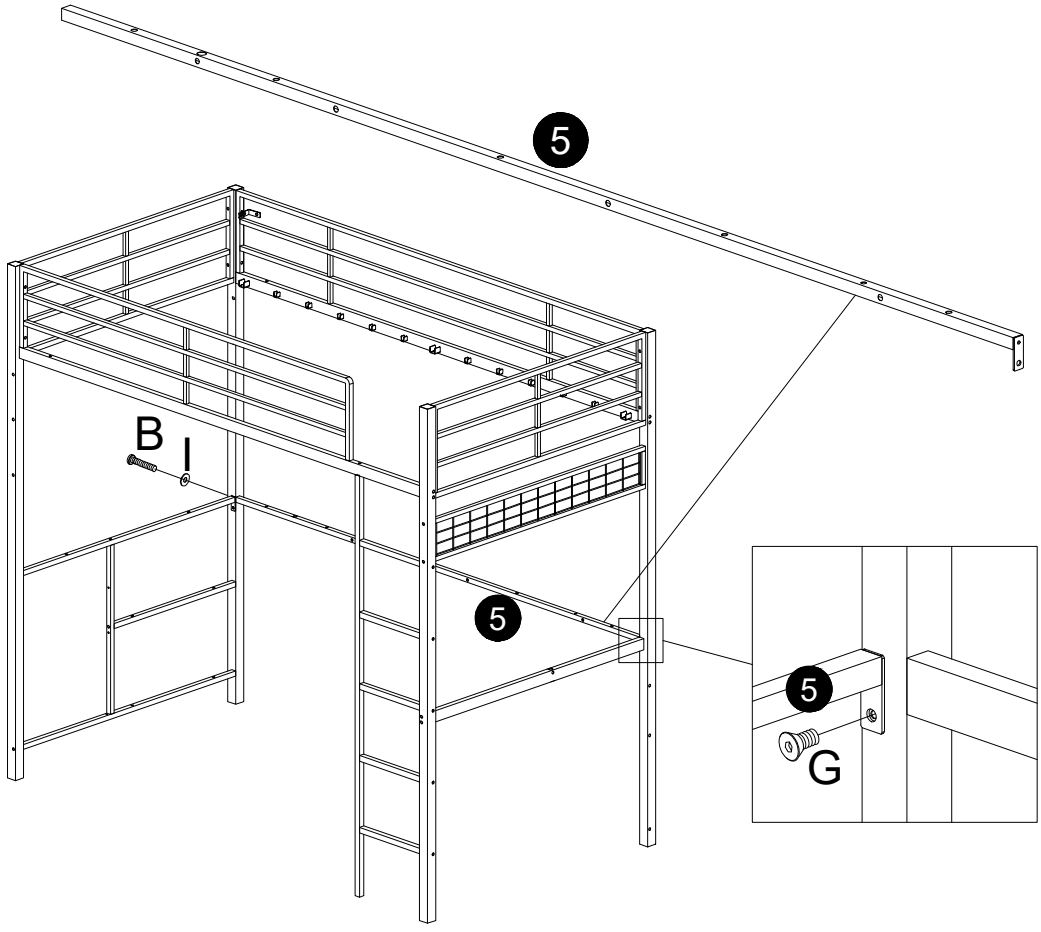


I	x1
B M6*55	x1
G M6*10	x1
H1	x1

11





Pay attention to the orientation of the holes

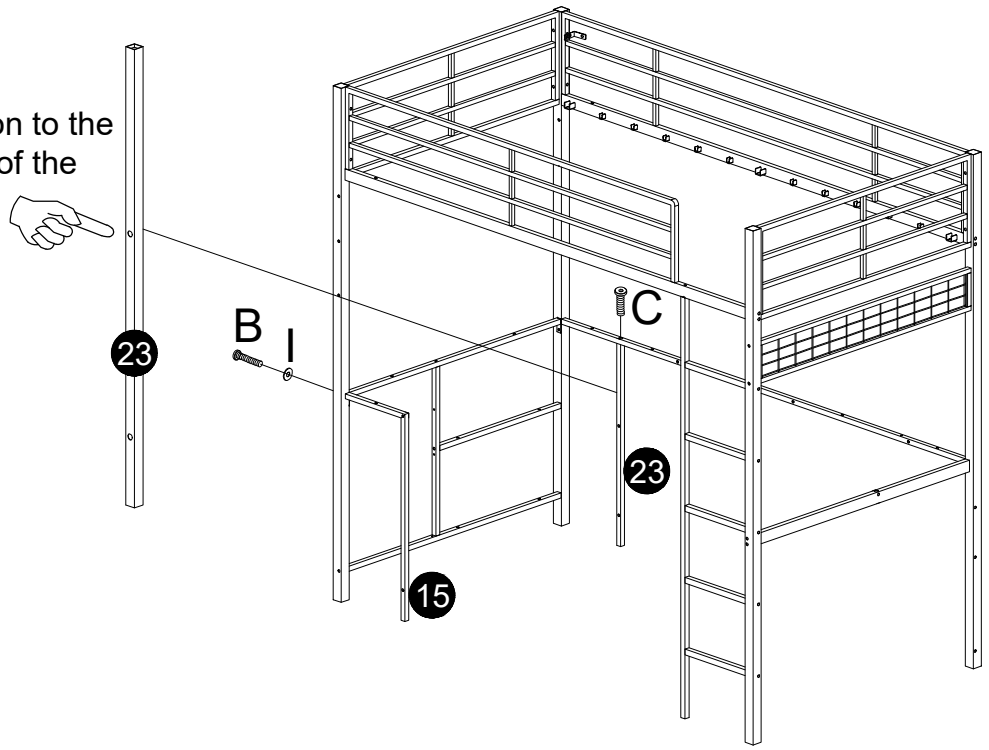



I 	x1
C M6*40 	x1
B M6*55 	x1
H1 	x1

12



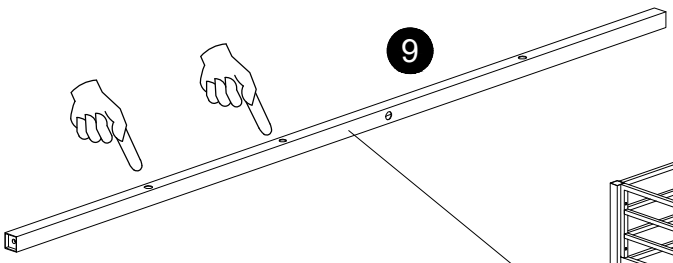

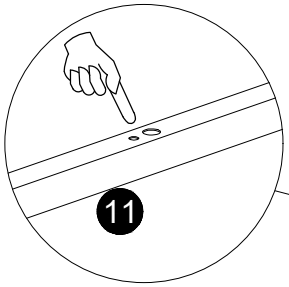

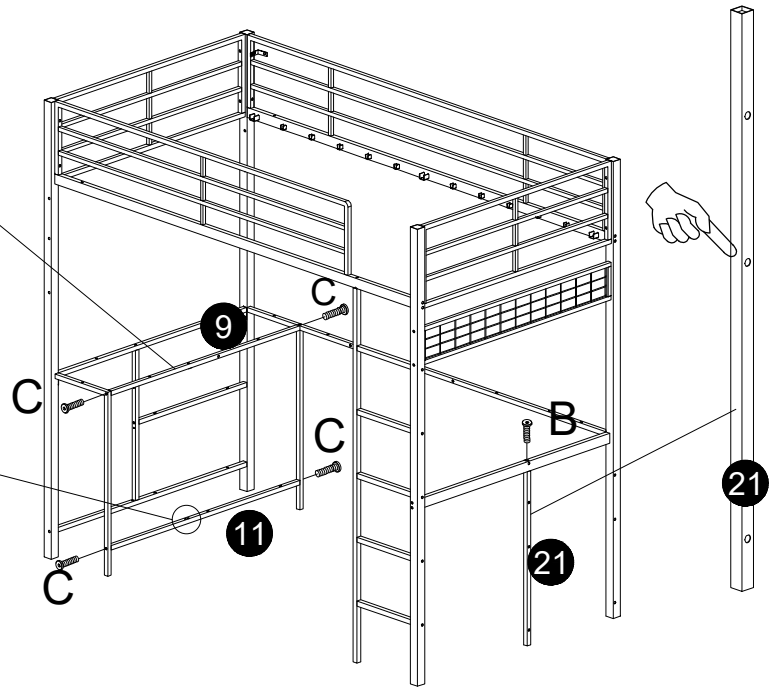


Pay attention to the orientation of the holes


B M6*55 	x1
C M6*40 	x4
P 	x1
H1 	x1

13

75%

Pay attention to the orientation of the holes

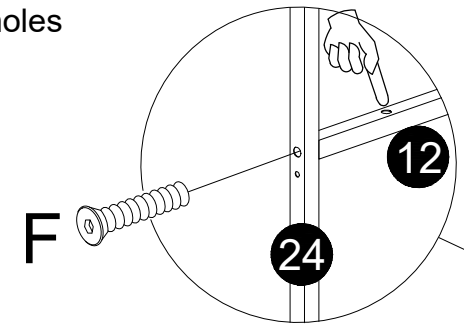


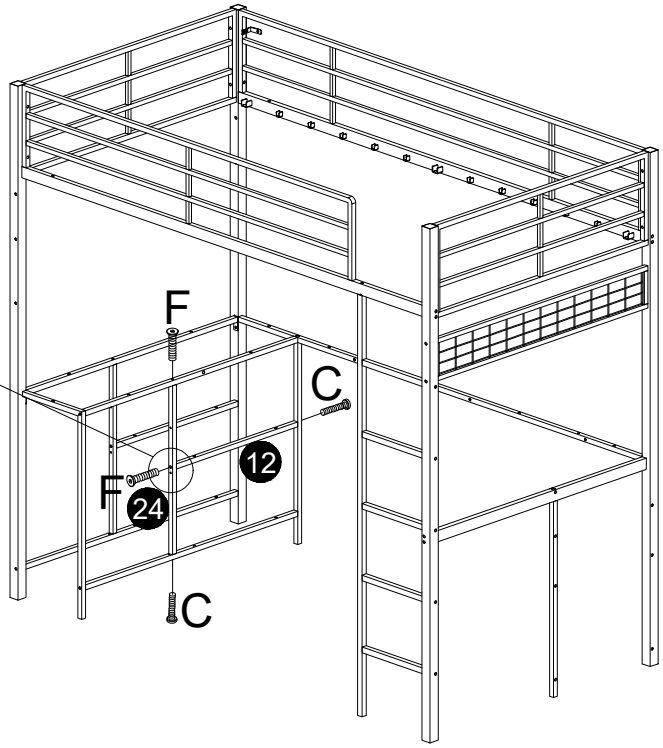

F M6*40	x2
C M6*40	x2
H1	x1


14

75%

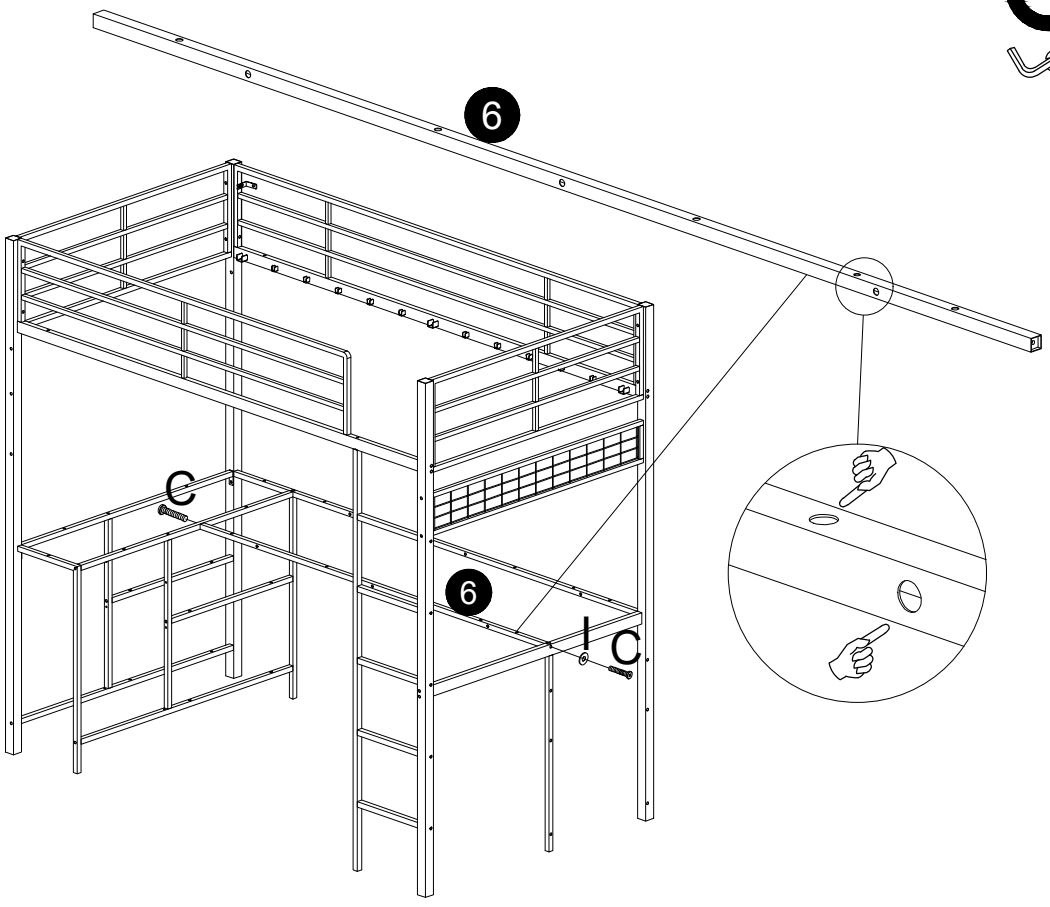


I	x1
C M6*40	x2
H1	x1

15

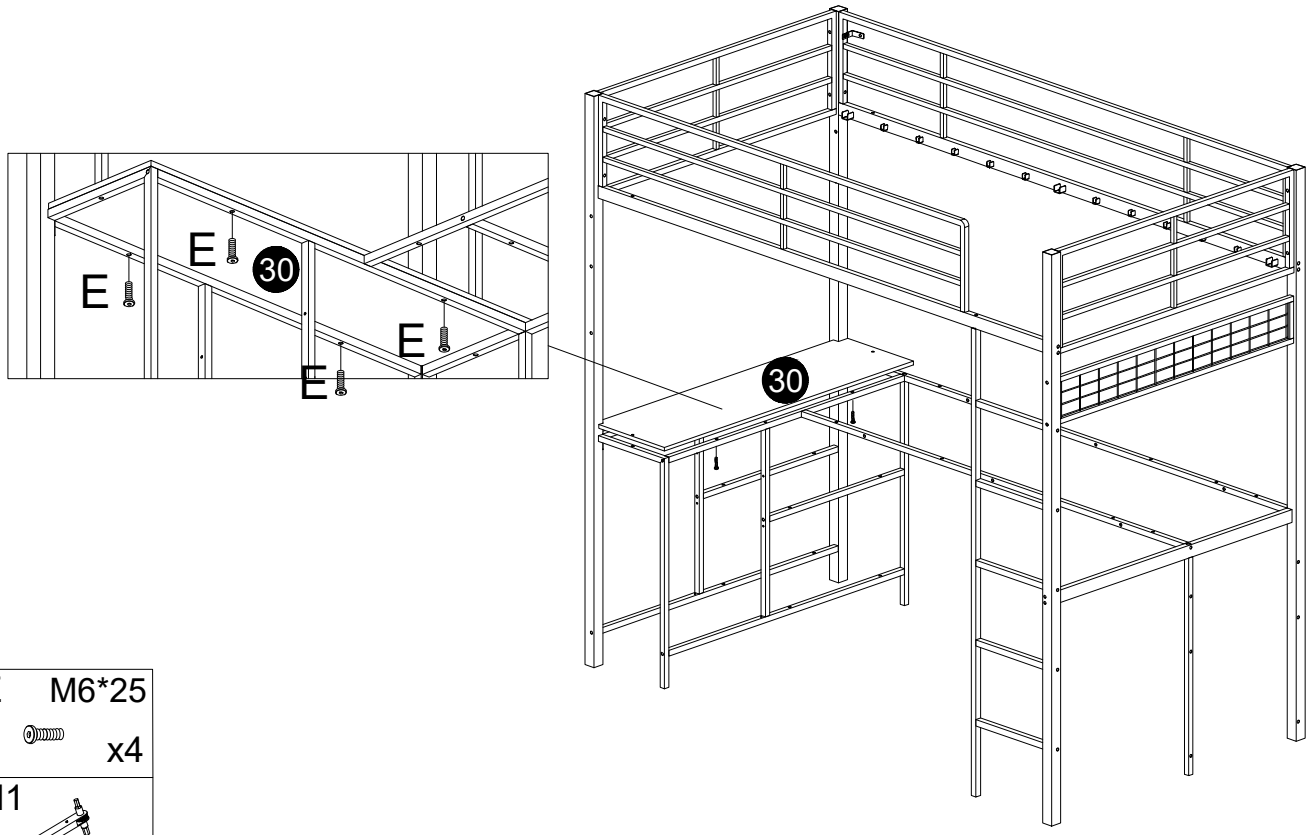


E M6*25	x4
H1	x1

16

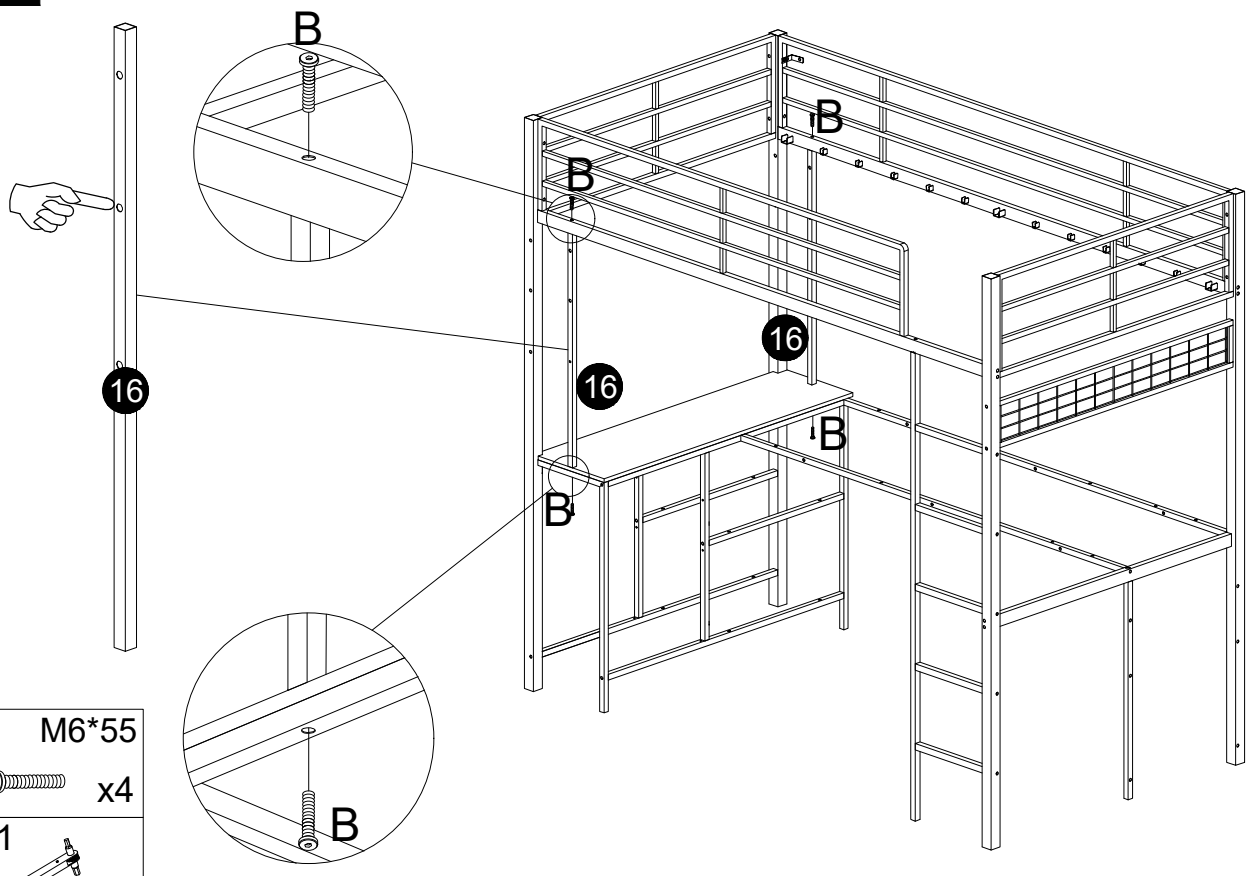


B M6*55	x4
H1	x1

17

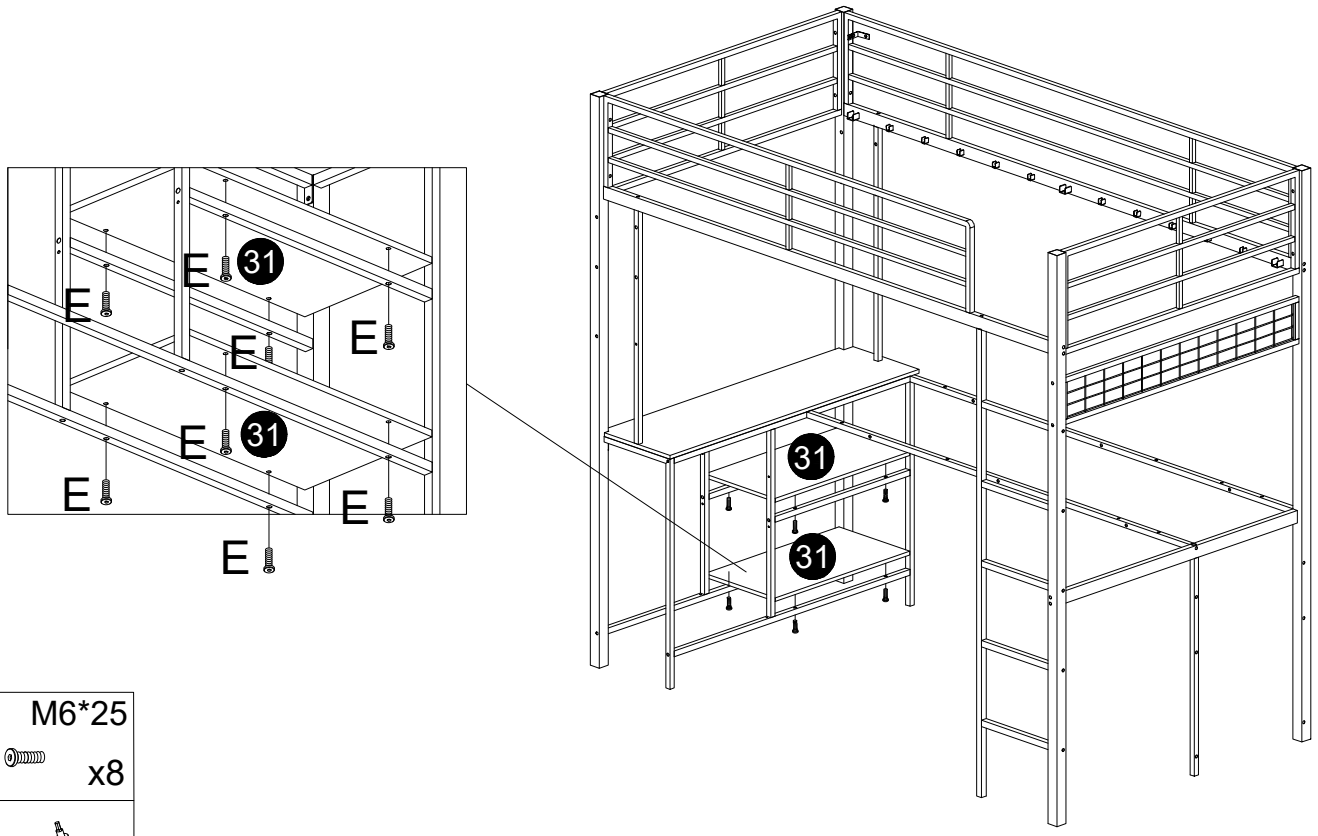


E M6*25	x8
H1	x1

18

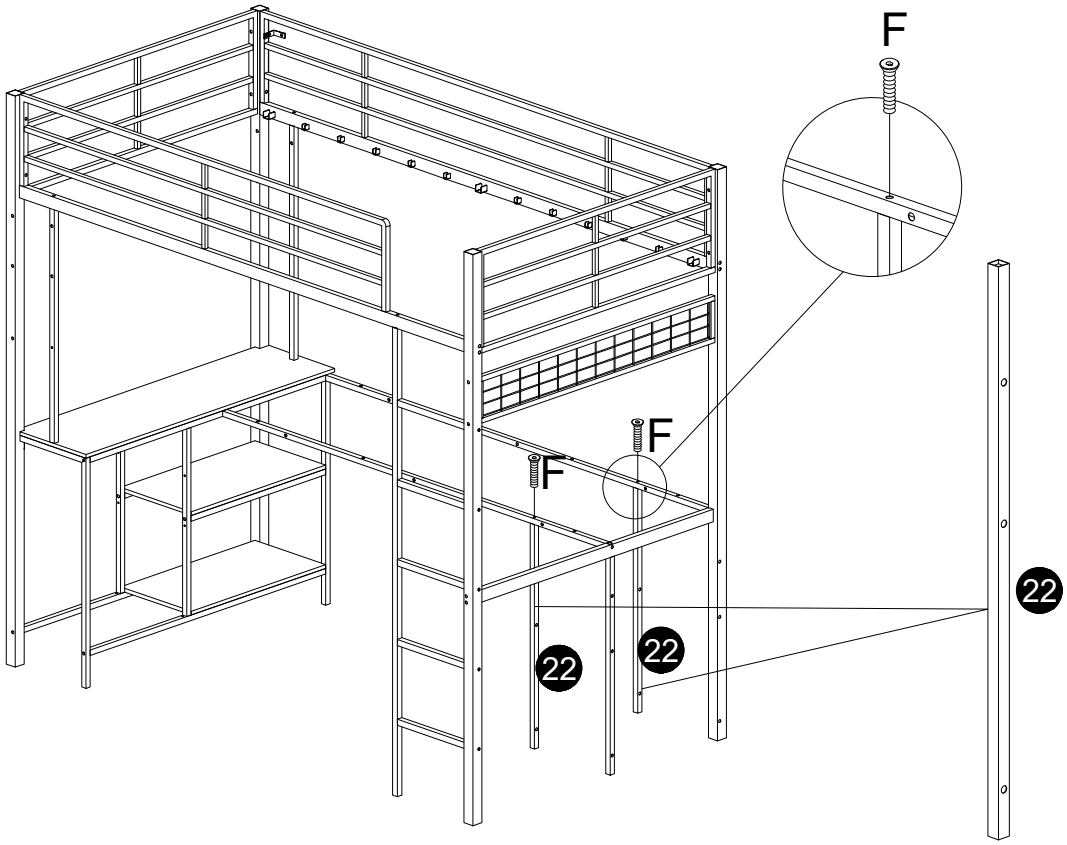


F M6*40	x2
H1	x1

19

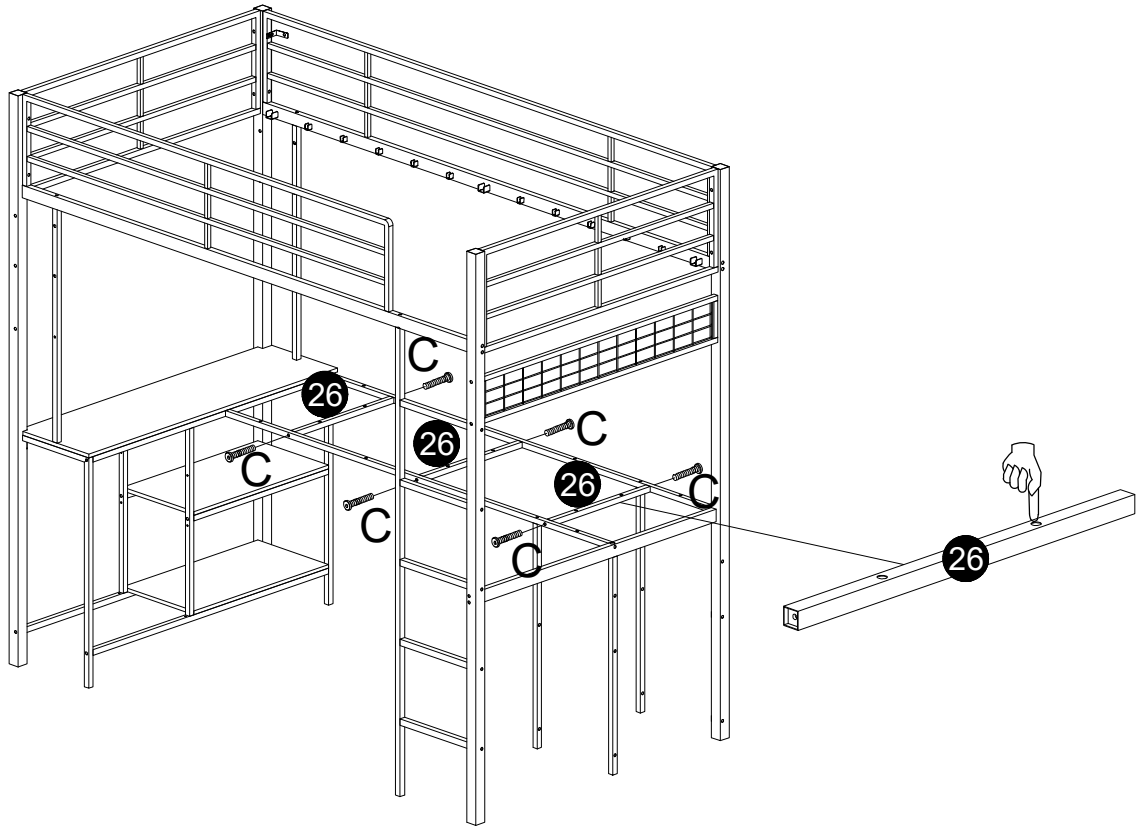


C M6*40	x6
H1	x1

20

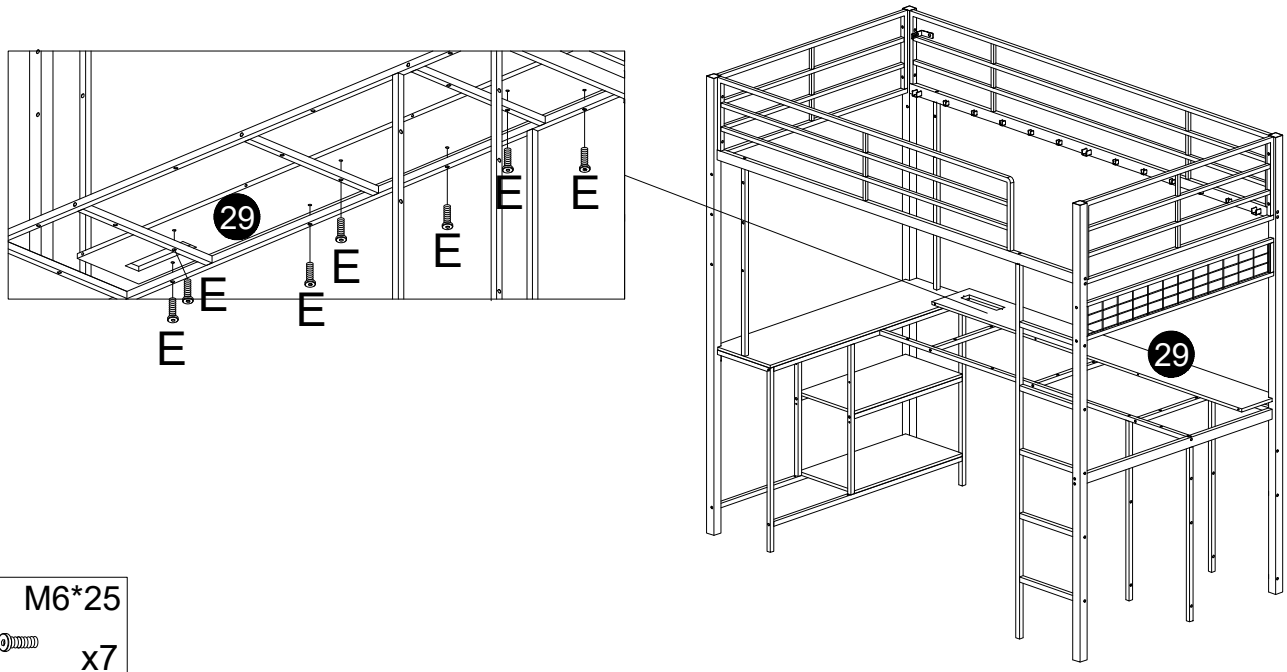

E M6*25	x7
H1	x1


21

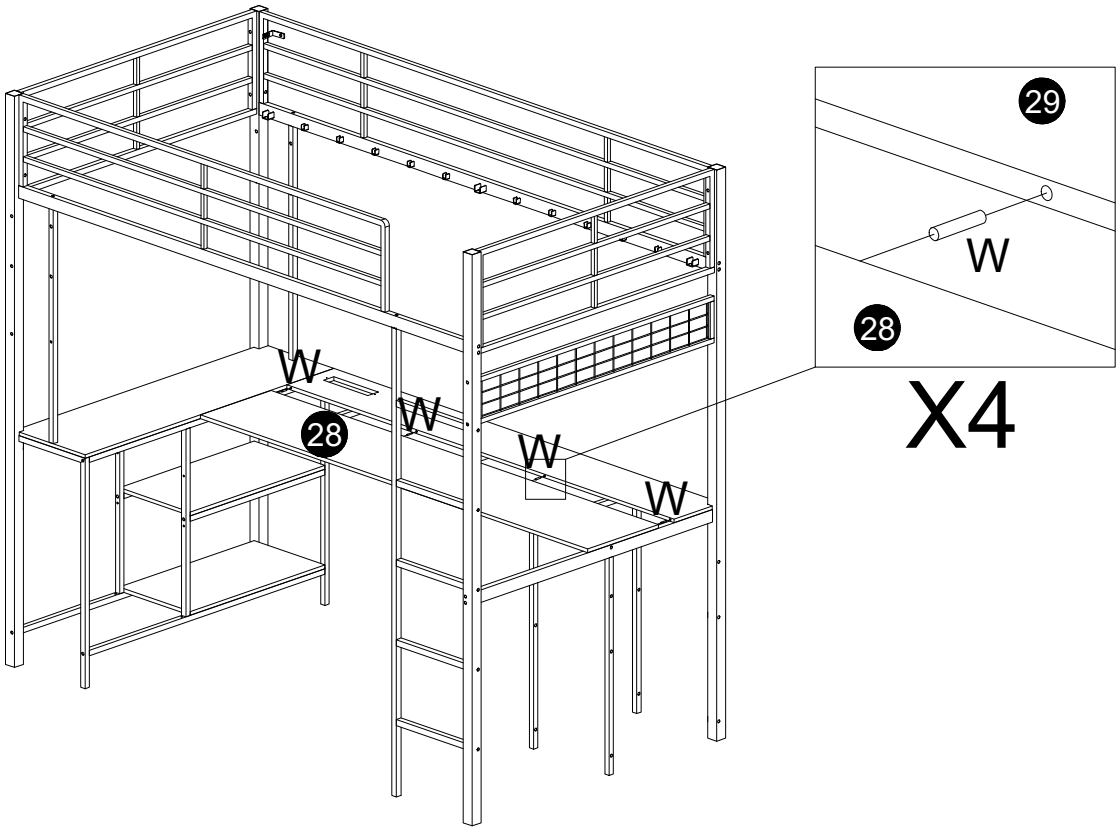

W x4

H1 x1


22

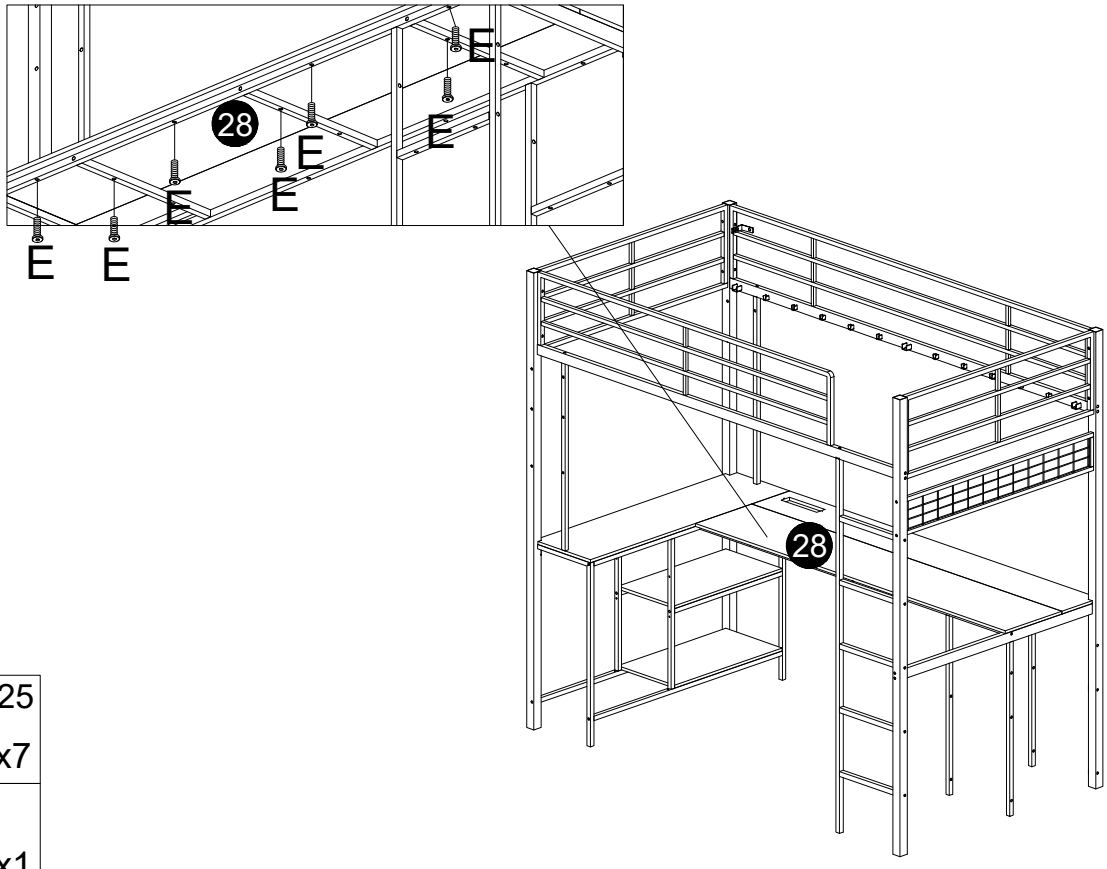

E M6*25 x7


H1 x1

23

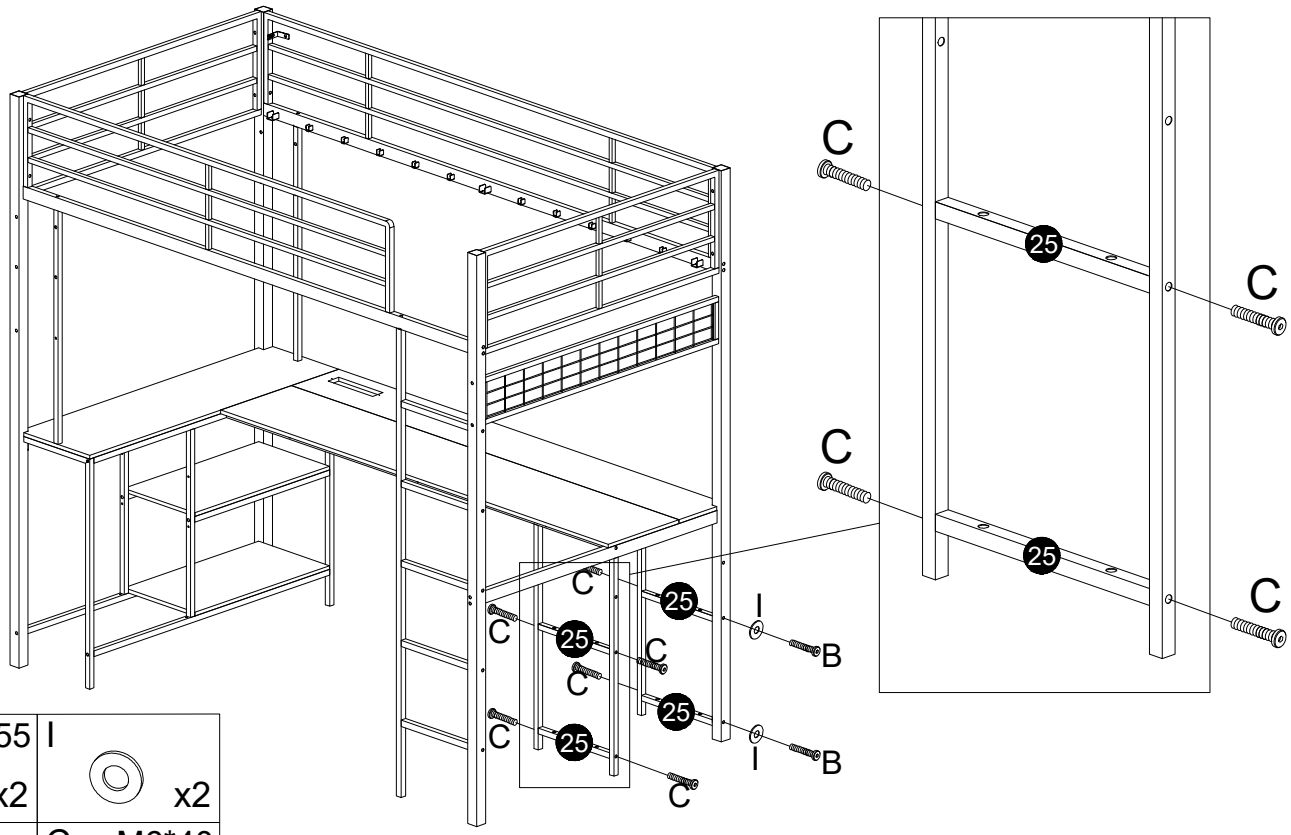


B M6*55 x2	I x2
H1 x1	C M6*40 x6

23 OR

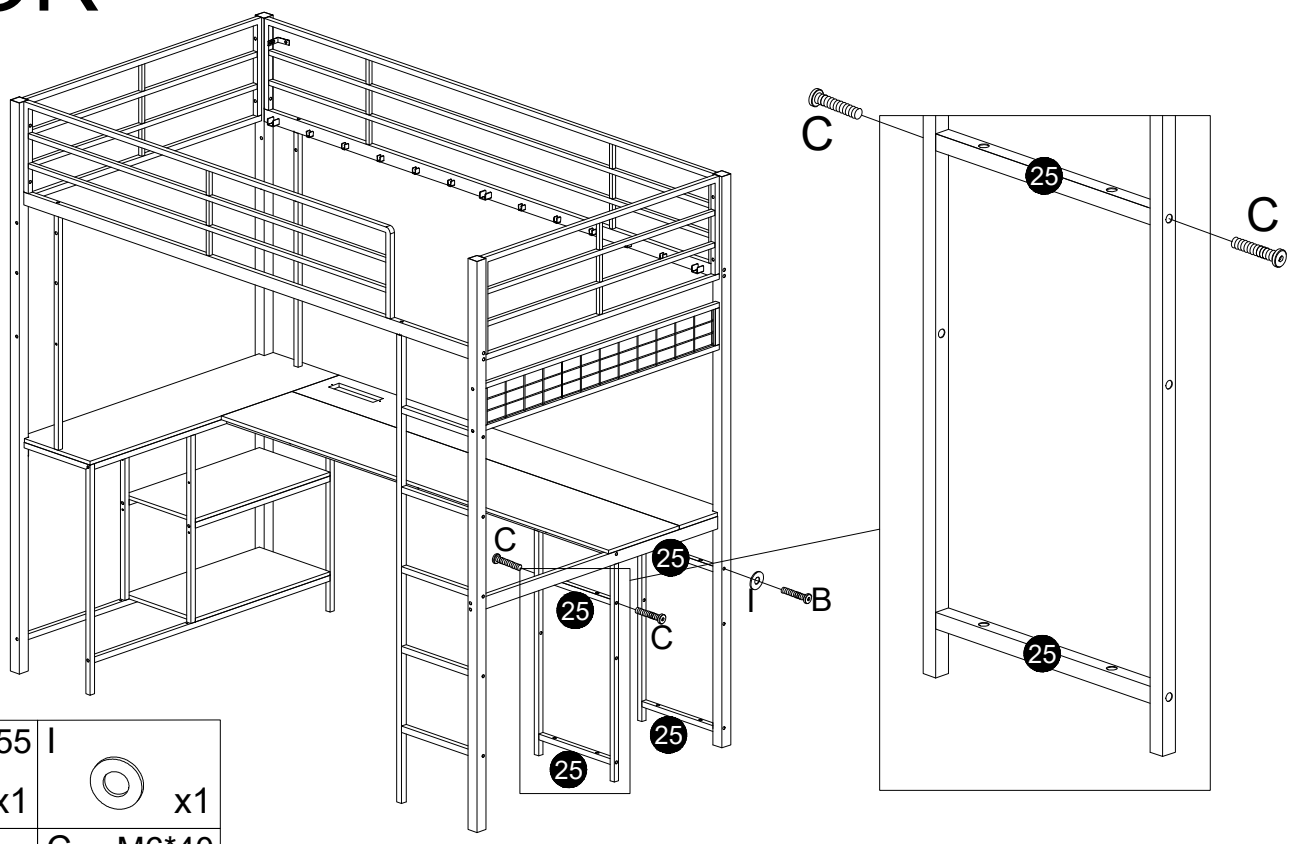


B M6*55 x1	I x1
H1 x1	C M6*40 x3


24

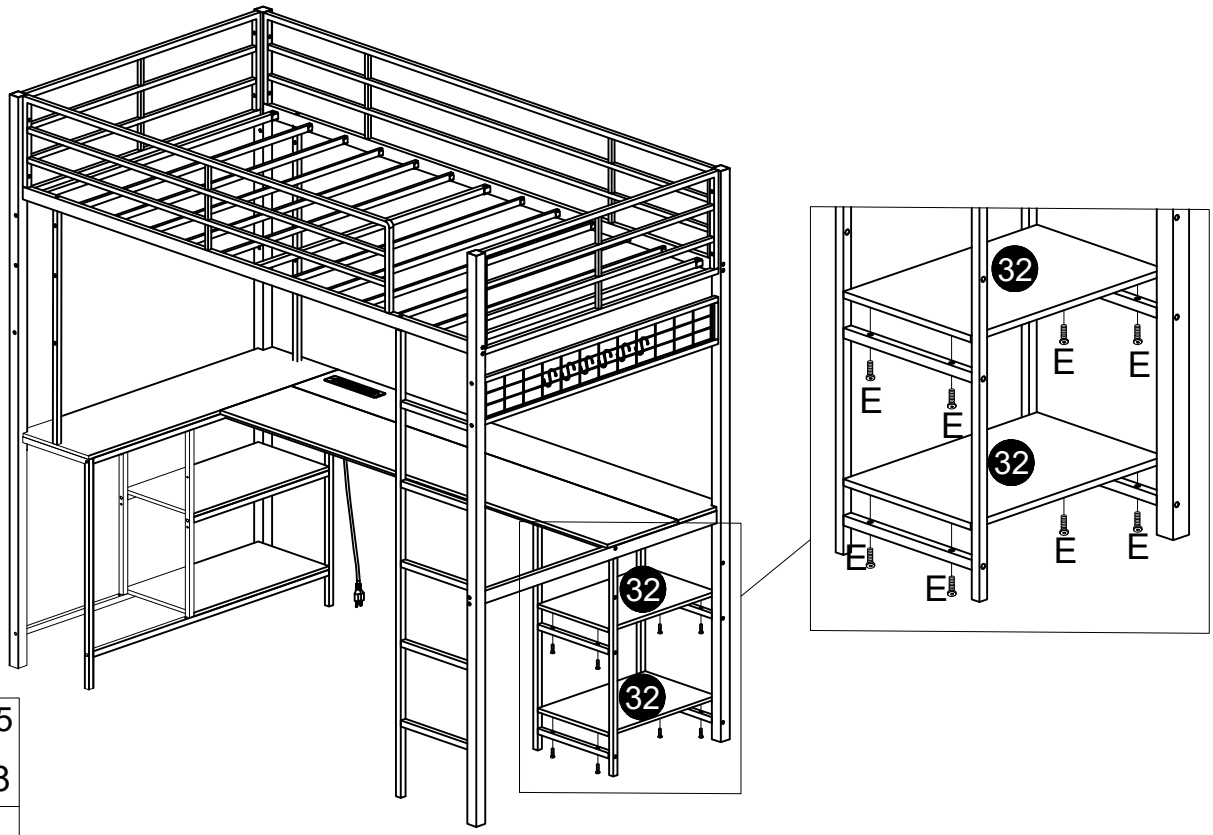

E M6*25	x8
H1	x1


25



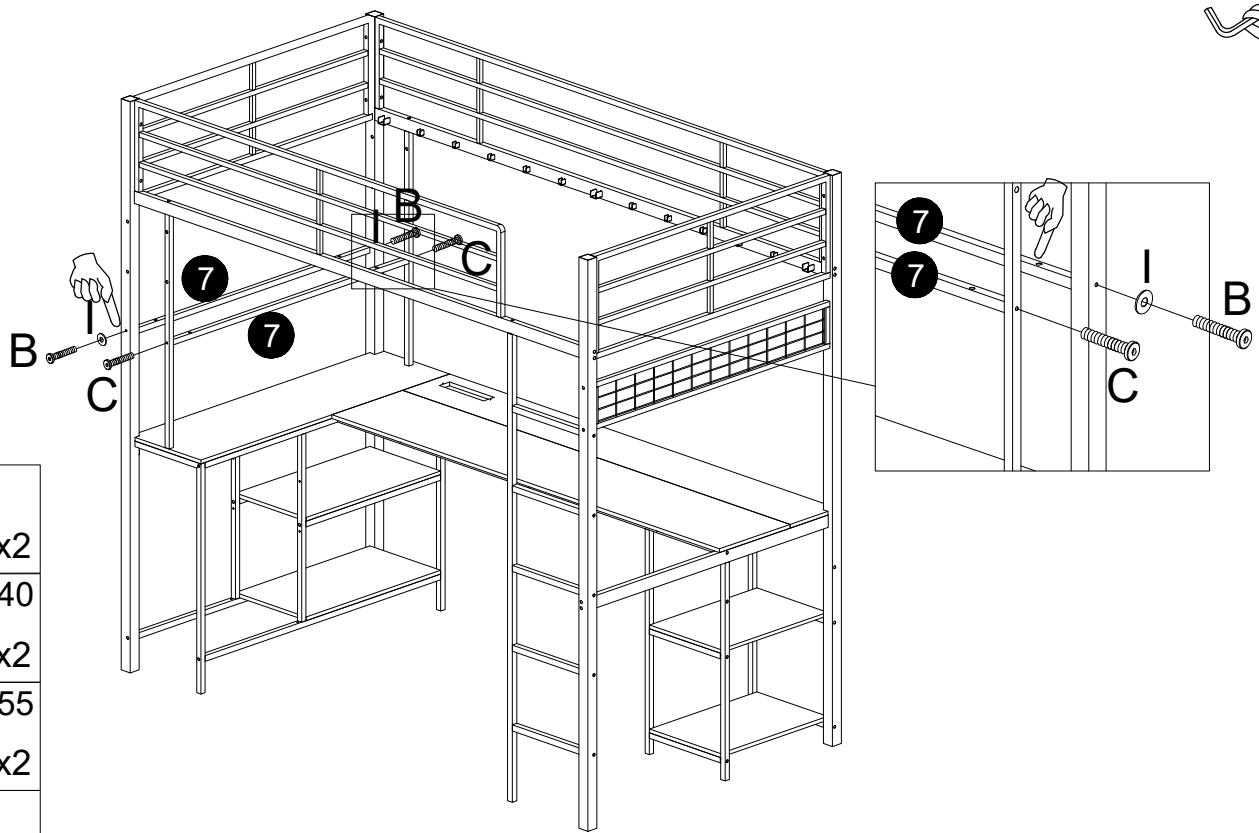


I	x2
C M6*40	x2
B M6*55	x2
H1	x1

26

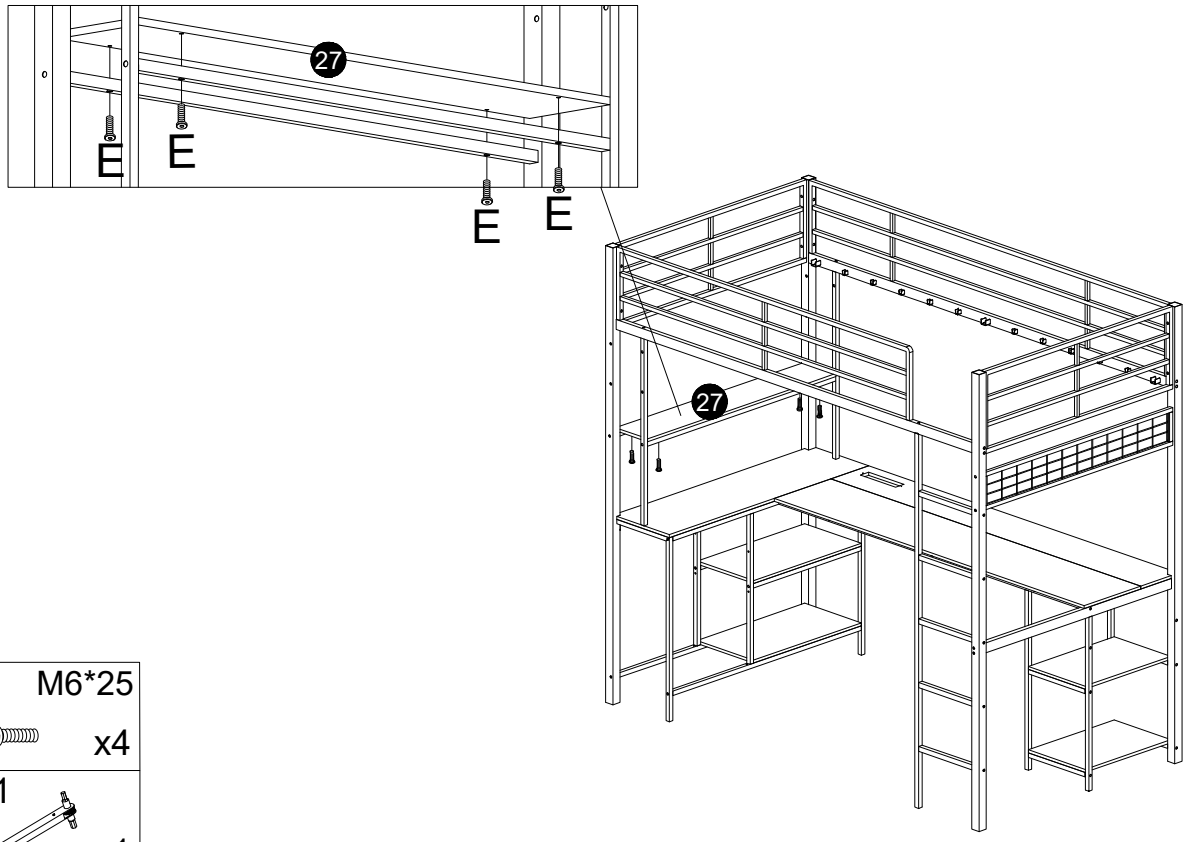


E M6*25	x4
H1	x1

27

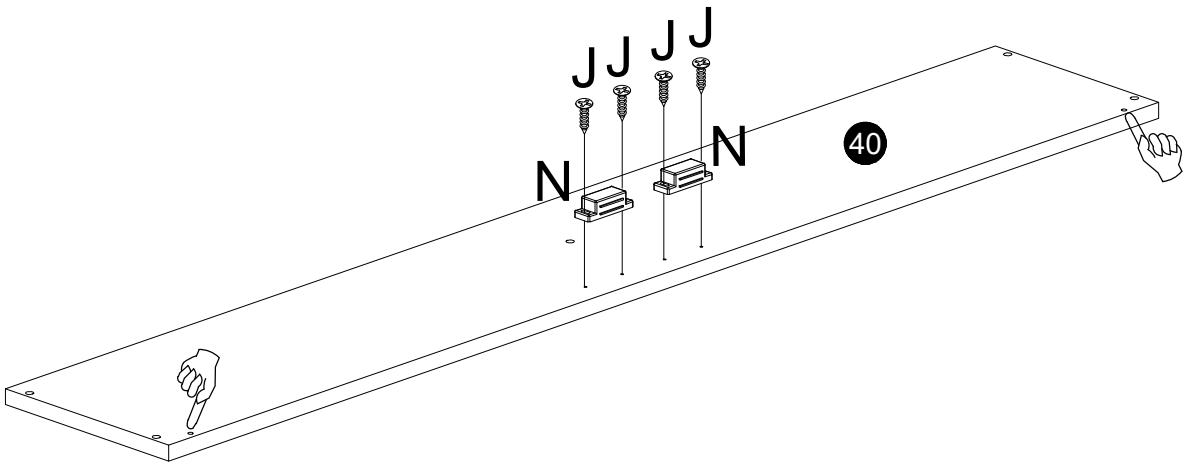


N	x2
J 3*12	x4
P	x1

28

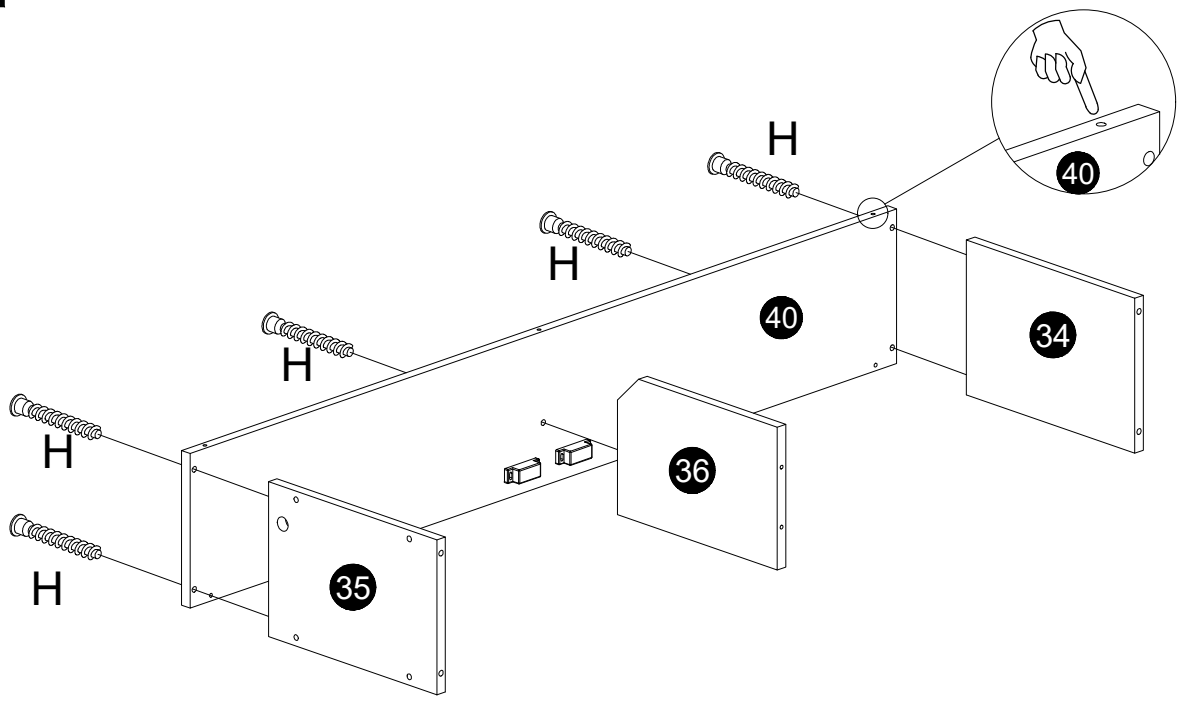


H M5*40	x5
Q	x1

29

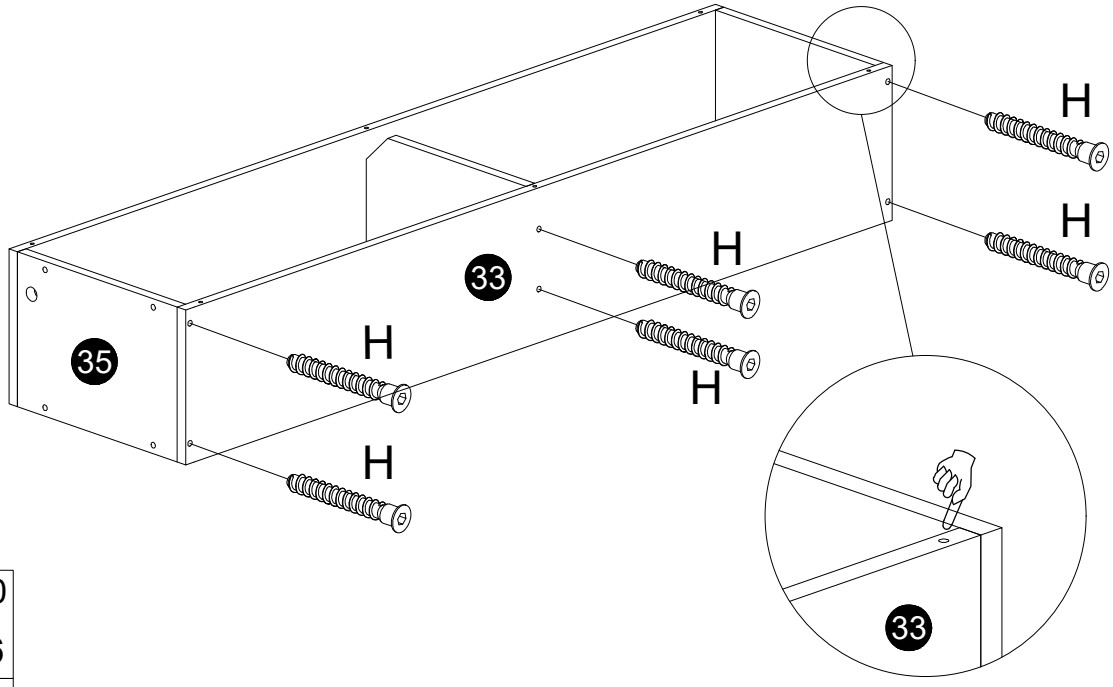

H M5*40	x6
Q	x1


30

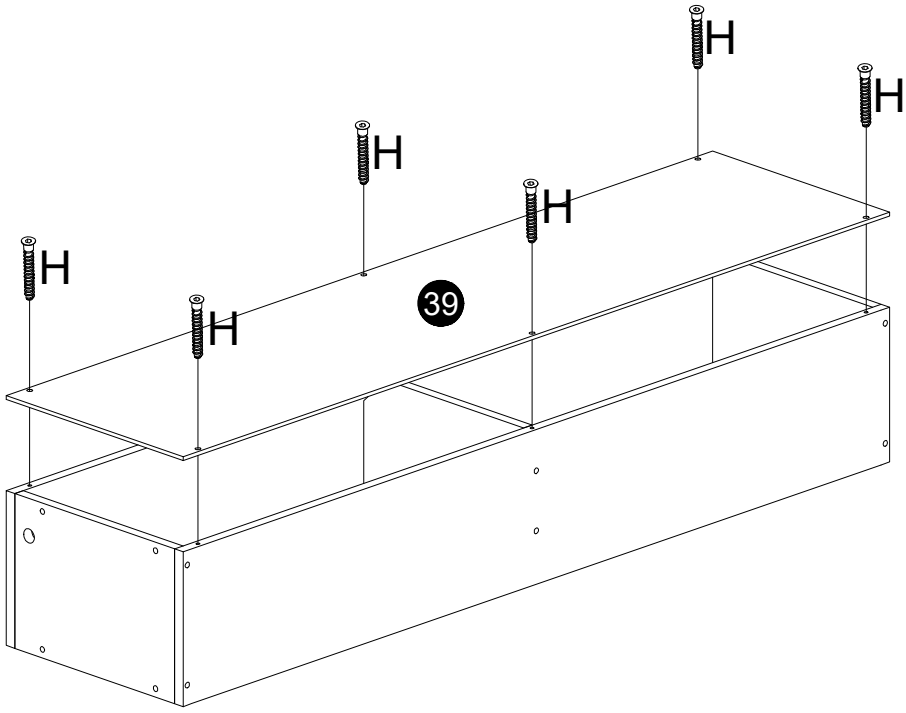


H M5*40	x6
Q 	x1

31


Please note that after installation, gently peel off the protective film on the cabinet door before use.

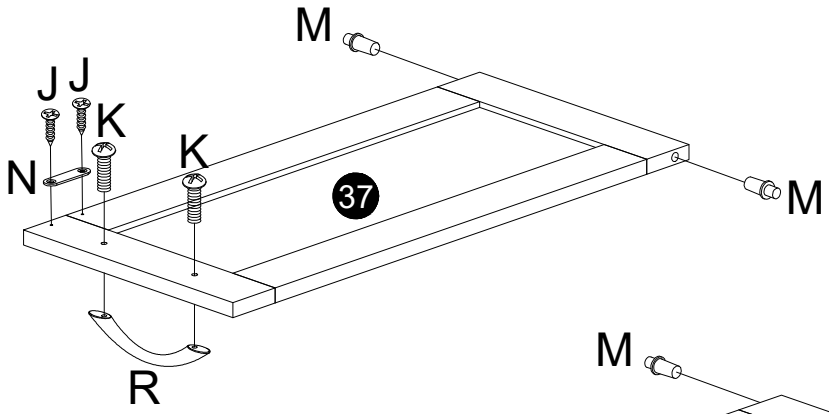

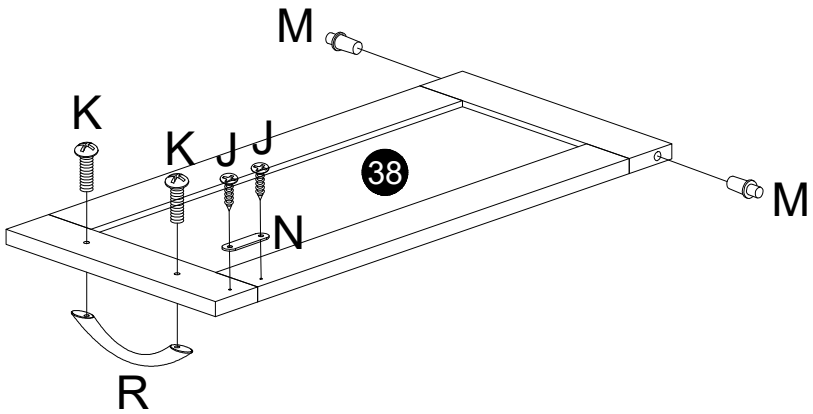

M 	x4		
N 	x2		
K M4*16 	x4	R 	x2
J 3*12 	x4	P 	x1


32

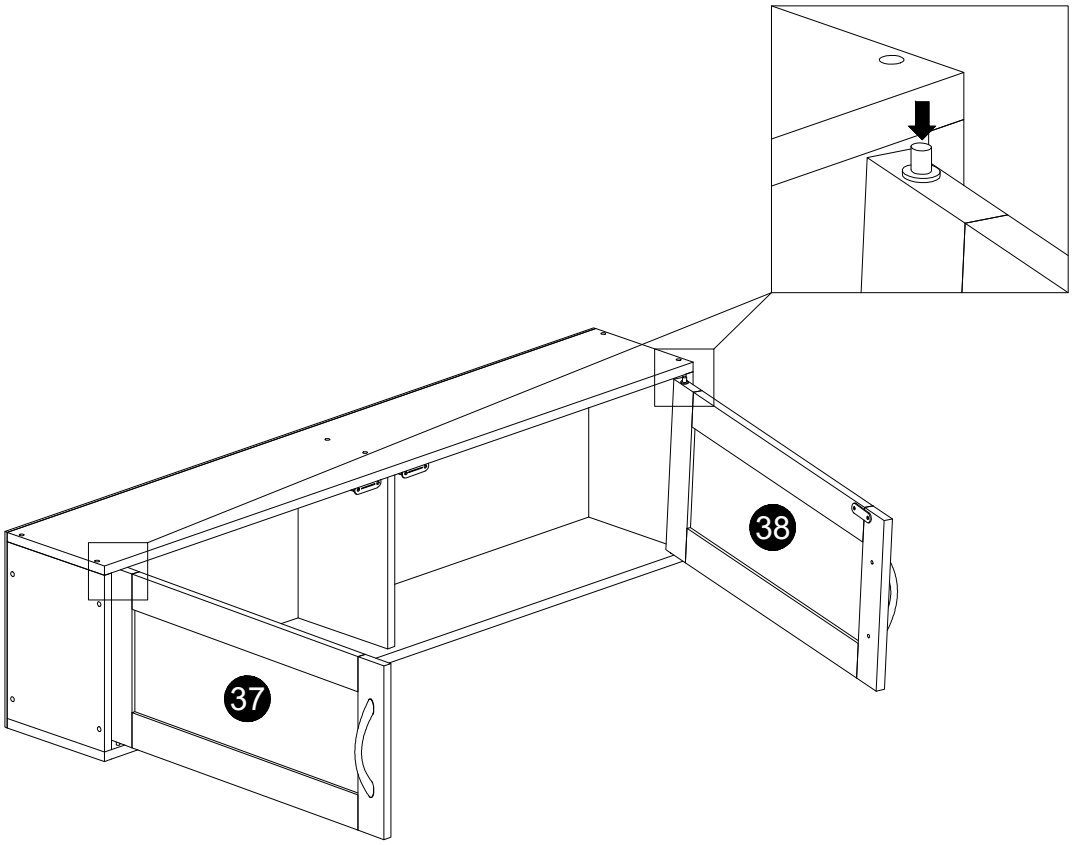


33




Install screw E first,
then install screw D.

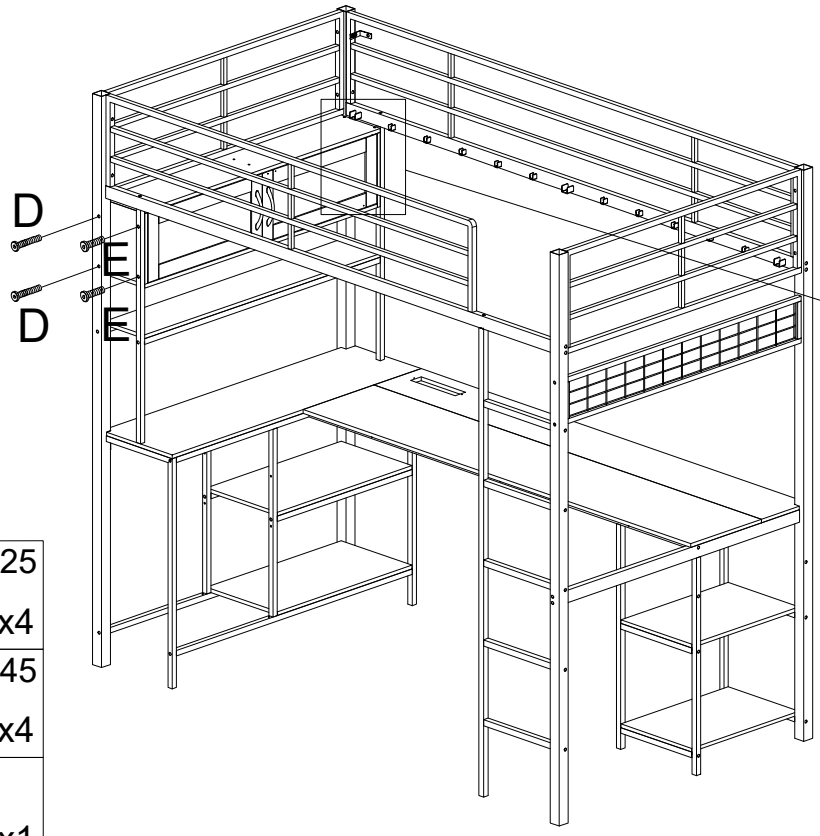

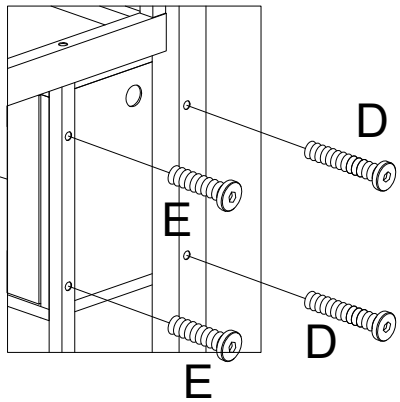


E	M6*25	x4
D	M6*45	x4
H1		x1

34

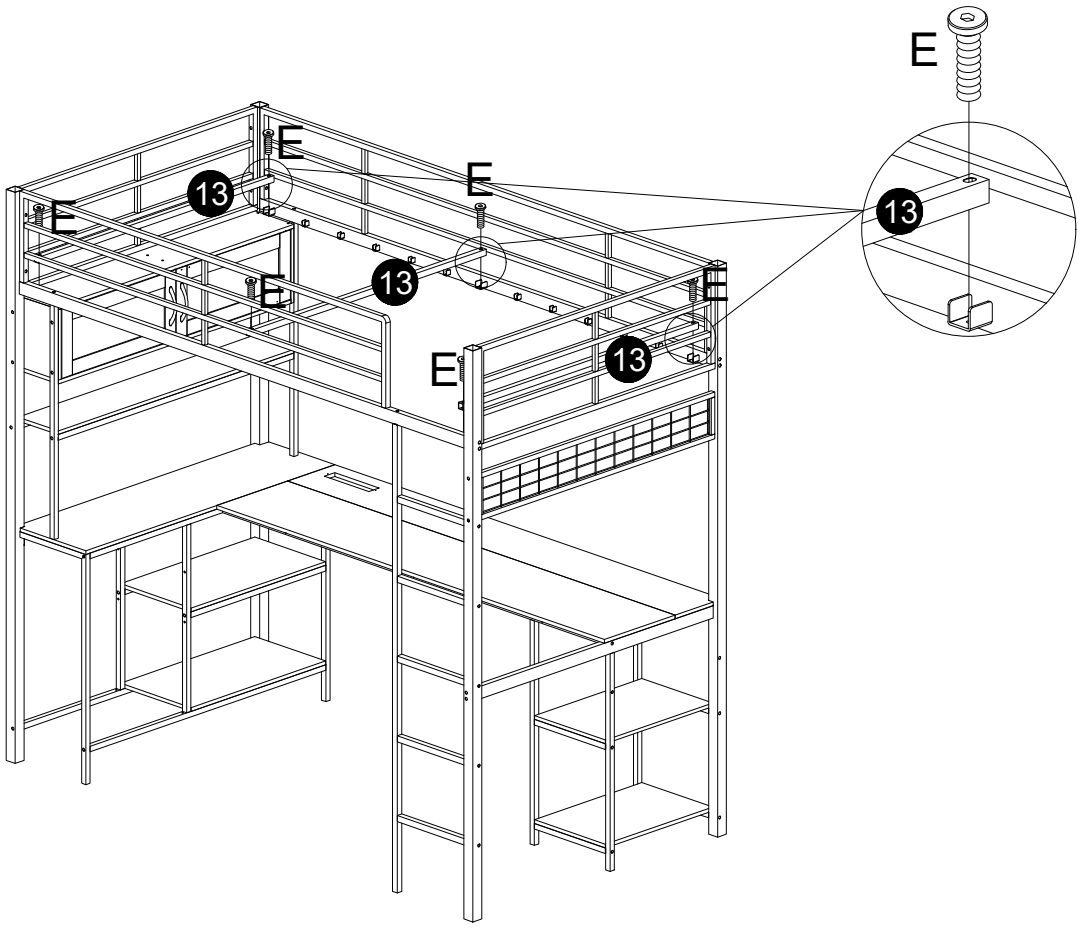



E M6*25	x6
H1	x1

35

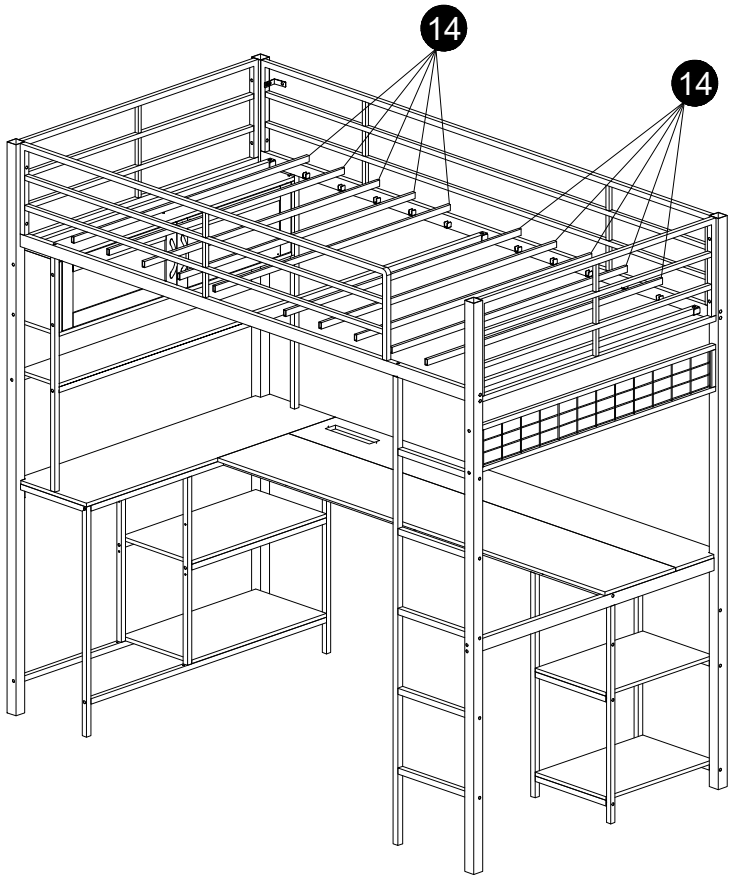


36

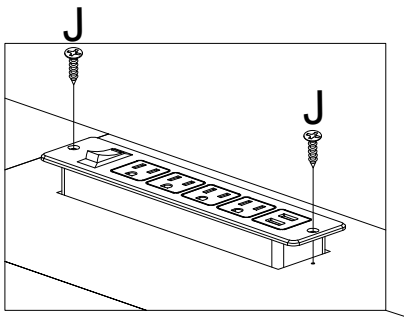


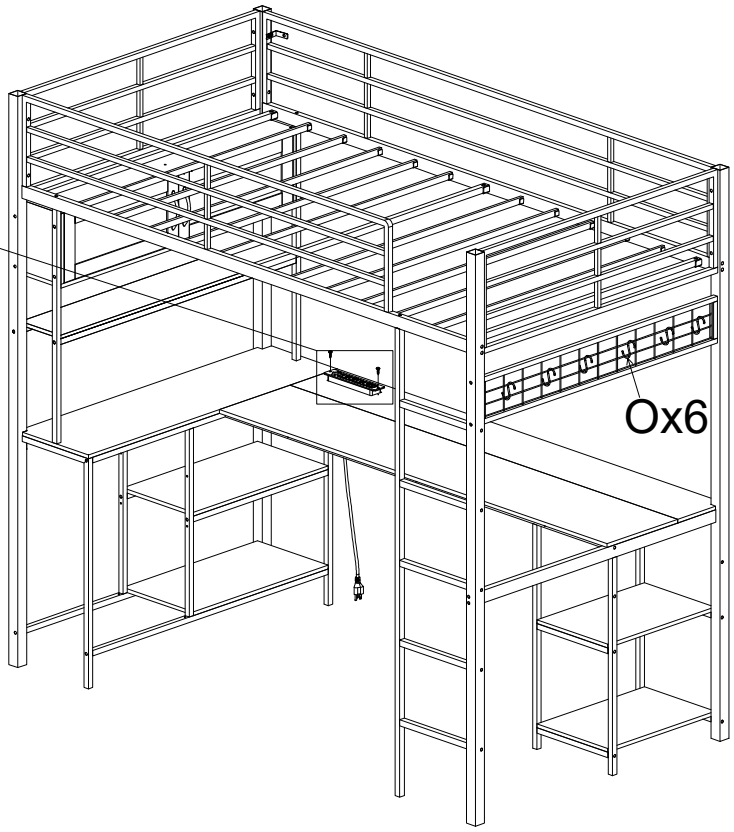


	x1
O 	x6
J 3*12 	x2
P 	x1


37

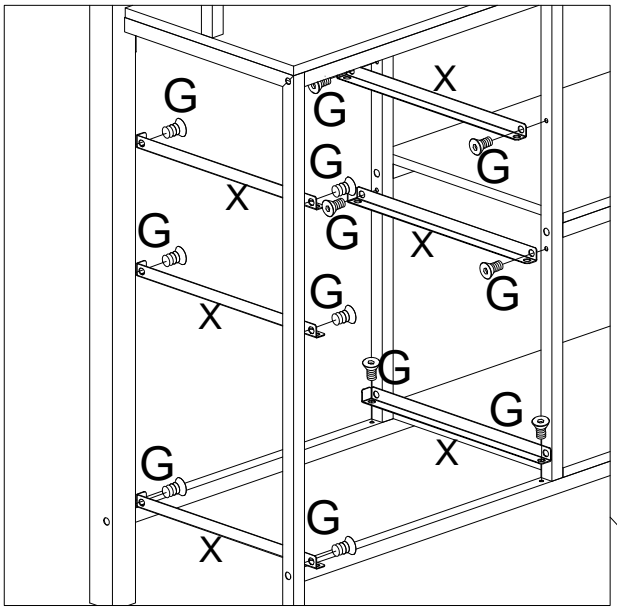

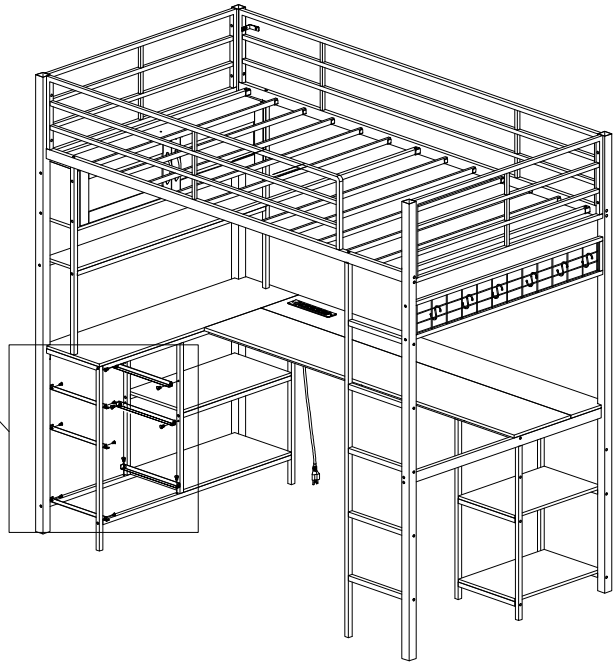


G M6*10 	x12
H1 	x1
X 	x6

38

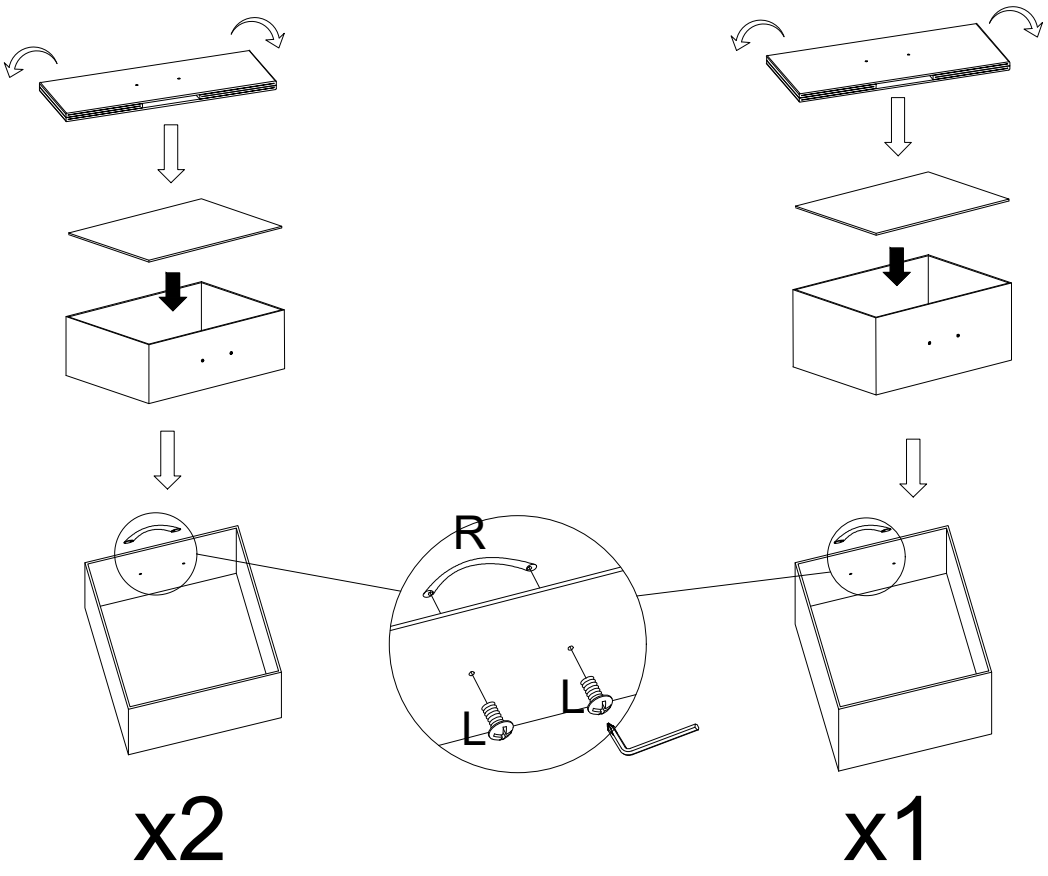


R	x3
L M4*7	x6
P	x1


39

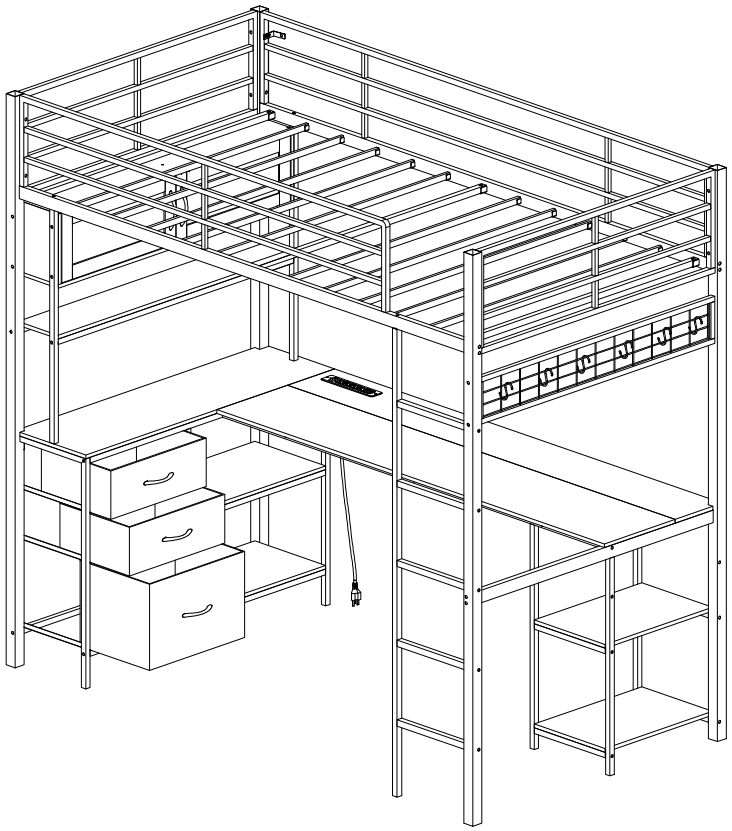

40

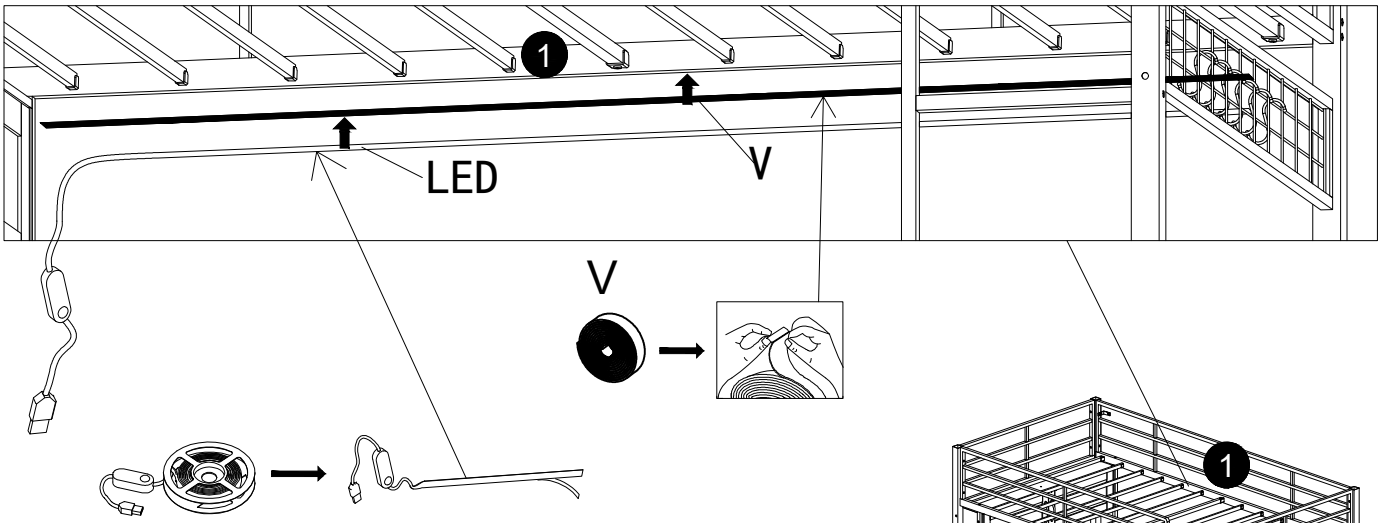


Light strip(Long)

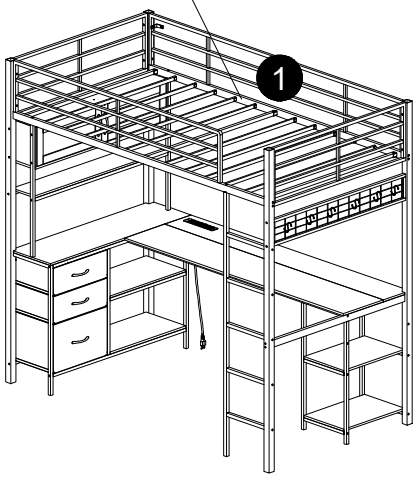


V x1

Long x1

41

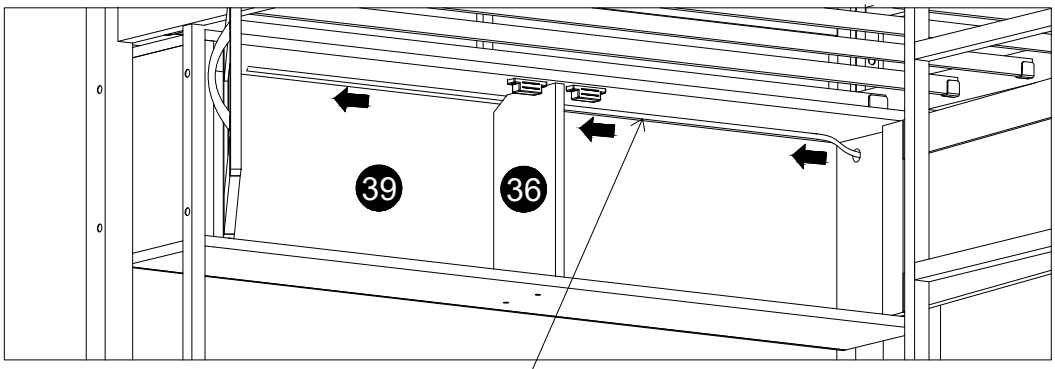




Light strip(Short)



Short x1

42

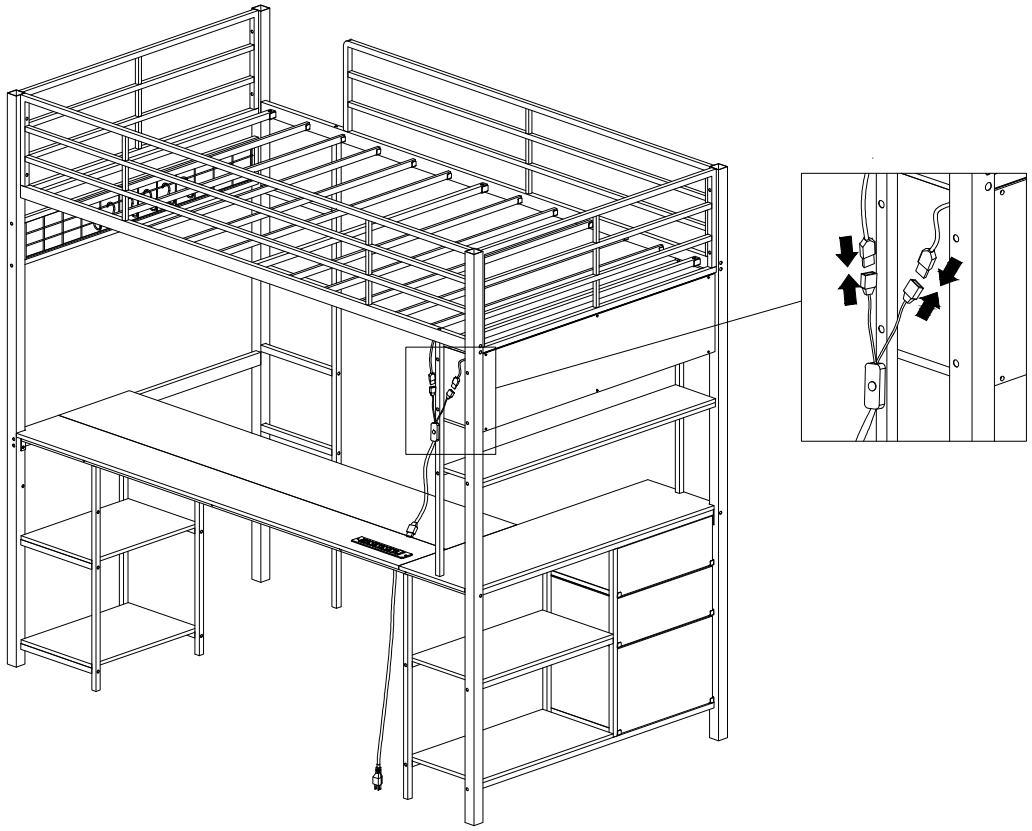


x1


43

Please tighten all screws.

100%

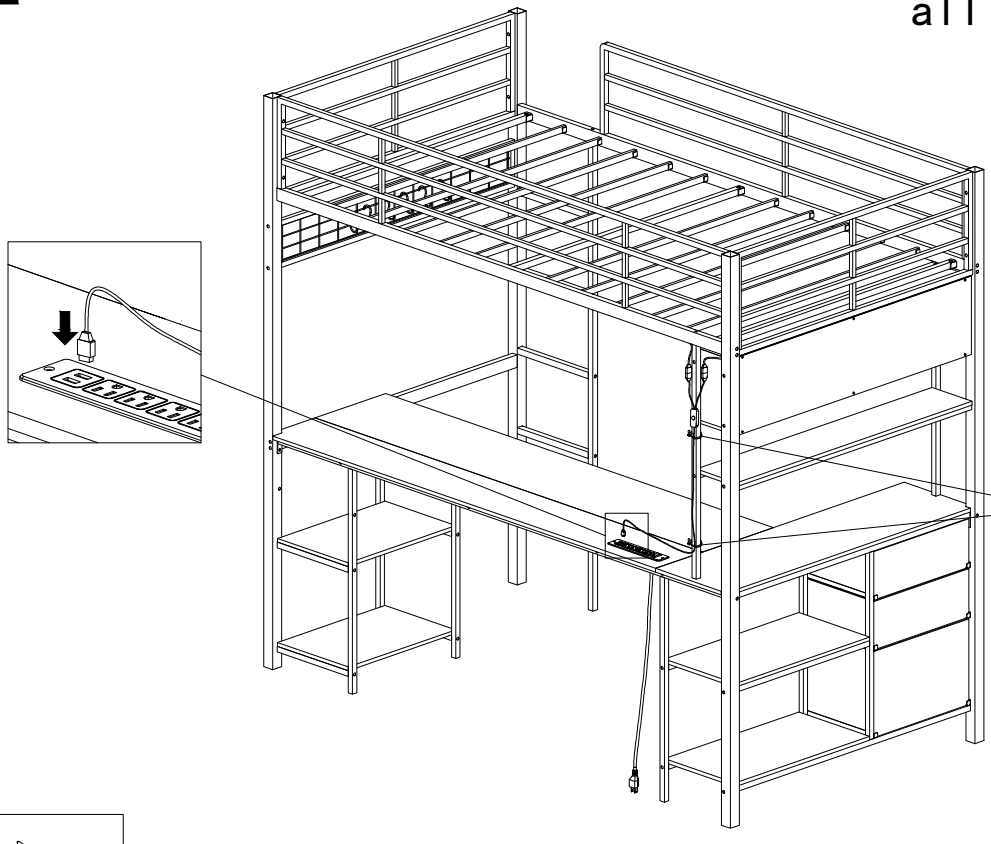


Please loosen the tie and tie it onto the iron pipe. As shown in the figure.



U


U x2

44

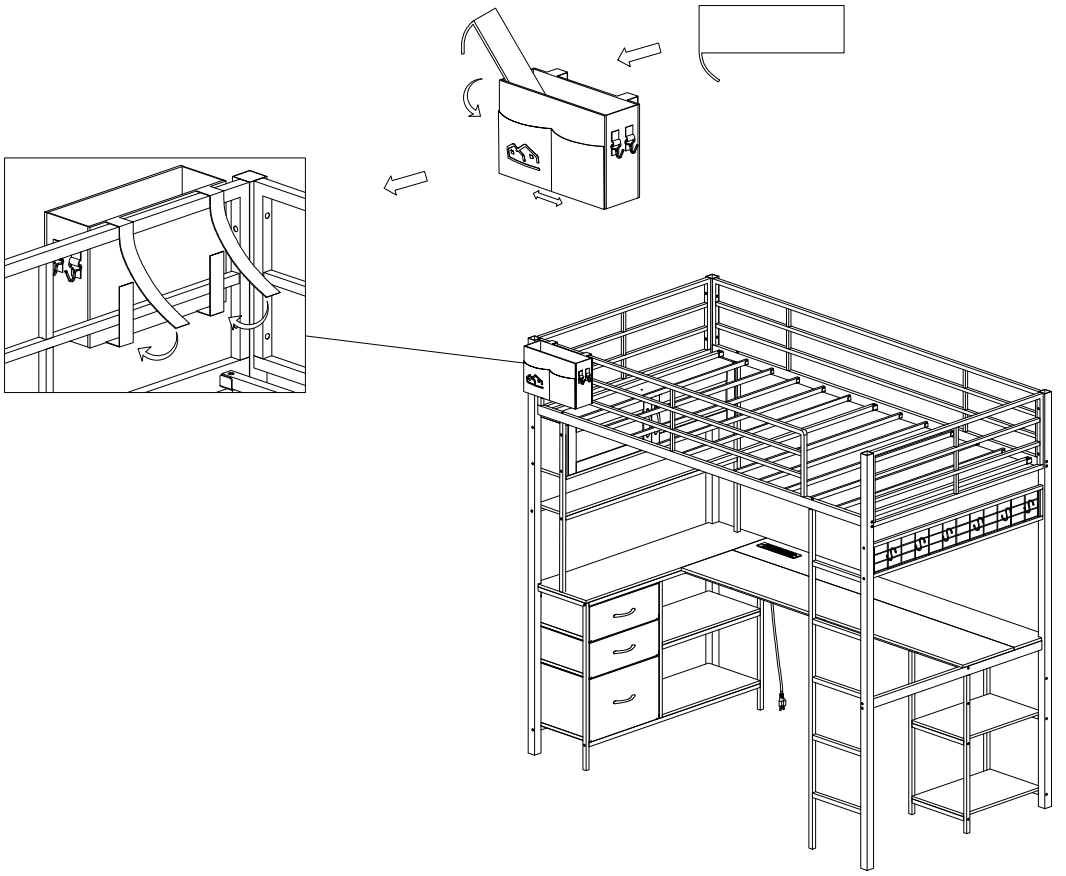


45


The anti tipping T component needs to be replaced on the opposite side

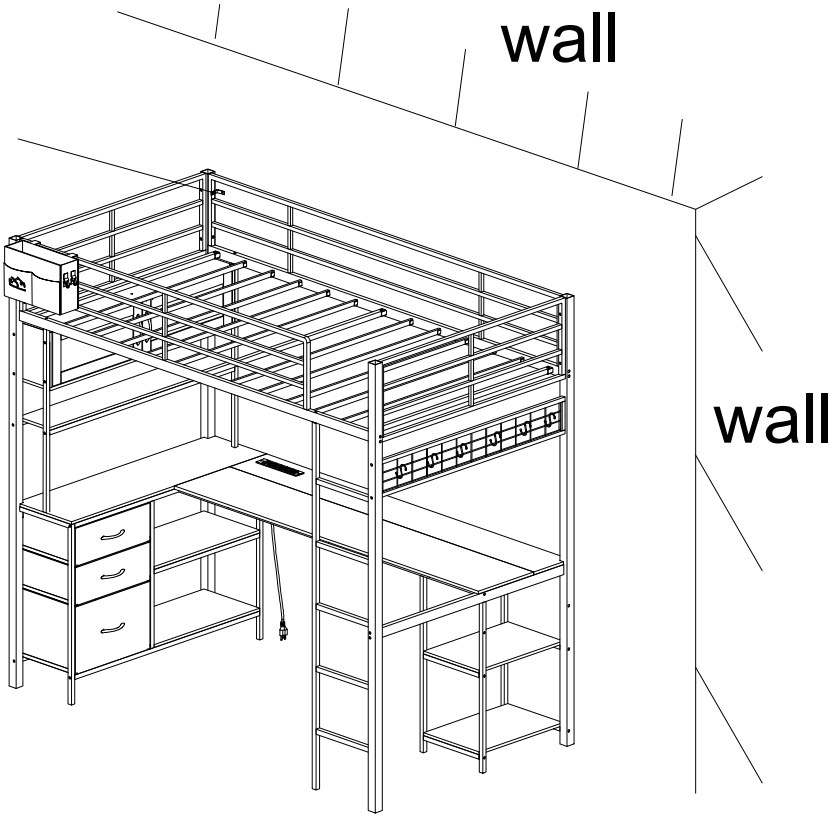


46 Positioning

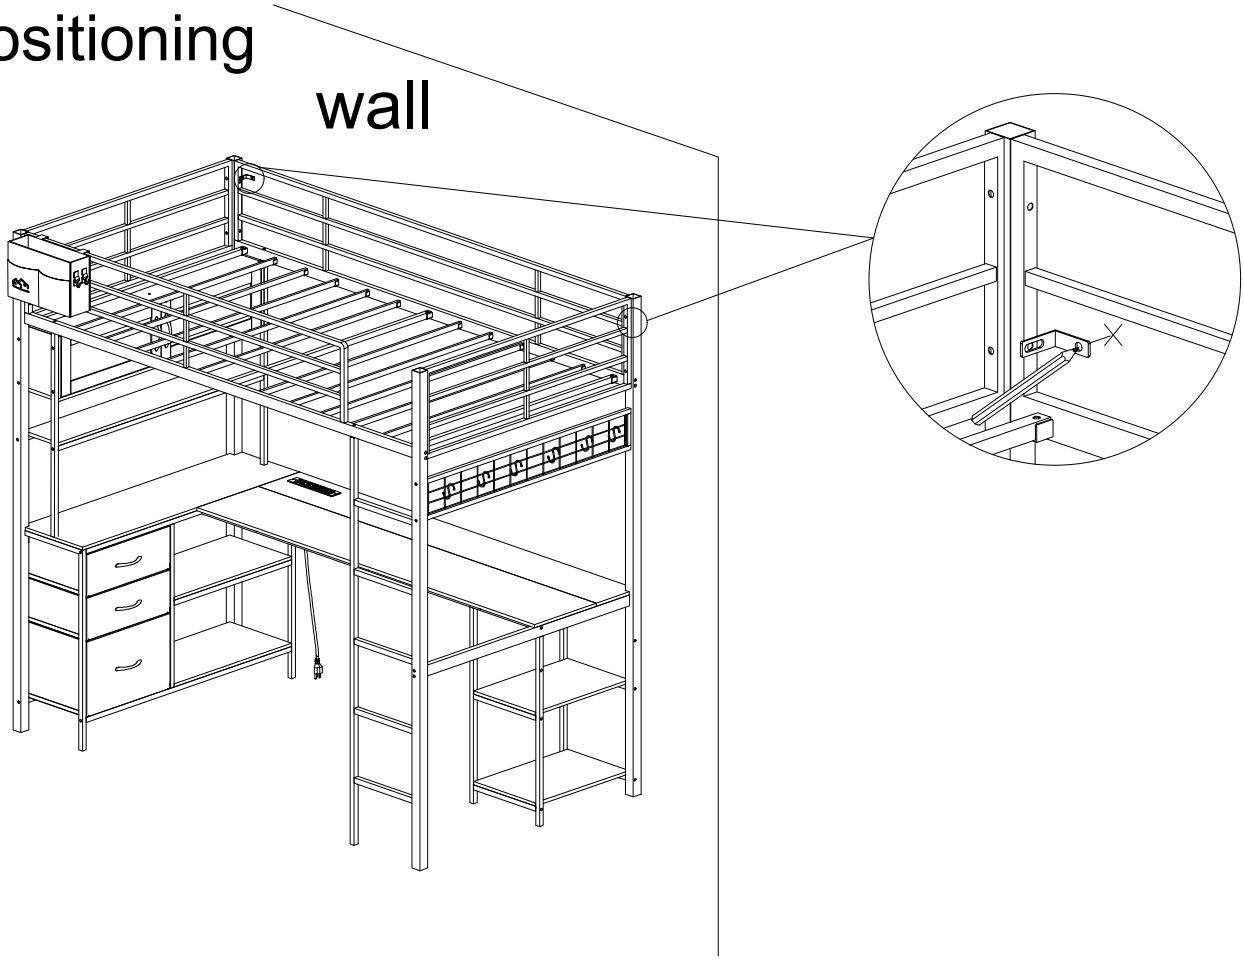


47 Drilling

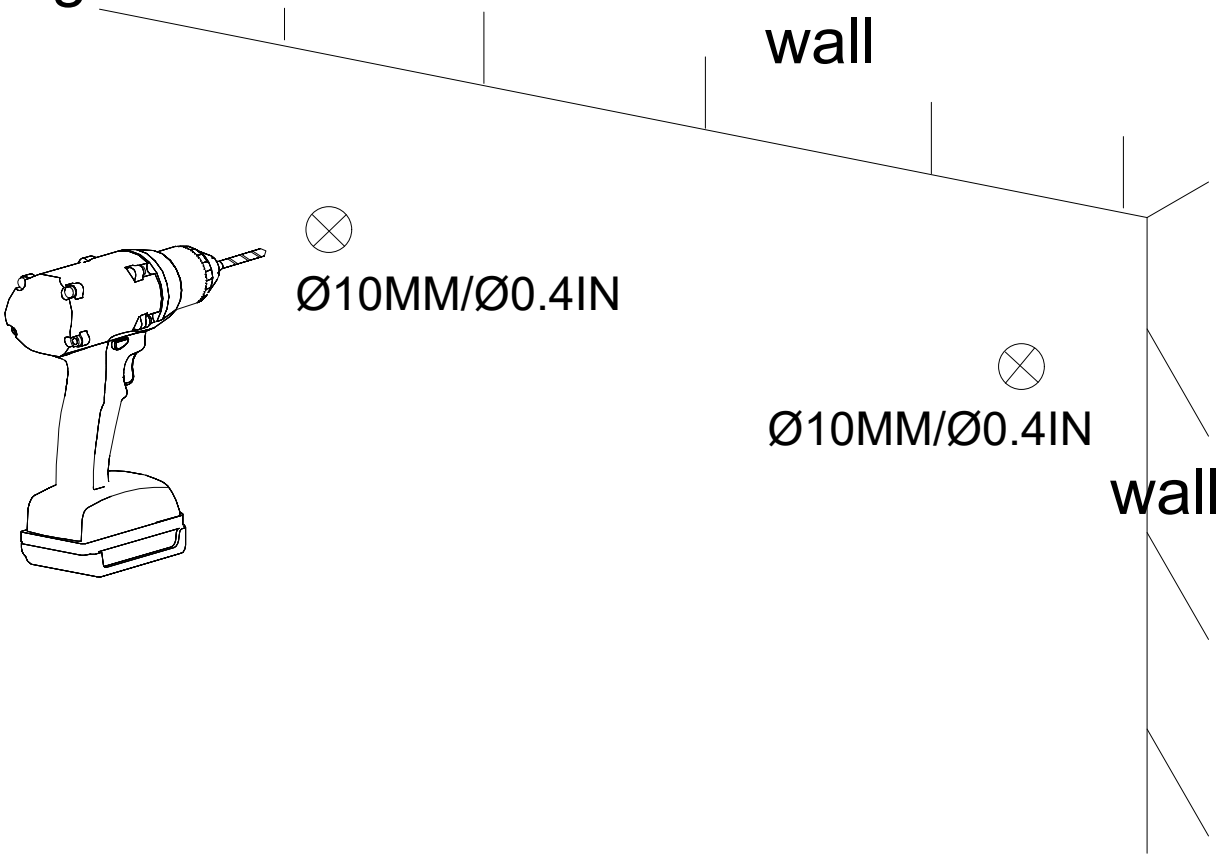


48

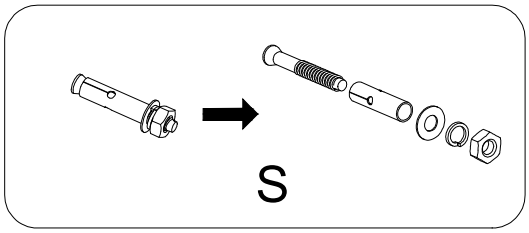

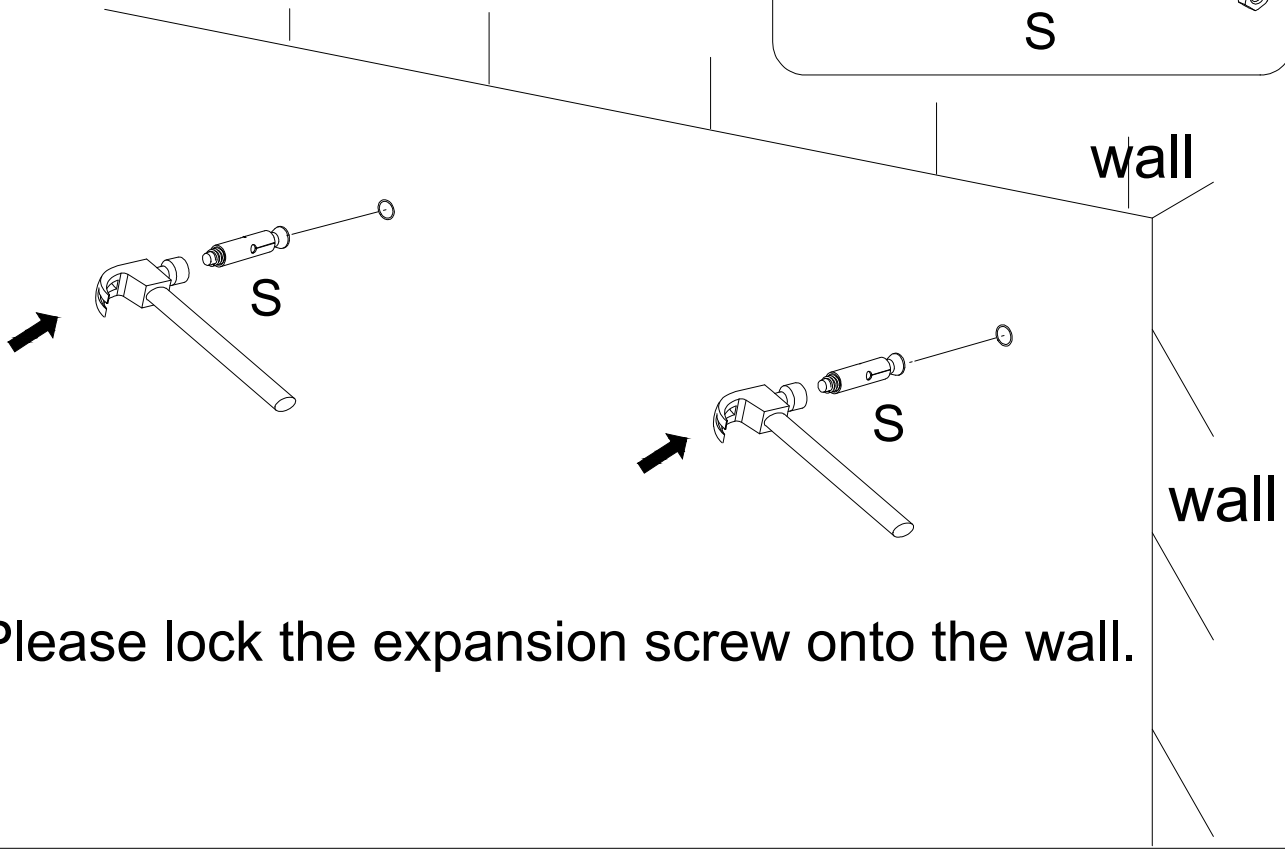

Please lock the expansion screw onto the wall.


49

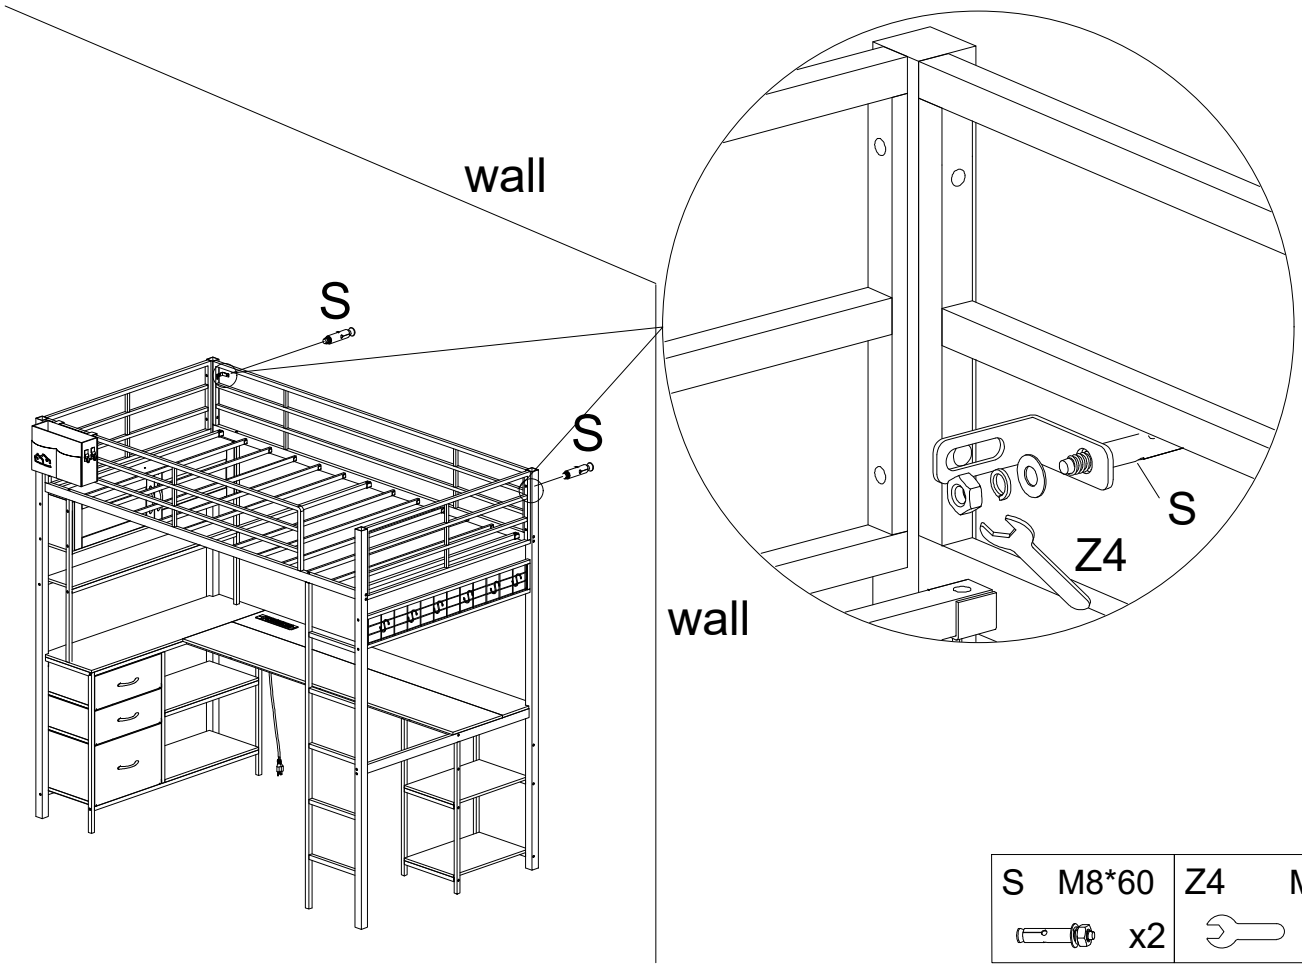


S M8*60	Z4 M8
x2	x1

50

Giveaway:
If you feel hurt when your feet step on the stairs,you can cut the protective cotton according to the size of the stairs and glue the protective cotton to the stairs.

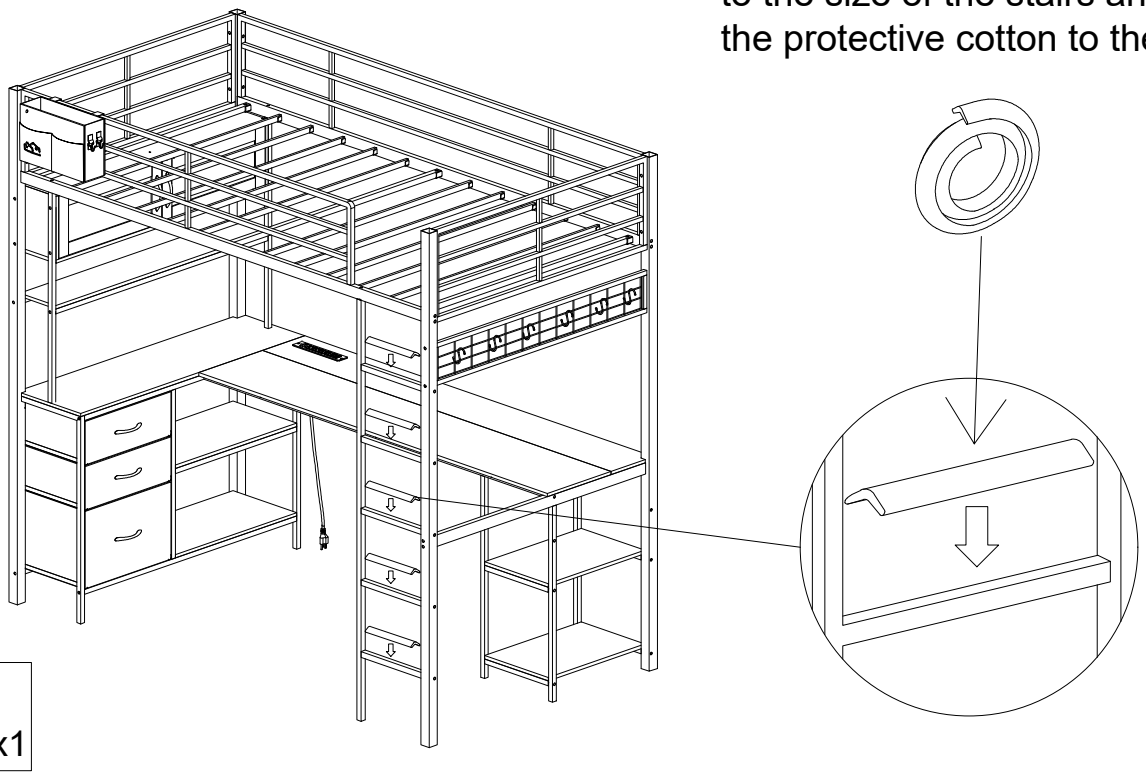



51

Please loosen the tie and tie it onto the iron pipe. As shown in the figure.

