


WOODEN WINE STORAGE TABLE

Assembly Instructions-Please keep for future reference

SKU:N728P511481

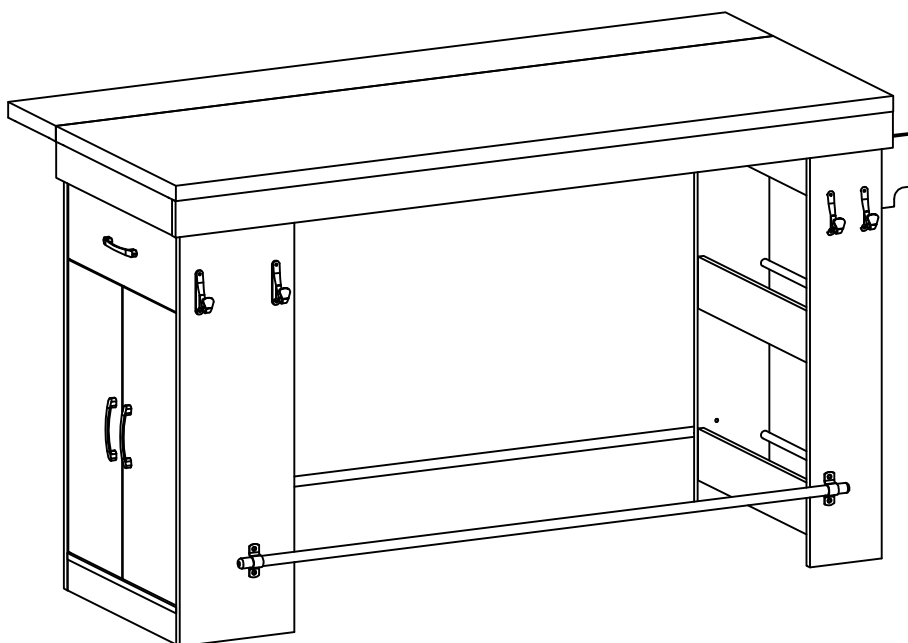

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important -Please read these instructions fully before starting assembly




Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.

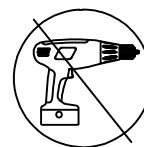

power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- . From time to time check that there are no loose screws on this unit.

- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

- . Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these instructions









To help prevent product toppling over please follow the below steps:-

If anti-tip hardware accessories are supplied, fasten the unit to the wall.
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings N728P511481

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

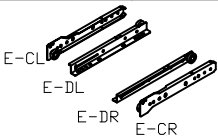A x94  M6X33mm	B x94  $\varnothing 12 \times 10 \text{mm}$	C x4  	D x4  $\varnothing 35$
E x1  200mm	F x18  M3.5*12mm	G x70  M3.5*14mm	H x8  M3.5*16mm
I x4  	J x8  	K x3  96mm	L x6  M4*15mm
M x2  M6*20mm	N x11  M6*25mm	O x4  	P x6 
Q x4  	R x4  	S x 74  $\varnothing 20 \text{mm}$	T x2 
U x12  $\varnothing 10 \text{mm}$	V x1  		


Using Camlocks

Step 1

Connect the camlock as directed in the assembly Instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

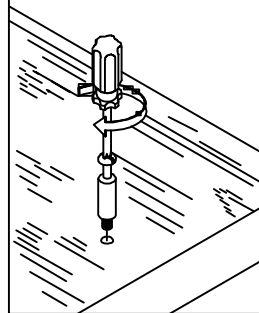

Step 2

Push the male camlock into the entry hole.

2

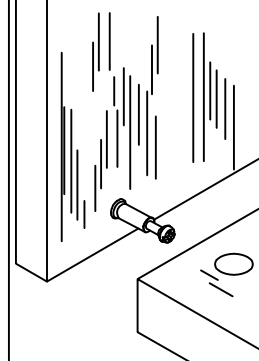


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

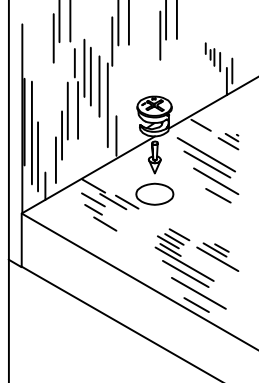


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.



















4

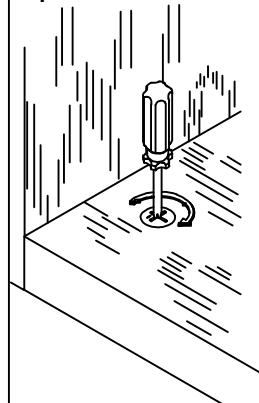














Parts list

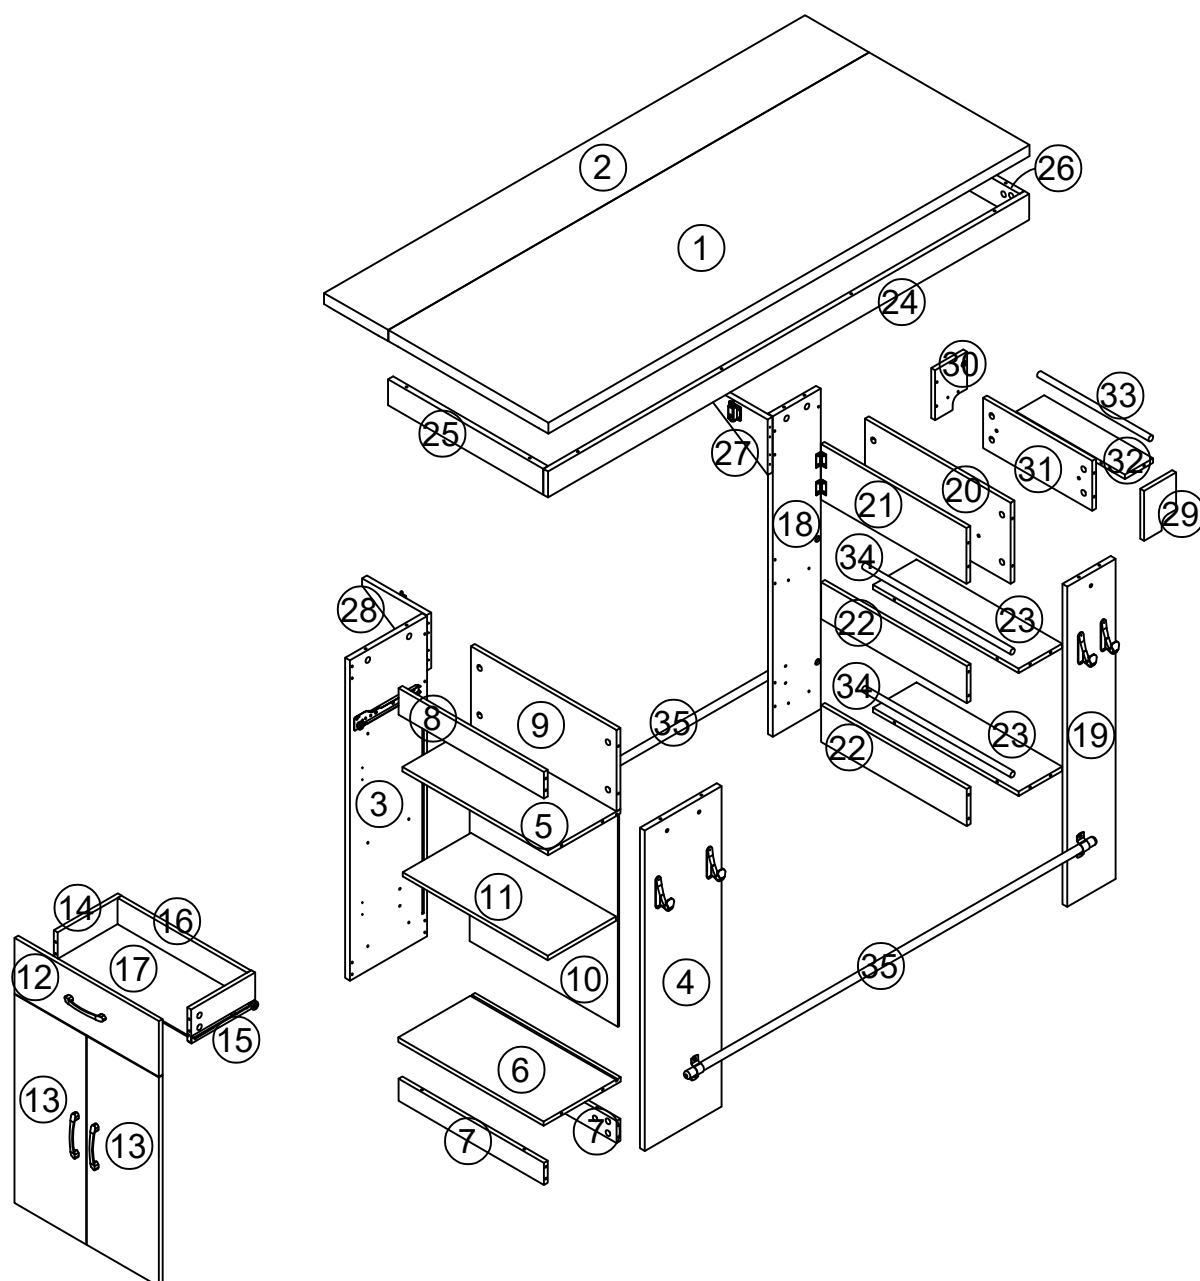



N728P511481

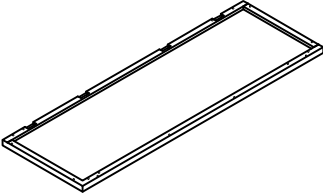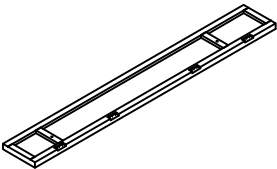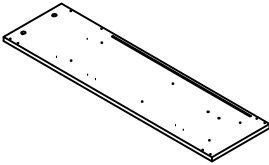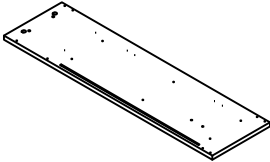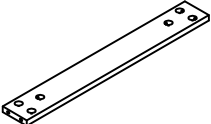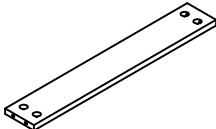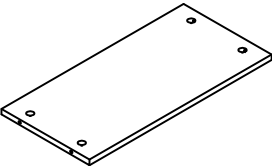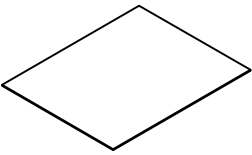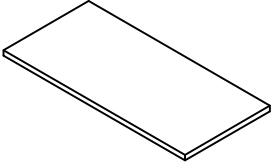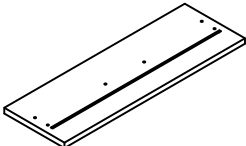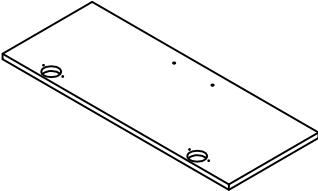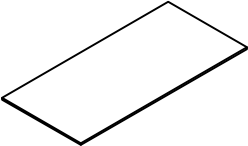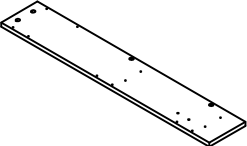①x1 	②x1 
③x1 	④x1 
⑤x1 	⑥x1 
⑦x2 	⑧x1 
⑨x1 	⑩x1 
⑪x1 	⑫x1 
⑬x2 	⑭x1 
⑮x1 	⑯x1 
⑰x1 	⑱x1 

N728P511481

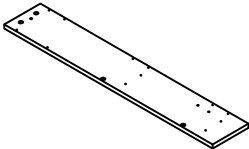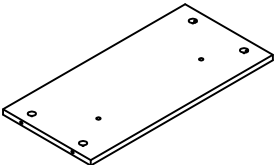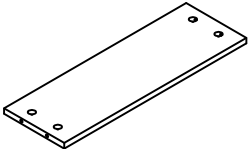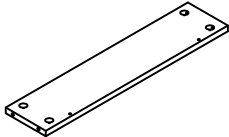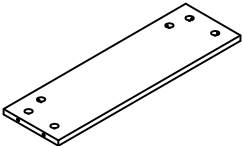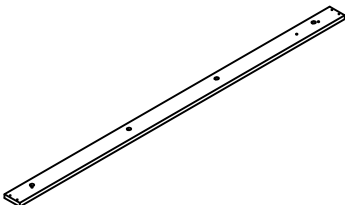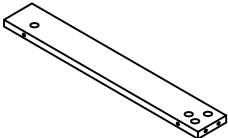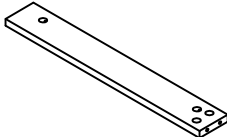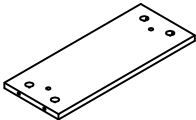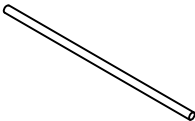
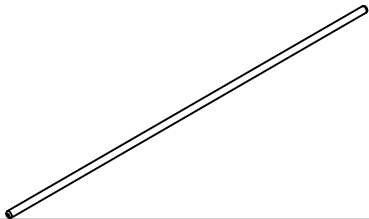
①9x1 	②0x1 
②1x1 	②2x2 
②3x2 	②4x1 
②5x1 	②6x1 
②7x1 	②8x1 
②9x1 	③0x1 
③1x1 	③2x1 
③3x1 	③4x2 
③5x2 	



1

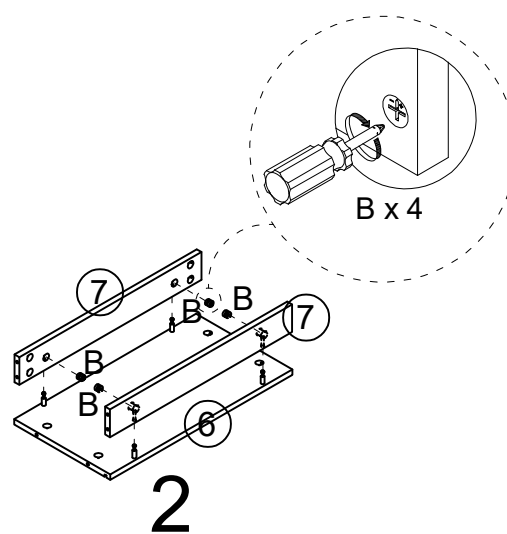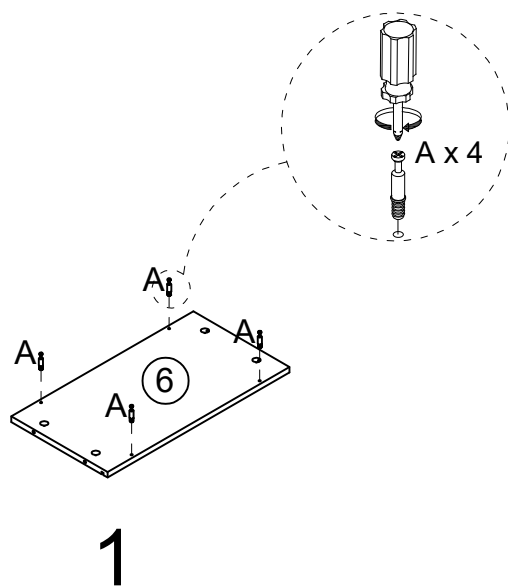


A	x4	B	x4
			
M6X33mm		Ø12X10mm	




2

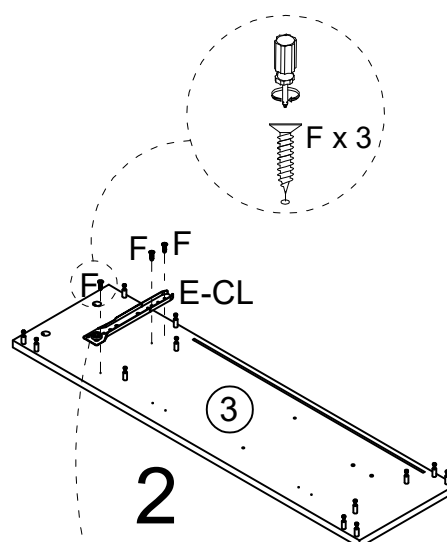
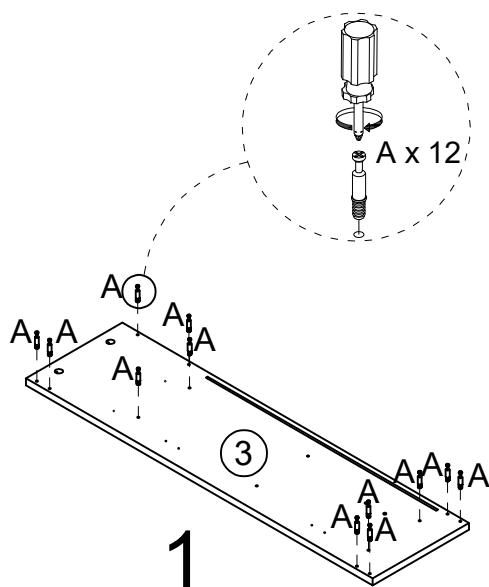


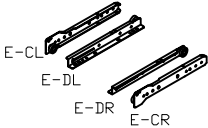A	x12	E	x1	F	x3
					
M6X33mm		200mm		M3.5*12mm	

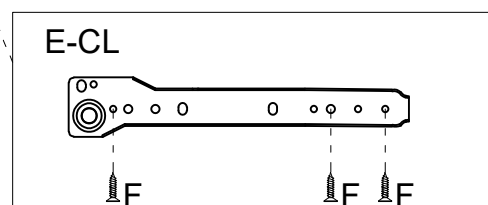


3

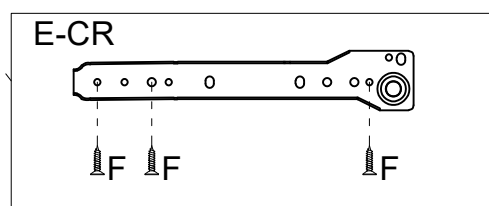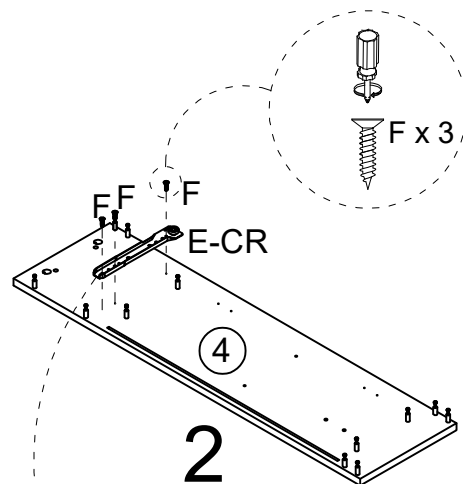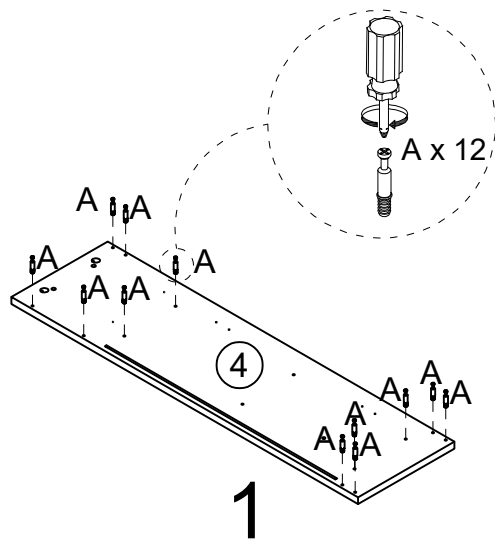

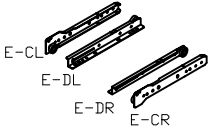
A	x12	E	x1	F	x3
					
M6X33mm		200mm		M3.5*12mm	

4

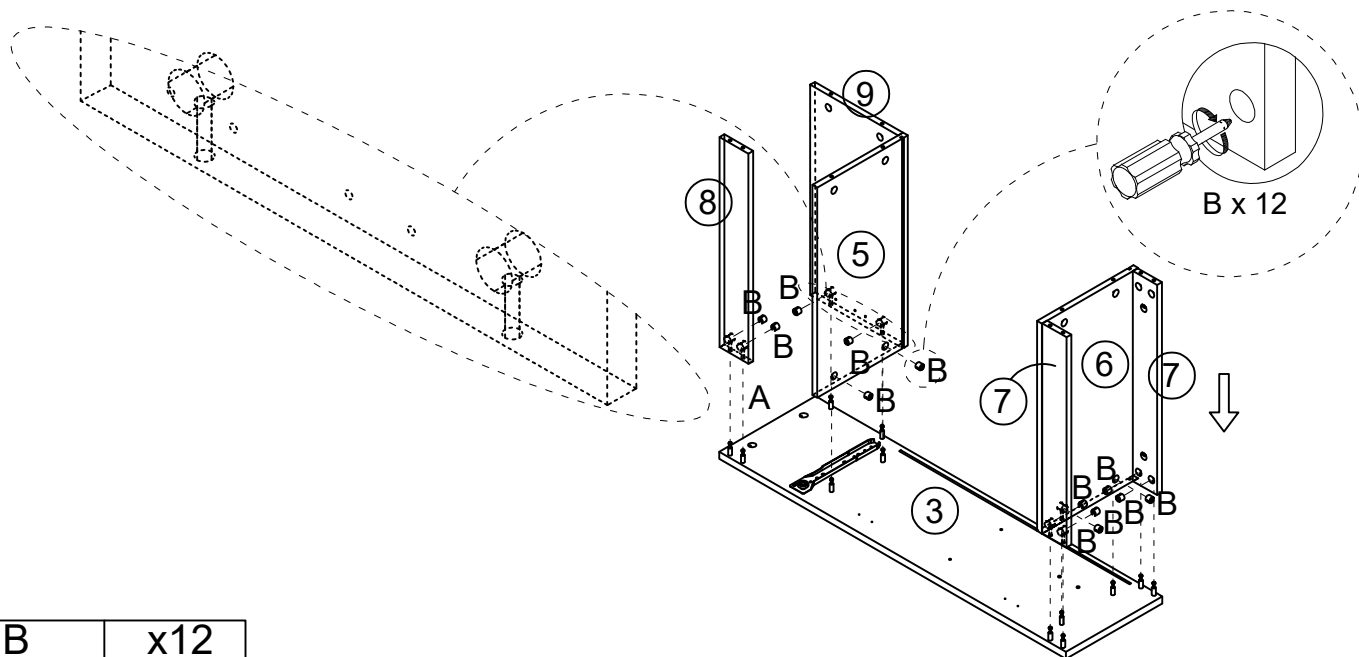


B	x12
	
Ø12X10mm	

5

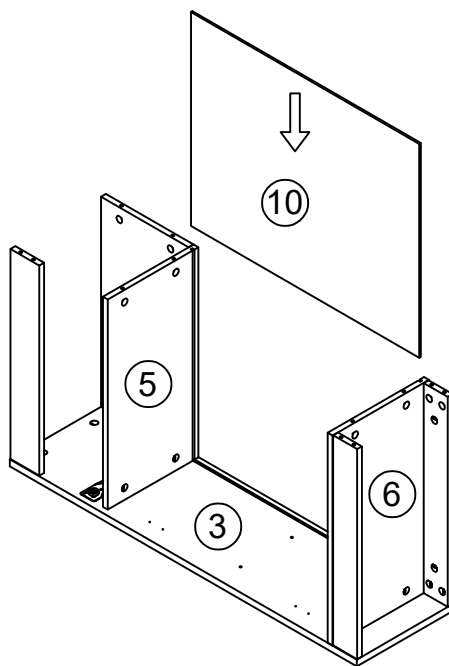


6

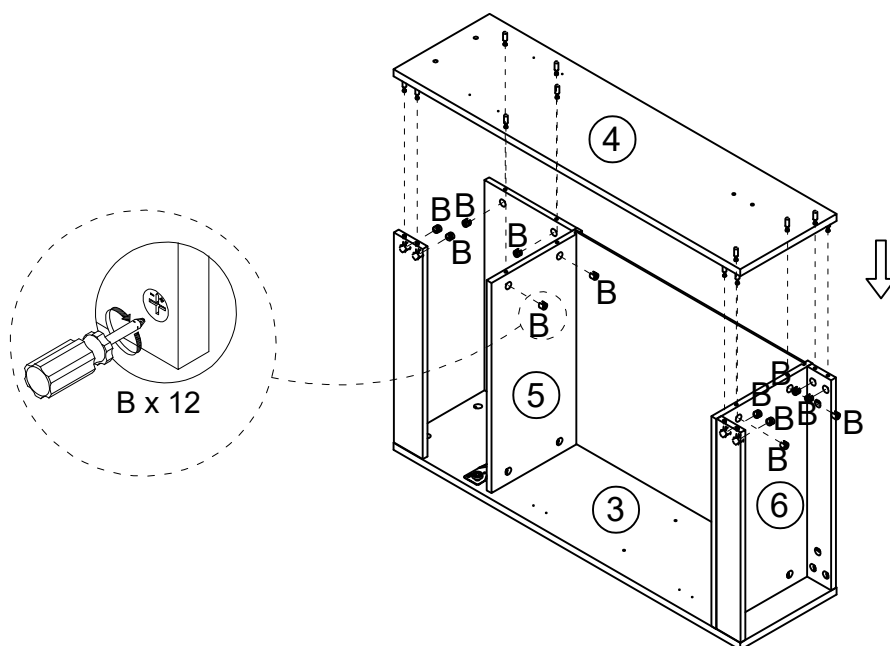


B	x12
	
$\varnothing 12 \times 10 \text{ mm}$	


7

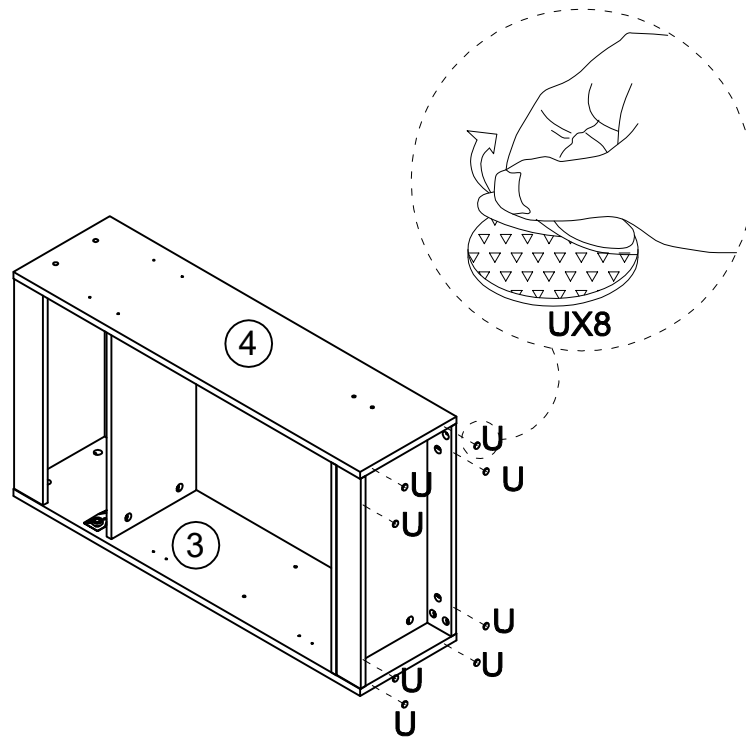


U	x8
	
Ø10mm	


8


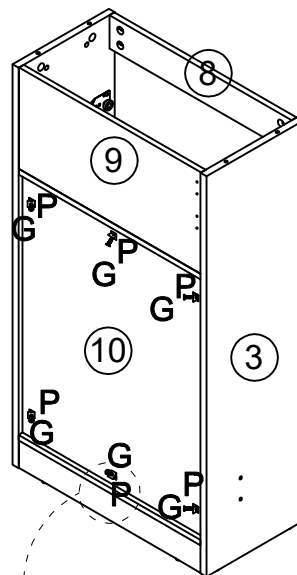


P	x6	G	x6
			
		M3.5*14mm	

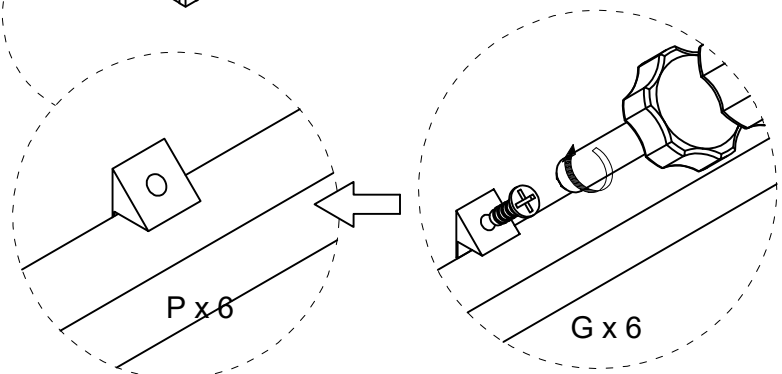



9

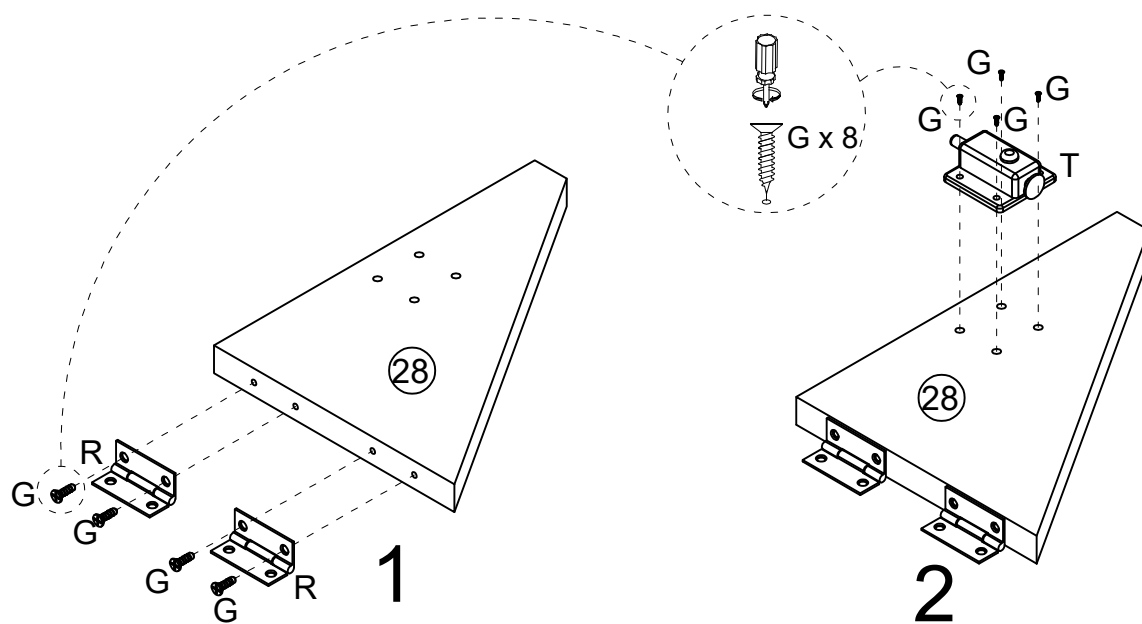


G	x8	R	x2	T	x1
					
M3.5*14mm					

10

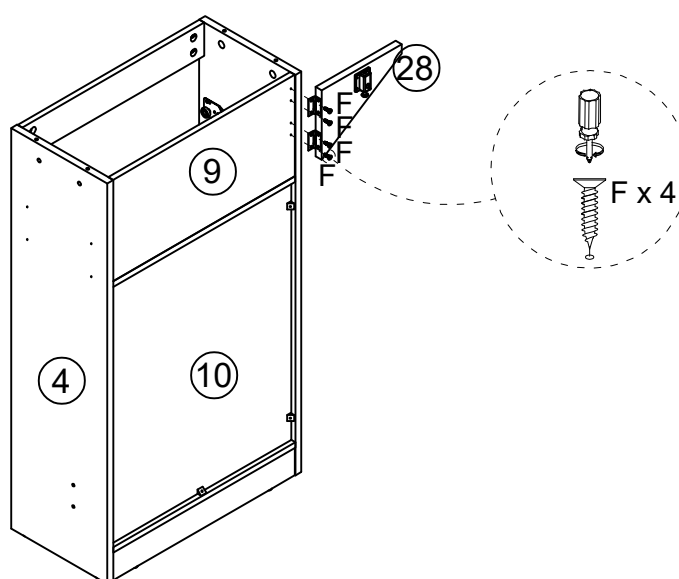


F	x4
	
M3.5*12mm	

11

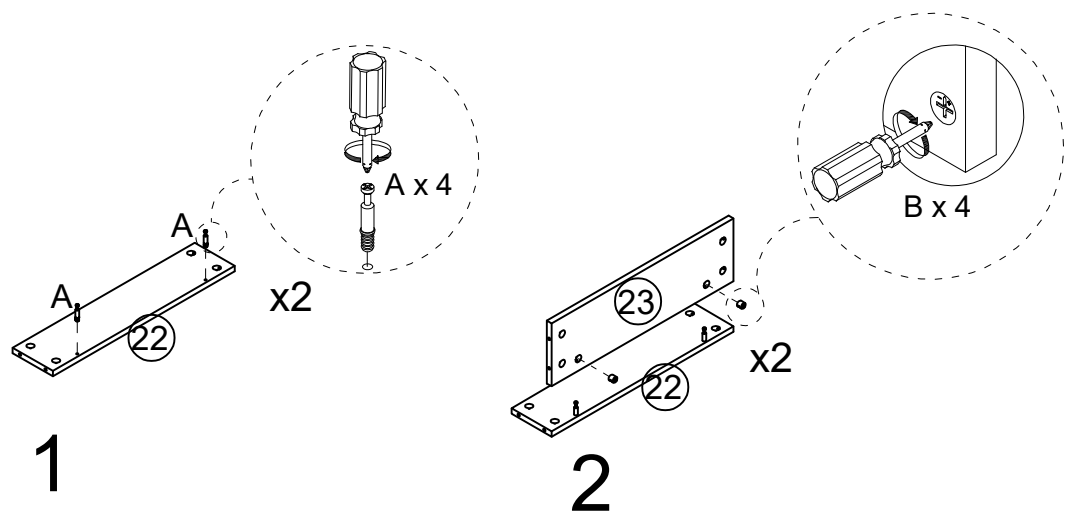


A	x4	B	x4
			
M6X33mm		Ø12X10mm	

12

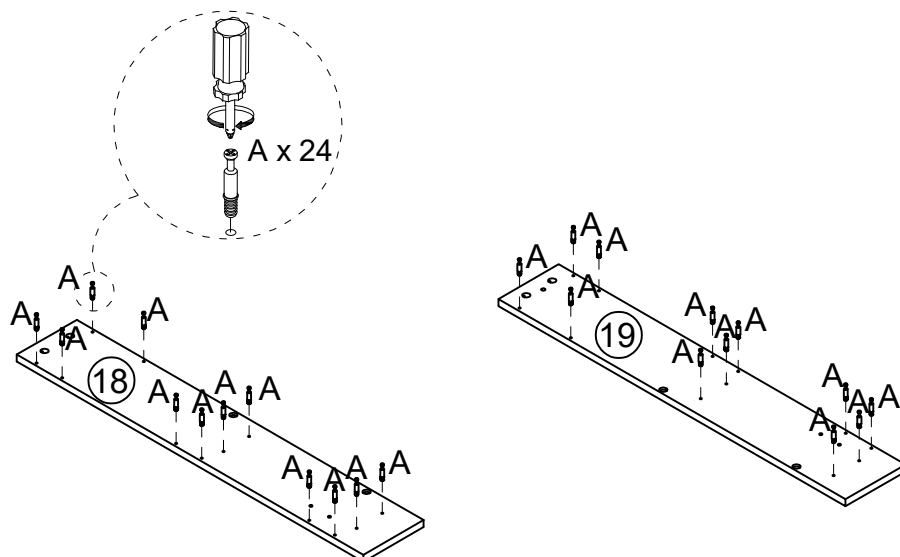


A	x24
	
M6X33mm	

13

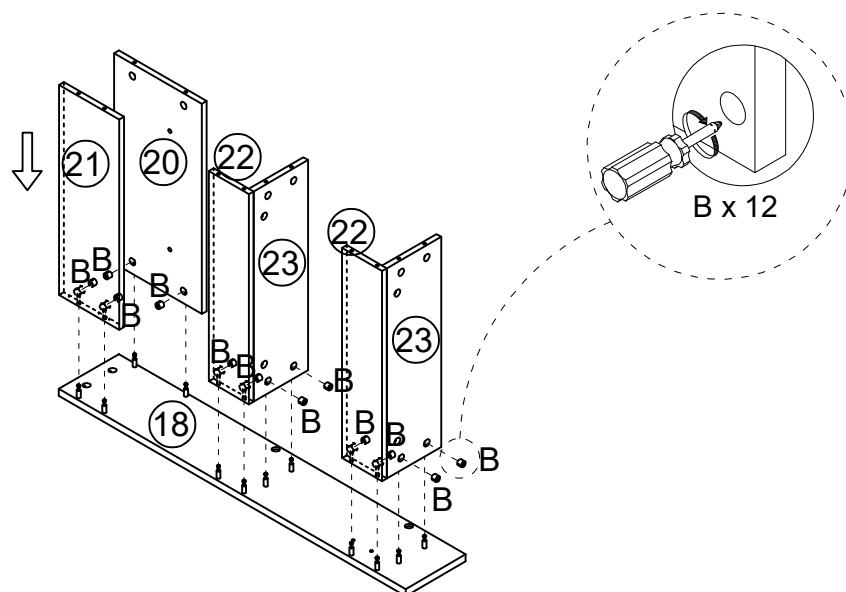


B	x12
	
$\varnothing 12 \times 10 \text{ mm}$	

14

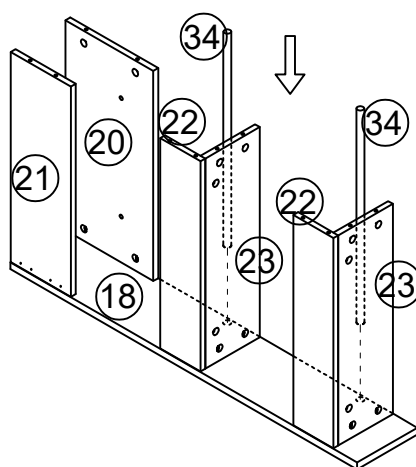


15

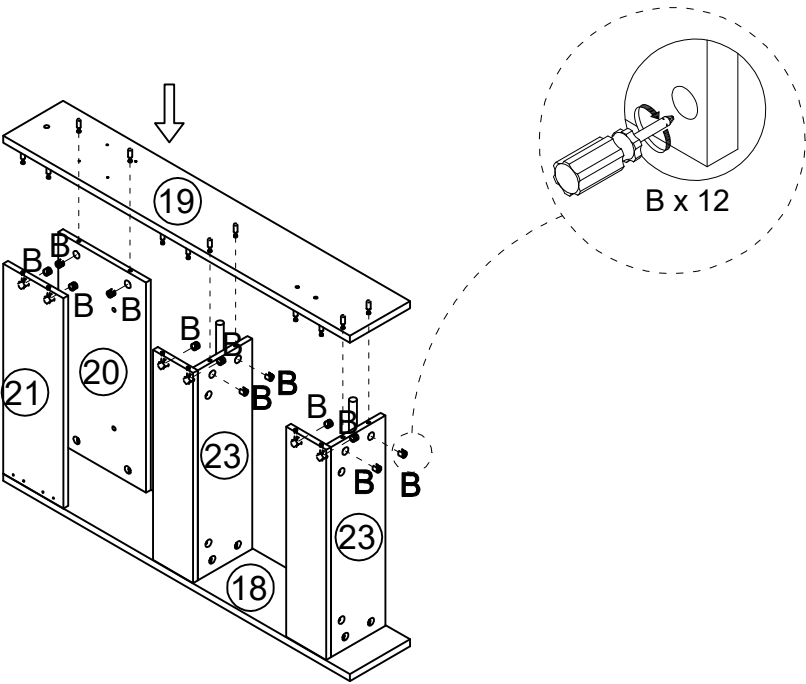


B	x12
	
ø12X10mm	

16

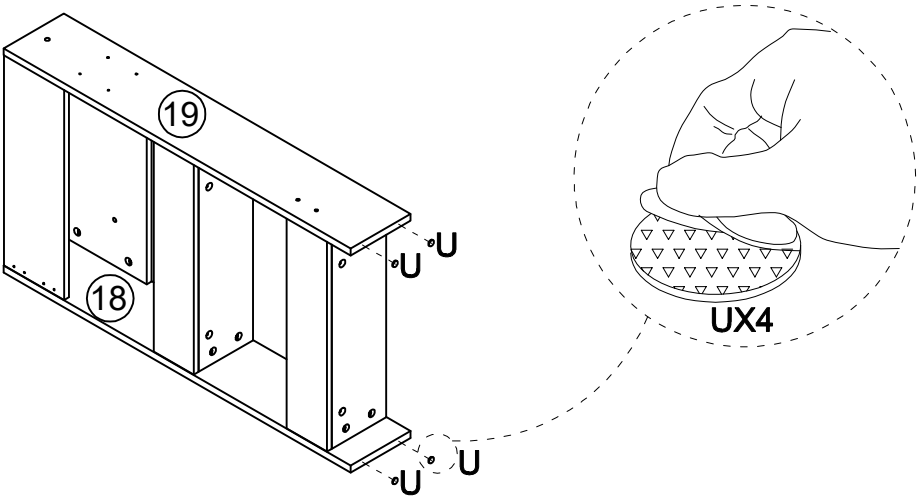


U	x4
	
ø10mm	

17

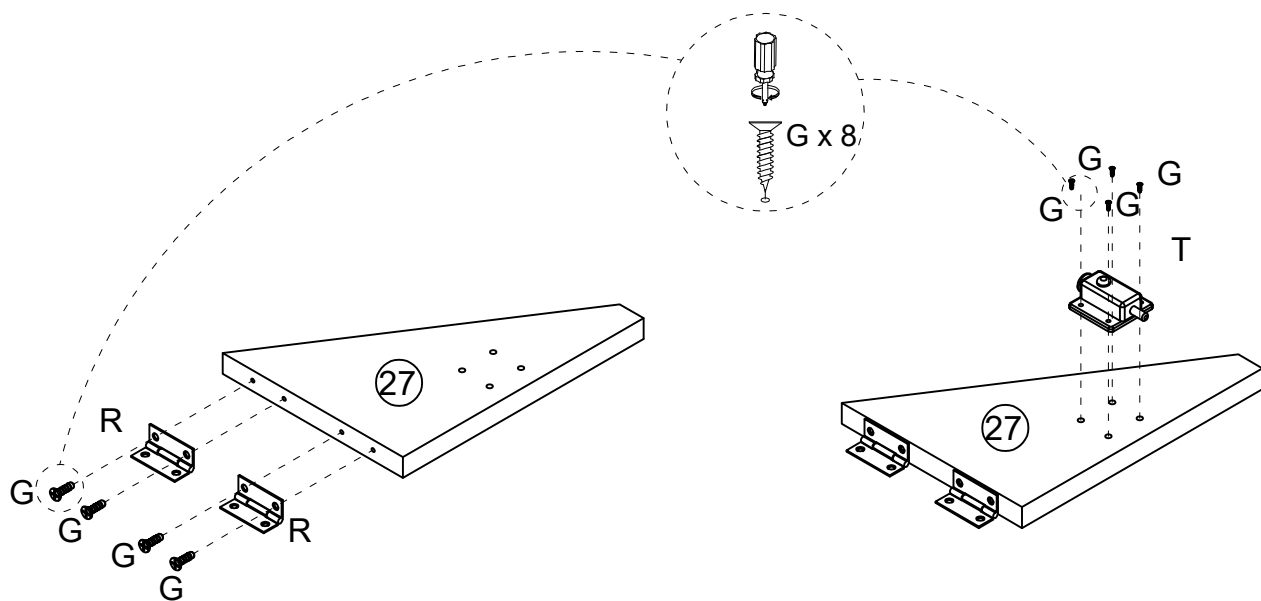


G	x8	R	x2	T	x1
M3.5*14mm					

18

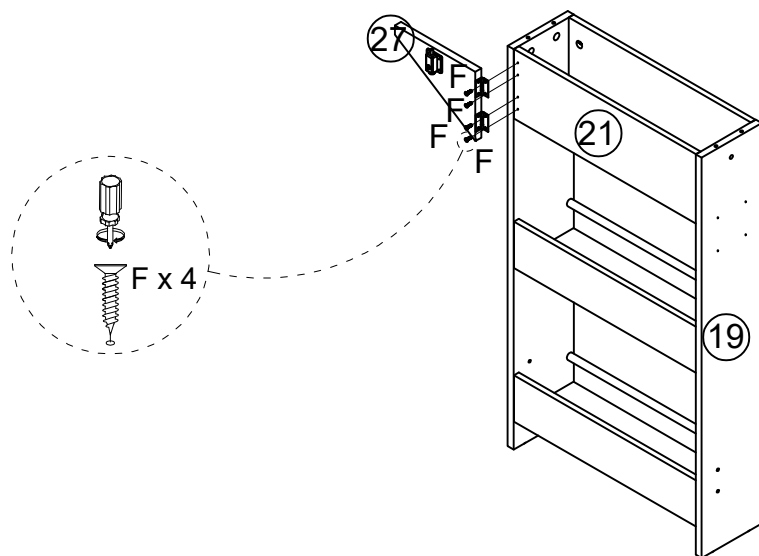


F	x4
M3.5*12mm	



19

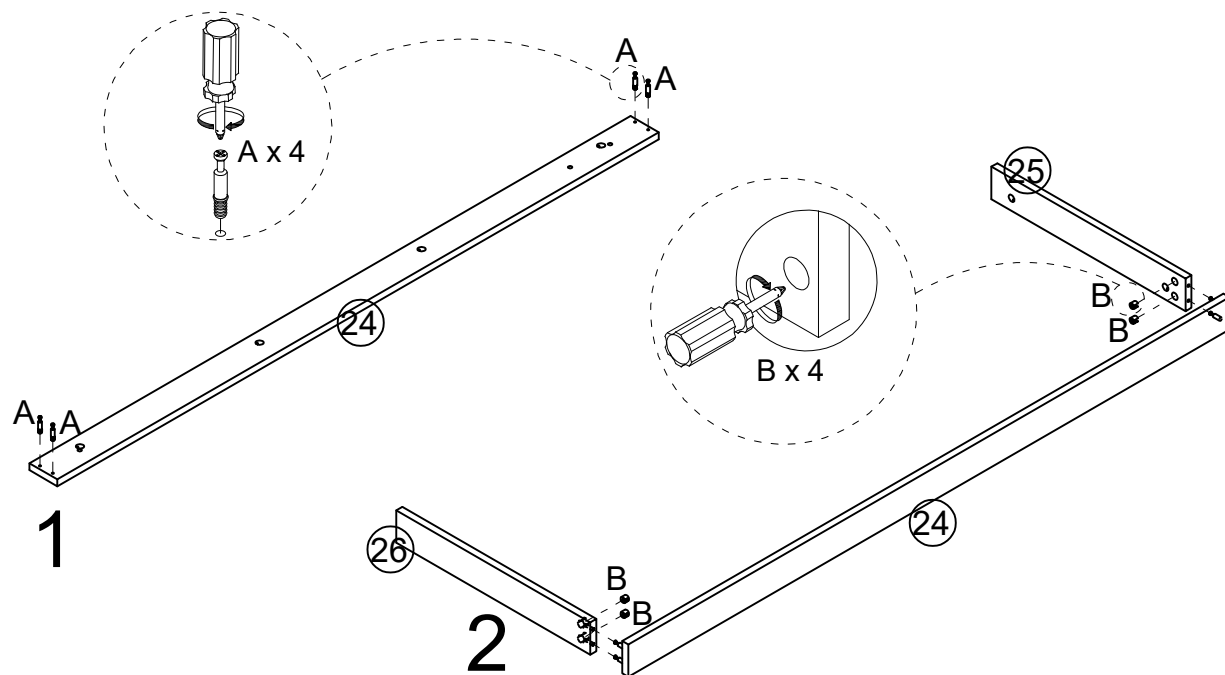


A	x4	B	x4
			
M6X33mm		Ø12X10mm	

20

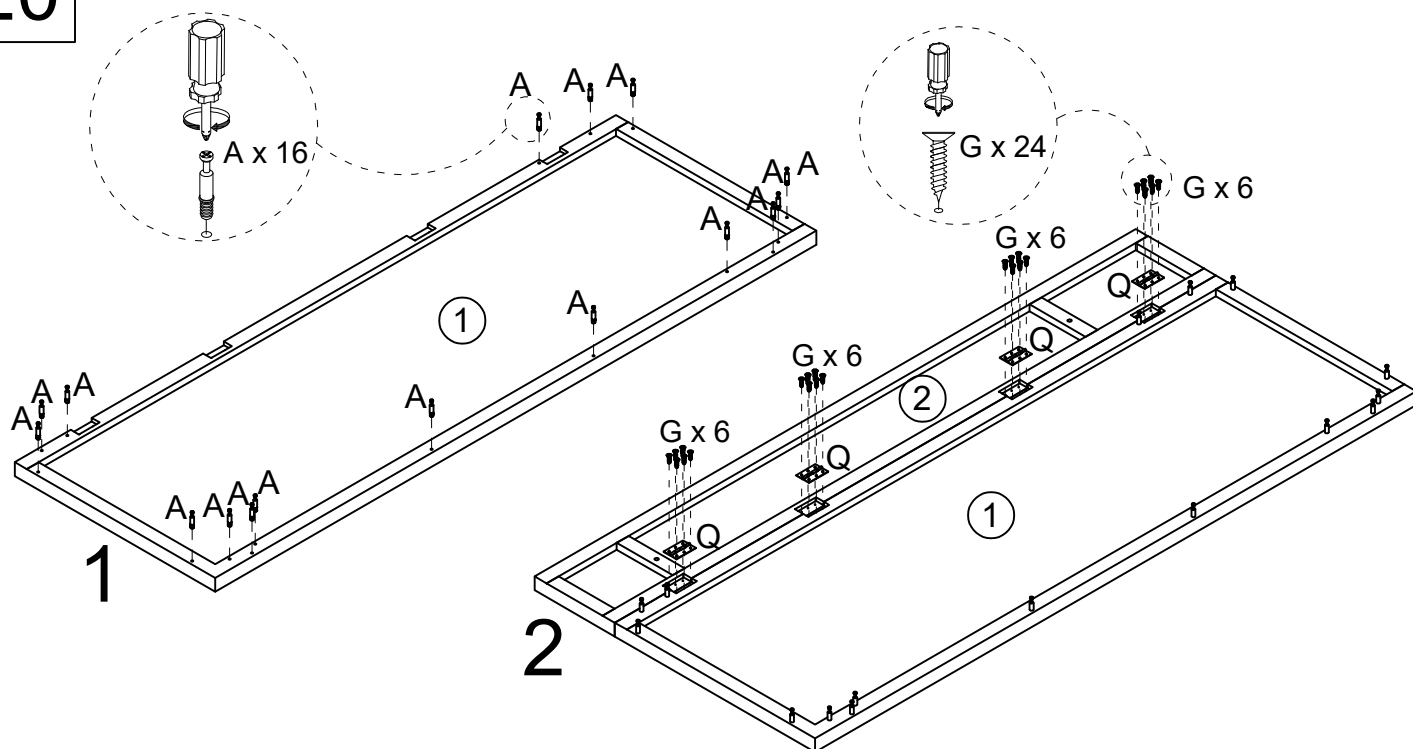


A	x16	G	x24	Q	x4
					
M6X33mm		M3.5*14mm			

21

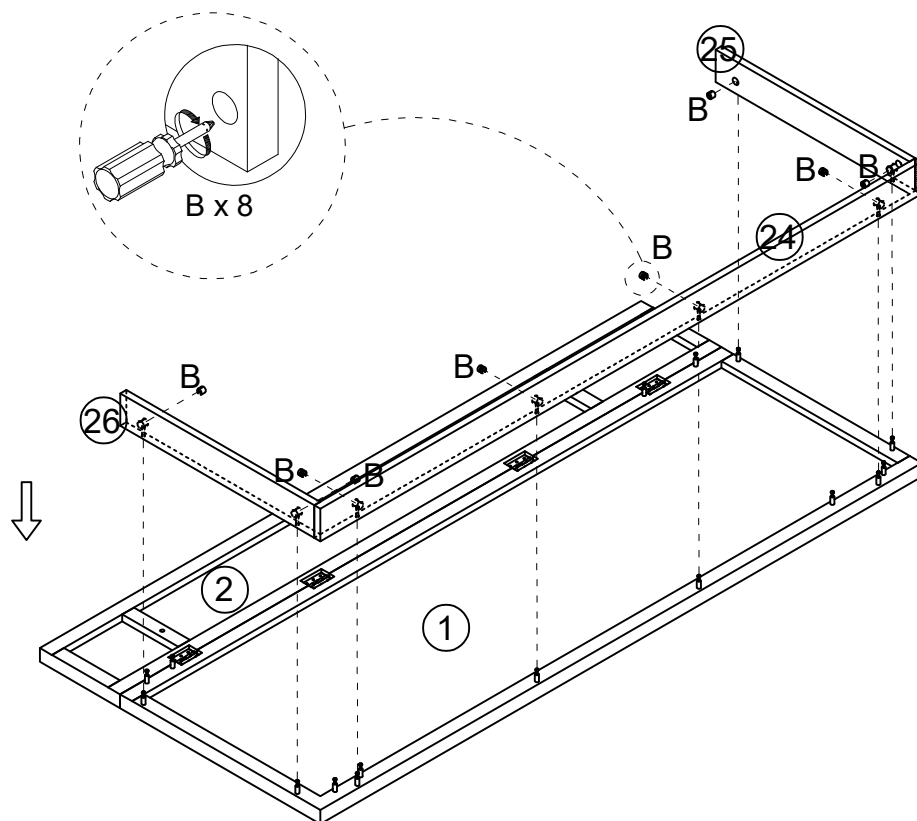


B	x8
	
Ø12X10mm	

22

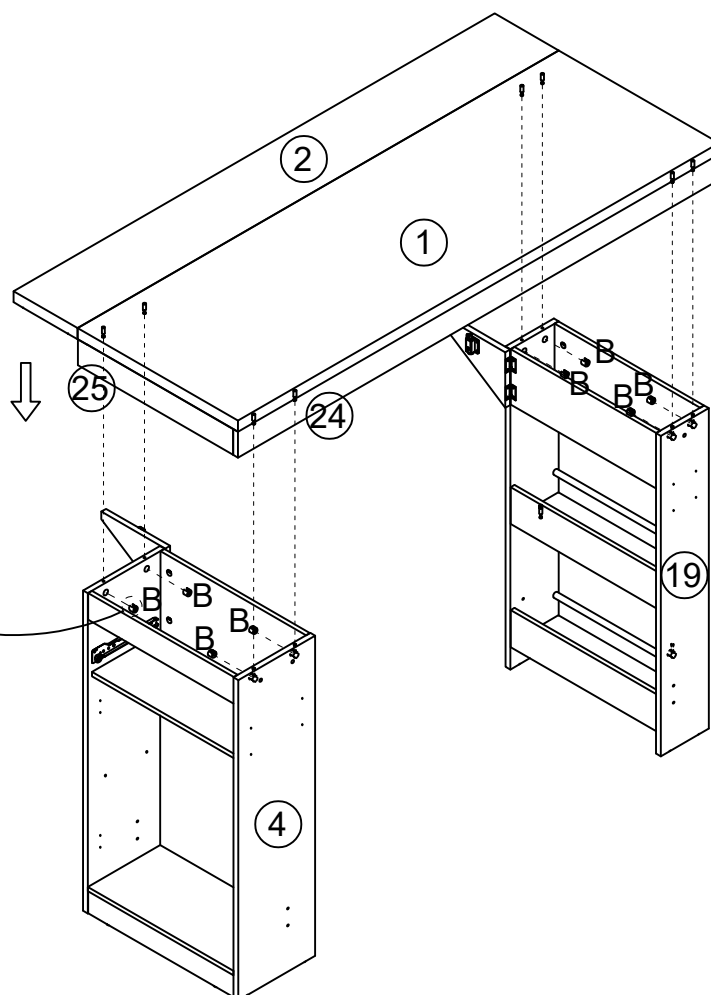


B	x8
	
Ø12X10mm	


23

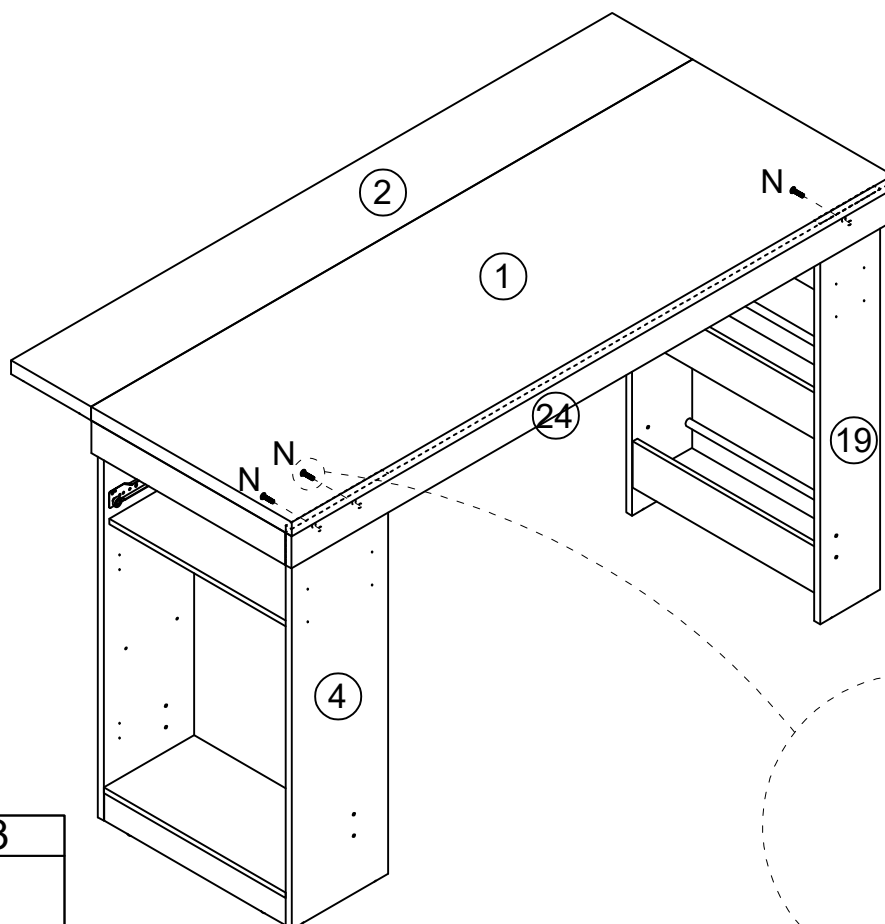



N	x3
	
M6*25mm	

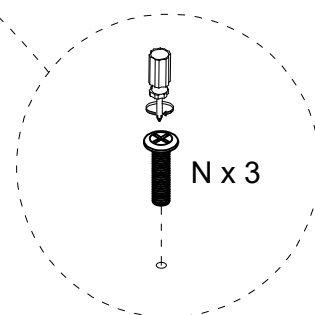


24

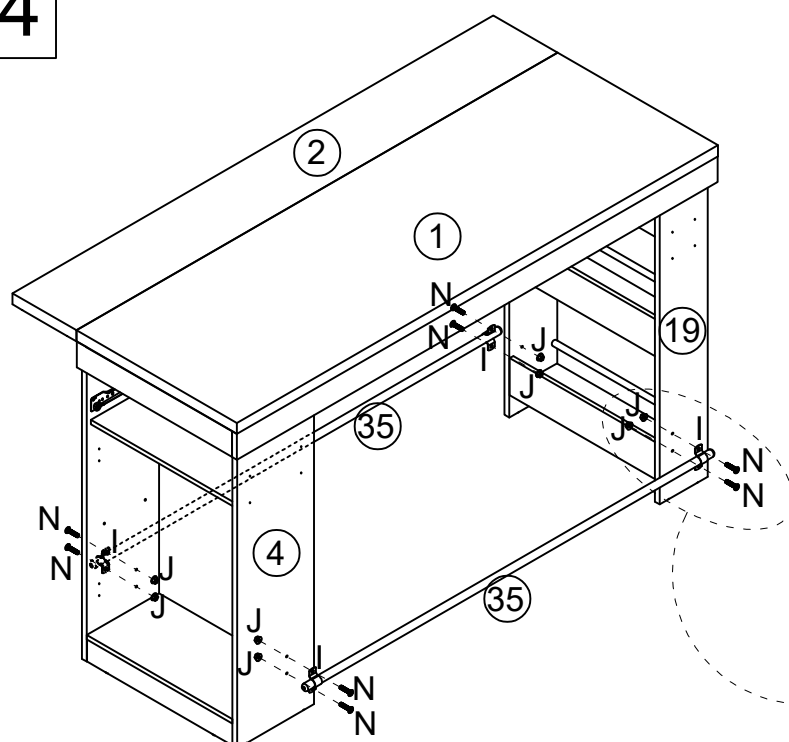


I	x4	J	x8	N	x8
					
				M6*25mm	

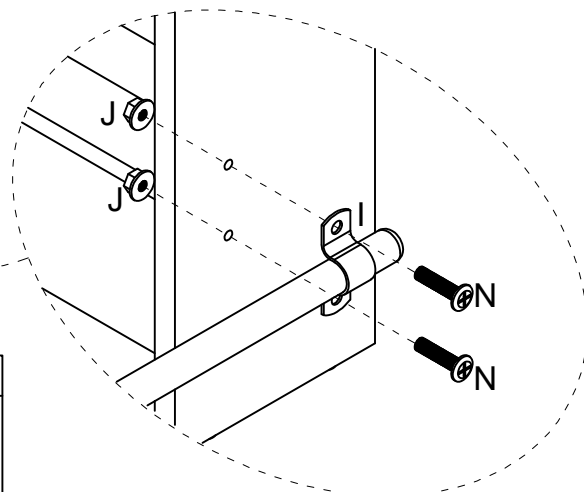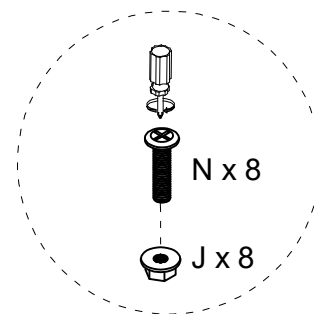



25

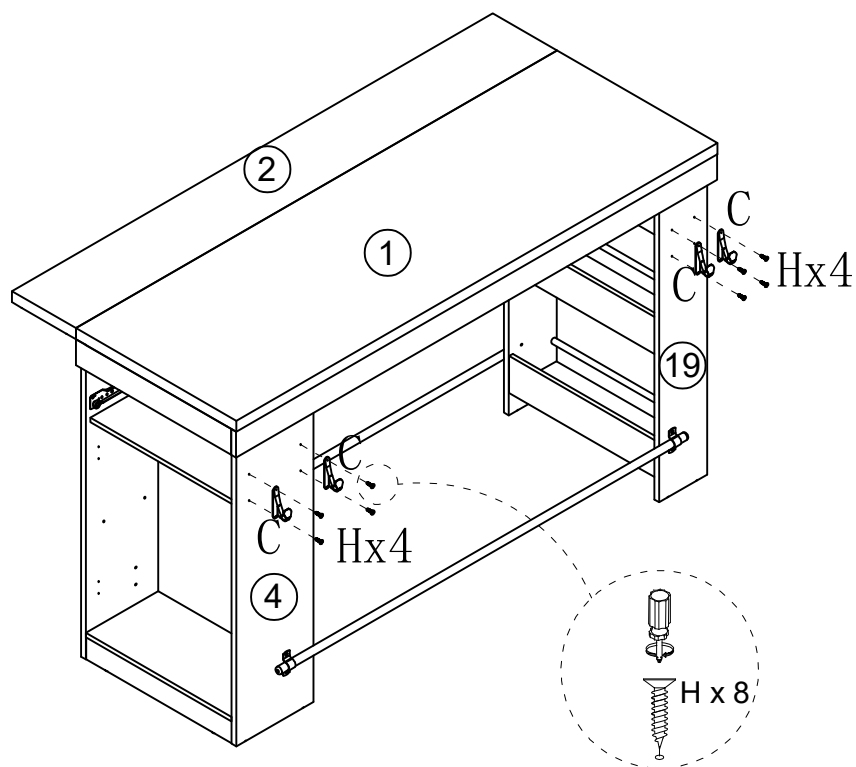


C	x4	H	x8
			
		M3.5*16mm	

26

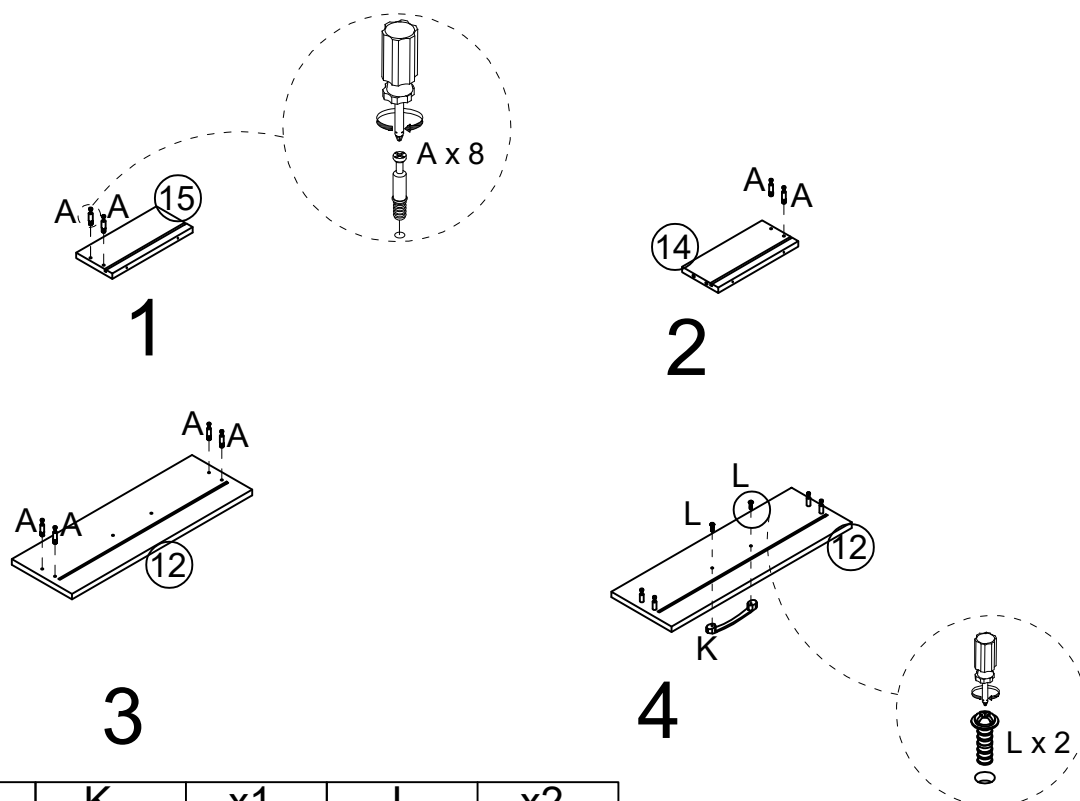


A	x8	K	x1	L	x2
					
M6X33mm		96mm		M4*15mm	

27

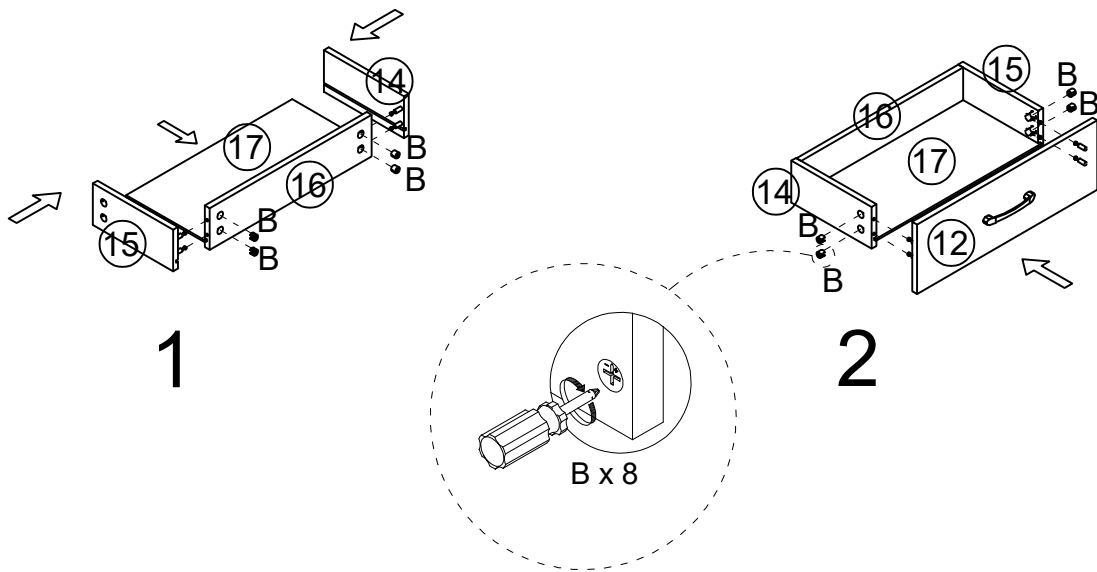


B	x8
	
ø12X10mm	

28

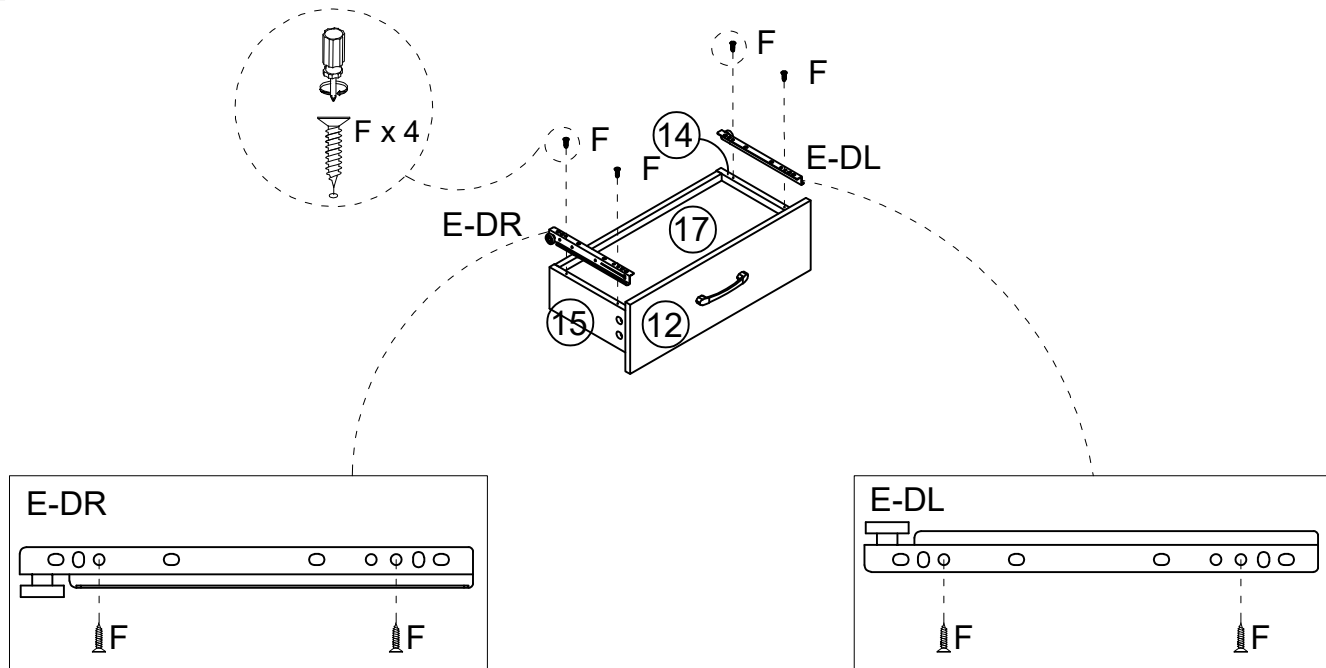


E	x1	F	x4
E-CL E-DL E-DR E-CR			
200mm		M3.5*12mm	


29

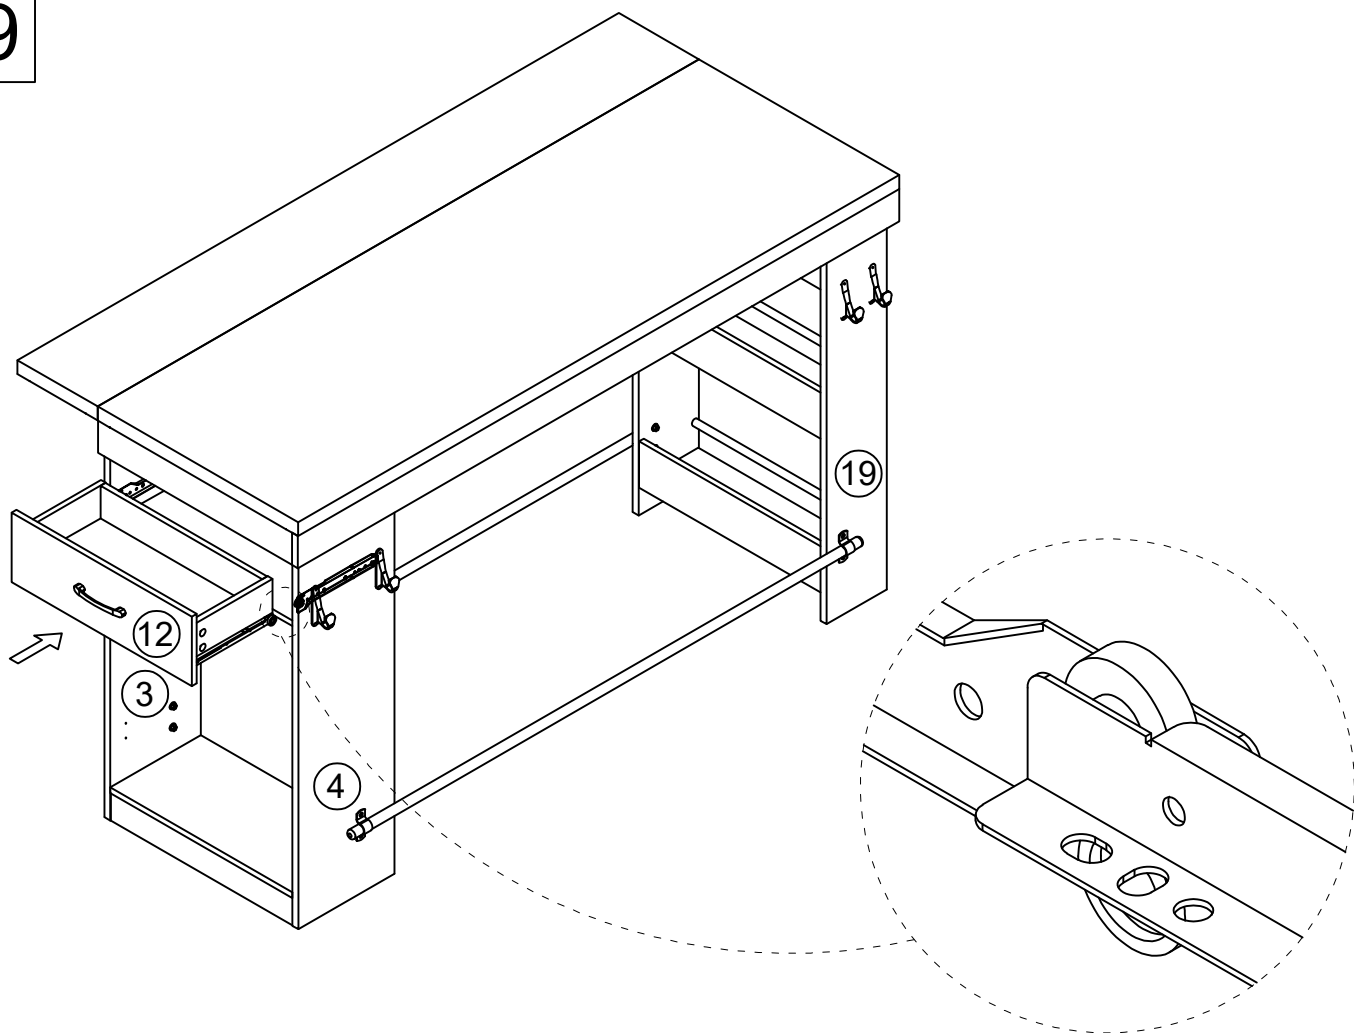


30

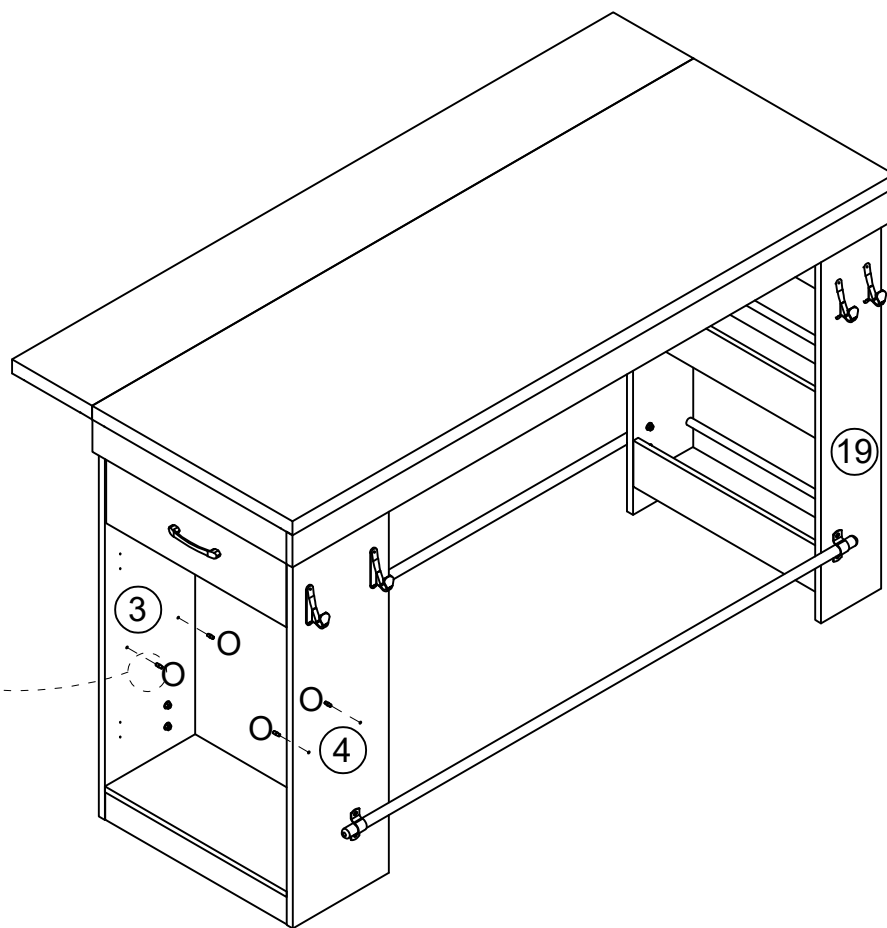



Ø x 4


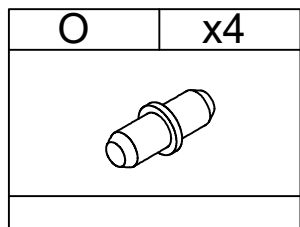


31





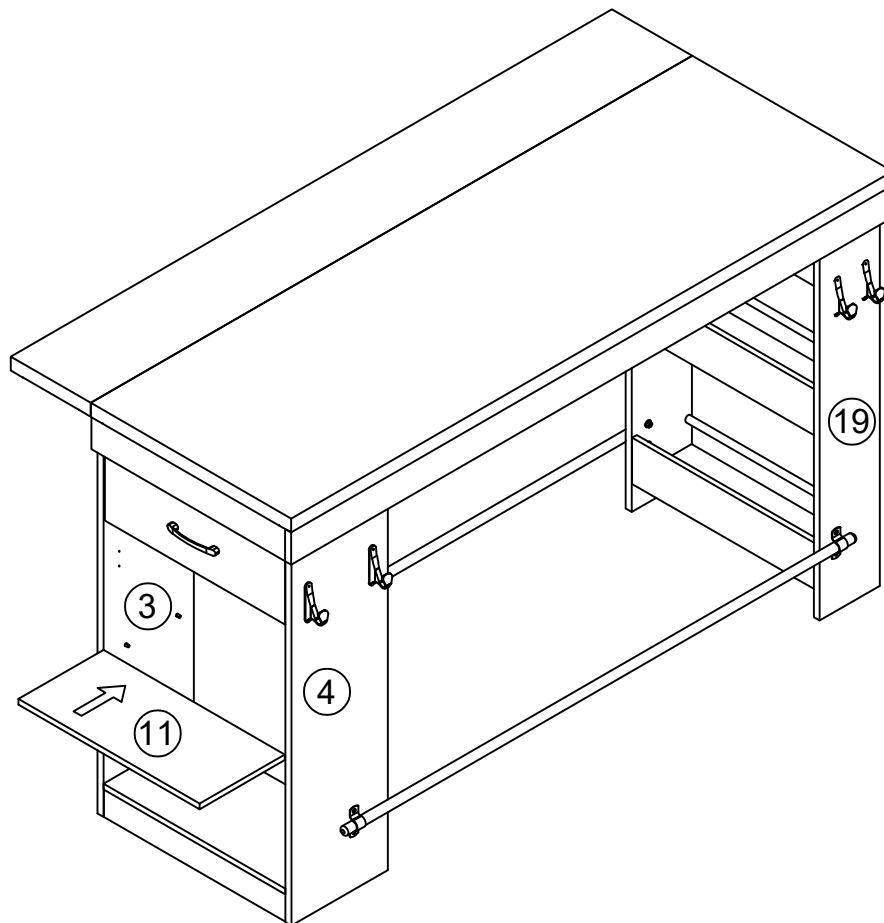


32




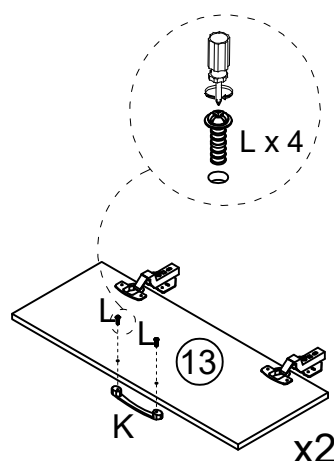
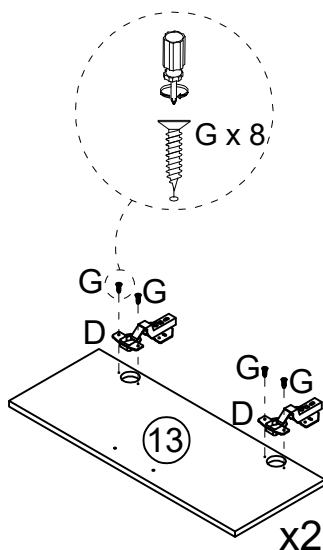


D	x4	G	x8	K	x2	L	x4
							
ø35		M3.5*14mm		96mm		M4*15mm	


33

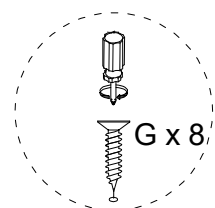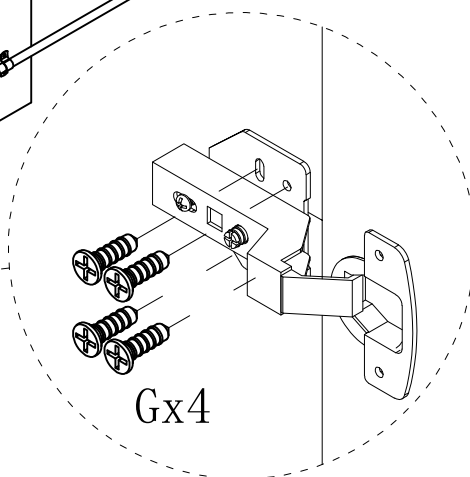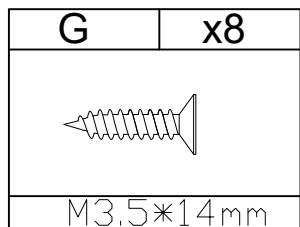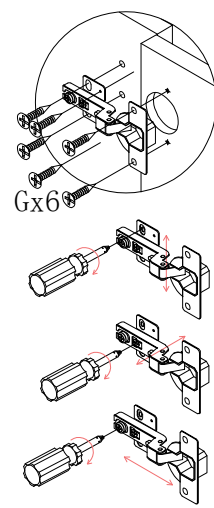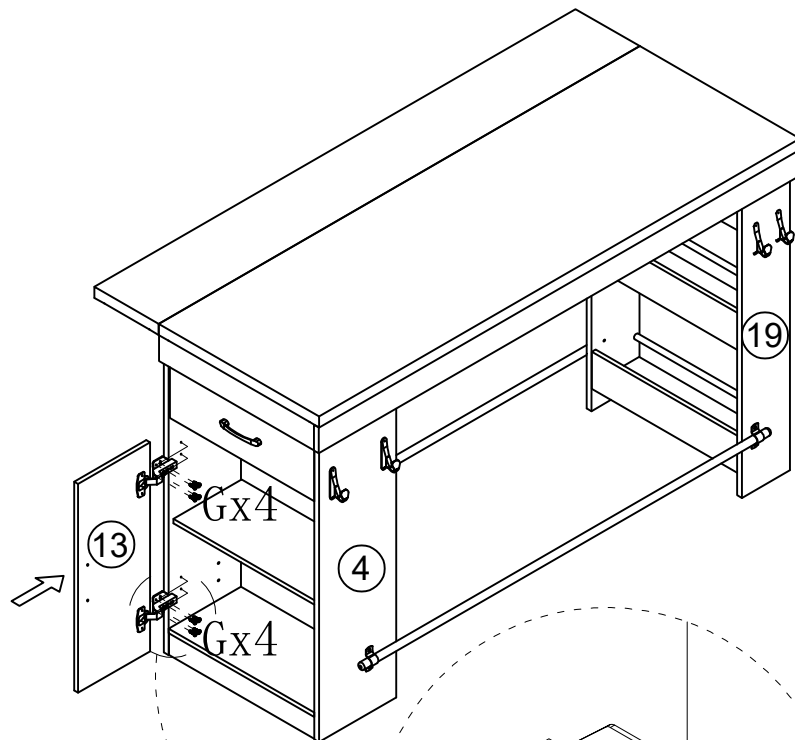

34

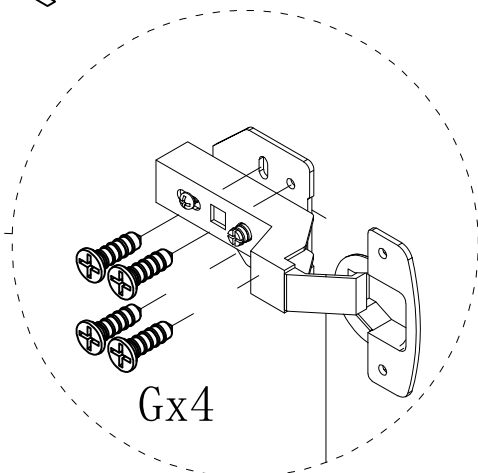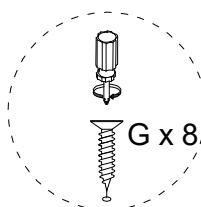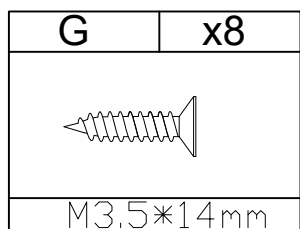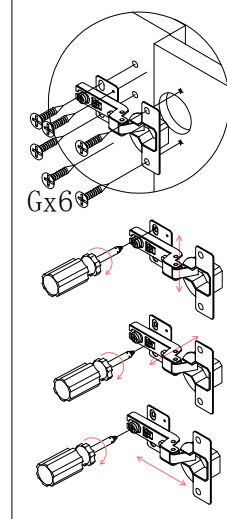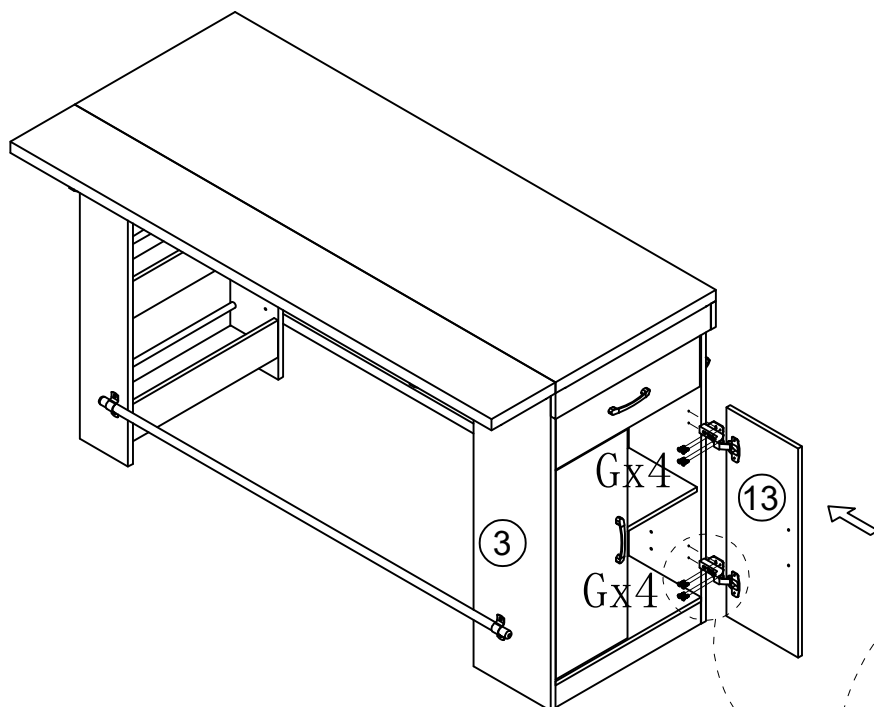


35

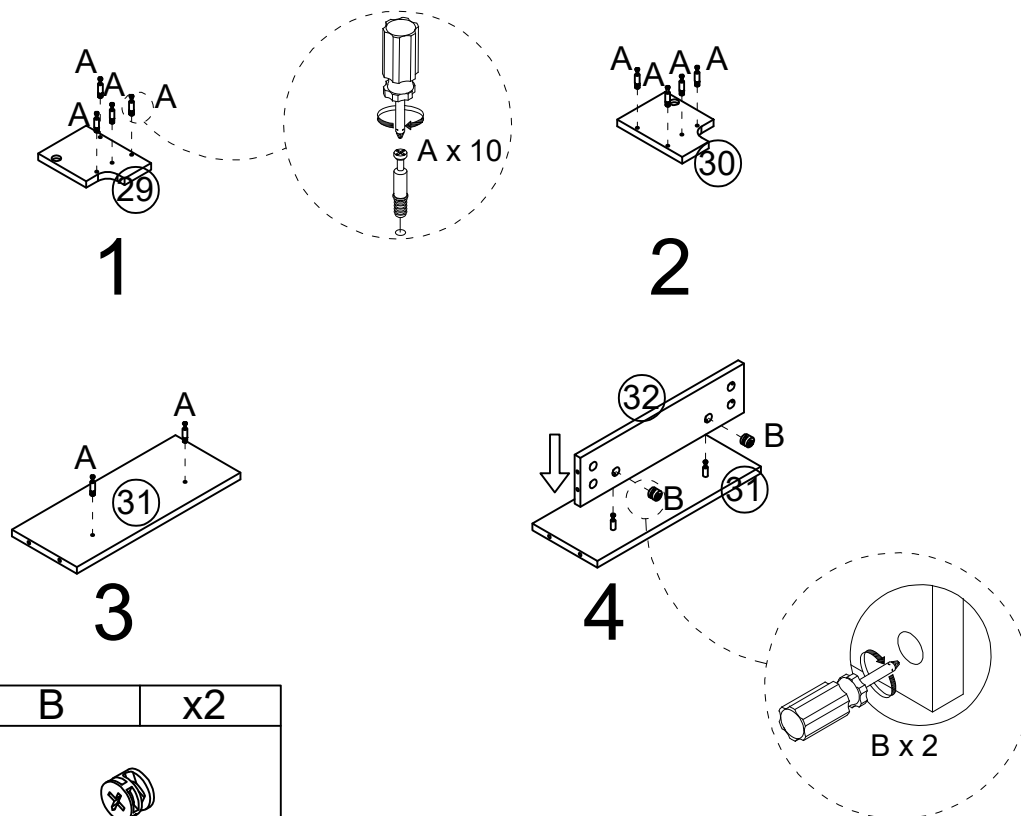


A	x10	B	x2
			
M6X33mm		Ø12X10mm	





36


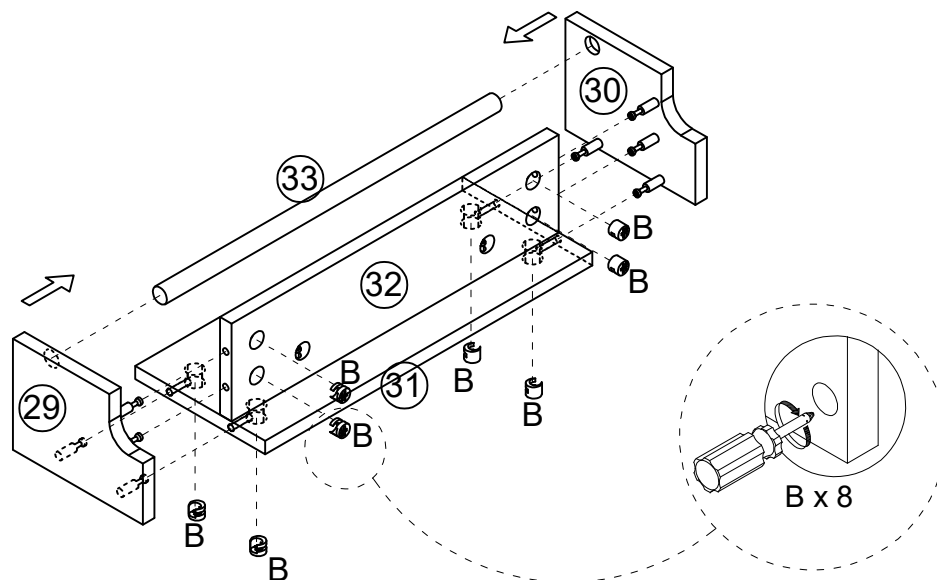


B	x8
	
Ø12X10mm	

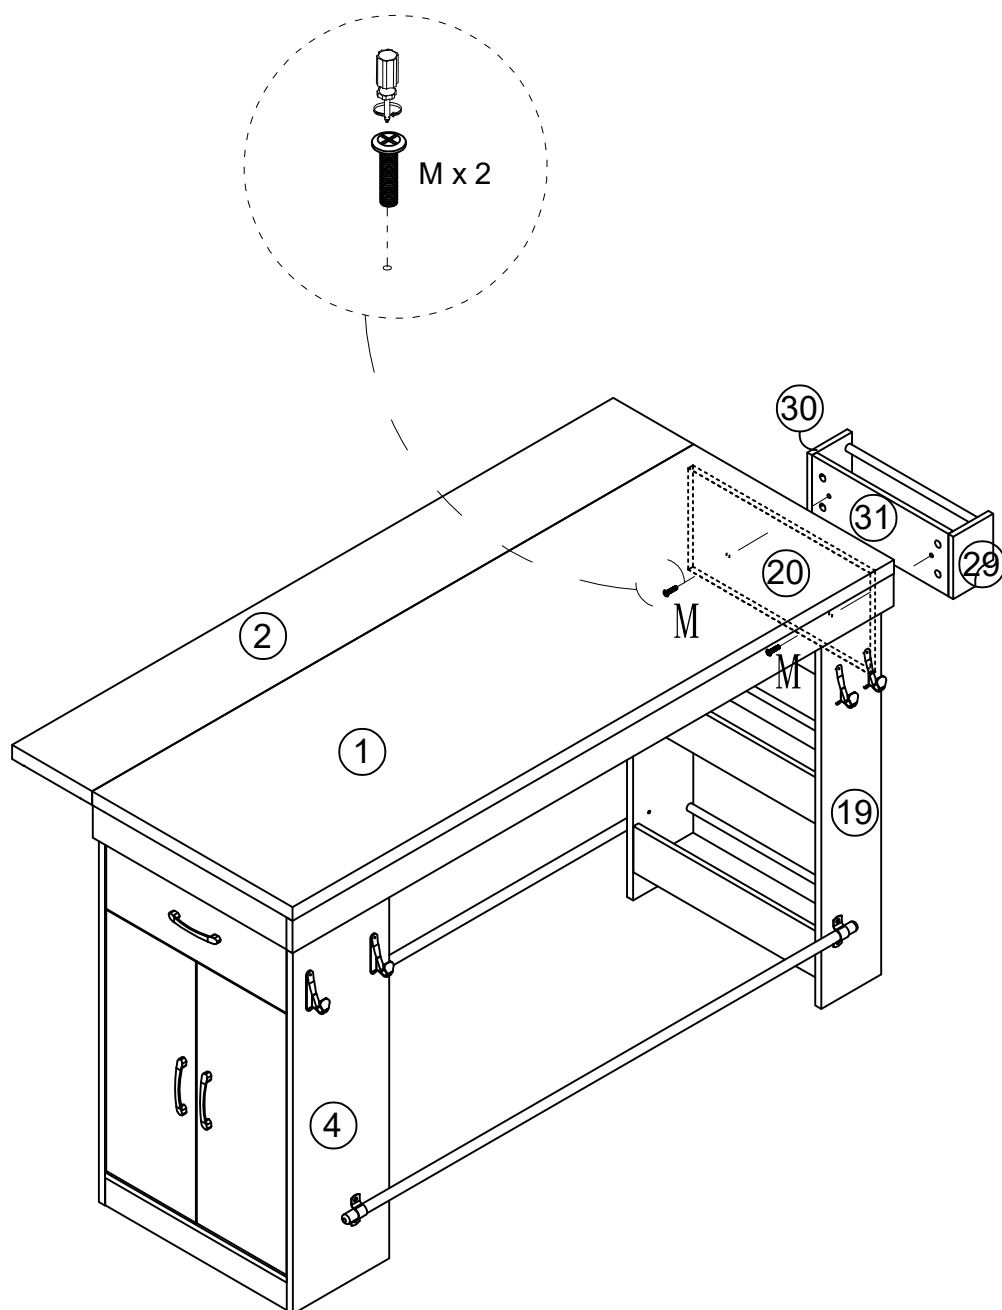

M	x2
	
M6*20mm	

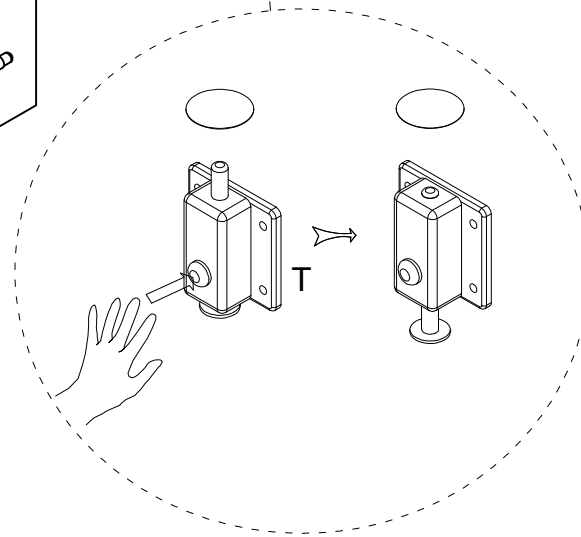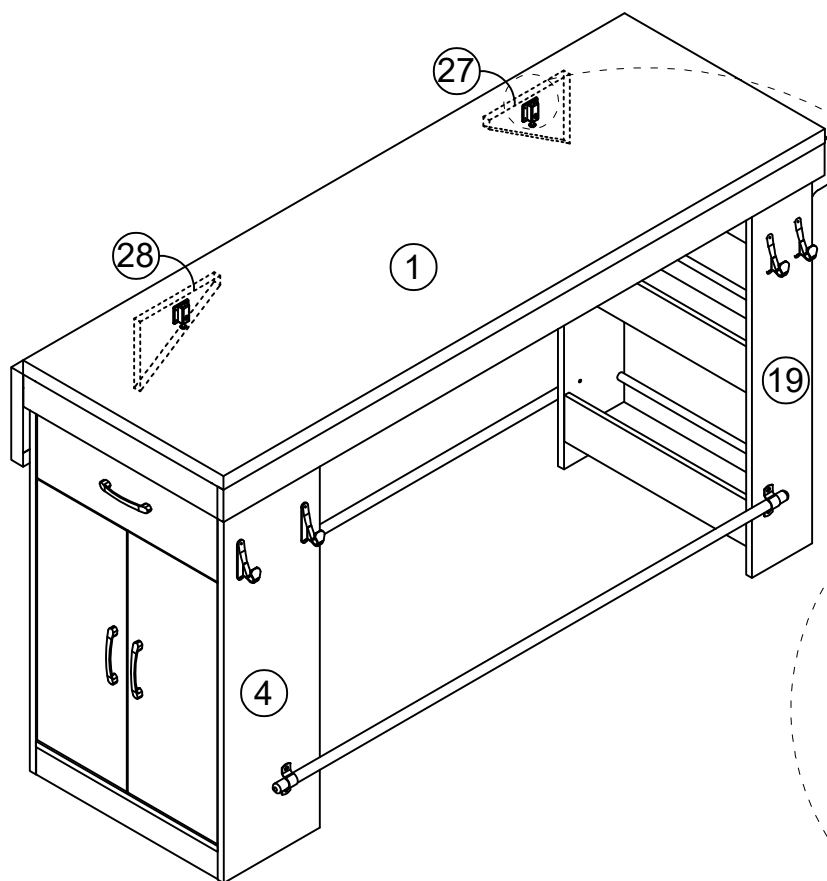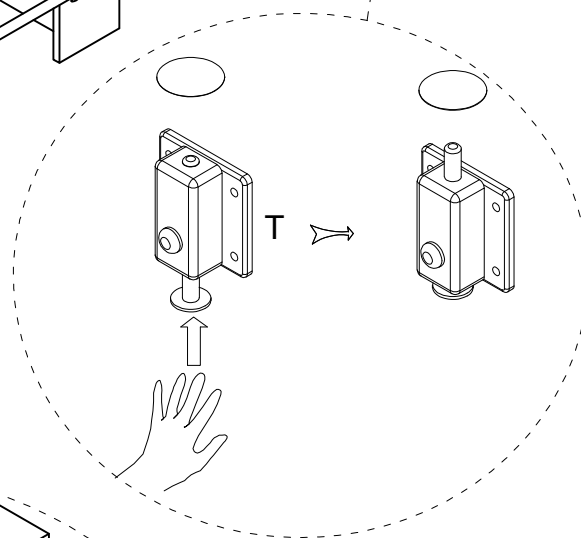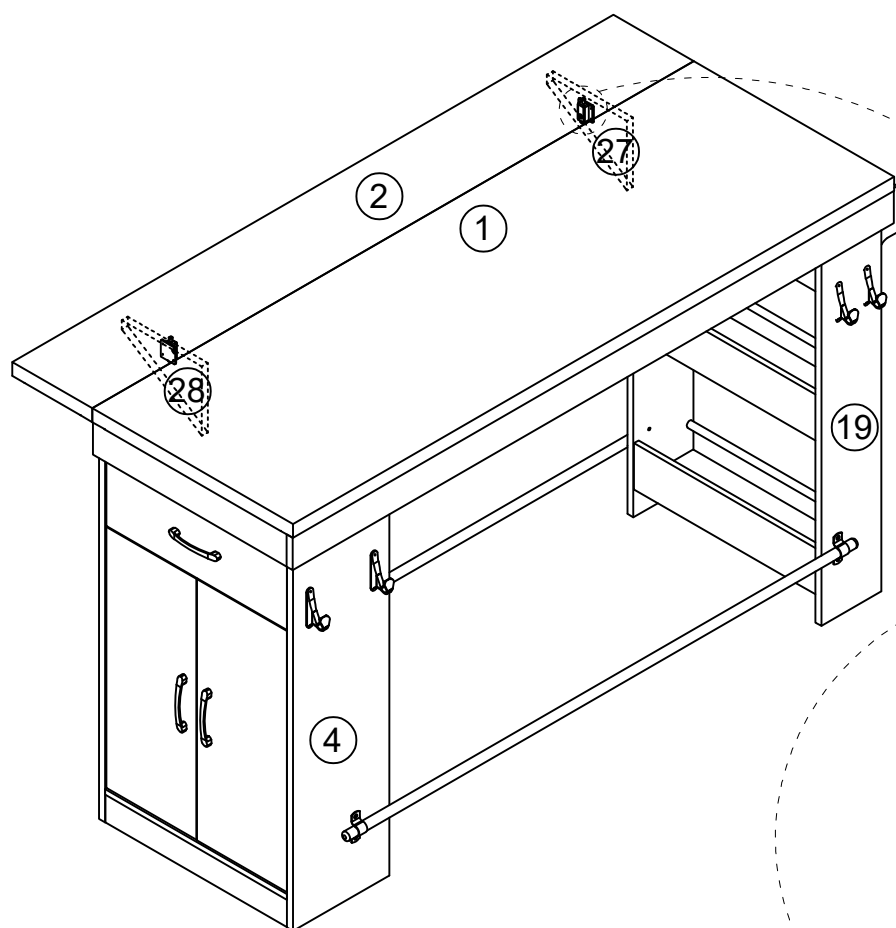

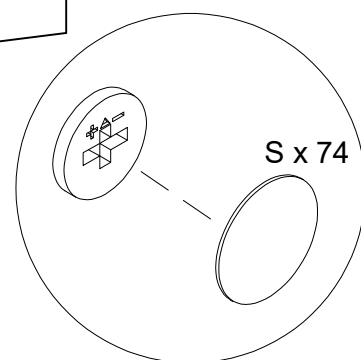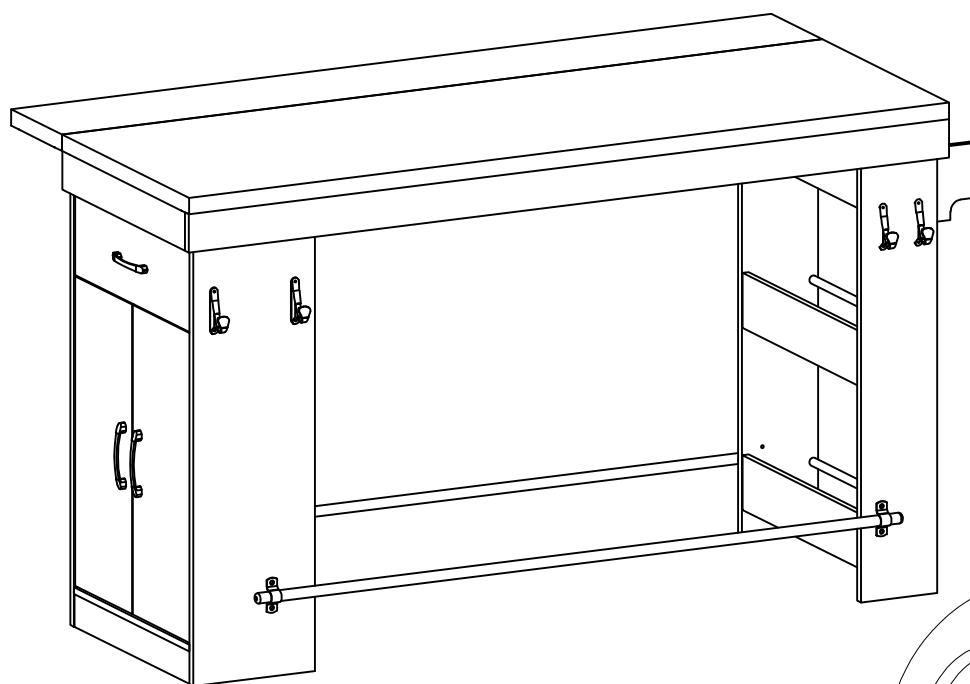

EN: In order to make the product more beautiful, please paste hardware S on the exposed holes.

FR: Afin de rendre le produit plus beau, s'il vous plaît coller le matériel S sur les trous exposés.

S	x74
	
Ø20mm	