

# Installation Instruction

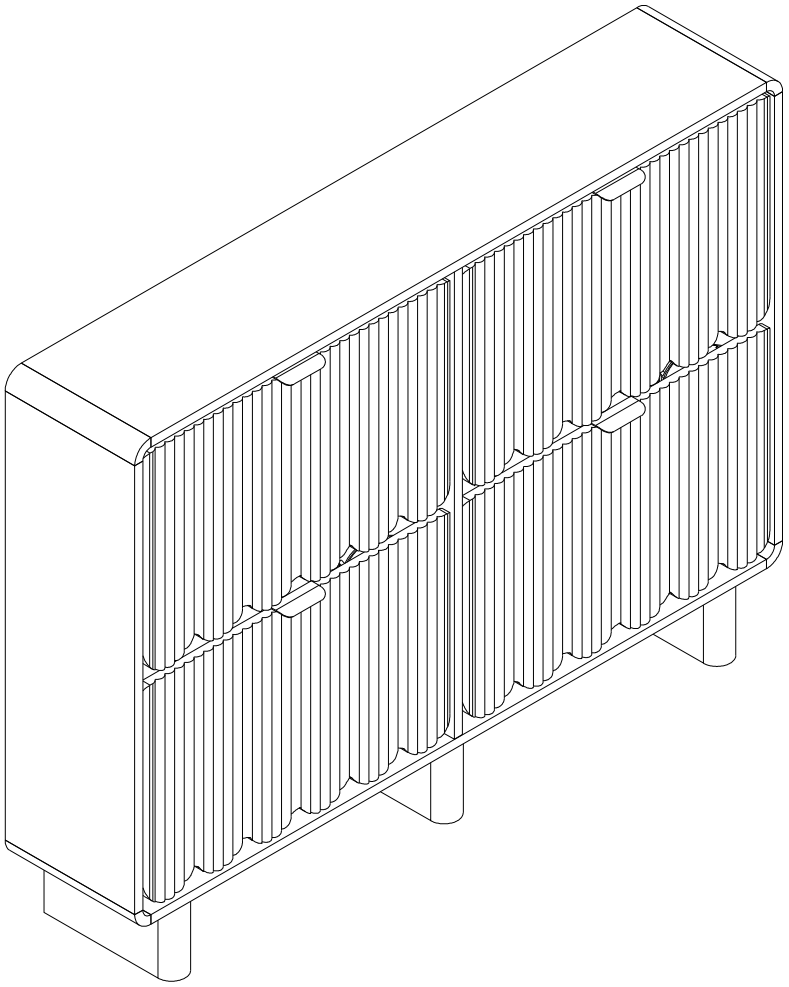

# Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver




Weight Limitation

100 lbs table top | 35 lbs per

# What' included

| Code | Description | Qty |
|---|---|---|
| A | Cam Bolt M6X35MM | 36 |
| B | Cam Lock 15X10MM | 36 |
| C | Wooden Dowel M8X30MM | 28 |
| D | Screw M4X40MM | 8 |
| E | Screw M3.5X14MM | 2 |
| F | External Shaft | 8 |
| G | Stopper | 8 |
| H | Screw M6X18MM | 8 |
| I | Screw M3.5X14MM | 48 |
| J | Metal connector | 2 |
| K | Anchor | 2 |
| L | Left Plastic Holder | 4 |
| M | Hole position sticker | 36 |
| N | Wrench M4X55MM | 1 |
| O | Metal shake handshandle | 4 |
| P | EVA | 6 |
| Q | Phillips screwdriver | 1 |
| R | Right Plastic Holder | 4 |
| S | Screw M7X50MM | 6 |

# The Hardwares

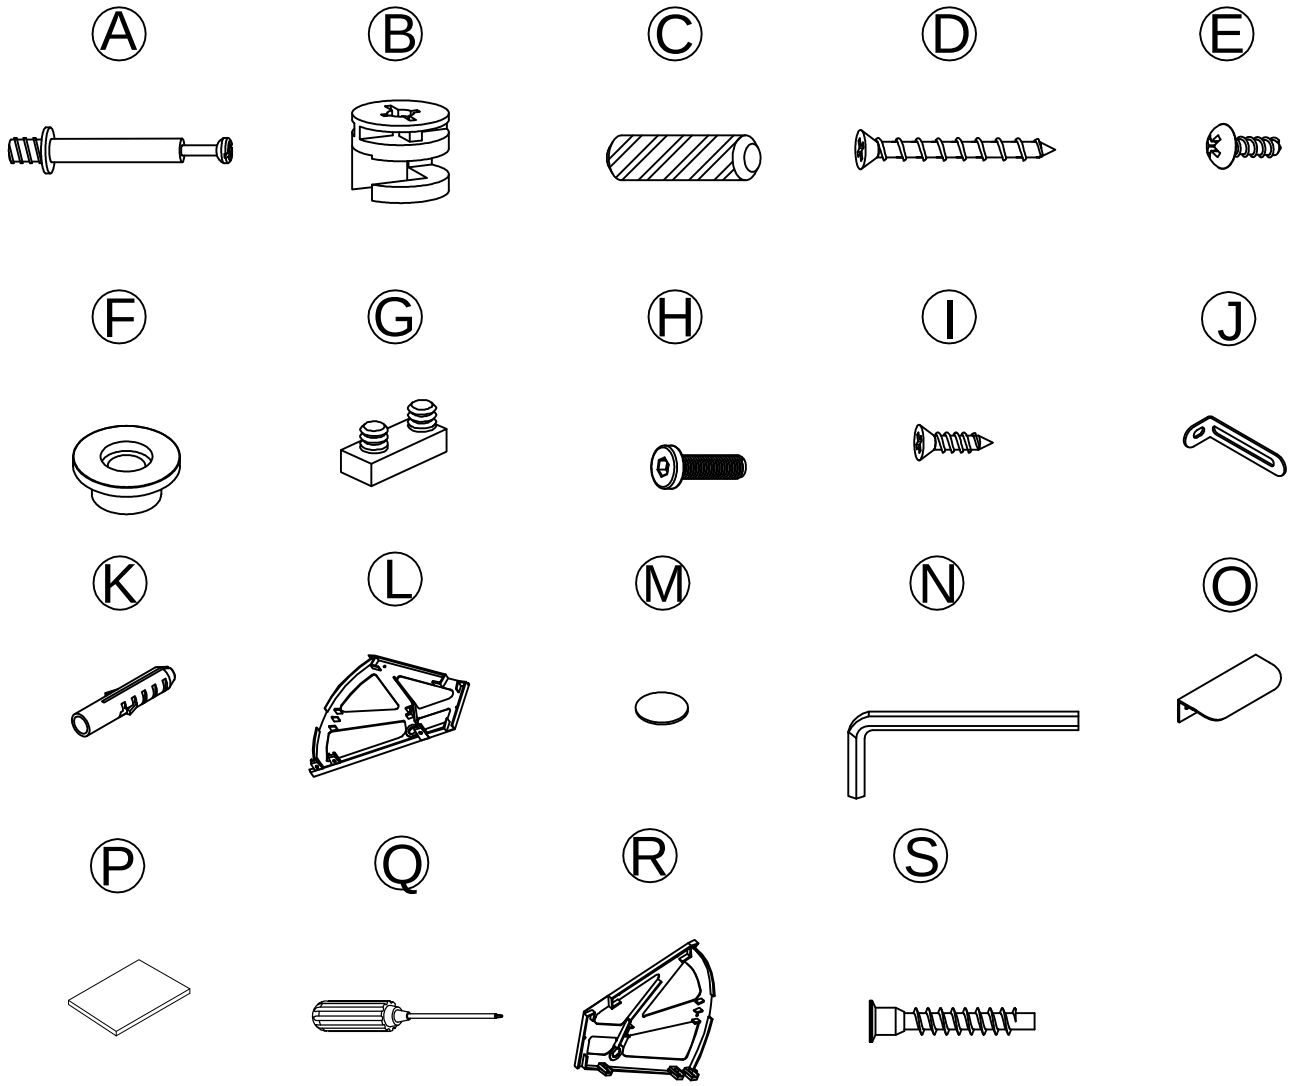



IMPORTANT:
1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2.Do not over tighten screws and bolts to avoid stripping
3.Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully).

# Included Accessories


| Code | Description | Qty |
|---|---|---|
| 1 | Cabinet Top | 1 |
| 2 | Bottom Panel | 1 |
| 3 | Left Side Panel | 1 |
| 4 | Right Side Panel | 1 |
| 5 | Middle Division Pane | 1 |
| 6 | Door | 2 |
| 7 | Inner lamella | 4 |
| 8 | Large inner plate | 8 |
| 9 | Curved strip | 4 |
| 10 | Back stiffener | 2 |
| 11 | Back stiffener | 1 |
| 12 | Solid wood feet | 1 |
| 13 | Door | 2 |

# The Accessoriess

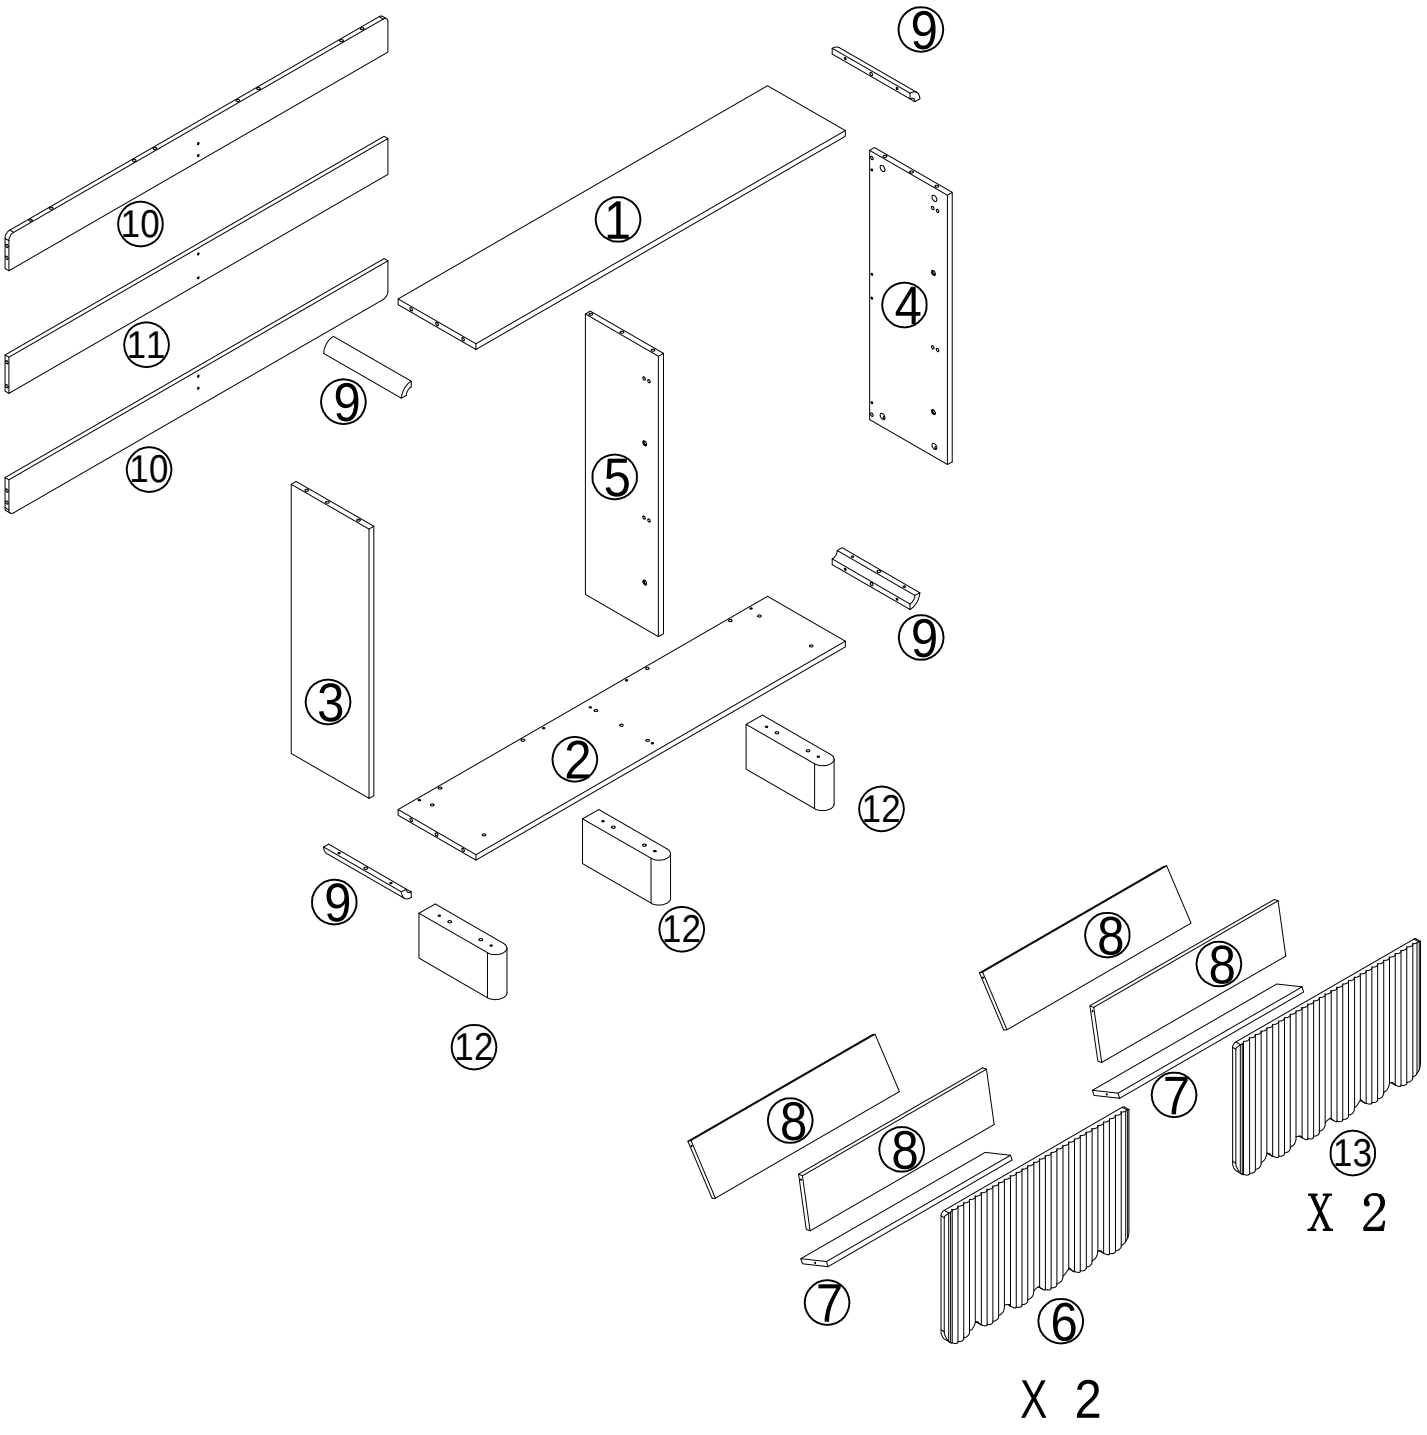


# HARDWARE USAGE GUIDE

Hidden Cam Bolt/Cam Lock Usage Instructions

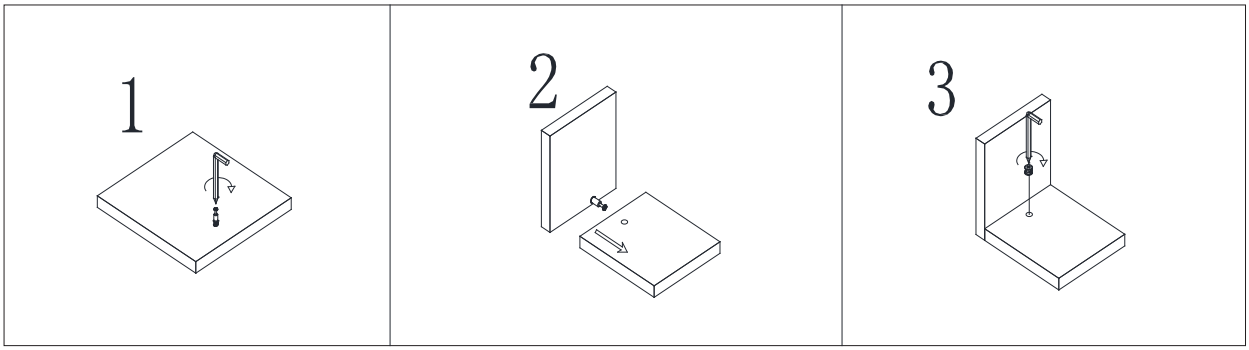



## Step 1




Cam Bolt

Turn the Cam Bolt until the shoulder is firmly against the part.

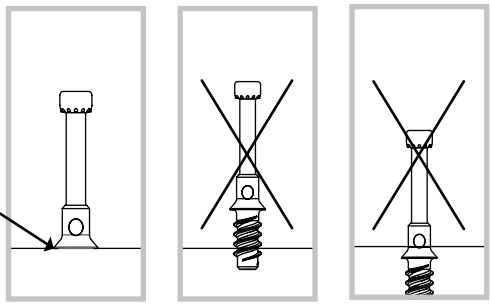


## Step 2

Connect the two platesat 90 degrees.

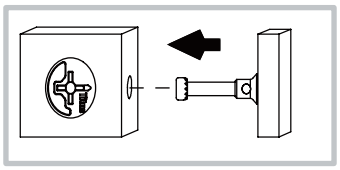


## Step 3.1

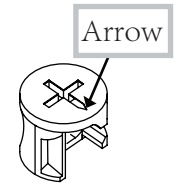



Cam Lock

Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).

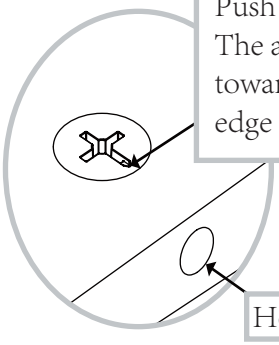




## Step 3.2

Install the cam lock nut andfix it by rotation.

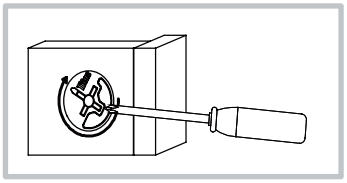


# Step 1

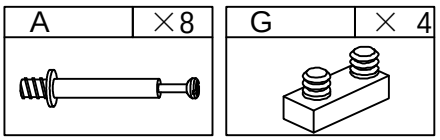


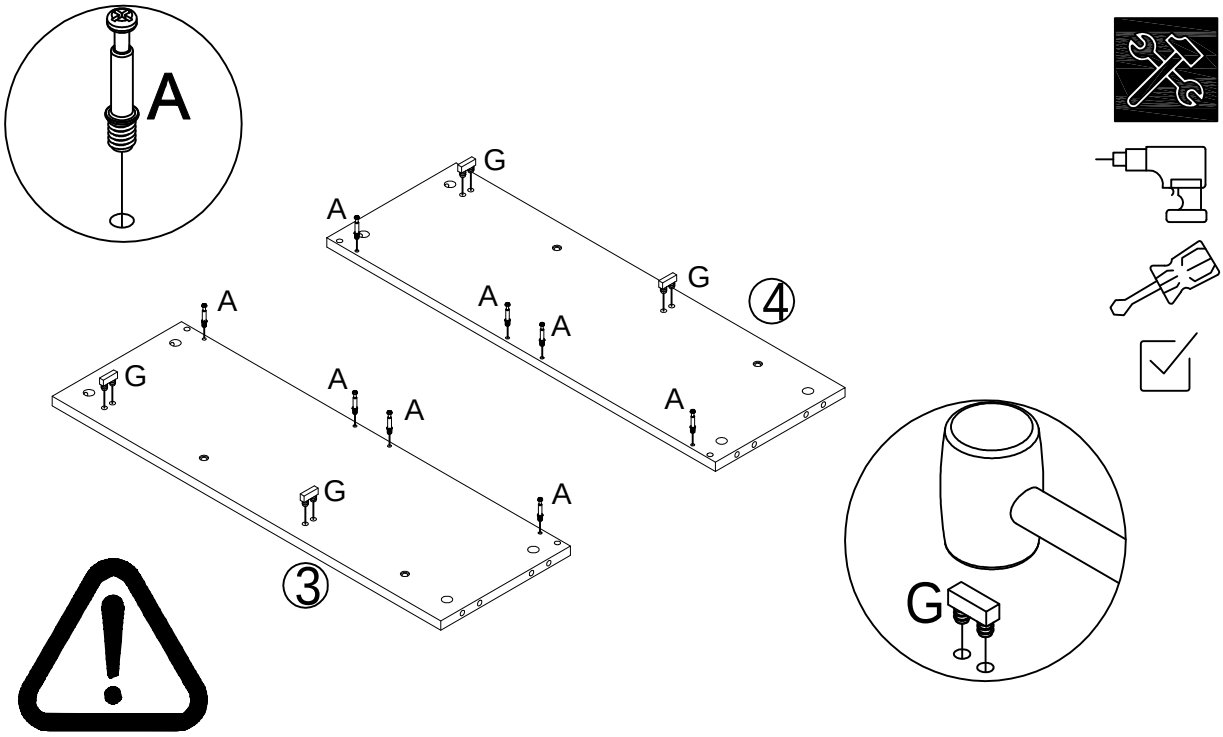


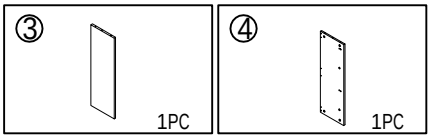

Please strike the accessories G forcefully into the board.

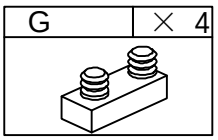



# Step 2

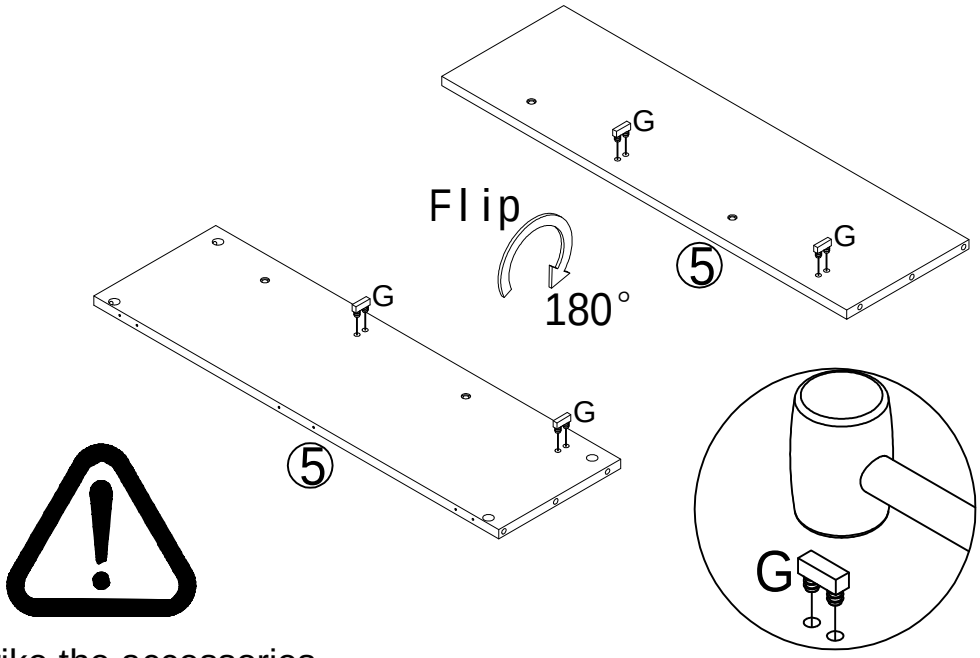






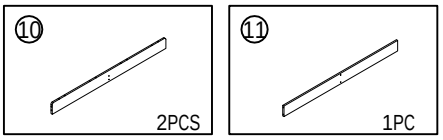

Please strike the accessories G forcefully into the board.

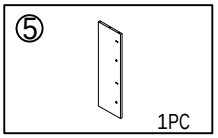


# Step 3

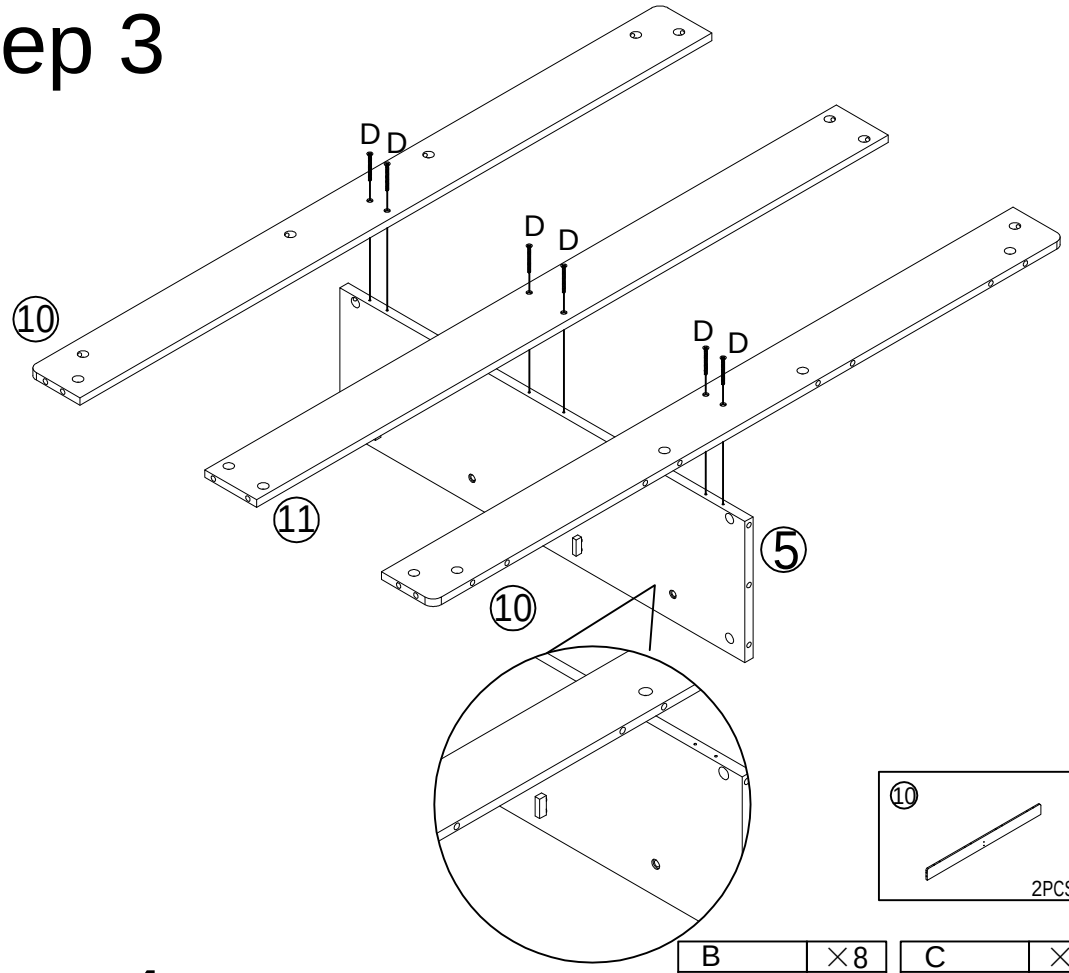

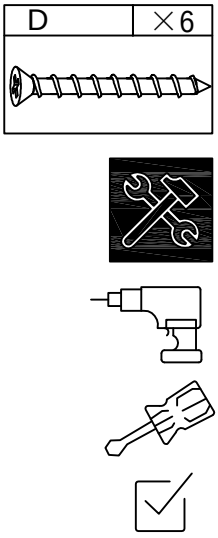



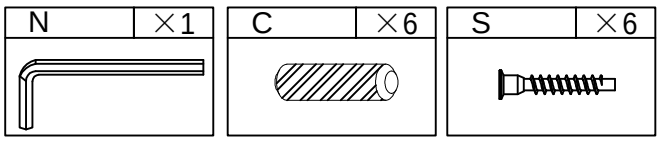

# Step 4

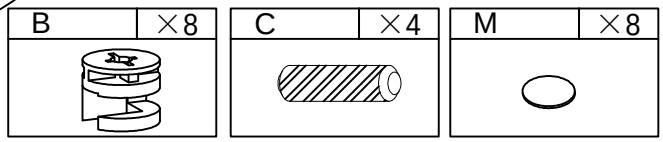



Attention: Please do not install plates No. 3 and No. 4 in the reverse direction.

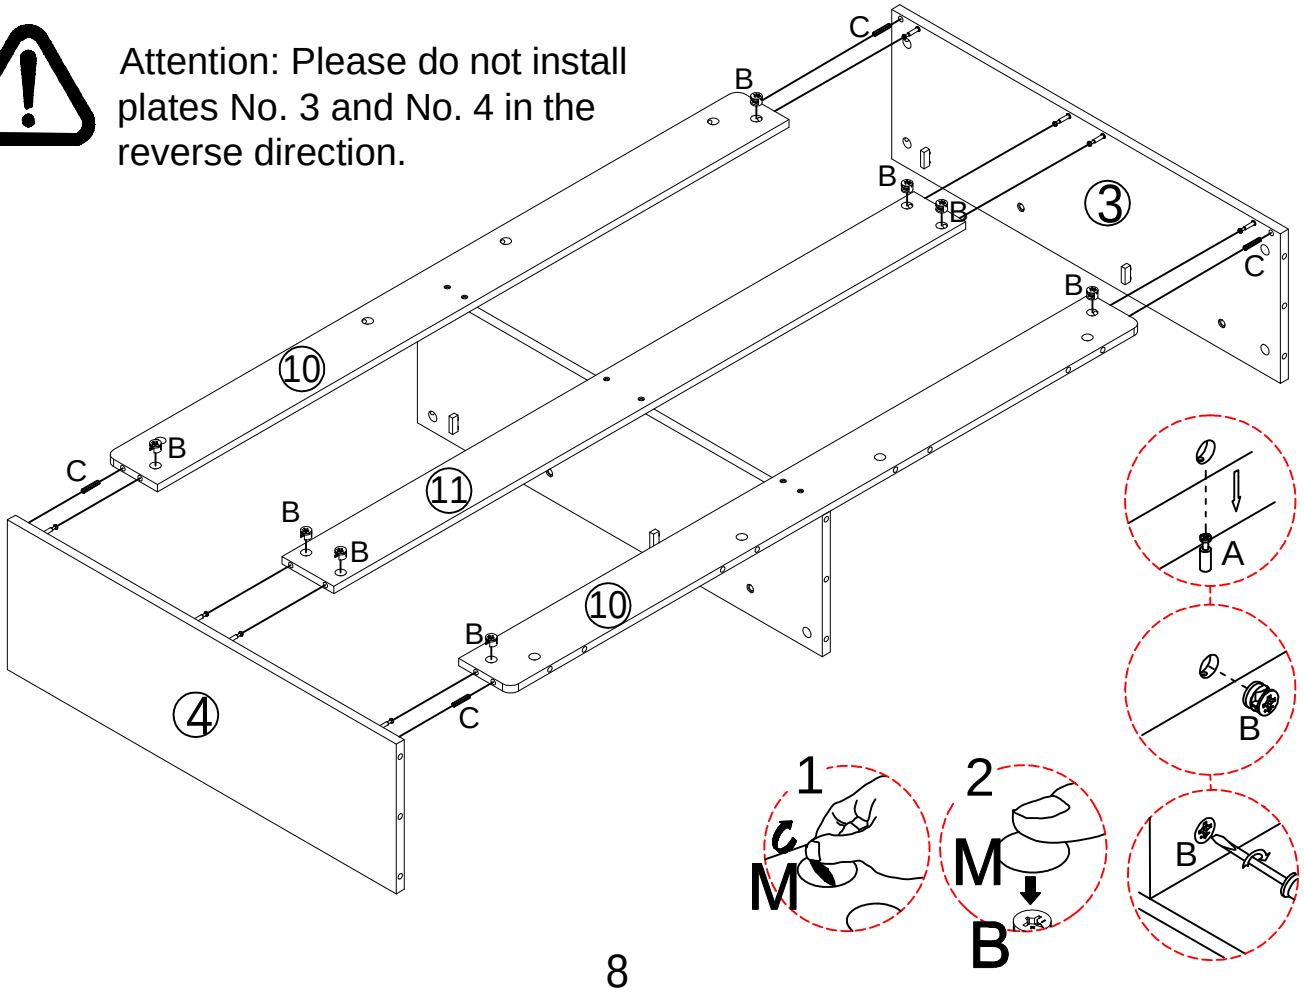


# Step 5




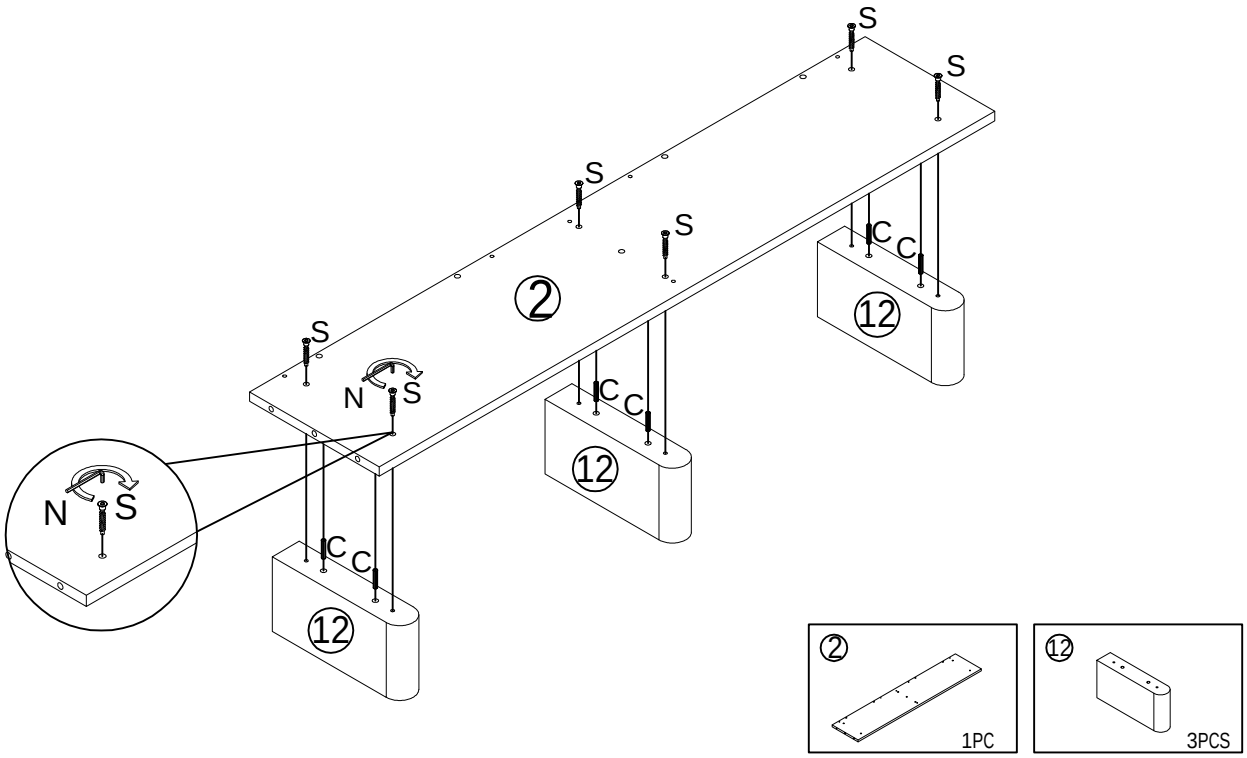





# Step 6

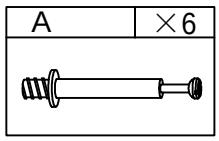




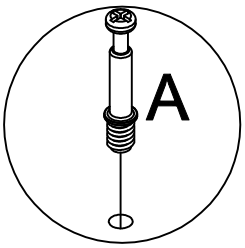


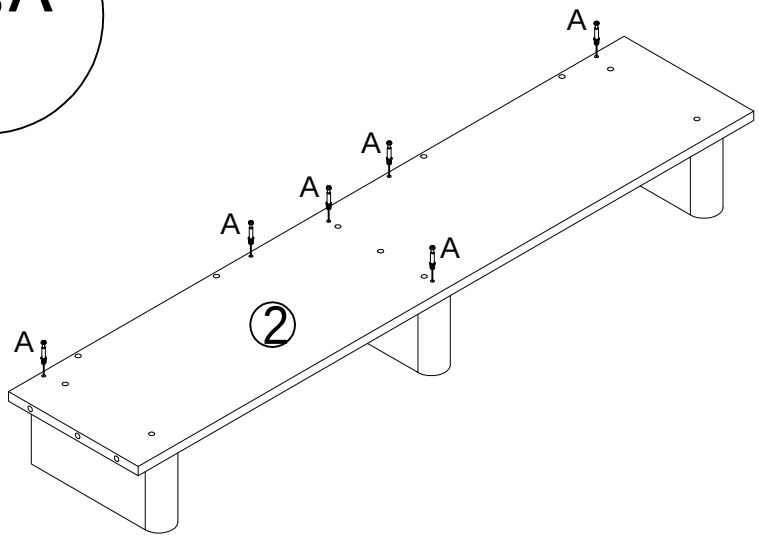
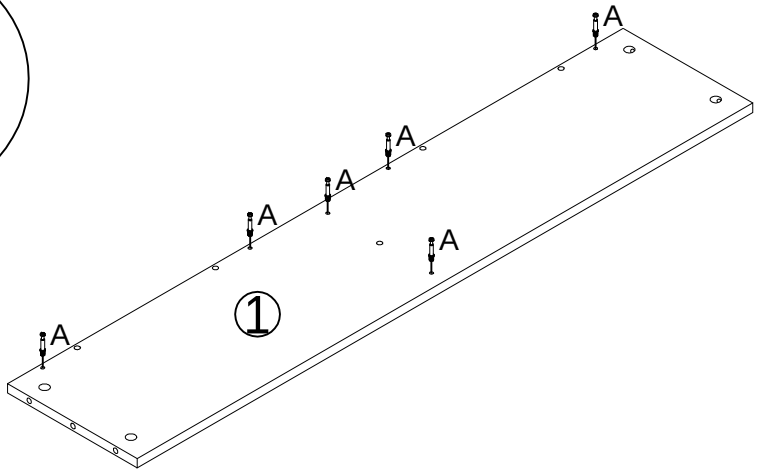



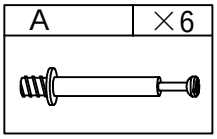





# Step 7

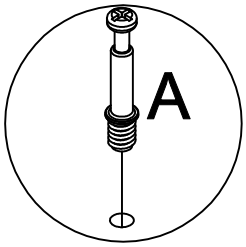








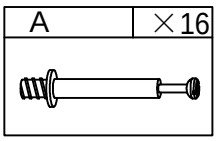








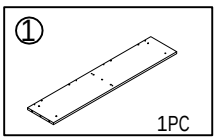



# Step 8












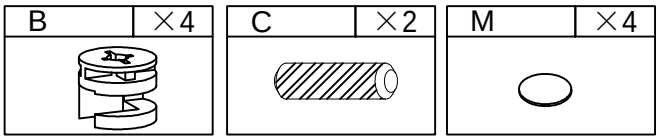


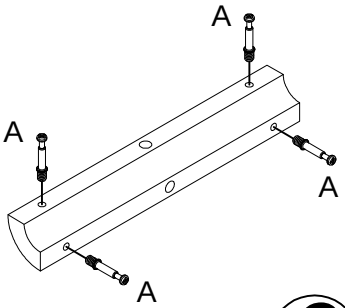



⑨ x 4

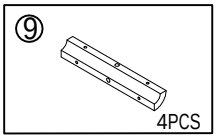



# Step 9



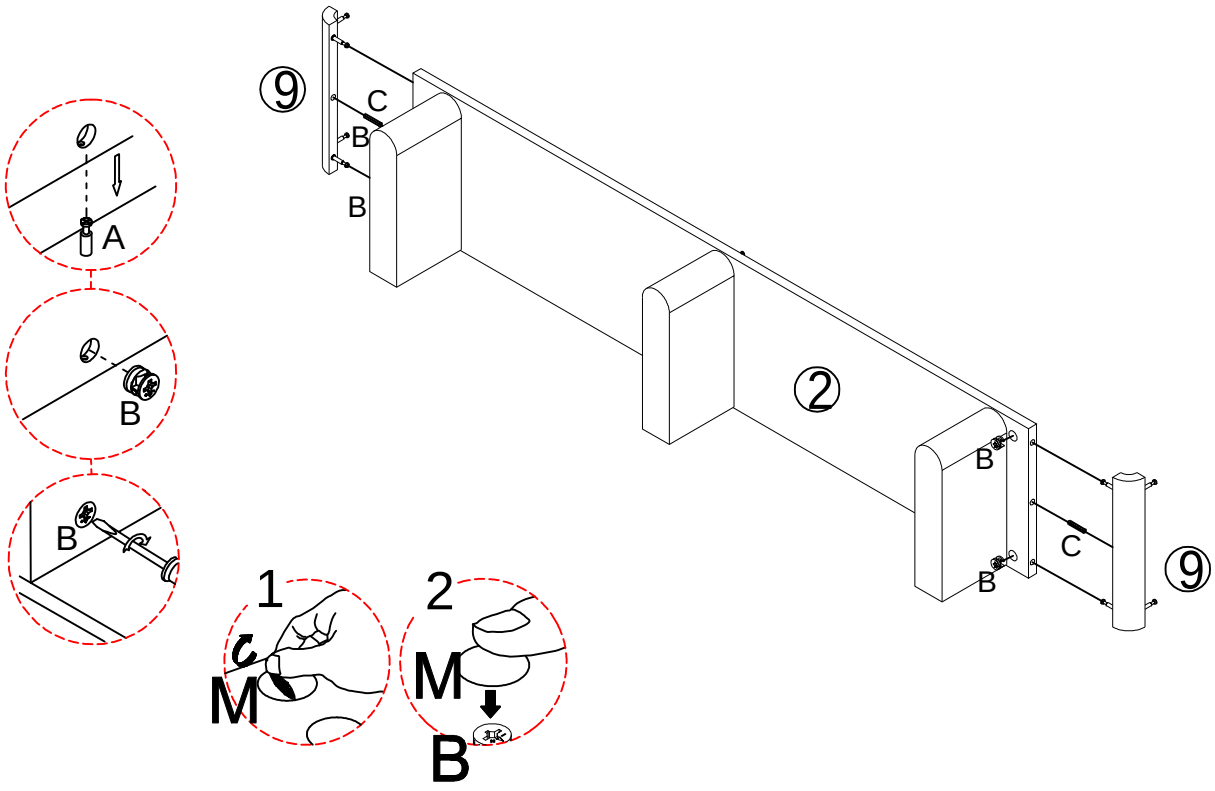


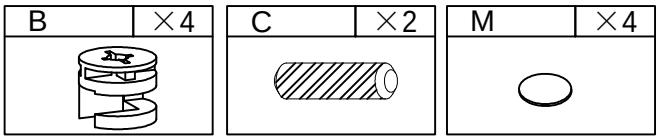

# Step 10

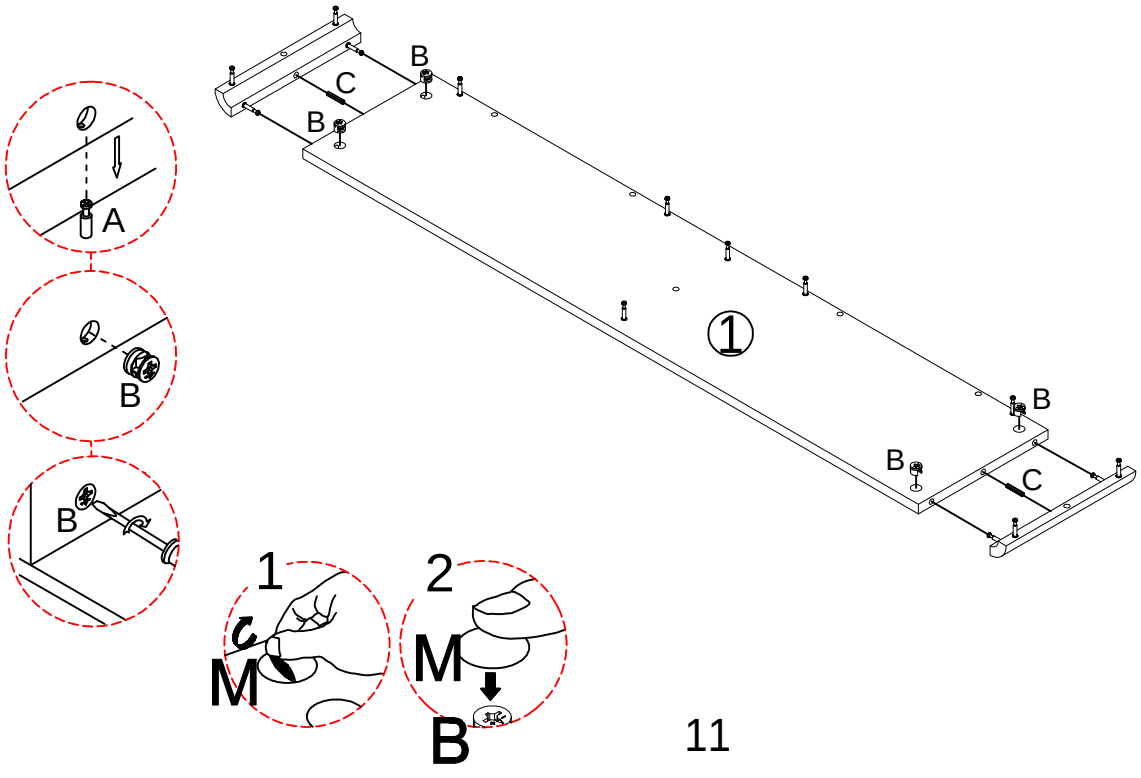


# Step 11

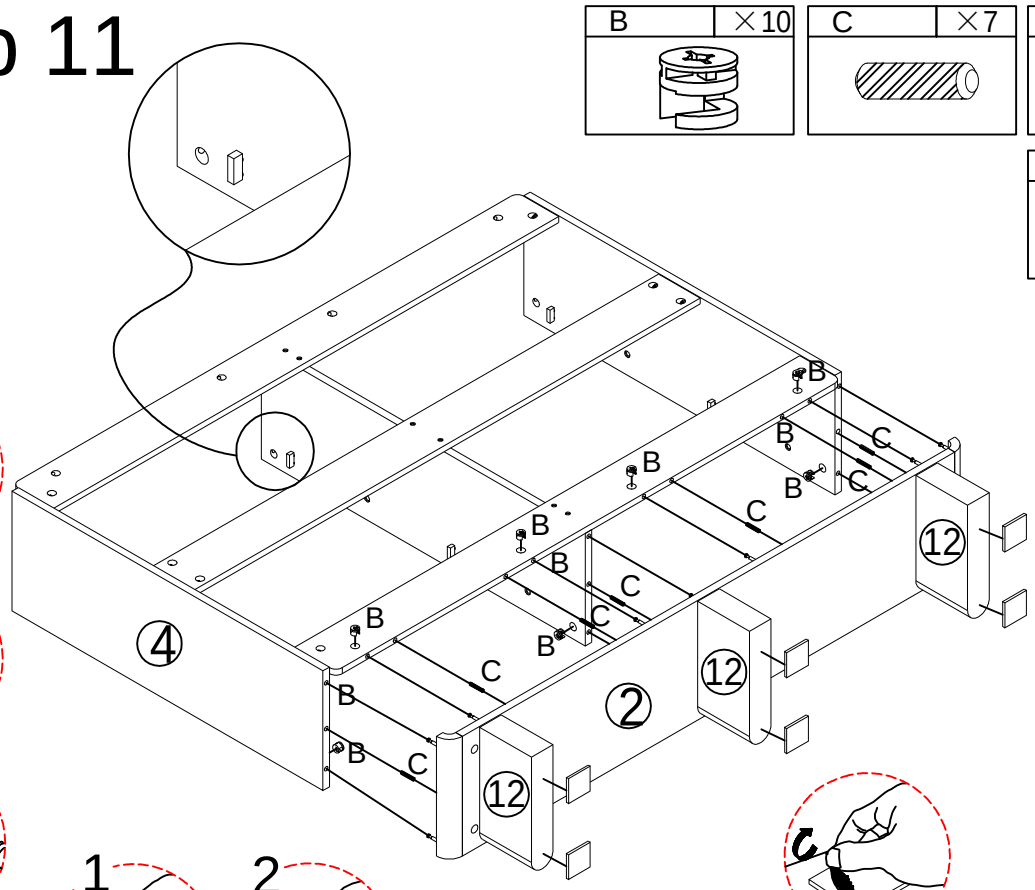


# Step 12

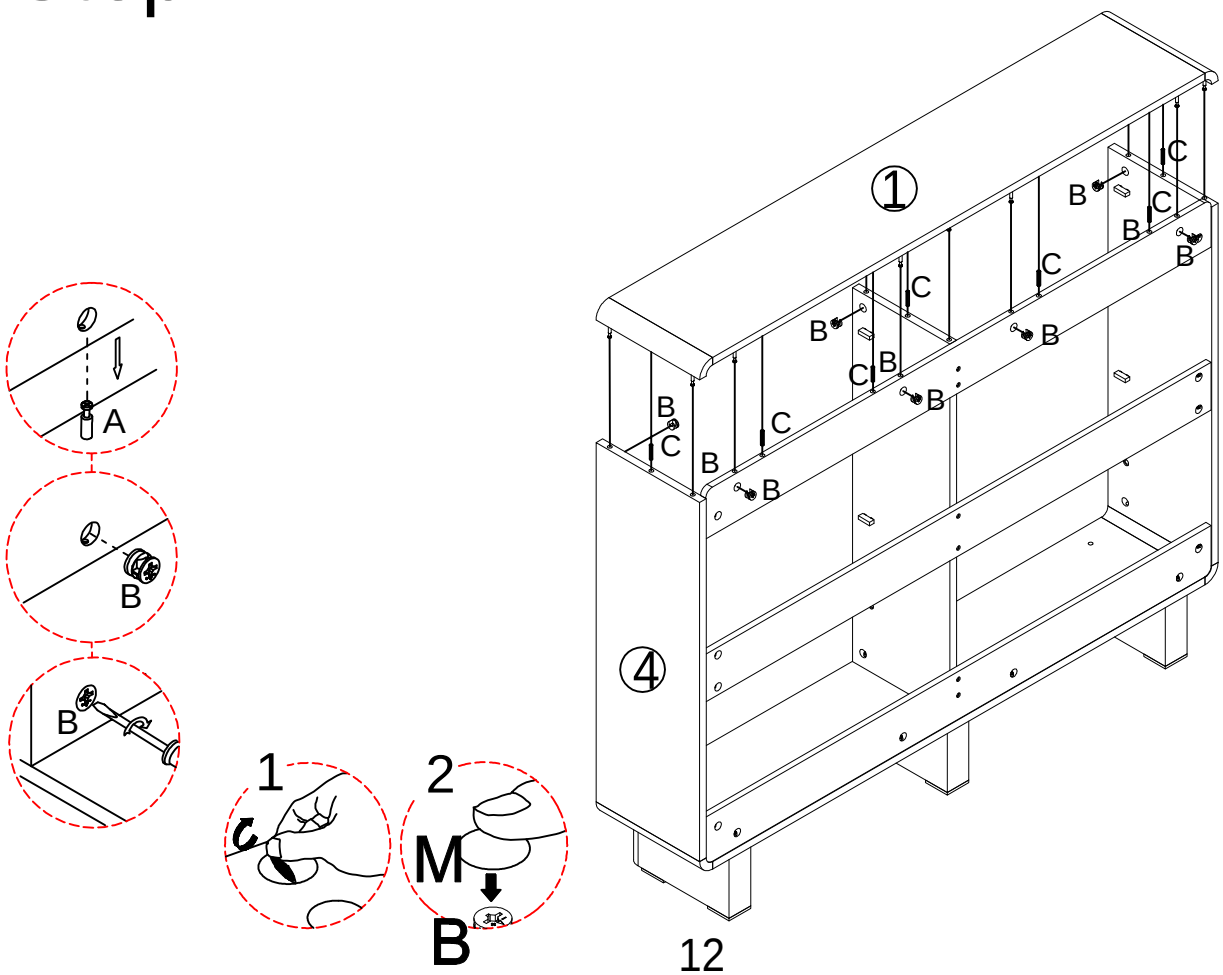



# Step 13

| L | x 4 |
|---|---|


| R | x 4 |
|---|---|

| I | x 8 |
|---|---|

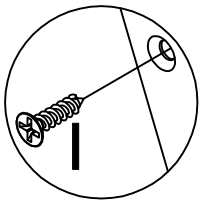

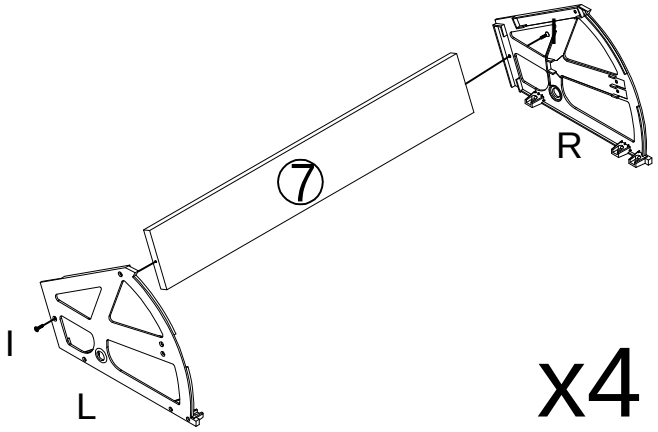



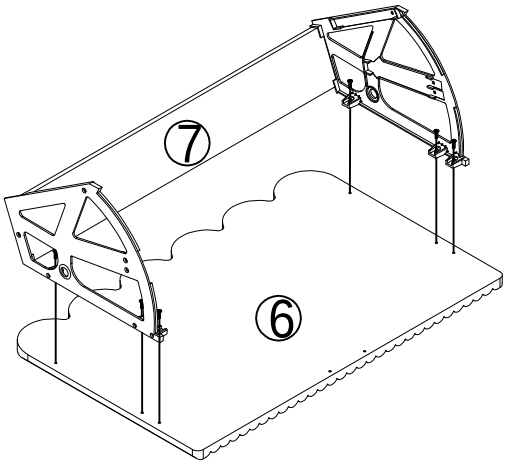

x4

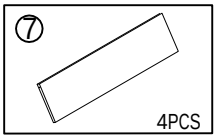



# Step 14


| I | x 24 |
|---|---|

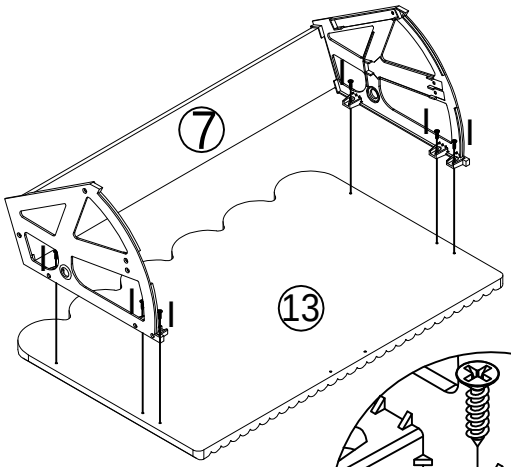




x 2



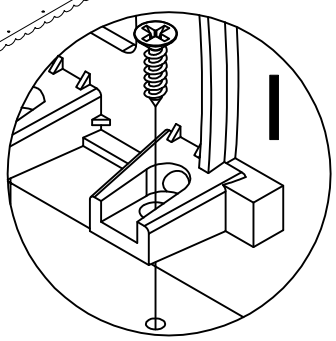


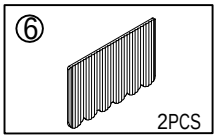
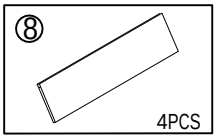


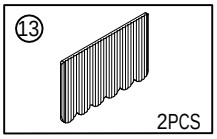
# Step 15

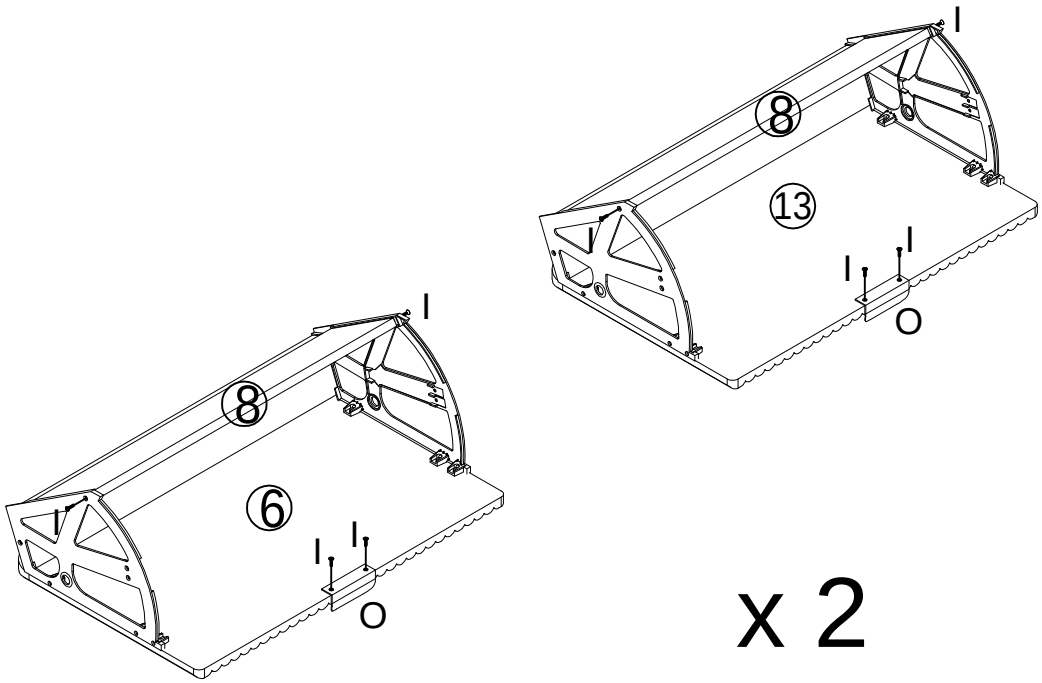




x 2

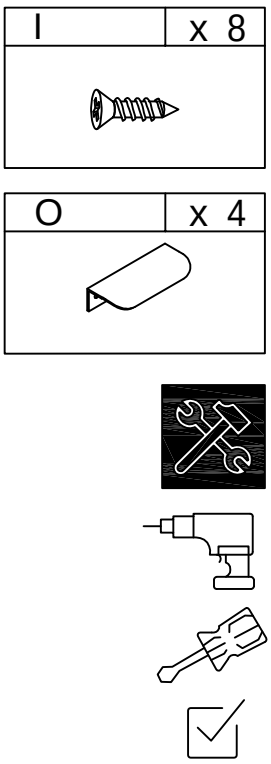




# Step 16




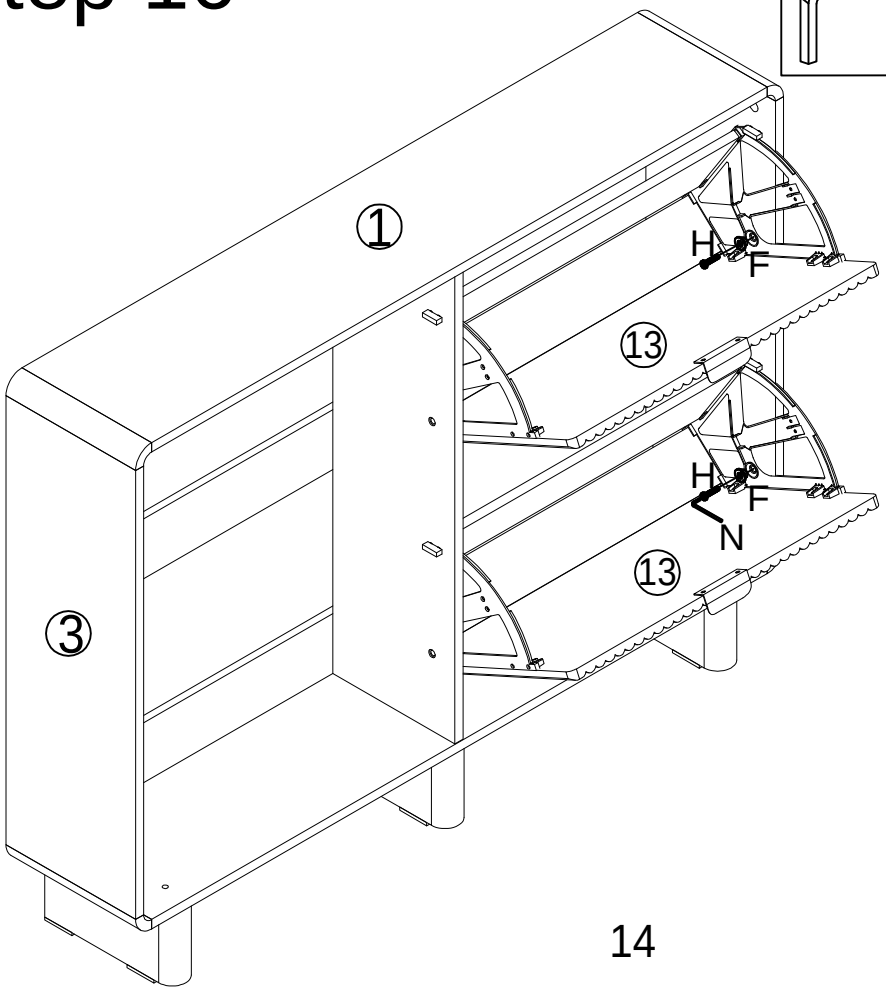


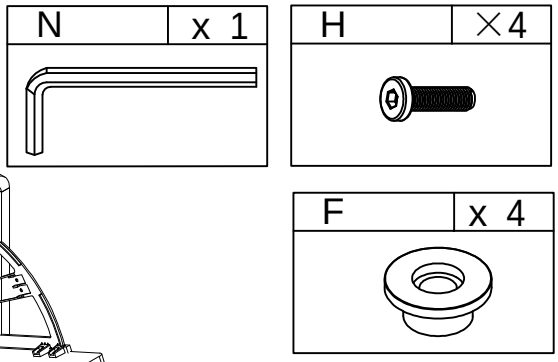
# Step 17

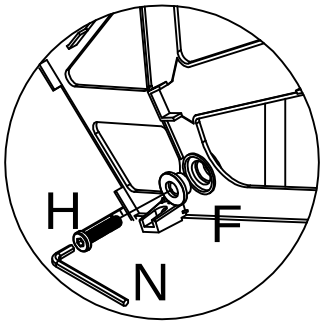

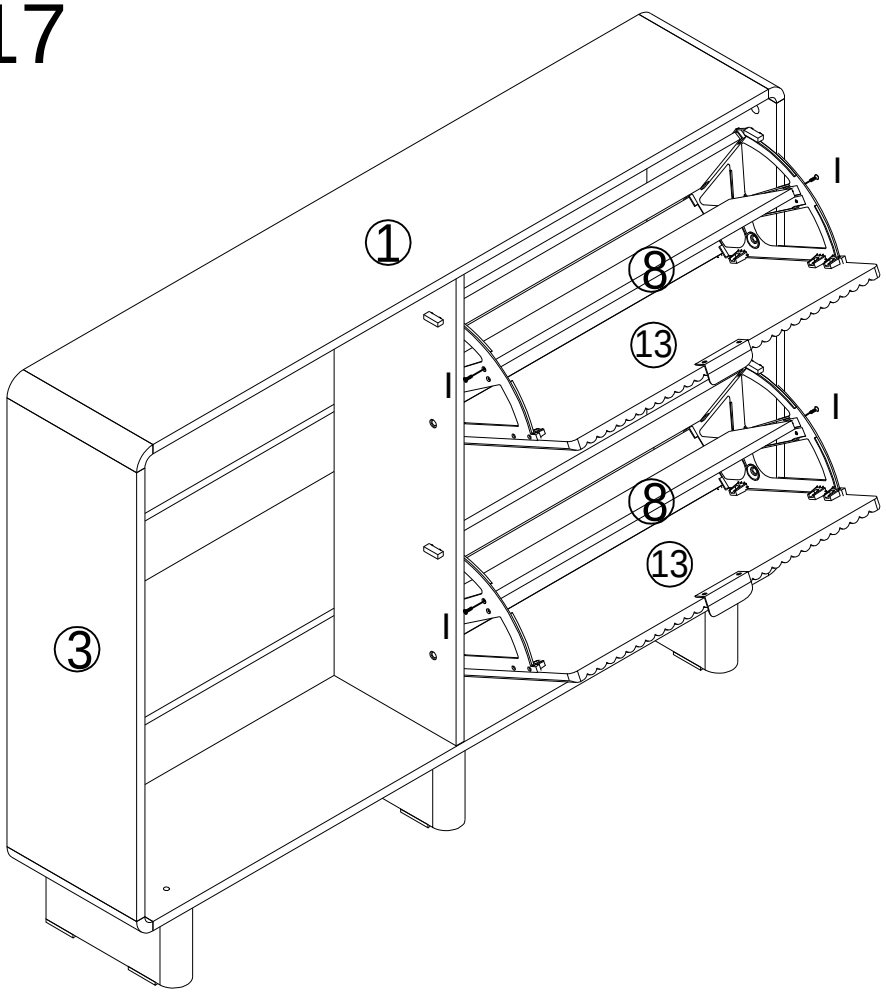


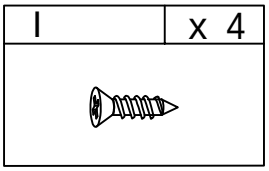


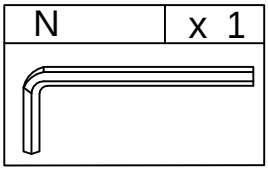



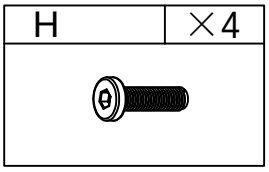





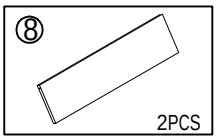




# Step 18



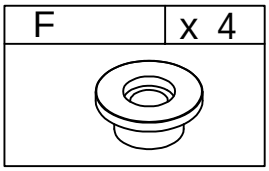






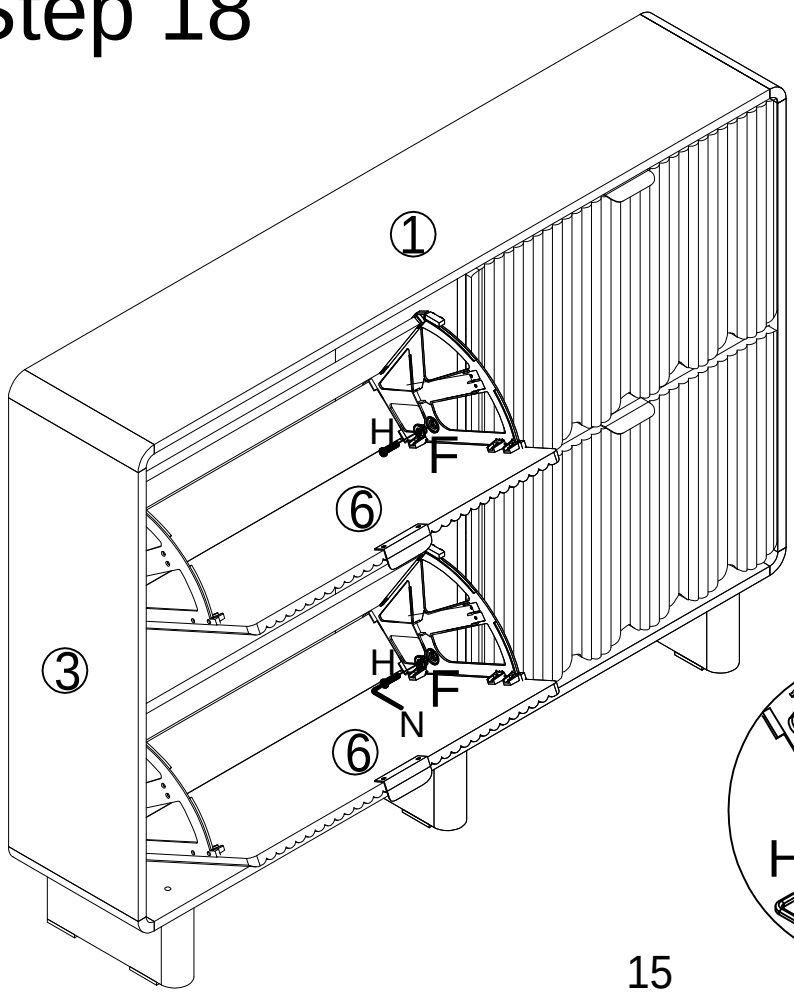

# Step 19

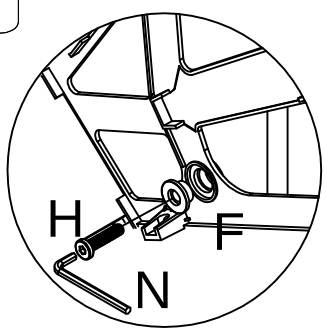



| I | x 4 |
|---|---|

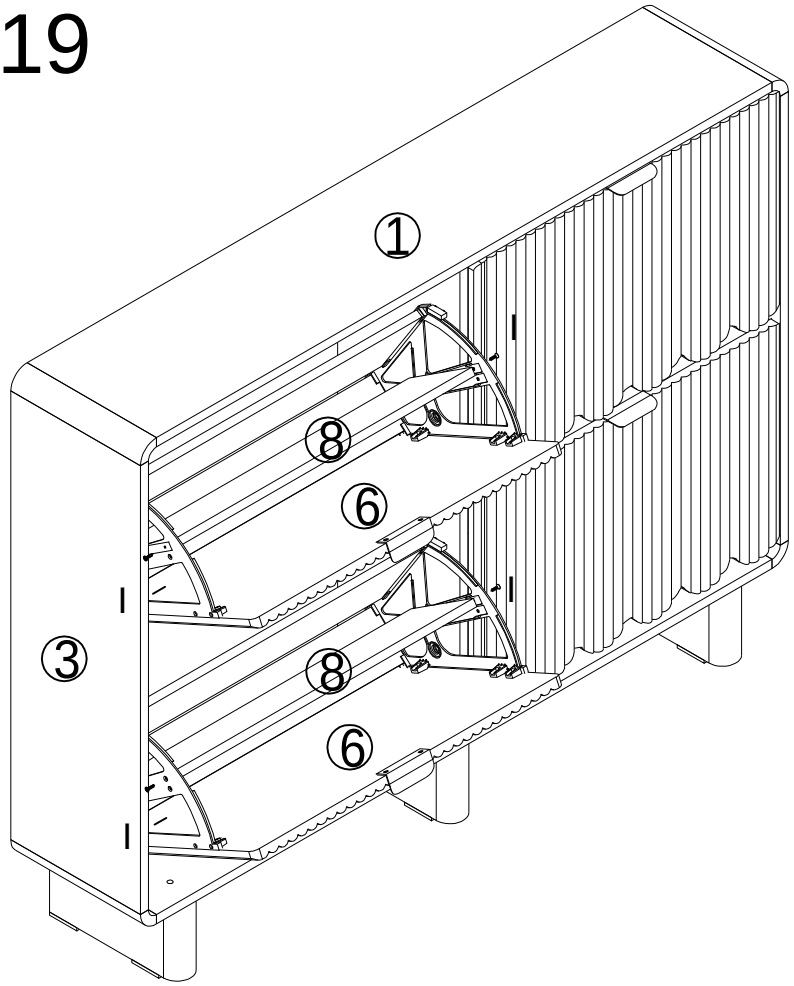









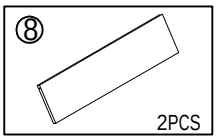



# Step 20

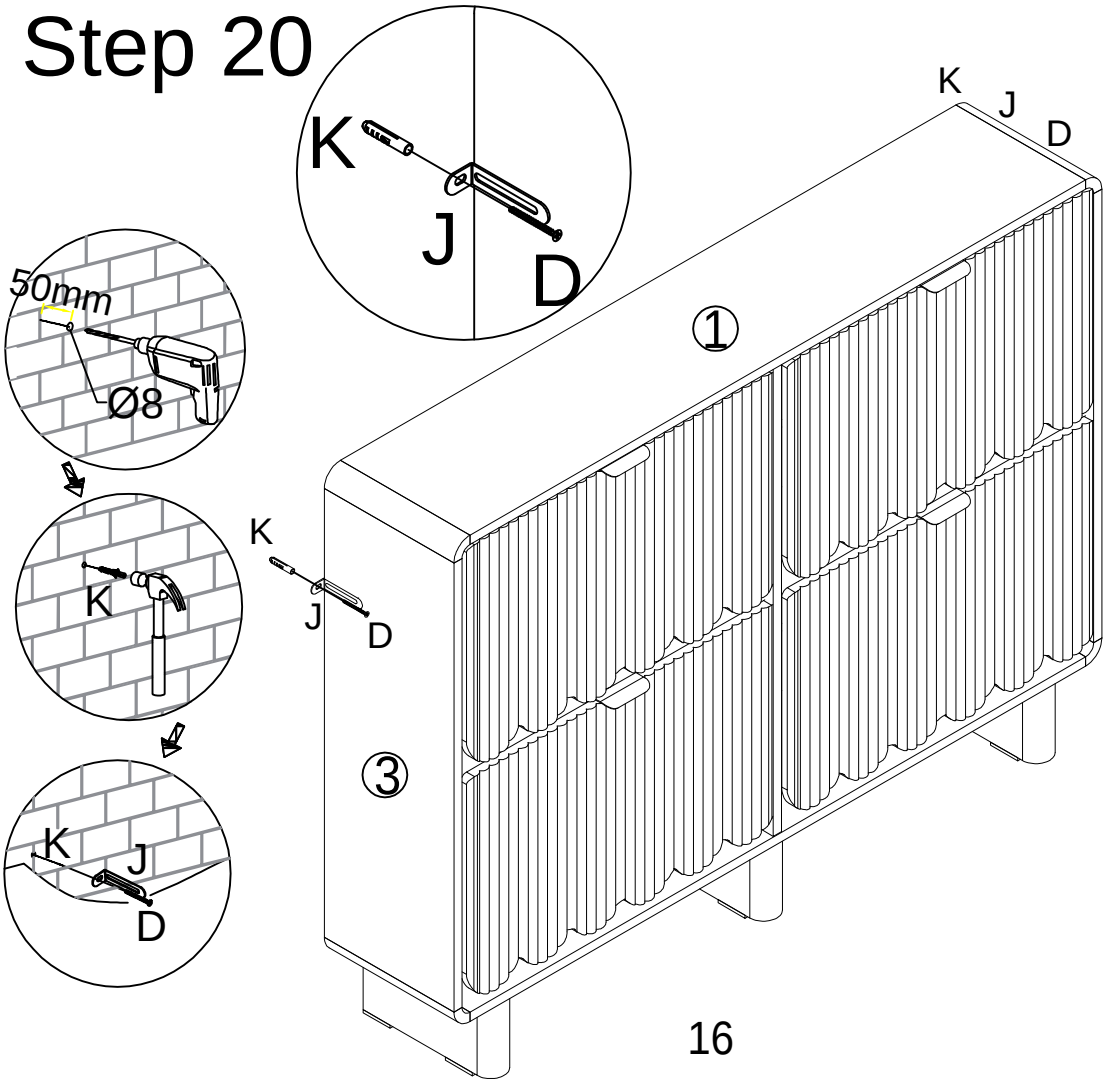



| D | x 2 |
|---|---|




| K | x 2 |
|---|---|




| J | x 2 |
|---|---|

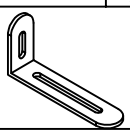









# Step 21

| E | x2 |
|---|---|
|  | |

