Dear Customer,
Thank you for choosing our products! We truly value your experience. If you find any damaged plates or accessories during the installation, please do not hesitate to contact us immediately. We are committed to providing you with a free replacement service to ensure your satisfaction with our products.
Thank you for your understanding and support!
Warm regards,
[Your Name]
Customer Service Email: homefurnishassist@gmail.com





Length: 1.8 cm

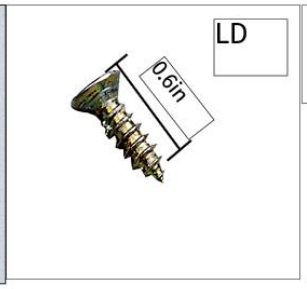
INTRODUCTION TO BEDSIDE CABINET INSTALLATION




Black connecting rod



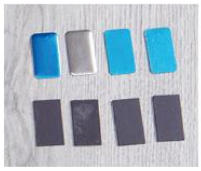
large buckle



Tip Screws





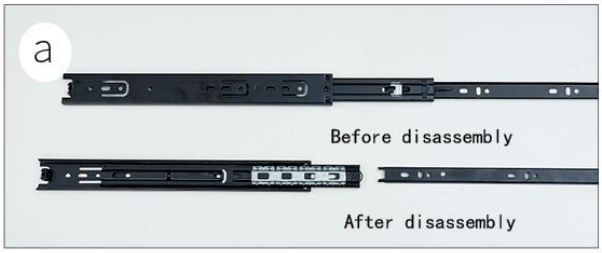


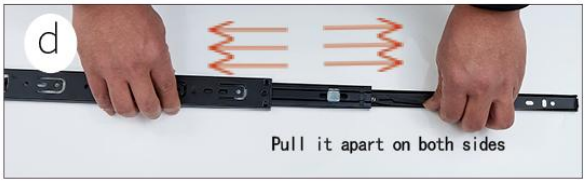




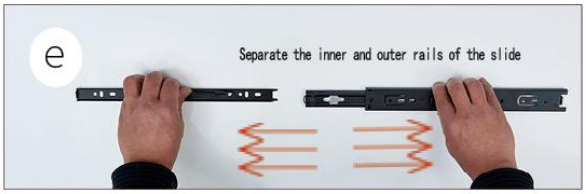


BEFORE INSTALLING THE PRODUCT, DISASSEMBLE THE SLIDE. SLIDE DISASSEMBLY STEPS











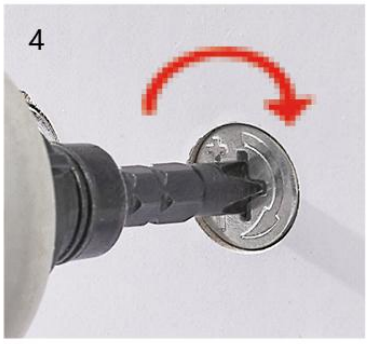












Connecting rods and circular cam locks are fittings used to connect wood panels. The method of use is shown in the diagram. Pay special attention to the direction of the arrow on the circular cam lock. When beginning to place it, ensure the arrow direction aligns with the hole direction on the side of the wood panel. After assembling the panels, tighten the circular cam lock clockwise.(If there is a gap between the panels during assembly, simply adjust the circular cam lock so that the arrow direction aligns with the hole direction on the side of the wood panel.)









001 All boards have numbers on them. If you find any damage, please contact us, and we will promptly send you replacements.

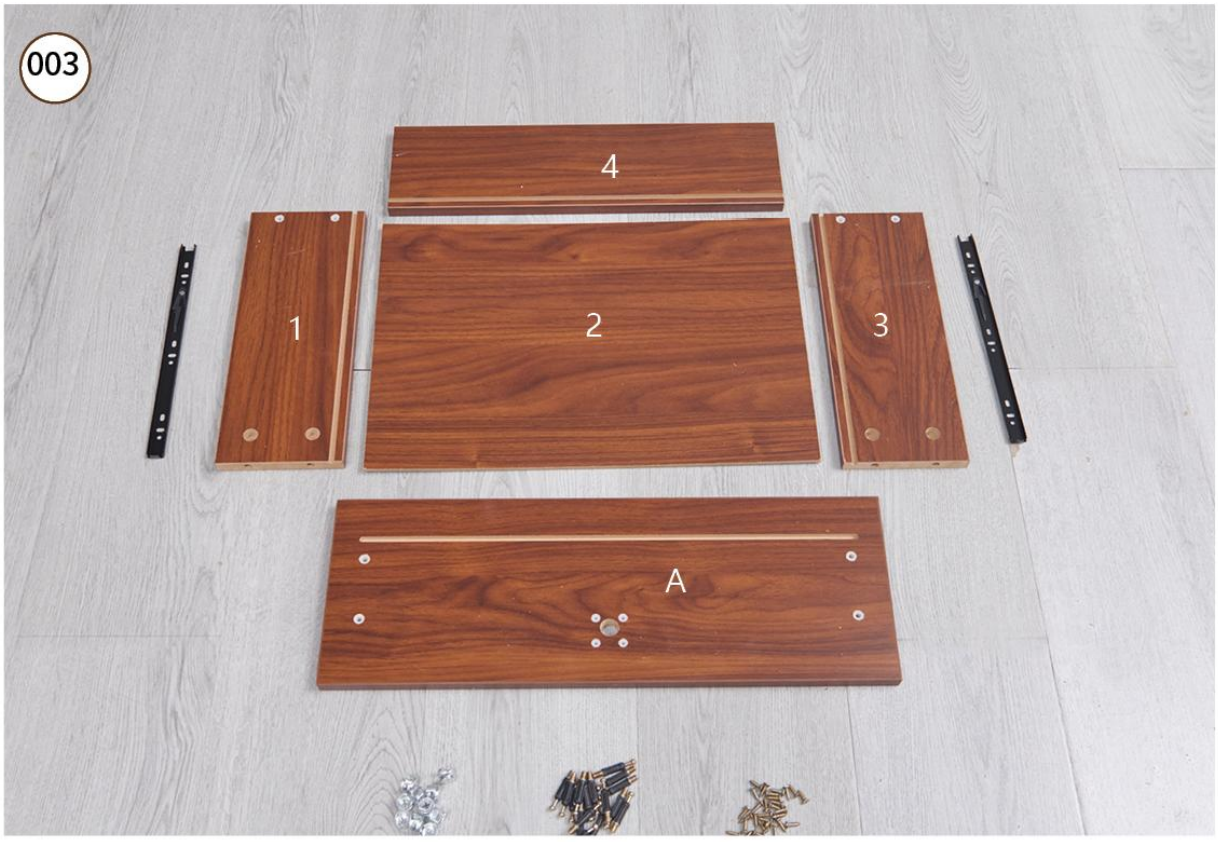


002

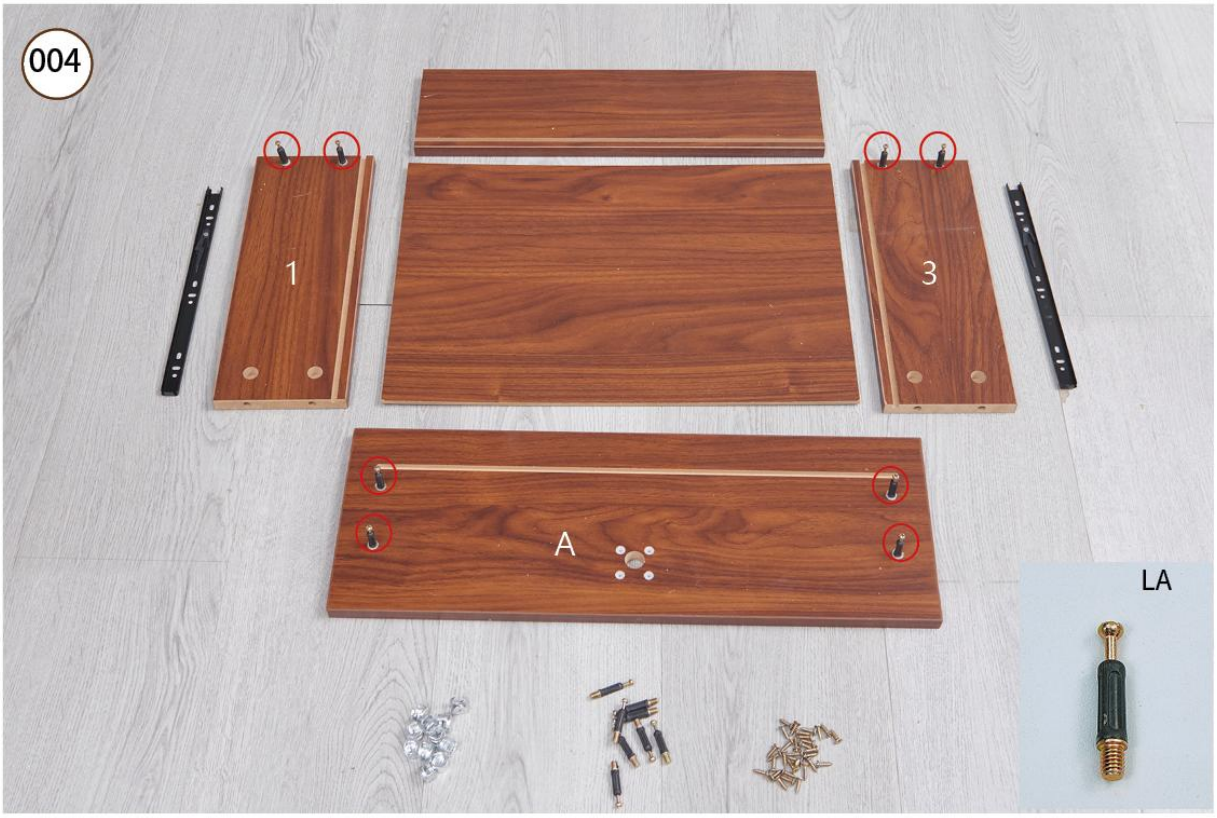


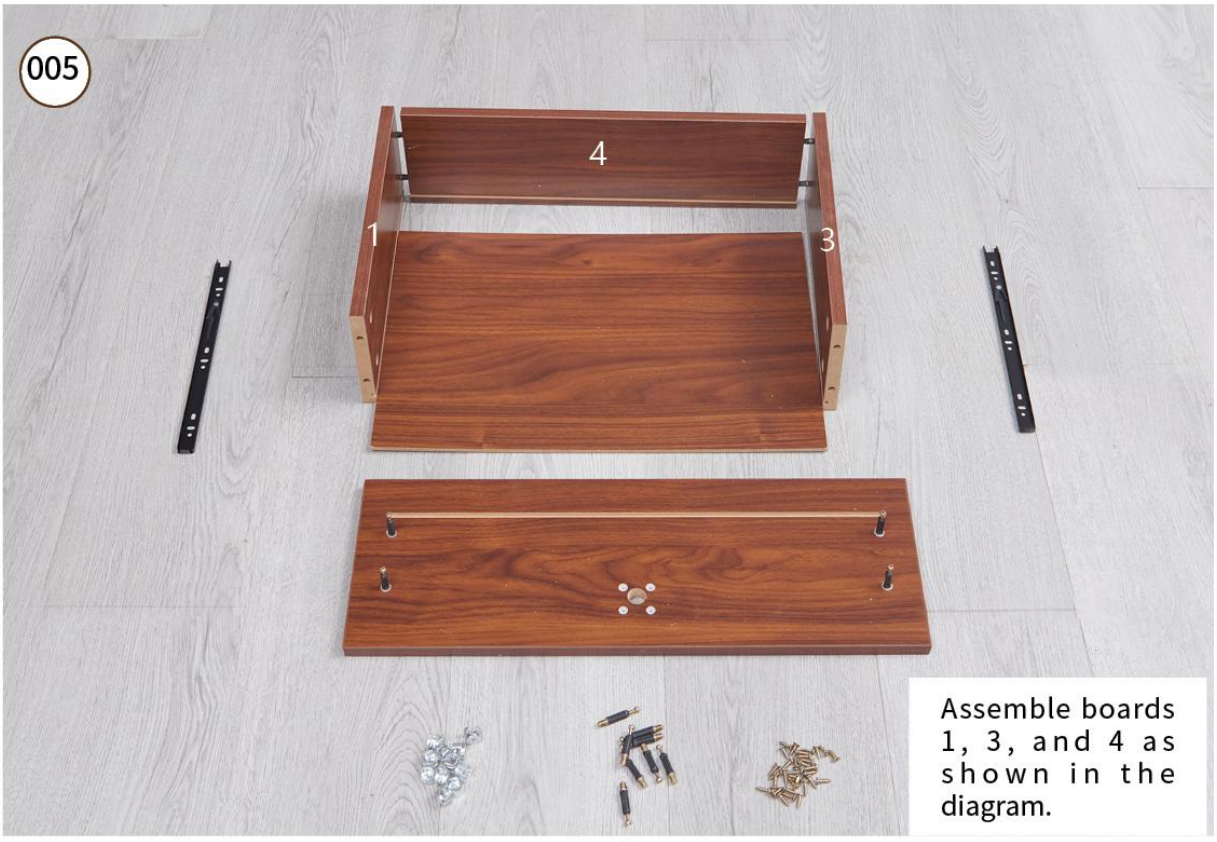
install the drawer

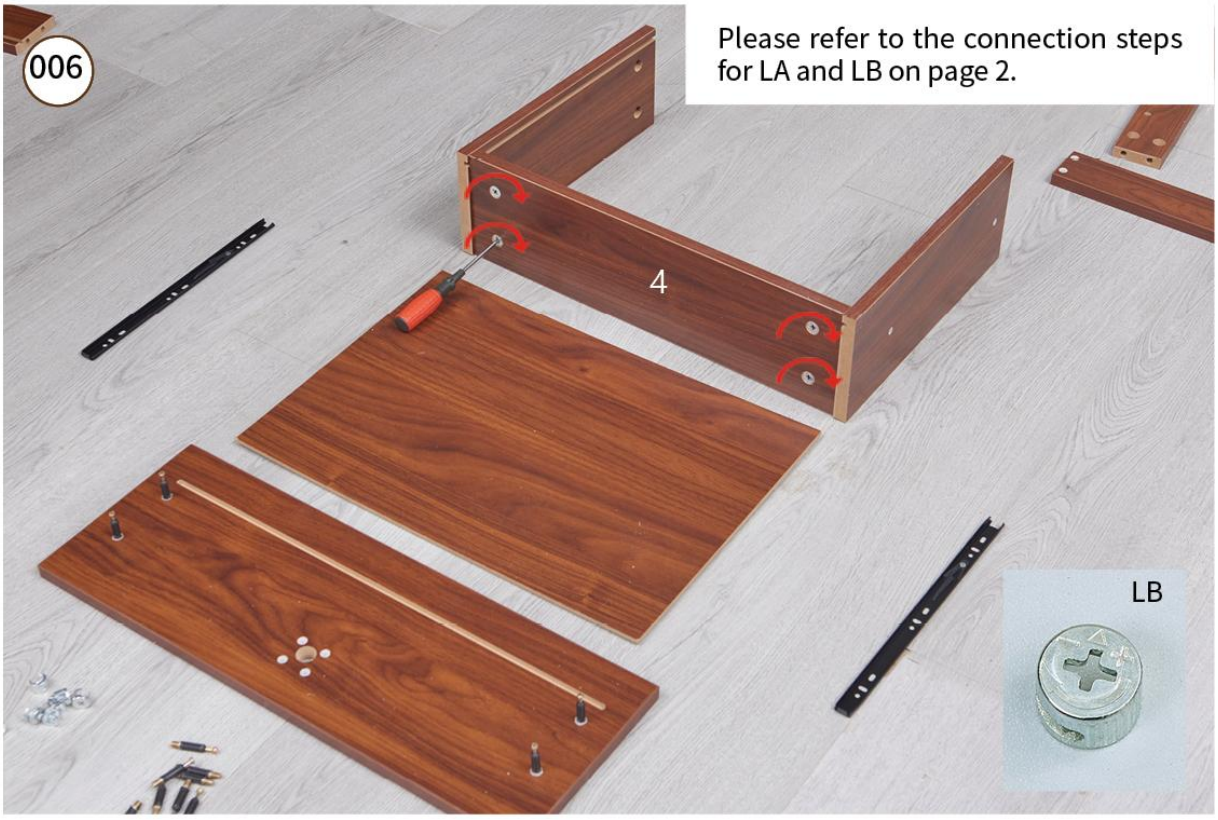
003

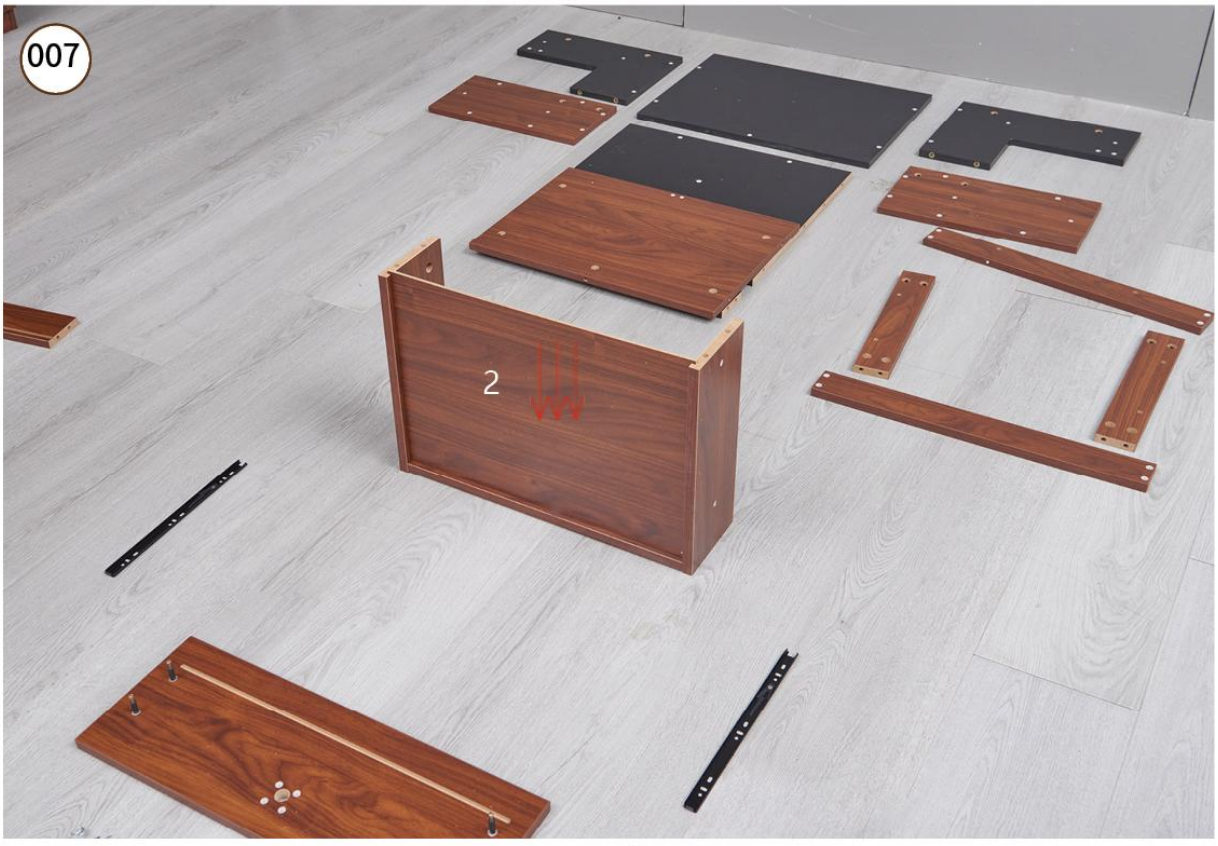


4


004
1
3
A
LA


005
4
1
3
Assemble boards 1, 3, and 4 as shown in the diagram.

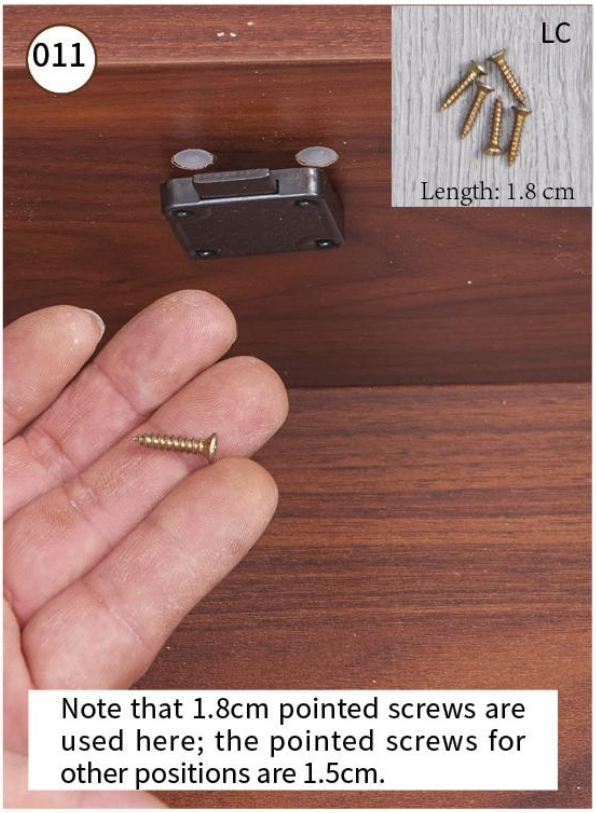

006
Please refer to the connection steps for LA and LB on page 2.
4
LB

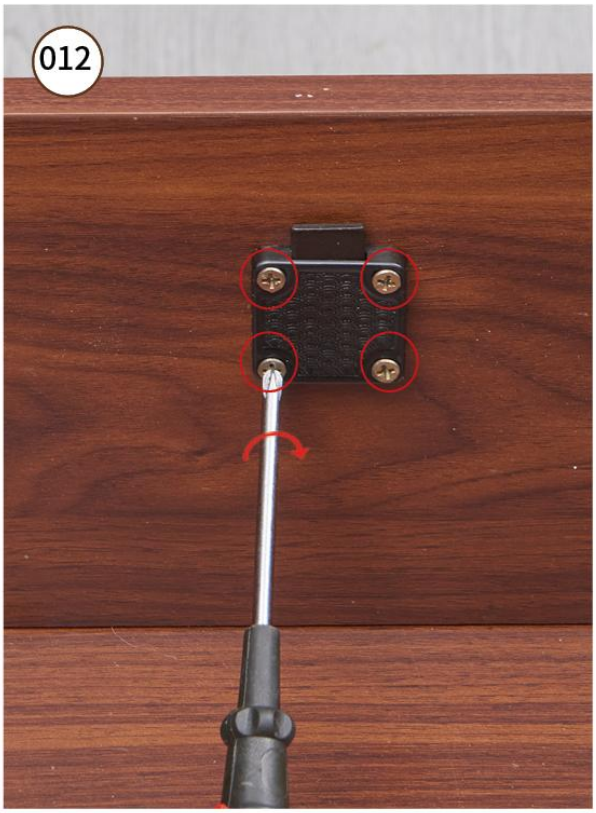

007
2


008
A


009
Please refer to the connection steps for LA and LB on page 2.
3
1
LB


010


011
LC
Length: 1.8 cm
Note that 1.8cm pointed screws are used here; the pointed screws for other positions are 1.5cm.

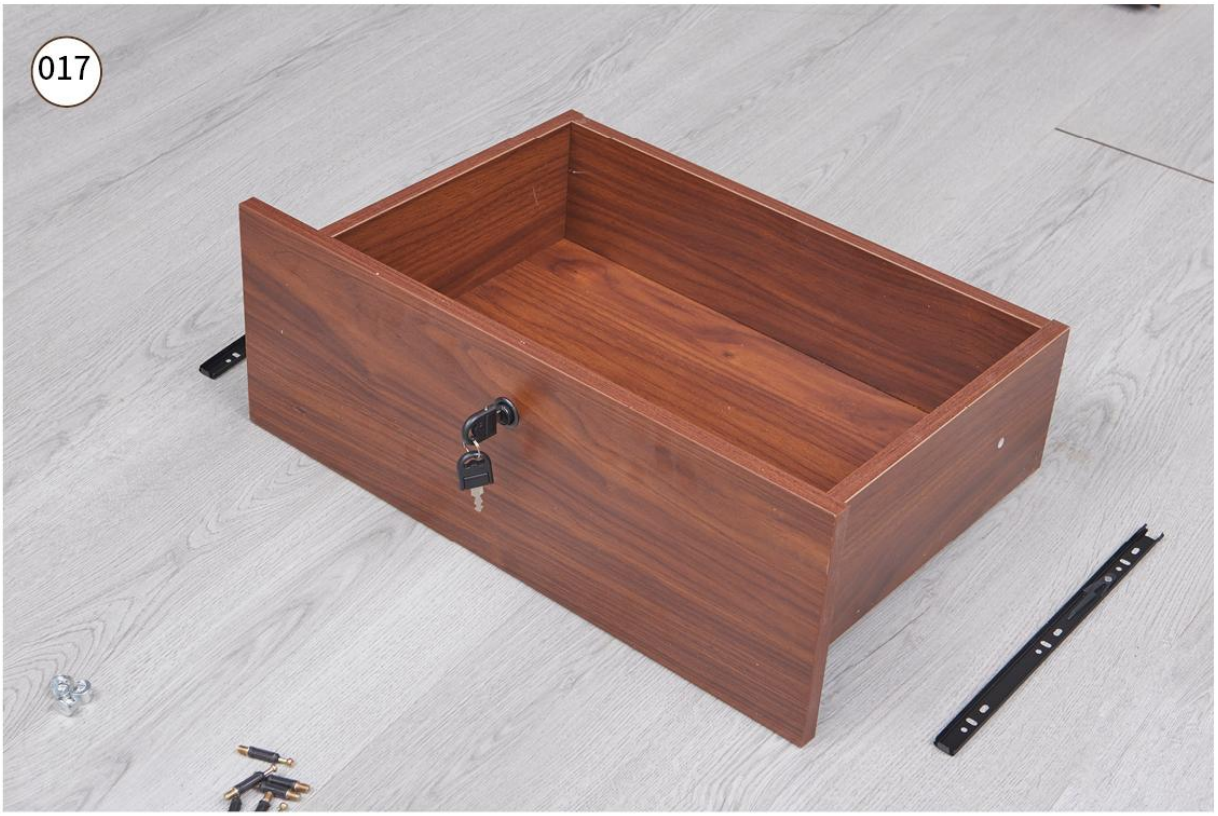

012

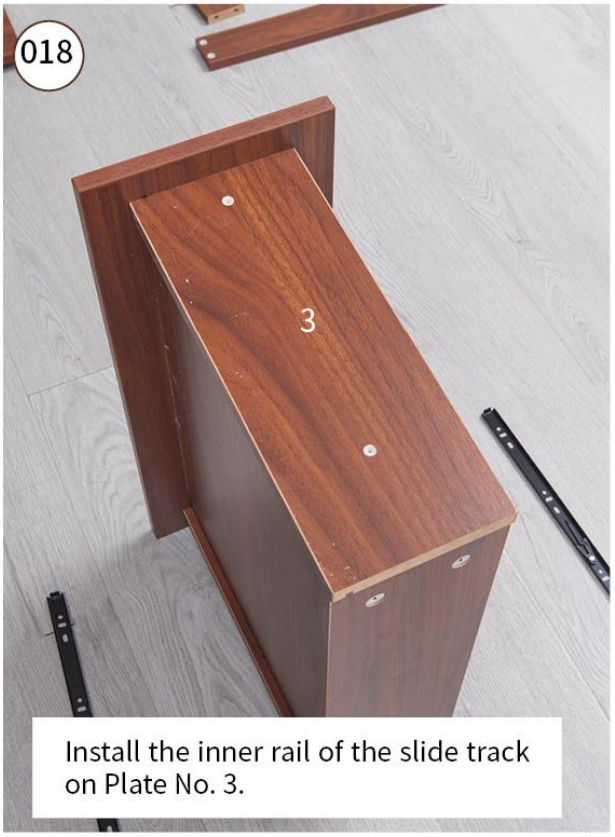

013


014


015


016
If the ring is too loose, press the part as shown in the figure inwards.


017


018
3
Install the inner rail of the slide track on Plate No. 3.


019
3


020
3
LD
0.6in


021
1
Install the inner rail of the slide track on Plate No. 1.


022
1


023
1
LD
0.6in

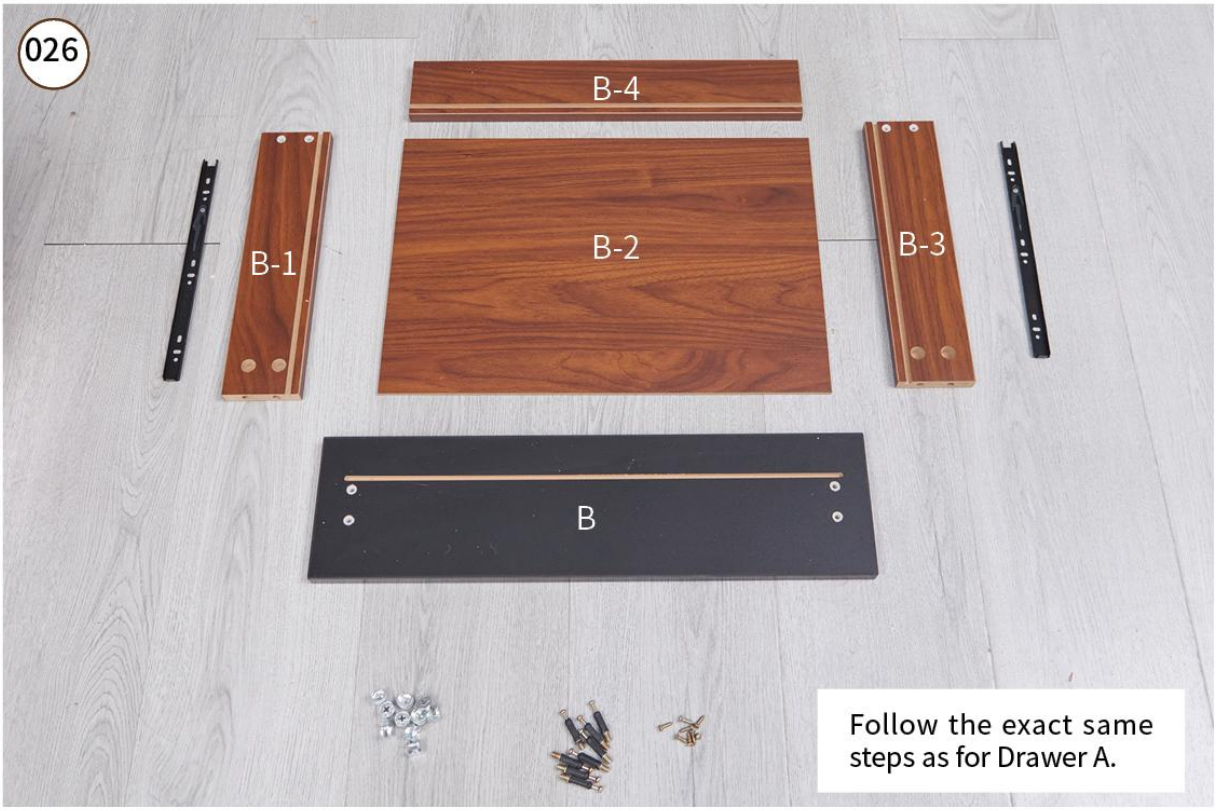
024



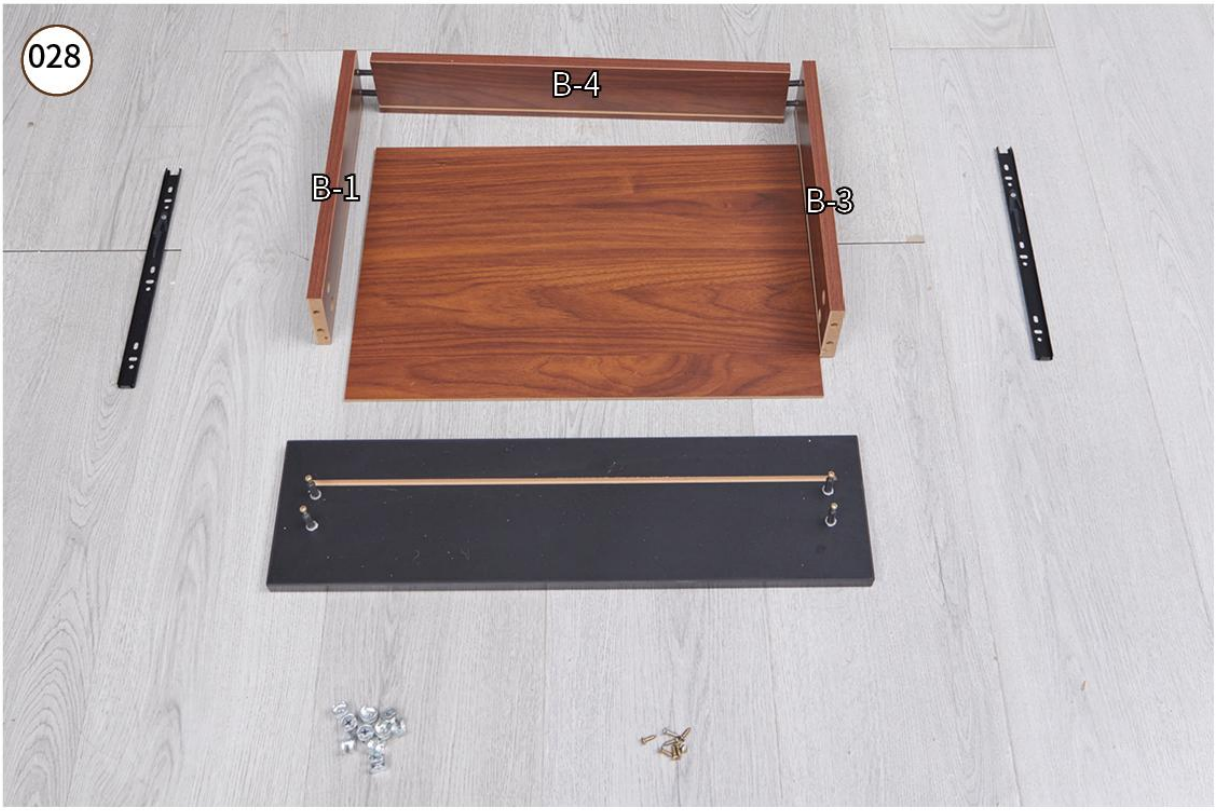
025



Install Drawer B


026
B-4
B-1
B-2
B-3
B
Follow the exact same steps as for Drawer A.


027
B-1
B-3
B
LA

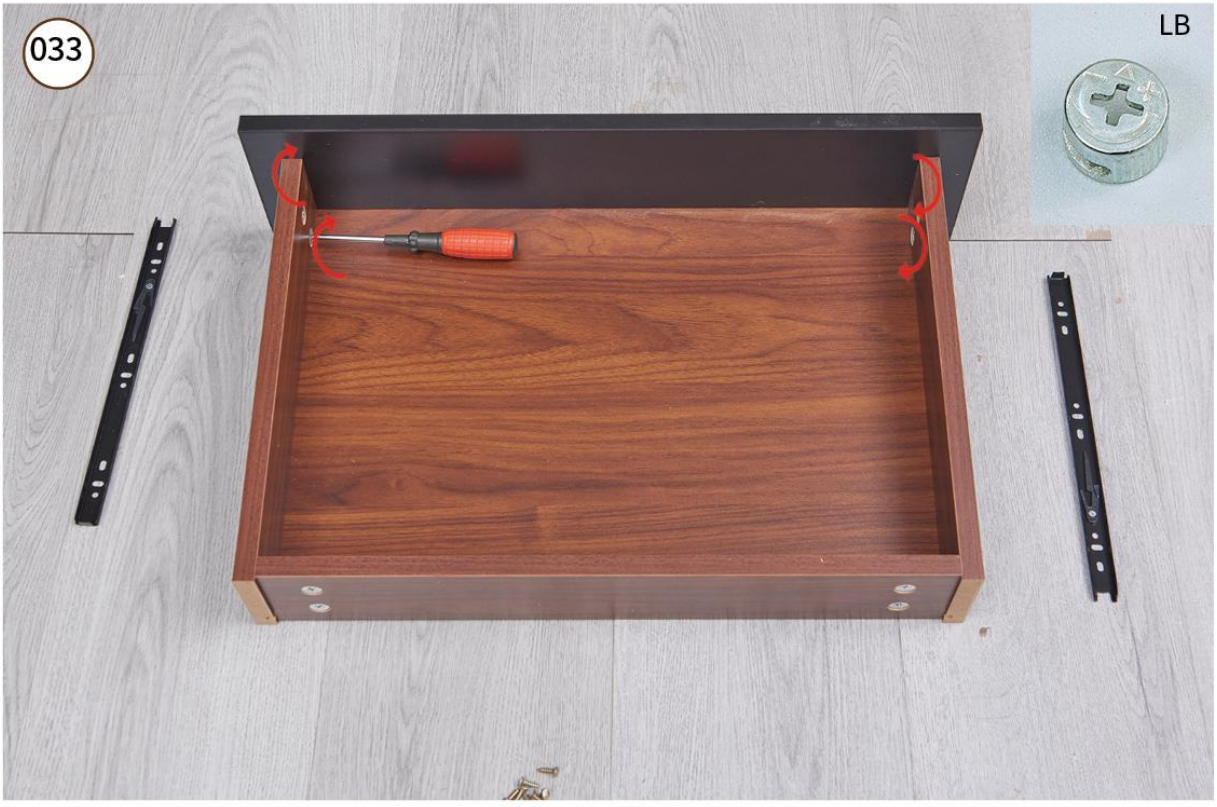

028
B-4
B-1
B-3


029
LB
B-4


030
B-2

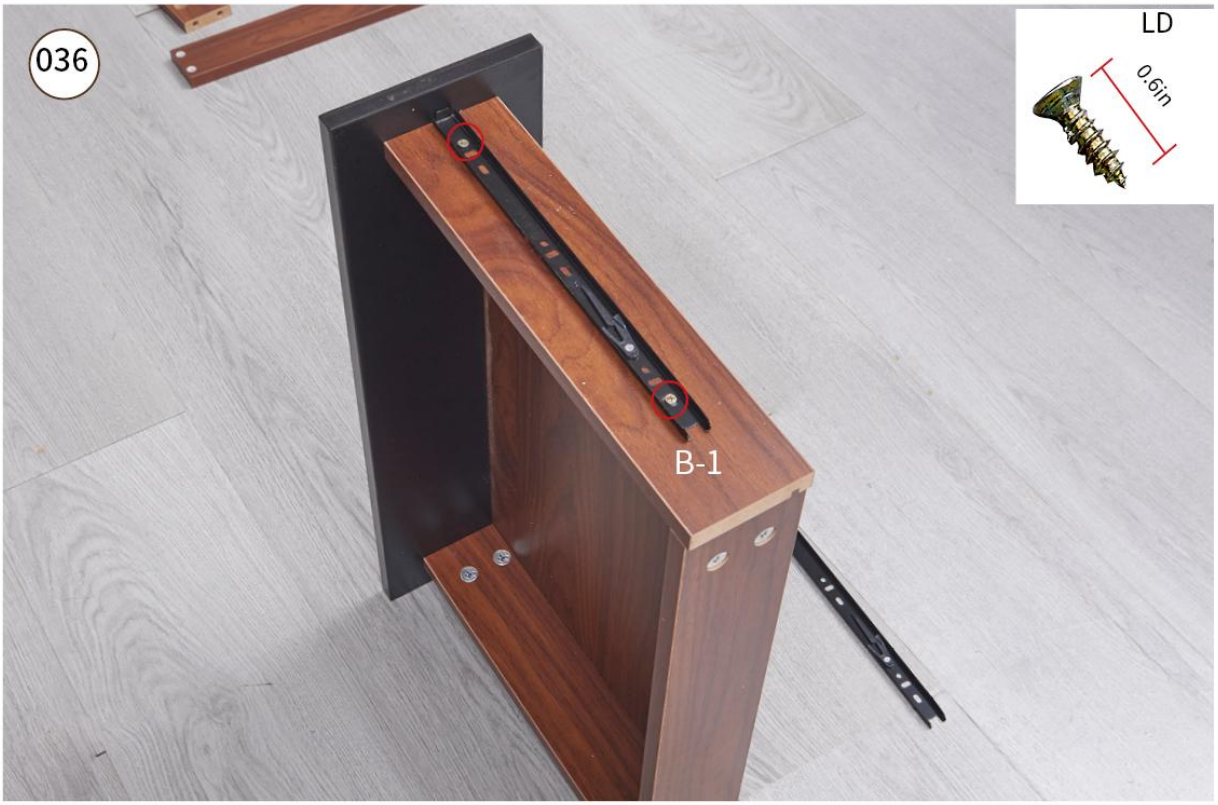

031
B


032
B


033
LB


034
B-1


035
B-1

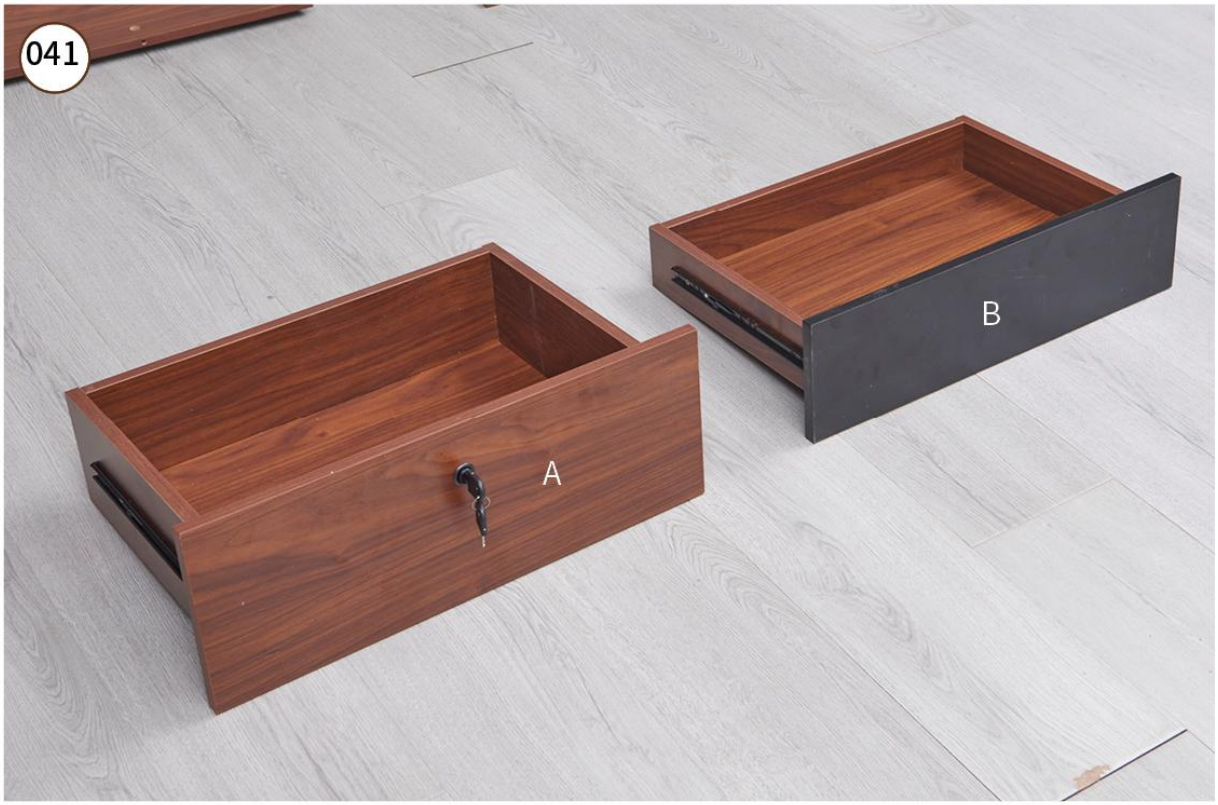

036
B-1
LD
0.6in


037
B-3


038
B-3


039
B-3
LD
0.6in


040


041
A
B

042



Assemble the frame

043



044



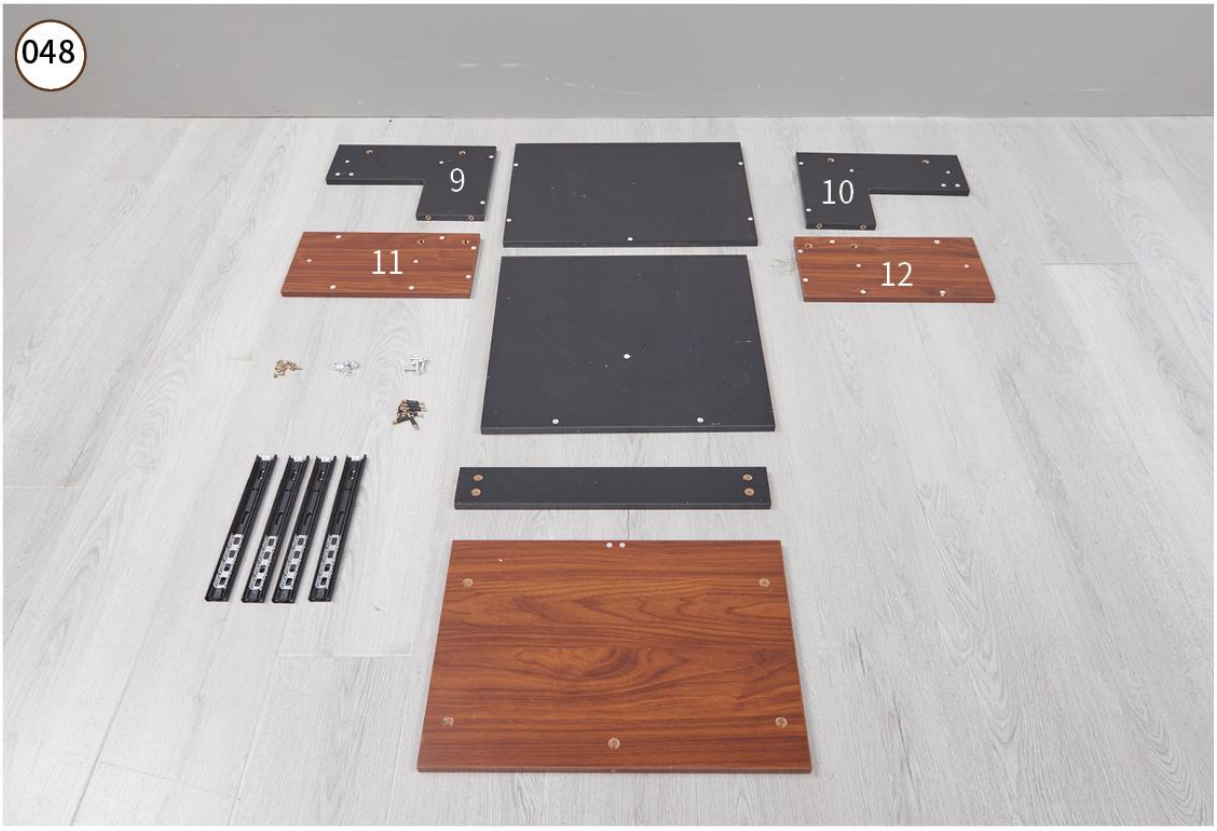
5, 6 & 7 panels each have two through holes; ensure the four holes are aligned on a horizontal line when the panels are stood upright. (Install as shown in the diagram.)

045

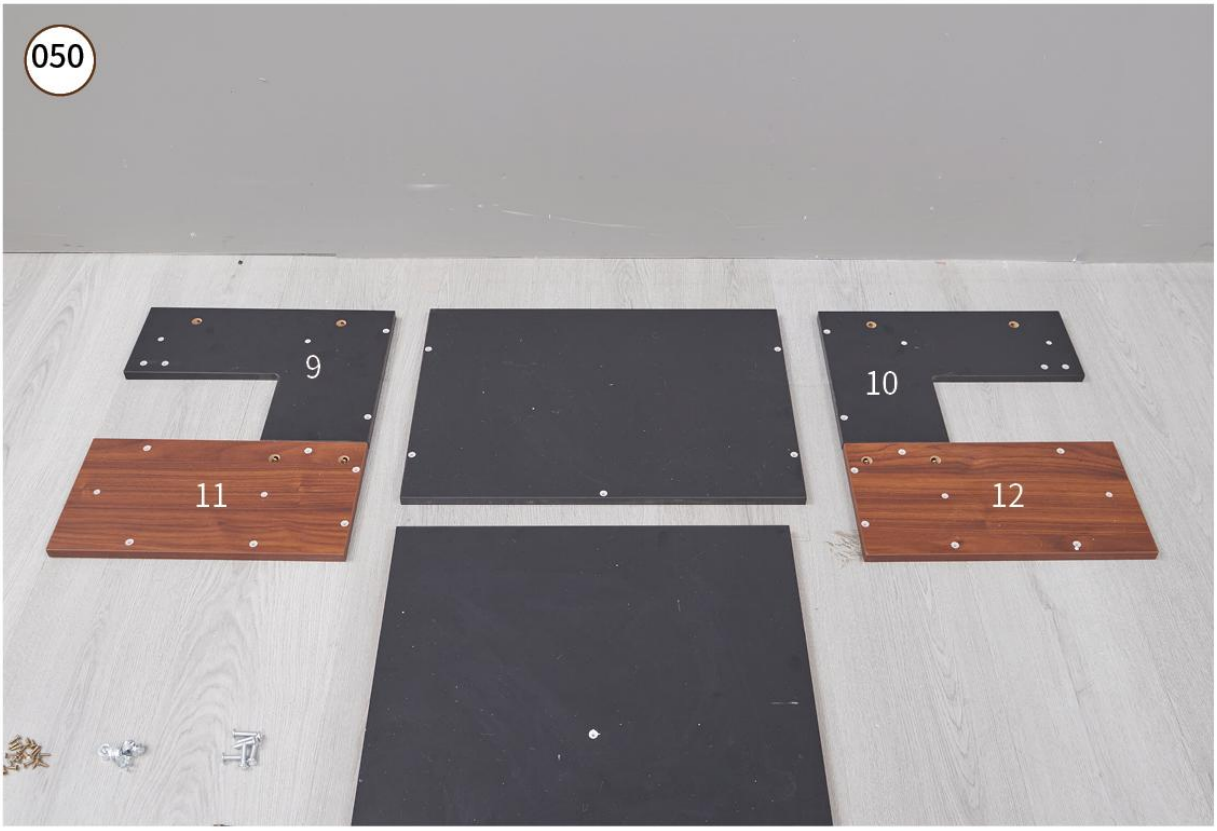


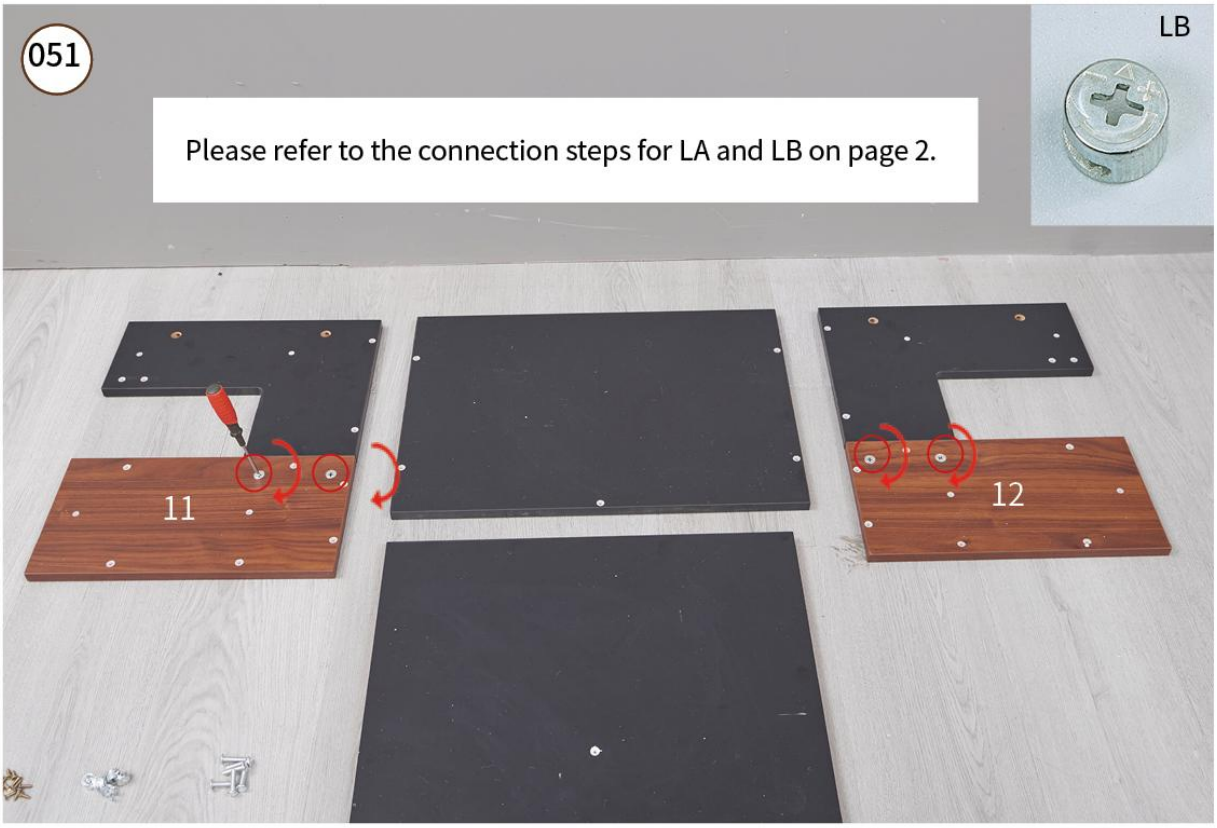

046


047
LB
5
6


048
9
10
11
12


049
LA
9
10
11
12


050
9
10
11
12


051
Please refer to the connection steps for LA and LB on page 2.
LB
11
12

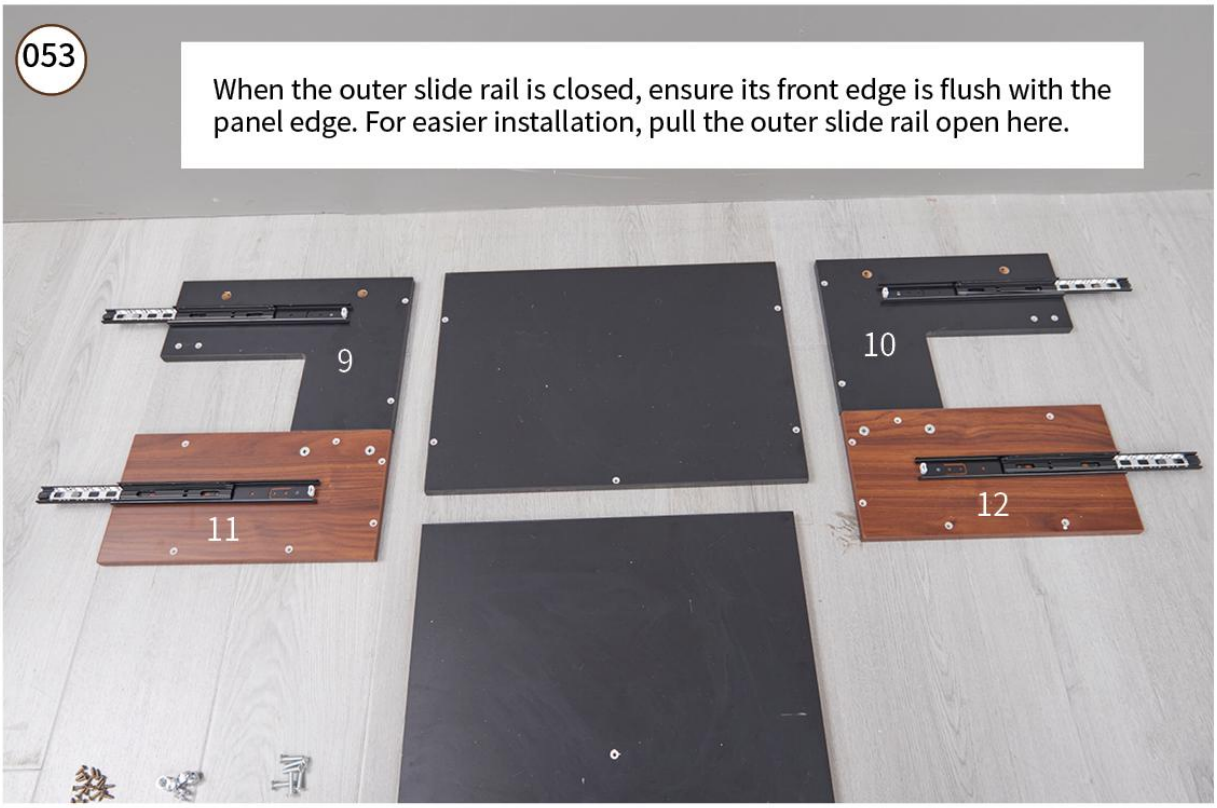
052

Install the outer slide rail



053

When the outer slide rail is closed, ensure its front edge is flush with the panel edge. For easier installation, pull the outer slide rail open here.



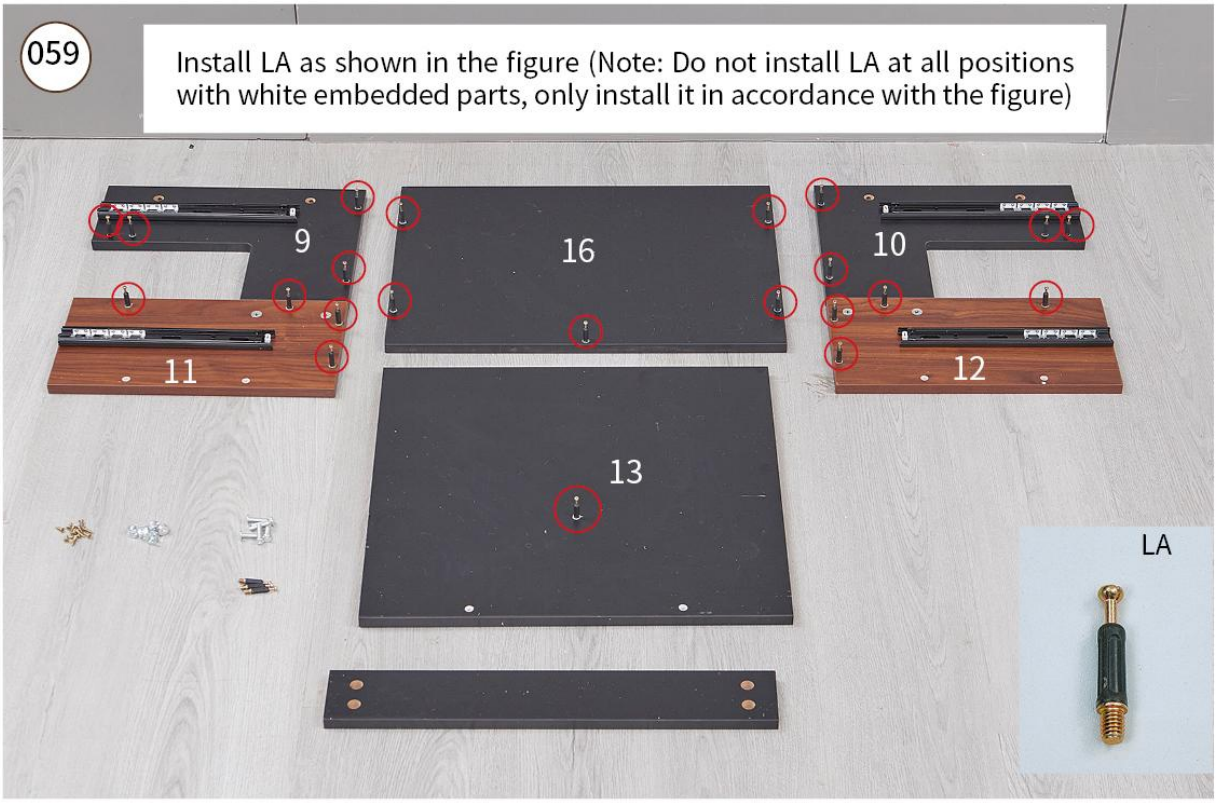

054
9
11

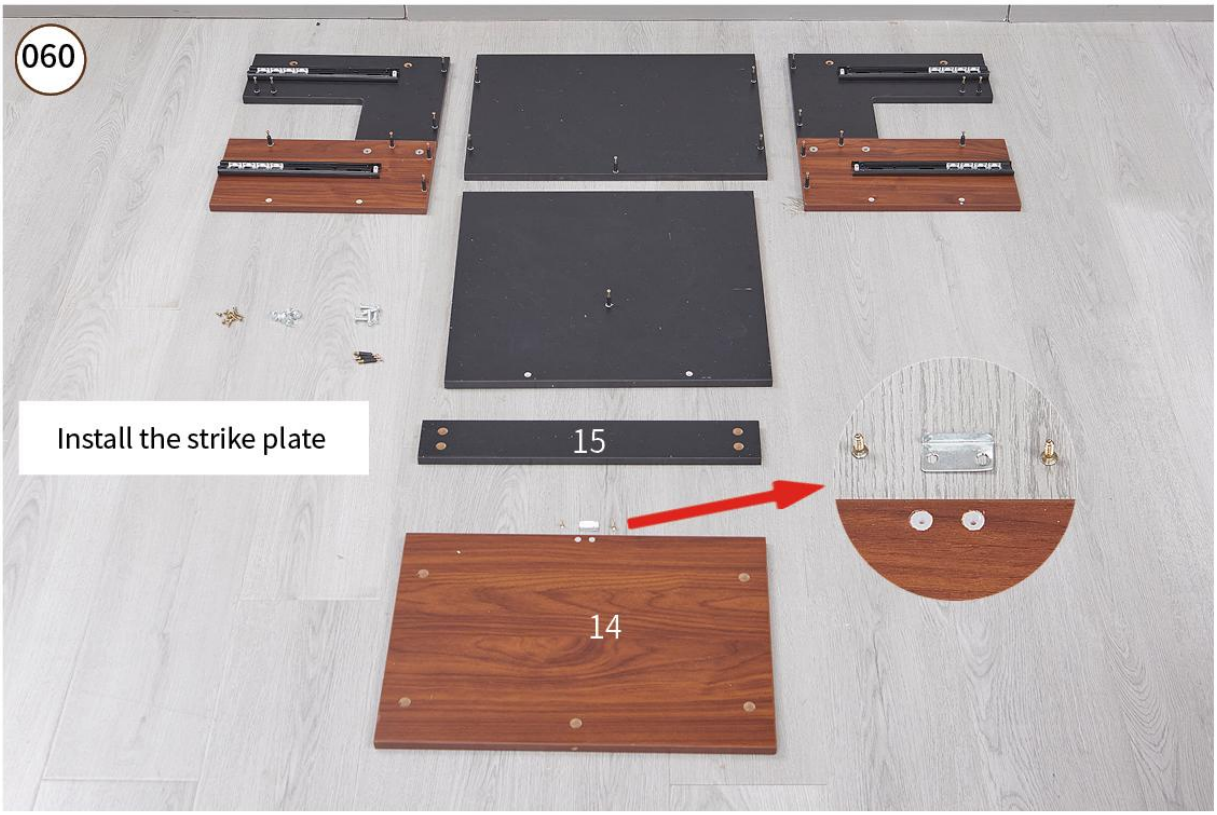

055
9
11
LD
0.6in


056
10
12


057
10
12
LD
0.6in


058
9
10
11
12


059
Install LA as shown in the figure (Note: Do not install LA at all positions with white embedded parts, only install it in accordance with the figure)
9
16
10
11
12
13
LA

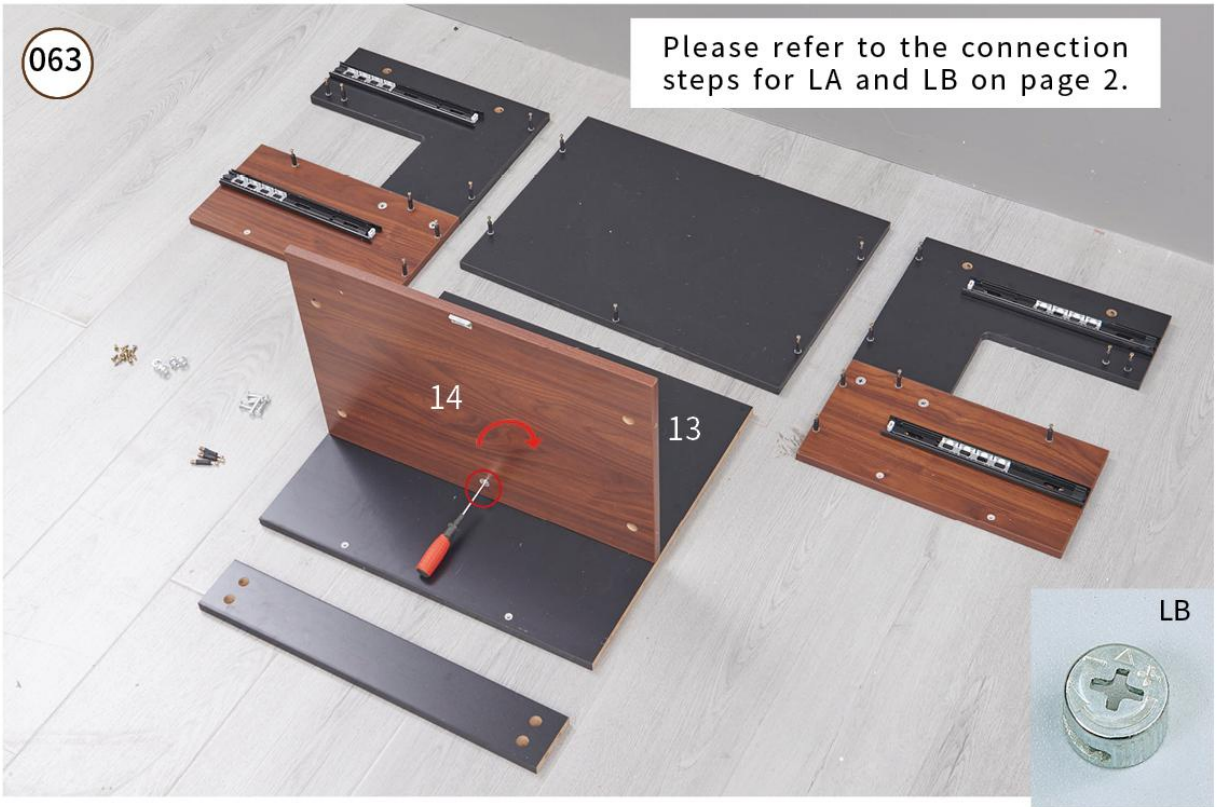

060
Install the strike plate
15
14


061
15
14

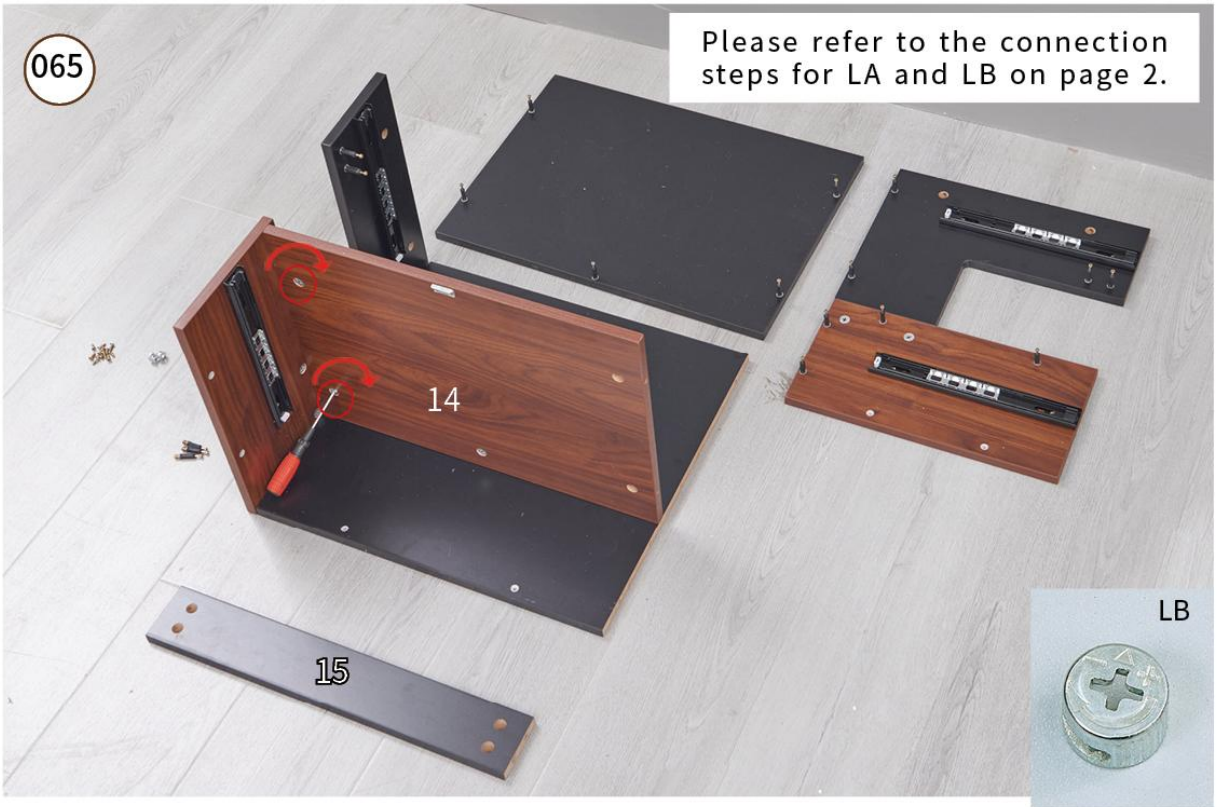
062


14
LD
0.6in

063


Please refer to the connection steps for LA and LB on page 2.
14
13
LB

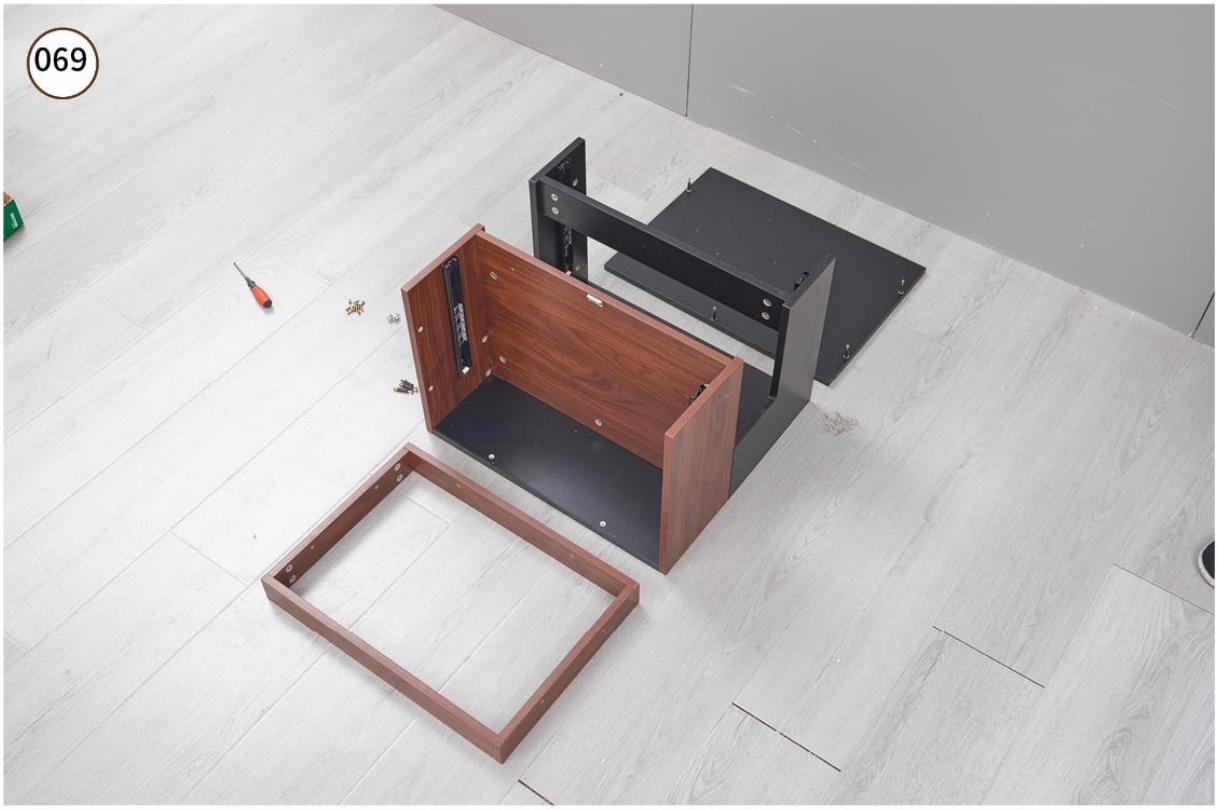

064
9
11
14
13


065
Please refer to the connection steps for LA and LB on page 2.
14
15
LB


066
15


067
10
12


068
Please refer to the connection steps for LA and LB on page 2.
LB

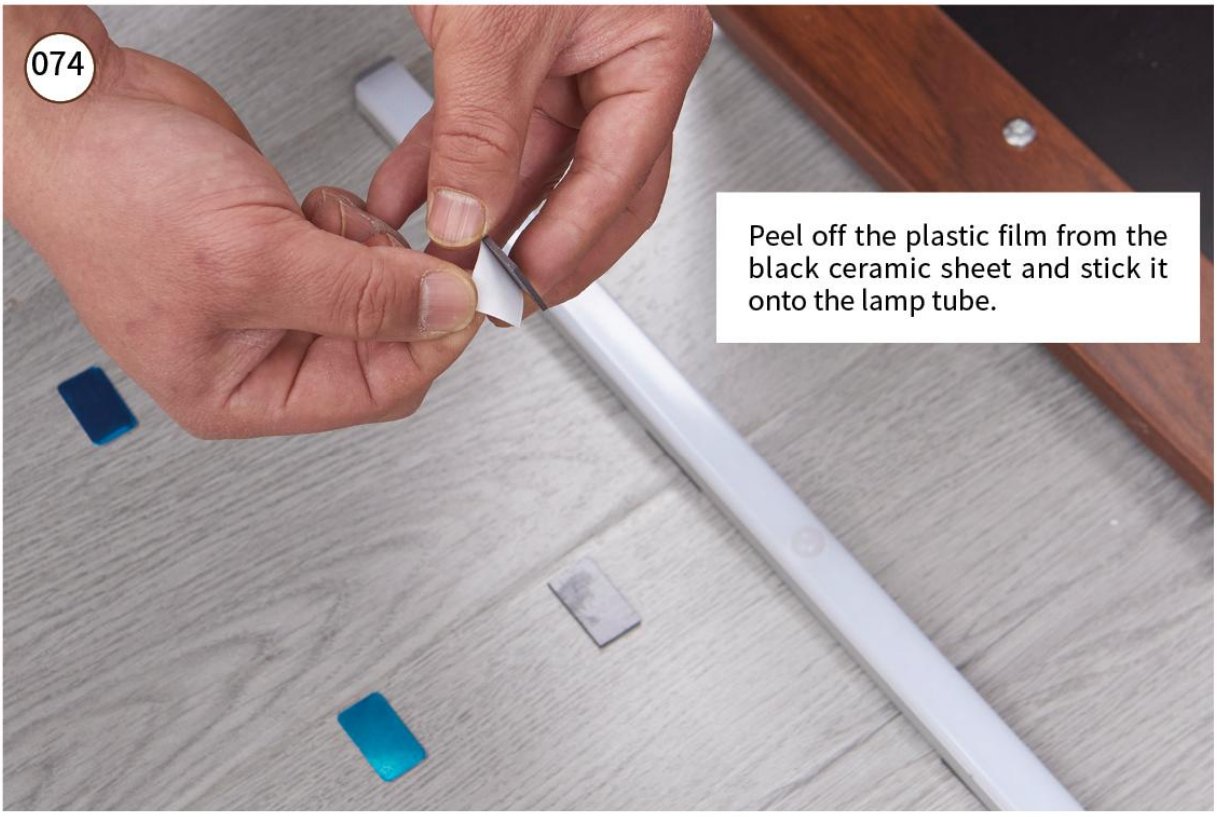

069

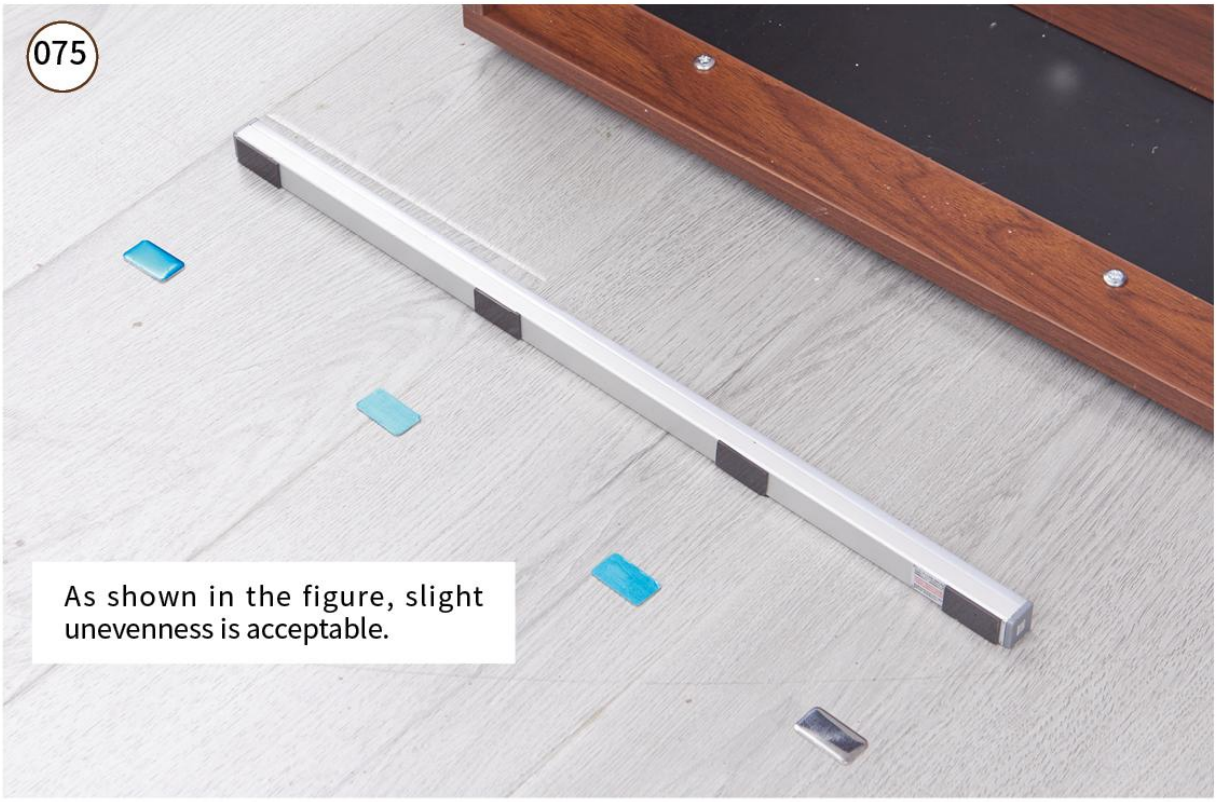

070
5
7
8
6


071
LE


072


073
16

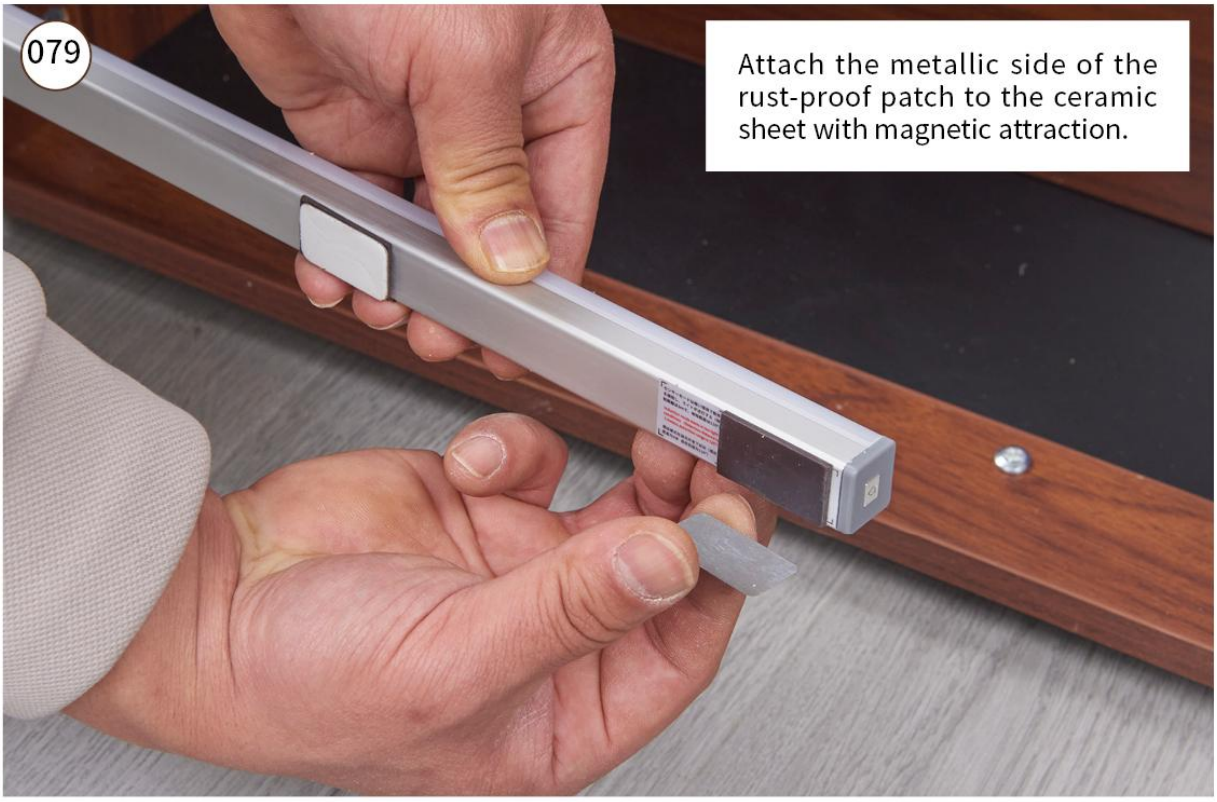

074
Peel off the plastic film from the black ceramic sheet and stick it onto the lamp tube.


075
As shown in the figure, slight unevenness is acceptable.


076
Peel off the protective film from both sides of the rust-proof iron sheet.


077


078

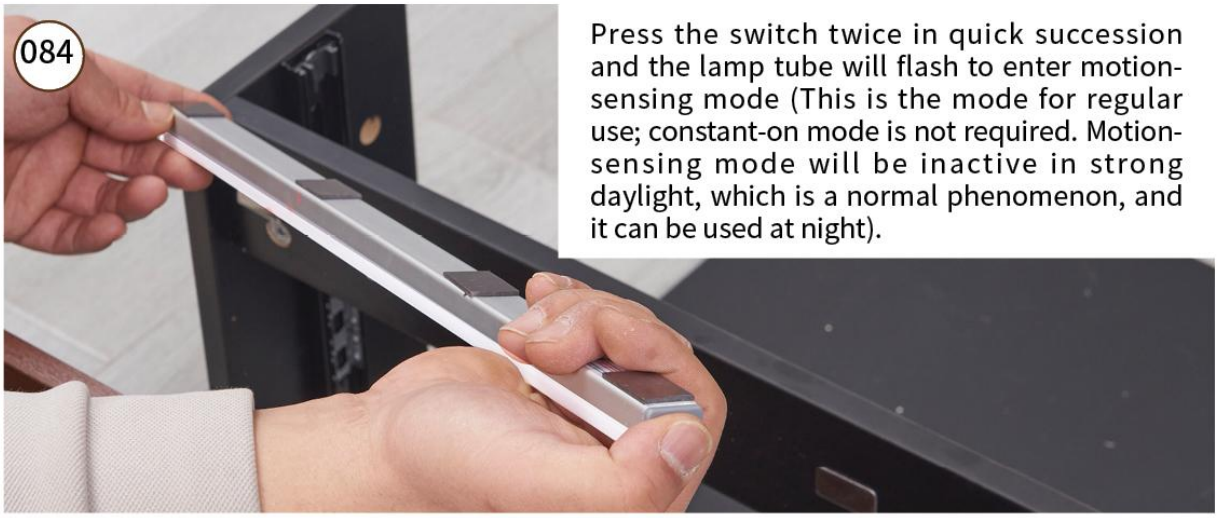

079
Attach the metallic side of the rust-proof patch to the ceramic sheet with magnetic attraction.


080
As shown in the figure, this ensures the metal sheets align one-to-one with the ceramic sheets.


081
15
Mount the lamp tube onto Panel 15.







Press the switch twice in quick succession and the lamp tube will flash to enter motion-sensing mode (This is the mode for regular use; constant-on mode is not required. Motion-sensing mode will be inactive in strong daylight, which is a normal phenomenon, and it can be used at night).


085
16

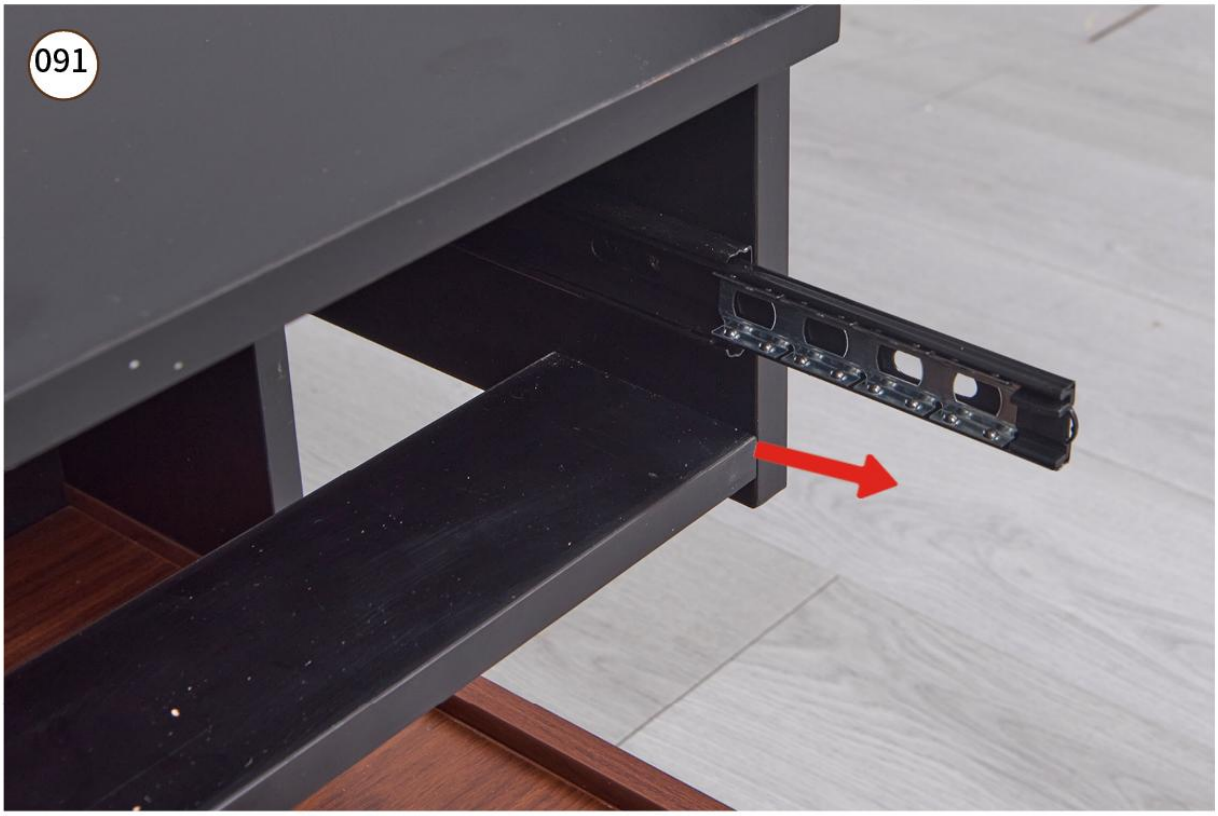

086

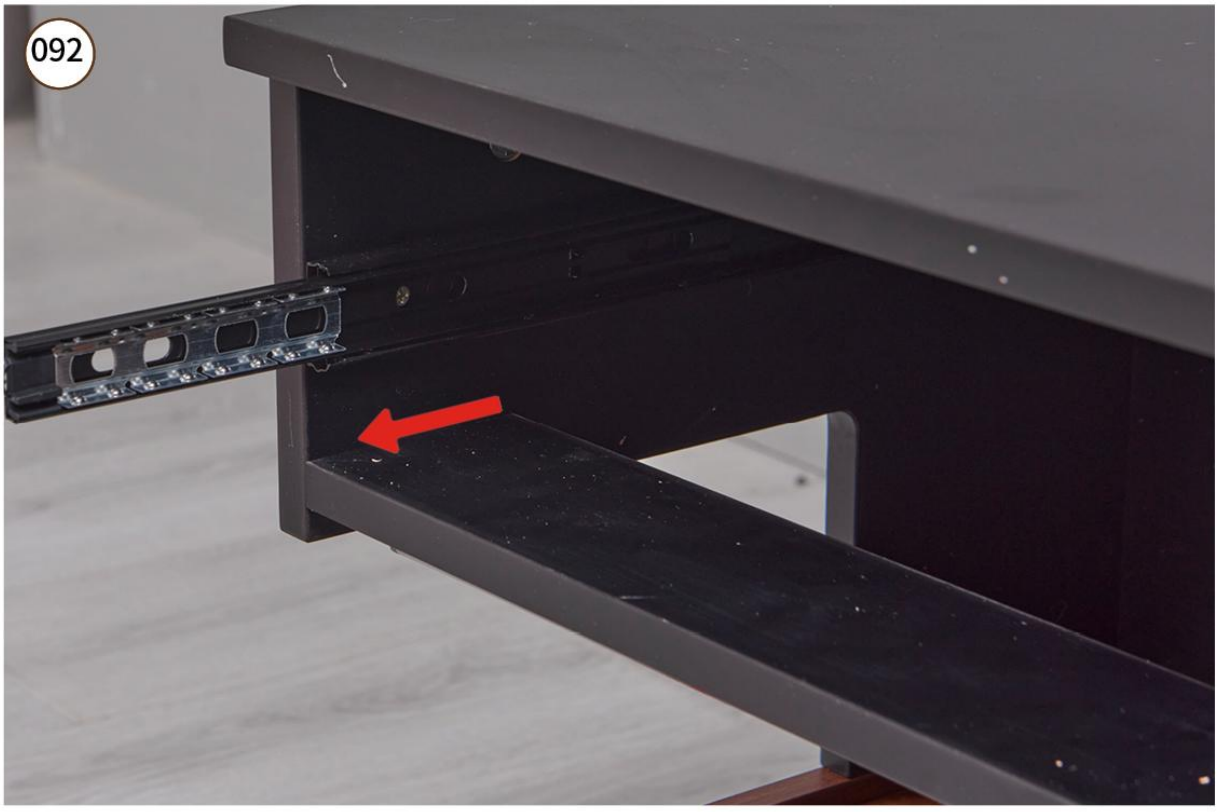

087
LB


088

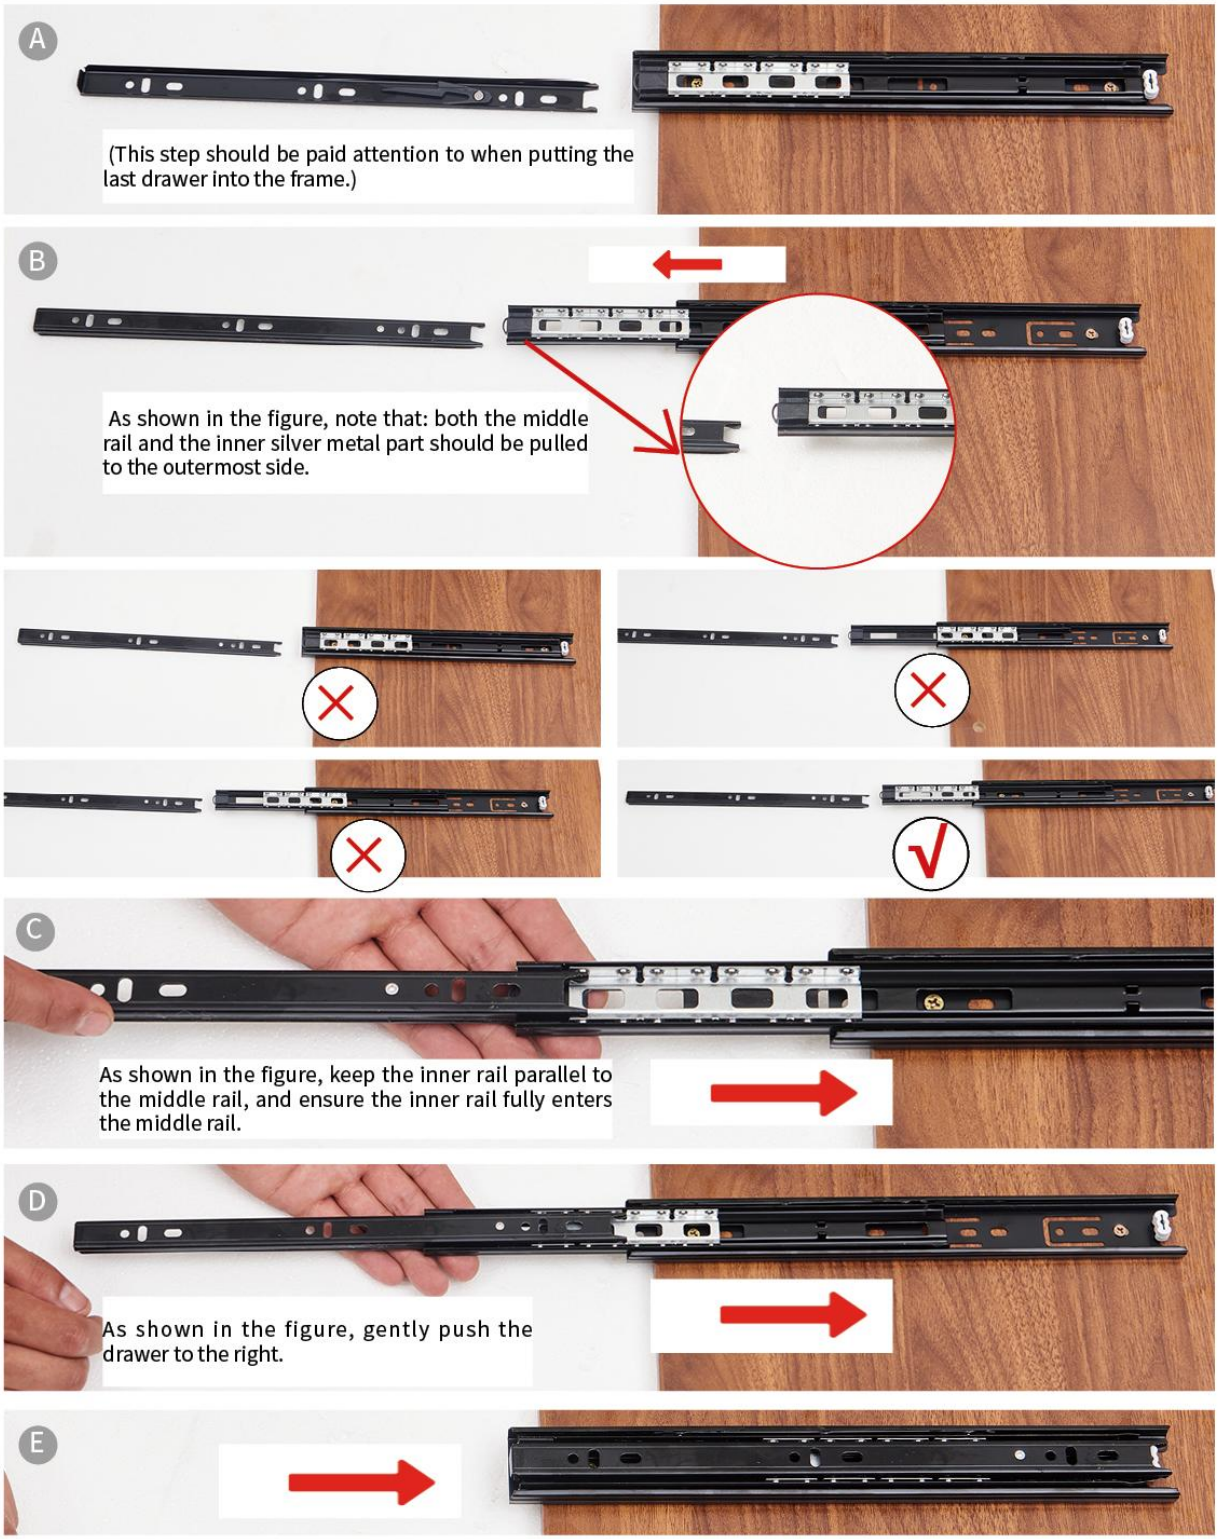

089
13
LB


090


091


092

NOTES ON INSTALLING THE DRAWER:




093


094


095


096


097
B


098


099
A